

INTERIOR – ROOF HEADLINING


IR-7

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

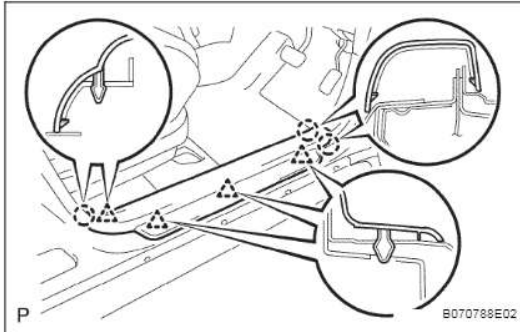

2. **REMOVE FRONT DOOR SCUFF PLATE RH**

(a) Using a screwdriver, detach the 3 claws and 4 clips, and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

3. **REMOVE FRONT DOOR SCUFF PLATE LH**

HINT:

Use the same procedures described for the RH side.

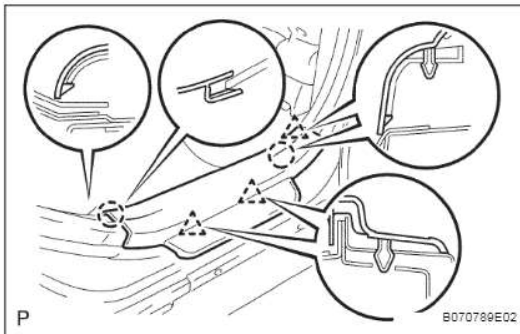

4. **REMOVE REAR DOOR SCUFF PLATE RH**

(a) Using a screwdriver, detach the 2 claws and 3 clips, and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

5. **REMOVE REAR DOOR SCUFF PLATE LH**

HINT:

Use the same procedures described for the RH side.

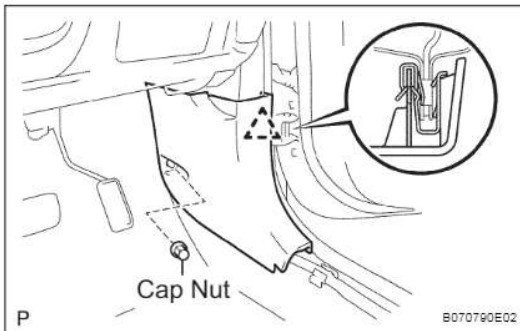

6. **REMOVE COWL SIDE TRIM BOARD RH**

(a) Remove the cap nut.

(b) Using a screwdriver, detach the clip and remove the trim board.

HINT:

Tape the screwdriver tip before use.

7. **REMOVE COWL SIDE TRIM BOARD LH**

HINT:

Use the same procedures described for the RH side.

8. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**

9. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**


10. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**

11. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**

IR

IR-8

INTERIOR – ROOF HEADLINING

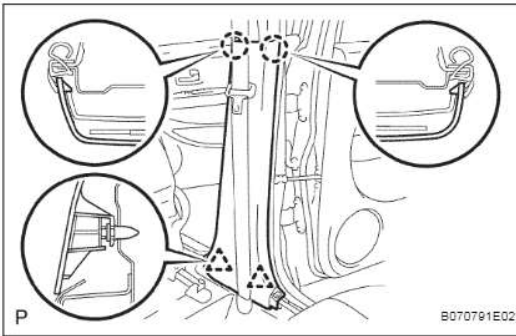**12. REMOVE CENTER PILLAR GARNISH LOWER RH**

- (a) Remove the floor anchor cover.
- (b) Remove the bolt and front seat outer belt floor anchor.
- (c) Detach the 2 clips and 2 claws, and remove the center pillar garnish.

13. REMOVE CENTER PILLAR GARNISH LOWER LH
HINT:

Use the same procedures described for the RH side.

14. REMOVE CENTER PILLAR GARNISH UPPER RH

- (a) Remove the shoulder anchor cover.
- (b) Remove the bolt and front seat outer belt shoulder anchor.
- (c) w/o Curtain shield airbag:
Detach the claw and clip, and remove the center pillar garnish by pulling it up.
- (d) w/ Curtain shield airbag:
Detach the 2 clips and remove the center pillar garnish.

15. REMOVE CENTER PILLAR GARNISH UPPER LH
HINT:

Use the same procedures described for the RH side.

16. REMOVE REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page [SE-12](#))**17. REMOVE REAR SEATBACK ASSEMBLY RH** (See page [SE-12](#))**18. REMOVE REAR SEATBACK ASSEMBLY LH** (See page [SE-12](#))**19. REMOVE TONNEAU COVER ASSEMBLY****20. REMOVE NO. 1 DECK BOARD****21. REMOVE DECK FLOOR BOX RH**


- (a) Remove the 2 bolts and floor box.

22. REMOVE SPARE WHEEL COVER ASSEMBLY**23. REMOVE DECK TRIM COVER REAR**

- (a) Remove the 4 clips.
- (b) Detach the 2 claws and remove the trim cover.


24. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY

- (a) Remove the 4 bolts and anchor bracket.

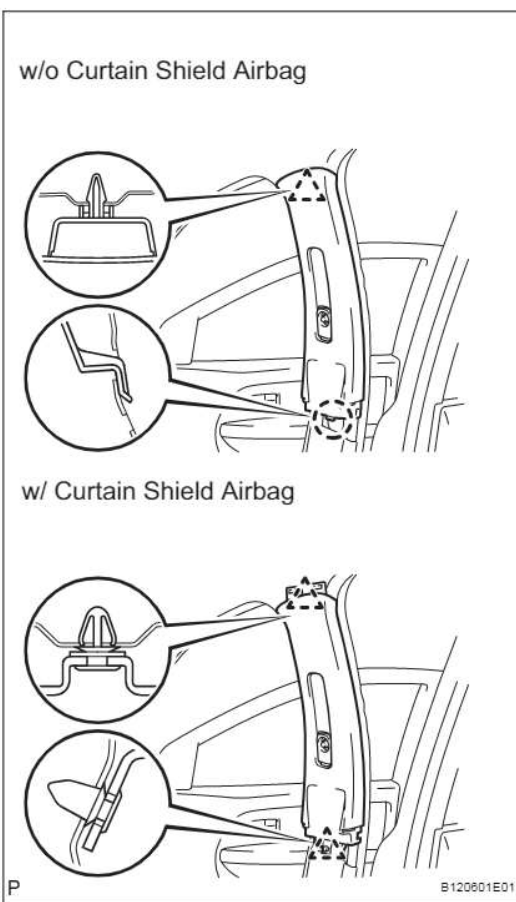

w/o Curtain Shield Airbag


w/ Curtain Shield Airbag

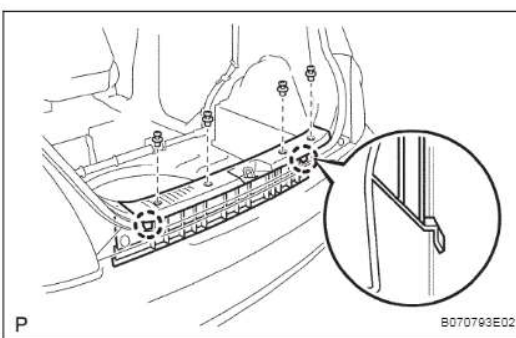

IR

INTERIOR – ROOF HEADLINING

IR-9

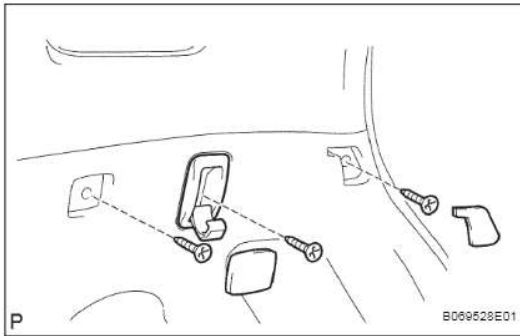
**25. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH**

- Remove the 2 covers and 2 screws.
- Remove the screw and compartment trim hook.
- Remove the bolt and seatback hinge.
- Remove the bolt and rear seat 3 point type belt floor anchor.

- Using a screwdriver, detach the 3 clips and claw, and remove the side panel.


HINT:

Tape the screwdriver tip before use.

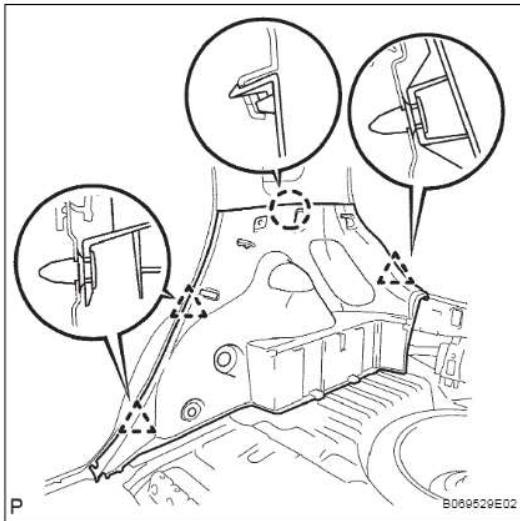**26. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

HINT:

Use the same procedures described for the RH side.

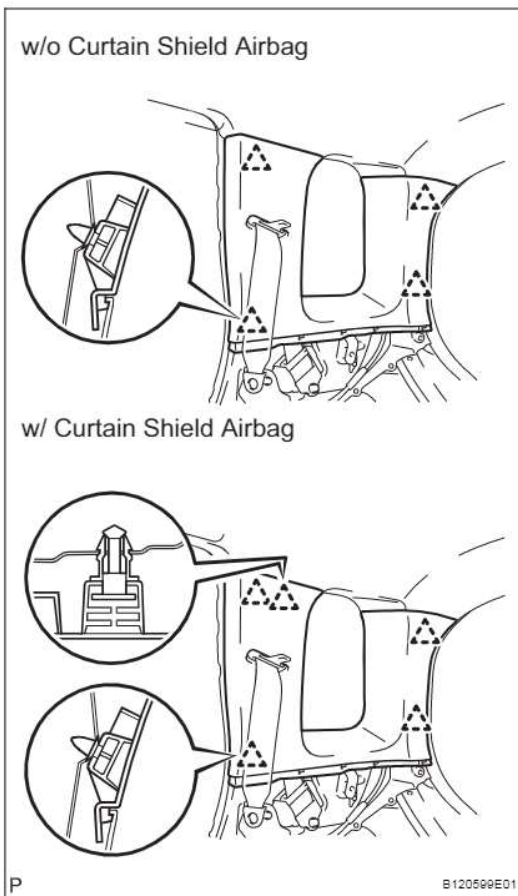**27. REMOVE ROOF SIDE GARNISH INNER RH**

- w/o Curtain shield airbag:
Using a screwdriver, detach the 4 clips and remove the side garnish.

HINT:

Tape the screwdriver tip before use.

- w/ Curtain shield airbag:
Using a screwdriver, detach the 5 clips and remove the side garnish.

HINT:

Tape the screwdriver tip before use.

28. REMOVE ROOF SIDE GARNISH INNER LH


HINT:

Use the same procedures described for the RH side.

IR

IR-10

INTERIOR – ROOF HEADLINING

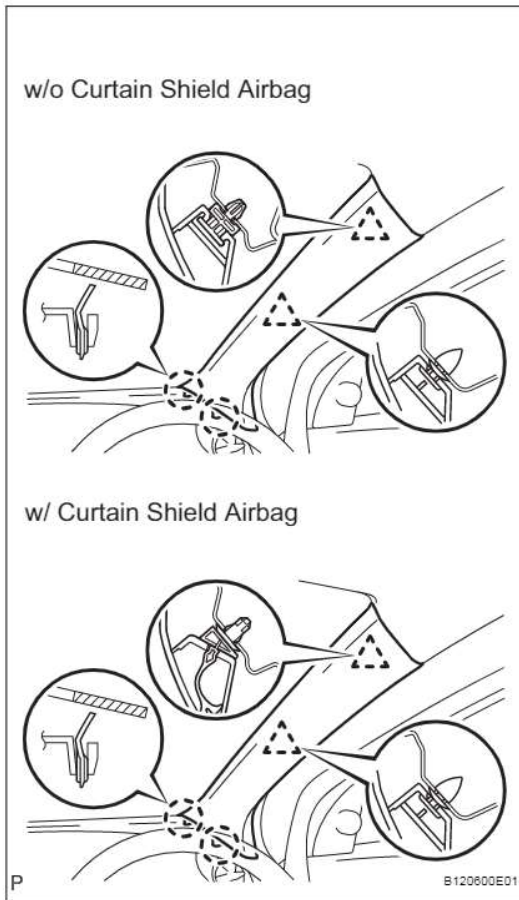
**29. REMOVE FRONT PILLAR GARNISH RH**

- (a) Using a screwdriver, detach the 2 clips.

HINT:

Tape the screwdriver tip before use.

- (b) Detach the 2 claws by pulling up the garnish and remove the garnish.

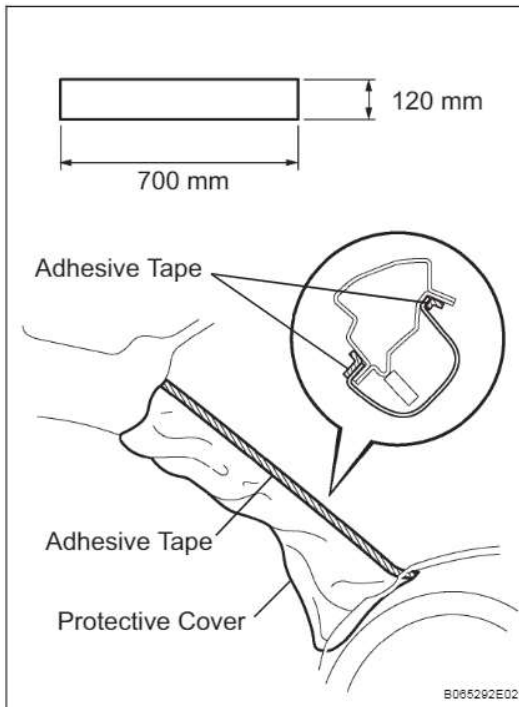

- (c) w/ Curtain shield airbag:

Protect the curtain shield airbag.

- (1) Thoroughly cover the airbag with cloth or nylon that is 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

30. REMOVE FRONT PILLAR GARNISH LH

HINT:

Use the same procedures described for the RH side.

31. REMOVE RH VISOR ASSEMBLY


- (a) Remove the 2 screws and visor.

32. REMOVE LH VISOR ASSEMBLY


- (a) Remove the 2 screws and visor.

INTERIOR – ROOF HEADLINING


IR-11

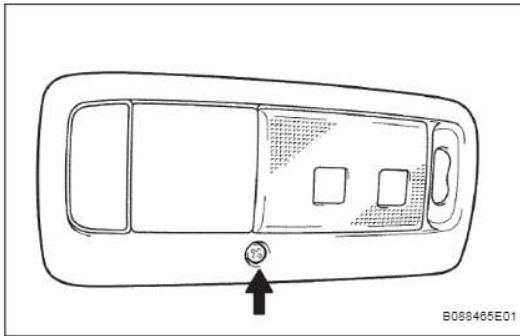**33. REMOVE MAP LIGHT ASSEMBLY**

- (a) Remove the screw and lens cover.

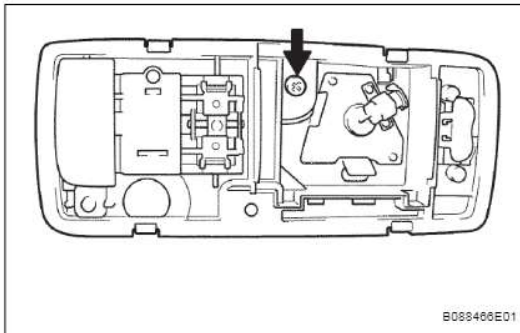

- (b) Remove the screw and light.
(c) Disconnect the map light connector.

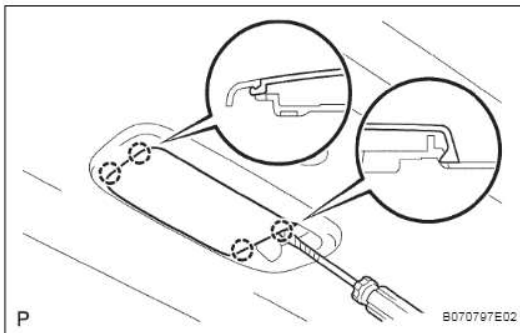
**34. REMOVE NO. 1 ROOM LIGHT ASSEMBLY**

- (a) Using a screwdriver, detach the 4 claws and remove the lens cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws.
(c) Disconnect the room light connector and remove the light.

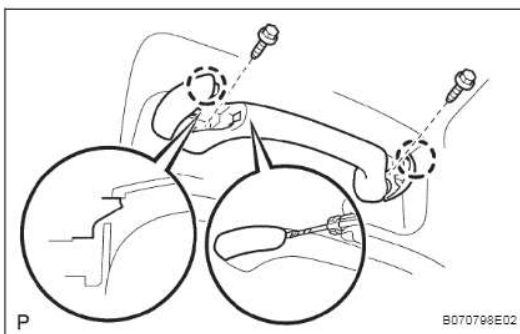
**35. REMOVE ASSIST GRIP ASSEMBLY**

- (a) Using a screwdriver, detach the 2 claws and remove the assist grip covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 bolts and assist grip.

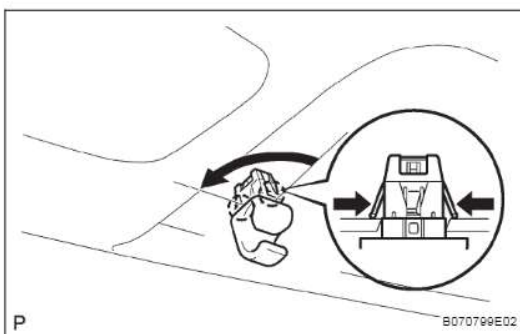**36. REMOVE VISOR HOLDER**

- (a) Remove the visor holder by turning it counterclockwise.


37. REMOVE SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof)

IR


IR-12

INTERIOR – ROOF HEADLINING

w/ Sliding Roof

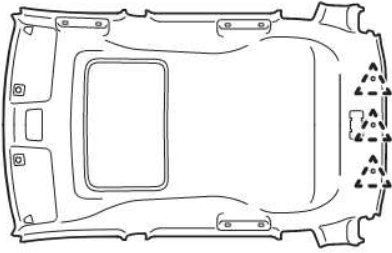

w/o Sliding Roof

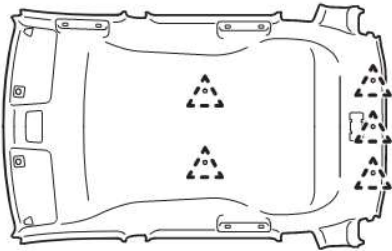

P

B120802E01


38. REMOVE ROOF HEADLINING ASSEMBLY

- (a) w/ Sliding roof:
Using a clip remover, remove the 3 clips and headlining.
- (b) w/o Sliding roof:
Using a clip remover, remove the 5 clips and headlining.

INSTALLATION

HINT:


A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

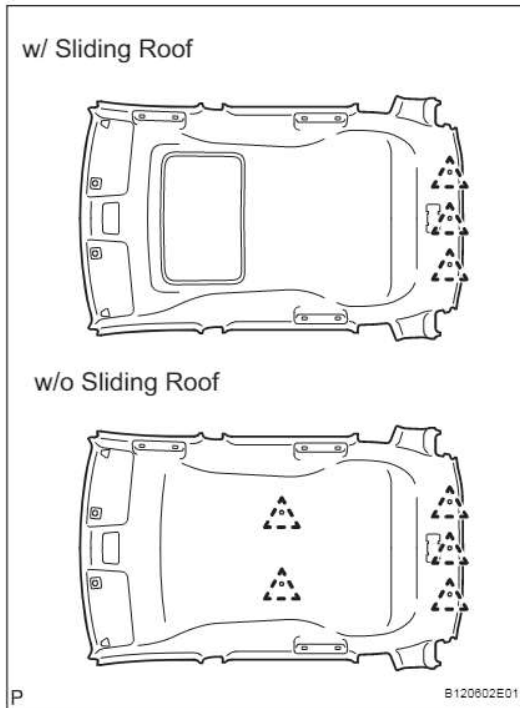

1. INSTALL ROOF HEADLINING ASSEMBLY


- (a) w/ Sliding roof:
Install the headlining with the 3 clips.
- (b) w/o Sliding roof:
Install the headlining with the 5 clips.

2. INSTALL SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof)

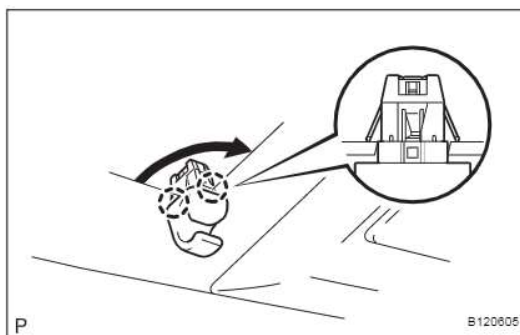

3. INSTALL VISOR HOLDER

- (a) Install the visor holder by turning it clockwise.

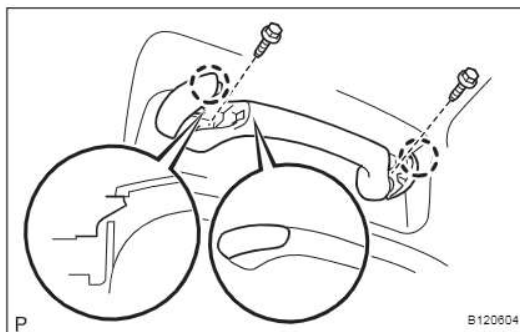

4. INSTALL ASSIST GRIP ASSEMBLY


- (a) Install the assist grip with the 2 bolts.
- (b) Attach the 2 claws to install the assist grip covers.

5. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

- (a) Connect the room light connector.
- (b) Install the light with the 2 screws.

IR-14


INTERIOR – ROOF HEADLINING

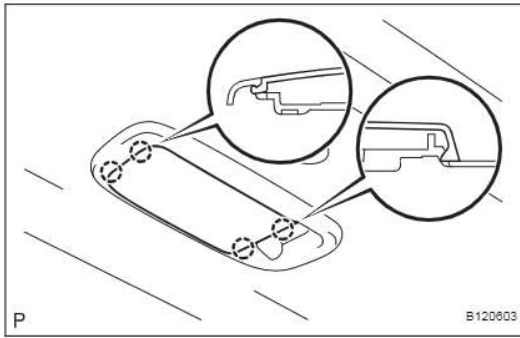


(c) Attach the 4 claws to install the lens cover.

6. INSTALL MAP LIGHT ASSEMBLY

(a) Connect the map light connector.

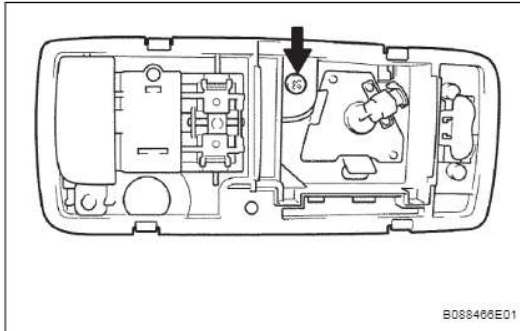

(b) Install the light with the screw.

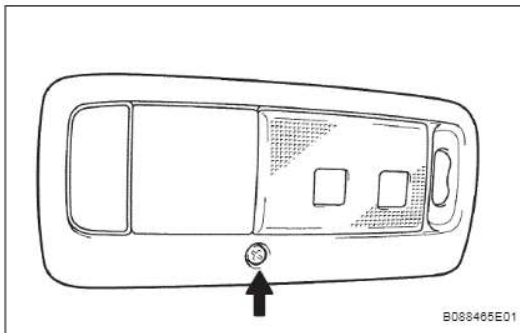

(c) Install the lens cover with the screw.

7. INSTALL RH VISOR ASSEMBLY

(a) Install the visor with the 2 screws.

8. INSTALL LH VISOR ASSEMBLY


(a) Install the visor with the 2 screws.

9. INSTALL FRONT PILLAR GARNISH RH

(a) w/ Curtain shield airbag:
Remove the protective cover.

INTERIOR – ROOF HEADLINING

IR-15

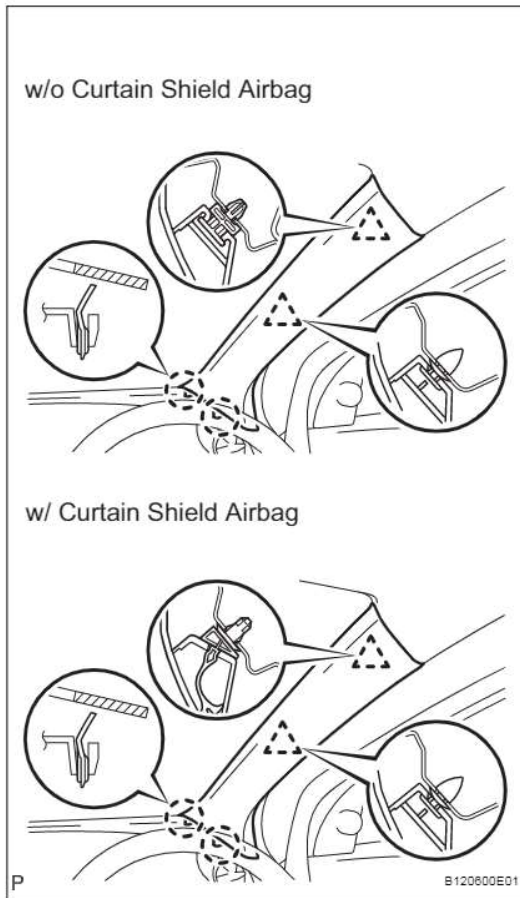


- (b) Attach the 2 claws and 2 clips, and install the garnish.

10. INSTALL FRONT PILLAR GARNISH LH

HINT:

Use the same procedures described for the RH side.

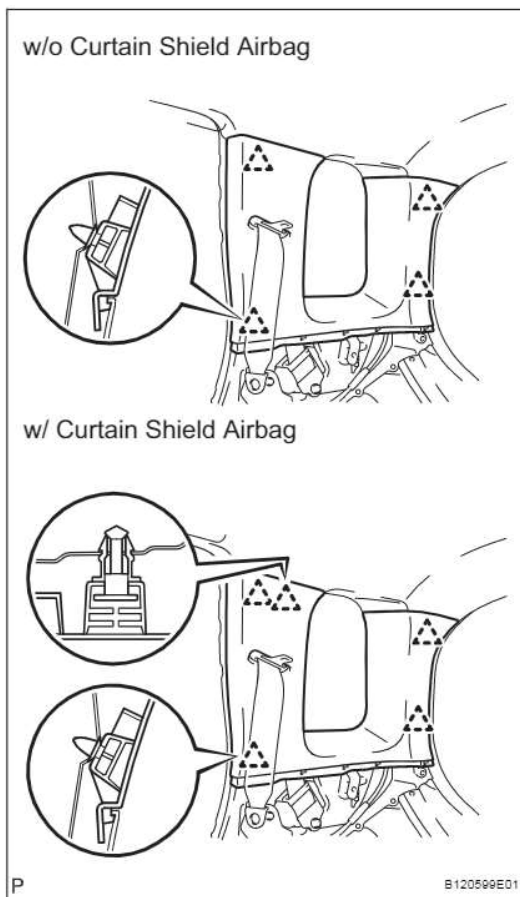**11. INSTALL ROOF SIDE GARNISH INNER RH**

- (a) w/o Curtain shield airbag:
Attach the 4 clips to install the side garnish.
- (b) w/ Curtain shield airbag:
Attach the 5 clips to install the side garnish.

12. INSTALL ROOF SIDE GARNISH INNER LH


HINT:

Use the same procedures described for the RH side.

IR

IR-16

INTERIOR – ROOF HEADLINING

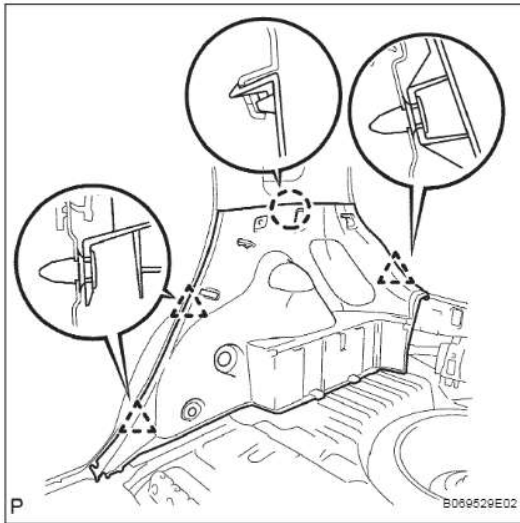
**13. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH**

- (a) Attach the 3 clips and claw, and install the side panel.
- (b) Install the rear seat 3 point type belt floor anchor with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

- (c) Install the seatback hinge with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

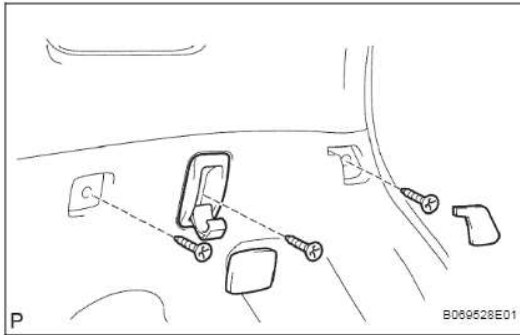

- (d) Install the compartment trim hook with the screw.
- (e) Install the 2 screws and 2 covers.

14. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH


HINT:

Use the same procedures described for the RH side.

15. INSTALL CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY

- (a) Install the anchor bracket with the 4 bolts.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

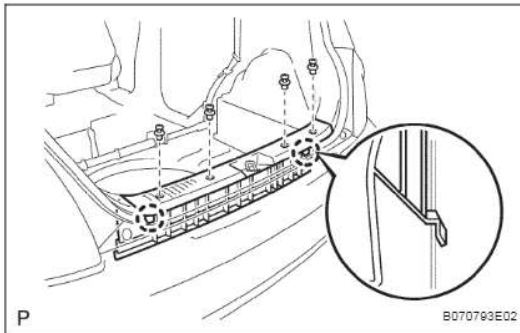**16. INSTALL DECK TRIM COVER REAR**

- (a) Attach the 2 claws to install the trim cover.
- (b) Install the 4 clips.


17. INSTALL SPARE WHEEL COVER ASSEMBLY**18. INSTALL DECK FLOOR BOX RH**

- (a) Install the floor box with the 2 bolts.

19. INSTALL NO. 1 DECK BOARD**20. INSTALL TONNEAU COVER ASSEMBLY****21. INSTALL REAR SEATBACK ASSEMBLY RH (See page SE-17)****22. INSTALL REAR SEATBACK ASSEMBLY LH (See page SE-17)****23. INSTALL REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page SE-17)**

INTERIOR – ROOF HEADLINING

IR-17

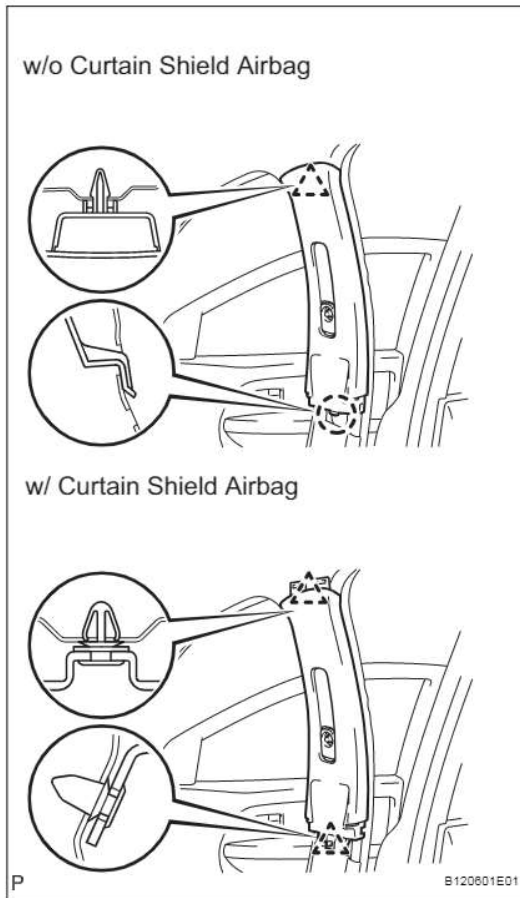
**24. INSTALL CENTER PILLAR GARNISH UPPER RH**

- (a) w/o Curtain shield airbag:
Attach the claw and clip to install the center pillar garnish.
- (b) w/ Curtain shield airbag:
Attach the 2 clips to install the center pillar garnish.
- (c) Install the front seat outer belt shoulder anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
- (d) Install the shoulder anchor cover.

25. INSTALL CENTER PILLAR GARNISH UPPER LH

HINT:

Use the same procedures described for the RH side.

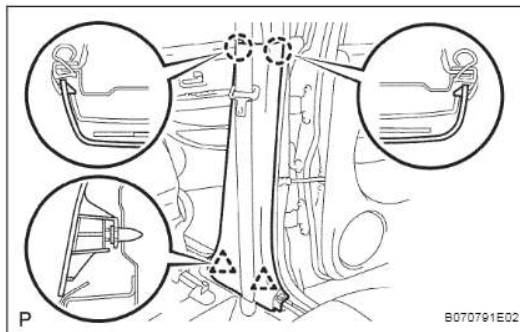**26. INSTALL CENTER PILLAR GARNISH LOWER RH**

- (a) Attach the 2 clips and 2 claws to install the center pillar garnish.
- (b) Install the front seat outer belt floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
- (c) Install the floor anchor cover.

27. INSTALL CENTER PILLAR GARNISH LOWER LH

HINT:


Use the same procedures described for the RH side.

28. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH**29. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH****30. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH****31. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

IR

IR-18

INTERIOR – ROOF HEADLINING

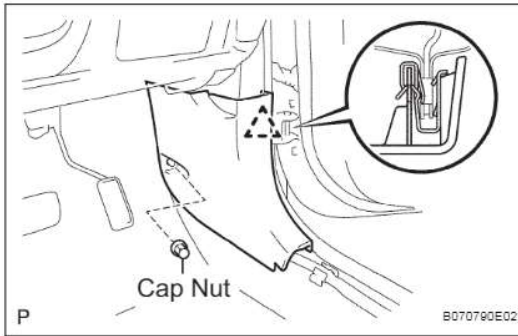
**32. INSTALL COWL SIDE TRIM BOARD RH**

- (a) Attach the clip to install the trim board.
- (b) Install the cap nut.

33. INSTALL COWL SIDE TRIM BOARD LH

HINT:

Use the same procedures described for the RH side.

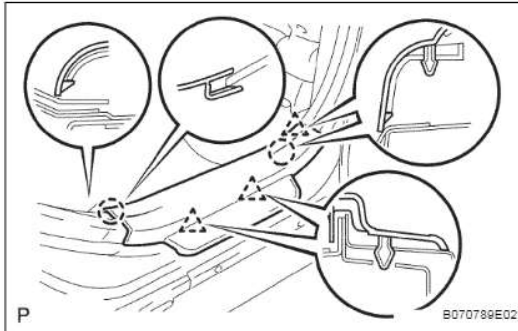
**34. INSTALL REAR DOOR SCUFF PLATE RH**

- (a) Attach the 2 claws and 3 clips to install the scuff plate.

35. INSTALL REAR DOOR SCUFF PLATE LH

HINT:

Use the same procedures described for the RH side.

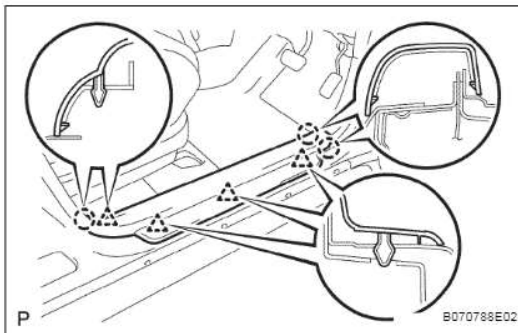**36. INSTALL FRONT DOOR SCUFF PLATE RH**

- (a) Attach the 3 claws and 4 clips to install the scuff plate.

37. INSTALL FRONT DOOR SCUFF PLATE LH

HINT:

Use the same procedures described for the RH side.


38. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**39. PERFORM INITIALIZATION**

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

ROOF HEADLINING
COMPONENTS

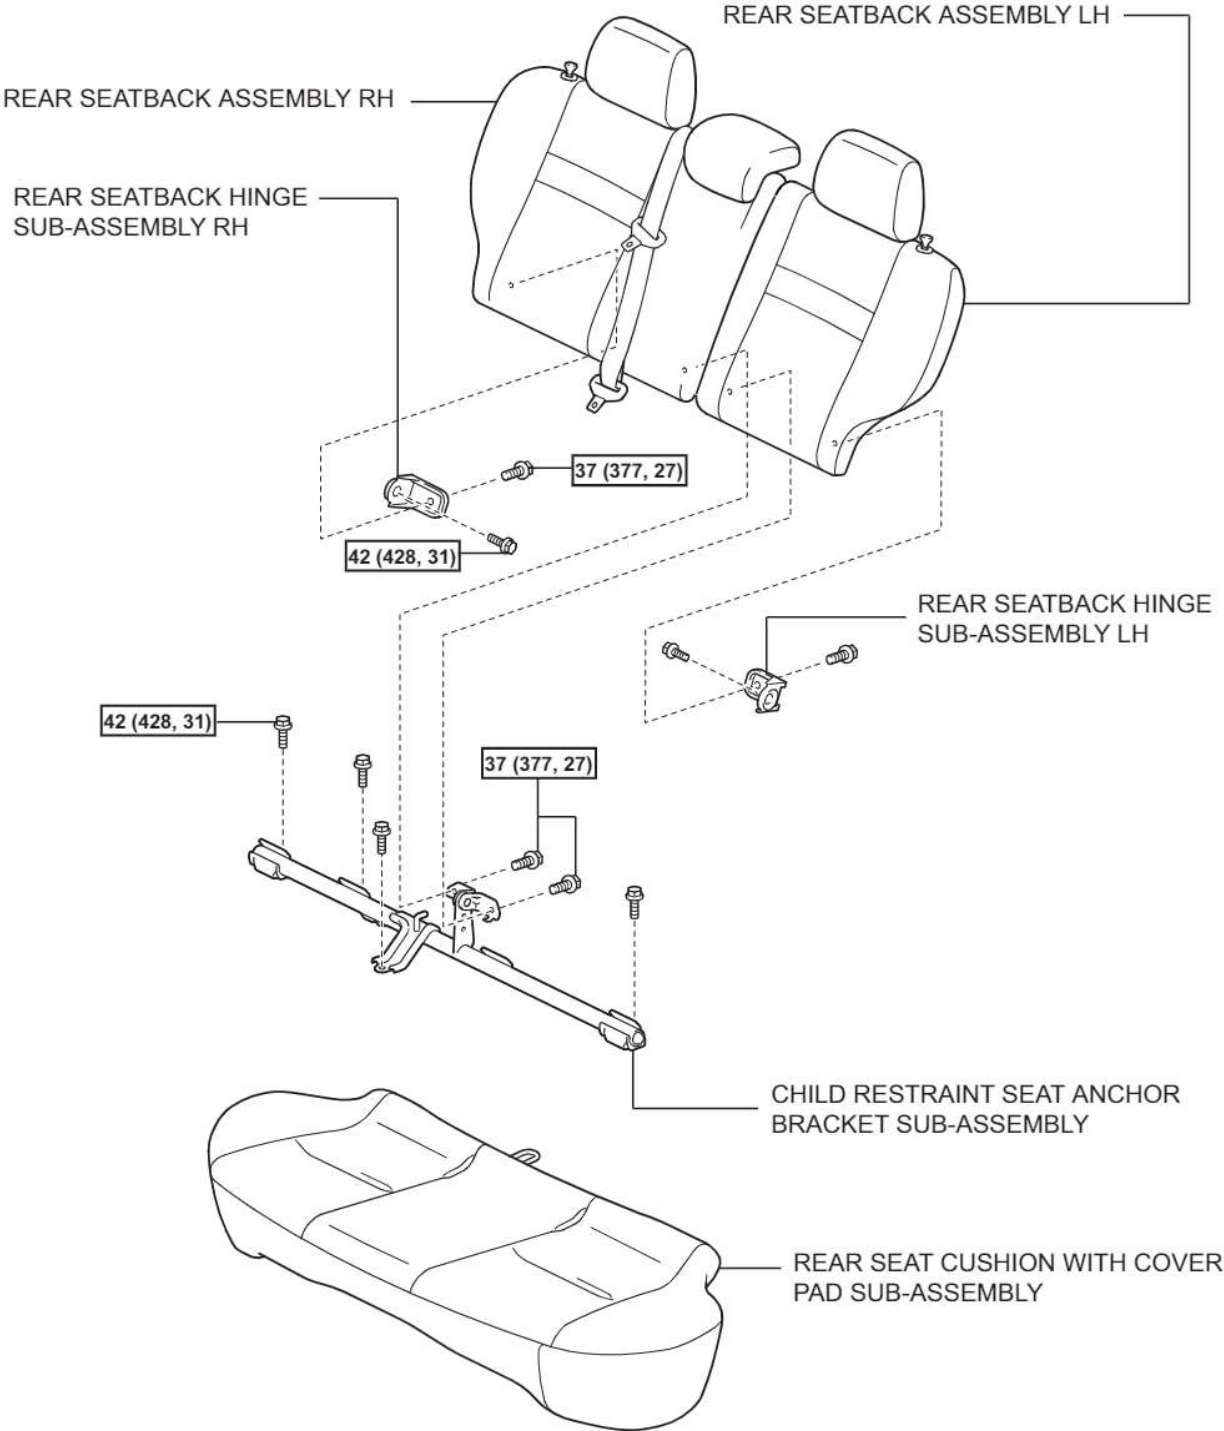

N*m (kgf*cm, ft.*lbf) : Specified torque


P

B119449E03


IR

IR-2

INTERIOR – ROOF HEADLINING

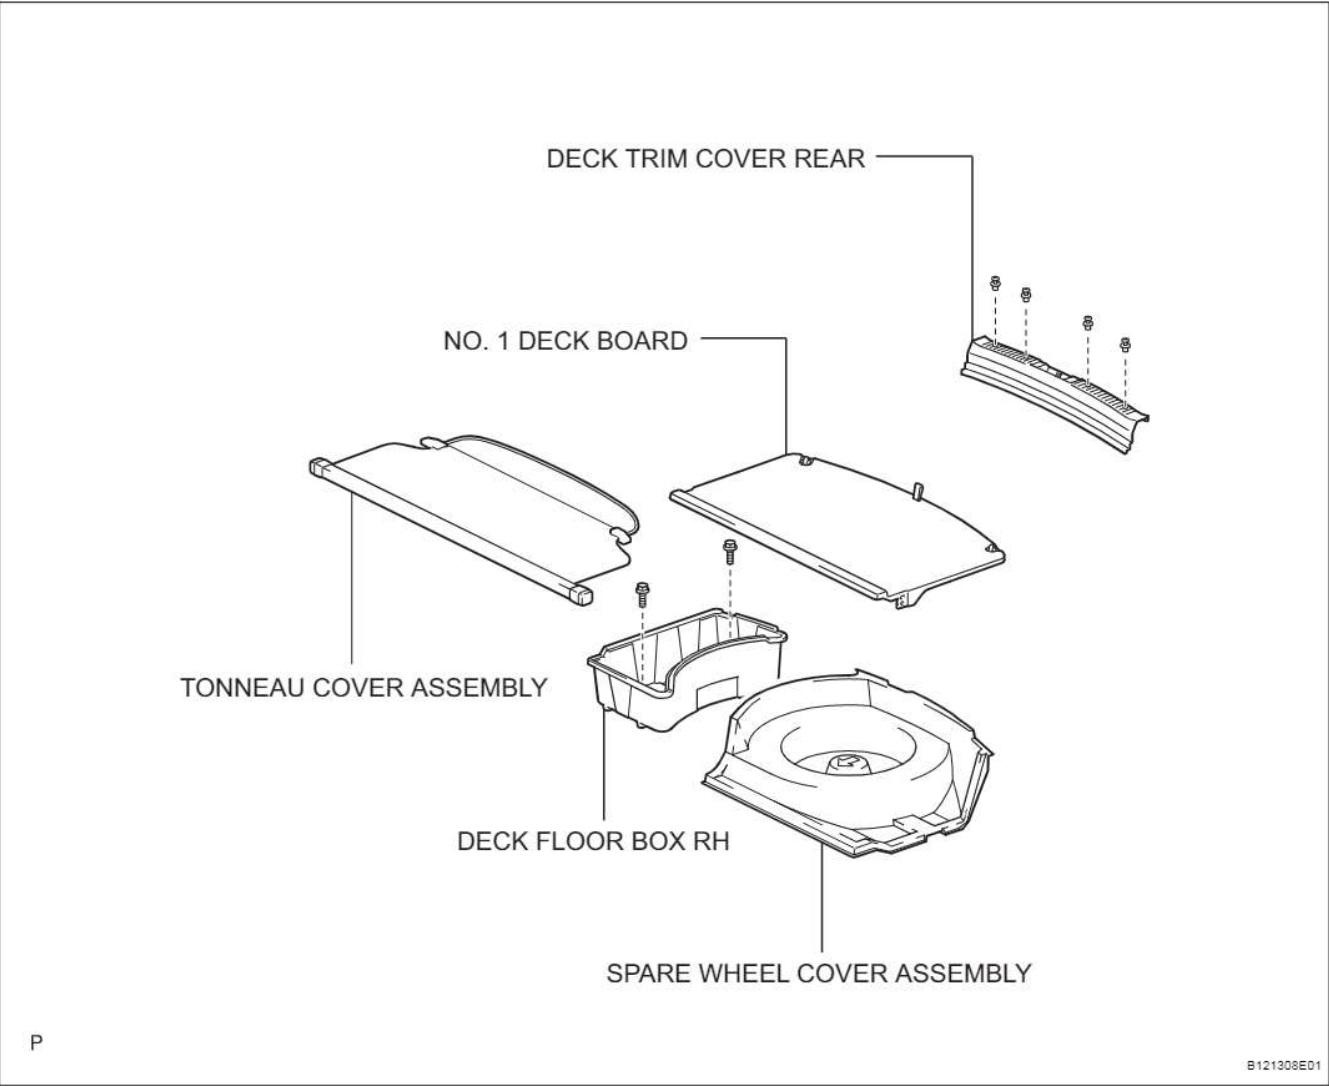


INTERIOR – ROOF HEADLINING

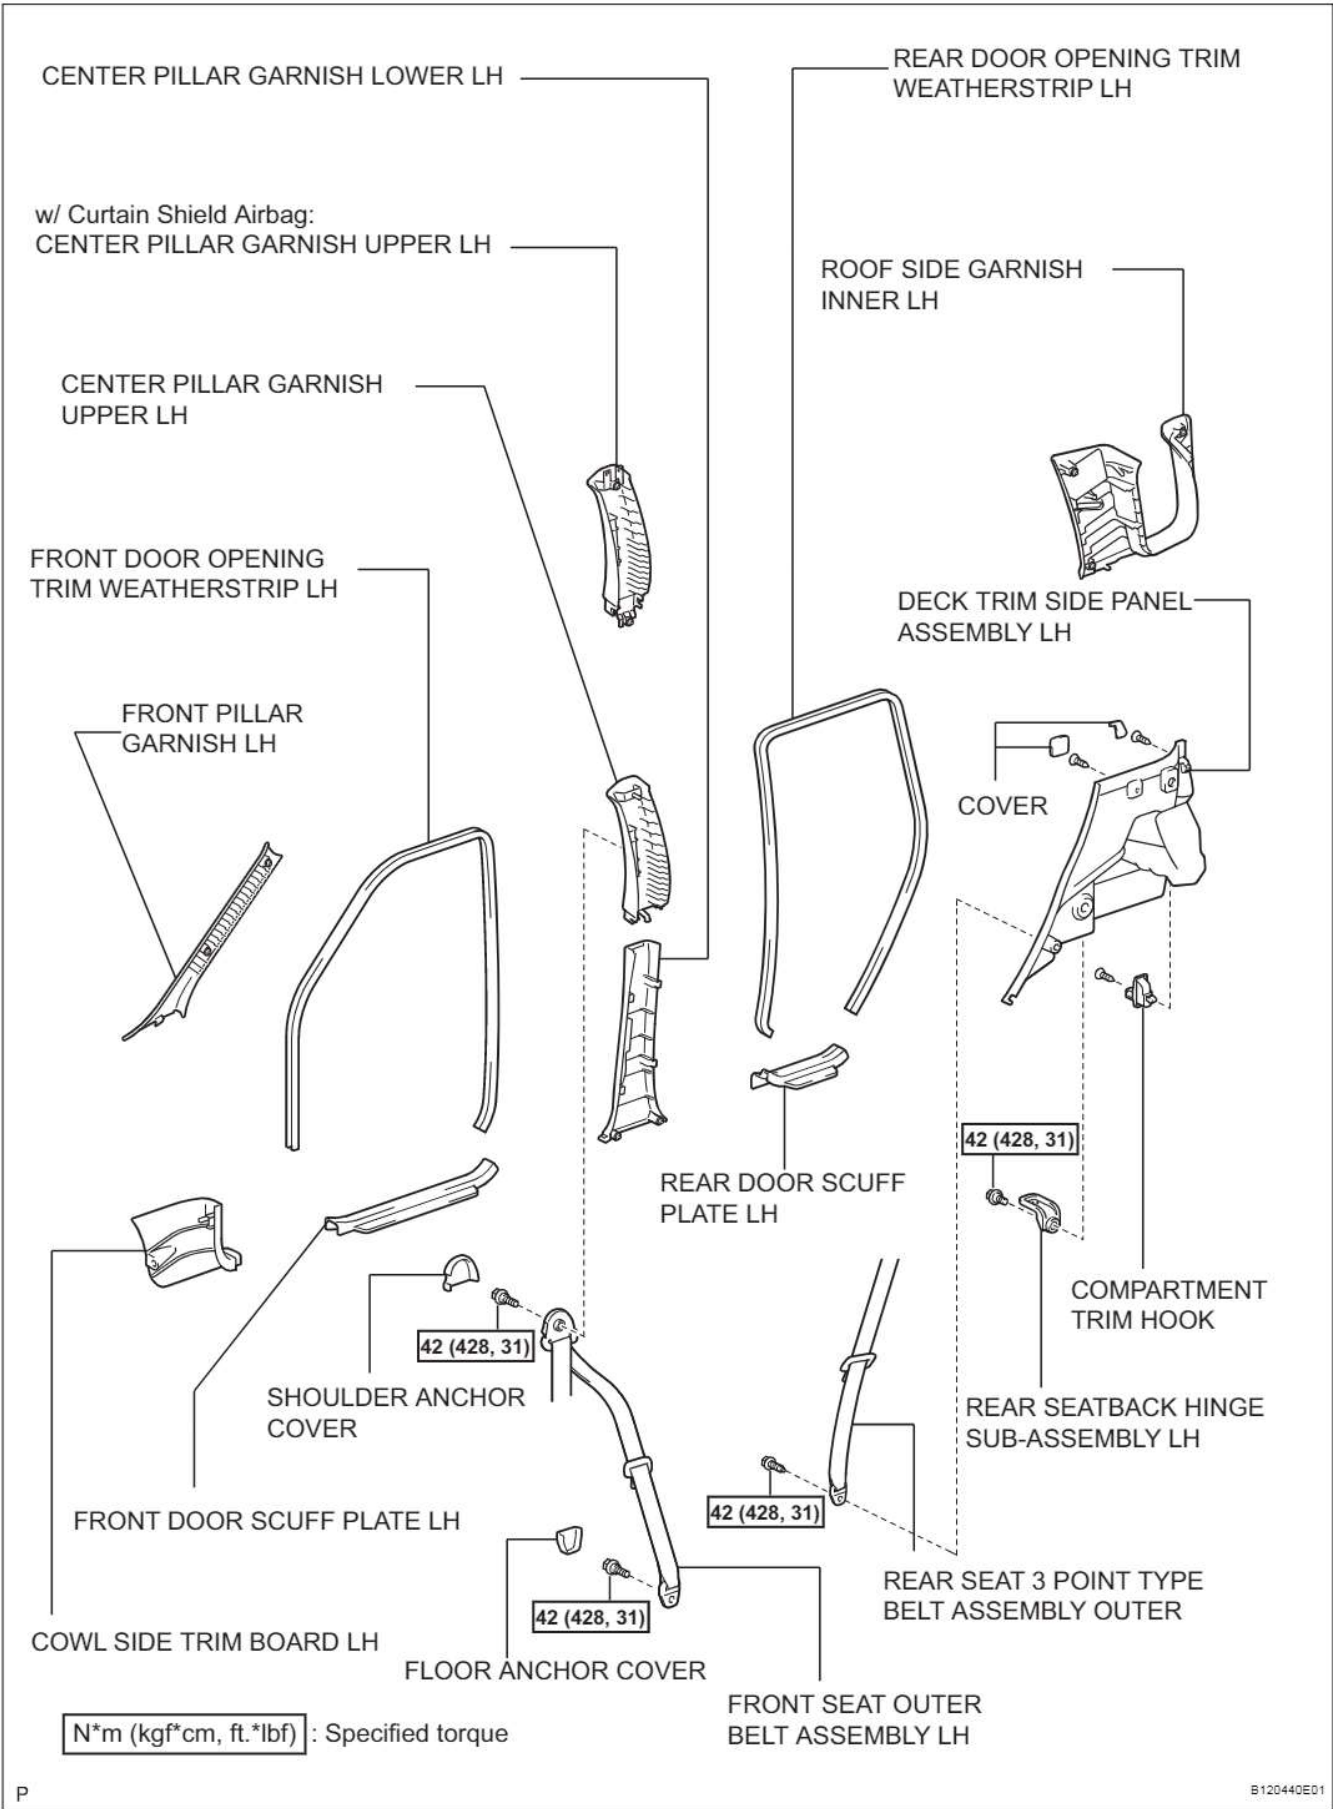

IR

IR-4


INTERIOR – ROOF HEADLINING

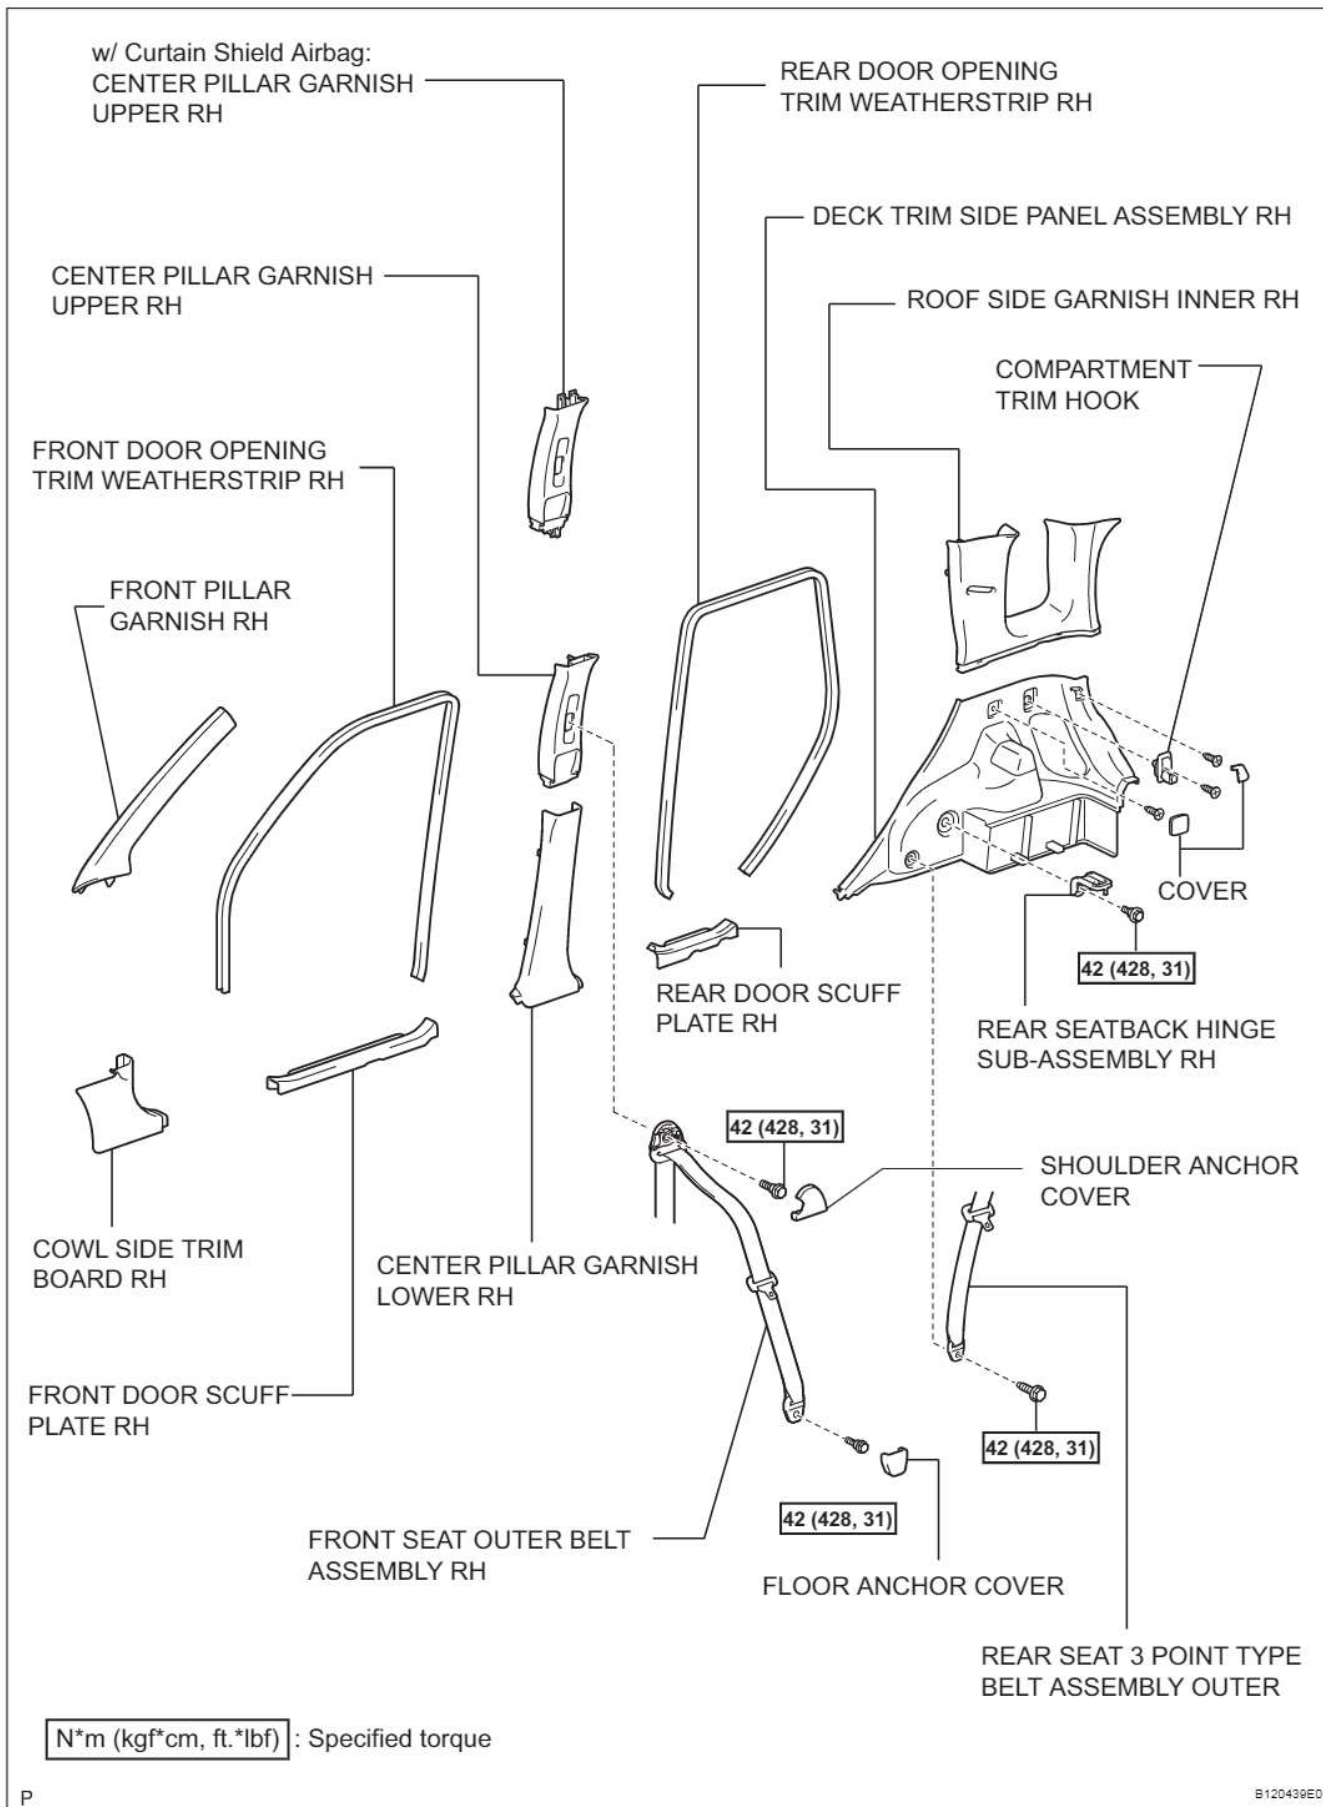

INTERIOR – ROOF HEADLINING

IR-5

w/o Sliding Roof

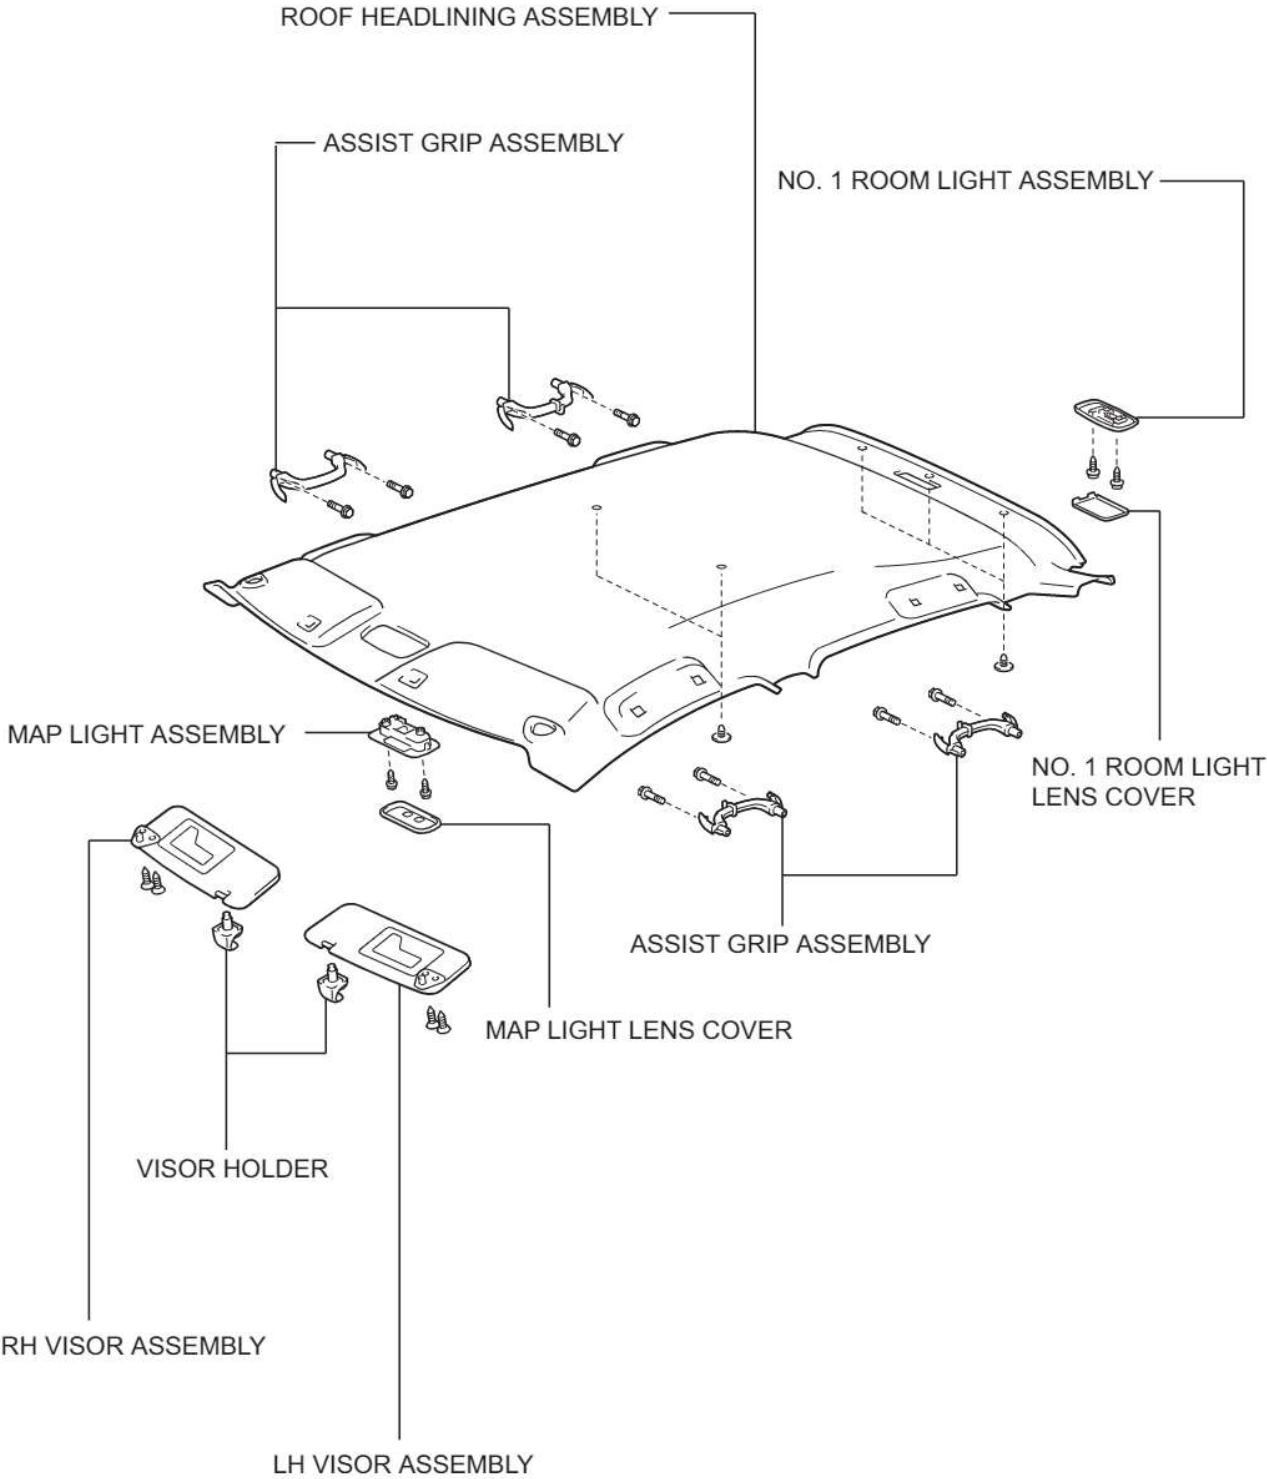

IR

IR-6

INTERIOR – ROOF HEADLINING

