

Toyota Supra (A80; 1995-1998) fuses

*In this article, we consider the fourth-generation Toyota Supra (A80), produced from 1993 to 1998. Here you will find fuse box diagrams of **Toyota Supra 1995, 1996, 1997 and 1998**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

Fuse Layout Toyota Supra 1995-1998



Cigar lighter (power outlet) fuse in the Toyota Supra is the fuse #24 “CIG” in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

The fuse box is located behind the lid under the driver's side of the instrument panel.



Fuse Box Diagram

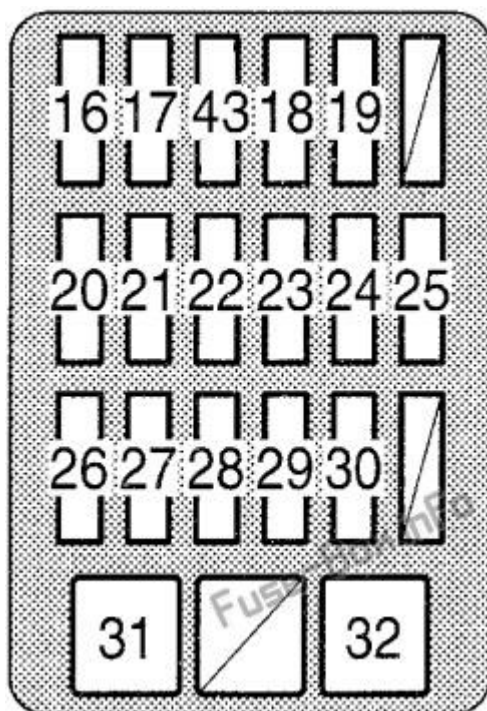

Assignment of the fuses in the instrument panel

Nº	Name	Amp	Description
16	WIPER	20A	Windshield wipers and washer, rear window wiper and washer


№	Name	Amp	Description
17	HTR	7.5A	Air conditioning system
18	ST	7.5A	Starter system
19	IGN	7.5A	Charging system, discharge warning light, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
20	PANEL	10A	Instrument panel lights, instrument panel lights control
21	MIR-HTR	10A	Mirror heaters
22	TURN	7.5A	Turn signal lights
23	STOP	15A	Stop lights, cruise control system cancel device
24	CIG	15A	Cigarette lighter, air conditioning system, SRS airbag system, theft deterrent system, shift lock control system
25	RAD №2	7.5A	Radio, cassette tape player, power antenna
26	TAIL	10A	Tail lights, parking lights, front side marker lights, rear side marker lights, licence plate lights
27	ECU-IG	10A	Cruise control system, anti-lock brake system, power steering, power antenna, theft deterrent system, shift lock control system, traction control system
28	GAUGE	10A	Gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), rear window defogger, charging system, cruise control system, electronically controlled automatic transmission system, traction control system
29	ECU-B	10A	Air conditioning system, cruise control system, anti-lock brake system, SRS airbag system, traction control system
30	OBD-II	7.5A	US: On-board diagnosis system

№	Name	Amp	Description
31	DOOR	30A	Power window, power door lock system, theft deterrent system
32	DEFOG	30A	Rear window defogger
43	SEAT-HTR	15A	Canada: Seat heater


Advertisements

Engine Compartment Fuse Box

Fuse Box Location

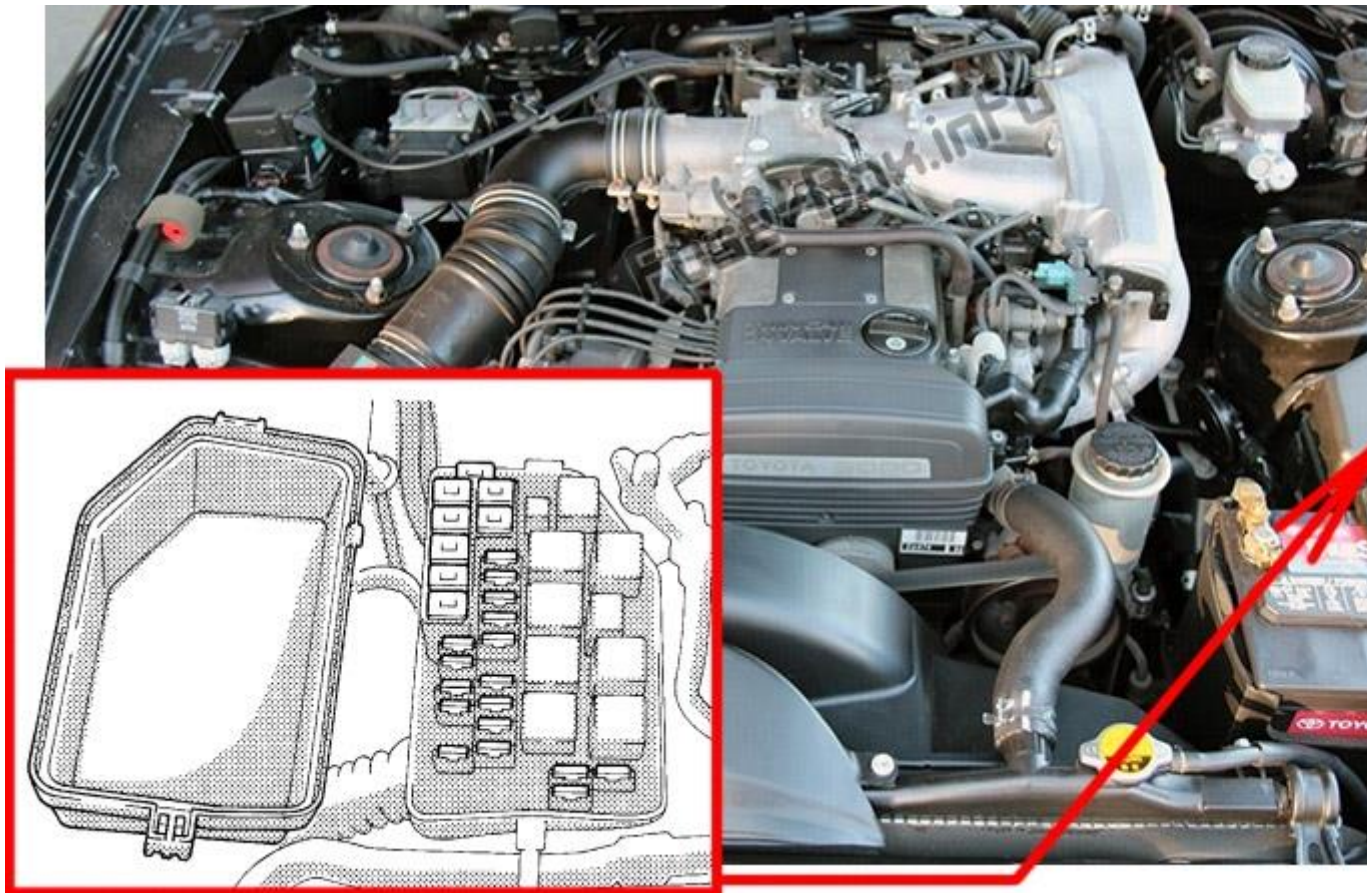

Fuse Box Diagram

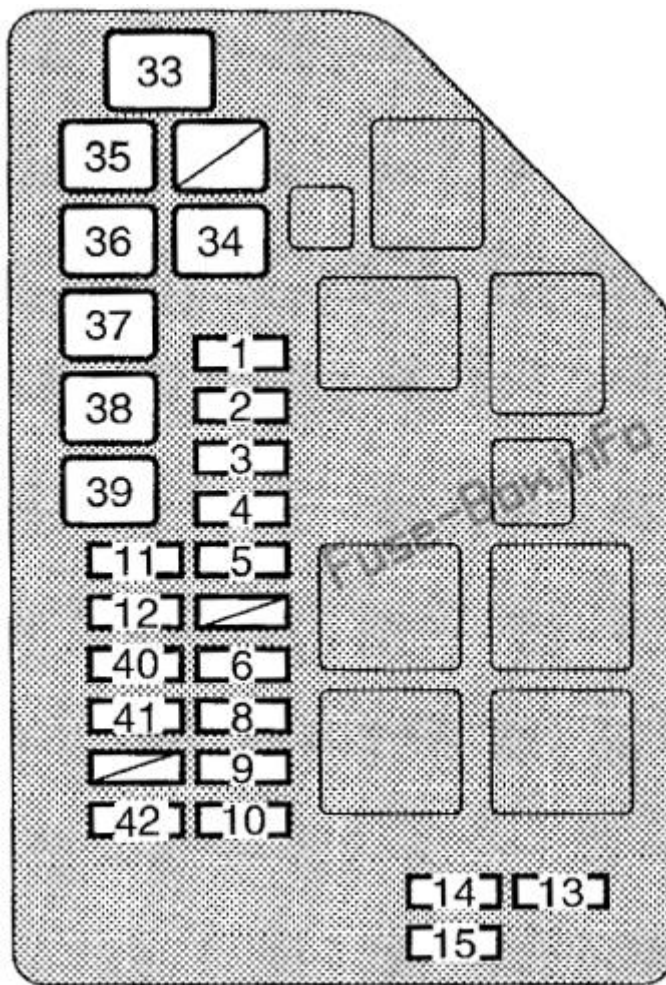

Assignment of the fuses in the engine compartment

№	Name	Amp	Description
1	EFI №2	30A	Multiport fuel injection system/sequential multiport fuel injection system
2	EFI №1	30A	Multiport fuel injection system/sequential multiport fuel injection system
3	AM2	30A	Starter system
4	FOG	15A	Front fog lights
5	HAZ-HORN	15A	Emergency flashers, horns
6	TRAC or ETCS	7.5A/15A	Traction control system (TRAC, 7.5A) or Electronic Traction Control System (ETCS, 15A)
8	ALT-S	7.5A	Charging system

№	Name	Amp	Description
9	DOME	7.5A	Interior lights, personal lights, door courtesy lights, luggage compartment light, ignition switch light, open door warning light, theft deterrent system
10	RAD №1	20A	Radio cassette tape player
11	HEAD (RH)	15A	US: Right-hand headlight
11	HEAD_(RH-LWR)	15A	Canada: Right-hand headlight (low beam)
12	HEAD (LH)	15A	US: Left-hand headlight
12	HEAD_(LH-LWR)	15A	Canada: Left-hand headlight (low beam)
13	-	30A	Spare fuse
14	-	7.5A	Spare fuse
15	-	15A	Spare fuse
33	ALT	120A	Charging system
34	MAIN	50A	Starter system, headlights
35	HTR	50A	Air conditioning system
36	FAN	30A	Electric cooling fans
37	ABS №1	60A	Anti-lock brake system, traction control system
38	AM1	50A	Electronic ignition system/ distributor ignition system
39	POWER	60A	"PANEL", "STOP", "TAIL", "ECU-B", "DEFOG" and "DOOR" fuses
40	HEAD_(RH-UPR)	15A	Canada: Right-hand headlight (high beam)

No	Name	Amp	Description
41	HEAD_(LH-UPR)	15A	Canada: Left-hand headlight (high beam)
42	DRL	7.5A	Canada: Daytime running light system