


## Mercury Grand Marquis Third Generation 1998 – 2002 fuse box diagram

### Passenger compartment fuse panel

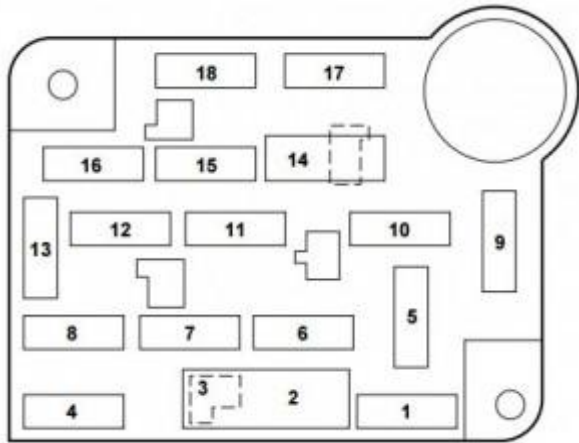

Mercury Grand Marquis 3rd Generation – fuse box – passenger compartment


The fuse panel is located below and to the left of the steering wheel by the brake pedal. Remove the panel cover to access the fuses.

| Fuse/relay | Ampere rating<br>[A] | Description                                                             |
|------------|----------------------|-------------------------------------------------------------------------|
| 1          | 15                   | Brake Pedal Position (BPP) Switch, Speed Control, Multi-Function Switch |

|   |    |                                                                                                                                                                              |
|---|----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | 30 | Wiper Control Module, Windshield Wiper Moto                                                                                                                                  |
| 3 | —  | Not used                                                                                                                                                                     |
| 4 | 15 | Lighting Control Module, Main Light Switch                                                                                                                                   |
| 5 | 15 | Backup Lamps, Variable Assist Power Steering (VAPS), Turn Signals, Air Suspension, Daytime Running Lamps, Electronic Day/Night Mirror, Shift Lock, EATC, Speed Chime Warning |
| 6 | 15 | Speed Control, Main Light Switch, Lighting Control Module, Clock                                                                                                             |
| 7 | 25 | Powertrain Control Module (PCM) Power Diode, Ignition Coils                                                                                                                  |
| 8 | 15 | Lighting Control Module, Power Mirrors, PATS, Keyless Entry, Module, Clock Memory, Electronic Automatic Temperature Control (EATC), Power Windows, SecuriLock                |
| 9 | 30 | Blower Motor, A/C-Heater Mode Switch                                                                                                                                         |

|    |       |                                                                                                                 |
|----|-------|-----------------------------------------------------------------------------------------------------------------|
| 10 | 10    | Air Bag Module                                                                                                  |
| 11 | 5     | Radio                                                                                                           |
| 12 | 18 CB | Lighting Control Module, Flash-to-Pass, Main Light Switch                                                       |
| 13 | 15    | Warning Lamps, Analog Cluster Gauges and Indicators, Electronic Automatic Transmission, Lighting Control Module |
| 14 | 20 CB | Window/Door Lock Control, Driver's Door Module, One Touch Down                                                  |
| 15 | 10    | Anti-Lock Brakes, Instrument Cluster, Transmission Control Switch                                               |
| 16 | 20    | Cigar Lighter; Auxiliary Power Point                                                                            |
| 17 | 10    | Rear Defrost                                                                                                    |
| 18 | 10    | Air Bag Module                                                                                                  |

## Power distribution box

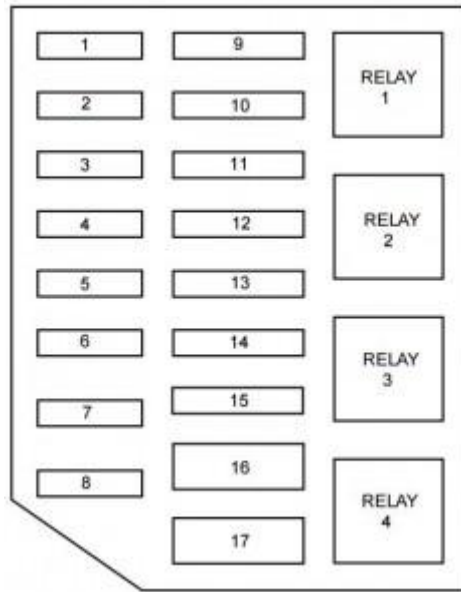

Mercury Grand Marquis 3rd Generation – fuse box – power distribution box

The power distribution box is located in the engine compartment. The power distribution box contains high-current fuses that protect your vehicle's main electrical systems from overloads.

| Fuse/relay | Ampere rating [A] | Description                               |
|------------|-------------------|-------------------------------------------|
| 1          | 20*               | Electric Fuel Pump Relay                  |
| 2          | 30*               | Generator, Starter Relay, Fuses 15 and 18 |

|    |       |                                                         |
|----|-------|---------------------------------------------------------|
| 3  | 25*   | Radio, CD Changer, Subwoofer Amplifier                  |
| 4  | —     | Not used                                                |
| 5  | 15*   | Horn Relay                                              |
| 6  | 20*   | DRL Module                                              |
| 7  | 20 CB | Power Door Locks, Power Seats, Trunk Lid Release        |
| 8  | 30**  | Air Suspension System                                   |
| 9  | 50**  | See Fuses 5 and 9                                       |
| 10 | 50**  | See Fuses 1, 2, 6, 7, 10, 11, 13 and Circuit Breaker 14 |
| 11 | 40**  | See Fuses 4, 8, 16 and Circuit Breaker 12               |

|         |       |                                             |
|---------|-------|---------------------------------------------|
| 12      | 30**  | PCM Power Relay, PCM                        |
| 13      | 50**  | High Speed Cooling Fan Relay                |
| 14      | 40**  | Rear Window Defrost Relay, Also see Fuse 17 |
| 15      | 50**  | Anti-Lock Brake Module                      |
| 16      | —     | Not used                                    |
| 17      | 30 CB | Cooling Fan Relay                           |
| Relay 1 | —     | Rear Defrost Relay                          |
| Relay 2 | —     | Horn Relay                                  |
| Relay 3 | —     | Cooling Fan Relay                           |

|                            |   |                           |
|----------------------------|---|---------------------------|
| Relay 4                    | — | Air Suspension Pump Relay |
| * Mini Fuses ** Maxi Fuses |   |                           |