

Vauxhall Signum 2003 -2008 fuse box diagram

Fuse box in passenger compartment



Vauxhall Signum – fuse box – passenger compartment

The fuse box is on the left, on the outside of the instrument panel. Open door.
Disengage cover by pulling firmly and remove.

Number	Circuit	Rating [A]
1	Infotainment system, radio transport fuse	20
2	Interior fan, heating, air conditioning system	7,5
3	Sun roof	20
4	—	—
5	Door module control unit	7,5
6	Brake light	7,5
7	Bodywork module control unit	30
8	Control unit Front passenger door module	30

9	Central control module	7,5
10	Control unit Steering column module	7,5
11	Diagnostics plug	7,5
12	Battery overload protection	15
13	—	—
14	—	—
15	Door module control unit	30
16	—	—
17	Instruments, information display	15
18	—	—
19	—	—
20	Yaw rate sensor (ESP®Plus)	7,5
21	—	—
22	Cigarette lighter	30
23	Interior fan, air conditioning, climate control system	30

		40
24	—	—
25	Heating, air conditioning system	7,5
26	Instruments, information display	7,5
27	—	—

Fuse box in luggage compartment



Vauxhall Signum – fuse box – luggage compartment


The fuse box is located on the left side of the luggage compartment, in the stowage compartment. Press down both bars and open the cover.

Number	Circuit	Rating [A]
1	—	—
2	—	—

3	Electric seat adjustment, driver's seat	40
4	Heated rear window	40
5	Electric seat adjustment, front passenger seat	40
6	Electric window operation, right rear	30
7	Electric window operation, left rear	30
8	Seat heating, rear right	15
9	Horn, Vauxhall alarm system	15
10	Fuel pump	20
11	Battery voltage	25
12	Seat heating, rear left	15
13	Towing equipment	20
14	Tailgate wiper	15
15	Heated seats, seat climate control, left front	15
16	Seat heating, front right	15
17	Accessory socket	15

18	—	—
19	Terminal 30, Twin Audio	10
20	Fuel filler cap locking	7,5
21	Ultrasonic sensor, Vauxhall alarm system	5
22	—	—
23	Glass breakage sensor (Vauxhall alarm system)	7,5
24	Battery voltage	25
25	Electronic chassis	10
26	Terminal 15 (ignition lock), Twin Audio	25
27	Seat occupancy recognition, tyre pressure monitoring system, rain sensor, air conditioning system	5
28	Parking distance sensor	7,5
29	—	—

Fuse box in engine compartment

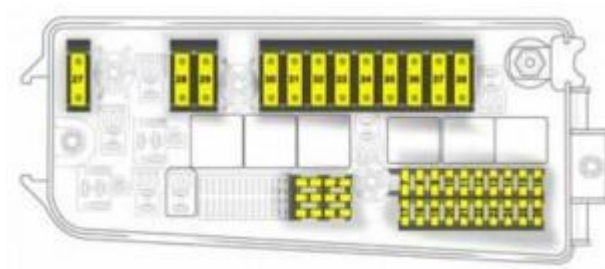

Vauxhall Signum – fuse box – engine

compartment

The fuse box is in the box at the front left side of the engine compartment. To open, disengage front battery cover and tilt upwards. Disengage the bar at the front of the cover of fuse box and swing it upwards.

Number	Circuit	Rating [A]
1	Engine electronics, transmission electronics	20
2	Starter	25
3	Horn	20
4	Air conditioning system, climate control system	10
5	Windscreen wash system, front and rear	15
6	Diesel fuel filter heating	30
7	Central control unit, ESP®Plus	15
8	Headlights, windscreen washing nozzles	10
9	Power steering, brake servo	7,5
10	Adaptive Forward Lighting	10

11	Windscreen wipers	30
12	Central control unit, ESP®Plus	7,5
13	Headlight wash system	30
14	Oxygen sensor	10
15	Engine control unit*	10
16	ABS	5
17	—	—
18	—	—
19	Adaptive Forward Lighting, headlight range adjustment	15
20	Headlight range adjustment	5
21	—	—
22	Windscreen wipers	30
23	Auxiliary heating	20
24	Battery voltage, terminal 30	25
25	Battery voltage, terminal 30	30

26	—	—
27	Easytronic	30
28	Tailgate module control unit	60
29	ABS	40
30	Tailgate module control unit	60
31	Vehicle interior module control unit	60
32	ABS	40
33	Vehicle interior module control unit	60
34	Tailgate module control unit	60
35	Cooling fan **	30
		40
36	Cooling fan**, Brake servo	20
		30
		30
37	Adaptive Forward Lighting (AFL): Slot for changing to symmetrical dipped beam for driving abroad	Insert any maxifuse

38	—	—
----	---	---

* – The brake lights are on all the time if the fuse is defective and the ignition is switched on.

** – Depending on engine.