

 
Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EX156X
Title: FOREWORD / CAUTION / SECTION TOC: FOREWORD: CAUTION (2011 RAV4)		

CAUTION

This contents does not include all the necessary items about repair and service. This manual is made for the use of persons who have special techniques and certifications. If non-specialized or uncertified technicians perform repairs or service only using this manual or without proper equipment or tools, this may cause severe injury to you or other persons nearby and also cause damage to your customer's vehicle.

In order to prevent dangerous operation and damage to your customer's vehicle, be sure to follow the instructions shown below.

- This contents must be read thoroughly. It is especially important to have a good understanding of all the contents written in the PRECAUTION of "INTRODUCTION" section.
- The service method written in this manual is very effective to perform repair and service. When performing the operations following the procedures using this manual, be sure to use tools specified and recommended. If using non-specified or tools other than recommended tools and service methods, be sure to confirm the safety of the technicians and that there is no possibility of causing personal injury or damage to the customer's vehicle before starting the operation.
- If part replacement is necessary, the part must be replaced with the same part number or equivalent part. Do not replace it with an inferior quality part.
- It is important to note that this manual contains various "Cautions" and "Notices" that must be carefully observed in order to reduce the risk of personal injury during service or repair, or reduce the possibility that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that these "Cautions" and "Notices" are not exaggerations and are possible hazardous consequences that might result from failure to follow these instructions.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EW1MBX
Title: FOREWORD / CAUTION / SECTION TOC: FOREWORD: FOREWORD (2011 RAV4)		

FOREWORD

This is Volume 1 of the 2011 RAV4 manual. There are four volumes to this manual. The sections included in each volume are indicated by black type in the Section Index. Use the Section Index of each volume to find the volume with the section you need.

Applicable models	ASA33, 38 series
	GSA33, 38 series

Please note that the publications below have also been prepared as relevant service manuals for the components and system in these vehicles.

MANUAL NAME	PUB. NO.
2011 RAV4 Electrical Wiring Diagram	EM16B0U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice. For the most current information available, refer to the Toyota Technical Information System (TIS) online at dealership locations or on the Internet at <http://techinfo.toyota.com>.

If you find any failures in this manual, you are kindly requested to inform us by using the report form on the next page.

TOYOTA MOTOR CORPORATION

Copyright (C) 2010 TOYOTA MOTOR CORPORATION
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.
First Printing: Jul. 20, 2010 01-100720-00

Repair Manual Quality Report

Att.) Service Manager, Your Distributor

Pub. No.	Issue Date
Name of Dealer	Name of Reporter
Subject	
Problem Description	
Correction Proposal	



cardiagn.com


Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000000UZ308PX
Title: INTRODUCTION: HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS: ELECTRONIC CIRCUIT INSPECTION PROCEDURE (2011 RAV4)		

ELECTRONIC CIRCUIT INSPECTION PROCEDURE

1. BASIC INSPECTION

(a) WHEN MEASURING RESISTANCE OF ELECTRONIC PARTS

- (1) Unless otherwise stated, all resistance measurements should be made at an ambient temperature of 20°C (68°F). Resistance measurements may be inaccurate if measured at high temperatures, i.e. immediately after the vehicle has been running. Measurements should be made after the engine has cooled down.

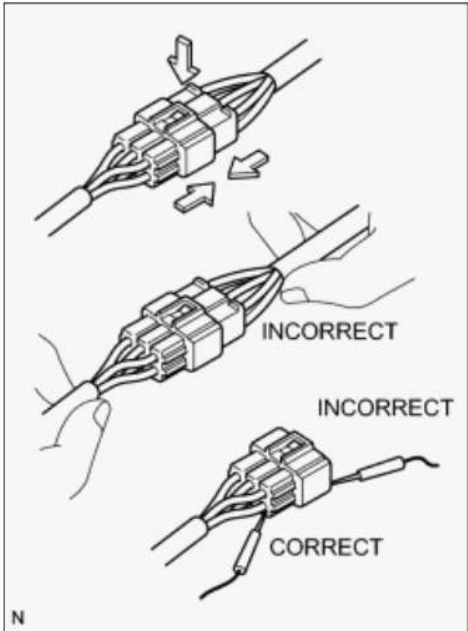


(b) HANDLING CONNECTORS

- (1) When disconnecting a connector, first squeeze the mating halves tightly together to release the lock, and then press the lock claw and separate the connector.
- (2) When disconnecting a connector, do not pull on the harnesses. Grasp the connector directly and separate it.
- (3) Before connecting a connector, check that there are no deformed, damaged, loose or missing terminals.
- (4) When connecting a connector, press firmly until it locks with a "click" sound.
- (5) If checking a connector with a TOYOTA electrical tester, check the connector from the backside (harness side) using a mini test lead.

NOTICE:

- As a waterproof connector cannot be checked from the backside, check it by connecting a sub-harness.
- Do not damage the terminals by moving the inserted tester needle.


(c) CHECKING CONNECTORS

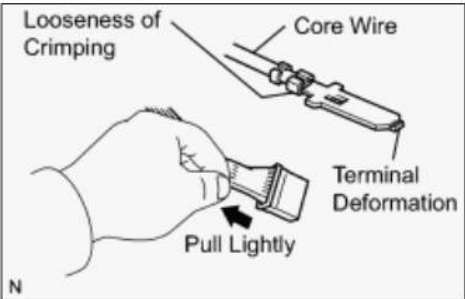

- (1) Checking when a connector is connected:
Squeeze the connector together to confirm that they are fully connected and locked.

(2) Checking when a connector is disconnected:

Pull the wire harness lightly from the backside of the connector. Visually check for the following: 1) unlatched terminals, missing terminals, loose crimps and broken conductor wires; 2) corrosion, metallic matter, foreign matter and water; and 3) bent, rusted, overheated, contaminated and deformed terminals.

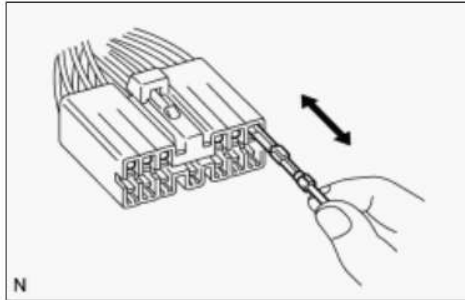

(3) Checking the contact pressure of the terminal:


Prepare a spare male terminal. Insert it into a female terminal, and check for ample tension when inserting and after full engagement.

NOTICE:

When testing a gold-plated female terminal, always use a gold-plated male terminal.


(d) REPAIR METHOD OF CONNECTOR TERMINAL


- (1) If there is any foreign matter on the terminal, clean the contact point using an air gun or cloth. Never rub the contact point using sandpaper as the plating may come off.
- (2) If there is abnormal contact pressure, replace the female terminal. If the male terminal is gold-plated (gold color), use a gold-plated female terminal; if it is silver-plated (silver color), use a silver-plated female terminal.
- (3) Damaged, deformed, or corroded terminals should be replaced. If the terminal does not lock into the housing, the housing may have to be replaced.

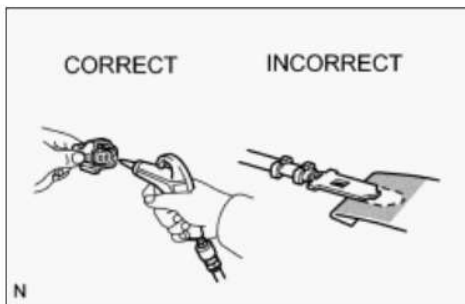


(e) HANDLING OF WIRE HARNESS

- (1) If removing a wire harness, check the wiring and clamping before proceeding so that it can be restored in the same way.
- (2) Never twist, pull or slacken the wire harness more than necessary.
- (3) The wire harness should never come into contact with a high temperature part, or rotating, moving, vibrating or sharp-edged parts. Avoid contact with panel edges, screw tips and other sharp items.
- (4) When installing parts, never pinch the wire harness.
- (5) Never cut or break the cover of the wire harness. If it is cut or broken, repair the cover with vinyl tape or replace the wire harness.

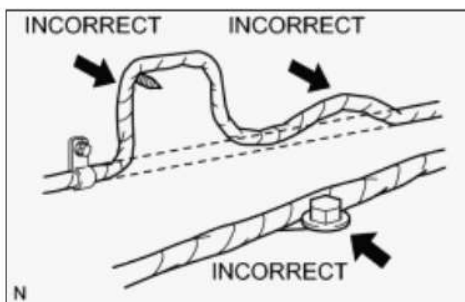**2. CHECK FOR OPEN CIRCUIT**

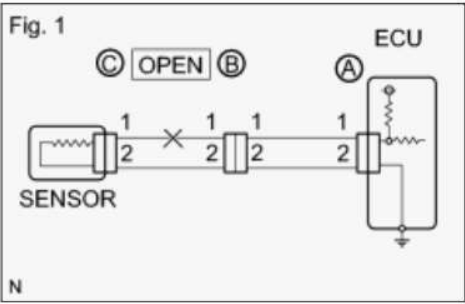

- (a) For an open circuit in the wire harness in Fig. 1, check the resistance or voltage, as described below.
(b) Check the resistance.

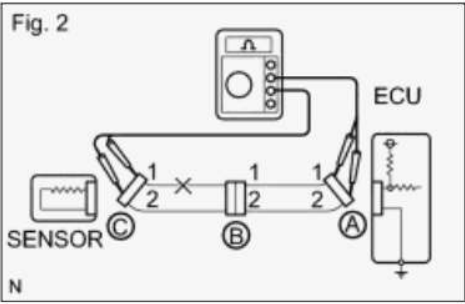

- (1) Disconnect connectors A and C, and measure the resistance between them.
Standard resistance (Fig. 2):

TESTER CONNECTION	SPECIFIED CONDITION
Connector A terminal 1 - Connector C terminal 1	10 kΩ or higher
Connector A terminal 2 - Connector C terminal 2	Below 1 Ω


HINT:

Measure the resistance while lightly shaking the wire harness vertically and horizontally.

If the results match the examples above, an open circuit exists between terminal 1 of connector A and terminal 1 of connector C.

- (2) Disconnect connector B and measure the resistance between the connectors.

Standard resistance (Fig. 3):

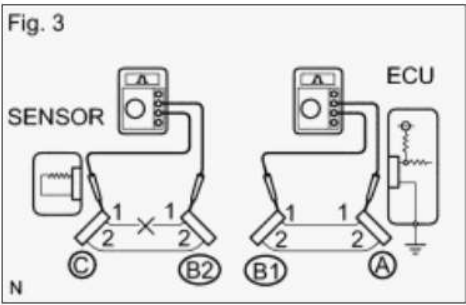

TESTER CONNECTION	SPECIFIED CONDITION
Connector A terminal 1 - Connector B1 terminal 1	Below 1 Ω
Connector B2 terminal 1 - Connector C terminal 1	10 kΩ or higher

If the results match the examples above, an open circuit

exists between terminal 1 of connector B2 and terminal 1 of connector C.

(c) Check the voltage.

(1) In a circuit in which voltage is applied to the ECU connector terminal, an open circuit can be checked by conducting a voltage check.


With each connector still connected, measure the voltage between the body ground and these terminals (in this order): 1) terminal 1 of connector A, 2) terminal 1 of connector B, and 3) terminal 1 of connector C.

Standard voltage (Fig. 4):


TESTER CONNECTION	SPECIFIED CONDITION
Connector A terminal 1 - Body ground	5 V
Connector B terminal 1 - Body ground	5 V
Connector C terminal 1 - Body ground	Below 1 V

If the results match the examples above, an open circuit exists in the wire harness between terminal 1 of connector B and terminal 1 of connector C.

3. CHECK FOR SHORT CIRCUIT

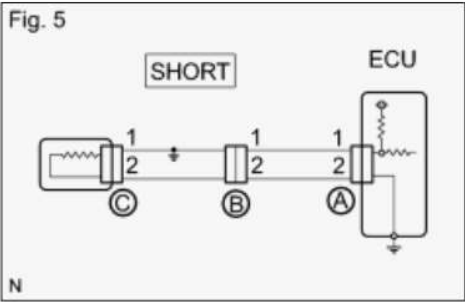

- (a) If the wire harness is ground shorted (Fig. 5), locate the section by conducting a resistance check with the body ground (below).
- (b) Check the resistance with the body ground.

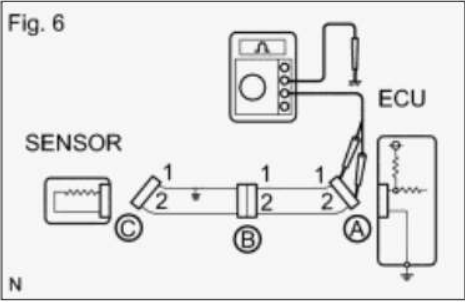

(1) Disconnect connectors A and C, and measure the resistance.

Standard resistance (Fig. 6):

TESTER CONNECTION	SPECIFIED CONDITION
Connector A terminal 1 - Body ground	Below 1 Ω
Connector A terminal 2 - Body ground	10 k Ω or higher


HINT:

Measure the resistance while lightly shaking the wire harness vertically and horizontally.

If the results match the examples above, a short circuit exists between terminal 1 of connector A and terminal 1 of connector C.

(2) Disconnect connector B and measure the resistance.

Standard resistance (Fig. 7):

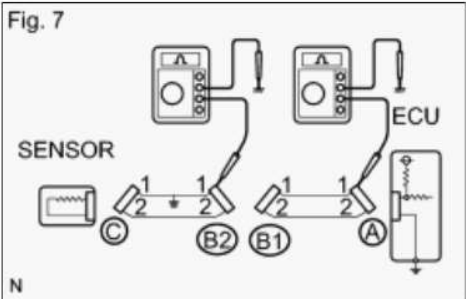

TESTER CONNECTION	SPECIFIED CONDITION
Connector A terminal 1 - Body ground	10 k Ω or higher
Connector B2 terminal 1 - Body ground	Below 1 Ω


If the results match the examples above, a short circuit exists between terminal 1 of connector B2 and terminal 1 of connector C.

4. CHECK AND REPLACE ECU

NOTICE:


- The connector should not be disconnected from the ECU. Perform the inspection from the backside of the connector on the wire harness side.
- When no measuring condition is specified, perform the inspection with the engine stopped and the ignition switch ON.
- Check that the connectors are fully seated. Check for loose, corroded or broken wires.

(a) First, check the ECU ground circuit. If it is faulty, repair it. If it is normal, the ECU could be faulty. Temporarily replace the ECU with a normally functioning one and check if the problem symptoms occur. If the problem symptoms disappear, replace the original ECU.

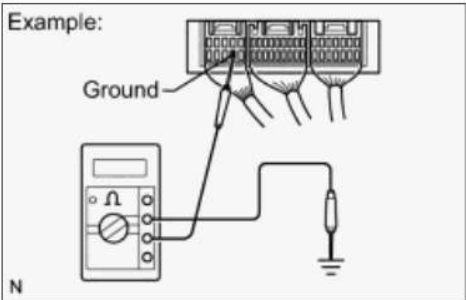


(1) Measure the resistance between the ECU ground terminal and body ground.

Standard resistance:
Below 1 Ω

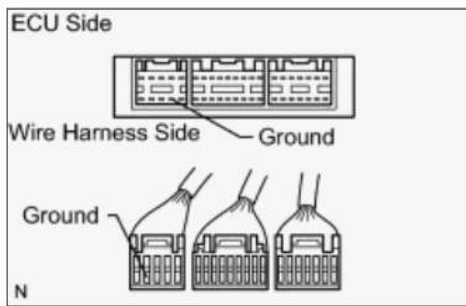

 - (2) Disconnect the ECU connector. Check the ground terminal on the ECU side and wire harness side for bending, corrosion or foreign matter. Lastly, check the contact pressure of the female terminals.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000000UZ208SX
Title: INTRODUCTION: HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS: GENERAL INFORMATION (2011 RAV4)		

GENERAL INFORMATION

A large number of ECU controlled systems are used in the RAV4. In general, ECU controlled systems are considered to be very intricate, requiring a high level of technical knowledge to troubleshoot. However, most problem checking procedures only involve inspecting the ECU controlled system's circuits one by one. An adequate understanding of the system and a basic knowledge of electricity is enough to perform effective troubleshooting, accurate diagnoses and necessary repairs.

1. TROUBLESHOOTING PROCEDURES

- The troubleshooting procedures consist of diagnosis procedures for when a DTC is stored and diagnosis procedures for when no DTC is stored. The basic idea is explained in the following table.


PROCEDURE TYPE	DETAILS	TROUBLESHOOTING METHOD
DTC Based Diagnosis	The diagnosis procedure is based on the DTC that is stored.	The malfunctioning part is identified based on the DTC detection conditions using a process of elimination. The possible trouble areas are eliminated one-by-one by use of the Techstream and inspection of related parts.
Symptom Based Diagnosis (No DTCs stored)	The diagnosis procedure is based on problem symptoms.	The malfunctioning part is identified based on the problem symptoms using a process of elimination. The possible trouble areas are eliminated one-by-one by use of the Techstream and inspection of related parts.

- Vehicle systems are complex and use many ECUs that are difficult to inspect independently. Therefore, a process of elimination is used, where components that can be inspected individually are inspected, and if no problems are found in these components, the related ECU is identified as the problem and replaced.
- It is extremely important to ask the customer about the environment and the conditions present when the problem occurred (Customer Problem Analysis). This makes it possible to simulate the conditions and confirm the symptom. If the symptom cannot be confirmed or the DTC does not recur, the malfunctioning part may not be identified using the troubleshooting procedure, and the ECU for the related system may be replaced even though it is not defective. If this happens, the original problem will not be solved.
- In order to prevent endless expansion of troubleshooting procedures, the troubleshooting procedures are written with the assumption that multiple malfunctions do not occur simultaneously for a single problem symptom.
- To identify the malfunctioning part, troubleshooting procedures narrow down the target by separating components, ECUs and wire harnesses during the inspection. If the wire harness is identified as the cause of the problem, it is necessary to inspect not only the connections to components and ECUs but also all of the wire harness connectors between the component and the ECU.

FOR USING THE TECHSTREAM

Connect the cable of the Techstream to the DLC3, turn the ignition switch ON and attempt to use the Techstream. If the display indicates that a communication error has occurred, there is a problem either with the vehicle or with the Techstream.

 - If communication is normal when the Techstream is connected to another vehicle, inspect the DLC3 of the original vehicle.
- If communication is still not possible when the Techstream is connected to another vehicle, the problem may be in the Techstream itself. Consult the Service Department listed in the Techstream's instruction manual.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001352026X
Title: INTRODUCTION: HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS: HOW TO PROCEED WITH TROUBLESHOOTING (2011 RAV4)		

HOW TO PROCEED WITH TROUBLESHOOTING

1. OPERATION FLOW

HINT:
Perform troubleshooting in accordance with the procedures below. The following is an outline of basic troubleshooting procedures. Confirm the troubleshooting procedures for the circuit you are working on before beginning troubleshooting.

1.	VEHICLE BROUGHT TO WORKSHOP
----	-----------------------------

NEXT
▼

2.	CUSTOMER PROBLEM ANALYSIS
----	---------------------------

(a) Ask the customer about the conditions and environment when the problem occurred.

NEXT
▼

3.	INSPECT BATTERY VOLTAGE
----	-------------------------

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT
▼

4.

SYMPTOM CONFIRMATION AND DTC (AND FREEZE FRAME DATA) CHECK

- (a) Visually check the wire harnesses, connectors and fuses for open and short circuits.
- (b) Warm up the engine to the normal operating temperature.
- (c) Confirm the problem symptoms and conditions, and check for DTCs.

Result:

RESULT	PROCEED TO
DTC is output	A
DTC is not output	B

B  Go to step 6

A


5.

DTC CHART

- (a) Check the results obtained in the DTC check. Then find the output DTC in the DTC chart. Look at the "Trouble Area" column for a list of potentially malfunctioning circuits and / or parts.

NEXT  Go to step 7

6.

PROBLEM SYMPTOMS TABLE

- (a) Check the results obtained in the symptom confirmation. Then find the problem symptoms in the problem symptoms table. Look at the "Suspected Area" column for a list of potentially malfunctioning circuits and / or parts.

NEXT


7.

CIRCUIT INSPECTION OR PARTS INSPECTION

(a) Confirm the malfunctioning circuit or part.

NEXT



8.

ADJUST, REPAIR OR REPLACE

(a) Adjust, repair or replace the malfunctioning circuit or parts.

NEXT



9.

CONFIRMATION TEST

(a) After the adjustment, repairs or replacement, confirm that the malfunction no longer exists. If the malfunction does not reoccur, perform a confirmation test under the same conditions and in the same environment as when the malfunction occurred the first time.

NEXTEND

2. CUSTOMER PROBLEM ANALYSIS

HINT:

- In troubleshooting, confirm that the problem symptoms have been accurately identified. Preconceptions should be discarded in order to make an accurate judgment. To clearly understand what the problem symptoms are, it is extremely important to ask the customer about the problem and the conditions at the time the malfunction occurred.
- Gather as much information as possible for reference. Past problems that seem unrelated may also help in some cases.
- The following 5 items are important points in the problem analysis:

What	Vehicle model, system name
When	Date, time, occurrence frequency

Where	Road conditions
Under what conditions?	Running conditions, driving conditions, weather conditions
How did it happen?	Problem symptoms

3. SYMPTOM CONFIRMATION AND DIAGNOSTIC TROUBLE CODE

HINT:

The diagnostic system in the RAV4 has various functions.

- The first function is the Diagnostic Trouble Code (DTC) check. A DTC is a code stored in the ECU memory whenever a malfunction in the signal circuits to the ECU occurs. In a DTC check, a previous malfunction's DTC can be checked by a technician during troubleshooting.
- Another function is the Input Signal Check, which checks if the signals from various switches are sent to the ECU correctly.

By using these functions, the problem areas can be narrowed down and troubleshooting is more effective. Diagnostic functions are incorporated in the following system in the RAV4.

SYSTEM	SYMPTOM CONFIRMATION AND DIAGNOSTIC TROUBLE CODE				
	DTC CHECK (NORMAL MODE)	DTC CHECK (CHECK MODE)	SENSOR CHECK / TEST MODE (INPUT SIGNAL CHECK)	DATA LIST	ACTIVE TEST
2AR-FE SFI System	○	○	-	○	○
2GR-FE SFI System	○	○	-	○	○
U140F Automatic Transaxle System	○	○	-	○	○
U151E Automatic Transaxle System	○	○	-	○	○
U151F Automatic Transaxle System	○	○	-	○	○
U241E Automatic Transaxle System	○	○	-	○	○
GF1A Active Torque Control 4WD System	○	-	-	○	-
Tire Pressure Warning System	○	-	○	○	-
Vehicle Stability Control System	○	-	○	○	○
Electronic Power Steering System	○	-	-	○	○
Air Conditioning (for Automatic Air Conditioning System)	○	-	-	○	○

SYSTEM	SYMPTOM CONFIRMATION AND DIAGNOSTIC TROUBLE CODE				
	DTC CHECK (NORMAL MODE)	DTC CHECK (CHECK MODE)	SENSOR CHECK / TEST MODE (INPUT SIGNAL CHECK)	DATA LIST	ACTIVE TEST
Air Conditioning (for Manual Air Conditioning System)	○	-	-	○	○
Airbag System	○	○	-	○	-
Occupant Classification System	○	-	-	○	-
Seat Belt Warning System	-	-	-	-	○
Engine Immobiliser System	○	-	-	○	○
Cruise Control System	○	-	-	○	-
Lighting System	-	-	-	○	○
Wiper and Washer System	-	-	-	-	-
Power Door Lock Control System	-	-	-	○	○
Wireless Door Lock Control System	○	-	-	○	○
Smart Key System	-	-	-	○	○
Key Reminder Warning System	-	-	-	○	-
Meter / Gauge System	○	-	-	○	○
Audio and Visual System	○	-	-	-	-
Rear Seat Entertainment System	-	-	-	-	-
Horn System	-	-	-	-	-
Power Window Control System	○	-	-	○	○
Power Mirror Control System	-	-	-	-	-
Front Power Seat Control System	-	-	-	-	-
Seat Heater System	-	-	-	-	-
Sliding Roof System	○	-	-	○	○
CAN Communication System	-	-	-	-	-

- In the DTC check, it is very important to determine whether the problem indicated by the DTC is either: 1) still occurring, or 2) occurred in the past but has since returned to normal. In addition, the DTC should be compared to the problem symptom to see if they are related. For this reason, DTCs should be checked before and after confirmation of symptoms (i.e., whether or not problem symptoms exist) to determine current system conditions, as shown in the flowchart below.
- Never skip the DTC check. Failing to check DTCs may, depending on the case, result in unnecessary troubleshooting for systems operating normally or lead to repairs not related to the problem. Follow the

procedures listed in the flowchart in the correct order.

- The following flowchart shows how to proceed with troubleshooting using the DTC check. Directions from the flowchart will indicate how to proceed either to DTC troubleshooting or to the troubleshooting of each problem symptom.

1.

DTC CHECK

NEXT

▼

2.

MAKE A NOTE OF DTCS DISPLAYED AND THEN CLEAR MEMORY

NEXT

▼

3.

SYMPTOM CONFIRMATION

Result:

RESULT	PROCEED TO
No symptoms exist	A
Symptoms exist	B

B ▶ Go to step 5

A

▼

4.

SIMULATION TEST USING SYMPTOM SIMULATION METHODS

NEXT
▼

5.	DTC CHECK
-----------	------------------

Result:

RESULT	PROCEED TO
DTC is not output	A
DTC is output	B

B ▶ TROUBLESHOOTING OF PROBLEM INDICATED BY DTC

A
▼

6.	SYMPTOM CONFIRMATION
-----------	-----------------------------

Result:

RESULT	PROCEED TO
Symptoms exist	A
No symptoms exist	B

If a DTC was displayed in the initial DTC check, the problem may have occurred in a wire harness or connector in that circuit in the past. Check the wire harness and connectors.

B ▶ SYSTEM NORMAL

A ▶ TROUBLESHOOTING OF EACH PROBLEM SYMPTOM

The problem is still occurring in a place other than the diagnostic circuit (the DTC displayed first is either for a past problem or a secondary problem).

4. SYMPTOM SIMULATION

HINT:

The most difficult case in troubleshooting is when no problem symptoms occur. In such a case, a thorough problem analysis must be carried out. A simulation of the same or similar conditions and environment in which the problem occurred in the customer's vehicle should be carried out. No matter how much skill or experience a technician has, troubleshooting without confirming the problem symptoms will lead to important repairs being overlooked and mistakes or delays.


For example:

With a problem that only occurs when the engine is cold or as a result of vibration caused by the road during driving, the problem can never be determined if the symptoms are being checked on a stationary vehicle or on a vehicle with a warmed-up engine. Vibration, heat or water penetration (moisture) is difficult to reproduce. The symptom simulation tests below are effective substitutes for the conditions and can be applied on a stationary vehicle.

Important points in the symptom simulation test:

In the symptom simulation test, the problem symptoms as well as the problem area or parts must be confirmed. First, narrow down the possible problem circuits according to the symptoms. Then, connect the tester and carry out the symptom simulation test, judging whether the circuit being tested is defective or normal. Also, confirm the problem symptoms at the same time. Refer to the problem symptoms table for each system to narrow down the possible causes.

To reproduce DTCs, it is necessary to satisfy the respective DTC detection conditions.

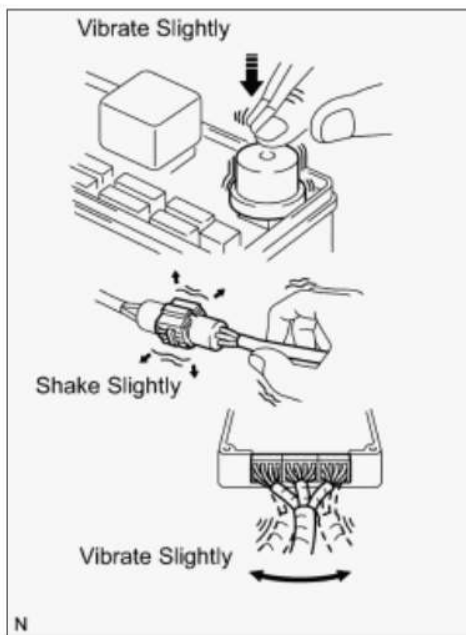

(a) VIBRATION METHOD:

When a malfunction seems to occur as a result of vibration.

(1) PART AND SENSOR

Apply slight vibration with a finger to the part of the sensor suspected to be the cause of the problem, and check whether or not the malfunction occurs.

NOTICE:

Applying strong vibration to relays may open them.

(2) CONNECTORS

Slightly shake the connector vertically and horizontally.

(3) WIRE HARNESS

Slightly shake the wire harness vertically and horizontally.

HINT:

The connector joint and fulcrum of the vibration are the major areas that should be checked thoroughly.

(b) HEAT METHOD:

When a malfunction seems to occur when the area in question is heated.

- (1) Heat the component that is the possible cause of the malfunction with a hair dryer or similar device. Check if the malfunction occurs.

NOTICE:

- Do not heat to more than 60°C (140°F). Exceeding this temperature may damage components.
- Do not apply heat directly to the parts in the ECU.

(c) WATER SPRINKLING METHOD:

When a malfunction seems to occur on a rainy day or in high-humidity.

- (1) Sprinkle water onto the vehicle and check if the malfunction occurs.




NOTICE:

- Never sprinkle water directly into the engine compartment. Indirectly change the temperature and humidity by spraying water onto the front of the radiator.
- Never apply water directly onto the electronic components.

HINT:

If the vehicle has or had a water leakage problem, the leakage may have damaged the ECU or connections. Look for evidence of corrosion or short circuits. Proceed with caution during water tests.

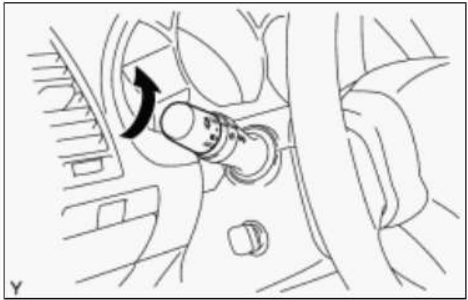

(d) HIGH ELECTRICAL LOAD METHOD:

When a malfunction seems to occur when the electrical load is excessive.

- (1) Turn on the heater blower, headlight, rear window defogger and all other electrical loads. Check if the malfunction reoccurs.

5. DIAGNOSTIC TROUBLE CODE CHART

Look for output Diagnostic Trouble Codes (DTCs) (from the DTC checks) in the appropriate section's Diagnostic Trouble Code Chart. Use the chart to determine the trouble area and the proper inspection procedure. A description of each of the chart's columns are below.

ITEM	DESCRIPTION
DTC No.	Indicates the diagnostic trouble code
Detection Item	Indicates the system or details of the problem
Trouble Area	Indicates the suspected areas of the problem
See Page	Indicates where the inspection procedures for each circuit are to be found, or gives instruction for checking and repairs

6. PROBLEM SYMPTOMS TABLE

When a "Normal" code is output during a DTC check but the problem is still occurring, use the Problem Symptoms Table. The suspected areas (circuits or parts) for each problem symptom are in the table. The suspected areas are listed in order of probability. A description of each of the chart's columns is below.

HINT:


In some cases, the problem is not detected by the diagnostic system even though a problem symptom is present. It is possible that the problem is occurring outside the detection range of the diagnostic system, or that the problem is occurring in a completely different system.

ITEM	DESCRIPTION
Symptom	-
Suspected Area	Indicates the circuit or part which needs to be checked.
See Page	Indicates where the flowchart for each circuit is located.

7. CIRCUIT INSPECTION

A description of the main areas of each circuit inspection is below.

ITEM	DESCRIPTION
Description	The major role, operation of the circuit and its component parts are explained.
DTC No., DTC Detection Condition, Trouble Area	Indicates the diagnostic trouble codes, diagnostic trouble code detection conditions, and trouble areas of a problem.
Wiring Diagram	This shows a wiring diagram of the circuit. Use this diagram together with ELECTRICAL WIRING DIAGRAM to thoroughly understand the circuit.
Inspection Procedures	Use the inspection procedures to determine if the circuit is normal or abnormal. If abnormal, use the inspection procedures to determine whether the problem is located in the sensors, actuators, wire harnesses or ECU.
Inspection Procedure Connector Illustrations	- Connector being checked is connected: Connections of tester are indicated by (+) or (-) after the terminal name. - Connector being checked is disconnected: For illustrations of inspections between a connector and body ground, information about the body ground is not shown in the illustration.

 

Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000000UYV08FX
Title: INTRODUCTION: HOW TO USE THIS MANUAL: GENERAL INFORMATION (2011 RAV4)		

GENERAL INFORMATION

1. GENERAL DESCRIPTION

- (a) This manual is written in accordance with SAE J2008.
 - (1) Diagnosis
 - (2) Removing / Installing, Replacing, Disassembling / Reassembling, Checking and Adjusting
 - (3) Final Inspection
- (b) The following procedures are omitted from this manual. However, these procedures must be performed.
 - (1) Use a jack or lift to perform operations.
 - (2) Clean all removed parts.
 - (3) Perform a visual check.

2. INDEX


- (a) An alphabetical INDEX section is provided at the end of the manual as a reference to help you find the item to be repaired.

3. PREPARATION

- (a) Use of Special Service Tools (SST) and Special Service Materials (SSM) may be required, depending on the repair procedure. Be sure to use SST and SSM when they are required and follow the working procedures properly. A list of SST and SSM is in the "Preparation" section of this manual.

4. REPAIR PROCEDURES

- (a) A component illustration is placed under the title where necessary.
 - (b) Non-reusable parts, grease application areas, precoated parts and torque specifications are noted in the component illustrations.
- The following illustration is an example.

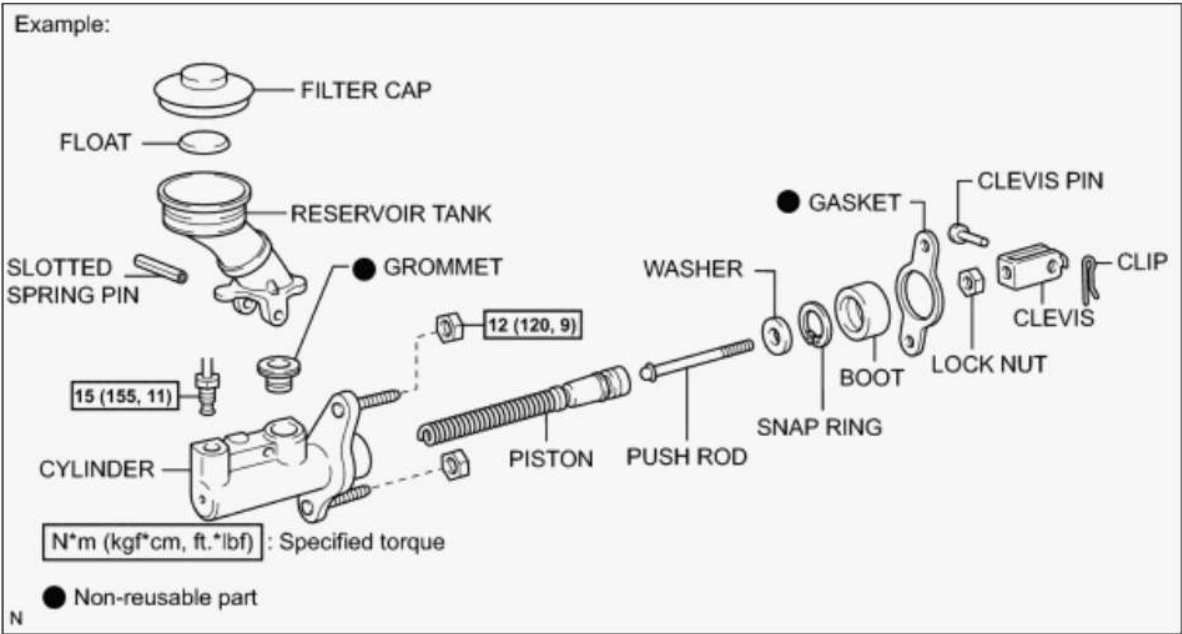

(c) Torque specifications, grease application areas and non-reusable parts are emphasized in the procedures.

HINT:

There are cases where such information can only be explained by using an illustration. In these cases, torque, oil and other information are described in the illustration.

(d) Only items with key points are described in the text. What to do and other details are explained using illustrations next to the text. Both the text and illustrations are accompanied by standard values and notices.

Illustration	What to do and where to do it
Task heading	What work will be performed
Explanation text	• How to perform the task • Information such as specifications and warnings, which are written in boldface text

(e) Illustrations of similar vehicle models are sometimes used. In these cases, minor details may be different from the actual vehicle.

(f) Procedures are presented in a step-by-step format.

5. SERVICE SPECIFICATIONS

(a) SPECIFICATIONS are presented in boldface text throughout the manual. The specifications are also found in the "Service Specifications" section for reference.

6. TERM DEFINITIONS


CAUTION	Possibility of injury to you or other people.
NOTICE	Possibility of damage to components being repaired.
HINT	Provides additional information to help you perform repairs.

7. INTERNATIONAL SYSTEM OF UNITS

(a) The units used in this manual comply with the International System of Units (SI) standard. Units from the metric system and English system are also provided.

- Example:

 Torque: 30 N·m (310 kgf·cm, 22ft·lbf)



Last Modified: 9-7-2011	6.4 D	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000001ZVL00KX
Title: INTRODUCTION: REPAIR INSTRUCTION: CUSTOMIZE PARAMETERS (2011 RAV4)		

CUSTOMIZE PARAMETERS

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

1. AIR CONDITIONING SYSTEM

Air conditioning system

DISPLAY	DEFAULT	CONTENTS	SETTING
Set Temperature Shift	Normal	To control with shifted temperature against display temperature	+2 C / +1 C / Normal/ -1 C / -2 C
Evaporator Control	Automatic	Function to set evaporator control to AUTOMATIC position (AUTO) to save power, or to coldest position (MANUAL) to dehumidify air and to prevent windows from fogging up	Manual / Automatic
Compressor / Air Inlet DEF Operation	Link	Function to turn A/C ON automatically linked with FRONT DEF button when A/C is OFF	Normal / Link
Compressor Mode	Automatic	Function to turn the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF	Automatic / Manual
Air Inlet Mode	Automatic	In case of turning A/C ON when you desire to make compartment cool down quickly, this is function to change mode automatically to RECIRCULATION mode	Manual / Automatic
Foot / DEF Auto Mode	ON	Function to turn the air flow from Foot / DEF ON automatically when AUTO MODE is ON	ON / OFF
Foot / DEF Automatic Blow up Function	ON	Function to change blower level automatically when defroster is ON	ON / OFF
Air Purifier Auto Cancel	ON	-	ON / OFF

2. LIGHTING SYSTEM

Illuminated Entry

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
Lighting Time	15s	Changes illumination duration after door closure. (It will quickly fade out in case of turning ignition switch ON.)	7.5s / 15s / 30s

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
I/L when ACC OFF	ON	Illuminates light when ignition switch is turned from ACC to OFF. (Room light illuminated when interior light switch in DOOR position)	ON / OFF
I/L ON W/Door Key Unlock	ON	Function to light up room light when unlocking with door key cylinder. (Room light illuminated when interior light switch in DOOR position)	ON / OFF
Illumination System	ON	Function to light up foot light when one of the following occurs: Ignition switch is turned ON, door unlocked or door open.	ON / OFF
Light Control	ON	Function to light up foot light when ignition switch is ON and shift position is not P.	ON / OFF

Light control (USA)

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
DRL Function	ON	Daytime running light function ON or OFF.	ON/OFF

HINT:

Sensitivity adjustments are difficult to confirm. Check by driving the customer's vehicle.

3. POWER DOOR LOCK CONTROL SYSTEM

Power door lock control system:

TESTER DISPLAY	DEFAULT	FUNCTION	SETTING
Unlock Key Twice	ON	Unlocks only driver side door when driver side door key cylinder turned to unlock once, and unlocks all doors when turned to unlock twice. For OFF setting, turning it once unlocks all doors.	ON/OFF

4. WIRELESS DOOR LOCK CONTROL SYSTEM

Wireless Door Lock Control System:

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
Hazard Answer Back	ON	When LOCK switch on transmitter pressed, all hazard warning lights illuminate once. When UNLOCK switch pressed, all hazard warning lights illuminate twice	ON / OFF
Wireless Buzzer Resp	ON	Function that makes wireless buzzer sound for answer-back when transmitter LOCK / UNLOCK switch pressed	ON / OFF
Open Door Warning	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function sounds a buzzer for 10 seconds	ON / OFF

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
Wireless Control	ON	ON / OFF of wireless door lock function	ON / OFF
Panic Alarm Function	ON	Operates security alarm when PANIC switch on transmitter continuously pressed for 1 second	ON / OFF
Unlock 2 Operation	ON	Function that unlocks driver side door when unlock switch on transmitter is pressed once, and unlocks all doors when pressed twice. If setting is OFF, pressing unlock switch once makes all doors unlock.	ON / OFF
Auto Lock Time	60s	Function to change the time until relocking after unlocking with the wireless door lock function.	30s / 60s / 120s
Wireless Auto Lock	ON	Function to control the automatic relocking of doors after unlocking with the wireless door lock function.	ON / OFF

5. SMART KEY SYSTEM

Smart Key / Access

DISPLAY	DEFAULT	CONTENTS	SETTING
Park Wait Time*1	2.5s	Function that sets the waiting time to permit unlocking the door after the door is locked with the entry lock function.	0.5s/1.5s /2.5s/5s
Ignition Available Area*2	ALL	Function to choose the available area for the key to start the engine and cancel the steering lock.	FRONT/ALL*3

Warning

DISPLAY	DEFAULT	CONTENTS	SETTING
Key Low Battery Warning*4	ON	Function that warns the driver that the key battery power is low.	ON/OFF

HINT:

*1: Waiting time to permit unlocking door after locking.

*2: Entry ignition available area.

*3: "FRONT" means front, and "ALL" means front and rear.


*4: Warn when key battery becomes weak.

6. METER / GAUGE SYSTEM

Combination Meter

TESTER DISPLAY	DEFAULT	FUNCTION	SETTING
Seat-belt Warning Buzzer	D/P ON	Seat belt warning buzzer ON / OFF setting	D/P ON: Driver and passenger buzzer ON

TESTER DISPLAY	DEFAULT	FUNCTION	SETTING
			D ON: Driver buzzer ON P ON: Passenger buzzer ON D/P OFF: Driver and passenger buzzer OFF

 


cardiagn.com

Last Modified: 9-7-2011	6.4 L	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000018UO01LX
Title: INTRODUCTION: REPAIR INSTRUCTION: PRECAUTION (2011 RAV4)		

PRECAUTION

1. BASIC REPAIR HINT

(a) HINTS ON OPERATIONS

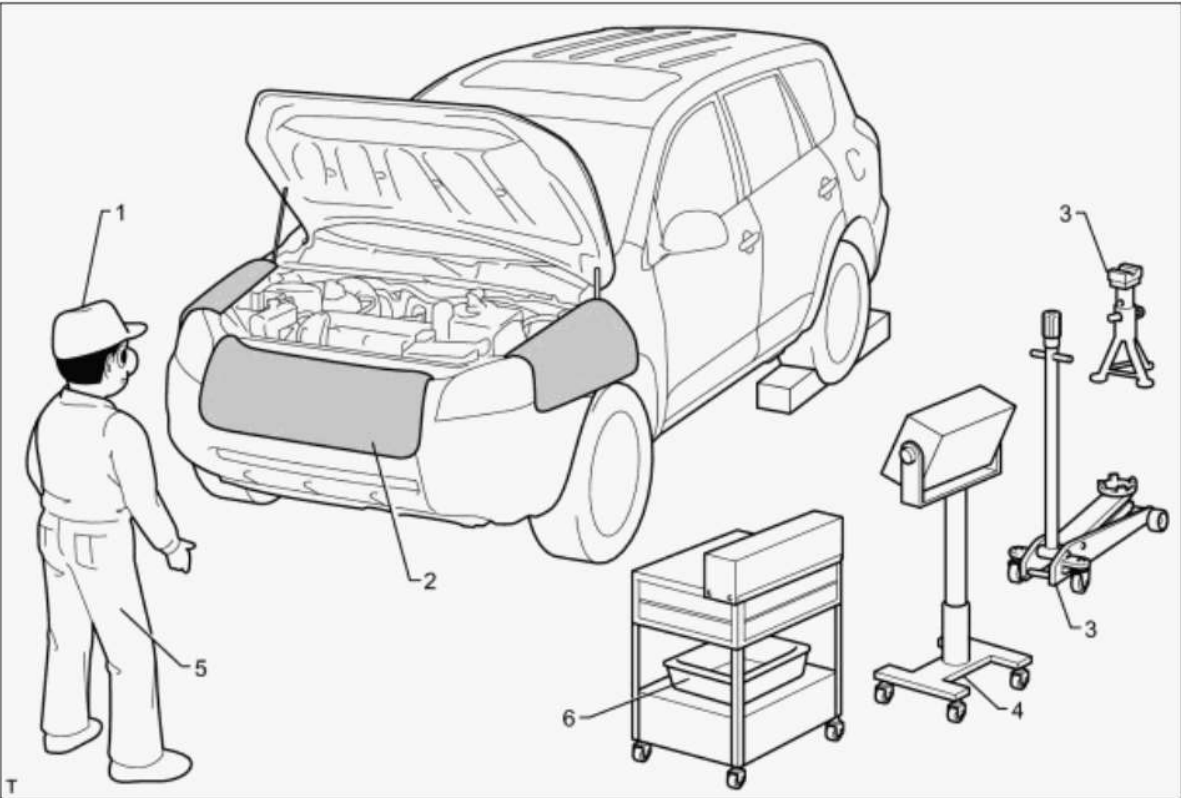

1	Attire	• Always wear a clean uniform. • A hat and safety shoes must be worn.
2	Vehicle protection	Prepare a grille cover, fender cover, seat cover and floor mat before starting the operation.
3	Safe operation	• Use wheel chocks to secure the vehicle. • When working with the engine running, make sure to provide ventilation for exhaust fumes in the workshop. • When removing or installing heavy parts, such as the engine, transmission, differential, etc., before starting work make sure there are no problems with the equipment that will be used. • When working with 2 or more persons, be sure to check safety for one another. • If working on high temperature, high pressure, rotating, moving, or

		vibrating parts, wear appropriate safety equipment and take extra care not to injure yourself or others.
4	Preparation of tools and measuring gauge	Before starting the operation, prepare a tool stand, SST, gauge, oil and parts for replacement.
5	Removal and installation, disassembly and assembly operations	• Diagnose with a thorough understanding of proper procedures and of the reported problem. • Before removing parts, check the general condition of the assembly and for deformation and damage. • When the assembly is complicated, take notes. For example, note the total number of electrical connections, bolts, or hoses removed. Add matchmarks to ensure reassembly of components to their original positions. Temporarily mark hoses and their fittings if needed. • Clean and wash the removed parts if necessary and assemble them after a thorough check.
6	Removed parts	• Place removed parts in a separate box to avoid mixing them up with new parts or contaminating new parts. • For non-reusable parts such as gaskets, O-rings, and self-locking nuts, replace them with new ones as instructed in this manual. • Retain the removed parts for customer inspection, if requested.
6	Removed parts	• Place removed parts in a separate box to avoid mixing them up with new parts or contaminating new parts. • For non-reusable parts such as gaskets, O-rings, and self-locking nuts, replace them with new ones as instructed in this manual. • Retain the removed parts for customer inspection, if requested.
7*	Checks to perform after work is finished	• Make sure that removed and installed parts (oil filler cap, level dipstick, floor mat, etc.) are properly installed/tightened. • Make sure that none of the cloths or tools that were used have been left in the engine compartment or within the vehicle. • Check that there are no oil leaks.


CAUTION:

***:Be sure to perform these checks properly, not performing these checks properly after finishing work can lead to serious accident or injury.**

(b) JACKING UP AND SUPPORTING VEHICLE

- (1) Care must be taken when jacking up and supporting the vehicle. Be sure to lift and support the vehicle at the proper locations.

(c) PRECOATED PARTS

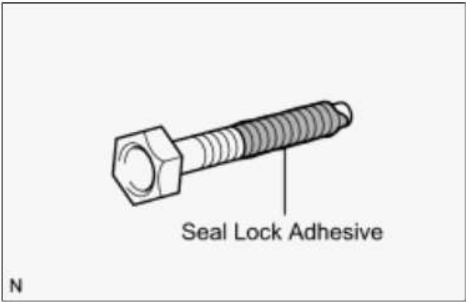

- (1) Precoated parts are bolts and nuts that are coated with a seal lock adhesive at the factory.
- (2) If a precoated part is retightened, loosened or moved in any way, it must be recoated with the specified adhesive.
- (3) When reusing a precoated part, clean off the old adhesive and dry the part with compressed air. Then apply new seal lock adhesive appropriate to that part.
- (4) Some seal lock agents harden slowly. You may have to wait for the seal lock adhesive to harden.


(d) GASKETS

- (1) When necessary, use a sealer on gaskets to prevent leaks.

(e) BOLTS, NUTS AND SCREWS







- (1) Carefully follow all the specifications for tightening torques. Always use a torque wrench.

(f) FUSES

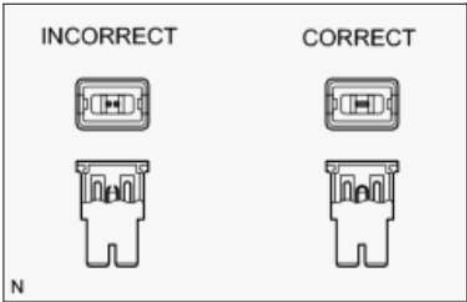

- (1) When inspecting a fuse, check that the wire of the fuse is not broken.
- (2) If the wire of a fuse is broken, confirm that there are no shorts in its circuit.
- (3) When a fuse is replaced, a fuse with the same amperage rating must be used.

ILLUSTRATION	SYMBOL	PART NAME	ABBREVIATION
A technical drawing of a standard automotive fuse. The letter 'N' is in the bottom left corner.	A schematic symbol for a standard fuse, consisting of a horizontal line with a wavy break in the middle. The letter 'N' is in the bottom left corner.	FUSE	FUSE
A technical drawing of a medium current fuse, which is larger and has a different shape than the standard fuse. The letter 'N' is in the bottom left corner.	A schematic symbol for a medium current fuse, consisting of a horizontal line with a wavy break in the middle. The letter 'N' is in the bottom left corner.	MEDIUM CURRENT FUSE	M-FUSE

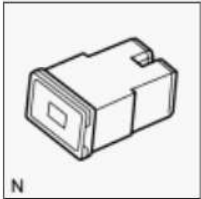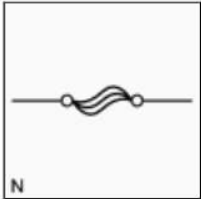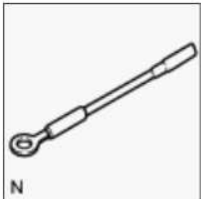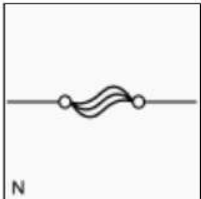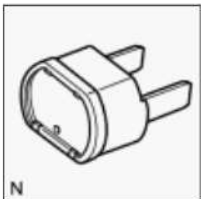
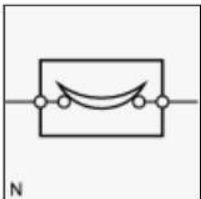
ILLUSTRATION	SYMBOL	PART NAME	ABBREVIATION
 N	 N	HIGH CURRENT FUSE	H-FUSE
 N	 N	FUSIBLE LINK	FL
 N	 N	CIRCUIT BREAKER	CB









(g) CLIPS



(1) The removal and installation methods of typical clips used for vehicle body parts are shown in the table below.

HINT:

If clips are damaged during a procedure, always replace the clips with new clips.

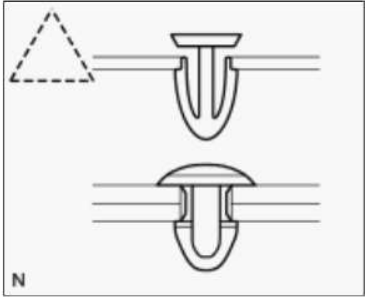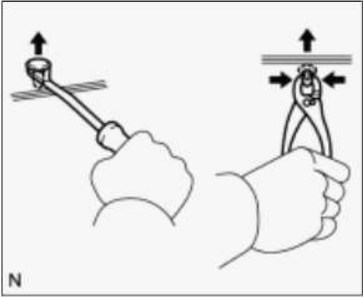SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
 N	 N	1. Remove clips with a clip remover or pliers.
		1. Remove clips with a clip remover or screwdriver.

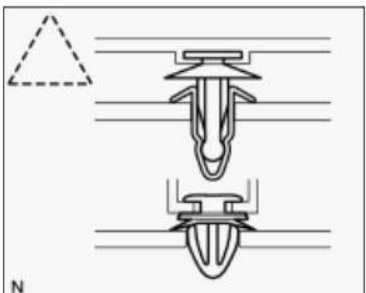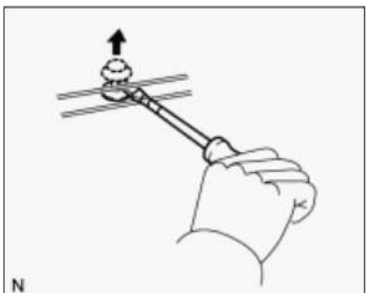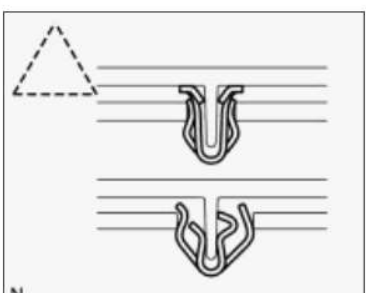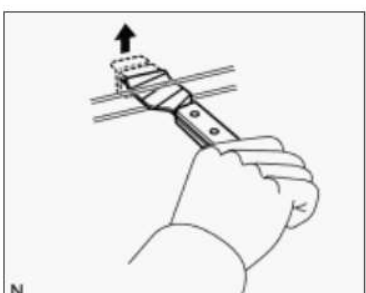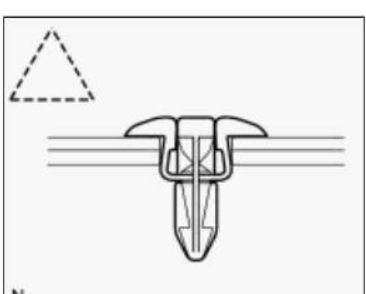
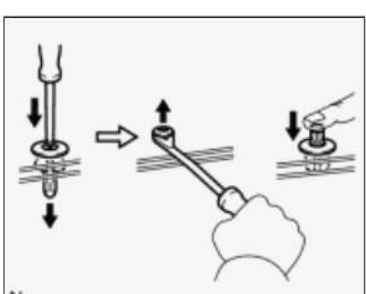
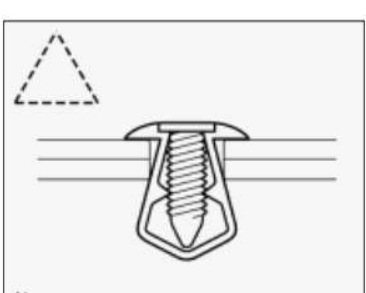
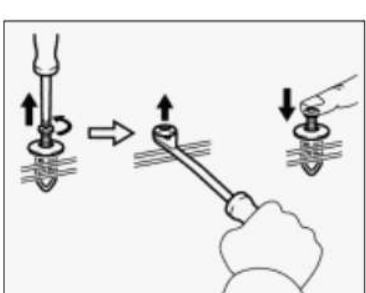
SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
 N	 N	
 N	 N	1. Remove clips with a wide scraper to prevent panel damage.
 N	 N	1. Remove clips by pushing the center pin through and prying out the shell.
 N	 N	1. Remove clips by unscrewing the center pin and prying out the shell.
		1. Remove the clip by prying out the pin and then prying out the shell.

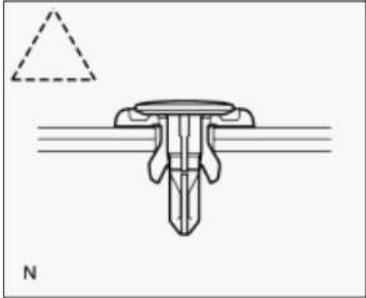
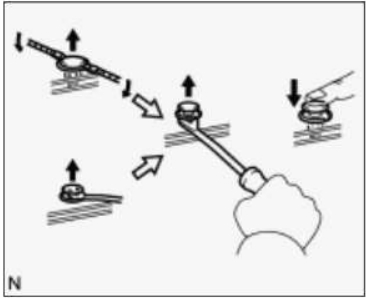
SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
		

(h) CLAWS

(1) The removal and installation methods of typical claws used for vehicle body parts are shown in the table below.

HINT:
If claws of caps or covers are damaged during a procedure, always replace the caps or covers with new ones.

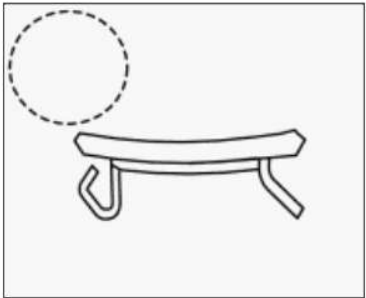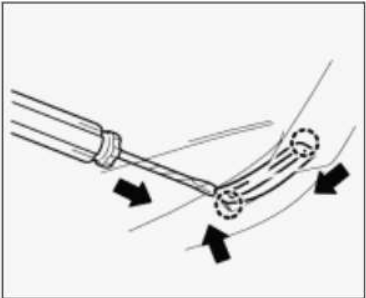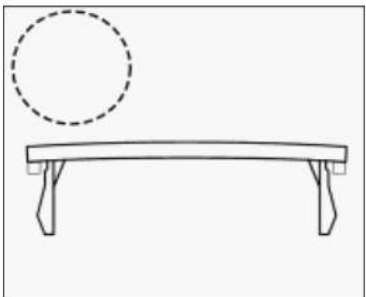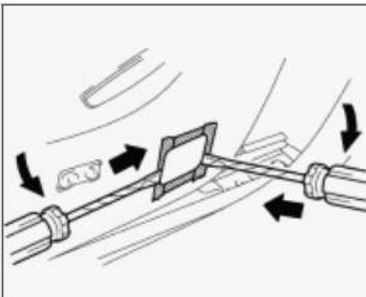SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
		1. Using a screwdriver, detach the claws and remove the caps or cover.
		1. Using a screwdriver, detach the claws and remove the caps or cover.
		1. Using a screwdriver, detach the claws and remove the caps or cover.



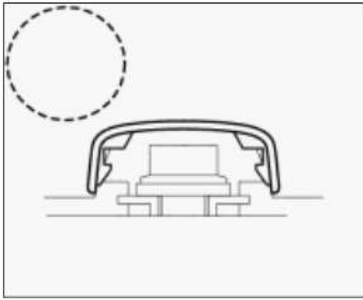
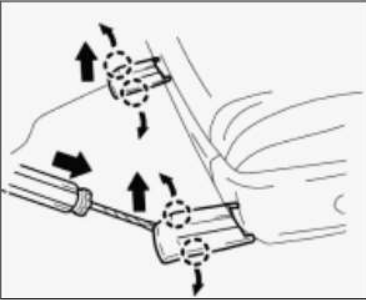
SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
		





- (i) HINGE, GUIDE, CLAMP, PIN ETC.
- (1) The removal and installation methods of typical hinges, guides, clamps and pins used for vehicle body parts are shown in the table below.

HINT:


If clamps are damaged during a procedure, always replace the cap or cover that has damaged clamps with a new one.

cardiagn.com

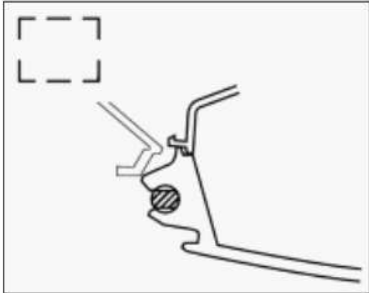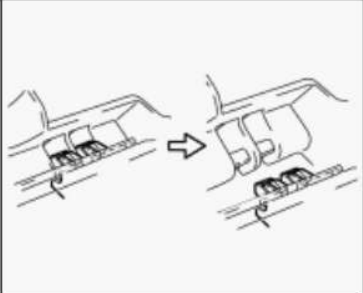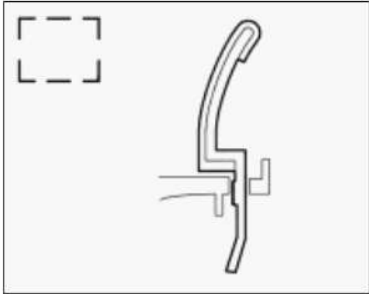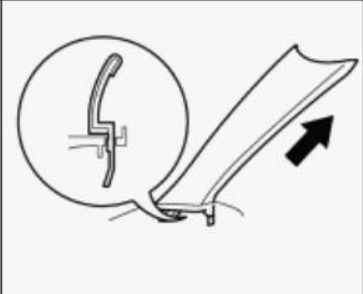
SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
		Disengage the pins by pulling.
		Disengage the pins by pulling.
		Remove the clamps with pliers.

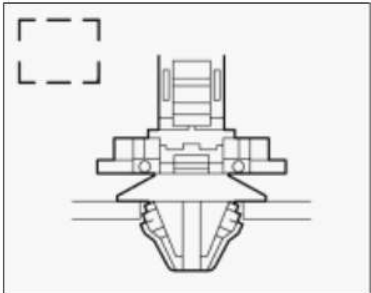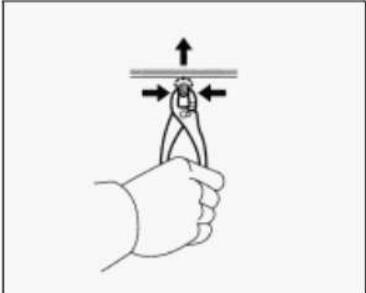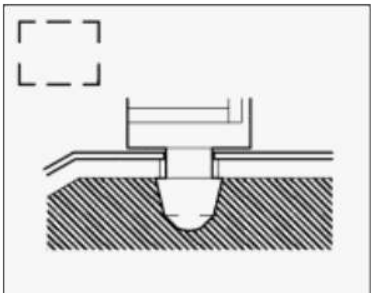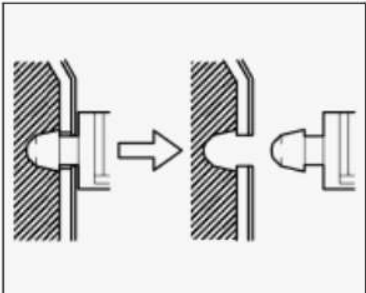SHAPE (EXAMPLE)	ILLUSTRATION	PROCEDURES
		
		Disengage the pins by pulling.

(j) REMOVAL AND INSTALLATION OF VACUUM HOSES

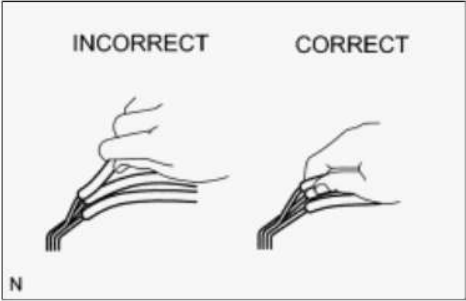


(1) To disconnect a vacuum hose, pull and twist from the end of the hose. Do not pull from the middle of the hose as this may cause damage.

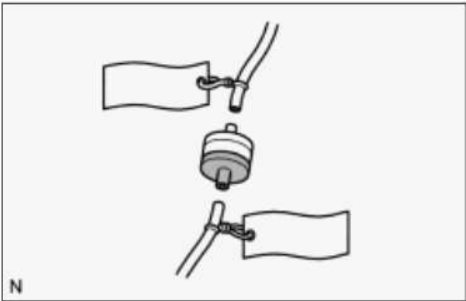

(2) When disconnecting vacuum hoses, use tags to identify where they should be reconnected.


- (3) After completing any hose related repairs, double-check that the vacuum hoses are properly connected. The label under the hood shows the proper layout.
- (4) When using a vacuum gauge, never force the hose onto a connector that is too large. If a hose has been stretched, it may leak air. Use a step-down adapter if necessary.

(k) TORQUE WHEN USING TORQUE WRENCH WITH EXTENSION TOOL

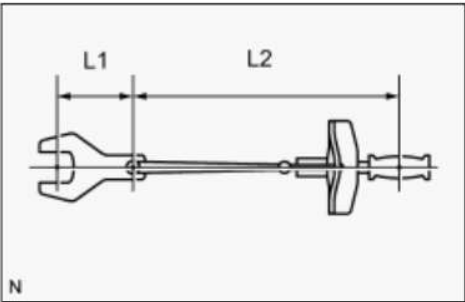

(1) Use the formula below to calculate special torque values for situations where SST or an extension tool is combined with a torque wrench.

Formula:
 $T' = L2 / (L1 + L2) * T$

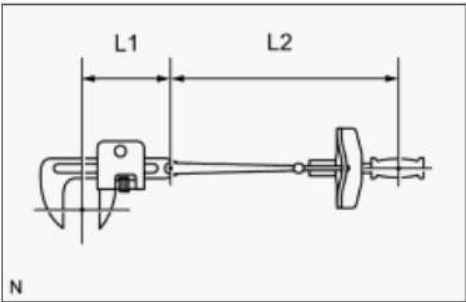

T'	Reading of torque wrench {N*m (kgf*cm, ft.*lbf)}
T	Torque {N*m (kgf*cm, ft.*lbf)}
L1	Length of SST or extension tool {cm (in.)}
L2	Length of torque wrench {cm (in.)}

NOTICE:
If an extension tool or SST is combined with a torque wrench and the wrench is used to tighten to a torque specification in this manual, the actual torque will be excessive and parts will be damaged.

2. FOR VEHICLES WITH SUPPLEMENTAL RESTRAINT SYSTEM

The RAV4 is equipped with a Supplemental Restraint System (SRS). The SRS of this vehicle consists of the following:

- 1. Steering pad
- 2. Front passenger airbag assembly
- 3. Front seat side airbag assembly
- 4. Front seat outer belt assembly with pretensioner
- 5. Curtain shield
- 6. Center airbag sensor
- 7. Front airbag sensor
- 8. Side airbag sensor
- 9. Rear airbag sensor
- 10. Occupant Classification ECU

CAUTION:

- Failure to carry out service procedures in the correct sequence could cause SRS parts to unexpectedly deploy and possibly lead to serious injuries. Furthermore, if a mistake is made when servicing SRS parts, they may fail to operate when required. Before performing servicing (including installation/removal, inspection and replacement of parts), be sure to read the following precautions.

- Before starting work, wait at least 90 seconds after the ignition switch is turned OFF and after the cable of the negative (-) battery terminal is disconnected. (SRS parts are equipped with a backup power source. If work is started within 90 seconds of turning the ignition switch OFF and disconnecting the cable from the negative (-) battery terminal, SRS parts may deploy.)
- Do not expose SRS parts directly to hot air or flames.

NOTICE:

- Malfunction symptoms of SRS parts are difficult to confirm. DTCs are the most important source of information when troubleshooting. During troubleshooting, always confirm DTCs before disconnecting the cable from the negative (-) battery terminal.
- For minor collisions where SRS parts do not deploy, always inspect the SRS parts.
- Before performing repairs, remove airbag sensors as necessary if any kind of impact is likely to occur to an airbag sensor during repairs.
- Never use SRS parts from another vehicle. When replacing SRS parts, replace them with new ones.
- Never disassemble or attempt to repair SRS parts.
- If an SRS part has been dropped, or if there are any cracks, dents or other defects in the case, bracket or connector, replace the SRS part with a new one.
- Use an ohmmeter/voltmeter with high impedance (10 k Ω /V minimum) for troubleshooting the electrical circuits.
- Information labels are attached to the periphery of SRS parts. Follow the cautions and instructions on the labels.
- After work on SRS parts is completed, perform the SRS warning light check.
- When the cable is disconnected from the negative (-) battery terminal, the memory settings of each system will be cleared. Because of this, be sure to write down the settings of each system before starting work. When work is finished, reset the settings of each system as before. Never use a backup power supply from outside the vehicle to avoid erasing the memory in a system.

(a) SPIRAL CABLE

- (1) The steering wheel must be fitted correctly to the steering column with the spiral cable at the neutral position, as cable disconnection and other problems may occur. Refer to the information about correct installation of the steering wheel.

(b) AIRBAG ASSEMBLY

- (1) Airbag assembly with pad:

Always place a removed or new airbag assembly with the pad surface facing upward. Placing the airbag assembly with the airbag inflation direction facing downward could cause a serious accident if the airbag inflates. Also, do not place anything on top of the airbag assembly.

- (2) Never measure the resistance of the airbag squib. This may cause the airbag to inflate, which could cause a serious injury.
- (3) Grease or detergents of any kind should not be applied to the airbag assembly.
- (4) Store the airbag assembly in an area where the ambient temperature is below 93°C (200°F), the humidity is not high and there is no electrical noise.
- (5) When using electric welding anywhere on the vehicle, disconnect the center airbag sensor assembly connectors. These connectors contain shorting springs. This feature reduces the possibility of the airbag deploying due to currents entering the squib wiring.
- (6) When disposing of the vehicle or the airbag assembly by itself, the airbag should be deployed using SST before disposal. Activate the airbag in a safe place away from electrical noise.

(c) SEAT OUTER BELT ASSEMBLY WITH PRETENSIONER

- (1) Never measure the resistance of the seat outer belt. This may cause the pretensioner of the seat outer belt to activate, which could cause a serious injury.

- (2) Never install the seat outer belt on another vehicle.
- (3) Store the seat outer belt in an area where the ambient temperature is below 80°C (176°F), the humidity is not high and there is no electrical noise.
- (4) When using electric welding anywhere on the vehicle, disconnect the center airbag sensor assembly connectors. These connectors contain shorting springs. This feature reduces the possibility of the pretensioner deploying due to currents entering the squib wiring.
- (5) When disposing of a vehicle or the seat outer belt by itself, the pretensioner should be activated before disposal. Activate the pretensioner in a safe place away from electrical noise.
- (6) As the seat outer belt is hot after the pretensioner is activated, allow some time for it to cool down sufficiently before disposal. Never apply water to try to cool down the seat outer belt.
- (7) Grease, detergents, oil or water should not be applied to the seat outer belt.

(d) CENTER AIRBAG SENSOR ASSEMBLY

- (1) Never reuse a center airbag sensor assembly that has been involved in a collision where the SRS has deployed.
- (2) The connectors to the center airbag sensor assembly should be connected or disconnected with the sensor placed on the floor. If the connectors are connected or disconnected while the center airbag sensor assembly is not placed on the floor, the SRS may activate.
- (3) Work must be started at least 90 seconds after the ignition switch is turned OFF and the cable is disconnected from the negative (-) battery terminal, even if only loosening the set bolts of the airbag sensor assembly.

(e) WIRE HARNESS AND CONNECTOR


- (1) All the connectors in the system are yellow. If the SRS wire harness becomes disconnected or the connector becomes broken, repair or replace it.

3. ELECTRONIC CONTROL

(a) REMOVAL AND INSTALLATION OF BATTERY TERMINAL

NOTICE:


Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

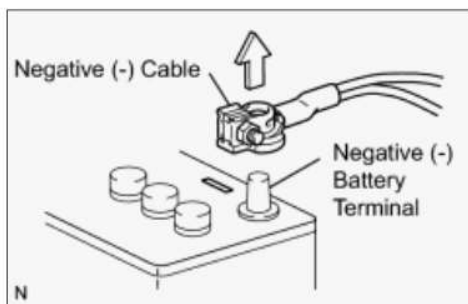

- (1) Before performing electronic work, disconnect the cable from the negative (-) battery terminal to prevent component and wire damage caused by accidental short circuits.
- (2) When disconnecting the cable, turn the ignition switch OFF and headlight dimmer switch OFF and loosen the cable nut completely. Perform these operations without twisting or prying the cable. Then disconnect the cable.
- (3) Clock settings, radio settings, audio system memory, DTCs and other data are erased when the cable is disconnected from the negative (-) battery terminal. Write down any necessary data before disconnecting the cable.

(b) HANDLING OF ELECTRONIC PARTS

- (1) Do not open the cover or case of the ECU unless absolutely necessary. If the IC terminals are touched, the IC may be

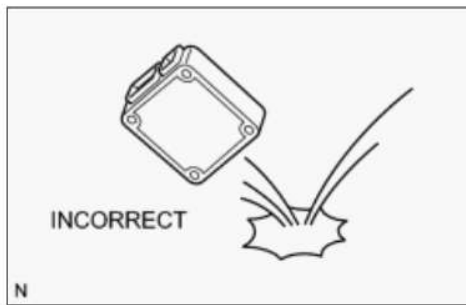

rendered inoperative by static electricity.

- (2) Do not pull the wires when disconnecting electronic connectors. Pull the connector.
- (3) Be careful not to drop electronic components, such as sensors or relays. If they are dropped on a hard surface, they should be replaced.
- (4) When cleaning the engine with steam, protect the electronic components, air filter and emission-related components from water.
- (5) Never use an impact wrench to remove or install temperature switches or temperature sensors.
- (6) When measuring the resistance of a wire connector, insert the tester probe carefully to prevent terminals from bending.

4. REMOVAL AND INSTALLATION OF FUEL CONTROL PARTS


(a) PLACE FOR REMOVING AND INSTALLING FUEL SYSTEM PARTS

- (1) Work in a location with good air ventilation that does not have welders, grinders, drills, electric motors, stoves, or any other ignition sources.
- (2) Never work in a pit or near a pit as vaporized fuel will collect in those places.

(b) REMOVING AND INSTALLING FUEL SYSTEM PARTS

- (1) Prepare a fire extinguisher before starting the operation.
- (2) To prevent static electricity, install a ground wire to the fuel changer, vehicle and fuel tank, and do not spray the surrounding area with water. Be careful when performing work in this area, as the work surface will become slippery. Do not clean up gasoline spills with water, as this may cause the gasoline to spread, and possibly create a fire hazard.
- (3) Avoid using electric motors, working lights and other electric equipment that can cause sparks or high temperatures.
- (4) Avoid using iron hammers as they may create sparks.
- (5) Dispose of fuel-contaminated cloth separately using a fire resistant container.


5. REMOVAL AND INSTALLATION OF ENGINE INTAKE PARTS

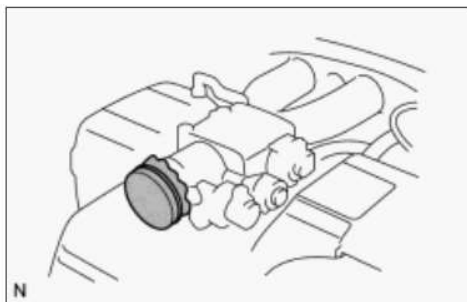

- (a) If any metal particles enter inlet system parts, they may damage the engine.

- (b) When removing and installing inlet system parts, cover the openings of the removed parts and engine openings. Use gummed tape or other suitable materials.
- (c) When installing inlet system parts, check that no metal particles have entered the engine or the installed parts.


6. HANDLING OF HOSE CLAMPS

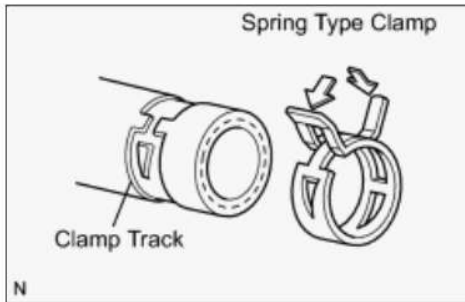

- (a) Before removing the hose, check the clamp position so that it can be reinstalled in the same position.

- (b) Replace any deformed or dented clamps with new ones.
- (c) When reusing a hose, attach the clamp on the clamp track portion of the hose.
- (d) For a spring type clamp, you may want to spread the tabs slightly after installation by pushing in the direction of the arrows as shown in the illustration.

7. FOR VEHICLES EQUIPPED WITH MOBILE COMMUNICATION SYSTEMS

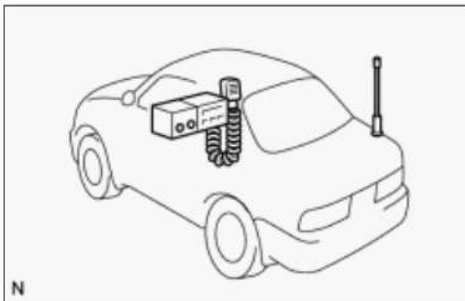


- (a) Install the antenna as far away from the ECU and sensors of the vehicle electronic systems as possible.

- (b) Install an antenna feeder at least 20 cm (7.87 in.) away from the ECU and sensors of the vehicle electronic systems. For details about ECU and sensor locations, refer to the section of the applicable components.
- (c) Keep the antenna and feeder separate from other wiring as much as possible. This will prevent signals of the communication equipment from affecting vehicle equipment and vice versa.
- (d) Check that the antenna and feeder are correctly adjusted.
- (e) Do not install a high-powered mobile communication system.

8. FOR VEHICLES EQUIPPED WITH VEHICLE STABILITY (VSC) SYSTEM

- (a) NOTICES WHEN USING DRUM TESTER

- (1) Before beginning testing, disable the VSC. To disable the VSC, turn the ignition switch OFF and connect SST to terminals 12 (TS) and 4 (CG) of the DLC3.

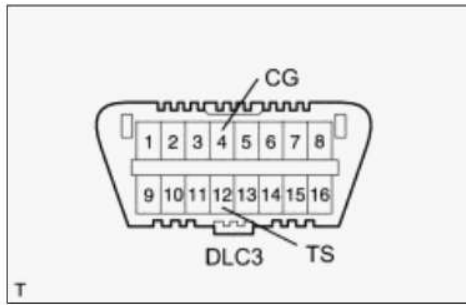**SST: 09843-18040****NOTICE:**

- Confirm that the VSC warning light blinks.
- VSC system will be reset when the engine is started.
- For safety, secure the vehicle with restraint chains while using a wheel dynamometer.

(b) NOTICES OF RELATED OPERATIONS TO VSC

- (1) Do not carry out unnecessary installation and removal as it might affect the adjustment of VSC related parts.
- (2) Be sure to follow the instructions for work preparation and final confirmation of proper operation of the VSC system.

9. WHEN SERVICING ACTIVE TORQUE CONTROL 4WD VEHICLES

- (a) The active torque control 4WD RAV4 is equipped with the 4 wheel drive control system.

If incorrect preparations or test procedures are used, the test will not only be unsuccessful, but may be dangerous as well.

CAUTION:

- Never accelerate or decelerate the vehicle suddenly.
- Observe the other cautions given for each individual test.

NOTICE:

- Sudden shifting, braking, acceleration or deceleration is not allowed.
- Do not use the parking brake while the vehicle's wheels are rotating.
- Do not perform the measurements continuously for a long period of time.
- Make sure to activate the Vehicle Stability Control (VSC) & Traction Control (TRAC) system to an operational condition after the test. Check that the VSC warning indicator light goes off when restarting the engine.

Therefore, before beginning any such servicing or test, be sure to check the following items:

- (1) Whether the tires are touching the ground or jacked up
- (2) Transmission gear position
- (3) Maximum testing vehicle speed
- (4) Maximum testing time

- (b) When using a braking force tester (not free roller type):

When performing measurements using a low-speed type (Vehicle Speed: Below 0.5 km/h or 0.3 mph) brake tester, observe the following instructions.

- (1) Press the 4WD LOCK-MODE SWITCH to OFF to disable the 4WD system.



- (2) If the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, prohibit the system from activating.



- (3) Position the front wheels to be tested on the tester.

- (4) Jack up the rear wheels.
 (5) Ensure that the vehicle does not move using wires.
 (6) Shift the transmission shift lever to the "N" position.
 (7) Idle the engine, operate the brake booster and perform the test.

CAUTION:

The maximum driving time should be 1 minute.

- (c) When using a braking force tester (free roller type):


When performing measurements using a low-speed type (Vehicle Speed: Below 0.5 km/h or 0.3 mph) brake tester, observe the following instructions.



- (1) Press the 4WD LOCK-MODE SWITCH to turn it OFF and disable the 4WD system.

- (2) If the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, prohibit the system from activating.

- (3) Position the front wheels on the tester roller.

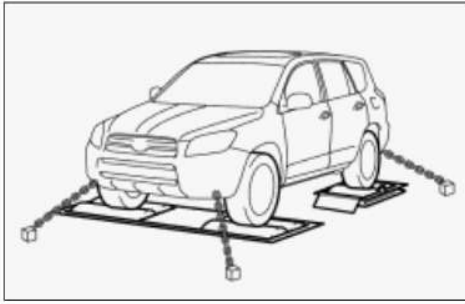

- (4) Position the rear wheels on the free roller.
- (5) Ensure that the vehicle does not move using wires.
- (6) Shift the transmission shift lever to the "N" position.
- (7) Idle the engine, operate the brake booster and perform the test.

CAUTION:

The maximum driving time should be 1 minute.

- (d) When using a speedometer (not free roller type):
Observe the following instructions and then measure with the rear wheels.



- (1) Press the 4WD LOCK-MODE SWITCH to turn it OFF and disable the 4WD system.

- (2) If the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, prohibit the system from activating.



- (3) Position the front wheels on the tester.

- (4) Jack up the rear wheels.
- (5) Ensure that the vehicle does not move using wires.
- (6) Shift the transmission shift lever to the "D" position.

CAUTION:

- The maximum speed should be less than 50 km/h (31 mph).
- If the measurement is required with over 50 km/h (31 mph), remove the propeller shaft.


(e) When using a speedometer (free roller type):

Observe the following instructions and then measure with the rear wheels.



(1) Press the 4WD LOCK-MODE SWITCH to turn it OFF and disable the 4WD system.

(2) If the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, prohibit the system from activating.

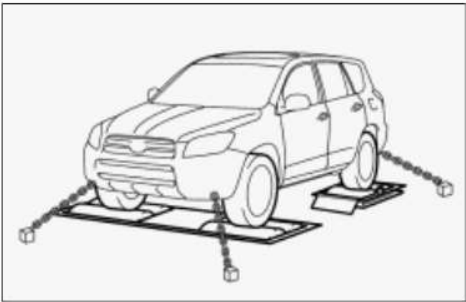


(3) Position the front wheels on the tester roller.

- (4) Position the rear wheels on the free roller.
- (5) Ensure that the vehicle does not move using wires.
- (6) Shift the transmission shift lever to the "D" position.

CAUTION:

- The maximum speed should be less than 50 km/h (31 mph).
- If the measurement is required with over 50 km/h (31 mph), remove the propeller shaft.

 (f) Using chassis dynamometer

VEHICLE CONDITION	CHASSIS DYNAMOMETER TYPE	NOTE
When performing high speed, high load measurements on a chassis dynamometer, observe the following instructions and then measure with the front wheels.  (1) If the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, prohibit the system from activating. (2) Ensure that the vehicle is securely fixed in place. HINT:	2-Wheel Chassis Dynamometer	• Remove the propeller shaft. • Remove the 4WD fuse from fuse box during the test. NOTICE: After the test, reinstall the fuse, and then delete DTC C1298.

- Sudden shifting, braking, acceleration or deceleration is not allowed.
- Make sure to activate the Vehicle Stability Control (VSC) & Traction Control (TRAC) system after the test. Check that the VSC warning indicator light goes off when restarting the engine.

(g) On-Vehicle Wheel Balancing:

When performing on-vehicle wheel balancing on an active torque control 4WD vehicle, to prevent each wheel from being rotated at a different speed and in different directions, always be sure to observe the following precautions.

- (1) All 4 wheels should be jacked up and lifted off of the ground completely.
- (2) Press the 4WD LOCK-MODE SWITCH to turn it OFF and disable the 4WD system.

CAUTION:
Propeller shaft should be removed.


- (3) If the vehicle is equipped with a Vehicle Stability Control (VSC) system, prohibit the system from activating (see previous step).
- (4) The parking brake lever should be fully released.
- (5) None of the brakes should be applied.
- (6) The wheels should be driven on the wheel balancer with the engine running.
- (7) Carry out the wheel balancing with the transmission in the D position.


HINT:


- When performing the wheel balancing, pay attention to the other wheels rotating at the same time.
- Sudden acceleration, deceleration or braking is not allowed.
- Do not forget to change the Vehicle Stability Control (VSC) system to an operational condition after the test. Check that the VSC warning indicator light goes off when restarting the engine.

10. WHEN TOWING ACTIVE TORQUE CONTROL 4WD VEHICLES

- Use one of the methods shown below to tow the vehicle.
- If the vehicle has trouble in the chassis and drivetrain, use method 1 (flat bed truck).



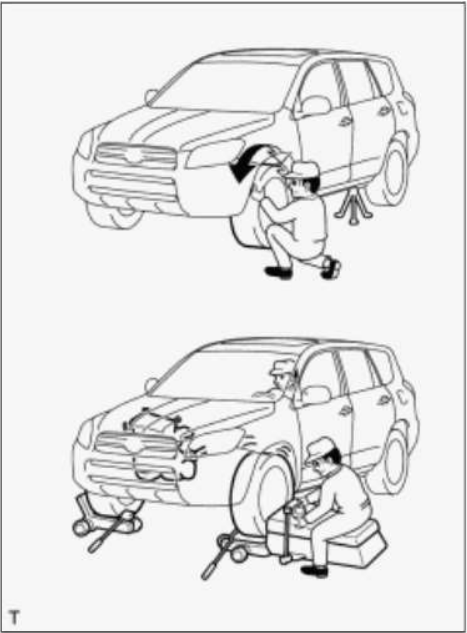


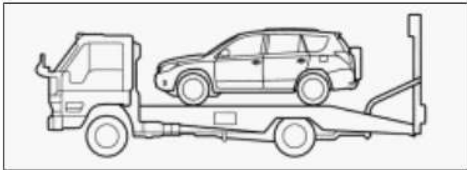TOWING METHOD	PARKING BRAKE CONDITION
1. Flat Type Truck 	Applied

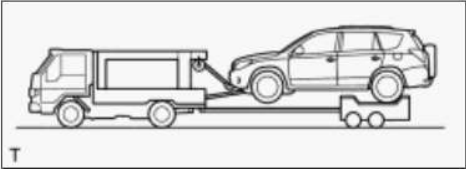TOWING METHOD	PARKING BRAKE CONDITION
2. Wheel Lift Type Truck From Front 	Applied

NOTICE:
Do not use any towing method other than those shown above.

- For example, the towing methods shown below are dangerous or damage the vehicle, so do not use them.

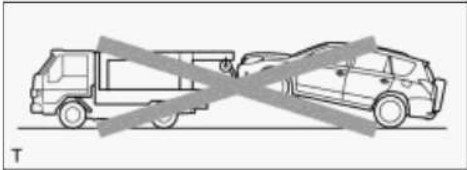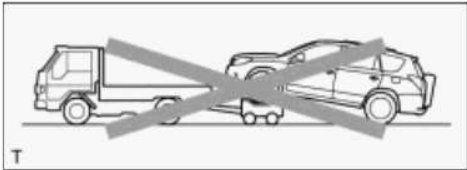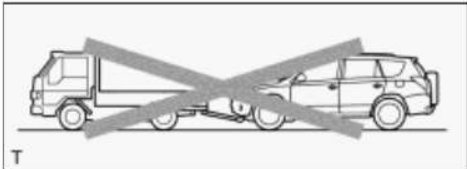	- Never tow the vehicle using a method where the lifted-up wheel cannot rotate. - If this towing method is used, either from the front or rear: - There is a danger of the drivetrain heating up and causing a breakdown, or of the wheels flying off the dolly. - In addition, if the vehicle is equipped with the Vehicle Stability Control (VSC) & Traction Control (TRAC) system, the system will apply the rotating wheel brake only when the engine is running.
	CAUTION: Do not use the sling type method, either from the front or rear, as this method causes damage to the body.
	CAUTION: Do not tow the vehicle with all of its wheels contacting the ground, as this causes damage to the transaxle.

 

11. FOR VEHICLES EQUIPPED WITH CATALYTIC CONVERTER

CAUTION:
If a large amount of unburned gasoline or gasoline vapors flow into the converter, it may cause overheating and create a fire hazard. To prevent this, observe the following precautions.

- (a) Use only unleaded gasoline.
- (b) Avoid idling the engine for more than 20 minutes.
- (c) Avoid performing unnecessary spark jump tests.
 - (1) Perform a spark jump test only when absolutely necessary. Perform this test as rapidly as possible.
 - (2) While testing, never race the engine.
- (d) Avoid a prolonged engine compression measurement. Engine compression measurements must be performed as rapidly as possible.
- (e) Do not run the engine when the fuel tank is nearly empty. This may cause the engine to misfire and create an extra load on the converter.

12. INSPECTION AND ADJUSTMENT OF JOINT ANGLE DURING REMOVAL AND INSTALLATION OF PROPELLER SHAFT (4WD)

- (a) When performing operations which involve the removal and installation of the propeller shaft, always check the joint angle. Make adjustments if necessary INFO.

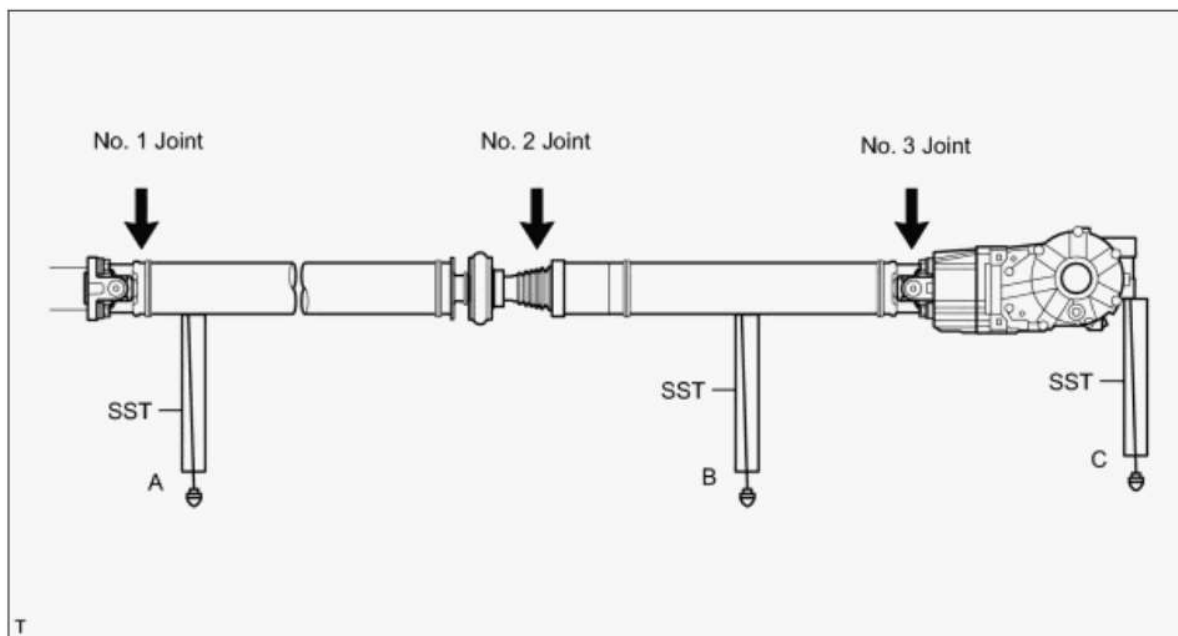

Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000018UP019X
Title: INTRODUCTION: REPAIR INSTRUCTION: VEHICLE LIFT AND SUPPORT LOCATIONS (2011 RAV4)		

VEHICLE LIFT AND SUPPORT LOCATIONS

1. NOTICE ABOUT VEHICLE CONDITION WHEN RAISING VEHICLE


- The vehicle must be unloaded before jacking up or raising the vehicle. Never jack up or raise a heavily loaded vehicle.
- Set the jack and safety stands exactly under the specified locations on the vehicle.
- Never try to jack up or raise a vehicle that exceeds the weight specifications of the equipment being used.
- When raising the vehicle, first raise the vehicle only a little, and then shake the vehicle slightly to make sure it is stable before raising it to the specified position.
- Before removing the jack, tap the safety stands with a hammer or equivalent to make sure that the vehicle is properly supported.
- When using a lift, always lower the vehicle when work is not being performed.
- When removing any heavy components like the engine or transmission, the vehicle's center of gravity will shift. To stabilize the vehicle, place a balance weight in a location that will prevent the vehicle from rolling or shifting, or place a transmission jack under the appropriate jack position at the opposite end of the vehicle.

2. NOTICE FOR USING 4 POST LIFT

- Follow the safety procedures outlined in the lift instruction manual.
- Use precautionary measures to prevent the free wheel beam from damaging tires or wheels.
- Use wheel chocks to secure the vehicle.

3. NOTICE FOR USING JACK AND SAFETY STAND

- Work on a level surface. Use wheel chocks at all times.

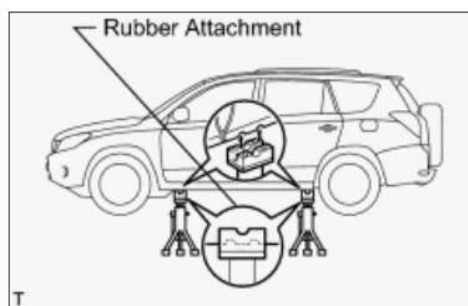


- Use safety stands with rubber attachments as shown in the illustration.


- Set the jack and safety stands to the specified locations of the vehicle accurately.
- When jacking up the vehicle, first release the parking brake and move the shift lever to N.
- When jacking up the entire vehicle:
 - When jacking up the front wheels first, make sure wheel chocks are behind the rear wheels.
 - When jacking up the rear wheels first, make sure wheel chocks are in front of the front wheels.
- When jacking up only the front or rear wheels of the vehicle:


- Before jacking up the front wheels, place wheel chocks on both sides of the rear wheels.
- Before jacking up the rear wheels, place wheel chocks on both sides of the front wheels.

(g) When lowering a vehicle that only has its front or rear wheels jacked up:

- Before lowering the front wheels, make sure wheel chocks are in front of the rear wheels.
- Before lowering the rear wheels, make sure wheel chocks are behind the front wheels.

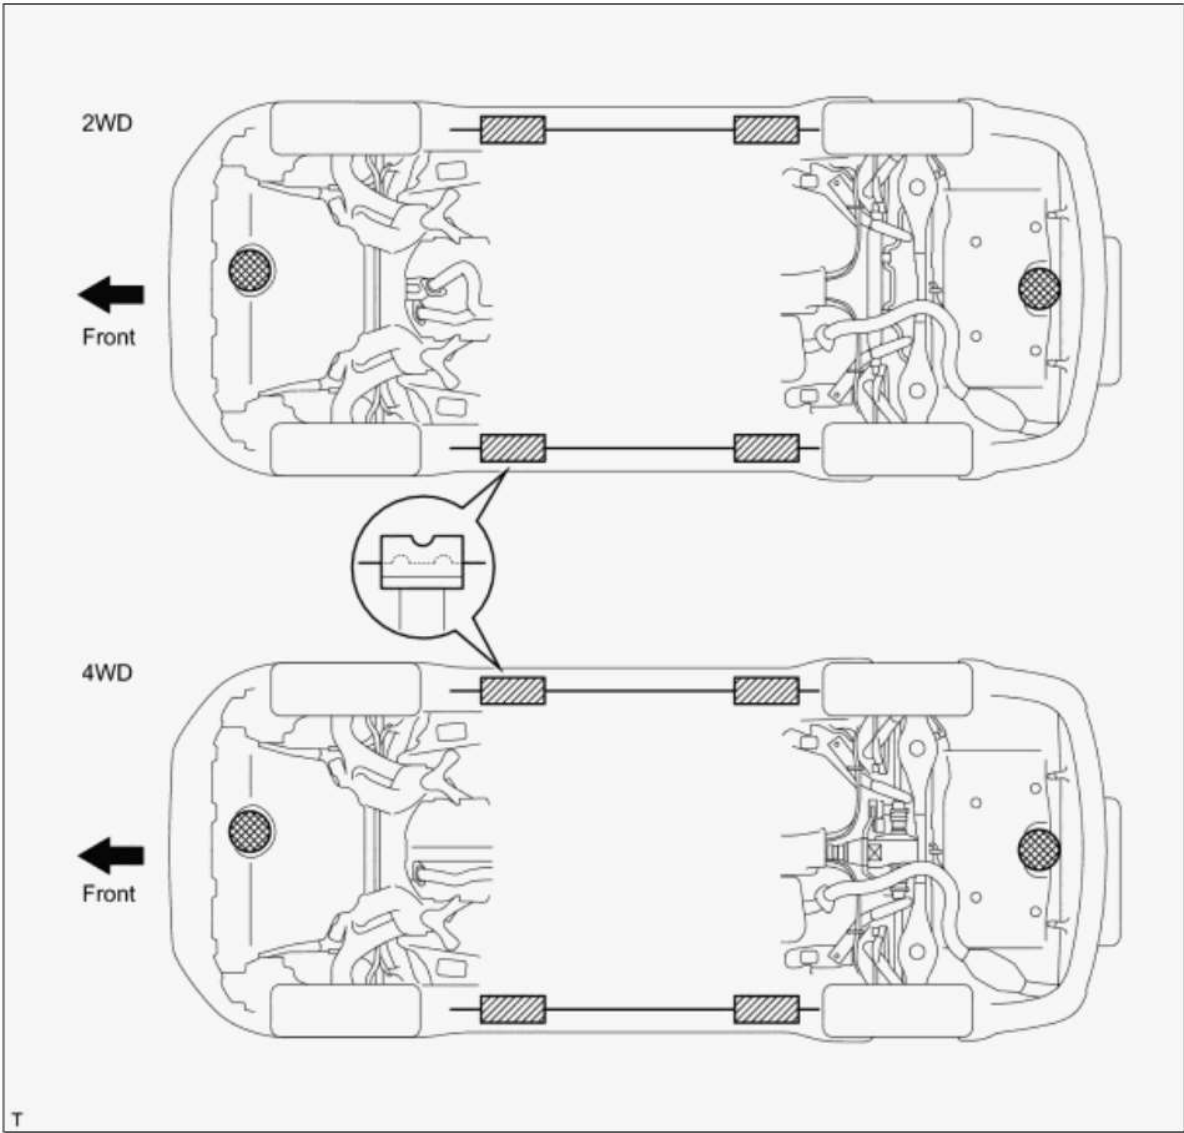

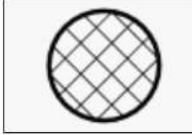
	JACK POSITION Front: Engine under cover Rear: Body lower back panel	CAUTION: When jacking-up the vehicle, make sure the vehicle is not carrying any extra weight.
	SUPPORT POSITION Safety stand and swing arm type lift	-

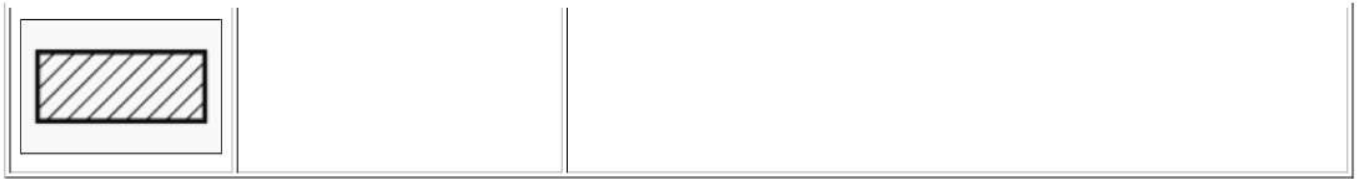

- (h) It is extremely dangerous to perform any work on a vehicle raised on a jack alone, even for work that can be finished quickly. Safety stands must be used to support it.

4. NOTICE FOR USING SWING ARM TYPE LIFT


- (a) Follow safety procedures outlined in its instruction manual.
- (b) Use a swing arm equipped with a rubber attachment, as shown in the illustration.
- (c) When using the lift, make sure that the vehicle is stabilized so that it will not tilt while work is being performed. Stabilize the vehicle by adjusting the lift arm's length and vehicle's position.
- (d) When using the lift, its center should be as close to the vehicle's center of gravity as possible (length of "L" in the illustration should be as short as possible).

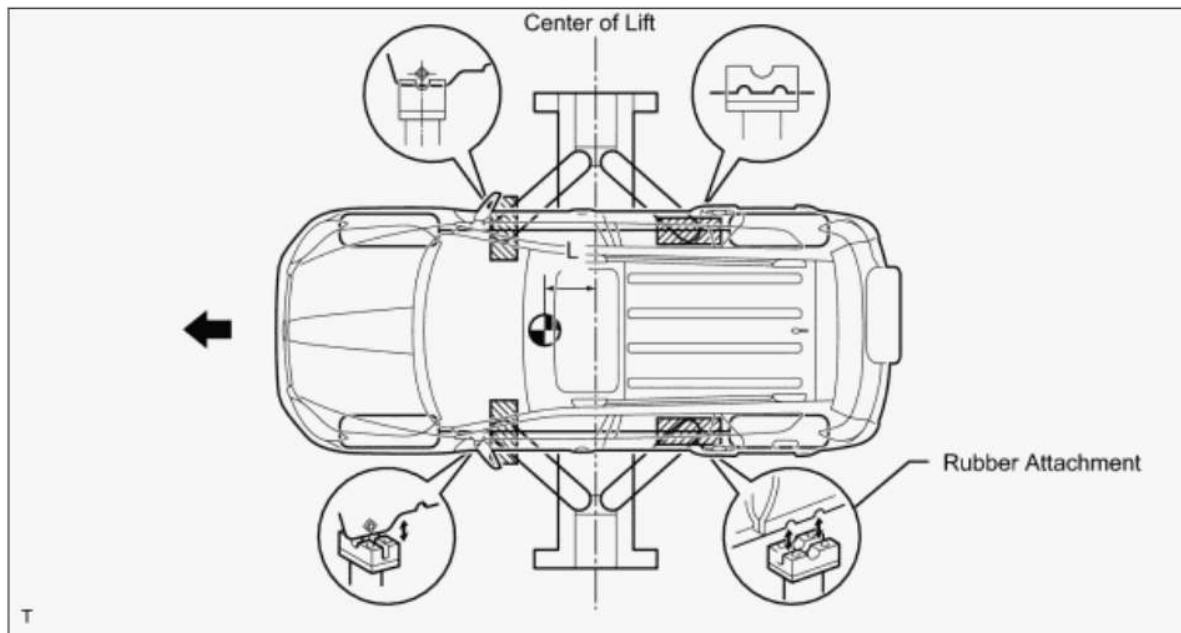

- (e) Set the vehicle on the lift as level as possible. Then match the groove of the cradle to the rigid rack support location.
- (f) Be sure to lock the swing arms before lifting and during work (if equipped with arm locks).
- (g) Lift the vehicle up off the ground. Stand at a safe distance and shake the vehicle to check its stability.


5. NOTICE FOR USING PLATE TYPE LIFT

- (a) Follow safety procedures outlined in its instruction manual.
- (b) Use plate lift attachments (rubber lifting blocks) on top of the plate surface.
- (c) Refer to the illustration below to determine how to properly set the vehicle.

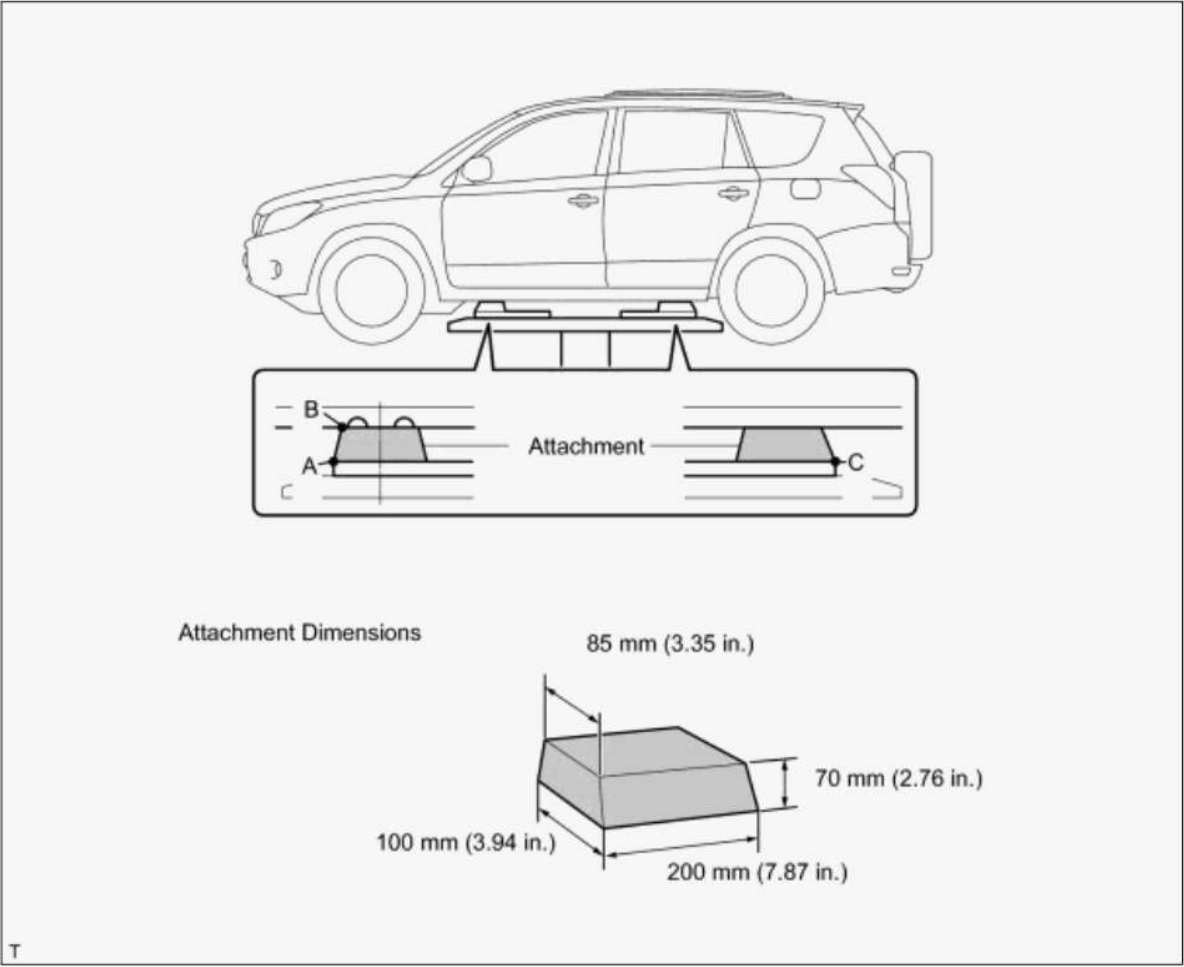

Right and left set position	Place the vehicle over the center of the lift.
Front and rear set position	Place the attachments at the ends of the rubber plate surface, under the vehicle lift pad (A and C in the illustration). Raise the plate slightly and reposition the vehicle so the top of the attachment (B in the illustration) is aligned with the front side notch in the vehicle rocker flange.

 (d) Use the lift to raise the vehicle up off the ground, and shake it to make sure that it is stable.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000000THI04GX
Title: INTRODUCTION: TERMS: ABBREVIATIONS USED IN MANUAL (2011 RAV4)		

ABBREVIATIONS USED IN MANUAL

ABBREVIATIONS	MEANING
1st	First
2nd	Second
2WD	Two Wheel Drive Vehicle (4 x 2)
3rd	Third
4th	Fourth
4WD	Four Wheel Drive Vehicle (4 x 4)
4WS	Four Wheel Steering System
5th	Fifth
A.D.D.	Automatic Disconnecting Differential
A/C	Air Conditioner
A/F	Air-Fuel Ratio
A/T, ATM	Automatic Transmission (Transaxle)
A-TRAC	Active Traction Control
ABS	Anti-Lock Brake System
AC	Alternating Current
ACC	Accessory
ACIS	Acoustic Control Induction System
ACM	Active Control Engine Mount
ACSD	Automatic Cold Start Device
AFS	Adaptive Front-Lighting System
AHC	Active Height Control Suspension
AID	Air Injection Control Driver
ALR	Automatic Locking Retractor
ALT	Alternator
AMP	Amplifier
ANT	Antenna
APPROX.	Approximately
ASL	Automatic sound levelizer
ASSB	Assembly Services Sdn. Bhd.

ABBREVIATIONS	MEANING
ASSY	Assembly
ATDC	After Top Dead Center
ATF	Automatic Transmission Fluid
AUTO	Automatic
AUX	Auxiliary
AVG	Average
AVS	Adaptive Variable Suspension
B/L	Bi-Level
B/S	Bore-Stroke Ratio
B+	Battery Voltage
BA	Brake Assist
BACS	Boost Altitude Compensation System
BAT	Battery
BDC	Bottom Dead Center
BTDC	Before Top Dead Center
BVSV	Bimetallic Vacuum Switching Valve
C/V	Check Valve
Calif.	California
CAN	Controller Area Network
CB	Circuit Breaker
CCo	Catalytic Converter For Oxidation
CCV	Canister Closed Valve
CD	Compact Disc
CF	Cornering Force
CG	Center Of Gravity
CH	Channel
CKD	Complete Knock Down
COMB.	Combination
CPE	Coupe
CPS	Combustion Pressure Sensor
CPU	Central Processing Unit
CRAWL	Crawl Control
CRS	Child Restraint System
CTR	Center

ABBREVIATIONS	MEANING
CV	Control Valve
CVT	Continuously Variable Transmission (Transaxle)
CW	Curb Weight
D/INJ	Direct Injection
DC	Direct Current
DEF	Defogger
DFL	Deflector
DIFF.	Differential
DIFF. LOCK	Differential Lock
DLC	Data Link Connector
DLI	Distributorless Ignition
DOHC	Double Overhead Camshaft
DP	Dash Pot
DS	Dead Soak
DSP	Digital Signal Processor
DTC	Diagnostic Trouble Code
DVD	Digital Versatile Disc
E/G	Engine
EBD	Electronic Brake Force Distribution
EC	Electrochromic
ECAM	Engine Control And Measurement System
ECD	Electronically Controlled Diesel
ECDY	Eddy Current Dynamometer
ECT	Electronic Controlled Automatic Transmission/Transaxle
ECU	Electronic Control Unit
ED	Electro-Deposited Coating
EDIC	Electronic Diesel Injection Control
EDU	Electronic Driving Unit
EFI	Electronic Fuel Injection
EGR	Exhaust Gas Recirculation
EGR-VM	EGR-Vacuum Modulator
ELR	Emergency Locking Retractor
EMPS	Electric Motor Power Steering
ENG	Engine

ABBREVIATIONS	MEANING
ES	Easy & Smooth
ESA	Electronic Spark Advance
ETCS-i	Electronic Throttle Control System-intelligent
EVAP	Evaporative Emission Control
EVP	Evaporator
E-VRV	Electric Vacuum Regulating Valve
EX	Exhaust
F/G	Fuel Gauge
F/P	Fuel Pump
F/W	Flywheel
FE	Fuel Economy
FF	Front-Engine Front-Wheel-Drive
FIPG	Formed In Place Gasket
FL	Fusible Link
FPU	Fuel Pressure Up
FR / Fr	Front
FW/D	Flywheel Damper
FWD	Front-Wheel-Drive
GAS	Gasoline
GND	Ground
GPS	Global Positioning System
GSA	Gear Shift Actuator
H/B	Hatchback
H-FUSE	High Current Fuse
HI	High
HID	High Intensity Discharge (Headlight)
HPU	Hydraulic Power Unit
HSG	Housing
HT	Hard Top
HV	Hybrid Vehicle
HWS	Heated Windshield System
I/P	Instrument Panel
IC	Integrated Circuit
IDI	Indirect Diesel Injection

ABBREVIATIONS	MEANING
IFS	Independent Front Suspension
IG	Ignition
IIA	Integrated Ignition Assembly
IN	Intake (Manifold, Valve)
INT	Intermittent
IRS	Independent Rear Suspension
ISC	Idle Speed Control
J/B	Junction Block
J/C	Junction Connector
KD	Kick-Down
KDSS	Kinetic Dynamic Suspension System
L/H/W	Length, Height, Width
LAN	Local Area Network
LB	Liftback
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LH	Left-Hand
LHD	Left-Hand Drive
LIN	Local Interconnect Network
LLC	Long-Life Coolant
LNG	Liquefied Natural Gas
LO	Low
LPG	Liquefied Petroleum Gas
LSD	Limited Slip Differential
LSP & BV	Load Sensing Proportioning and Bypass Valve
LSPV	Load Sensing Proportioning Valve
M/T, MTM	Manual Transmission (Transaxle)
MAP	Manifold Absolute Pressure
MAX.	Maximum
MG1	Motor Generator No. 1
MG2	Motor Generator No. 2
MIC	Microphone
MIL	Malfunction Indicator Lamp
MIN.	Minimum

ABBREVIATIONS	MEANING
MMT	Multi-mode Manual Transmission
MP	Multipurpose
MPI	Multipoint Electronic Injection
MPX	Multiplex Communication System
MT	Mount
MTG	Mounting
N	Neutral
NA	Natural Aspiration
NO. / No.	Number
O/D	Overdrive
O/S	Oversize
O2S	Oxygen Sensor
OC	Oxidation Catalyst
OCV	Oil Control Valve
OEM	Original Equipment Manufacturing
OHC	Overhead Camshaft
OHV	Overhead Valve
OPT	Option
ORVR	On-board Refueling Vapor Recovery
P & BV	Proportioning And Bypass Valve
P/W	Power Window
PBD	Power Back Door
PCS	Power Control System
PCV	Positive Crankcase Ventilation
PKB	Parking Brake
PPS	Progressive Power Steering
PROM	Programmable Read Only Memory
PS	Power Steering
PSD	Power Slide Door
PTC	Positive Temperature Coefficient
PTO	Power Take-Off
PZEV	Partial Zero Emission Vehicle
R & P	Rack and Pinion
R/B	Relay Block

ABBREVIATIONS	MEANING
R/F	Reinforcement
RAM	Random Access Memory
RBS	Recirculating Ball Type Steering
REAS	Relative Absorber System
RFS	Rigid Front Suspension
RH	Right-Hand
RHD	Right-Hand Drive
RLY	Relay
ROM	Read Only Memory
RR / Rr	Rear
RRS	Rigid Rear Suspension
RSE	Rear Seat Entertainment
RWD	Rear-Wheel Drive
SC	Supercharger
SCV	Swirl Control Valve (for gasoline engine)
SCV	Suction Control Valve (for diesel engine)
SDN	Sedan
SEN	Sensor
SICS	Starting Injection Control System
SOC	State Of Charge
SOHC	Single Overhead Camshaft
SPEC	Specification
SPI	Single Point Injection
SPV	Spill Control Valve
SRS	Supplemental Restraint System
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
STJ	Cold-Start Fuel Injection
SW	Switch
SYS	System
T/A	Transaxle
T/M	Transmission
TACH	Tachometer

ABBREVIATIONS	MEANING
TAM	P.T. TOYOTA-Astra Motor
TASA	TOYOTA Argentina S.A.
TAT	TOYOTA Motor Thailand Co. Ltd.
TAW	TOYOTA Auto Works Co. Ltd.
TBI	Throttle Body Electronic Fuel Injection
TC	Turbocharger
TCCS	TOYOTA Computer-Controlled System
TCV	Timing Control Valve (for diesel engine)
TCV	Tumble Control Valve (for gasoline engine)
TDC	Top Dead Center
TDV	TOYOTA de Venezuela C.A.
TEMP.	Temperature
TEMS	TOYOTA Electronic Modulated Suspension
TFT	TOYOTA Free-Tronic
TIS	Total Information System For Vehicle Development
TKM	TOYOTA Kirloskar Motor Ltd.
TMC	TOYOTA Motor Corporation
TMMIN	P.T. TOYOTA Motor Manufacturing Indonesia
TMMK	TOYOTA Motor Manufacturing Kentucky, Inc.
TMP	TOYOTA Motor Philippines Corp.
TMT	TOYOTA Motor Thailand Co. Ltd.
TRAC	Traction Control System
TRC	Traction Control System
TSAM	TOYOTA South Africa Motors (Pty) Ltd.
TURBO	Turbocharge
TVIP	TOYOTA Vehicle Intrusion Protection
TWC	Three-Way Catalyst
U/D	Underdrive
U/S	Undersize
VCV	Vacuum Control Valve
VDIM	Vehicle Dynamics Integrated Management
VENT	Ventilator
VGRS	Variable Gear Ratio Steering
VIM	Vehicle Interface Module

ABBREVIATIONS	MEANING
VIN	Vehicle Identification Number
VPS	Variable Power Steering
VSC	Vehicle Stability Control
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
VVT-i	Variable Valve Timing-intelligent
W/ / w/	With
W/H	Wire Harness
W/O / w/o	Without
WGN	Wagon



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM000000THJ021X
Title: INTRODUCTION: TERMS: GLOSSARY OF SAE AND TOYOTA TERMS (2011 RAV4)		

GLOSSARY OF SAE AND TOYOTA TERMS

This glossary lists all SAE-J1930 terms and abbreviations used in this manual in compliance with SAE recommendations, as well as their TOYOTA equivalents.

SAE ABBREVIATIONS	SAE TERMS	TOYOTA TERMS ()-ABBREVIATIONS
3GR	Third Gear	-
4GR	Fourth Gear	-
A/C	Air Conditioning	Air Conditioner
ACL	Air Cleaner	Air Cleaner, A/CL
AIR	Secondary Air Injection	Air Injection (AI)
AP	Accelerator Pedal	-
B+	Battery Positive Voltage	+B, Battery Voltage
BARO	Barometric Pressure	HAC
CAC	Charge Air Cooler	Intercooler
CARB	Carburetor	Carburetor
CFI	Continuous Fuel Injection	-
CKP	Crankshaft Position	Crank Angle
CL	Closed Loop	Closed Loop
CMP	Camshaft Position	Cam Angle
CPP	Clutch Pedal Position	-
CTOX	Continuous Trap Oxidizer	-
CTP	Closed Throttle Position	LL ON, Idle ON
DFI	Direct Fuel Injection	Direct Injection (DI/INJ)
DI	Distributor Ignition	-
DLC3	Data Link Connector 3	OBD II Diagnostic Connector
DTC	Diagnostic Trouble Code	Diagnostic Trouble Code
DTM	Diagnostic Test Mode	-
ECL	Engine Coolant Level	-
ECM	Engine Control Module	Engine Electronic Control Unit (ECU)
ECT	Engine Coolant Temperature	Coolant Temperature, Water Temperature (THW)

SAE ABBREVIATIONS	SAE TERMS	TOYOTA TERMS ()-ABBREVIATIONS
EEPROM	Electrically Erasable Programmable Read Only Memory	Electrically Erasable Programmable Read Only Memory (EEPROM)
EFE	Early Fuel Evaporation	Cold Mixture Heater (CMH), Heat Control Valve (HCV)
EGR	Exhaust Gas Recirculation	Exhaust Gas Recirculation (EGR)
EI	Electronic Ignition	Distributorless Ignition (DLI)
EM	Engine Modification	Engine Modification (EM)
EPROM	Erasable Programmable Read Only Memory	Programmable Read Only Memory (PROM)
EVAP	Evaporative Emission	Evaporative Emission Control (EVAP)
FC	Fan Control	-
FEEPROM	Flash Electrically Erasable Programmable Read Only Memory	-
FEPRM	Flash Erasable Programmable Read Only Memory	-
FF	Flexible Fuel	-
FP	Fuel Pump	Fuel Pump
GEN	Generator	Alternator
GND	Ground	Ground (GND)
HO2S	Heated Oxygen Sensor	Heated Oxygen Sensor (HO2S)
IAC	Idle Air Control	Idle Speed Control (ISC)
IAT	Intake Air Temperature	Intake or Inlet Air Temperature
ICM	Ignition Control Module	-
IFI	Indirect Fuel Injection	Indirect Injection (IDL)
IFS	Inertia Fuel-Shutoff	-
ISC	Idle Speed Control	-
KS	Knock Sensor	Knock Sensor
MAF	Mass Airflow	Air Flow Meter
MAP	Manifold Absolute Pressure	Manifold Pressure Intake Vacuum
MC	Mixture Control	Electric Bleed Air Control Valve (EBCV) Mixture Control Valve (MCV) Electric Air Control Valve (EACV)
MDP	Manifold Differential Pressure	-
MFI	Multiport Fuel Injection	Electronic Fuel Injection (EFI)
MIL	Malfunction Indicator Lamp	Check Engine Lamp

SAE ABBREVIATIONS	SAE TERMS	TOYOTA TERMS ()-ABBREVIATIONS
MST	Manifold Surface Temperature	-
MVZ	Manifold Vacuum Zone	-
NVRAM	Non-Volatile Random Access Memory	-
O2S	Oxygen Sensor	Oxygen Sensor, O2 Sensor (O2S)
OBD	On-Board Diagnostic	On-Board Diagnostic System (OBD)
OC	Oxidation Catalytic Converter	Oxidation Catalyst Converter (OC), CCo
OL	Open Loop	Open Loop
PAIR	Pulsed Secondary Air Injection	Air Suction (AS)
PCM	Powertrain Control Module	-
PNP	Park/Neutral Position	-
PROM	Programmable Read Only Memory	-
PSP	Power Steering Pressure	-
PTOX	Periodic Trap Oxidizer	Diesel Particulate Filter (DPF) Diesel Particulate Trap (DPT)
RAM	Random Access Memory	Random Access Memory (RAM)
RM	Relay Module	-
ROM	Read Only Memory	Read Only Memory (ROM)
RPM	Engine Speed	Engine Speed
SC	Supercharger	Supercharger
SCB	Supercharger Bypass	E-ABV
SFI	Sequential Multiport Fuel Injection	Electronic Fuel Injection (EFI), Sequential Injection
SPL	Smoke Puff Limiter	-
SRI	Service Reminder Indicator	-
SRT	System Readiness Test	-
ST	Scan Tool	-
TB	Throttle Body	Throttle Body
TBI	Throttle Body Fuel Injection	Single Point Injection Central Fuel Injection (Ci)
TC	Turbocharger	Turbocharger
TCC	Torque Converter Clutch	Torque Converter
TCM	Transmission Control Module	Transmission ECU, ECT ECU
TP	Throttle Position	Throttle Position
TR	Transmission Range	-

SAE ABBREVIATIONS	SAE TERMS	TOYOTA TERMS ()-ABBREVIATIONS
TVV	Thermal Vacuum Valve	Bimetallic Vacuum Switching Valve (BVSV) Thermostatic Vacuum Switching Valve (TVSV)
TWC	Three-Way Catalytic Converter	Three-Way Catalytic (TWC) Manifold Converter CCRO
TWC+OC	Three-Way + Oxidation Catalytic Converter	CCR + CCo
VAF	Volume Airflow	Air Flow Meter
VR	Voltage Regulator	Voltage Regulator
VSS	Vehicle Speed Sensor	Vehicle Speed Sensor
WOT	Wide Open Throttle	Full Throttle
WU-OC	Warm Up Oxidation Catalytic Converter	-
WU-TWC	Warm Up Three-Way Catalytic Converter	-




Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EX1B8X
Title: TOC2: TOC2: CAUTION (2011 RAV4)		

CAUTION

This contents does not include all the necessary items about repair and service. This manual is made for the use of persons who have special techniques and certifications. If non-specialized or uncertified technicians perform repairs or service only using this manual or without proper equipment or tools, this may cause severe injury to you or other persons nearby and also cause damage to your customer's vehicle.

In order to prevent dangerous operation and damage to your customer's vehicle, be sure to follow the instructions shown below.

 - This contents must be read thoroughly. It is especially important to have a good understanding of all the contents written in the PRECAUTION of "INTRODUCTION" section.
- The service method written in this manual is very effective to perform repair and service. When performing the operations following the procedures using this manual, be sure to use tools specified and recommended. If using non-specified or tools other than recommended tools and service methods, be sure to confirm the safety of the technicians and that there is no possibility of causing personal injury or damage to the customer's vehicle before starting the operation.
- If part replacement is necessary, the part must be replaced with the same part number or equivalent part. Do not replace it with an inferior quality part.
- It is important to note that this manual contains various "Cautions" and "Notices" that must be carefully observed in order to reduce the risk of personal injury during service or repair, or reduce the possibility that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that these "Cautions" and "Notices" are not exaggerations and are possible hazardous consequences that might result from failure to follow these instructions.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EW1UYX
Title: TOC2: TOC2: FOREWORD (2011 RAV4)		

FOREWORD

This is Volume 2 of the 2011 RAV4 manual. There are four volumes to this manual. The sections included in each volume are indicated by black type in the Section Index. Use the Section Index of each volume to find the volume with the section you need.

Applicable models	ASA33, 38 series
	GSA33, 38 series

Please note that the publications below have also been prepared as relevant service manuals for the components and system in these vehicles.

MANUAL NAME	PUB. NO.
2011 RAV4 Electrical Wiring Diagram	EM16B0U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice. For the most current information available, refer to the Toyota Technical Information System (TIS) online at dealership locations or on the Internet at <http://techinfo.toyota.com>.

If you find any failures in this manual, you are kindly requested to inform us by using the report form on the next page.

TOYOTA MOTOR CORPORATION

Copyright (C) 2010 TOYOTA MOTOR CORPORATION
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.
First Printing: Jul. 20, 2010 01-100720-00

Repair Manual Quality Report

Att.) Service Manager, Your Distributor

Pub. No.	Issue Date
Name of Dealer	Name of Reporter
Subject	
Problem Description	
Correction Proposal	



cardiagn.com

Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EX1B9X
Title: TOC3: TOC3: CAUTION (2011 RAV4)		

CAUTION

This contents does not include all the necessary items about repair and service. This manual is made for the use of persons who have special techniques and certifications. If non-specialized or uncertified technicians perform repairs or service only using this manual or without proper equipment or tools, this may cause severe injury to you or other persons nearby and also cause damage to your customer's vehicle.

In order to prevent dangerous operation and damage to your customer's vehicle, be sure to follow the instructions shown below.

- This contents must be read thoroughly. It is especially important to have a good understanding of all the contents written in the PRECAUTION of "INTRODUCTION" section.
- The service method written in this manual is very effective to perform repair and service. When performing the operations following the procedures using this manual, be sure to use tools specified and recommended. If using non-specified or tools other than recommended tools and service methods, be sure to confirm the safety of the technicians and that there is no possibility of causing personal injury or damage to the customer's vehicle before starting the operation.
- If part replacement is necessary, the part must be replaced with the same part number or equivalent part. Do not replace it with an inferior quality part.
- It is important to note that this manual contains various "Cautions" and "Notices" that must be carefully observed in order to reduce the risk of personal injury during service or repair, or reduce the possibility that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that these "Cautions" and "Notices" are not exaggerations and are possible hazardous consequences that might result from failure to follow these instructions.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EW1UZX
Title: TOC3: TOC3: FOREWORD (2011 RAV4)		

FOREWORD

This is Volume 3 of the 2011 RAV4 manual. There are four volumes to this manual. The sections included in each volume are indicated by black type in the Section Index. Use the Section Index of each volume to find the volume with the section you need.

Applicable models	ASA33, 38 series
	GSA33, 38 series

Please note that the publications below have also been prepared as relevant service manuals for the components and system in these vehicles.

MANUAL NAME	PUB. NO.
2011 RAV4 Electrical Wiring Diagram	EM16B0U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice. For the most current information available, refer to the Toyota Technical Information System (TIS) online at dealership locations or on the Internet at <http://techinfo.toyota.com>.

If you find any failures in this manual, you are kindly requested to inform us by using the report form on the next page.


TOYOTA MOTOR CORPORATION

Copyright (C) 2010 TOYOTA MOTOR CORPORATION
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.
First Printing: Jul. 20, 2010 01-100720-00

Repair Manual Quality Report

Att.) Service Manager, Your Distributor

Pub. No.	Issue Date
Name of Dealer	Name of Reporter
Subject	
Problem Description	
Correction Proposal	

 

cardiagn.com


Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EX1BAX
Title: TOC4: TOC4: CAUTION (2011 RAV4)		

CAUTION

This contents does not include all the necessary items about repair and service. This manual is made for the use of persons who have special techniques and certifications. If non-specialized or uncertified technicians perform repairs or service only using this manual or without proper equipment or tools, this may cause severe injury to you or other persons nearby and also cause damage to your customer's vehicle.

In order to prevent dangerous operation and damage to your customer's vehicle, be sure to follow the instructions shown below.

 - This contents must be read thoroughly. It is especially important to have a good understanding of all the contents written in the PRECAUTION of "INTRODUCTION" section.
- The service method written in this manual is very effective to perform repair and service. When performing the operations following the procedures using this manual, be sure to use tools specified and recommended. If using non-specified or tools other than recommended tools and service methods, be sure to confirm the safety of the technicians and that there is no possibility of causing personal injury or damage to the customer's vehicle before starting the operation.
- If part replacement is necessary, the part must be replaced with the same part number or equivalent part. Do not replace it with an inferior quality part.
- It is important to note that this manual contains various "Cautions" and "Notices" that must be carefully observed in order to reduce the risk of personal injury during service or repair, or reduce the possibility that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that these "Cautions" and "Notices" are not exaggerations and are possible hazardous consequences that might result from failure to follow these instructions.



Last Modified: 9-7-2011	6.4 F	From: 201008
Model Year: 2011	Model: RAV4	Doc ID: RM0000010EW1V0X
Title: TOC4: TOC4: FOREWORD (2011 RAV4)		

FOREWORD

This is Volume 4 of the 2011 RAV4 manual. There are four volumes to this manual. The sections included in each volume are indicated by black type in the Section Index. Use the Section Index of each volume to find the volume with the section you need.

Applicable models	ASA33, 38 series
	GSA33, 38 series

Please note that the publications below have also been prepared as relevant service manuals for the components and system in these vehicles.

MANUAL NAME	PUB. NO.
2011 RAV4 Electrical Wiring Diagram	EM16B0U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice. For the most current information available, refer to the Toyota Technical Information System (TIS) online at dealership locations or on the Internet at <http://techinfo.toyota.com>.

If you find any failures in this manual, you are kindly requested to inform us by using the report form on the next page.

TOYOTA MOTOR CORPORATION

Copyright (C) 2010 TOYOTA MOTOR CORPORATION
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.
First Printing: Jul. 20, 2010 01-100720-00

Repair Manual Quality Report

Att.) Service Manager, Your Distributor

Pub. No.	Issue Date
Name of Dealer	Name of Reporter
Subject	
Problem Description	
Correction Proposal	



cardiagn.com