


Heater Core

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


11.Heater Core

A: REMOVAL


- 1) Remove the heater and cooling unit. <Ref. to AC-32, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the screws and detach the heater pipe cover.

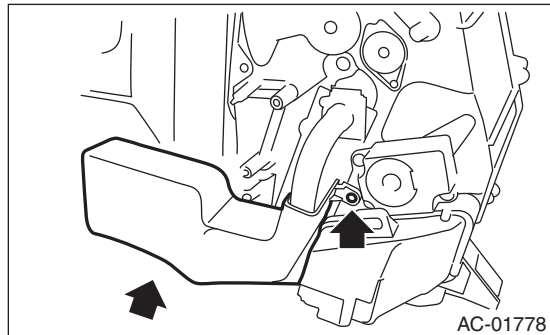


- 3) Remove the screws and detach the clamp.

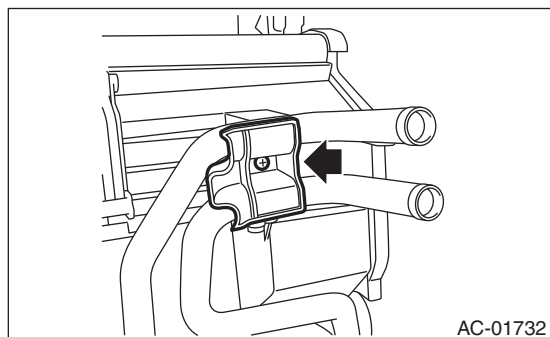


- 4) Remove the pipe clamp and detach the pipe.

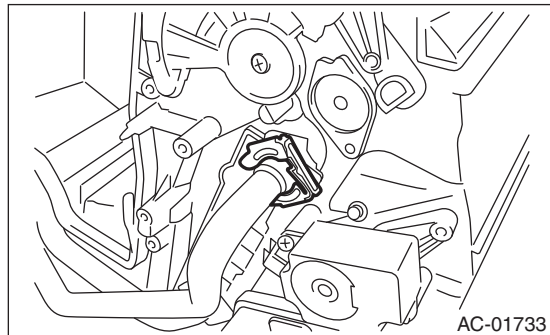

- 5) Remove the heater core cover.

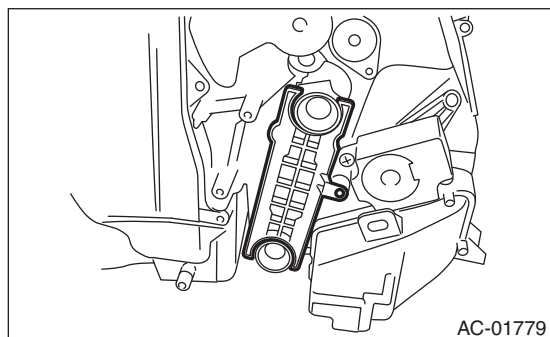

- 6) Remove the heater core.

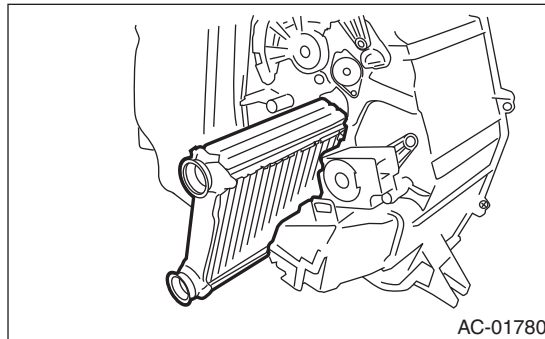

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Replace the O-rings and pipe clamps with new parts, and attach securely.