


Control Unit (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


12. Control Unit (Manual A/C Model)

A: REMOVAL

- 1) Disconnect the battery ground cable from the battery.
- 2) Remove the ornament panel. <Ref. to EI-48, ORNAMENT PANEL, REMOVAL, Center Console.>
- 3) Remove the knee guard panel.
- 4) Remove the control wires from both sides of the heater and cooling unit.

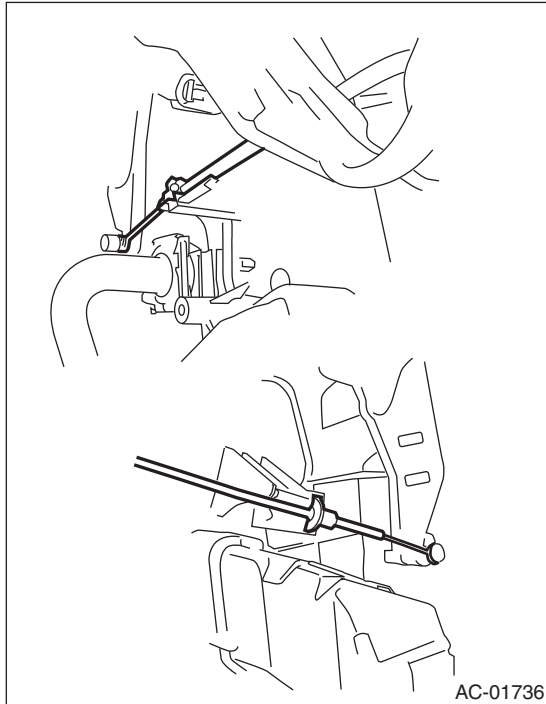

- 5) Remove the screw and claw to detach the control unit from the ornament panel RH.

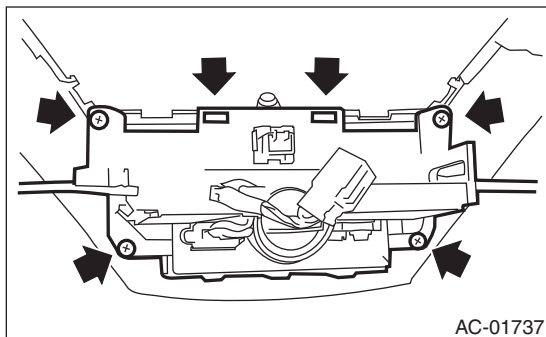

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Assemble the plate at the end of control wires to the heater case securely.