


22.Sunload Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the audio. <Ref. to ET-6, REMOVAL, Audio.>
- 3) Push out the sunload sensor from the back side of the instrument panel.

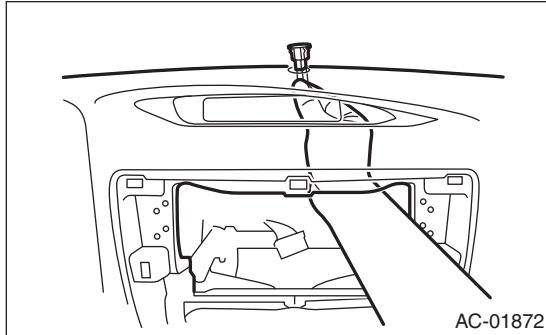

- 4) Disconnect the connector, and remove the sunload sensor.

CAUTION:

Be careful not to damage the interior trims when removing the sensor.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC(diag)-35, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>