



7. Blower Motor Unit Assembly

A: REMOVAL

- 1) Disconnect the battery ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-49, INSTRUMENT PANEL LOWER, REMOVAL, Center Console.>
- 3) Remove the protect cover of ECM.

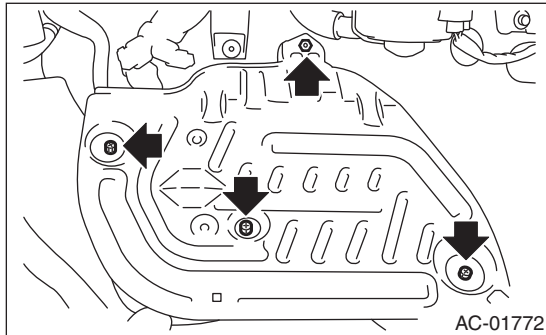

- 4) Disconnect the connectors of the intake door actuator and blower motor.
- 5) Remove the relay holder.
- 6) Loosen the bolt and nut to remove blower motor unit assembly.

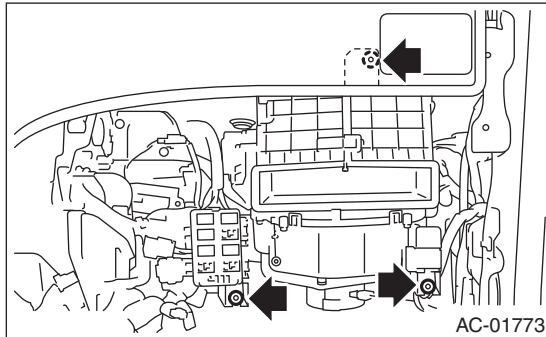

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

***Refer to “COMPONENT” of “General Description”. <Ref. to AC-4, HEATER COOLING UNIT, COMPONENT, General Description.>
<Ref. to AC-6, BLOWER MOTOR UNIT, COMPONENT, General Description.>***