


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

8. Blower Motor

A: REMOVAL

- 1) Disconnect the battery ground cable from the battery.
- 2) Disconnect the connector of the blower motor.
- 3) Turn up the floor mat near the blower motor.
- 4) Loosen the screw to remove the blower motor.

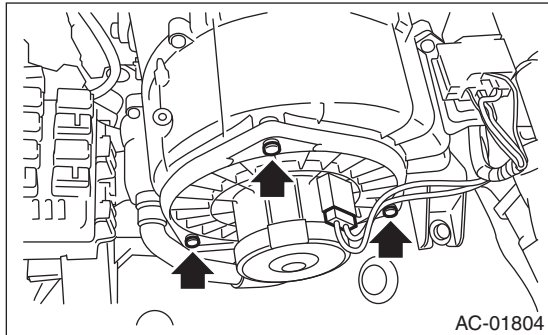

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Connect the battery positive (+) terminal to terminal No. 2 of blower motor connector, and negative (–) terminal to terminal No. 1. Check the blower motor for smooth rotation.

