

A - Check and Adjust I - Inspect
L - Lubricate R - Renew
T - Tighten

[illegible]

Front axle drive shaft boots (1)																				
Front axle drive shaft bolts (1)				T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Differential oil : SAE 90, API GL5. 2.7Litres-Rr, 1.9Litres-Fr					I		R		I		R		I		R		I		R	
Wheel bearing grease (4)					R		R		R		R		R		R		R		R	
Front and rear suspension (1)					I		I		I		I		I		I		I		I	
Brakes																				
Brake pedal and handbrake operation					I		I		I		I		I		I		I		I	
Brake fluid : Dot 3 brake fluid		I		I		I	R		I		I	R		I		I	R		I	
Brake pads, discs and calipers (1)				I		I	I		I		I		I		I		I		I	
Rear brake linings and drums (5)							I				I				I				I	
Brake pipes and hoses including booster hose (1)					I		I		I		I		I		I		I		I	
Vacuum pump hose					I		I		I		I		I		I		I		I	
Electrical System																				
Battery electrolyte, terminals and mountings					I		I		I		I		I		I		I		I	
Lamps, horn wipers and washers					I		I		I		I		I		I		I		I	
Body																				
Chassis and body nuts and bolts (1)													T							
Bonnet, doors, locks and hinges						L			L			L			L			L		
Seal belts, retractors and anchors						I		I	I		I		I		I		I		I	
Underbody condition					I		I		I		I		I		I		I		I	
Ventilation																				
Operation of A/C for 5 minutes		I																		
A/C condenser, lines and refrigerant level						I		I		I		I		I		I		I		
A/C evaporator drain tube							I				I				I				I	
Wheels and Tyres																				
Tyre pressures					I		I		I		I		I		I		I		I	
Tyre and wheel condition					I		I		I		I		I		I		I		I	
					10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160
		Weekly			6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96
					KM x 1000															
					Months															
1. Halve the specified service interval under severe conditions.																				
2. Lubricate within 24 hours of driving through water.																				
3. Renew transfer case and transmission lubricant at 40 000 km or every 24 months when driving continuously at high speed for more than 2 hours or when towing a trailer.																				
4. Include lubrication of the front drive shaft bearing and bush and the front ball joints when lubricating the front wheel bearings.																				
5. Reduce the service interval to 10 000 km or every 6 months under severe conditions.																				