


Lincoln Town Car 1990 – 1997 (Second Generation) fuse box diagram

The Instrument Panel Fuses, Circuit Breakers and Relays

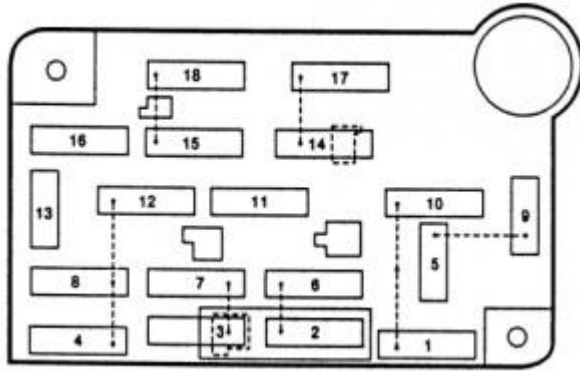


Lincoln Town Car Second Generation –

fuse box – instrument panel

Fuse/CB/Rel ay loc.	Fuse ampere rating	Description
1	15	Backup lamps, turn signal lamps, electronic automatic temperature control (EATC) module, brake shift lock solenoid. heater seat
2	30	Wiper/washer controller module, windshield wiper motor
3	5	Alternator monitor
4	10	Lighting control module (LCM)
5	15	Ignition coils, powertrain control module (PCM) power relay
6	10	Front radio control unit, clock, cellular phone, compass module, lighting control module (ICM), electronic day/night mirror

7	15	Air bag diagnostic, monitor, anti-lock brake module, instrument cluster, speed control amplifier, air suspension/EVO steering module, transmission control switch, warning indicators, steering wheel rotation sensor, electronic automatic temperature control (EATC), daytime running lamps
8	15	Trunk lid pull-down, CD changer, Power mirrors, keyless entry, memory seats, redundant steering control module, cellular phone
9	5	Front radio control unit, air bag diagnostic module, lighting control module (LCM), warning indicators
10	30	Electronic automatic temperature control (EATC) module
11	5	Left front seat module, left front door module
12	18 CB	Headlamps, lighting control module (LCM)
13	10	Rear window defrost/heated mirror
14	20 CB	Keyless entry, power seats, fuel fill door release, left front door module
15	15	Courtesy lamps, lighting control module (LCM), daytime running lamps, instrument panel illumination
16	15	Brake ON/OFF switch, hazard flasher, brake pressure switch
17	30	Cigar lighter
18	10	Instrument cluster, clock, front radio control unit, electronic automatic temperature control (EATC) module, on-board diagnostic (OBD) data link connector

High Current Fuses

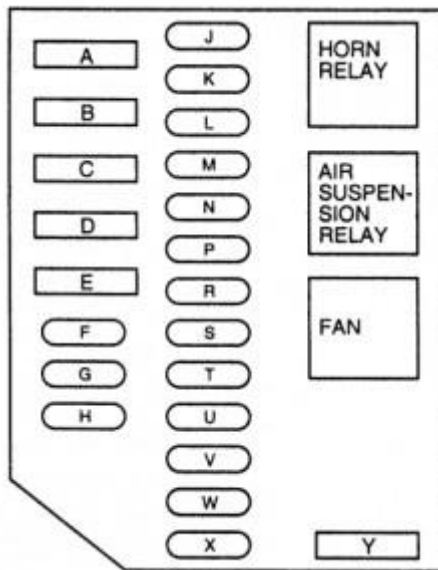

Lincoln Town Car Second Generation – high current fuse

Fuse	High current fuse amere rating	Description
A*	50	Lamps
B*	50	Anti-lock brake
C*	50	Ignition switch
D*	40	Heated mirrors, rear window defroster
E*	40	Ignition switch
G	—	Not used
H	—	Not used

J	10	Generator/voltage regulator
K	10	Air bag restraints
L	20	Horn
M	—	Not used
N	20	Fuel pump
P	30	Cooling fan
R	25	Radio amplifier
S	30	/heated seat
T	30	Powertrain control module (PCM)
U	30	Air suspension
V	—	Not used
W	—	Not used
X	—	Not used
Y	—	Not used