



Alfa Romeo 147 FL 2005 – 2010 fuse box diagram

Fuse box on dashboard

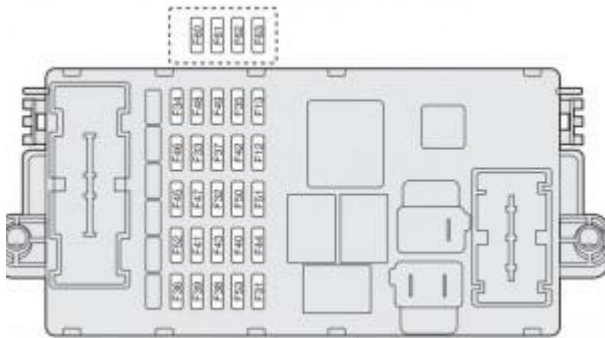


Alfa Romeo 147 – fuse box – dashboard

Fuse box next to battery

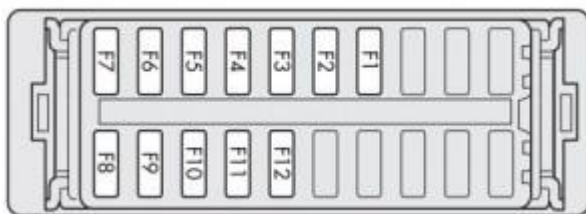

Alfa Romeo 147 – fuse box – battery

Fuse box on battery positive pole

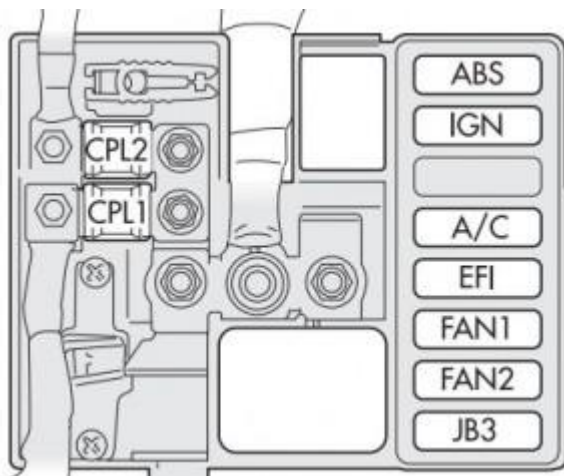

Alfa Romeo 147 – fuse box – battery

(positive pole)

Fuse summary table

Lights	Location	Fuse	Ampere rating [A]

Hazard warning light	Dashboard	F53	10
Right dipped-beam headlight	Dashboard	F12	10
Left dipped-beam headlight	Dashboard	F13	10
Main-beam headlight	Battery	F2	15
Foglight	Battery	F30	15
Braking light	Dashboard	F37	10
Reversing light	Dashboard	F35	7,5
+30 direction indicators	Dashboard	F53	10

Services	Figure	Fuse	Ampere rating [A]
Selespeed transmission pump	Battery (positive pole)		30
Ignition switch	Battery (positive pole)	IGN (MAXI-FUSE)	30
Headlight aiming device	Dashboard	F13	10
Climate control system	Dashboard	F31	7,5

Climate control system	Dashboard	F39	15
Climate control compressor	Battery	F1	7,5
Heater unit relay coils	Dashboard	F31	7,5
Key-operated +30	Dashboard	F32	15
Selespeed transmission	Battery	F11	15
Selespeed transmission	Dashboard	F51	7,5
Radio	Dashboard	F39	15
Navigator	Dashboard	F39	15
Rearscreen wiper	Dashboard	F52	15
Left rear power window	Dashboard	F33	20
Right rear power window	Dashboard	F34	20
Rearscreen heating	Dashboard	F40	30
Windscreen – rearscreen washer (two-way pump)	Dashboard	F43	30
Cigar lighter	Dashboard	F44	20
Seats with electric heating	Dashboard	F45	15

Heated wing mirrors – heated nozzles	Dashboard	F51	7,5
Cruise control	Dashboard	F35	7,5
Central door locking	Dashboard	F38	20
Headlight washer	Battery	F5	20
Services + 30	Dashboard	F39	15
Primary services (electronic injection)	Battery	F8	7,5
Secondary services (electronic injection)	Battery	F9	15
Secondary services	Dashboard	F49	7,5
Volumetric sensors	Dashboard	F39	15
VDC system sensor	Dashboard	F42	7,5
Steering angle sensor	Dashboard	F42	7,5
EOBD system diagnosis socket	Dashboard	F39	15
Cell phone provision	Dashboard	F39	15
Driver's door control unit supply	Dashboard	F47	20
Passenger's door control unit supply	Dashboard	F48	20

Controls lighting	Dashboard	F49	7,5
Climate control system controls lighting	Dashboard	F35	7,5
Instrument cluster	Dashboard	F37	10
Instrument cluster	Dashboard	F53	10
Driver's door control unit	Dashboard	F39	15
ABS control unit	Dashboard	F42	7,5
ABS control unit	Battery (positive pole)	ABS (MAXI-FUSE)	50
Dashboard control box	Battery (positive pole)	CPL2 (MAXI-FUSE)	50
Boot control unit	Dashboard	F39	15
Air – bag control unit	Dashboard	F50	7,5
Electronic injection control unit +30	Battery	F6	7,5
Dashboard control unit	Battery (positive pole)	CPL1 (MAXI-FUSE)	70
Climate control fan	Battery (positive pole)	A/C (MAXI-FUSE)	40

Radiator fan	Battery (positive pole)	FAN1 (MAXI-FUSE)	40
Radiator fan	Battery (positive pole)	FAN2 (MAXI-FUSE)	40
Horn	Battery (positive pole)	F3	15
Fuel pump	Battery	F4	15
Tailgate electric unlocking	Dashboard	F60(*)	25
Electronic injection system	Battery	F11	7,5
Bose system	Dashboard	F61(*)	25
Bose system	Dashboard	F62(*)	15
Sunroof	Dashboard	F63(*)	20
Sun roof	Dashboard	F46	15
Petrol/ignition coil injectors	Battery	F10	15
Services	Battery	F12	7,5
Electronic injection	Battery (positive pole)	EFI (MAXI-FUSE)	30

Engine compartment fuse carrier module	Battery (positive pole)	JB3 (MAXI-FUSE)	50
--	-------------------------	-----------------	----

(*) Fuse behind dashboard control box on an auxiliary bracket