

Cadillac CTS 2017 fuse box diagram

Engine compartment fuse block

The underhood fuse block is on the passenger side of the engine compartment.



Cadillac CTS – fuse box diagram – engine

compartment

Fuse	Usage
1	—
2	—
3*	Passenger motorized safety belt
4	—
5	—
6	Driver Power Seat
7	—
9	—
10	—
11	—
12	—
13	Passenger Power Seat
14	—
15	Passive entry/Passive start/Front wipers
16	—
17*	Headlamp Washer
18	—
19	ABS pump


20	ABS valve
21*	—
22	Driver motorized safety belt
26*	—
27	—/Heated Seat 2
28	—/Reverse lock out
29*	AFS AHL/Pedestrian protection
30	—
31	Passenger window switch
32	—
33	Sunroof
34	Front wiper
35	Steering column lock
36	RBEC/Ignition
37	—/MIL/Ignition
38	Aeroshutter
39	O2 sensor/Emissions
40	Ignition coil/Injectors
41	—/Ignition coil/Injectors
42*	Engine control module
43	—
44	—
45	Front Washer Relay
48	Instrument panel/Body/Ignition
49	FSCM/Ignition
50*	Heated steering wheel
51*	Engine control module/Ignition
52*	TCM/Ignition
53	Coolant pump
55	—
56*	TCM/—

64*	Automatic headlamp leveling
65*	Left HID headlamp
66	Right HID headlamp
67	High-beam headlamps
68	Headlamp leveling motor
69	Horn
71	Coolant fan
72	Starter 2
73*	Brake vacuum pump
74	Starter
75	A/C clutch
76	—
* Optional	

Relays	Usage
8*	Headlamp washer
23	Wiper control relay
24	Wiper speed
25	Engine control module
46	Rear washer
47	Front washer
54*	Coolant pump
57	Low-beam headlamp
58	High-beam headlamp
59	Run/Crank
60	Starter 2
61*	Vacuum pump
62	Starter
63*	A/C control
70	Horn
* Optional	

Instrument Panel Fuse Block

The instrument panel fuse block is in the end of the driver side of the instrument panel.

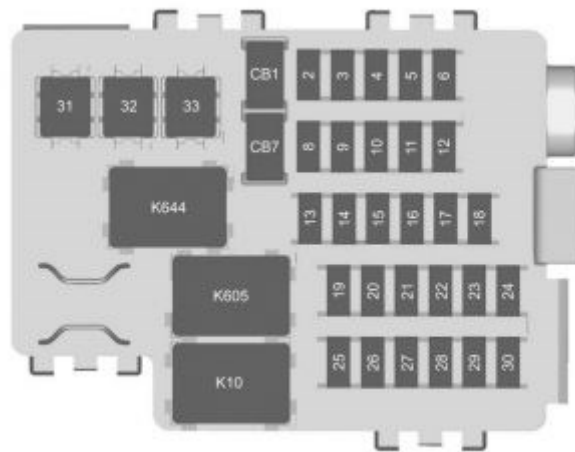

Cadillac CTS – fuse box diagram – instrument


panel

Fuses	Usage
2	Motorized cupholder
3	Electric steering column lock
4	—
5	HVAC control
6	Tilt/Telescoping steering column
8	Data link connector
9	Glove box release
10	Shunt
11	Body control module 1
12	Body control module 5
13	Body control module 6
14	—
15	Body control module 7
16	Transmission control module
17	—
18	—
19	Auxiliary power outlet
20	Lighter
21	Wireless charger
22	Sensing diagnostic module/ Automatic occupant sensing
23	Radio/DVD/HVAC control
24	Display
25	Heated steering wheel
26	Wireless Charger
27	Steering wheel switches
28	—
29	Visior
30	—

31	—
32	Retained accessory power
33	Front HVAC blower
CB1	Accessory power outlet
CB7	—
K10	Retained accessory power
K605	Logistics
K644	Retained accessory power/Glove box release

Rear Compartment Fuse Block

The rear compartment fuse block is behind a cover on the driver side of the rear compartment.

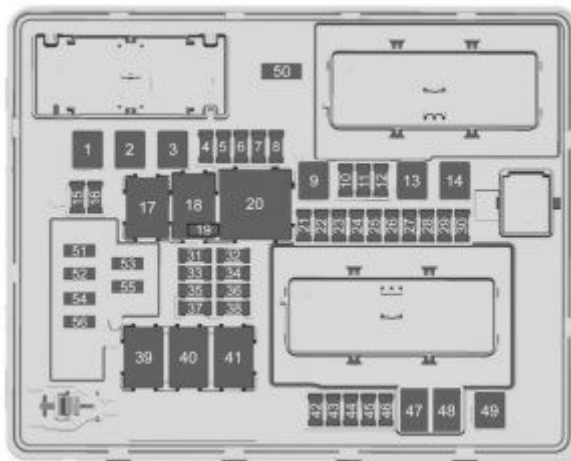

Cadillac CTS – fuse box diagram – rear

compartment

Number	Usage
1*	Rear driver control module/DC DC transformer
2	Left Window
3	Body Control Module 8
4*	A/C Inverter
5	Passive entry/Passive start/Battery 1
6	Body Control Module 4
7	Heated Mirrors
8	Amplifier
9	Rear Defogger
10	Glass Break
11*	Trailer Connector
12	OnStar (If Equipped)
13	Right Window
14	Electric Parking Brake

15	—
16	Trunk Release
17*	Run Relay
18*	Logistics Relay
19*	—
20	Rear Window Defogger Relay
21	Mirror Window Module
22	—
23	Canister Vent
24	Body control module 2
25*	Rear Vision Camera
26*	Front Ventilated Seats
27*	SBZA/LDW/EOCM
28*	Trailer/Sunshade
29*	Rear Heated Seats
30*	Semi-Active Damping System
31*	Traction control module/Rear control drive module
32	Theft deterrent module/Universal garage door opener/Rain sensor
33*	UPA
34*	Radio/DVD
35	Exhaust valve
36*	Trailer
37	Fuel Pump/Fuel System Control Module
38	Fuel pump
39	—
40	Exhaust valve
41	Run/Crank 2
42*	Memory Seat Module
43	Body Control Module 3
44	—
45	Battery Regulated Voltage Control
46	Engine Control Module Battery
47	—
48	—
49*	Trailer Module

50	Door Lock Security
51	Rear Closure Release
52	Rear closure
53	—
54	Door Lock Security
55	—
56*	Fuel Door
* Optional	