



Pocket Reference Guide

enter

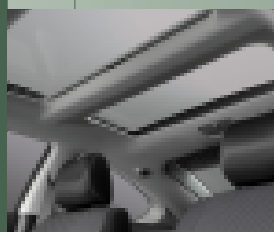

2005

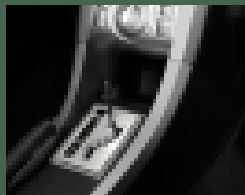

tC

s, U.S.A., Inc.

2005 tC

This *Pocket Reference Guide* is a summary guide for basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new tC.

! A word about safe vehicle operations

This *Pocket Reference Guide* is not a full guide to tC operations. Every tC owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Scion reserves the right to make changes at any time without notice.

Tire pressure

The tire pressure monitoring system provides a warning when the tire pressure in the tires is critically low while the vehicle is moving.

Refer to your Owner's Manual for more information.

Spare tire

Tool location



- 1 Wheel nut wrench
- 2 Towing eyelet
- 3 Jack handle
- 4 Spare tire
- 5 Jack

Removing the spare tire



- 1 Remove the spare tire
- 2 Loosen the bolt

Refer to your Owner's Manual for more information and procedures.

 



TABLE OF CONTENTS

Item	Page no.
OVERVIEW	
Engine compartment	7
Fuel tank door opener	6
Hood release lever	6
Indicator symbols	4-5
Instrument cluster	4-5
Instrument panel	2-3
FEATURES/OPERATIONS	
Air conditioning/Heating system	14
Automatic transmission	8
Clock	14
Cruise control	12
Cup holders	13
Lights & turn signals	10
Outside temperature display	14
Panorama moonroof	9
Parking brake	10
Power outlet	11
Remote keyless entry	13
Seat adjustments-Front	8
Seat adjustments-Rear	9
Seats-Head restraints	9
Tilt steering wheel	11
Windows	12
Windshield wiper & washer	11
SAFETY AND EMERGENCY FEATURES	
Airbag-Supplemental Restraint System	15-16
Seat belts	15
Spare tire & tools	17
Tire pressure warning system	17

OVERVIEW


FEATURES/OPERATIONS

 SAFETY AND EMERGENCY FEATURES





OVERVIEW

Instrument panel

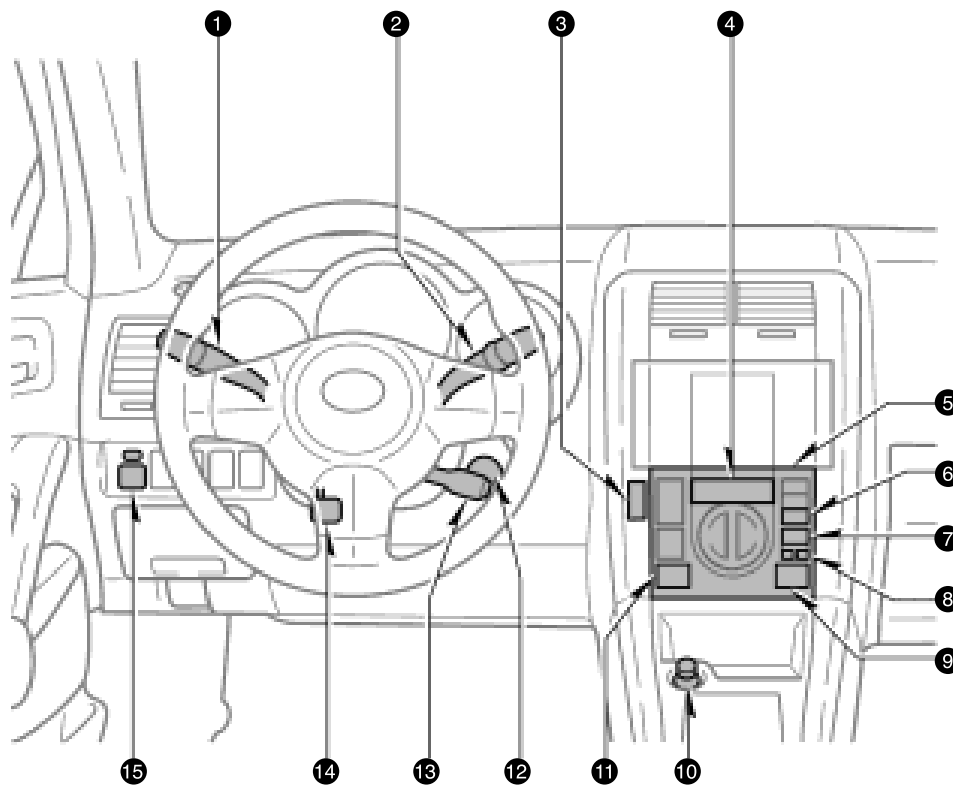


- | | |
|---|--|
| ① Headlight and turn signal switches | ⑬ Cruise control switch |
| ② Wiper and washer switches | ⑭ Tilt steering lock release lever |
| ③ Emergency flasher switch | ⑮ Power rearview mirror control switches |
| ④ Clock, air conditioning and outside temperature display | |
| ⑤ Air conditioning controls | *If installed |
| ⑥ Rear window defogger switch | |
| ⑦ Outside temperature switch | |
| ⑧ Clock adjustment switch | |
| ⑨ Front passenger's seat belt reminder light | |
| ⑩ Cigarette lighter* | |
| ⑪ Engine immobilizer system indicator light | |
| ⑫ Ignition switch | |

 

 

OVERVIEW

Instrument cluster

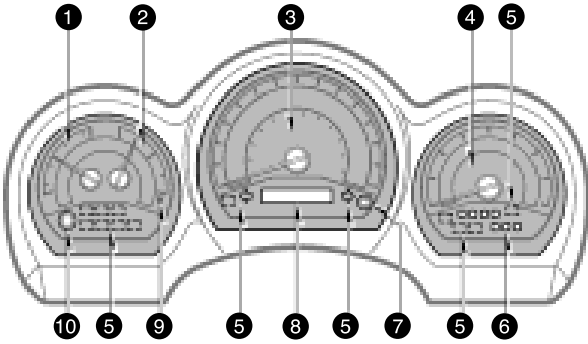

- 1 Engine coolant temperature gauge
- 2 Fuel gauge
- 3 Speedometer
- 4 Tachometer
- 5 Service reminder indicators and indicator lights
- 6 Automatic transmission shift range position display
- 7 Trip meter reset knob
- 8 Odometer and two trip meters
- 9 Low fuel level warning light
- 10 Instrument panel light control knob

Indicator symbols

- BRAKE

Brake system warning light¹
- Driver's seat belt reminder light¹
- PASSENGER

Front passenger's seat belt reminder light¹
- Battery warning light¹
- Malfunction indicator light¹
- Low engine oil pressure warning light¹
- ABS

Anti-lock brake system warning light¹

- Open door warning light¹
- Airbag SRS warning light¹
- Low tire pressure warning light¹
- MAINT

REQD

Engine oil replacement reminder light¹
- Turn signal indicator light
- Headlight high beam indicator light
- CRUISE


Cruise control indicator light²


CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2005 Owner's Manual.


² If this light flashes, refer to "Cruise control," Section 1-7, 2005 Owner's Manual.

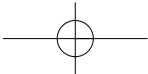

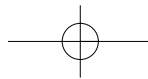


OVERVIEW

Fuel tank door opener

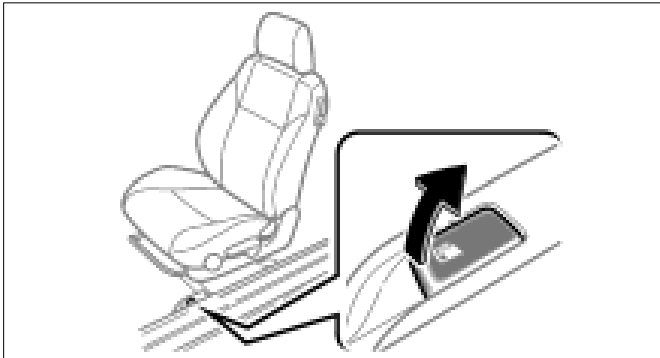


To open the fuel tank door Pull up on the opener.

Hood release lever

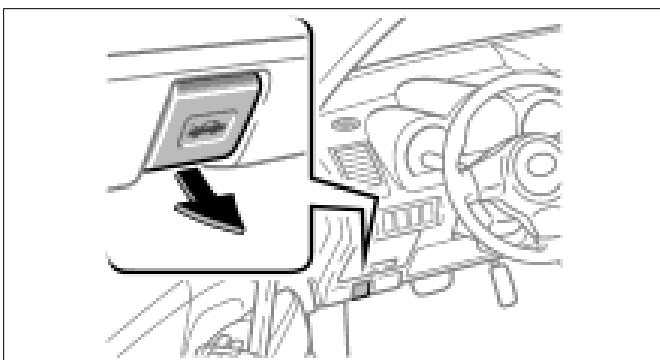


To open the hood Pull the lever inside vehicle.


Engine compartment

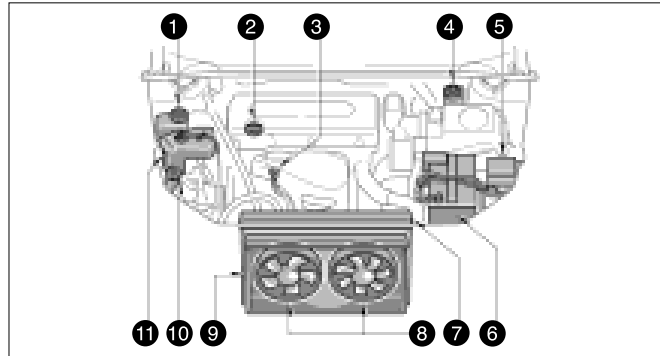

- ❶ Power steering fluid reservoir
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Brake fluid reservoir
- ❺ Fuse block
- ❻ Battery
- ❼ Radiator
- ❽ Electric cooling fans
- ❾ Condenser
- ❿ Windshield washer fluid tank
- ⓫ Engine coolant reservoir


Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

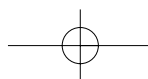

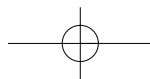

FEATURES/OPERATIONS

Automatic transmission

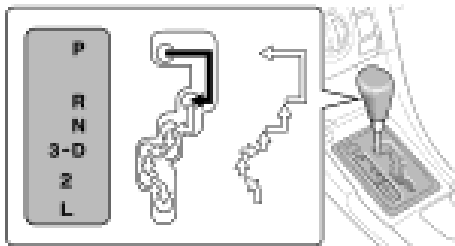


- P** Park Engine starting and key removal
- R** Reverse
- N** Neutral
- D** Drive Overdrive on*
- 3** Third gear Overdrive off
- 2** Second gear Increased engine braking
- L** First gear Maximum engine braking

↓ With the brake pedal depressed (the ignition switch must be in the "ON" position).

↕ Shift normally.

*Downshifting increases power going uphill, or provides engine braking going downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Seat adjustments-Front

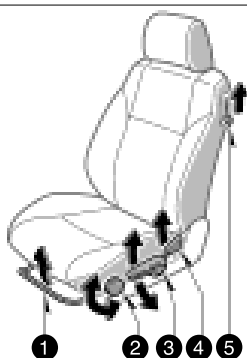

- 1** Seat position adjusting lever
- 2** Seat cushion angle adjusting knob (for driver's seat)
- 3** Seat height adjusting lever (for driver's seat)
- 4** Seatback angle adjusting lever
- 5** Seatback lock release lever


8

Seat adjustments-Rear

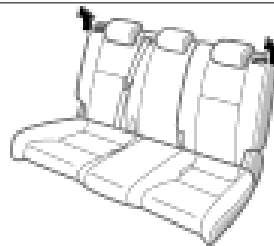

To adjust seatback angle Lean forward and pull the lever toward you. Then lean back to the desired angle and release the lever.

Seats-Head restraints

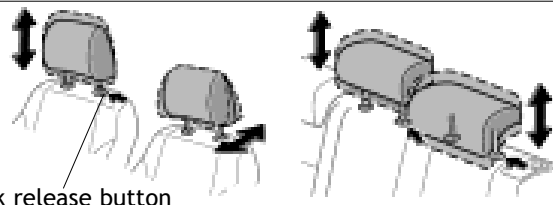


To raise Pull up the head restraint.

To lower Push down the head restraint while pressing the lock release button.

Driver's head restraint Push forward or pull backward.


Panorama moonroof

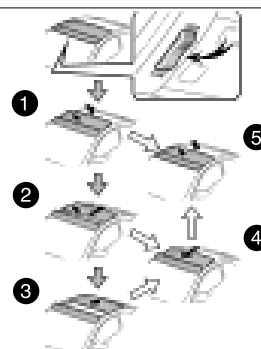


- 1** To tilt up Push "OPEN."
- 2** To open halfway Push "OPEN" again.
- 3** To open fully Push "OPEN" one more time.
- 4** To close Push "CLOSE."
- 5** To lower Push "CLOSE."

Refer to your *Owner's Manual* for more details.


9

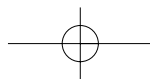

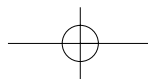

FEATURES/OPERATIONS

Parking brake

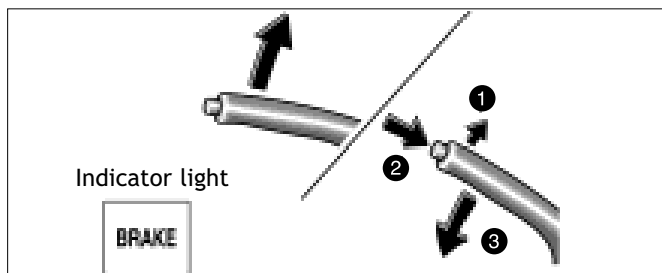


To set Pull the lever.

To release Pull the lever up slightly, press the lock release button, and lower.


Lights & turn signals

Headlights

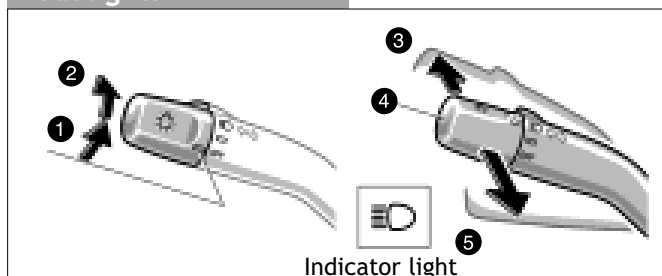


- ① **Parking, tail, license plate, side marker and instrument panel lights** Twist the lever knob to position 1.
- ② **Headlights and all of the above** Twist the lever knob to position 2.
- ③ **High beams** Push the lever.
- ④ **Low beams**
- ⑤ **Headlight flasher** Pull the lever.

Turn signals

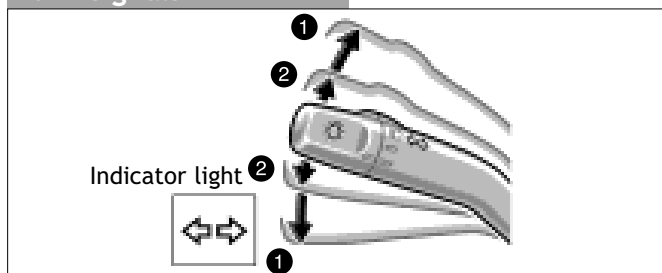


- ① **Right or left turn** Push the lever up or down.
- ② **Lane change** Move the lever up or down to position 2 and hold.

Windshield wiper & washer

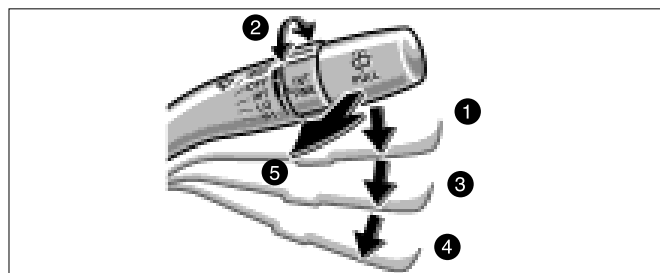

- ① **Intermittent speed** Push the lever down to position 1.
- ② **Interval adjuster** Twist the band to adjust the intermittent speed.
- ③ **Slow speed** Push the lever down to position 3.
- ④ **Fast speed** Push the lever down to position 4.
- ⑤ **Washer fluid** Pull the lever toward you.



Tilt steering wheel

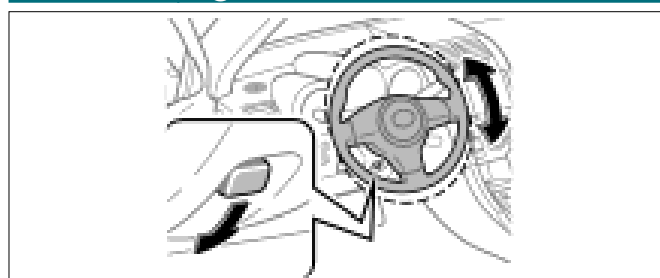


To change the steering wheel angle Hold the steering wheel, push the lock release lever down, tilt to the desired angle, and return the lever to its original position.

Note: Do not attempt to adjust while the vehicle is in motion.

Power outlet

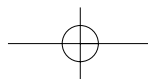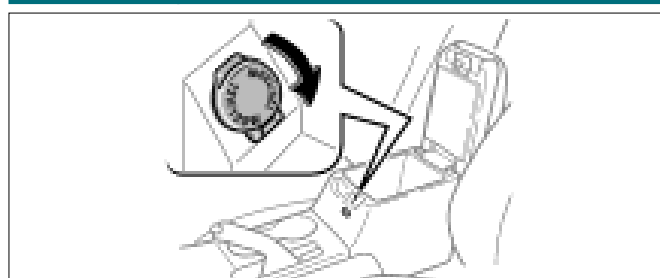


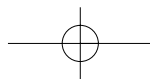

FEATURES/OPERATIONS


Cruise control

Turning the system on and off

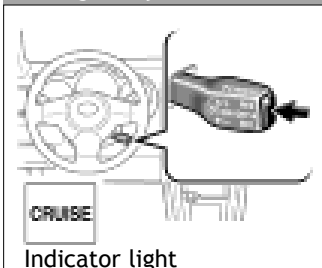

Indicator light

Setting a speed

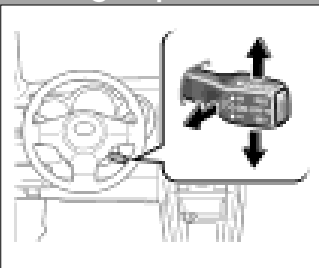

To turn the system on Press "ON-OFF" button.

To set a speed Bring your vehicle to the desired speed. Push the lever down toward "- SET."


To resume a preset speed Push the lever up toward "+ RES."

To cancel the preset speed

- Pull the lever to "CANCEL."
- Depress the brake pedal.
- Depress the clutch pedal (manual transmission).
- Push "ON-OFF" button.

Refer to your *Owner's Manual* for more details.

Windows

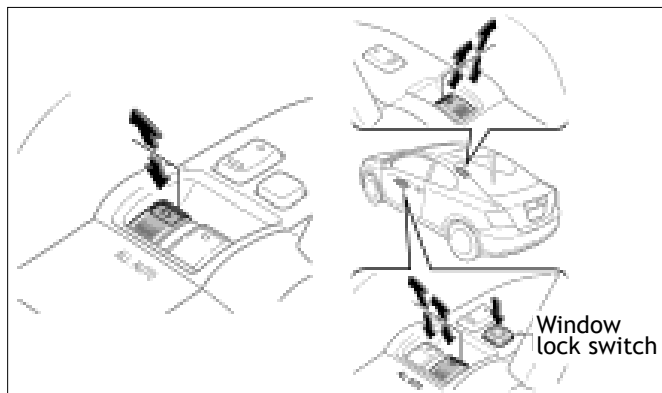


Window operation

To open or close Push down or pull up on the switch.

To fully open or close Push the switch completely down or pull it completely up and release.


Window lock switch

Push the switch to deactivate passenger window.

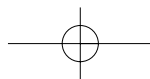


Remote keyless entry

Locking operation

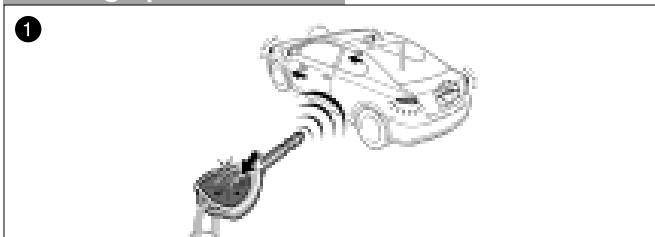


Unlocking operation

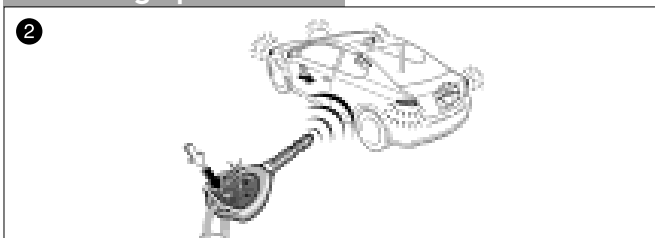

- ① To lock Push "🔒."
- ② To unlock driver door Push "🔓" once.
To unlock all the doors Push "🔓" twice.

Panic switch

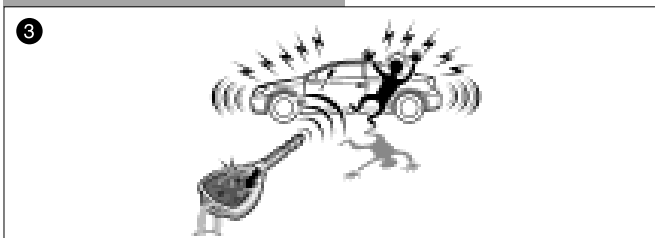


- ③ Panic switch operation Push "🚨."


Refer to your *Owner's Manual* for more details.


Cup holders

Front

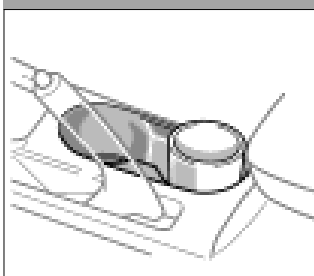

Rear

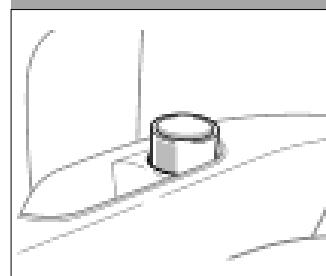

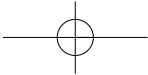

FEATURES/OPERATIONS


Air conditioning/Heating system



- 1 Fan speed selector
- 2 "OFF" button Air conditioning off button.
- 3 "A/C" button Air conditioning system on/off button.
- 4 Air intake selector
- 5 "MODE" button Air flow selector.
- 6 Windshield air flow button
- 7 Temperature selector

To select air flow vents


Turn the air flow selector to select one of the following:

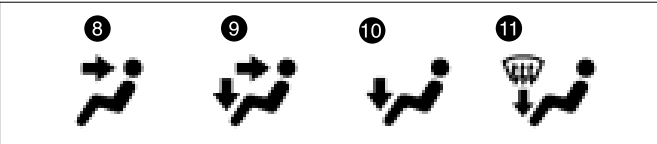


- 8 Instrument panel vents
- 9 Floor and panel vents
- 10 Floor vents
- 11 Floor and windshield vents

Refer to your *Owner's Manual* for more details.

Clock

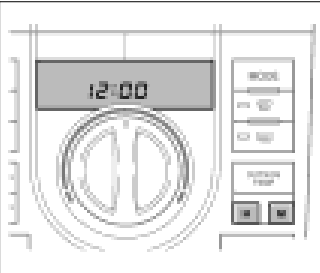


Outside temperature display

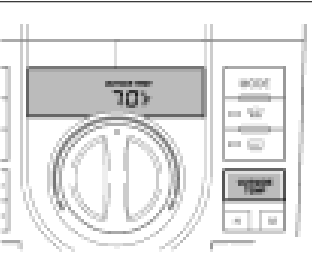

Refer to your *Owner's Manual* for more details.

SAFETY AND EMERGENCY FEATURES

Seat belts

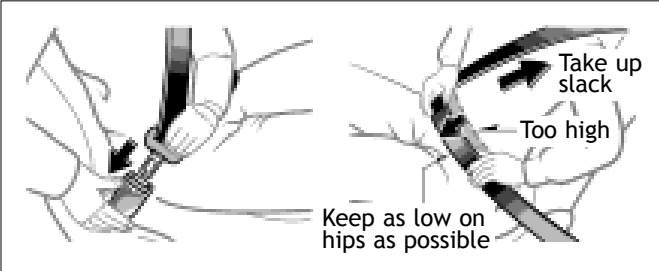

Refer to your *Owner's Manual* for more details.


To install a child restraint system Refer to your *Owner's Manual* for more details.

Airbag-Supplemental Restraint System

The Airbag Supplemental Restraint System (SRS) front, side* and side curtain* airbags are designed to help provide further protection for the driver and outboard passenger in addition to the primary safety protection provided by the seat belts.

Please read the following caution boxes, and refer to your *Owner's Manual* for more details.

*If installed

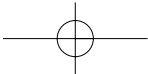

CAUTION

- The driver and front passenger airbag Supplemental Restraint System (SRS) is designed only as a supplement to the primary protection of the seat belt systems of the driver and front passenger. The front seat occupants are particularly susceptible to injury if they do not wear their seat belts; when sudden braking or a collision occurs, they may be thrown forward. To obtain maximum protection in an accident, the driver and all passengers in the vehicle should always wear their seat belts when driving because serious injuries or death can result to unrestrained occupants. For instructions and precautions concerning the seat belt system, see "Seat belts" in the Owner's Manual.
- Scion strongly urges the use of a proper child restraint system on the rear seat that conforms to the size of the child. According to accident statistics, a child is safer when properly restrained in the rear seat than in the front seat.
- Never use a rear-facing child restraint system in the front seat. The force of the rapid inflation of the passenger airbag can cause severe injury or death to a child.
- Unless it is unavoidable, do not install a forward-facing child restraint system on the front seat. If you must install a forward-facing child restraint system on the front seat, move the seat as far back as possible.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and the system is properly secured.

CAUTION

- The SRS side and side curtain airbags (optional) are designed to deploy in certain types of severe side impact collisions. In all other collisions, the side and side curtain airbags will not deploy. For instructions and precautions, see your Owner's Manual.
- Do not lean against the side doors when the vehicle is in use. The side and side curtain airbags inflate with considerable speed and force. Death or serious injury could result.
- Do not modify, cover or replace the surface of the front seats. Such changes could disable the system or prevent the airbags from activating correctly, resulting in death or serious injury.

a summary
ns. It contains
al operations
ehicle's main

not intended
Manual
box. We
w the *Owner's*
uals so you
g of your
tions.

staff of Scion,
, U.S.A., Inc.,
d driving in

Operations

s not a full
C owner
Manual that

boxed
low
al.
ing
injury or

Reference
f printing.
ke changes


Tire pressure warning system

The tire pressure monitor is designed to provide warning when tire pressure of any one of the tires is critically reduced while the vehicle is moving.

Refer to your *Owner's Manual* for more details.


Spare tire & tools

Tool location

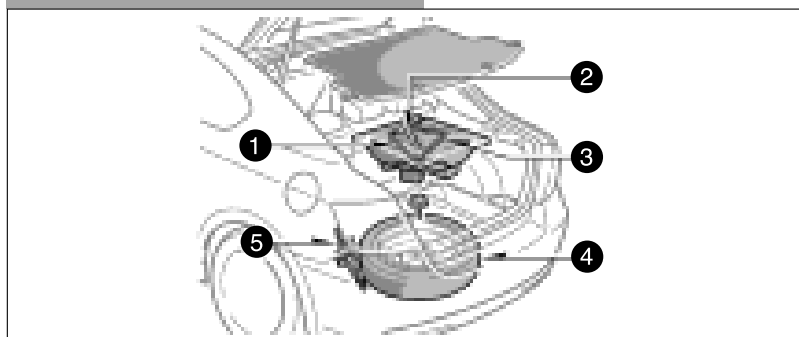


- ❶ Wheel nut wrench
- ❷ Towing eyelet
- ❸ Jack handle
- ❹ Spare tire
- ❺ Jack

Removing the spare tire

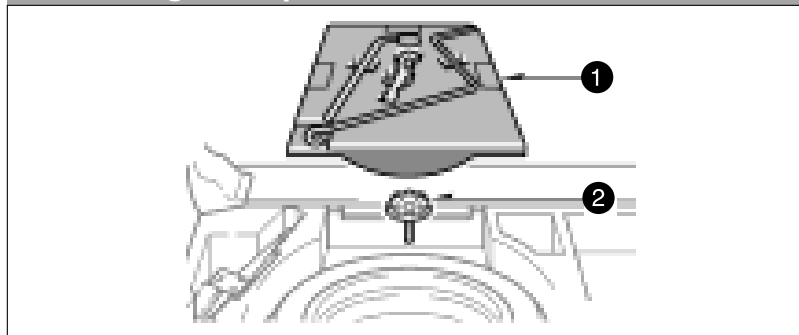

- ❶ Remove the spare tire cover.
- ❷ Loosen the bolt, then remove it.


Refer to your *Owner's Manual* for tire changing procedures.

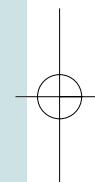

Pocket

Scion Customer Assistance Center
1-866-70-Scion

Or visit our web site at
www.scion.com

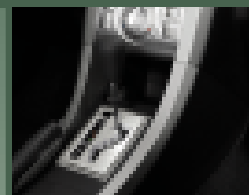

Scion, a marque of Toyota Motor Sales, U.S.A., Inc.
00452-PRG05-TC