

Maintenance service – 240

240	km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Automatic gearbox lever - check shift lock	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A1
Parking brake - check/adjust	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A2
External lighting - check	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A3
Wash/wipe on windscreen and headlamps - check/adjust	Replace flame trap. Clean nipples and hoses. Check from above	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A4
Kickdown wire - check/adjust			x		x		x		x		x		x		x		x		x		x	A6
Crankcase ventilation - clean							x		x		x		x		x		x		x		x	A7
Engine - check for leakage		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A8
<i>Raise the car</i>																						
Engine/transmission - check for leakage	Check from underneath. Check gearbox level only if there is a leak	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B1
Drain engine oil and replace oil filter	Diesel: Oil change every 7,500 km (5,000 miles). Oil and filter change every 15,000 km (10,000 miles)	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B2
Automatic gearbox - drain the oil					x				x				x				x				x	B3
Clutch - check/adjust			x		x		x		x		x		x		x		x		x		x	B4

240		km x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Tyres - check	Check for damage and wear	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B7
Brake linings* - check	Min. lining thickness: Front 3 mm, rear 2 mm	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B8
Brake hoses - check for leakage/damage					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B9
Brake & fuel lines - check for leakage/damage					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B10
Fuel filter - petrol - replace								x							x								B11
Fuel filter - diesel - drain condensate - replace	Note! Every 7,500 km (5,000 miles)			x			x			x			x			x			x				B12 B13
Final drive - check for leakage	Check level only in case of leakage	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B14
Exhaust system - check condition/ for leakage/anchorage		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B15
<i>Lift the front wheels</i>																							
Steering system/front wheel suspension - check/tighten - check for wear	Incl. check/adjustment of wheel bearings and check of shock absorbers	x			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C1 C2
Propeller shaft, support bearing trunnion block - check for wear					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C3
Rear wheel suspension - check/tighten - check for wear	Incl. shock absorbers	x			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C4 C5

* Check disc brake thickness when replacing brake linings! See book 2.

240	km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Corrosion protection/ paintwork* - check			x		x		x		x		x		x		x		x		x		x	C6
<i>Lower the car</i>																						
Air filter Petrol engines - replace					x				x				x				x				x	D1
Air filter Diesel engines - replace			x		x		x		x		x		x		x		x		x		x	D1
Spark plugs - replace	See spec. pg. 7. F-engines E/G-engines			x			x			x			x			x			x			D2
Valves - check/adjust clearance		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D2
Top up engine oil				x					x				x				x					D3
Automatic gearbox - top up oil	See spec. pg. 6	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D4
Fluid levels - engine compartment - check/adjust	Engine cooling system, brake and power steering reservoirs and washer reservoir				x				x				x				x					D5
Coolant - check/top up	Anti-freeze rating/ Corrosion prot.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Battery - check level/attachment		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D7
Distributor - lubricate	Only B 200-230 E		x		x		x		x		x		x		x		x		x		x	D8
Auxiliary drive belt - check/adjust			x		x		x		x		x		x		x		x		x		x	D9

* Markets with anti-corrosion warranty: Insp. of rust-proofing after 3 and 6 years, see service bulletin no. 1 - 18 - 6

240	km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Camshaft belt - replace - check/tighten	Petrol (15,000 km (10,000 miles) after belt replacement)	x				x	x				x	x				x	x				x	D11 D13
Camshaft belt, pump belt, idler roller replace	Diesel								x								x					D14
EGR system - clean	Only B 230 FD						x						x						x			D17
CO idle - check/adjust	Petrol Not F-engines	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D18
Doors, bonnet - lubricate hinges, bonnet lock	Lubricate also door stop, lock lugs and locks	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D19
Power antenna - clean	Rec. at every service																					D21
Brake fluid - replace	Rec. to customer every alternate year *																					

* If the car is driven in mountainous areas or a moist climate, the brake fluid should be replaced every year.

Maintenance service – 400

400	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Automatic gearbox lever,- check	Check when driving into workshop	x		x		x		x		x		x		x		x		x		x		A1
Parking brake - check/adjust	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A2
External lighting - check	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A3
Wash/wipe on windscreen and headlamp - check/adjust		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A4
Clutch - check/adjust		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A5
Kickdown wire - check/adjust		x		x		x		x		x		x		x		x		x		x		A6
Crankcase ventilation - clean	D 19: Remove upper cover						x			x			x			x			x			A7
Engine/gearbox - check for leakage		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A8
Raise the car																						
Engine/gearbox - check for leakage	Oil level transmission only if there is leakage	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B1
Drain engine oil and replace oil filter	Diesel *	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B2
* Extra oil change (not filter) every 7,500 km (5,000 miles). Note! Factory-fitted oil filter replaced at 7,500 km (5,000 miles).																						
Automatic gearbox - drain the oil				x			x			x			x			x			x			B3
Driveshafts - check clearance					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B5
- check rubber gaiters		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B6
Tyres - check	Check for damage and wear	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B7

* Check disc brake thickness when replacing brake linings! See book 2.

** Markets with anti-corrosion warranty: Inspection of rust-proofing after 3 and 6 years, see service bulletin **1 - 18 - 401**.

400	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Air filter - replace	Petrol engines			x			x			x			x			x			x		x	D1
	Diesel engines		x		x		x		x		x		x		x		x		x		x	D1
Spark plugs - replace	See spec. pg. 7			x			x			x			x			x			x			D2
Valves - check/adjust clearance	LPG-fuel: 30,000 km (20,000 miles) interval					x					x					x					x	D3
Top up engine oil	See spec. pg. 6.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D4
Automatic gearbox - top up oil				x			x			x			x			x			x			D5
Fluid levels - engine compartment - check/top up	Engine cooling system, brake and power steering reservoirs and washer reservoir	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Coolant - check/top up	Anti-freeze rating/ Corrosion prot.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Battery - check level		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D7
Auxiliary drive belt - check/adjust belt tension	Multi-track belt	x		x		x		x		x		x		x		x		x		x		D9
Camshaft/auxiliary unit belt - replace	Standard and multi-track belt						x						x						x			D12

400	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Self-diagnostic system - read off fault codes	Engines with FENIX fuel system	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D15
CO - idle* - check/adjust	Carburettor engines Injected engines (not F-engines)	x	x x	x	x x	x	x x	x	x x	x	x	x	x	x	x x	x	x x	x	x x	x	x x	D18
Doors, bonnet - lubricate hinges, bonnet lock	Incl. door stopper, lock lugs and locks	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D19
Power antenna -clean	Rec. to customer at every service																					
Brake fluid** - replace	Should be replaced every alternate year																					

* B 18 K with AC: Check/adjust idle speed compensator.
** If the car is driven in mountainous areas or a moist climate, the brake fluid should be replaced every year.

Maintenance service – 700/940/960

700/940/960	Km x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300		
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240		
	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200		
Automatic gearbox lever - check shift lock	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A1	
Parking brake - check/adjust	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A2	
External lighting - check function	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A3	
Wash/wipe on windscreen and headlamps - check/adjust	Not AW 30-43	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A4	
Kickdown wire - check/adjust			x		x		x		x		x		x		x		x		x		x	A6	
Crankcase ventilation - clean		Clean nipples and hoses. Replace flame trap. Turbo has no flame trap.						x		x		x		x		x		x		x		x	A7
Engine - check for leakage		Check from above	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A8
Raise the car																							
Engine/gearbox - check for leakage	Check from underneath. Check gearbox oil level only in case of leakage	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B1	
Drain engine oil and replace oil filter	Diesel: Oil change every 7,500 km. Oil and filter replacement every 15,000 km Petrol turbo engine: A first oil change (not filter) at 5,000 km (3,000 miles).	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B2	
Automatic gearbox - drain the oil	Not AW 30-43 *				x				x				x				x				x	B3	
*On cars with AW 30-43 in continuous taxi traffic or frequently towing trailers, change oil every 75,000 km (50,000 miles).																							

*On cars with AW 30-43 in continuous taxi traffic or frequently towing trailers, change oil every 75,000 km (50,000 miles).

700/940/960	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Tyres - check	Check damage and for wear	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B7
Brake linings - check	Min. lining thickness *: Front 3 mm, rear 2 mm	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B8
Brake hoses - check for leakage/damage					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B9
Brake/fuel line - check for leakage/damage					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B10
Fuel filter - petrol - replace								x							x							B11
Fuel filter - diesel - drain condensate - replace	Note! Every 7,500 km (5,000 miles)			x			x			x			x			x			x			B12 B13
Final drive - check for leakage	Check level only in the event of leakage	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B14
Exhaust system - check condition/ check for leakage, anchorage		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B15
<i>Lift the front wheels</i>																						
Steering system/front wheel suspension - check/tighten - check for wear	Does not apply to 960 Including shock absorbers	x			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C1 C2
Propeller shaft, support bearing, trunnion block - check for wear					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C3
Rear wheel suspension - check/tighten - check for wear	Does not apply to the 960 Including shock absorbers	x			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	C4 C5
Corrosion protection/paintwork** - check	Applies to model years - 1994		x		x		x		x		x		x		x		x		x		x	C6

* Check disc brake thickness when replacing brake linings! For measurement of front lining thickness see the method in book 2.

** Markets with anti-corrosion warranty: Inspection of rust-proofing after 3 and 6 years, see SB 1-18-1.

700/940/960		Km x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Lower the car																							
Air filter - replace	Petrol engines				x					x				x				x				x	D1
	Diesel Engines			x				x			x			x			x			x			D1
Spark plugs - replace	See spec. pg. 7.																						
	F-engines			x				x			x			x			x			x			D2
Valves - check/adjust clearance	E/G-engines	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D2
	Not 4-valve engines			x					x				x				x				x		D3
Top up engine oil	See spec. pg. 6.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D4
Automatic gearbox - top up oil					x					x				x				x				x	D5
Fluid levels - engine compartment - check/adjust	Engine cooling system, brake and power steering reservoirs and washer reservoir	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Coolant - check/top up	Anti-freeze rating/ Corrosion prot.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Battery - check level		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D7
Auxiliary drive belts - check/just. - replace belt - grease the tension pulley*	Not B 6254/6304		x		x			x		x		x		x		x		x		x		x	D9
	Only B 6254/6304							x						x						x			D12
	Only B 6304 –1994			x				x			x			x			x			x			D12
* Applies only to early model tensioners which can be dismantled.																							
Camshaft belt B 200-230 - replace	check the tensioner and lubricate the guide lug (15,000 km (10,000 miles) after belt replacement)					x						x					x					x	D11
		x						x					x					x					D13
Camshaft belt/balancer shaft belt B 204-234 - replace						x						x					x					x	D11

700/940/960	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Camshaft belt B 6304 (-93) - replace - grease tensioner	Apply the sticker			x			x			x			x			x			x			D12
				x			x			x			x			x			x			D12
Camshaft belt B 6304 (94) - replace	Apply the sticker					x					x					x						D12
Camshaft belt B 6254/6304 95- - replace	Apply the sticker																					D12
Camshaft belt, pump belt, idler roller - replace	Diesel								x								x					D14
EGR system - check function - clean	D 24 T - Austria		x		x		x		x		x		x		x		x		x		x	D16
EGR system - check function	D24 TIC (EGR)			x			x			x			x			x			x			D17
EGR system - clean	Only B 230 FD/FT/FK (EGR) and B 6254/6304 S (EGR)-1995						x						x						x			D17
CO idle - check/adjust	Petrol engines Not F-engines	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D18
Doors, bonnet - lubricate hinges, bonnet lock	Lubricate also door stop, lock lugs and locks	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D19
Power antenna - clean	Rec. to customer at every service																					D21
Brake fluid - replace	Rec. to customer every alternate year *																					

* If the car is driven in mountainous areas or a moist climate, the brake fluid should be replaced every year.

Maintenance service – 850

850	Km x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Automatic gearbox lever - check shift lock	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A1
Parking brake - check/adjust	Check when driving into workshop Adjust on lift	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A2
External lighting - check function	Check when driving into workshop	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A3
Wash/wipe on windscreen and headlamps - check function/wear	Clean nipples and hoses. Replace flame trap. Turbo has no flame trap.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	A4
Crankcase ventilation - clean								x		x		x		x				x				A7
Engine/gearbox - check for leakage		Check from above	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Raise the car																						
Engine/gearbox - check for leakage	Check from underneath. Check transmission level only during leakage	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B1
Drain engine oil and replace oil filter	850 Turbo: A first oil replacement (not filter) at 5,000 km (3,000 miles). Note! Do not reset the service reminder.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B2
Check/tightening of turbo/exhaust pipe.	Performed at 5,000 km (3,000 miles). See illustration on page 28																					
Driveshaft joints - check for wear							x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B5
- check gaiters		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	B6
Note! For cars with automatic gearboxes which are used in continuous taxi traffic or frequently tow trailers change gearbox oil every 75,000 km.																						

* Check disc brake thickness when replacing brake linings! For measurement of front lining thickness, for method refer to book 2.
** Markets with anti-corrosion warranty: Inspection of rust-proofing after 3 and 6 years, see SB 1-18-1

850	Km x 1000 Months miles x 1000	15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
		10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Fluid levels - engine compartment - check	Engine cooling system, brake and power steering fluid reservoirs and washer fluid reservoir	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Coolant - check/top up	Anti-freeze rating/ Corrosion prot.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D6
Battery - check level/anchorage		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D7
Auxiliary drive belt - replace belt							x						x						x			D10
- grease belt tensioner*				x			x		x				x			x			x			D10
* Only applies if the belt tensioner is of the early model which can be dismantled.																						
Camshaft belt (-93), 21 mm - grease the tensioner	Apply the sticker					x					x					x					x	D11
- replace belt						x					x					x					x	D11
Camshaft belt (94-), 23 mm - replace belt	Apply the sticker								x								x					
EGR system - clean	Applies to cars with EGR						x						x						x			D16
- inspect							x						x						x			D16
Doors, bonnet - lubricate hinges		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D19
Service reminder - reset	Does not apply to Yazaki instrument	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	D20
Power antenna - clean	Rec. to customer at every service																					D21
Brake fluid - replace	Rec. to customer every alternate year**																					

** If the car is driven in a mountainous area or moist climate, the brake fluid should be replaced every year.