


Dodge Sprinter 2003 – 2006 fuse box diagram

Fuse Box No.1

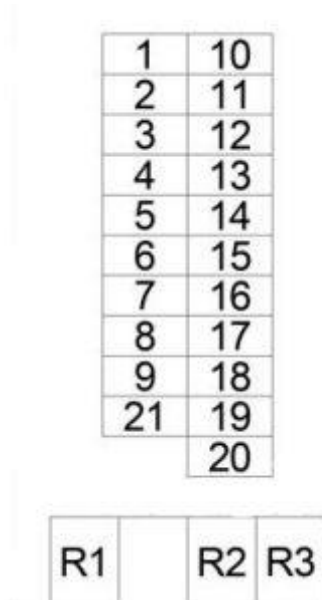

Dodge Sprinter – fuse diagram – box 1

No.	A	Circuit Protected
1	10	Headlamp Switch
2	10	Headlamp Right (High Beam)
3	10	Headlamp Left (High Beam), Instrument Cluster
4	10	Shifter Assembly
5	10	Stop Lamp Switch, Data Link Connector
6	20	Multi-Function Switch (Wiper/Turn Signal/Engine Start Control Module)

7	15	Optional Equipment Relay, Lamp Relay – Right (Trailer Tow Connector, Tail Lamp, Headlamp), Sentry Key Remote Entry Module, Horn (VTSS), Rear Window Defogger Switch, Circulation Pump Relay, Transmission Control Relay, Horn Relay
8	20	Cigar Lighter, Radio, Auxiliary Heater Switch, Turn Signal/Anti-Theft Alarm Relay – Left/Right, Courtesy Lamp, Interior Lamp, Dome Lamp
9	15	Multi-Function Switch (Hazard Warning Switch)
10	10	Map/Reading Lamp Switch, Interior Light Switch, Radio, A/C Fan Switch, Automatic Temperature Control Module, Headlamp Adjust Switch, Panic Alarm Switch, A/C Switch – Roof, Temperature Switch, Shifter Assembly, TCS Switch (ASR), Master Door Lock Switch, Towing/Intrusion Sensor On/Off Switch, Ash Receiver Lamp, Fog Lamp Switch, Rear Window Defogger Switch, Locker Switch No.1, Cigar Lighter Lamp
11	10	Left Lamp Relay (Headlamp, Tail Lamp)
12	10	Headlamp Right (Low Beam), Daytime Running Lamp Relay – Right
13	10	Headlamp Left (Low Beam), Daytime Running Lamp Relay – Left
14	15	Fog Lamp Relay
15	10	Radio, Radio/Cellular Antenna, Central Timer Module,
16	15	Engine Control Module
17	15	Engine Control Module, EGR Valve, Crankcase Heater
18	15	Run-Start Relay, Engine Control Module, Instrument Cluster, Airbag Control Module

19	15	–
20	15	Circulation Pump Relay, Automatic Temperature Control Module
21	30	Blower Motor
Relay		
R1	Engine Control	
R2	Wiper On/Off	
R3	Turn Signal	

Fuse Box No.2

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

Dodge Sprinter – fuse diagram – box 2

No.	A	Circuit Protected
1	10	Daytime Running Lamp Relay (Instrument Cluster, Headlamp Left, Headlamp Right, License Plate Lamp, Marker Lamp)

2	10	Transmission Control Relay
3	15	Instrument Panel Socket
4	7. 5	Left Lamp Relay, Right Lamp Relay
5	25	Central Timer Module
6	7. 5	Data Link Connector, Instrument Cluster
7	25	Power Window Switch – Driver
8	10	Power Mirror Switch, Driver/Passenger Power Mirror Motor
9	15	A/C Switch – Roof, Rear Window Defogger Module, Central Timer Module, D+ Relay No.2, Daytime Running Lamp Relay, Right Lamp Relay, Auxiliary Battery Relay
10	7. 5	Daytime Running Lamp Relay (Right Side)
11	7. 5	Daytime Running Lamp Relay (Left Side)
12	25	Body Plug Connector
13	15	Run-Start Relay
14	10	D+ Relay 2
15	25	Power Window Switch – Master, Power Window Switch – Passenger
16	–	

17	–	
18	–	

Fuse Box No.3

1	10	19
2	11	20
3	12	21
4	13	22
5	14	23
6	15	24
7	16	25
8	17	26
9	18	27


Dodge Sprinter – fuse diagram – box 3

No.	A	Circuit Protected
1	7. 5	Auxiliary Heater Timer
2	7. 5	Security System Module, Siren, Intrusion Sensor No.1/No.2/No.3
3	25	Auxiliary Heater Relay
4	25	Cabin Heater Assembly
5	7. 5	Fog Lamp Switch
6	25	Trailer Tow Control Module, Trailer Tow Connector

7	10	Circulation Pump Diode, Cabin Heater Assembly, Auxiliary Heater Relay
8	10	Fan Stage 1 Relay
9	30	CTEL Connector
10	15	Security System Module
11	25	Warm Air Auxiliary Heater Assembly
12	15	Locker Switch No.1/No.2
13	7. 5	CTEL Connector
14	7. 5	Security System Module
15	15	Driver/Passenger Heated Seat Switch
16	–	
17	–	
18	15	Map/Reading Lamp Switch, Interior Light Switch, Time Delay Relay,
19	15	
20	15	A/C Fan Switch
21	–	

22	-	
23	-	
24	-	
25	-	
26	-	
27	-	

Fuse Box No.4

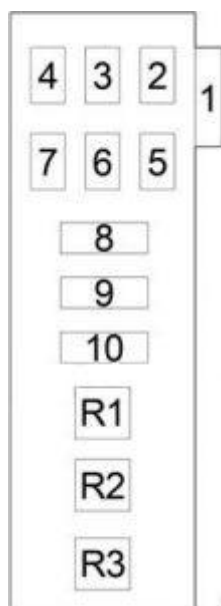


.Dodge Sprinter – fuse diagram – box 4

No.	A	Circuit Protected
1	30	A/C Auxiliary Fan Relay
2	-	-

3	–	–
4	–	–
5	10	Sentry Key Remote Entry Module, Turn Signal/Anti-Theft Alarm Relay – Left, Turn Signal/Anti-Theft Alarm Relay – Right
6	7. 5	ABS
7	25	ABS
8	40	A/C Control Module – Roof
9	40	ABS
10	30	Rear Window Defogger Module, Rear Window Defogger Relay – Left, Rear Window Defogger Relay – Right
Relay		
R1	–	
R2	Starter	
R3	–	

Relay Box

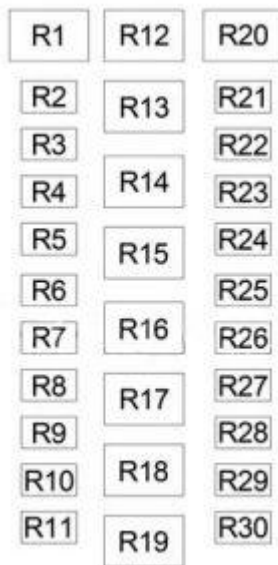


Dodge Sprinter – fuse diagram – relay box

No.	Relay
R1	–
R2	Turn Signal/Anti-Theft Alarm – Left
R3	Turn Signal/Anti-Theft Alarm – Right
R4	Lamp – Left
R5	Lamp – Right
R6	Transmission Control
R7	D+ No.1
R8	Daytime Running Light
R9	Fog Lamp

R1 0	Daytime Running Lamp – Left
R1 1	Daytime Running Lamp – Right
R1 2	Circulation Pump
R1 3	Run-Start
R1 4	Time Delay
R1 5	Auxiliary Heater
R1 6	Optional Equipment
R1 7	Fan Stage 1
R1 8	A/C Auxiliary Fan
R1 9	–
R2 0	–
R2 1	Auxiliary Battery
R2 2	D+ No.2
R2 3	Rear Window Defogger – Left
R2 4	–

R2 5	Rear Window Defogger – Right
R2 6	–
R2 7	–
R2 8	–
R2 9	–
R3 0	–

Fusible Link Block

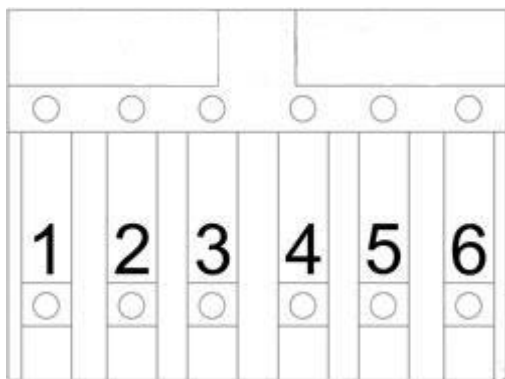

Dodge Sprinter – fuse diagram – fusible link

block

No.	A	Circuit Protected
1	20 0	Generator
2	70	Optional Equipment Relay (Fuse Box No.2: "6", "7", "8", "15"; Fuse Box No.3: "7", "12", "13", "14", "15", "20"; Fuse Box No.4: "6")
3	12 5	D+ Relay No.1 (Fuse Box No.2: "9", "10", "11"), Fuse Box No.2: "1", "2", "3", "4", "5", "6", "12", "13", "14"; Fuse Box No.3: "1", "3", "4", "5", "6", "8", "9", "11", "18", Fuse Box No.4: "1", "5", "6", "7", "8", "9", "10"

4	80	–
5	12 5	Glow Plug Control Module
6	10 0	Ignition Switch, Engine Control Relay, Starter Relay, Fuse Box No.1: “6”, “8”, “9”, “17”, “19”, “20”, “21”; Fuse Box No,3: “2”, “10”