

Toyota Land Cruiser (80/J80; 1990-1997) fuses and relays

*In this article, we consider the third-generation Toyota Land Cruiser (80/J80), produced from 1990 to 1997. Here you will find fuse box diagrams of **Toyota Land Cruiser 80 1990, 1991, 1992, 1993, 1994, 1995, 1996 and 1997**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout) and relay.*

See other Toyota Land Cruiser:

Fuse Layout Toyota Land Cruiser 80 (1990-1997)





Cigar lighter (power outlet) fuse: #1 "CIG" in the Instrument panel fuse box.

Fuse Box Location

Passenger Compartment


It is located behind the cover on the driver's side of the dashboard.

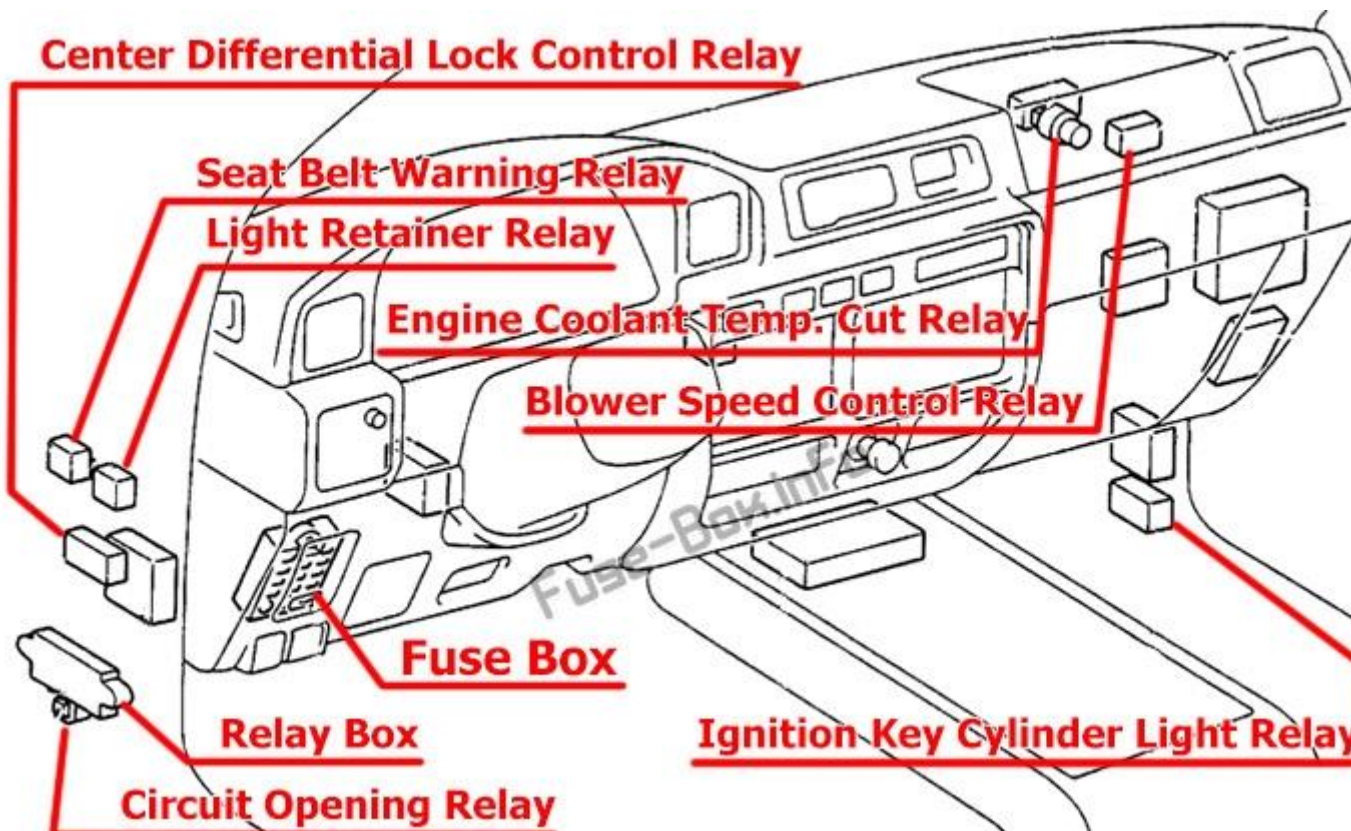

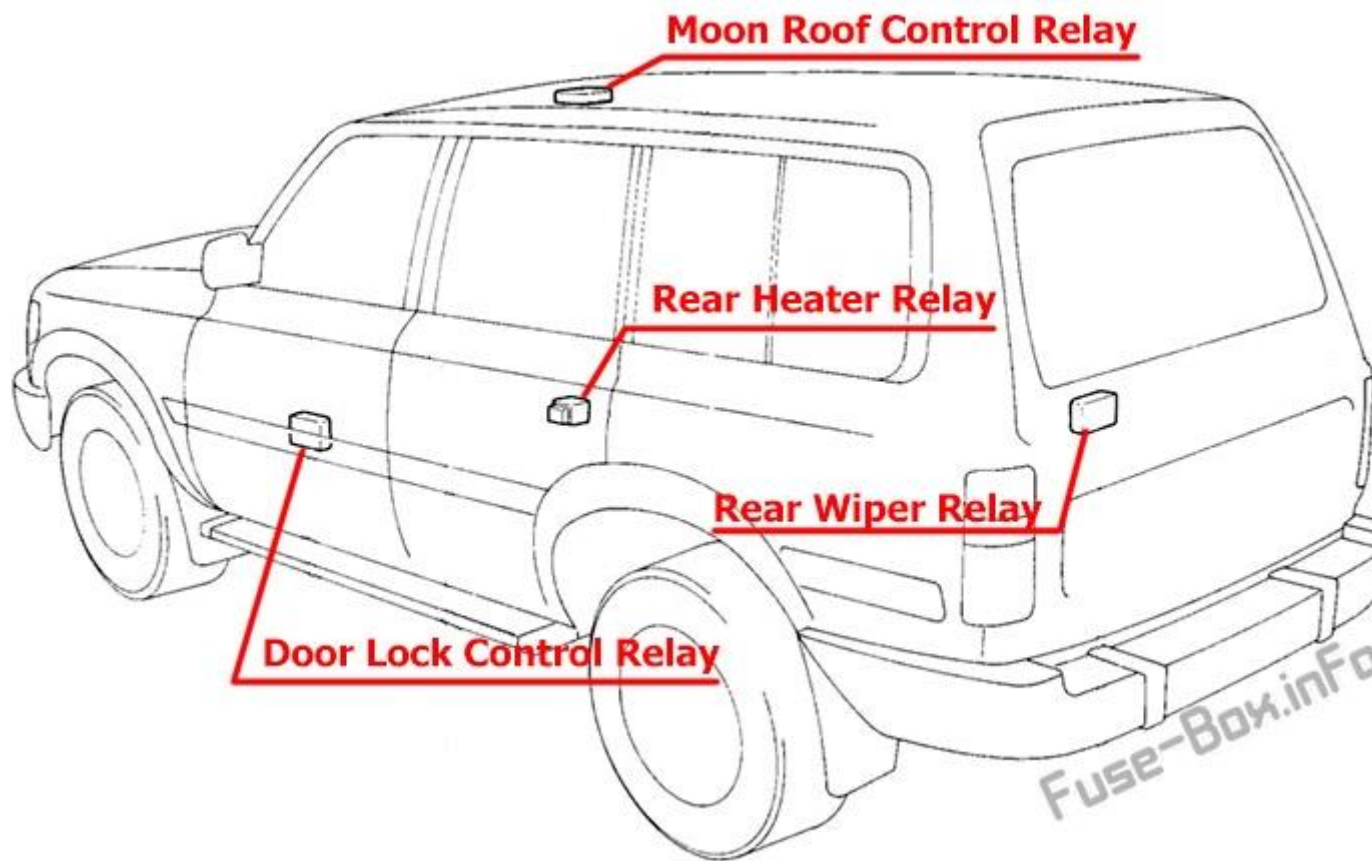

Engine Compartment


The fuse box is located near the battery.

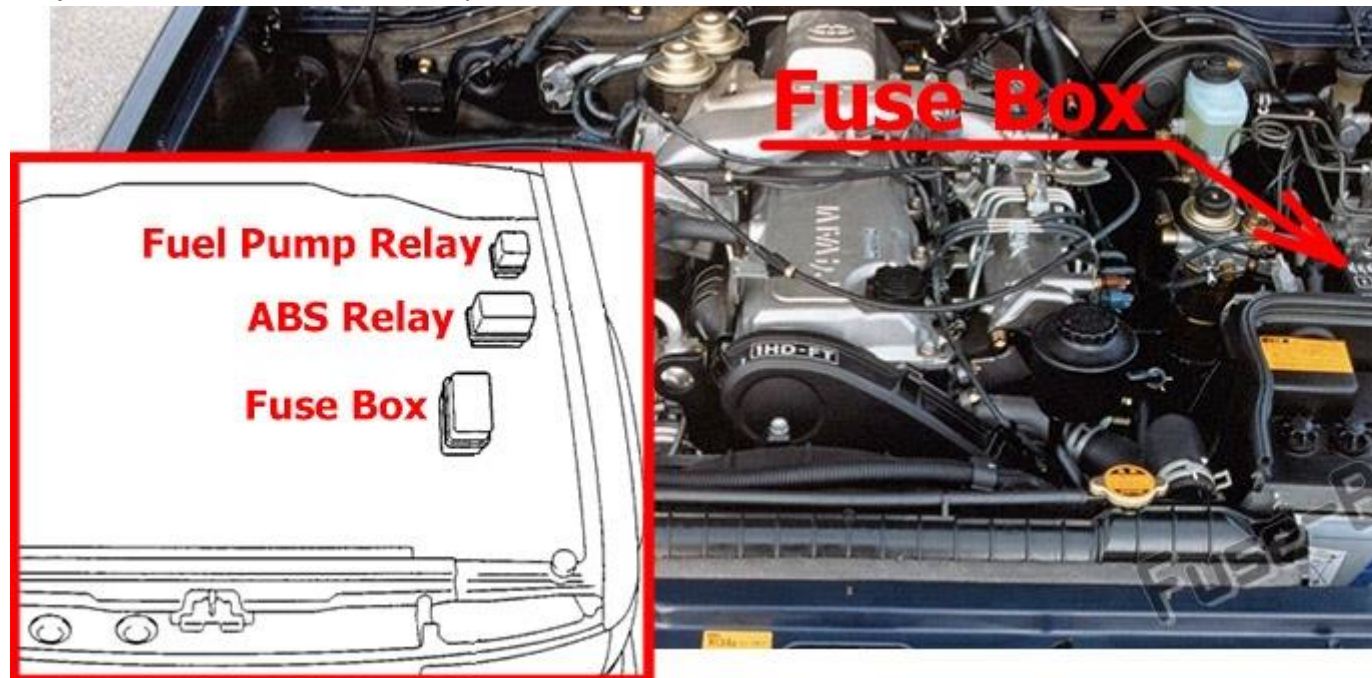

Advertisements

Fuse Box Diagrams

Passenger Compartment Fuse Box

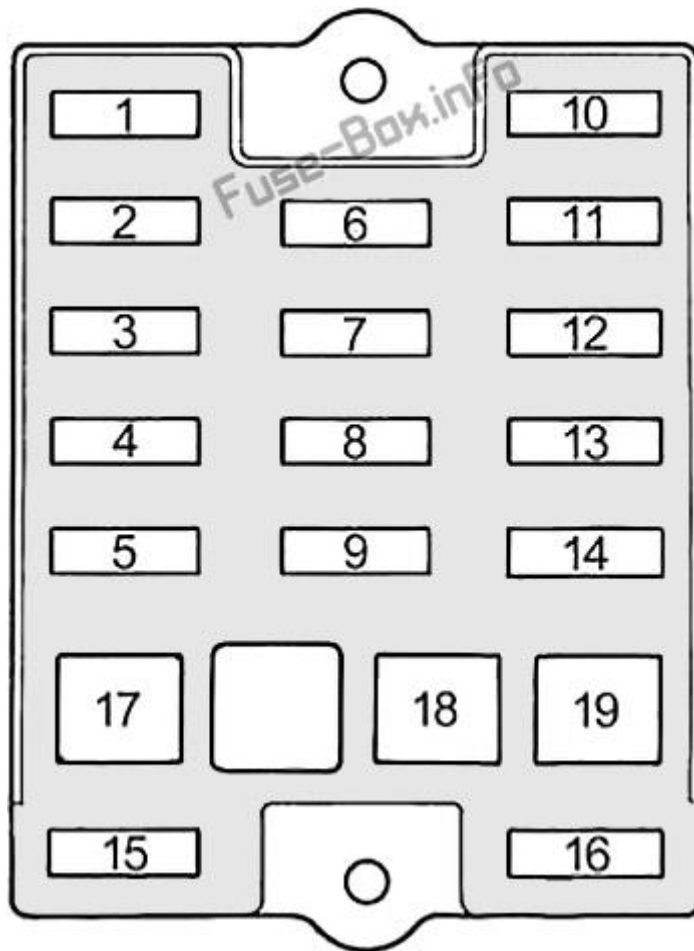


Assignment of the fuses in the instrument panel

No	Name	Amp	Description
1	CIG	15A	Cigarette lighter, power rear view mirrors, digital clock display, radio, cassette tape player, power antenna, automatic transmission shift lock system, SRS airbag system
2	TAIL	15A	Tail lights, license plate lights, parking and front side marker lights, instrument panel lights, clock, glovebox light
3	OBD	15A	On- board diagnosis system
4	STOP	10A	Stop lights, multiport fuel injection system/sequential multiport fuel injection system, cruise control cancel device, automatic transmission shift lock system
5	DEFOG	20A	Rear window defogger
6	WIPER	20A	Windshield wipers and washer, rear window wiper and washer

No	Name	Amp	Description
7	GAUGE	10A	Gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), back-up lights
8	TURN	7.5A	Turn signal lights
9	ECU-IG	15A	Cruise control system
10	ECU-B	10A	SRS airbag system
11	REAR-HTR	20A	Air conditioning system
12	IGN	7.5A	Multiport fuel injection system/sequential multiport fuel injection system, emission control system, SRS airbag system
13	A.C	10A	Air conditioning system
14	DIFF	30A	Differential lock system
15	-	-	Not used
16	-	-	Not used
17	-	-	Not used
18	FL HEATER	40A	Air conditioning system
19	FL POWER	30A	Power windows, power door lock system, electric moon roof


Relay Box

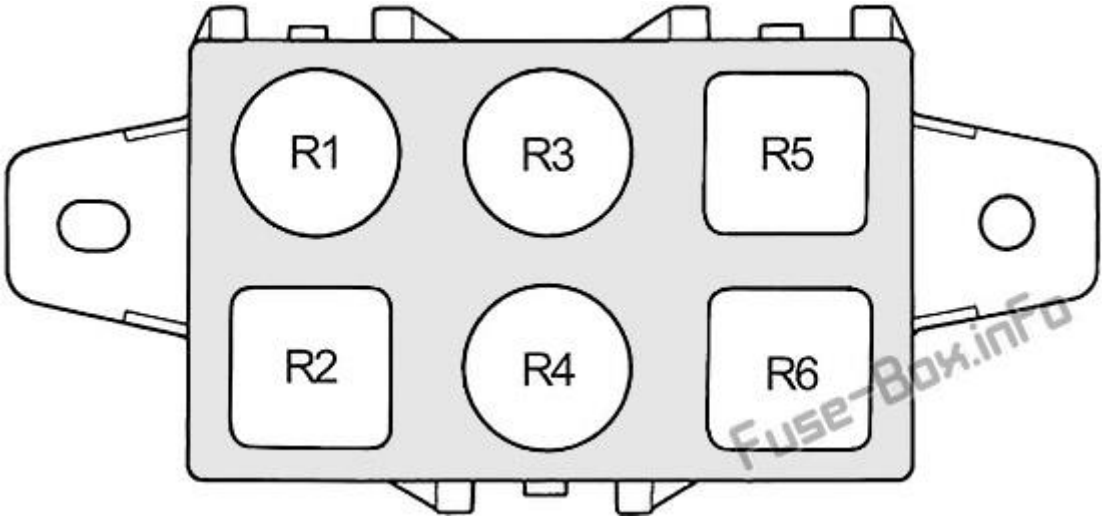

No	Relay
R1	Defogger
R2	Heater
R3	Power Relay
R4	Taillight
R5	Flasher
R6	Not used
R7	Cooling Fan
R8	Blower High

Advertisements

Engine Compartment Fuse Box

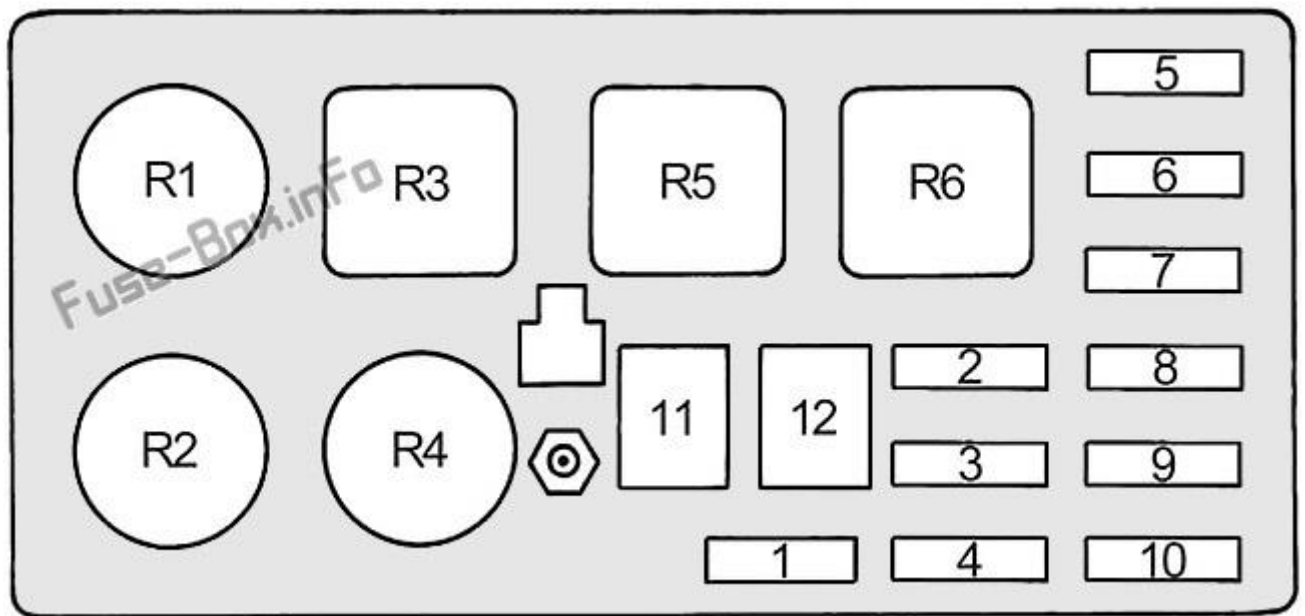

Assignment of the fuses in the engine compartment

No	Name	Amp	Description
1	-	-	Not used
2	CHARGE	7.5A	Charging system, discharge warning light
3	EFI	15A	Multiport fuel injection system/sequential multiport fuel injection system
4	CDS-FAN	20A	No circuit
5	HEAD (RH)	15A	Right-hand headlights
6	HEAD (LH)	15A	Left-hand headlights
7	-	-	Not used
8	-	-	Not used
9	HAZ-HORN	15A	Emergency flashers, horns

Nº	Name	Amp	Description
10	DOME	10A	Interior lights, personal light, luggage compartment light, ignition switch light, open door warning light, clock, radio, cassette tape player, power antenna, vanity lights
11	AM1	50A	All components in "CIG", "WIPER", "GAUGE", "TURN", "ECU-IG", "REAR-HTR", "IGN", "DIFF" and "FL POWER" circuits
12	ABS	60A	Anti-lock brake system
Relays			
R1			EFI Main
R2			Horn
R3			Not used
R4			Not used
R5			Headlight
R6			Not used