




F RELAY LOCATIONS

[Engine Compartment]

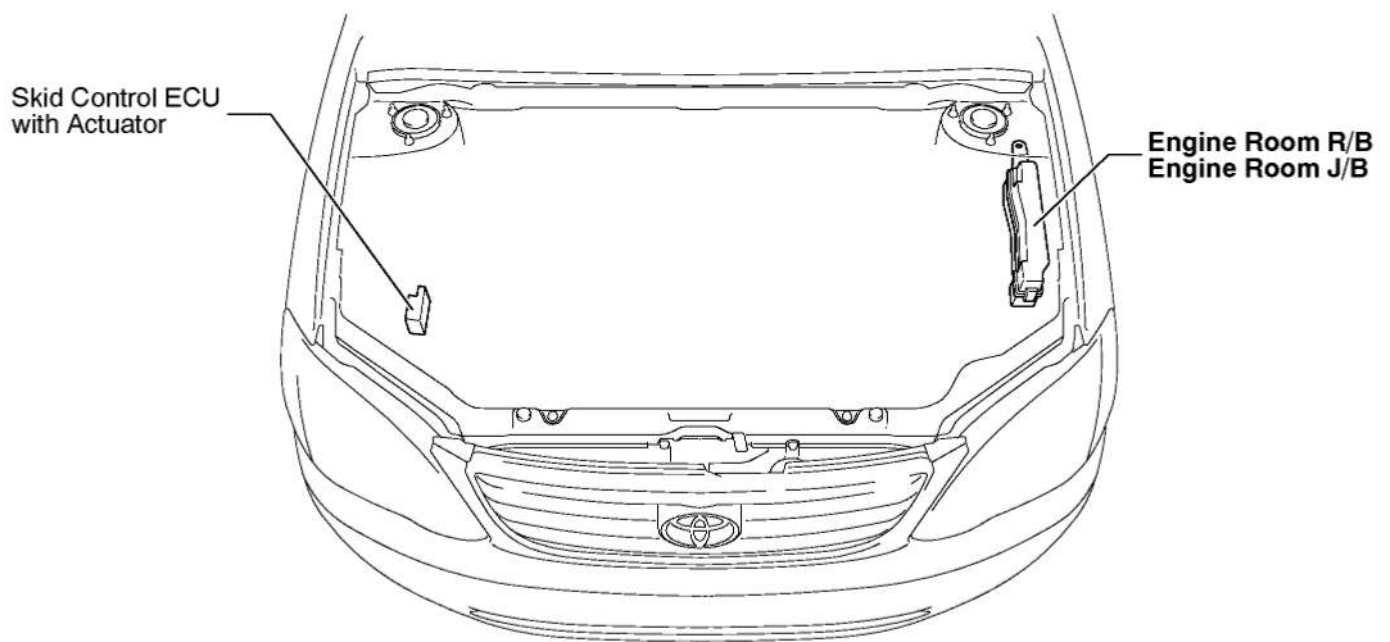

[Body]

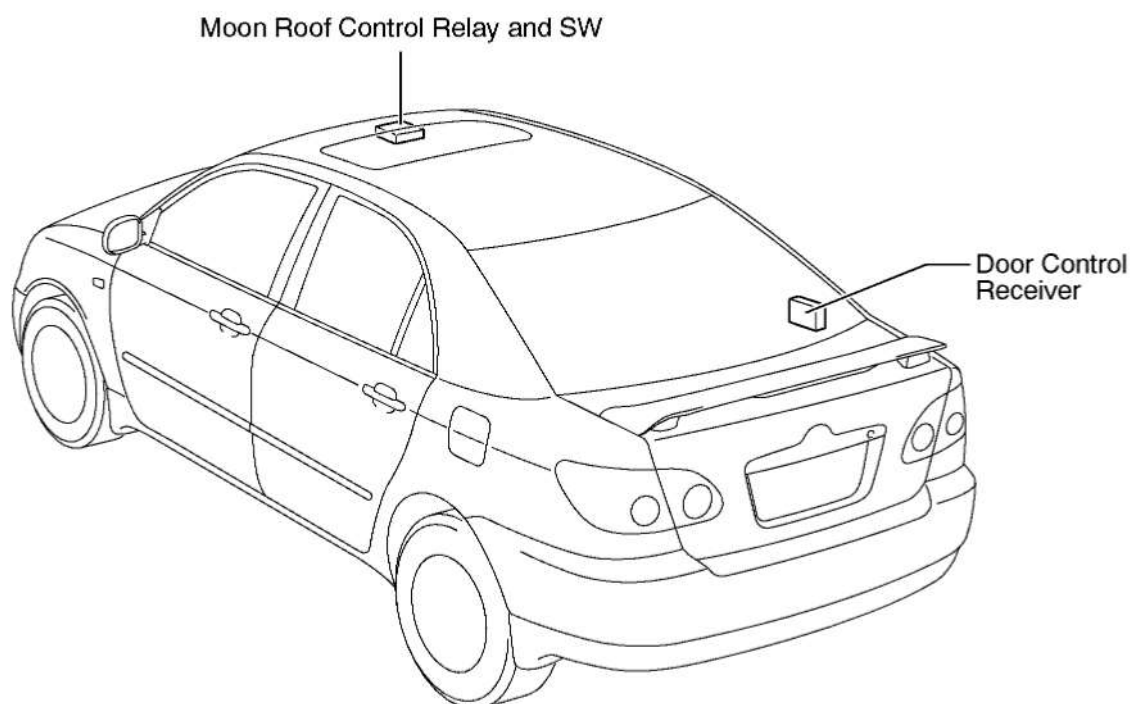


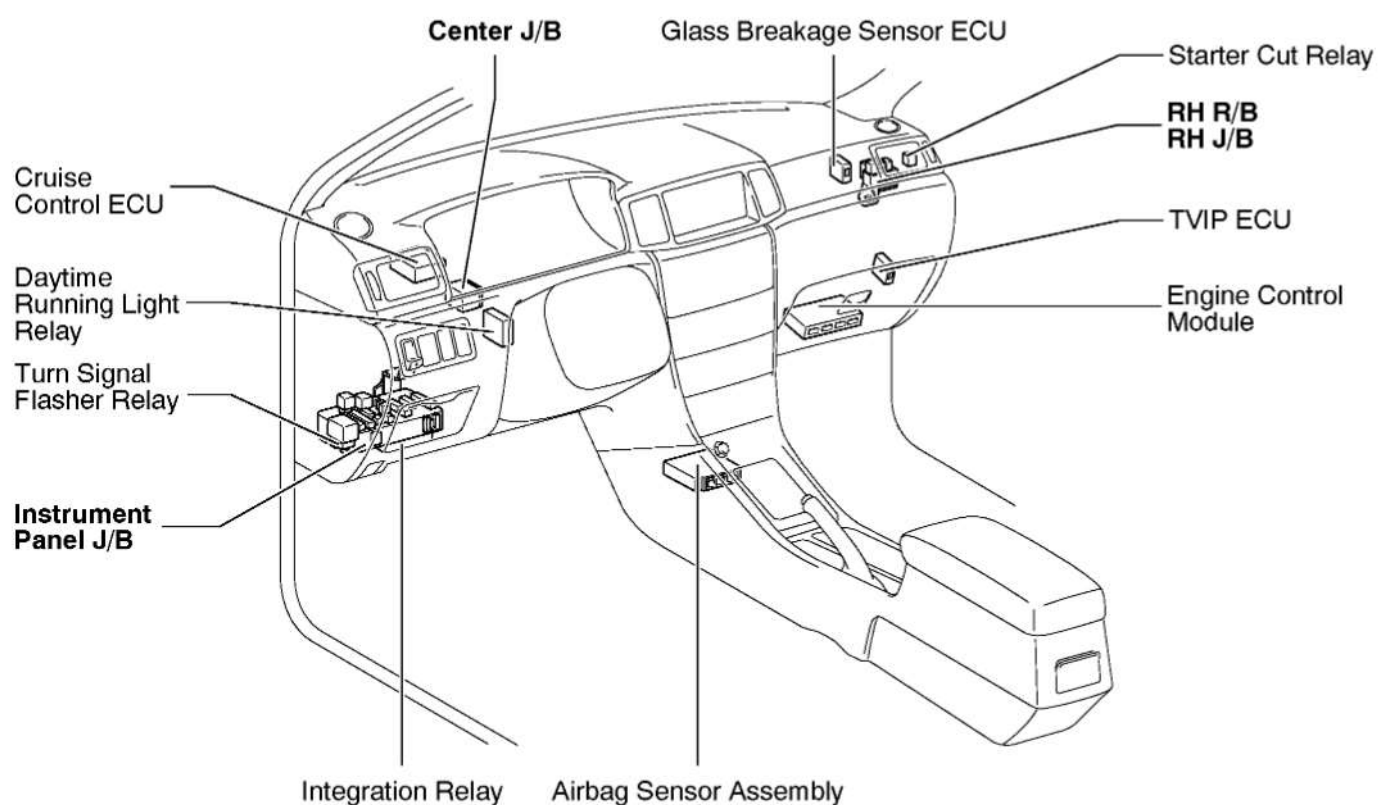[Instrument Panel]

F RELAY LOCATIONS


① : Engine Room R/B
○ : Engine Room J/B


Engine Compartment Left (See Page 20)

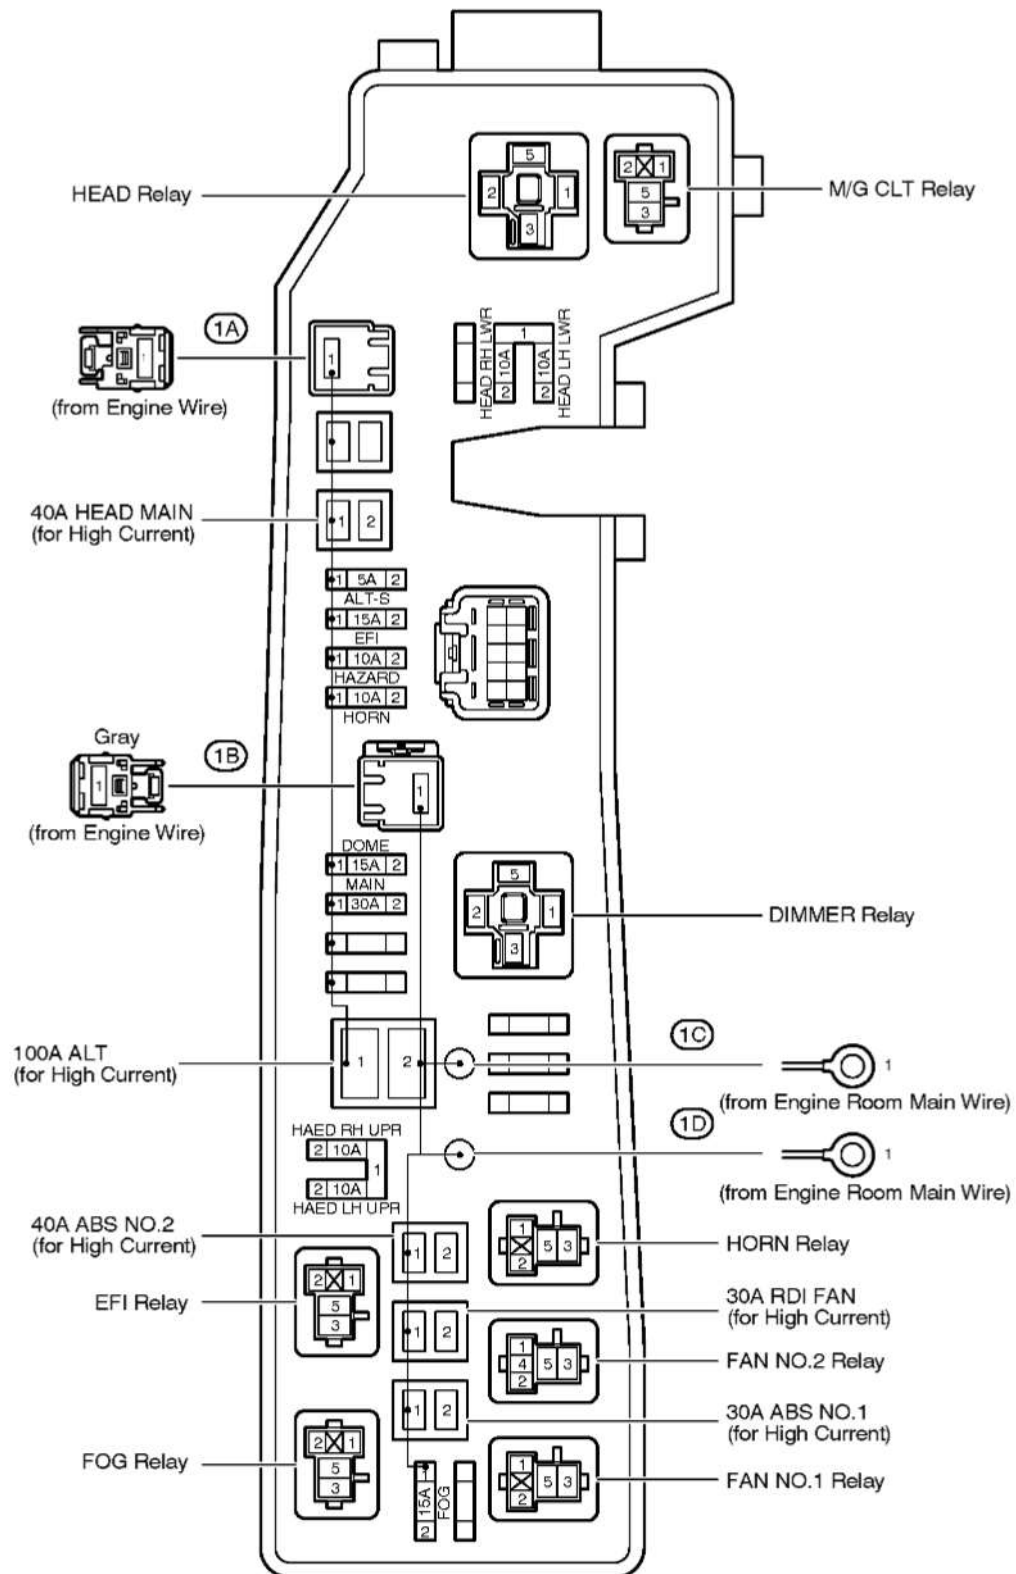

F RELAY LOCATIONS


○ : Instrument Panel J/B Lower Finish Panel (See Page 21)

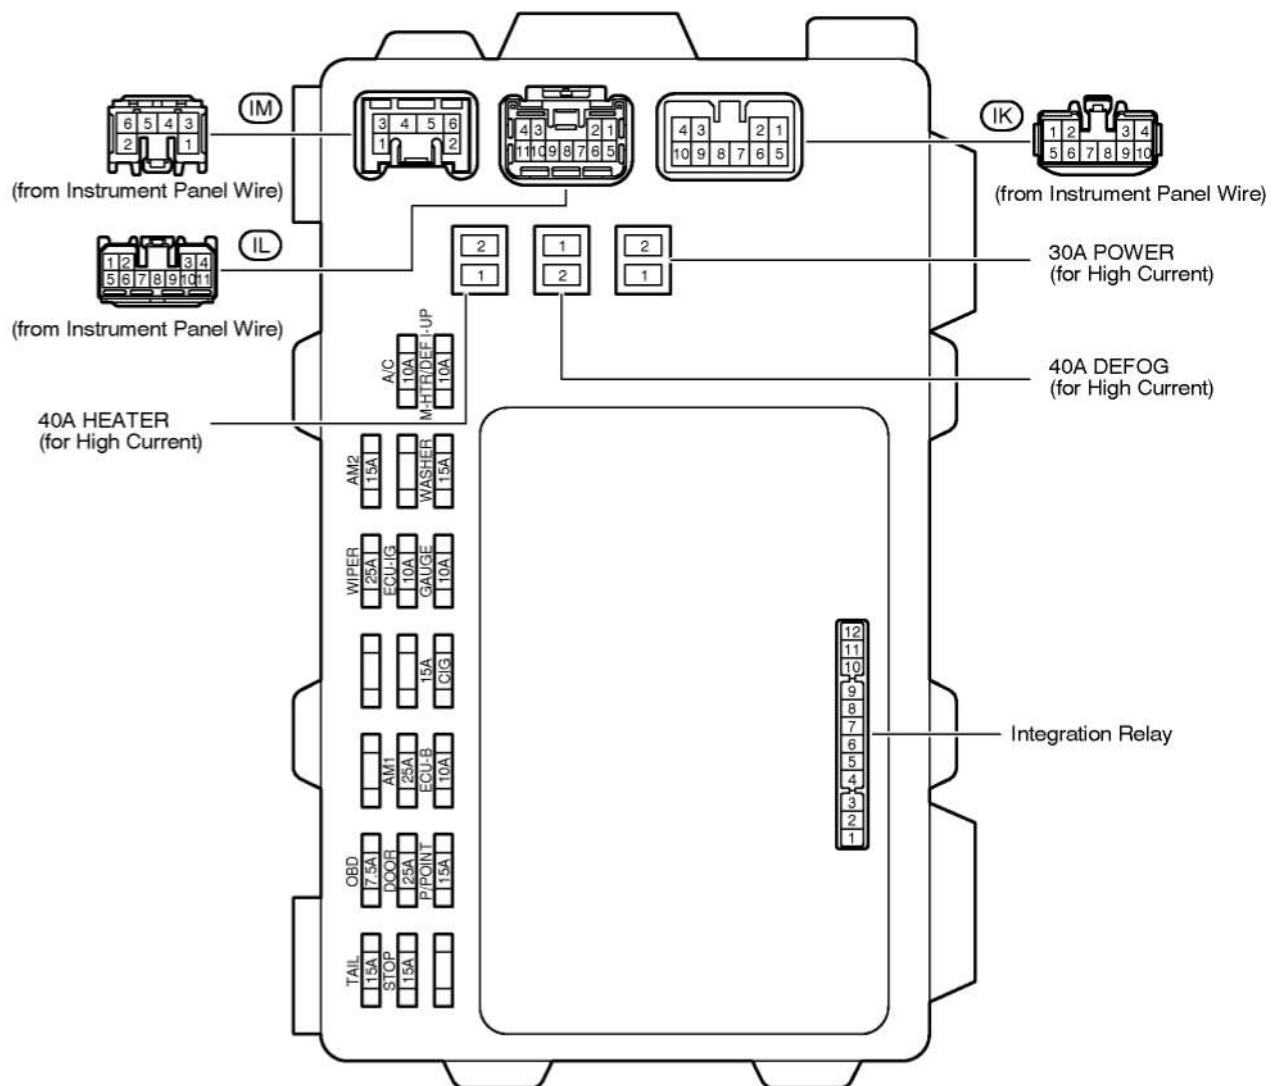

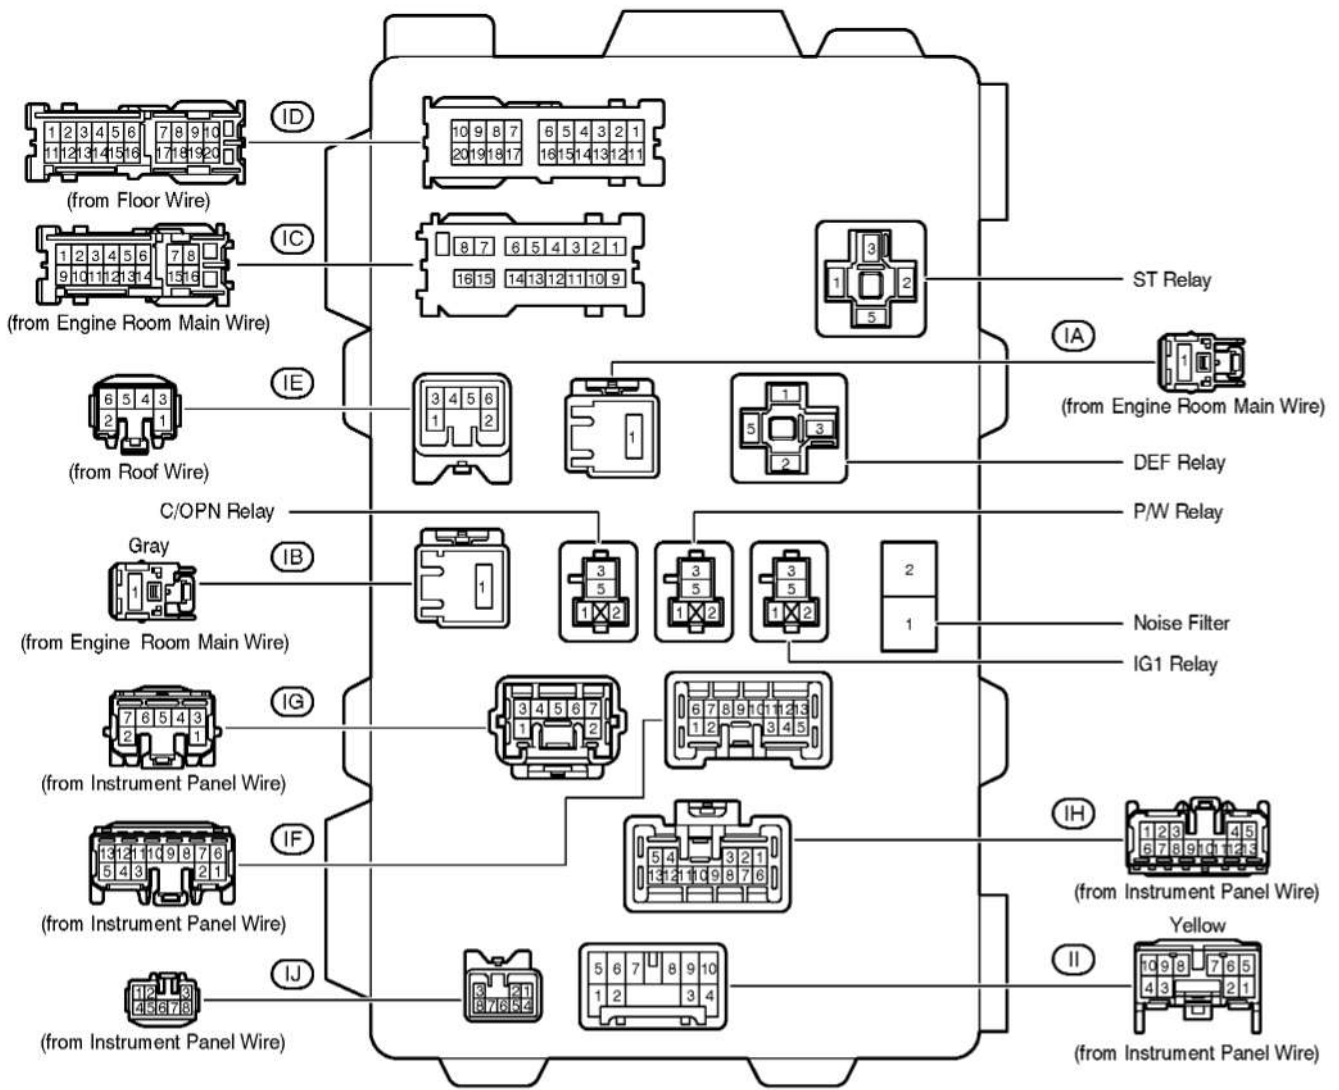


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

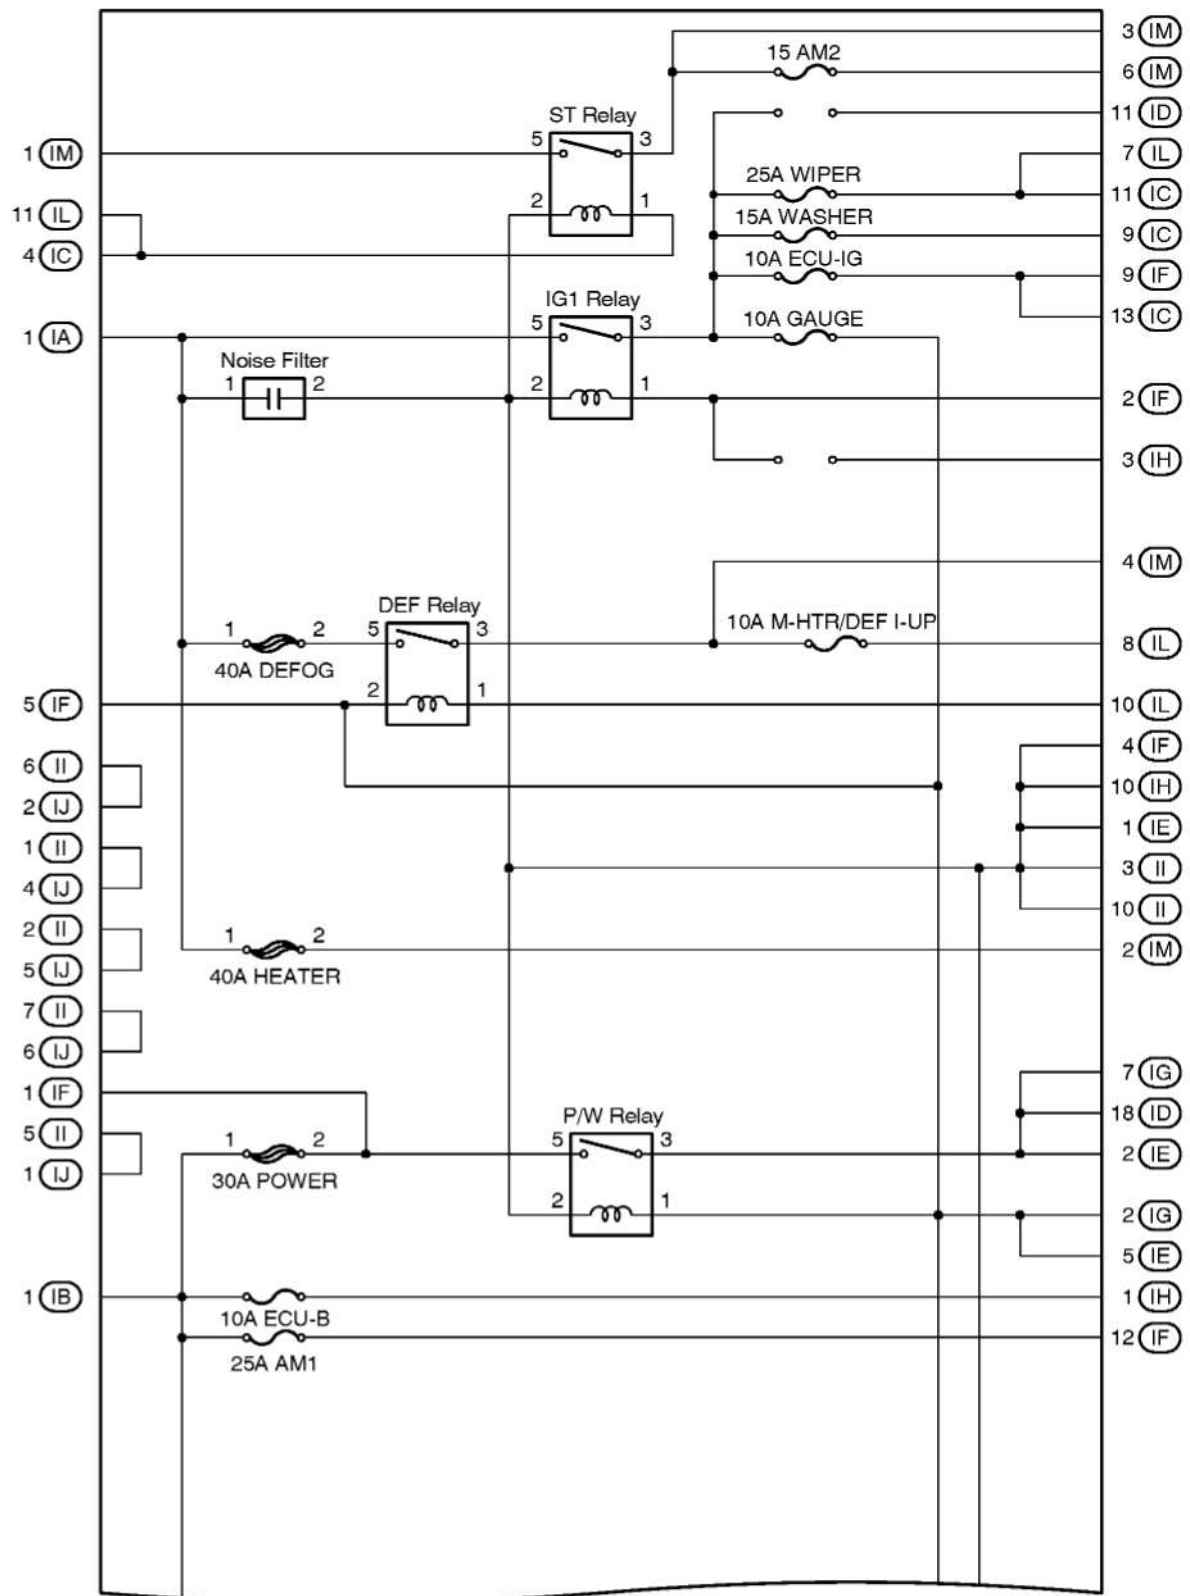



(Cont. Next Page)


(Cont'd)

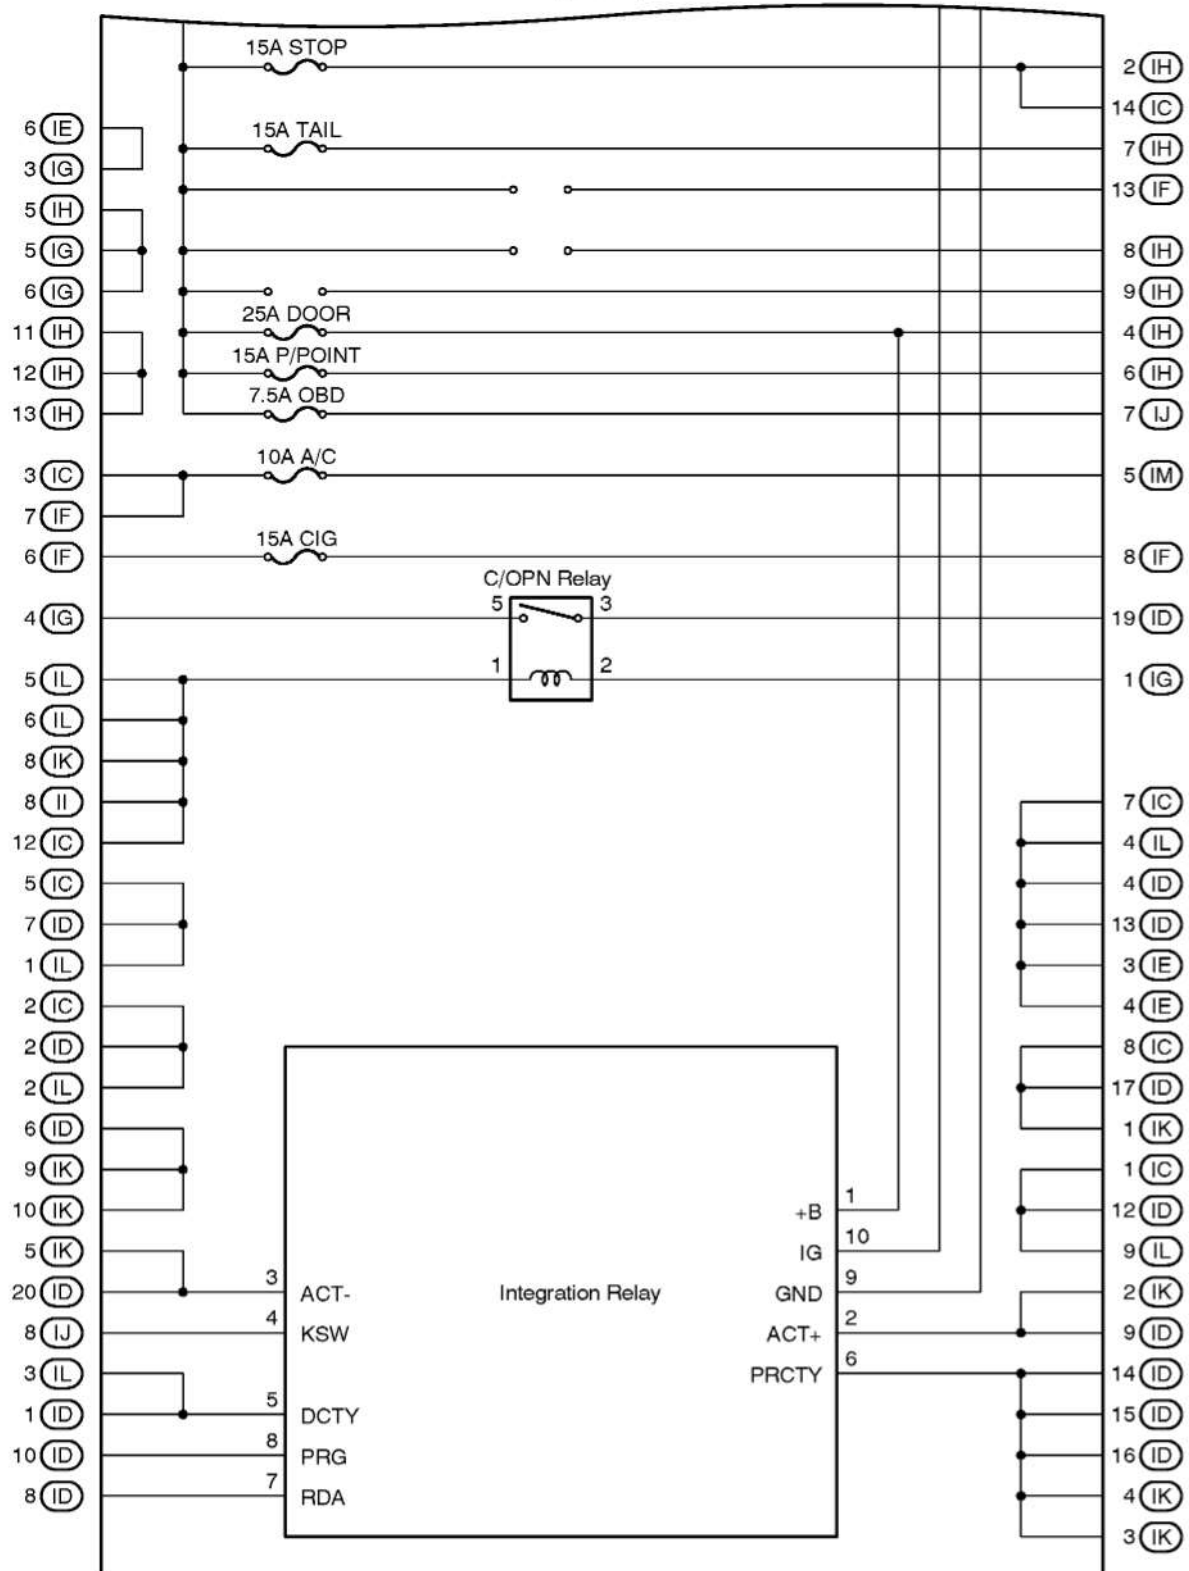

F RELAY LOCATIONS

③ : RH R/B	Right Side of the Instrument Panel Reinforcement (See Page 21)
○ : RH J/B	

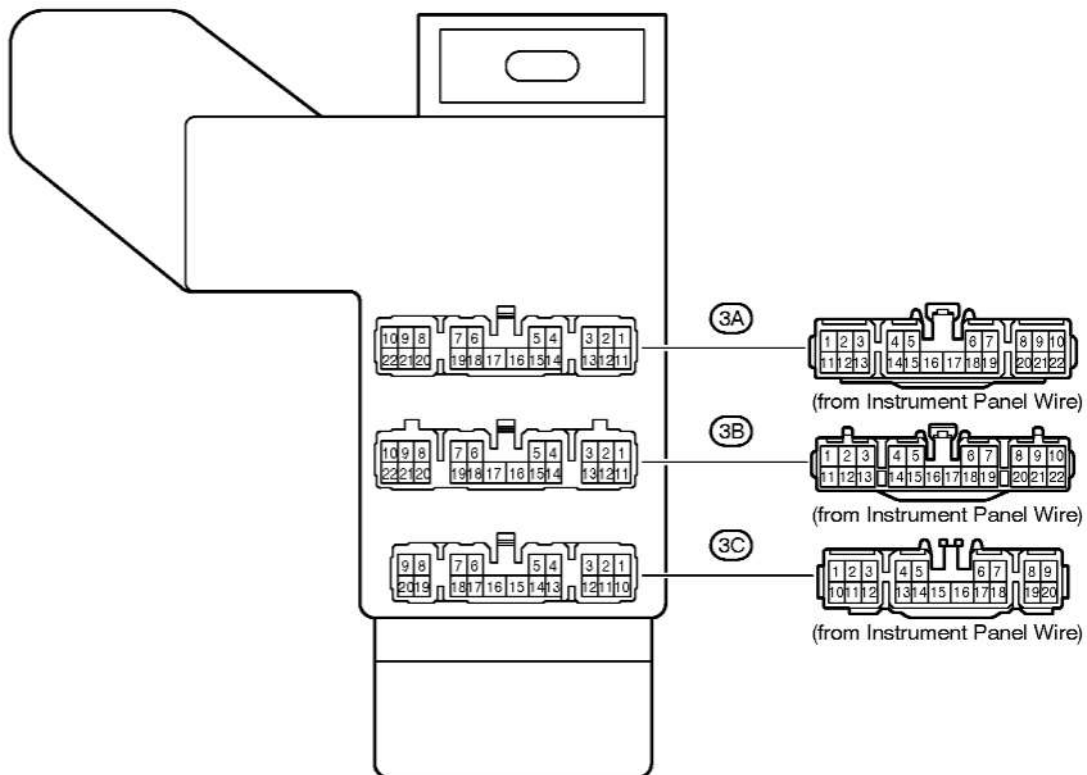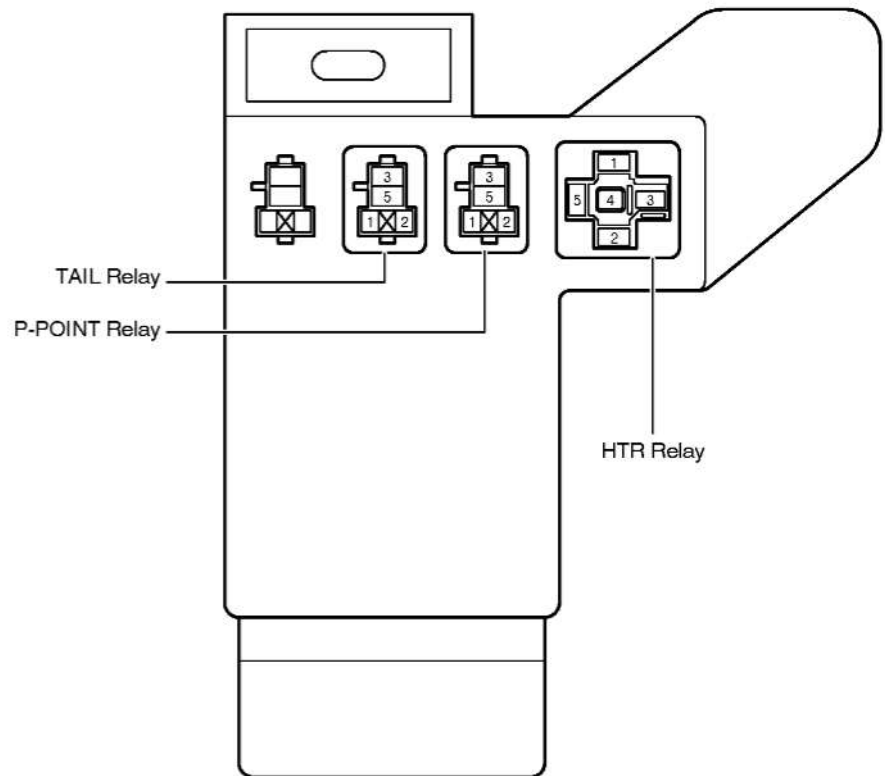


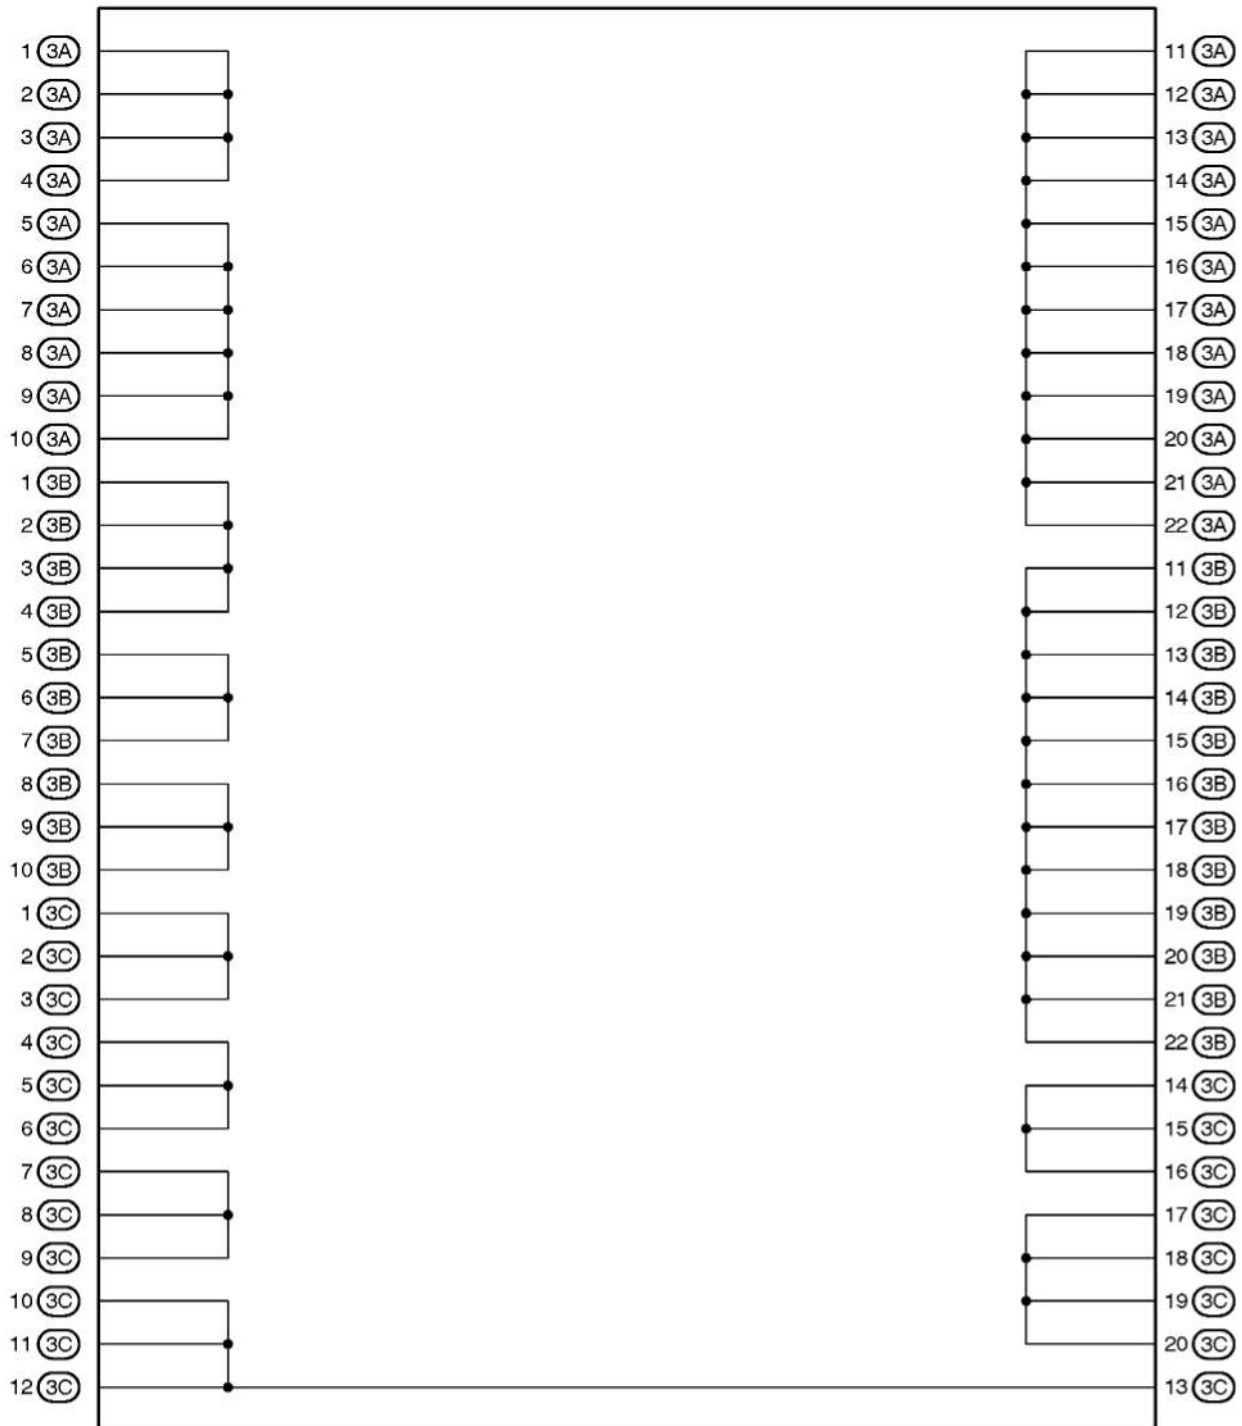[RH J/B Inner Circuit]

F RELAY LOCATIONS

○ : Center J/B

Behind the Combination Meter (See Page 21)

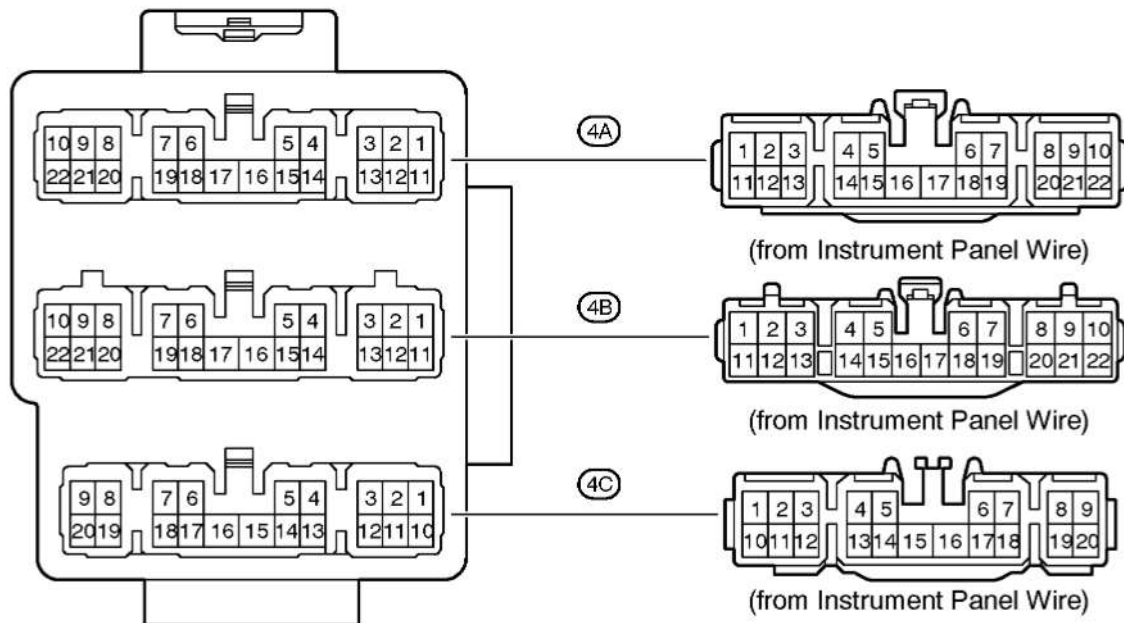

[Center J/B Inner Circuit]