



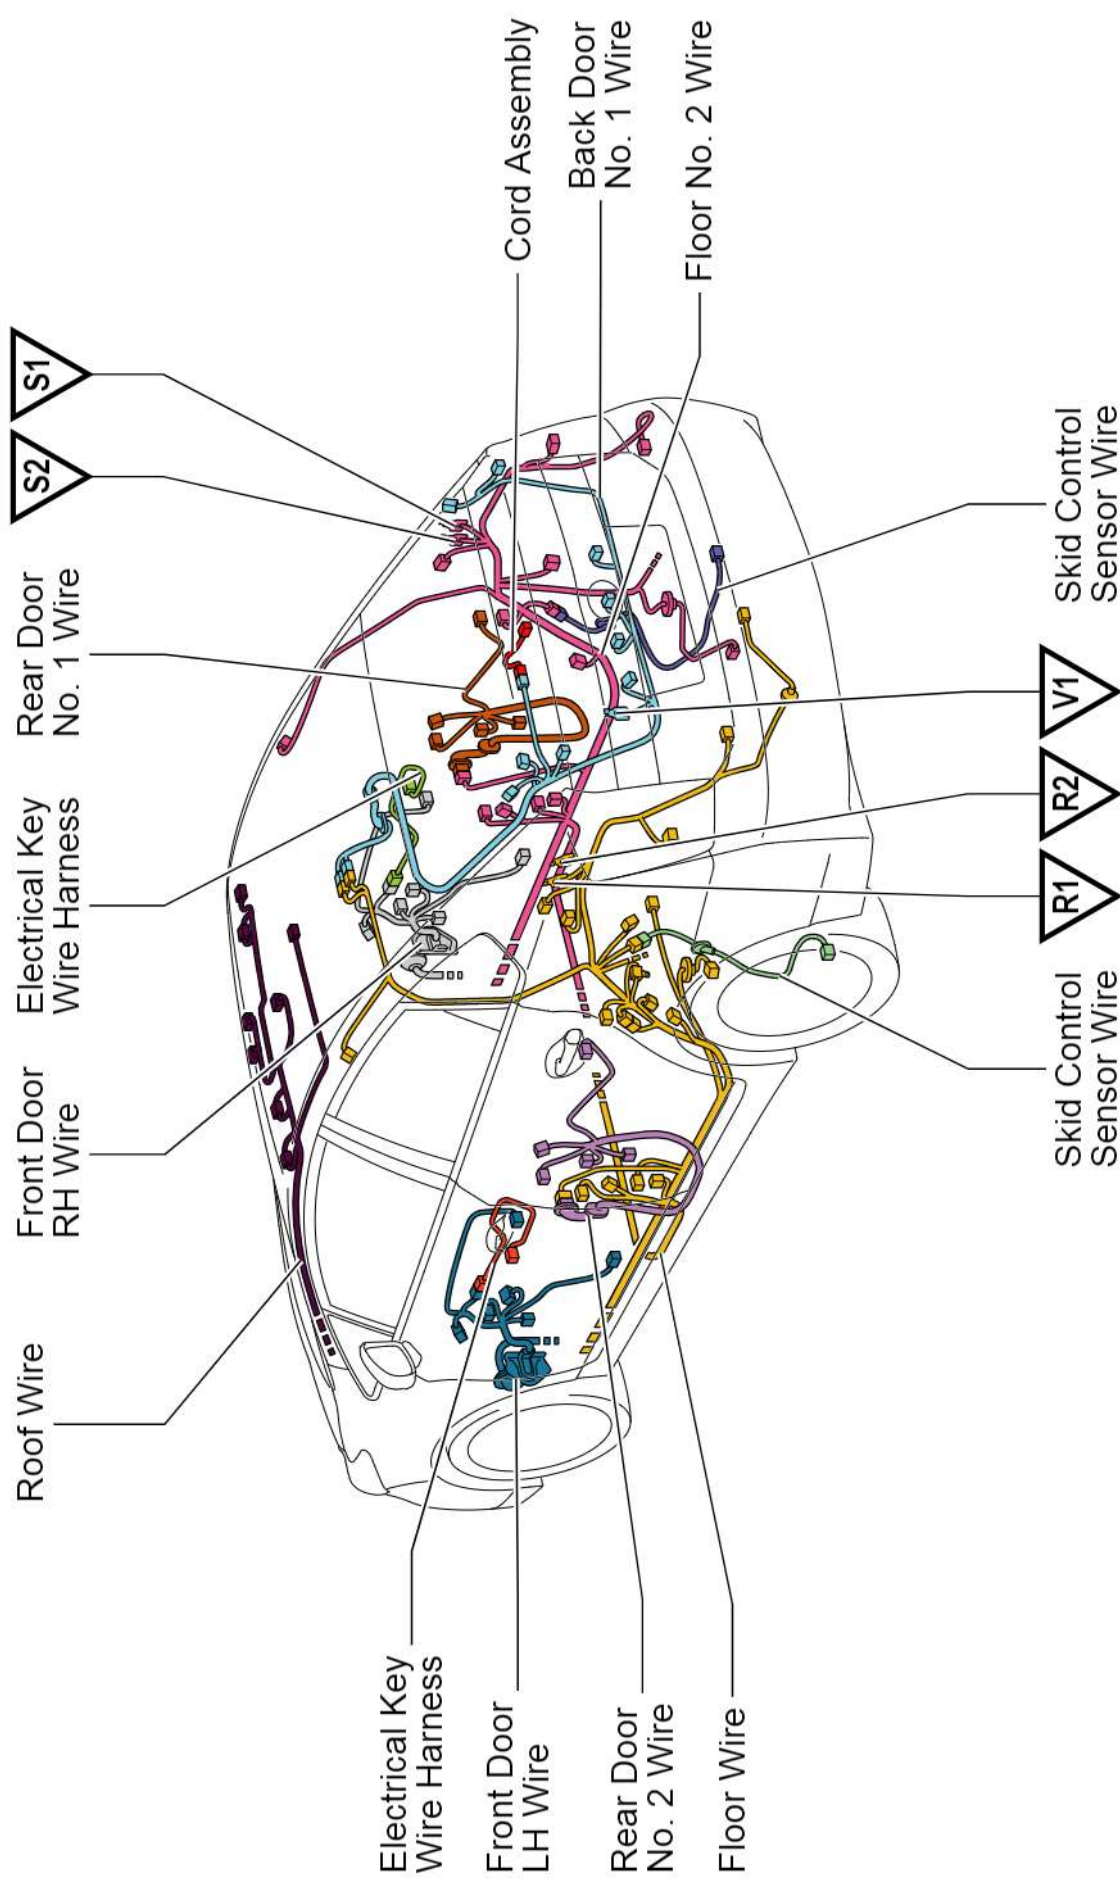

Ground Points in Body <LHD>




















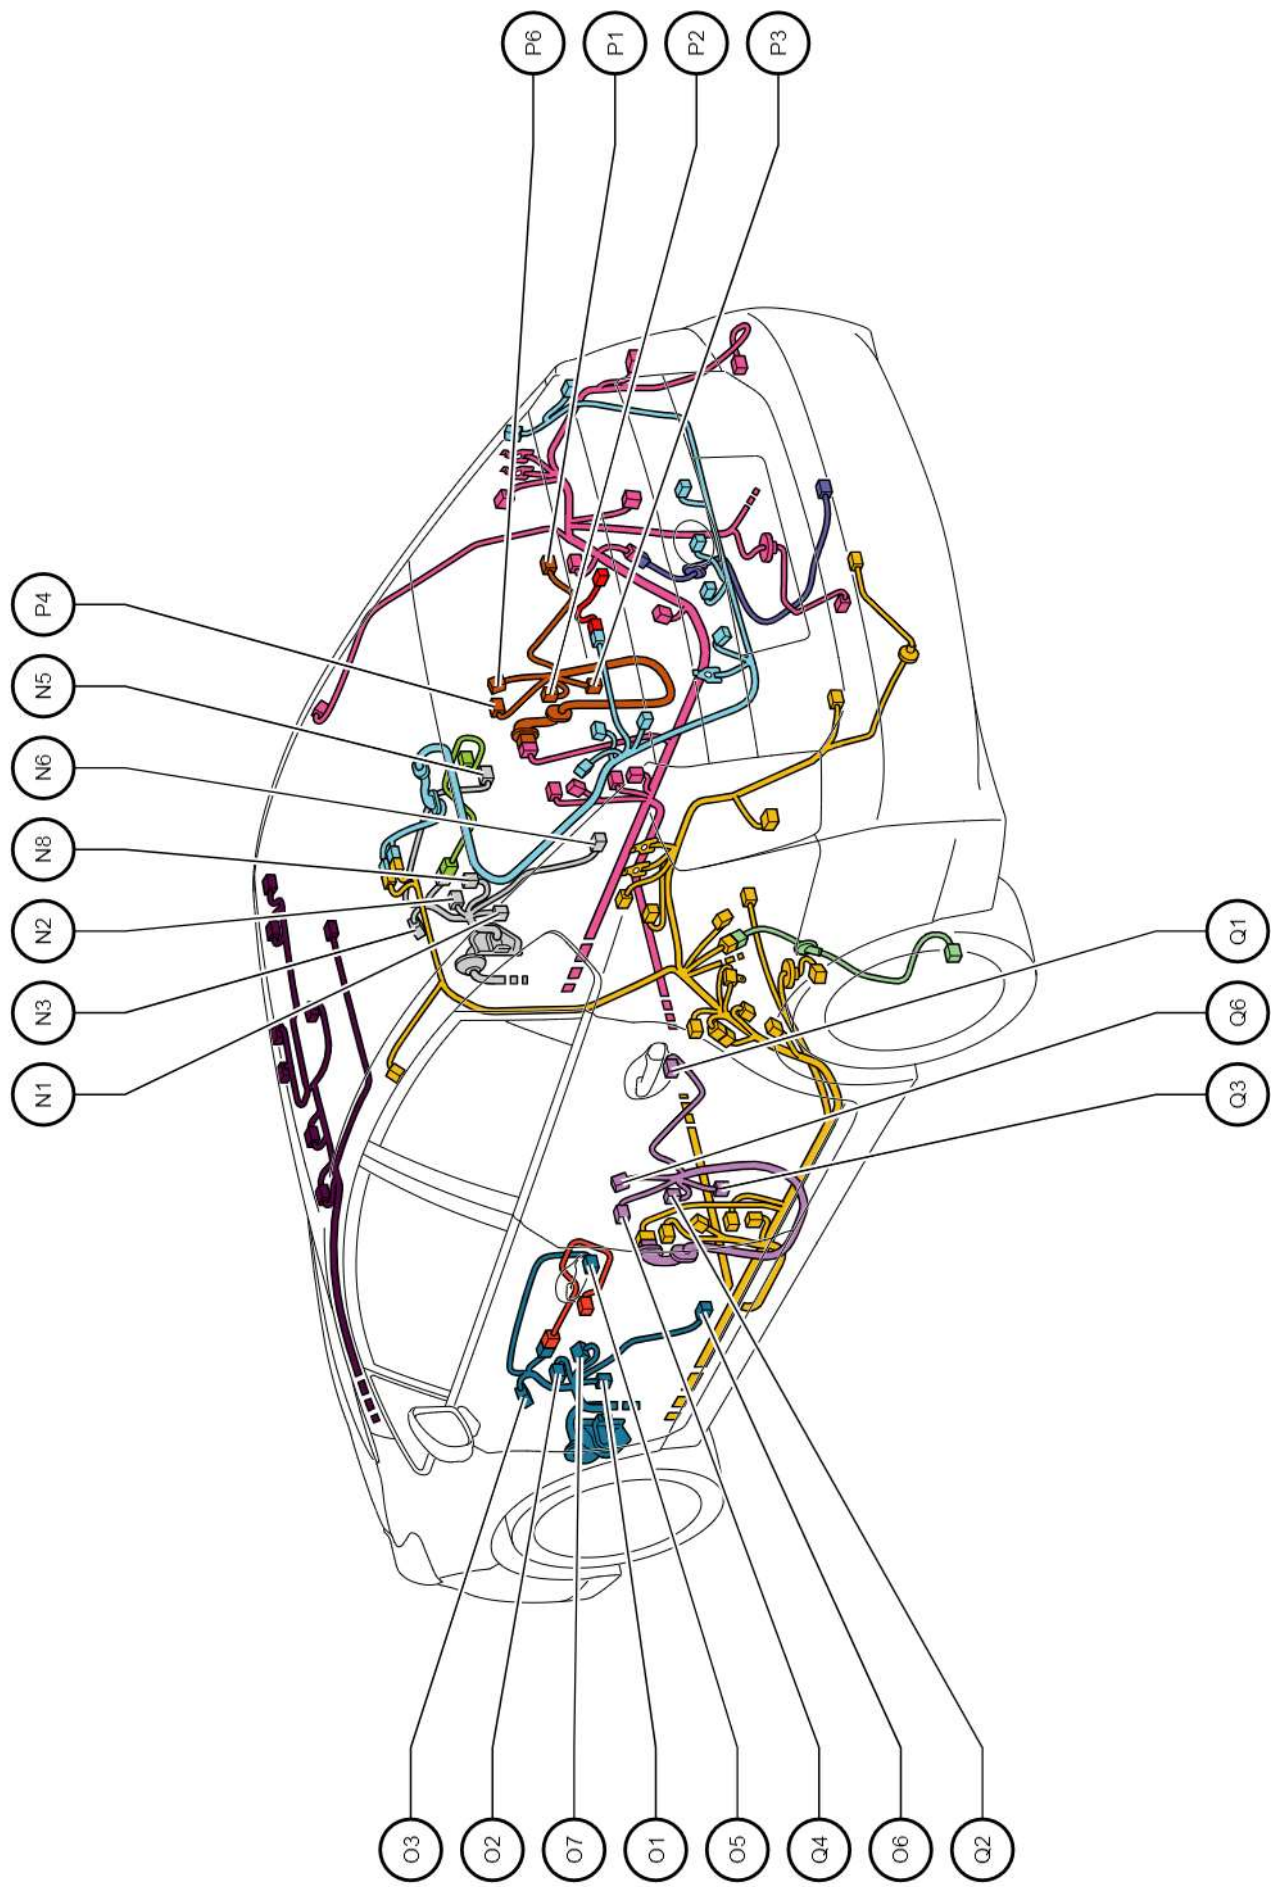


Position of Parts in Body <LHD>




N	1	Front No. 1 Speaker Assembly RH
N	2	Front Power Window Regulator Motor Assembly RH
N	3	Outer Rear View Mirror Assembly RH
N	5	Front Door Lock Assembly RH
N	6	Front Door Courtesy Light Assembly RH
N	8	Front Power Window Regulator Switch Assembly RH
O	1	Front No. 1 Speaker Assembly LH
O	2	Front Power Window Regulator Motor Assembly LH
O	3	Outer Rear View Mirror Assembly LH
O	5	Front Door Lock Assembly LH
O	6	Front Door Courtesy Light Assembly LH
O	7	Multiplex Network Master Switch Assembly
P	1	Rear Door with Motor Lock Assembly RH
P	2	Rear Power Window Regulator Switch Assembly RH
P	3	Rear Speaker Assembly RH
P	4	Rear Power Window Regulator Motor Assembly RH
P	6	Rear No. 2 Speaker Assembly RH
Q	1	Rear Door with Motor Lock Assembly LH
Q	2	Rear Power Window Regulator Switch Assembly LH
Q	3	Rear Speaker Assembly LH
Q	4	Rear Power Window Regulator Motor Assembly LH
Q	6	Rear No. 2 Speaker Assembly LH

       Position of Parts in Body <LHD>

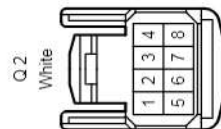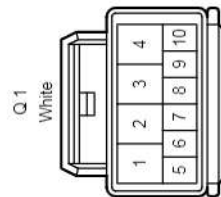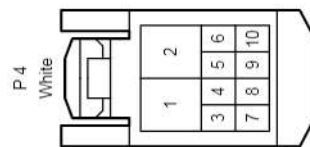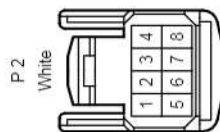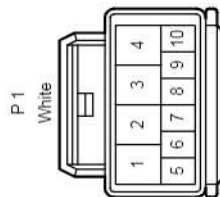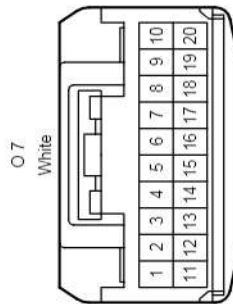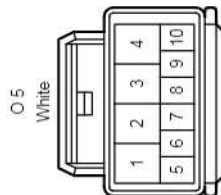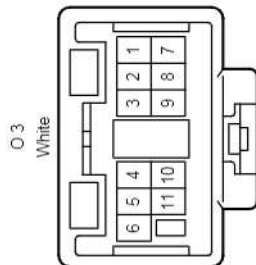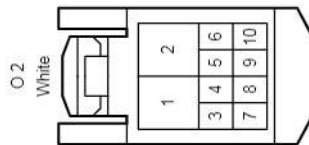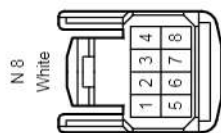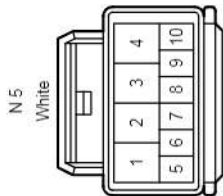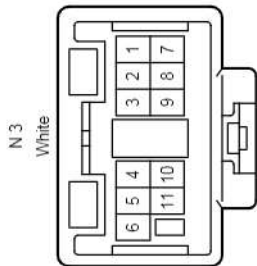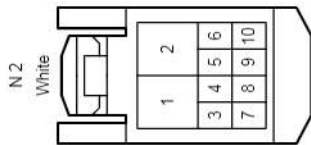

Position of Parts in Body <LHD>

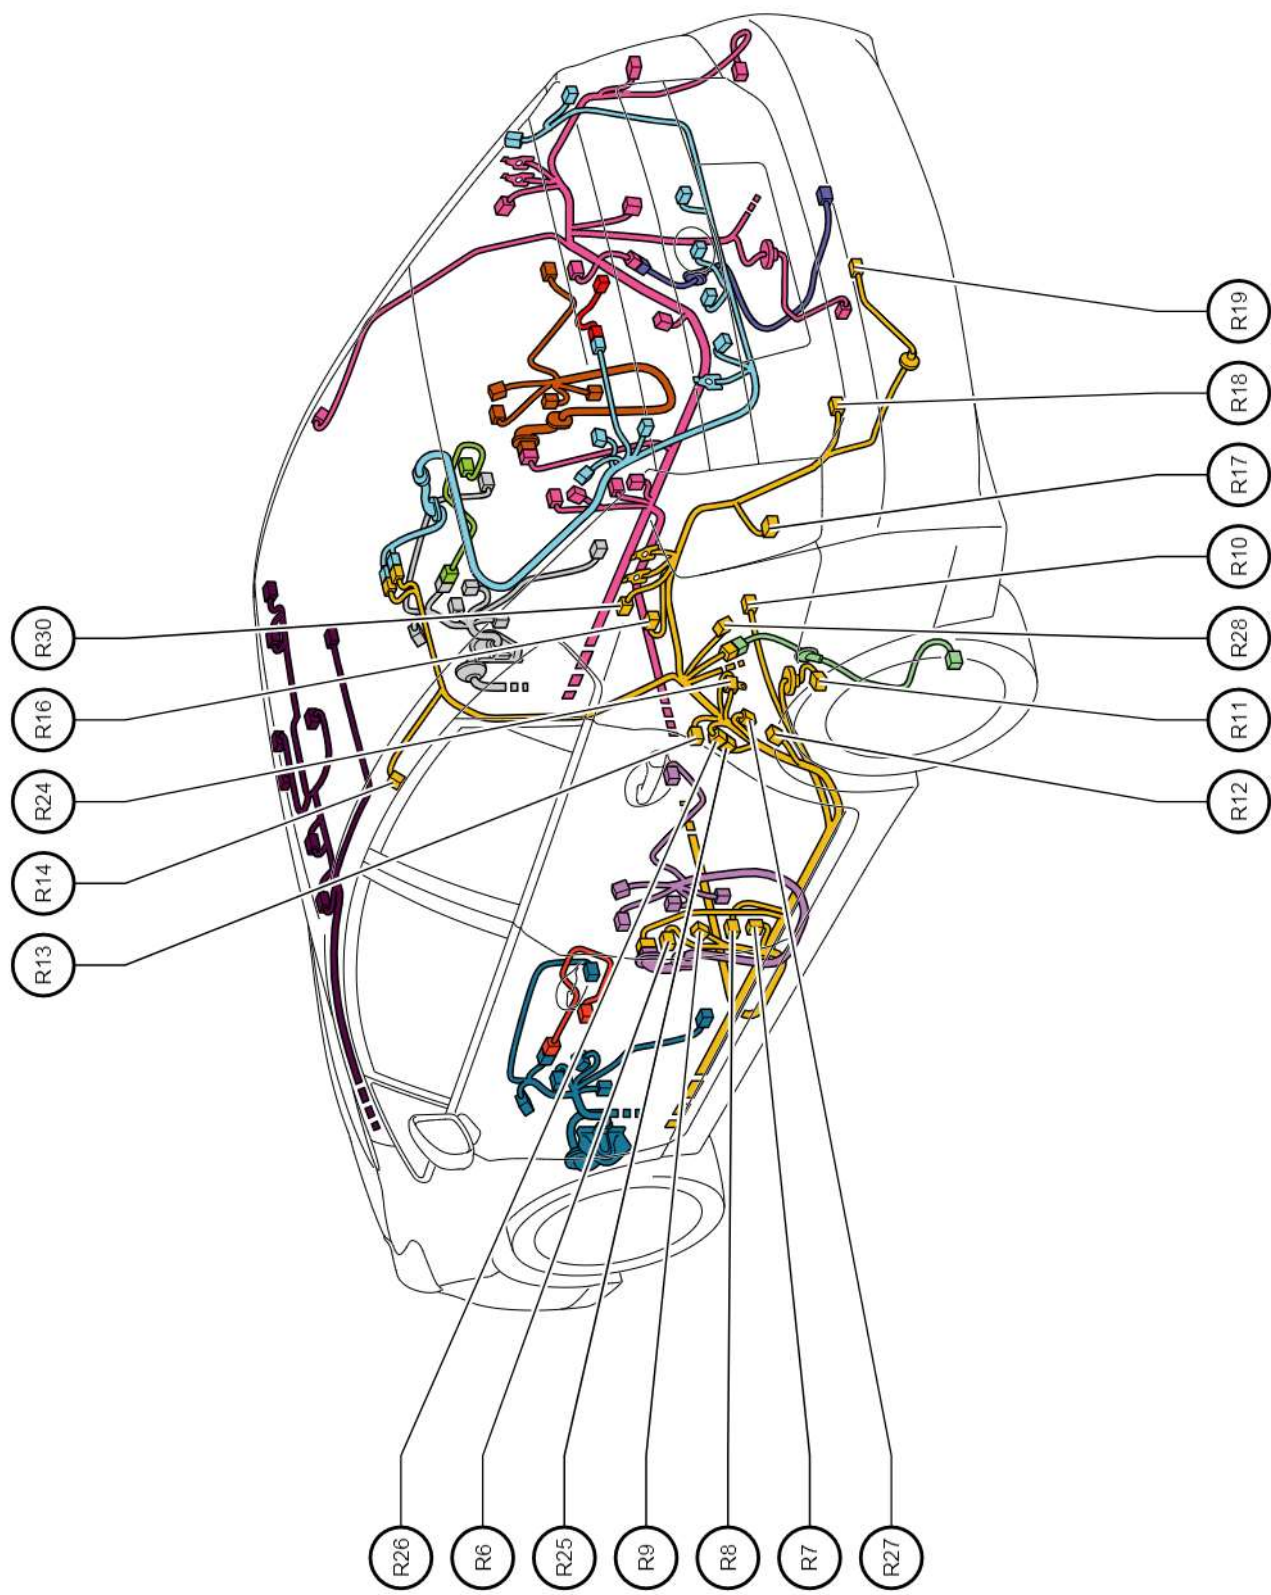


R 6	Front Door Courtesy Light Switch Assembly LH
R 7	Front Seat Outer Belt Assembly LH
R 8	Front Pre-Crash Seat Belt Motor LH
R 9	Front Side Airbag Sensor Assembly LH
R 10	Rear Indoor Electrical Key Oscillator
R 11	Fuel Sender Gauge Assembly
R 12	Rear Side Airbag Sensor Assembly LH
R 13	Rear Door Courtesy Light Switch Assembly LH
R 14	Curtain Shield Airbag Assembly Circuit LH
R 16	No. 2 Room Light Assembly
R 17	Rear Combination Light Assembly LH
R 18	Back Door Lock Assembly
R 19	Outside Luggage Electrical Key Antenna
R 24	Noise Filter (Rear Window Defogger)
R 25	Junction Connector
R 26	Junction Connector
R 27	Diode (Back Door Courtesy Light)
R 28	Junction Connector
R 30	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

Position of Parts in Body <LHD>


R 6
Black




R 7
Yellow

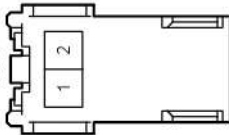


R 8
White

 


R 9
Yellow

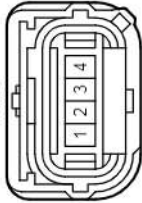


R 10
White

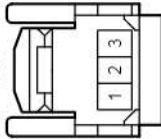

R 11
Dark Gray

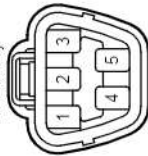


R 12
Yellow

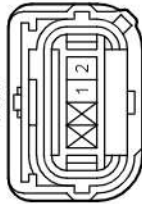

R 13
Black




R 14
Black

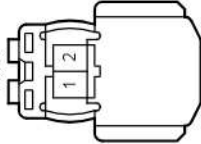

R 16
White



 
R 17
White




R 18
White



 
R 19
White




R 24
Black

 

R 25
White

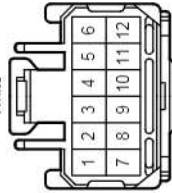


R 26
White

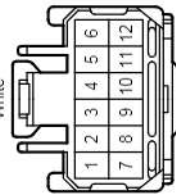


R 27
Black




R 28
Black

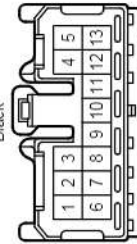


R 30
Black

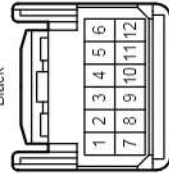


Position of Parts in Body <LHD>

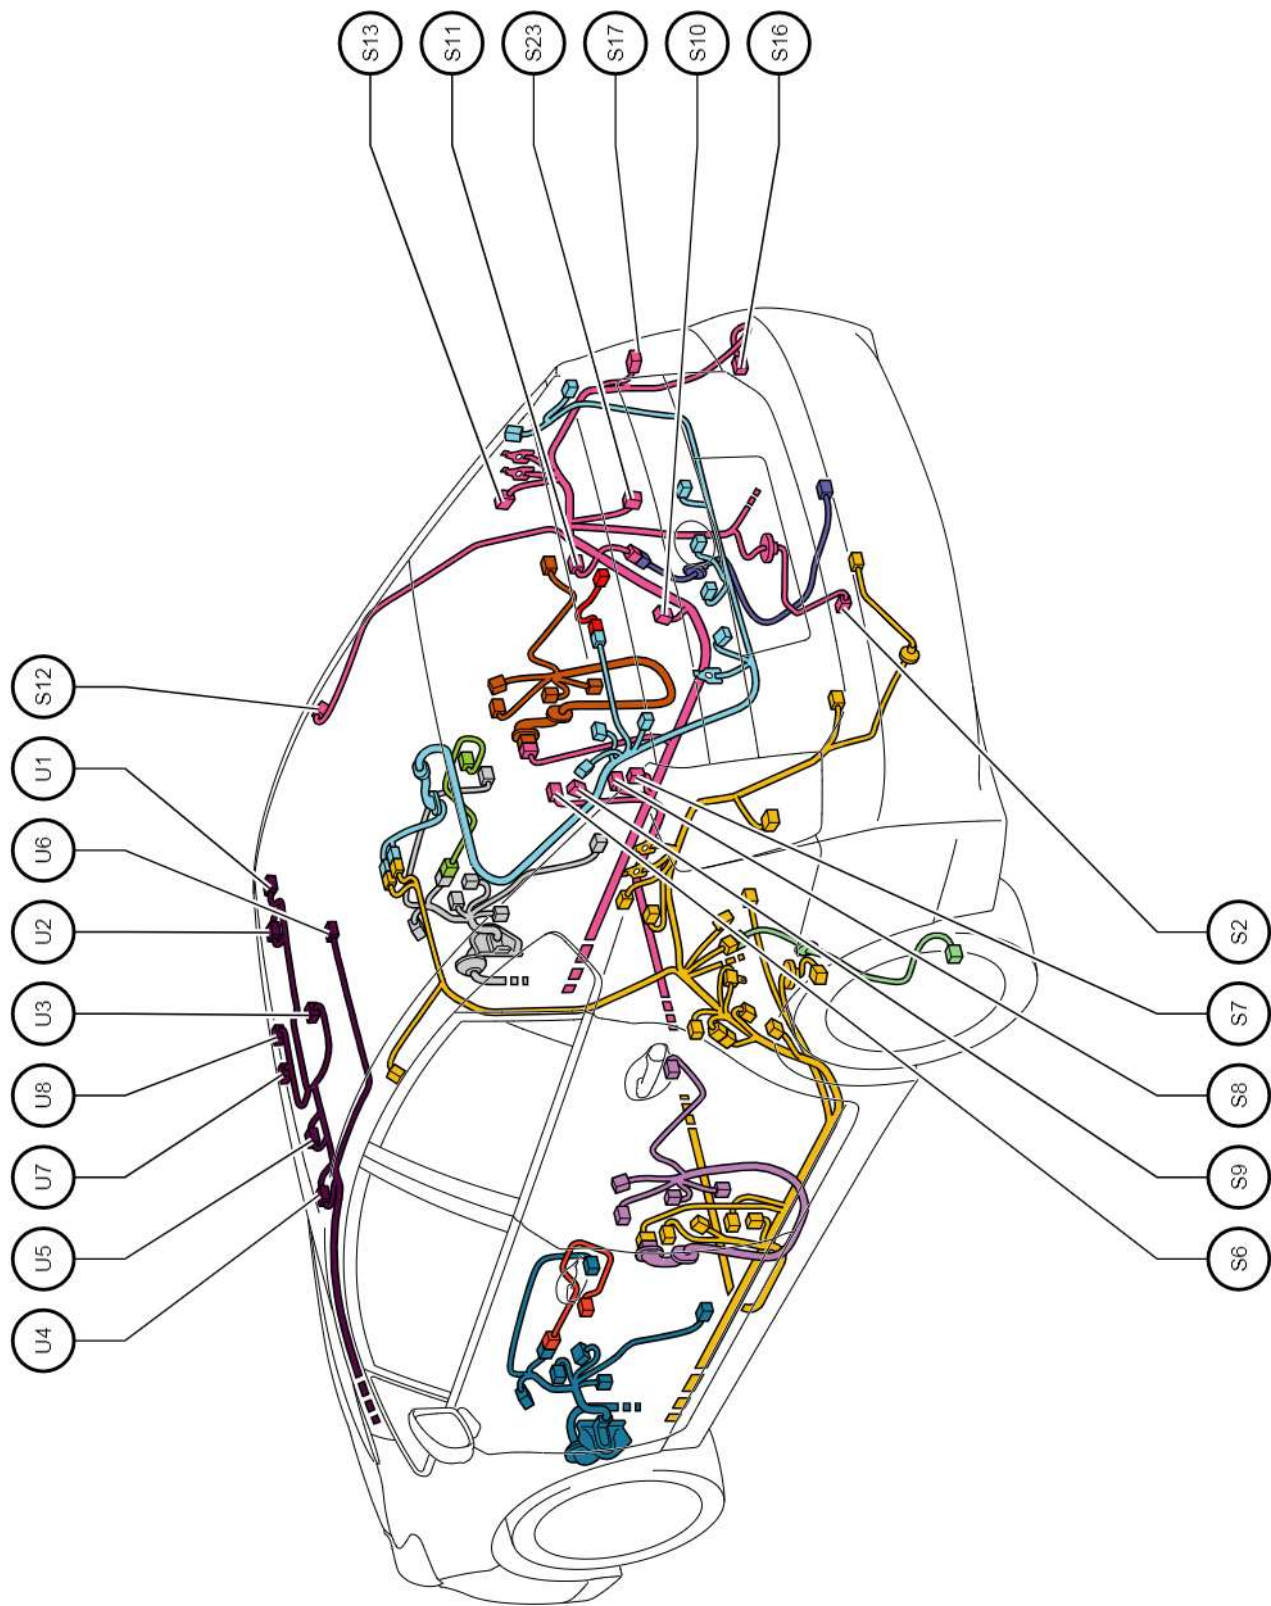

S	2	Rear Height Control Sensor Sub-Assembly RH
S	6	Front Door Courtesy Light Switch Assembly RH
S	7	Front Seat Outer Belt Assembly RH
S	8	Front Pre-Crash Seat Belt Motor RH
S	9	Front Side Airbag Sensor Assembly RH
S	10	Rear Side Airbag Sensor Assembly RH
S	11	Rear Door Courtesy Light Switch Assembly RH
S	12	Curtain Shield Airbag Assembly Circuit RH
S	13	Door Control Receiver
S	16	HV Battery Thermometer (Thermistor Assembly)
S	17	Rear Combination Light Assembly RH
S	23	Junction Connector
U	1	Visor Assembly RH
U	2	Vanity Light Assembly RH
U	3	Map Light Assembly
U	4	Visor Assembly LH
U	5	Vanity Light Assembly LH
U	6	No. 1 Room Light Assembly
U	7	Inner Rear View Mirror Assembly
U	8	Rain Sensor

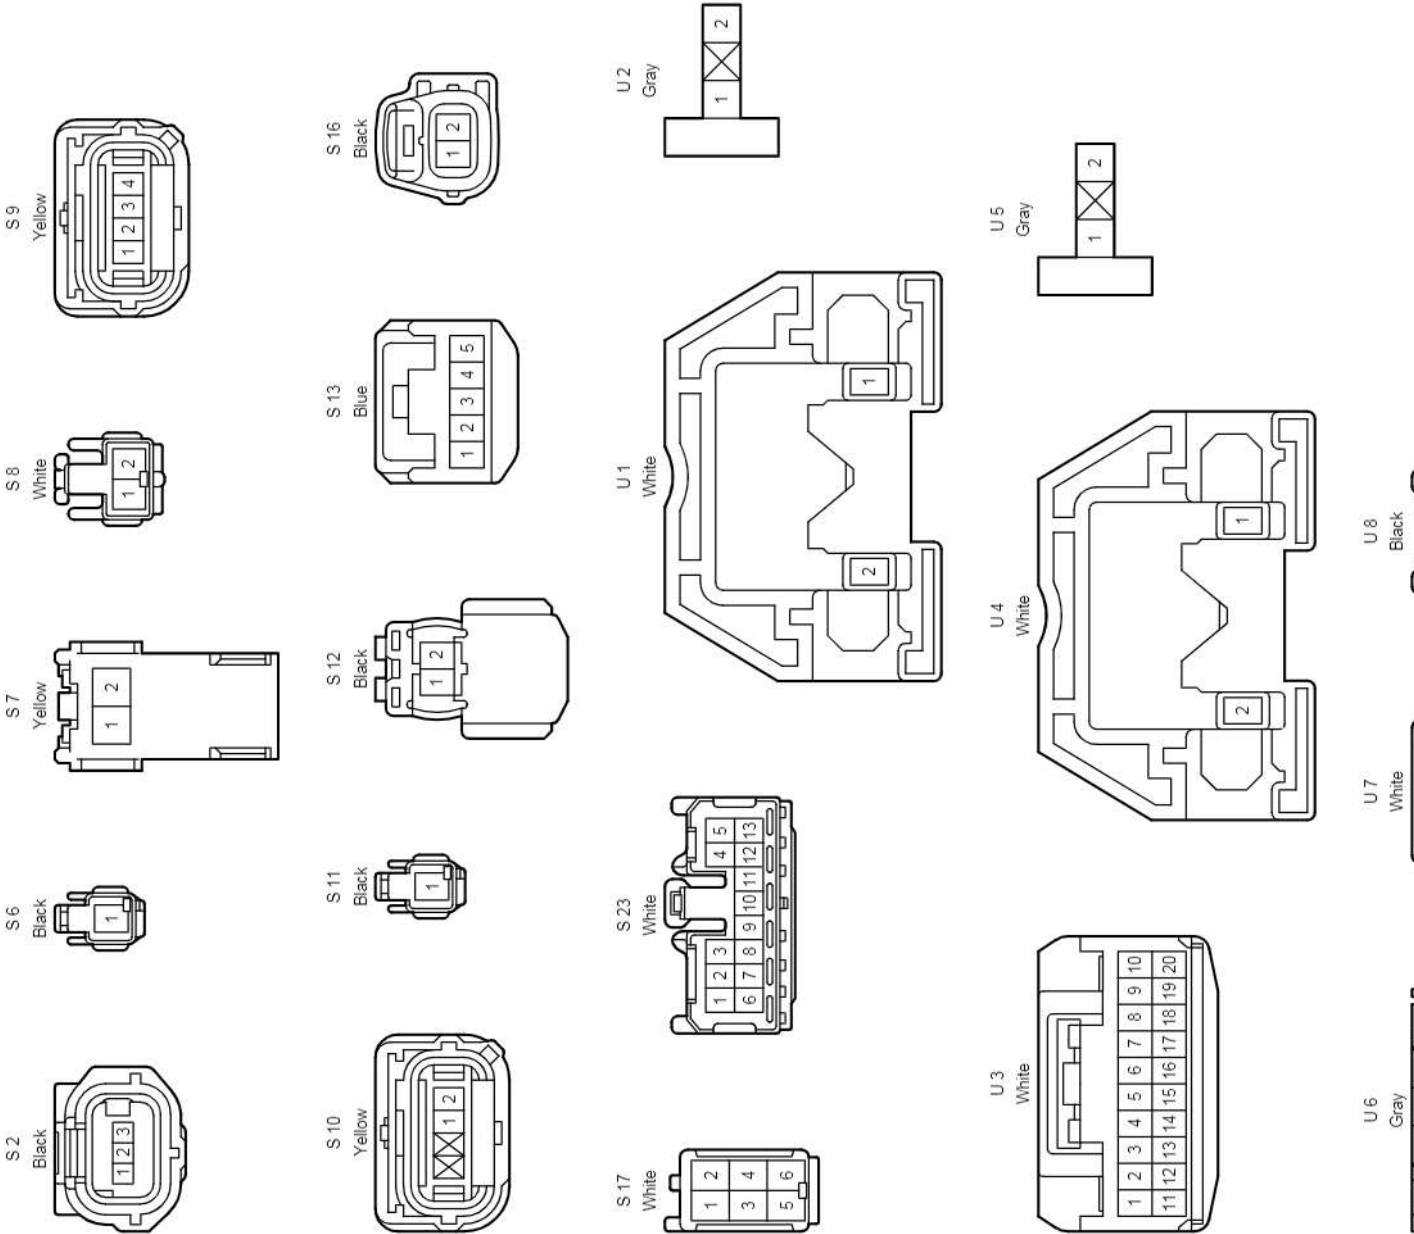



Position of Parts in Body <LHD>

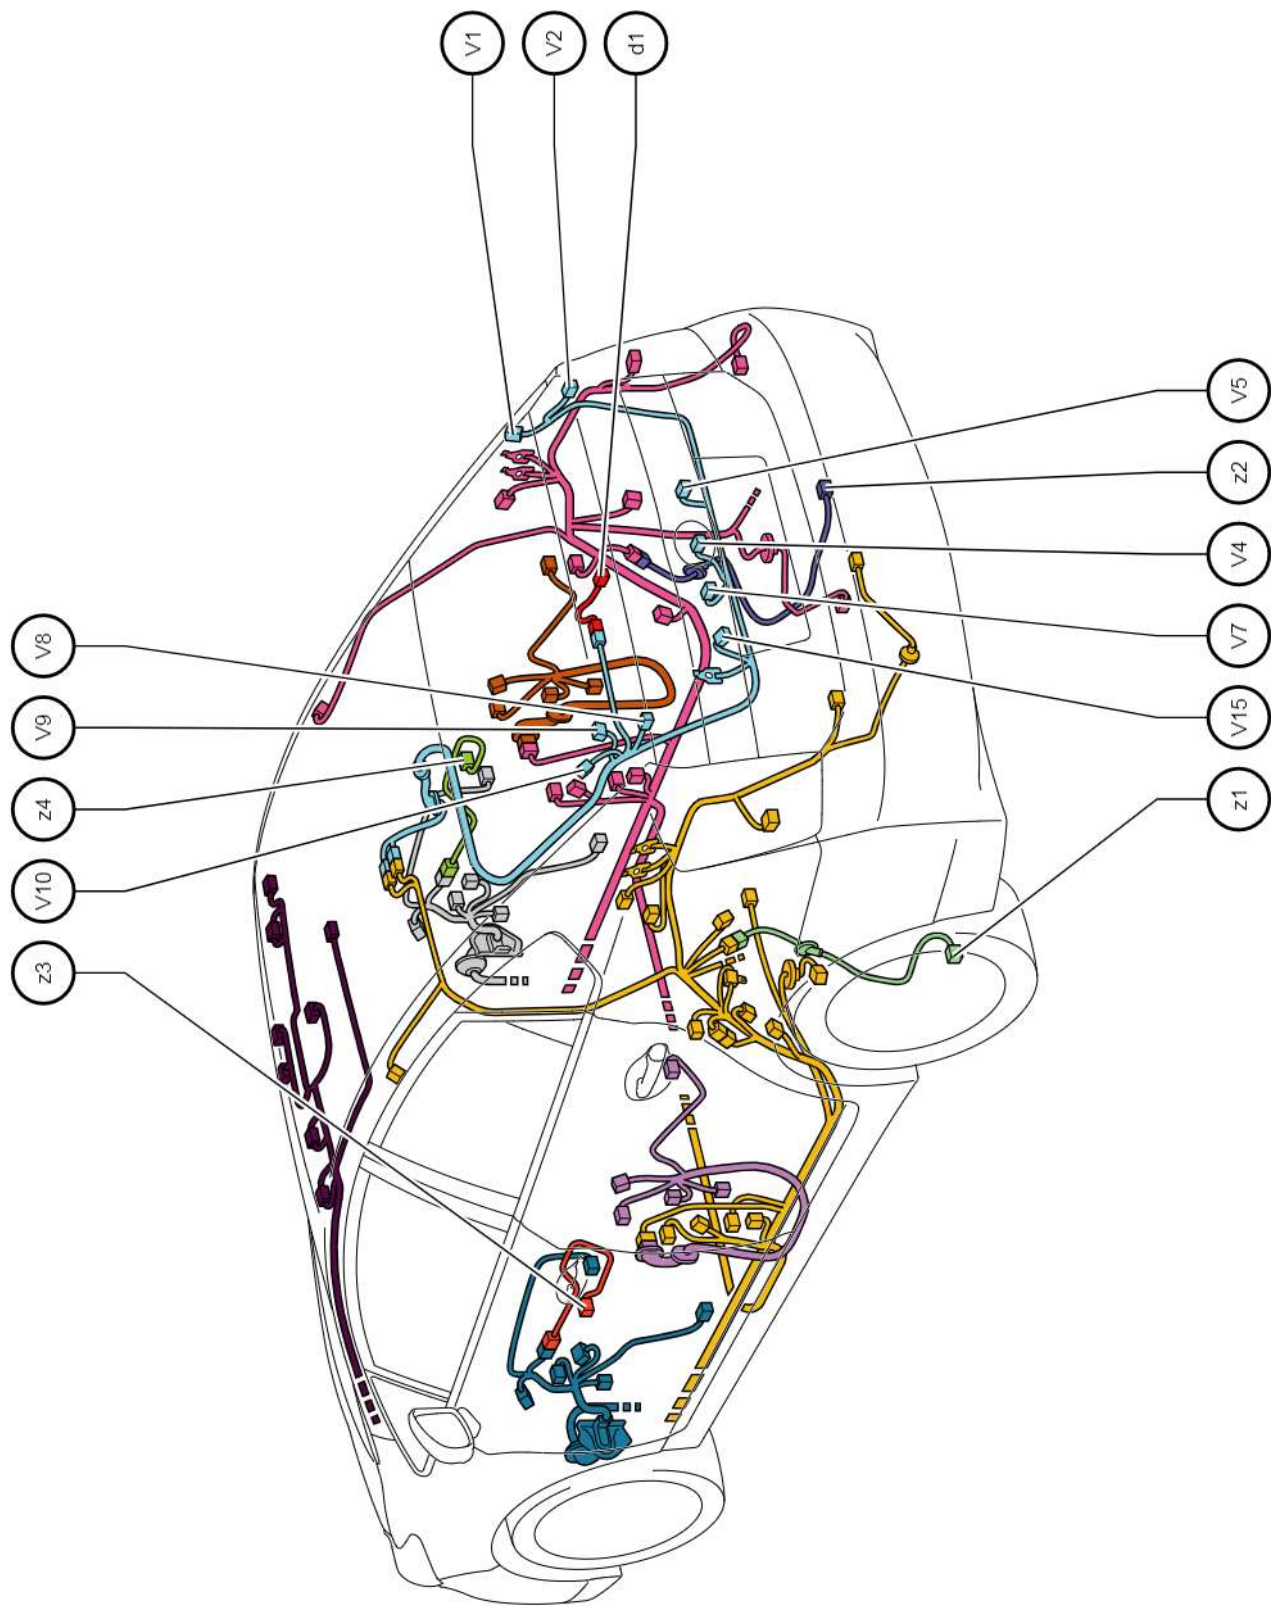



V	1	Rear Window Defogger (Back Door Glass)
V	2	Rear Window Defogger (Back Window Fix Glass)
V	4	Back Door Opener Switch Assembly
V	5	License Plate Light Assembly RH
V	7	License Plate Light Assembly LH
V	8	Rear Window Defogger (Back Window Fix Glass)
V	9	Rear Wiper Motor Assembly
V	10	Rear Window Defogger (Back Door Glass)
V	15	Rear Television Camera Assembly
d	1	Center Stop Light Assembly
z	1	Rear Speed Sensor LH
z	2	Rear Speed Sensor RH
z	3	Front Door Outside Handle Assembly LH
z	4	Front Door Outside Handle Assembly RH

Position of Parts in Body <LHD>


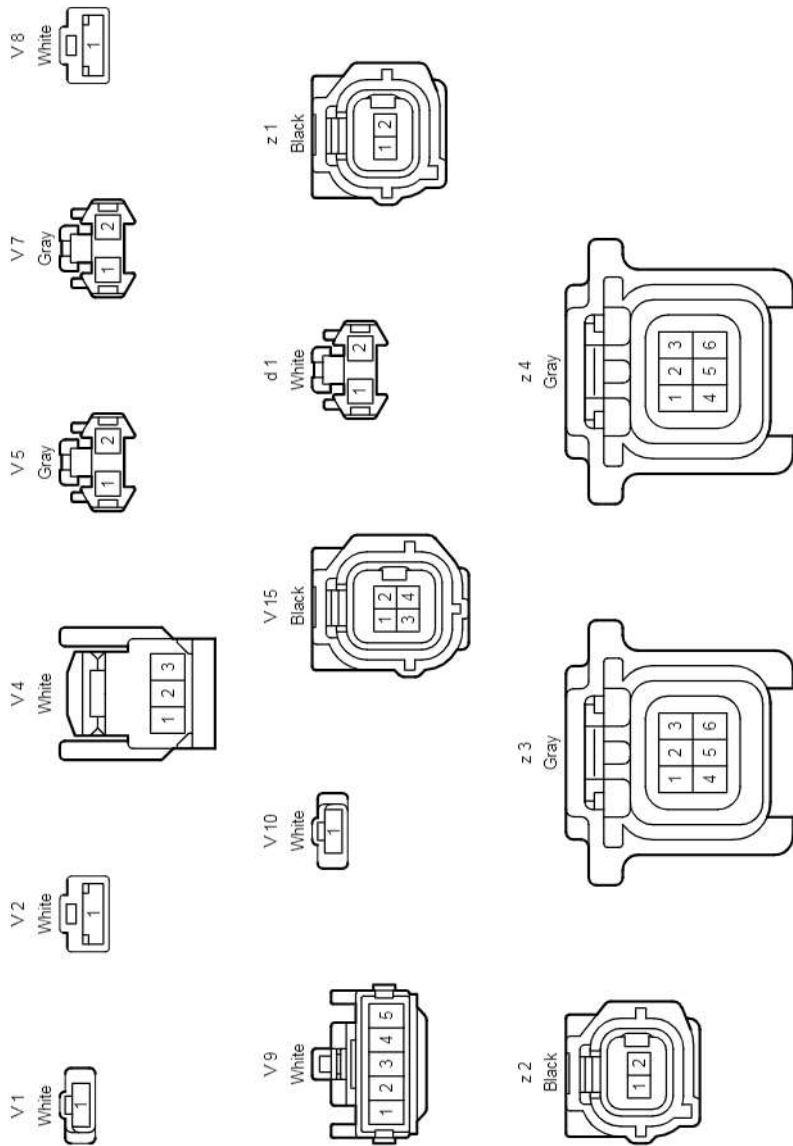


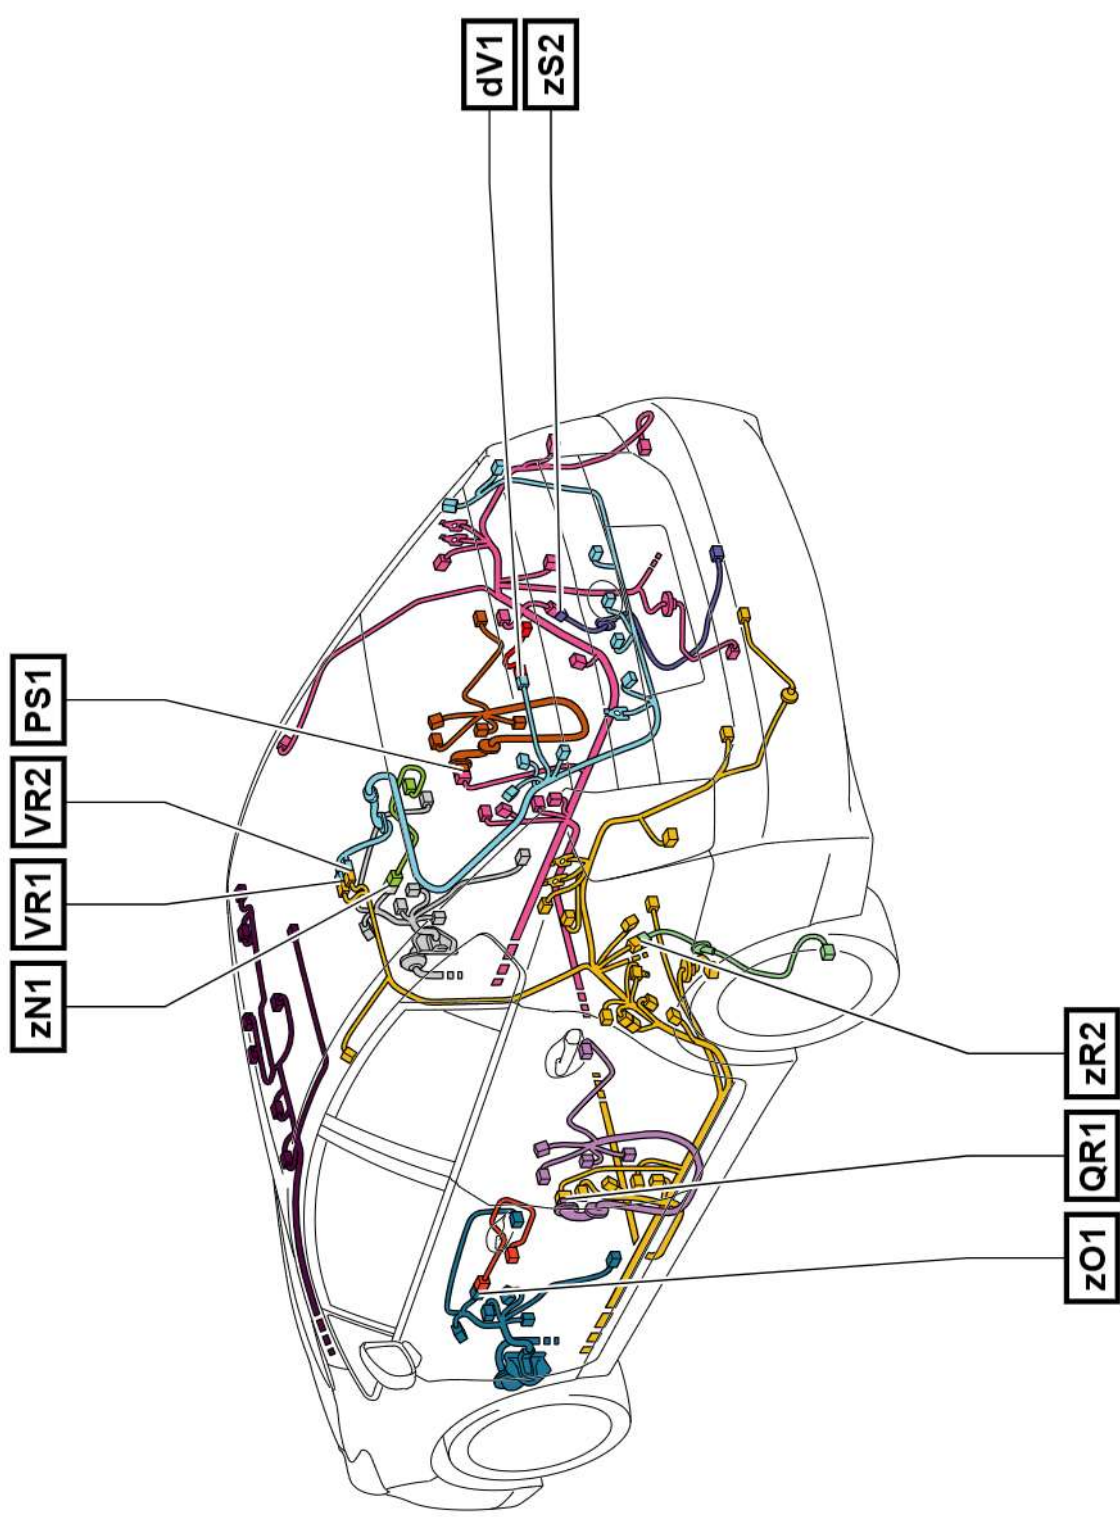



PS1
White

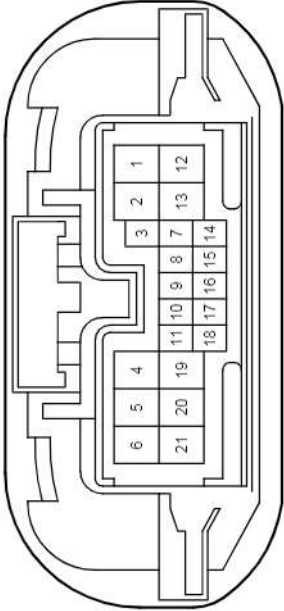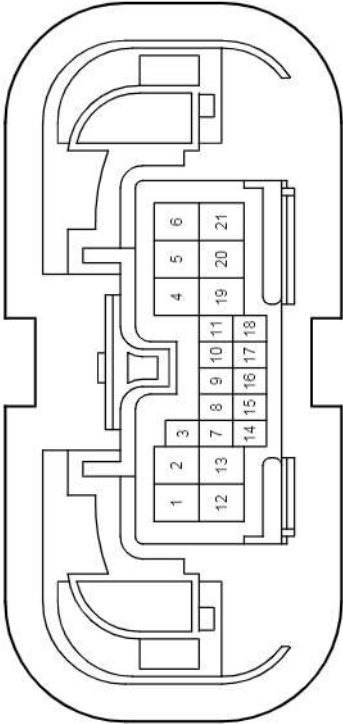


QR1
White

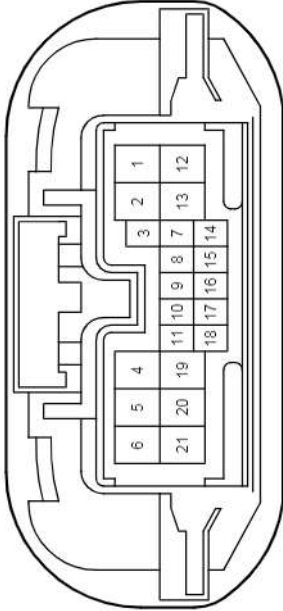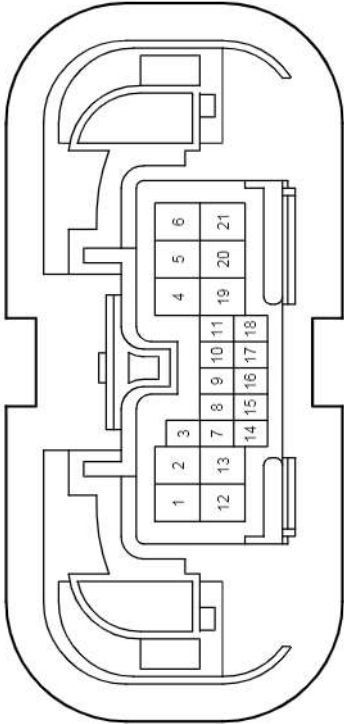

VR1
White

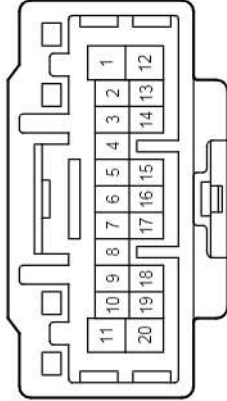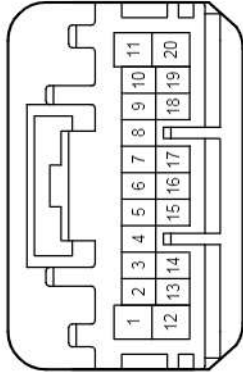


VR2
White

 


dV1
Gray

dV1
Black


zN1
Blue

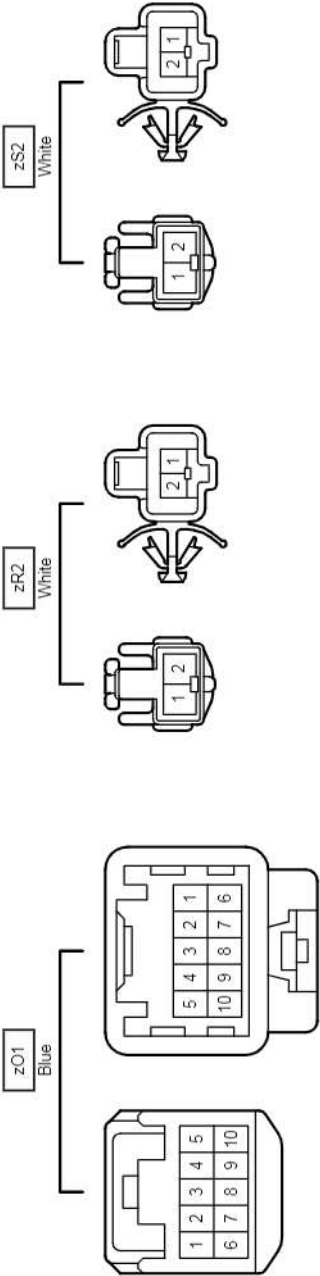

Ground Points in Body <RHD>



















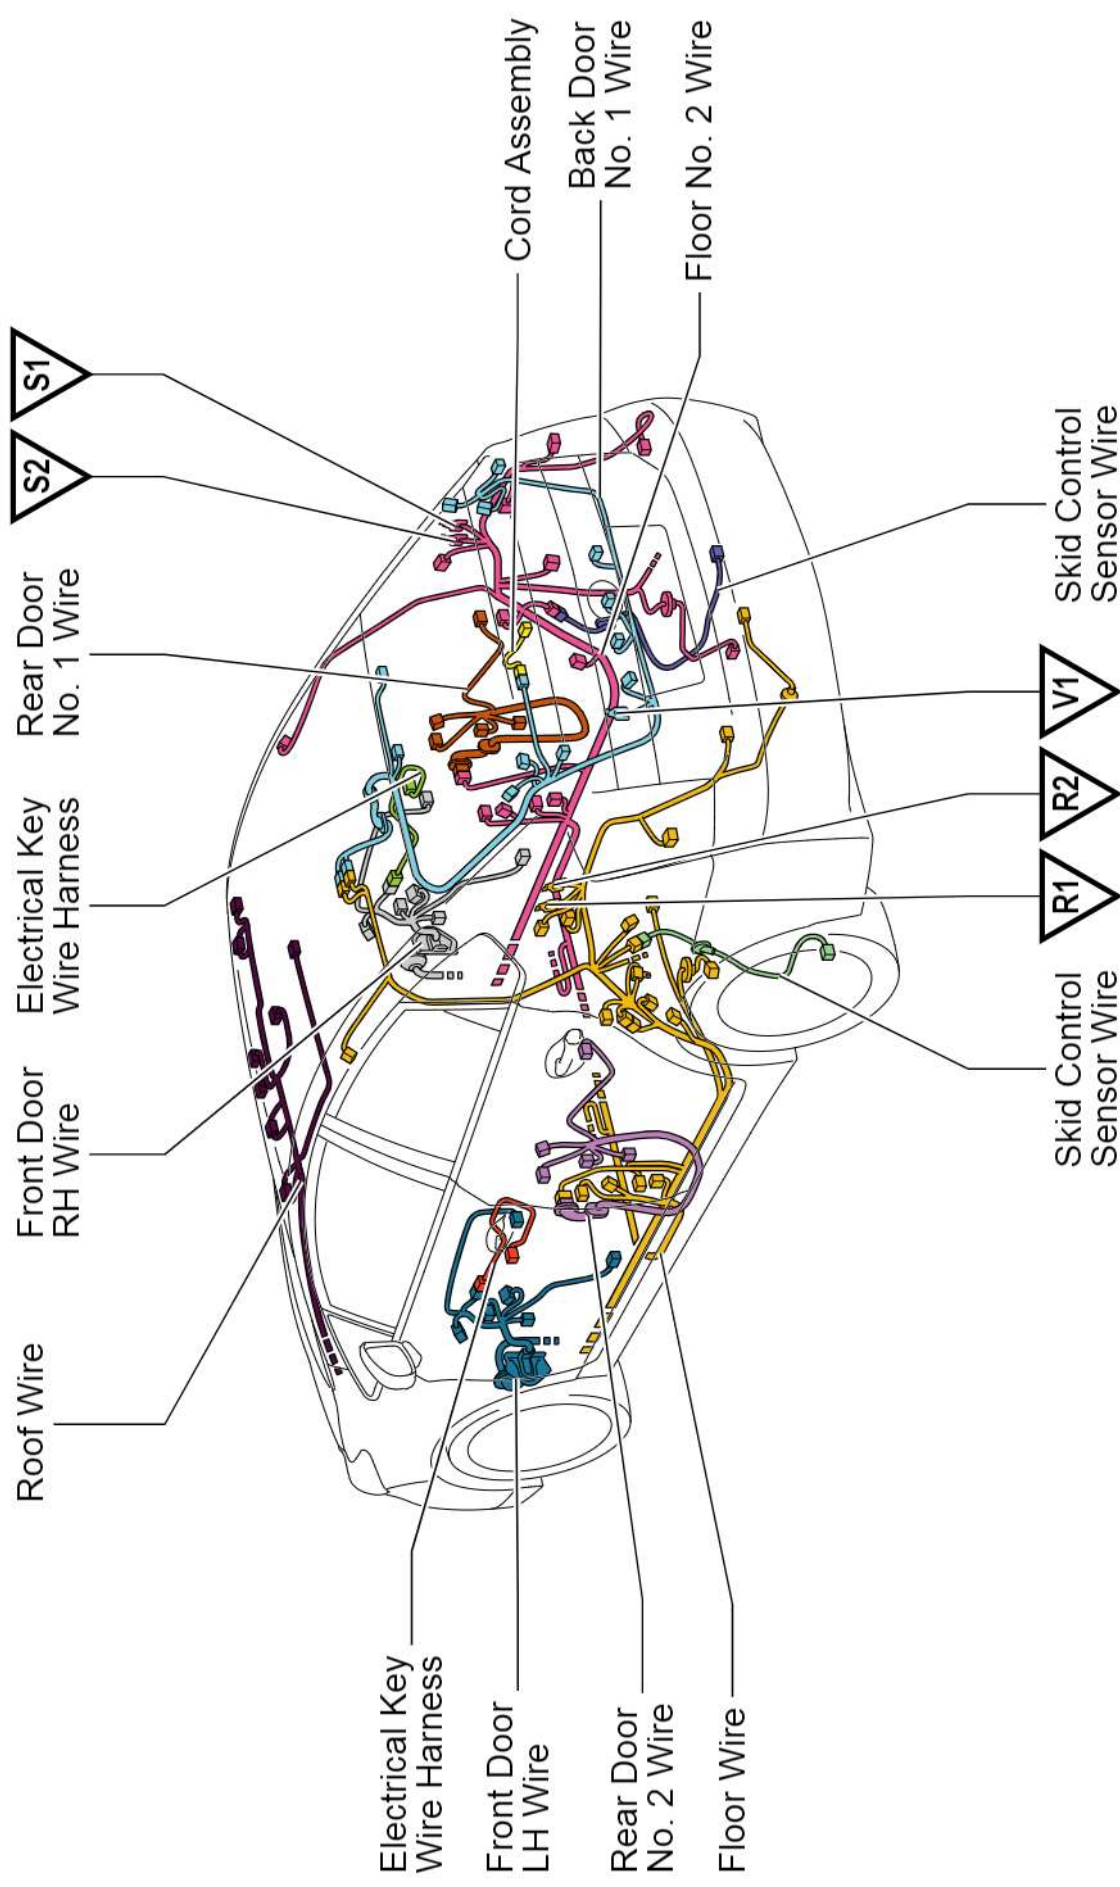


Position of Parts in Body <RHD>

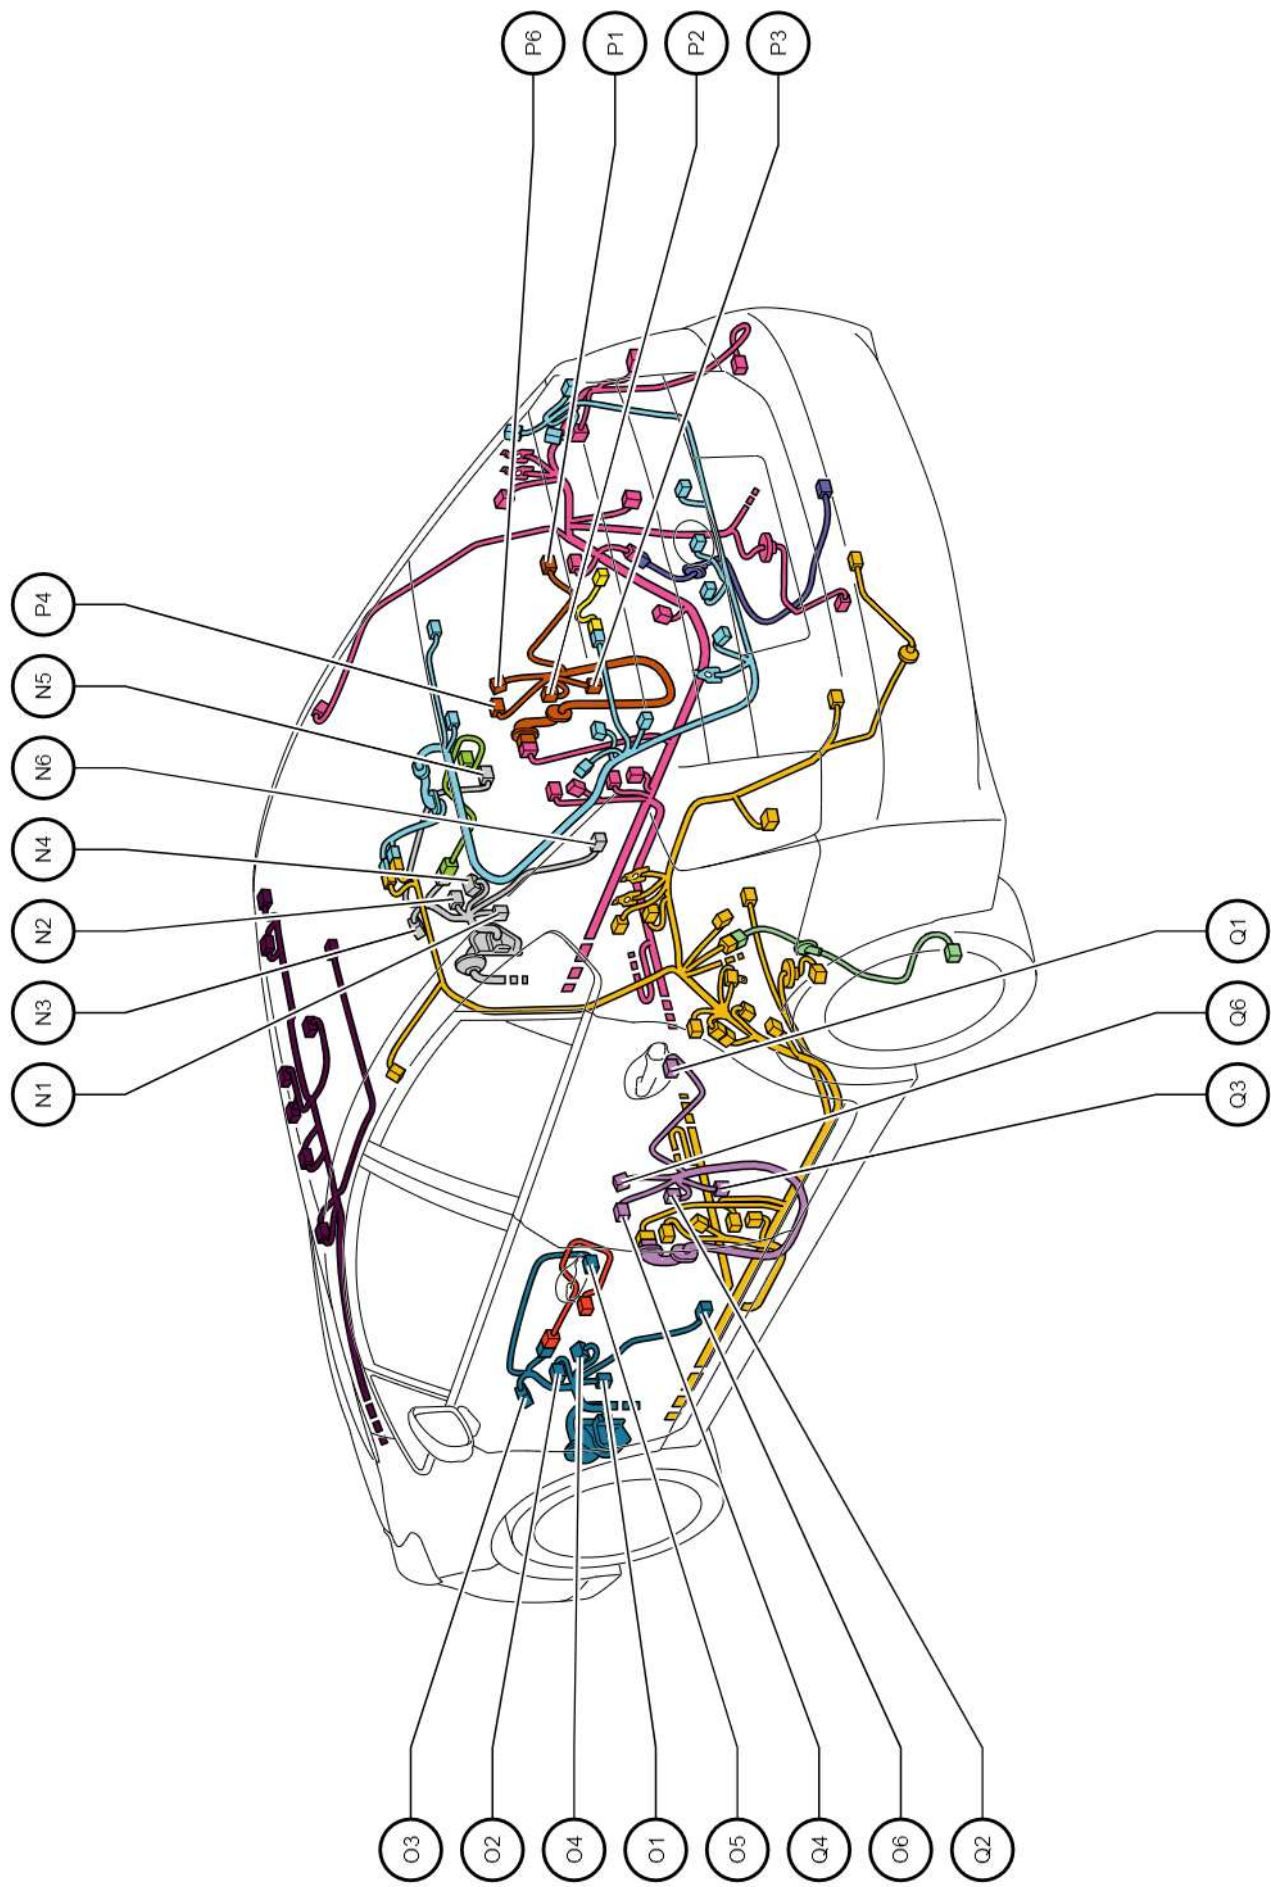


N	1	Front No. 1 Speaker Assembly RH
N	2	Front Power Window Regulator Motor Assembly RH
N	3	Outer Rear View Mirror Assembly RH
N	4	Multiplex Network Master Switch Assembly
N	5	Front Door Lock Assembly RH
N	6	Front Door Courtesy Light Assembly RH
O	1	Front No. 1 Speaker Assembly LH
O	2	Front Power Window Regulator Motor Assembly LH
O	3	Outer Rear View Mirror Assembly LH
O	4	Front Power Window Regulator Switch Assembly LH
O	5	Front Door Lock Assembly LH
O	6	Front Door Courtesy Light Assembly LH
P	1	Rear Door with Motor Lock Assembly RH
P	2	Rear Power Window Regulator Switch Assembly RH
P	3	Rear Speaker Assembly RH
P	4	Rear Power Window Regulator Motor Assembly RH
P	6	Rear No. 2 Speaker Assembly RH
Q	1	Rear Door with Motor Lock Assembly LH
Q	2	Rear Power Window Regulator Switch Assembly LH
Q	3	Rear Speaker Assembly LH
Q	4	Rear Power Window Regulator Motor Assembly LH
Q	6	Rear No. 2 Speaker Assembly LH

      Position of Parts in Body <RHD>

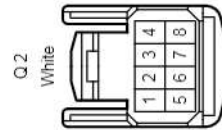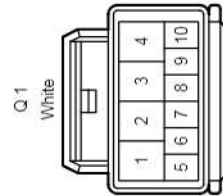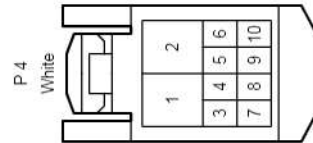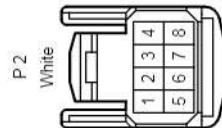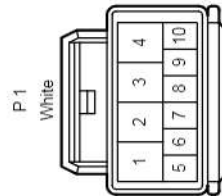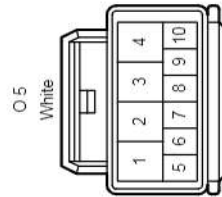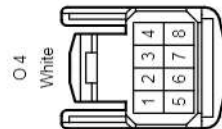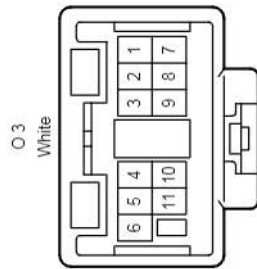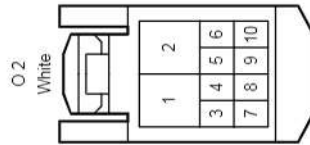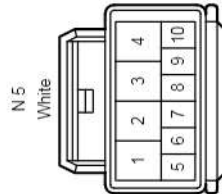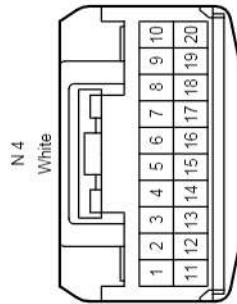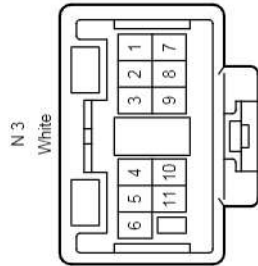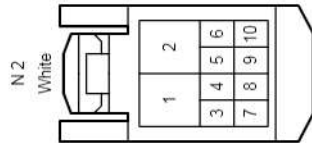

Position of Parts in Body <RHD>

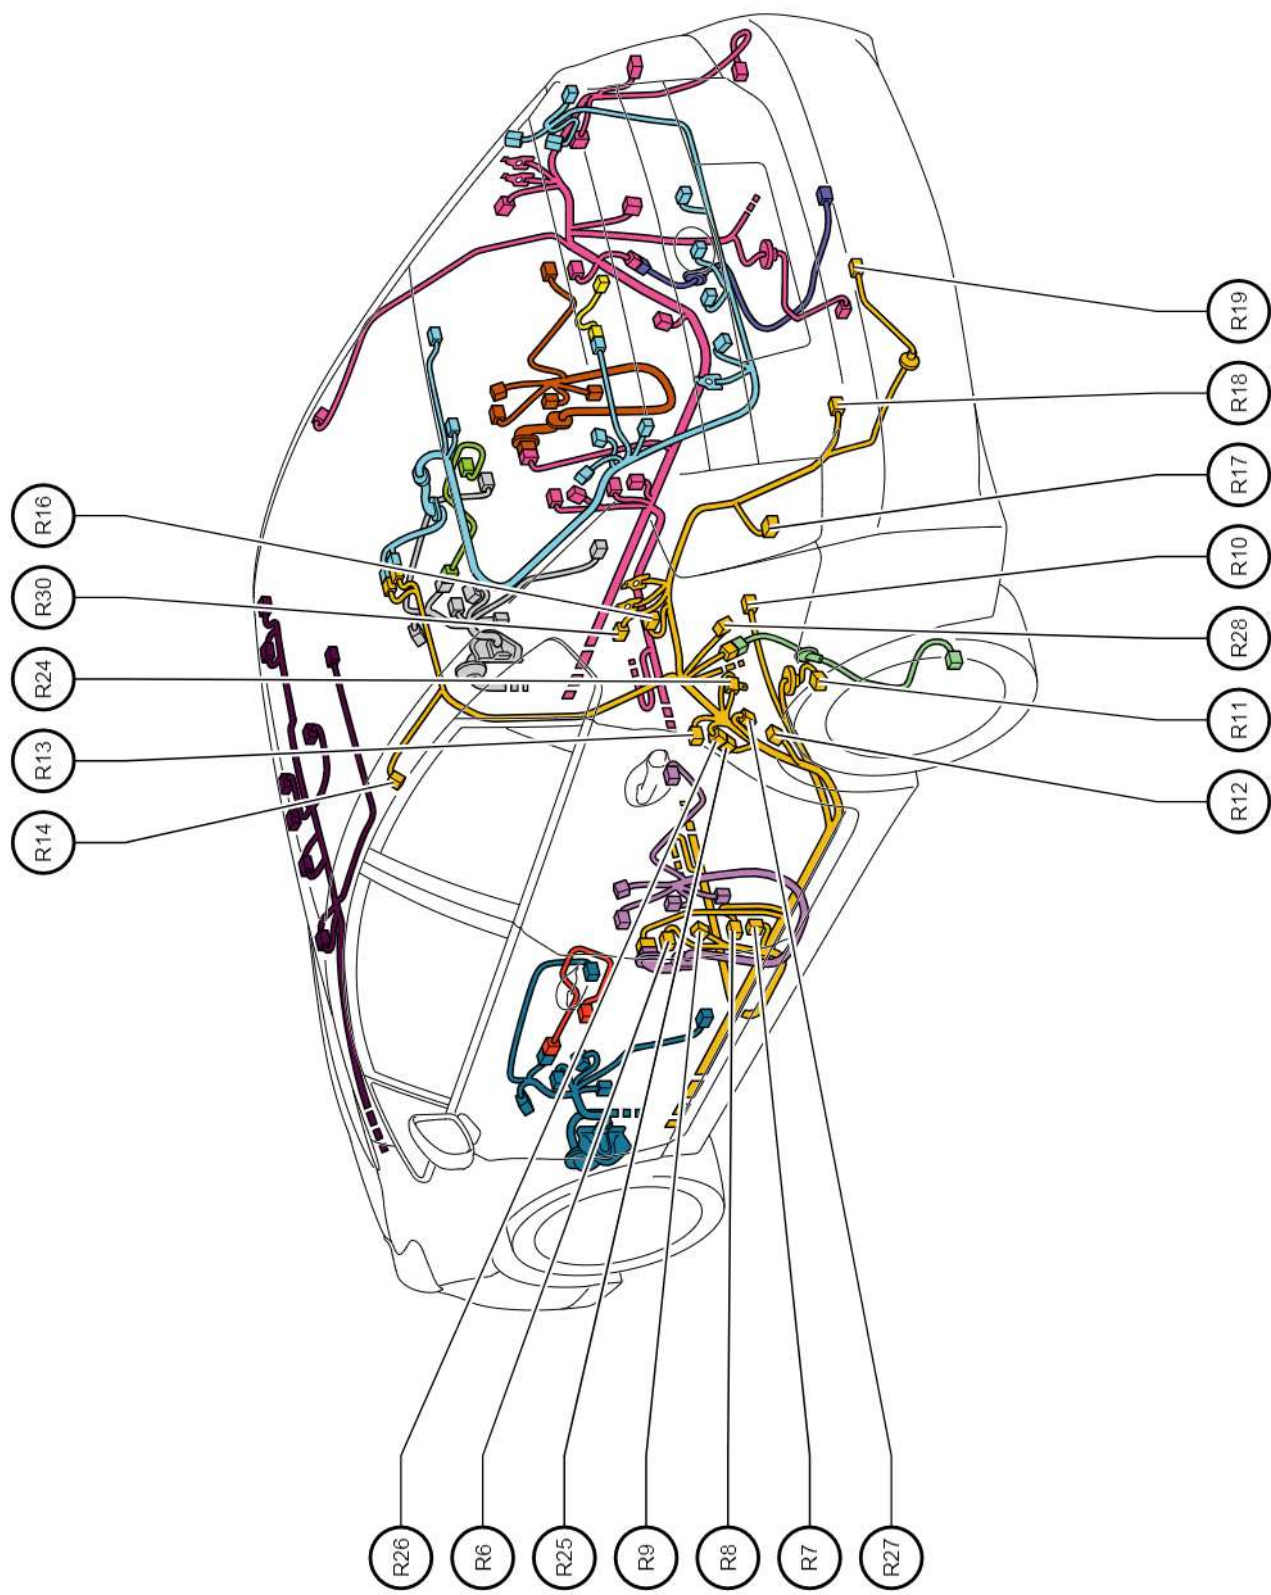


R 6	Front Door Courtesy Light Switch Assembly LH
R 7	Front Seat Outer Belt Assembly LH
R 8	Front Pre-Crash Seat Belt Motor LH
R 9	Front Side Airbag Sensor Assembly LH
R 10	Rear Indoor Electrical Key Oscillator
R 11	Fuel Sender Gauge Assembly
R 12	Rear Side Airbag Sensor Assembly LH
R 13	Rear Door Courtesy Light Switch Assembly LH
R 14	Curtain Shield Airbag Assembly Circuit LH
R 16	No. 2 Room Light Assembly
R 17	Rear Combination Light Assembly LH
R 18	Back Door Lock Assembly
R 19	Outside Luggage Electrical Key Antenna
R 24	Noise Filter (Rear Window Defogger)
R 25	Junction Connector
R 26	Junction Connector
R 27	Diode (Back Door Courtesy Light)
R 28	Junction Connector
R 30	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

Position of Parts in Body <RHD>


R 6
Black




R 7
Yellow

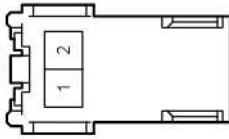


R 8
White

 


R 9
Yellow

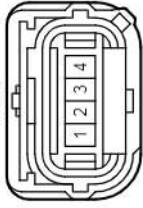


R 10
White

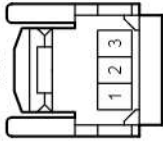

R 11
Dark Gray

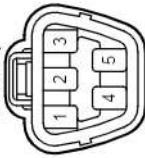


R 12
Yellow

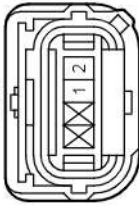


R 13
Black




R 14
Black

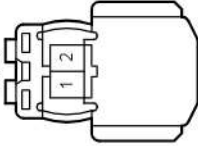


R 16
White

 


R 17
White

 


R 18
White

 


R 19
White

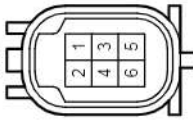


R 24
Black

 

R 25
White

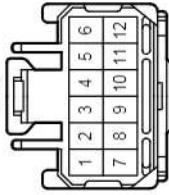


R 26
White

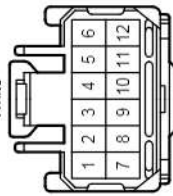


R 27
Black




R 28
Black

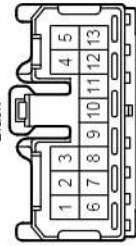

R 30
Black

















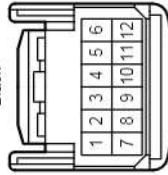


Position of Parts in Body <RHD>

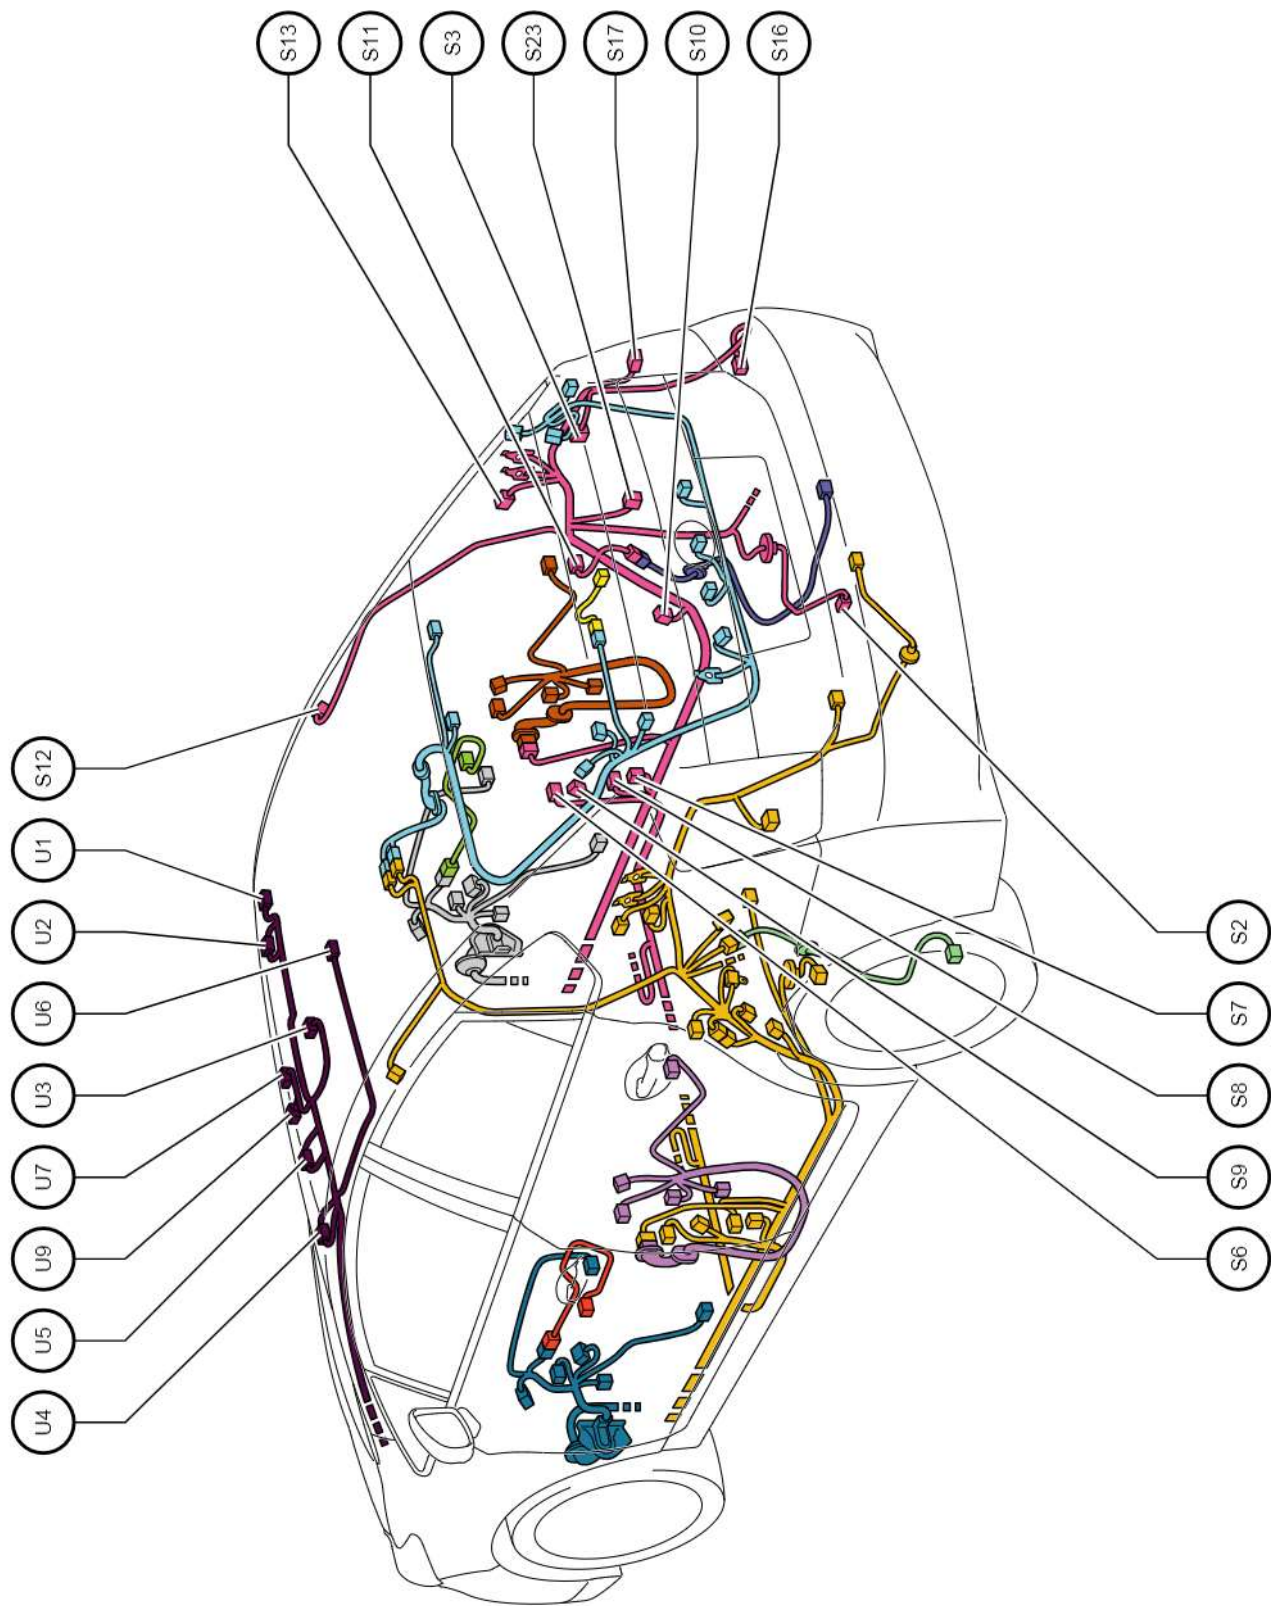


S	2	Rear Height Control Sensor Sub-Assembly RH
S	3	Theft Warning Siren Assembly
S	6	Front Door Courtesy Light Switch Assembly RH
S	7	Front Seat Outer Belt Assembly RH
S	8	Front Pre-Crash Seat Belt Motor RH
S	9	Front Side Airbag Sensor Assembly RH
S	10	Rear Side Airbag Sensor Assembly RH
S	11	Rear Door Courtesy Light Switch Assembly RH
S	12	Curtain Shield Airbag Assembly Circuit RH
S	13	Door Control Receiver
S	16	HV Battery Thermometer (Thermistor Assembly)
S	17	Rear Combination Light Assembly RH
S	23	Junction Connector
U	1	Visor Assembly RH
U	2	Vanity Light Assembly RH
U	3	Map Light Assembly
U	4	Visor Assembly LH
U	5	Vanity Light Assembly LH
U	6	No. 1 Room Light Assembly
U	7	Inner Rear View Mirror Assembly
U	9	Rain Sensor

    Position of Parts in Body <RHD>

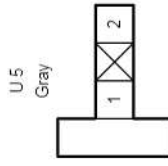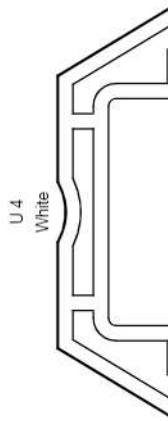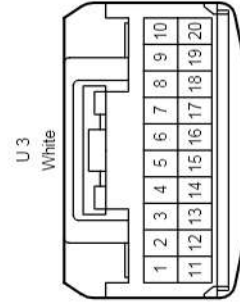
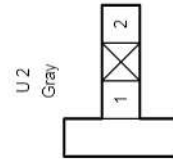
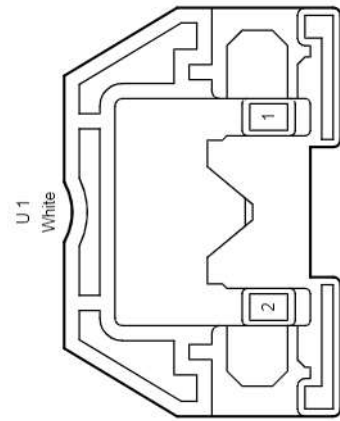
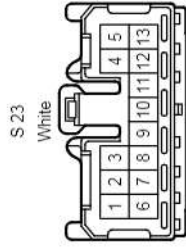
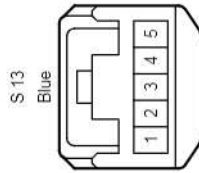
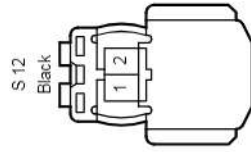

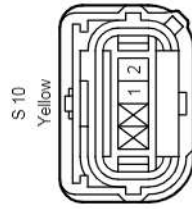
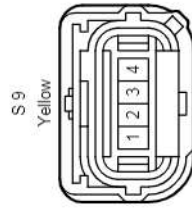

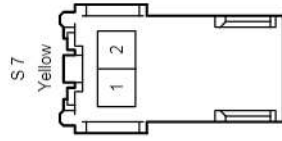

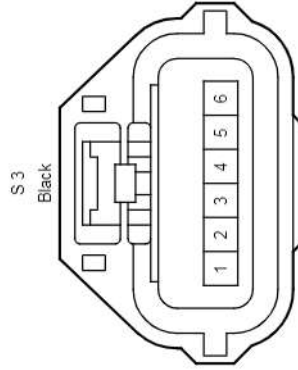
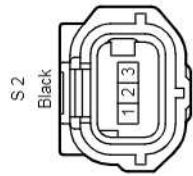



Position of Parts in Body <RHD>

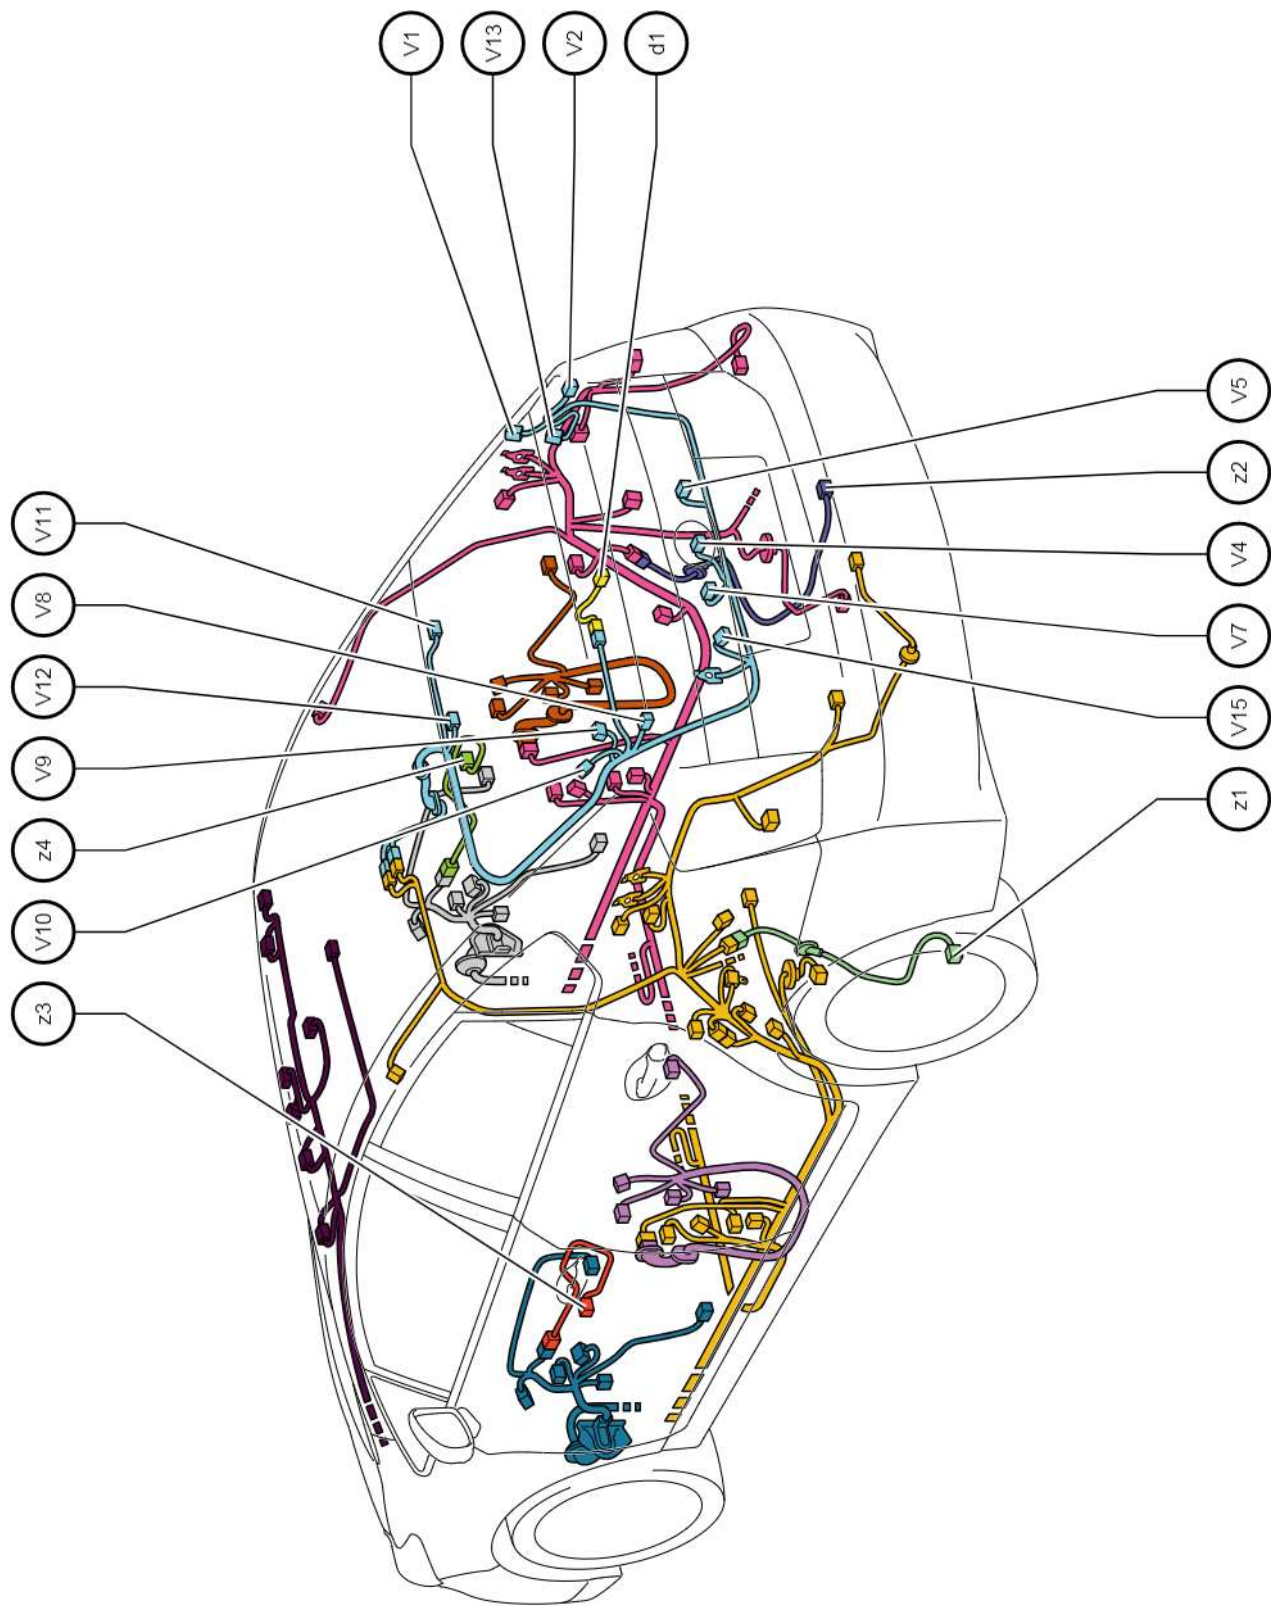


V	1	Rear Window Defogger (Back Door Glass)
V	2	Rear Window Defogger (Back Window Fix Glass)
V	4	Back Door Opener Switch Assembly
V	5	License Plate Light Assembly RH
V	7	License Plate Light Assembly LH
V	8	Rear Window Defogger (Back Window Fix Glass)
V	9	Rear Wiper Motor Assembly
V	10	Rear Window Defogger (Back Door Glass)
V	11	Glass Breakage Sensor (Back Door Glass)
V	12	Glass Breakage Sensor (Back Door Glass)
V	13	Glass Breakage Sensor (Back Window Fix Glass)
V	15	Rear Television Camera Assembly
d	1	Center Stop Light Assembly
z	1	Rear Speed Sensor LH
z	2	Rear Speed Sensor RH
z	3	Front Door Outside Handle Assembly LH
z	4	Front Door Outside Handle Assembly RH

      Position of Parts in Body <RHD>

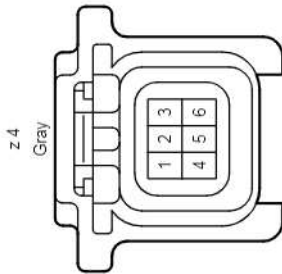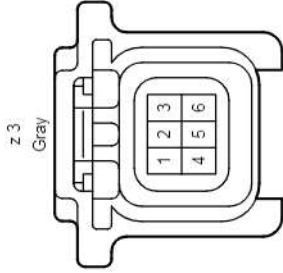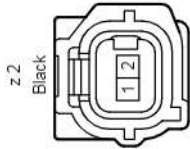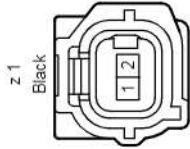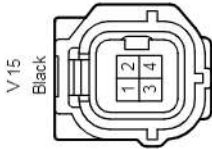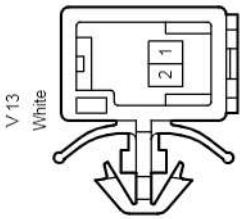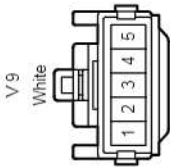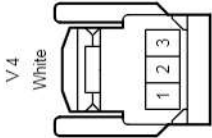


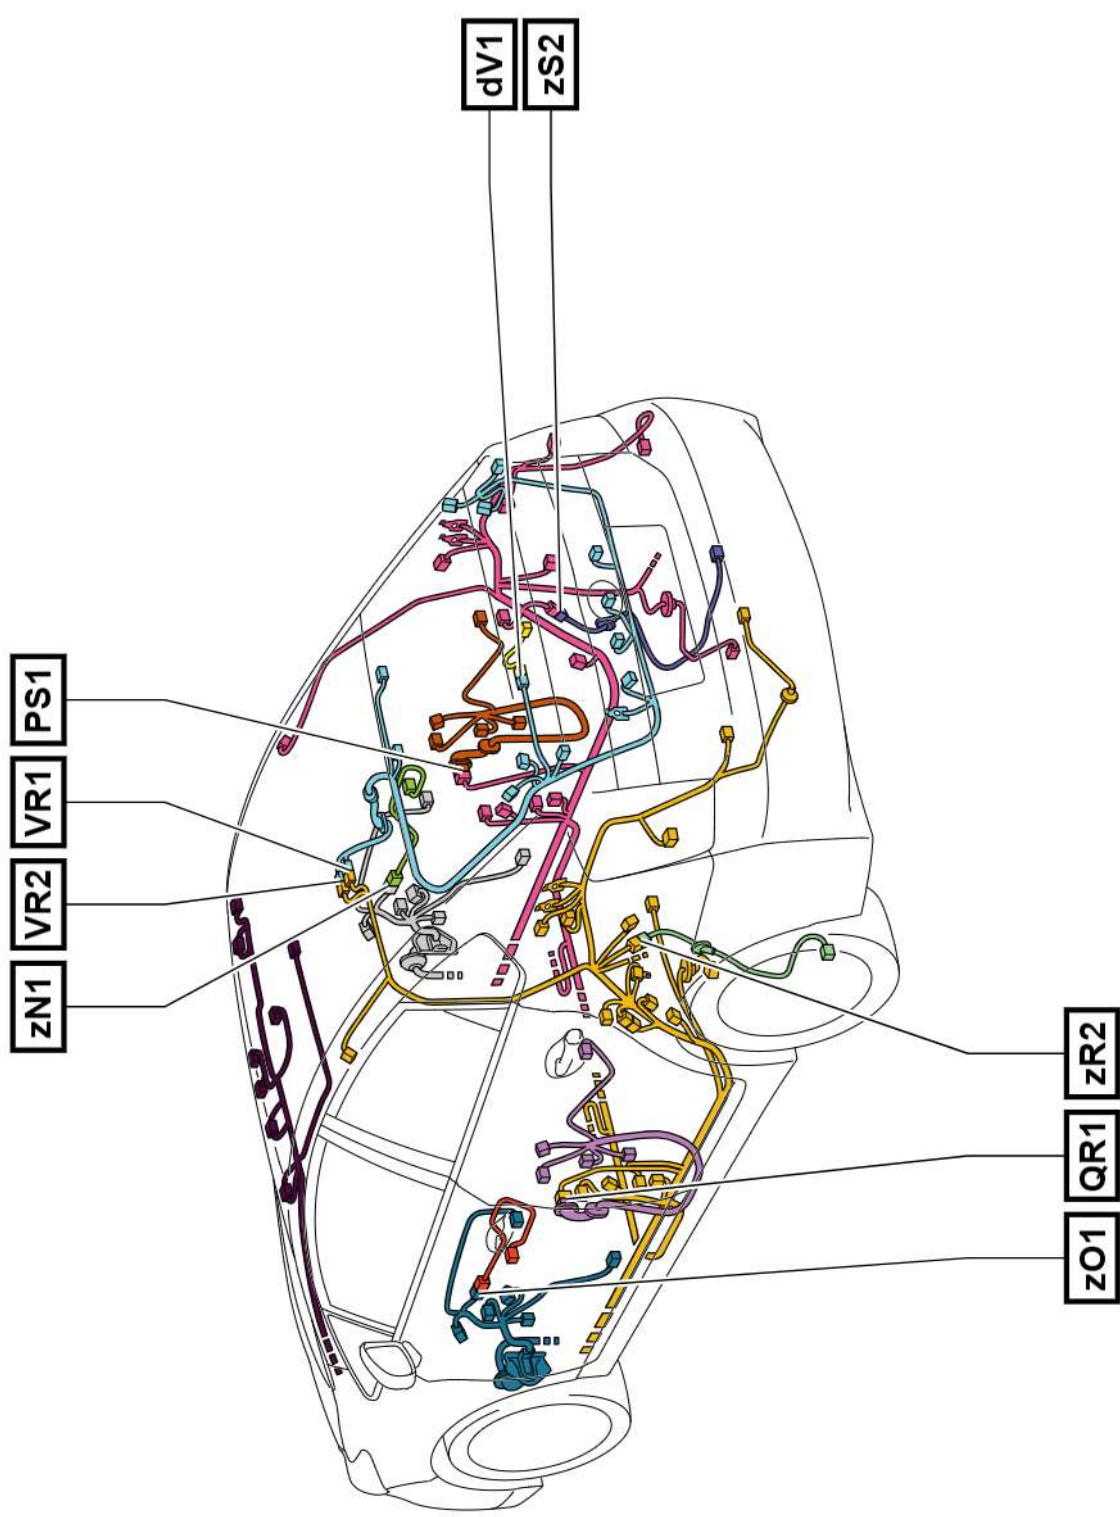


PS1
White

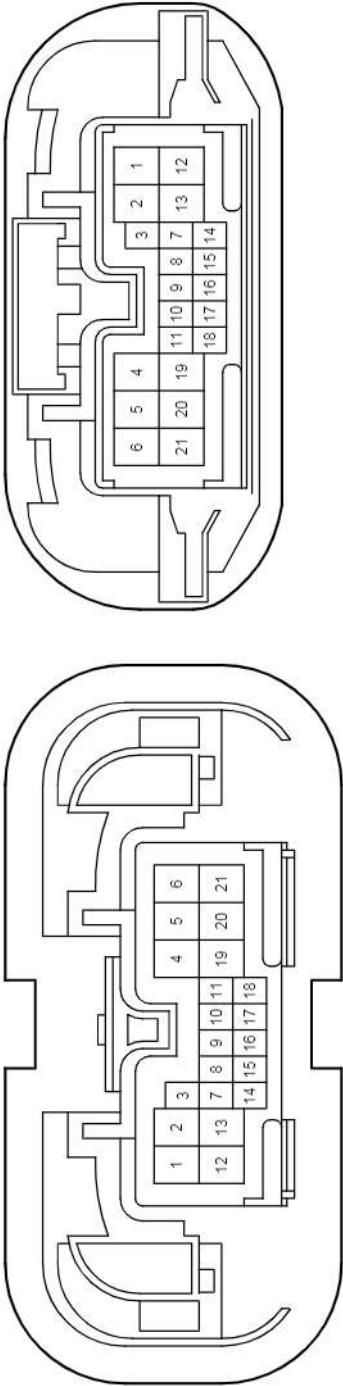


QR1
White

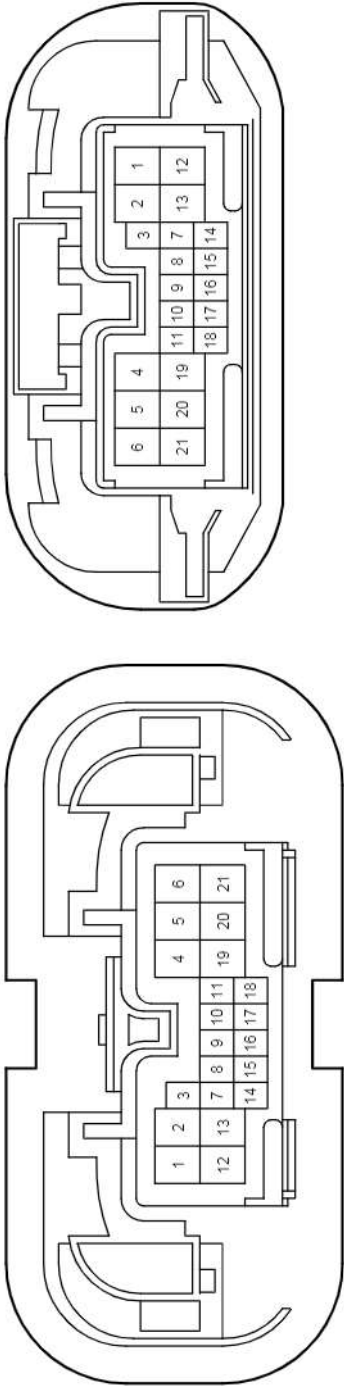

VR1
White

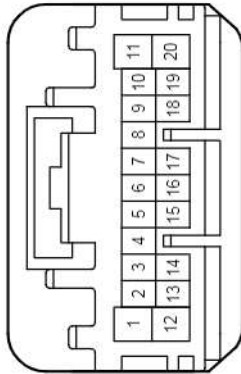


VR2
White

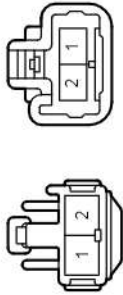


dV1
Gray


zN1
Blue

dV1
Black

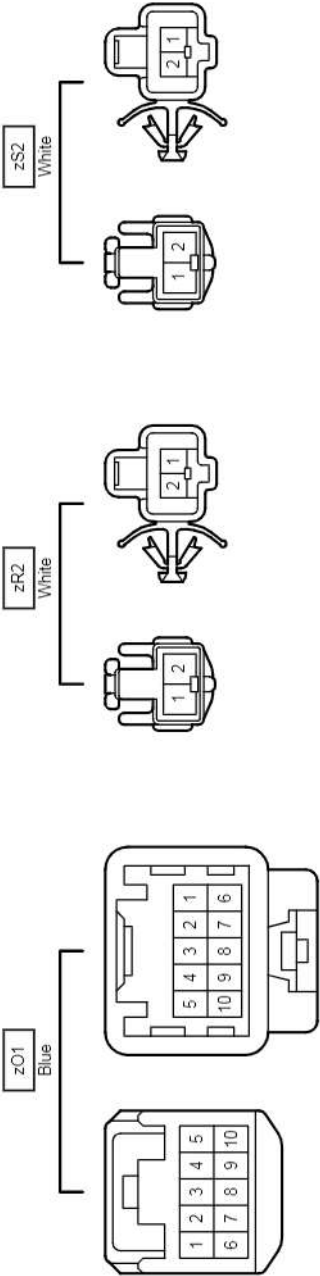

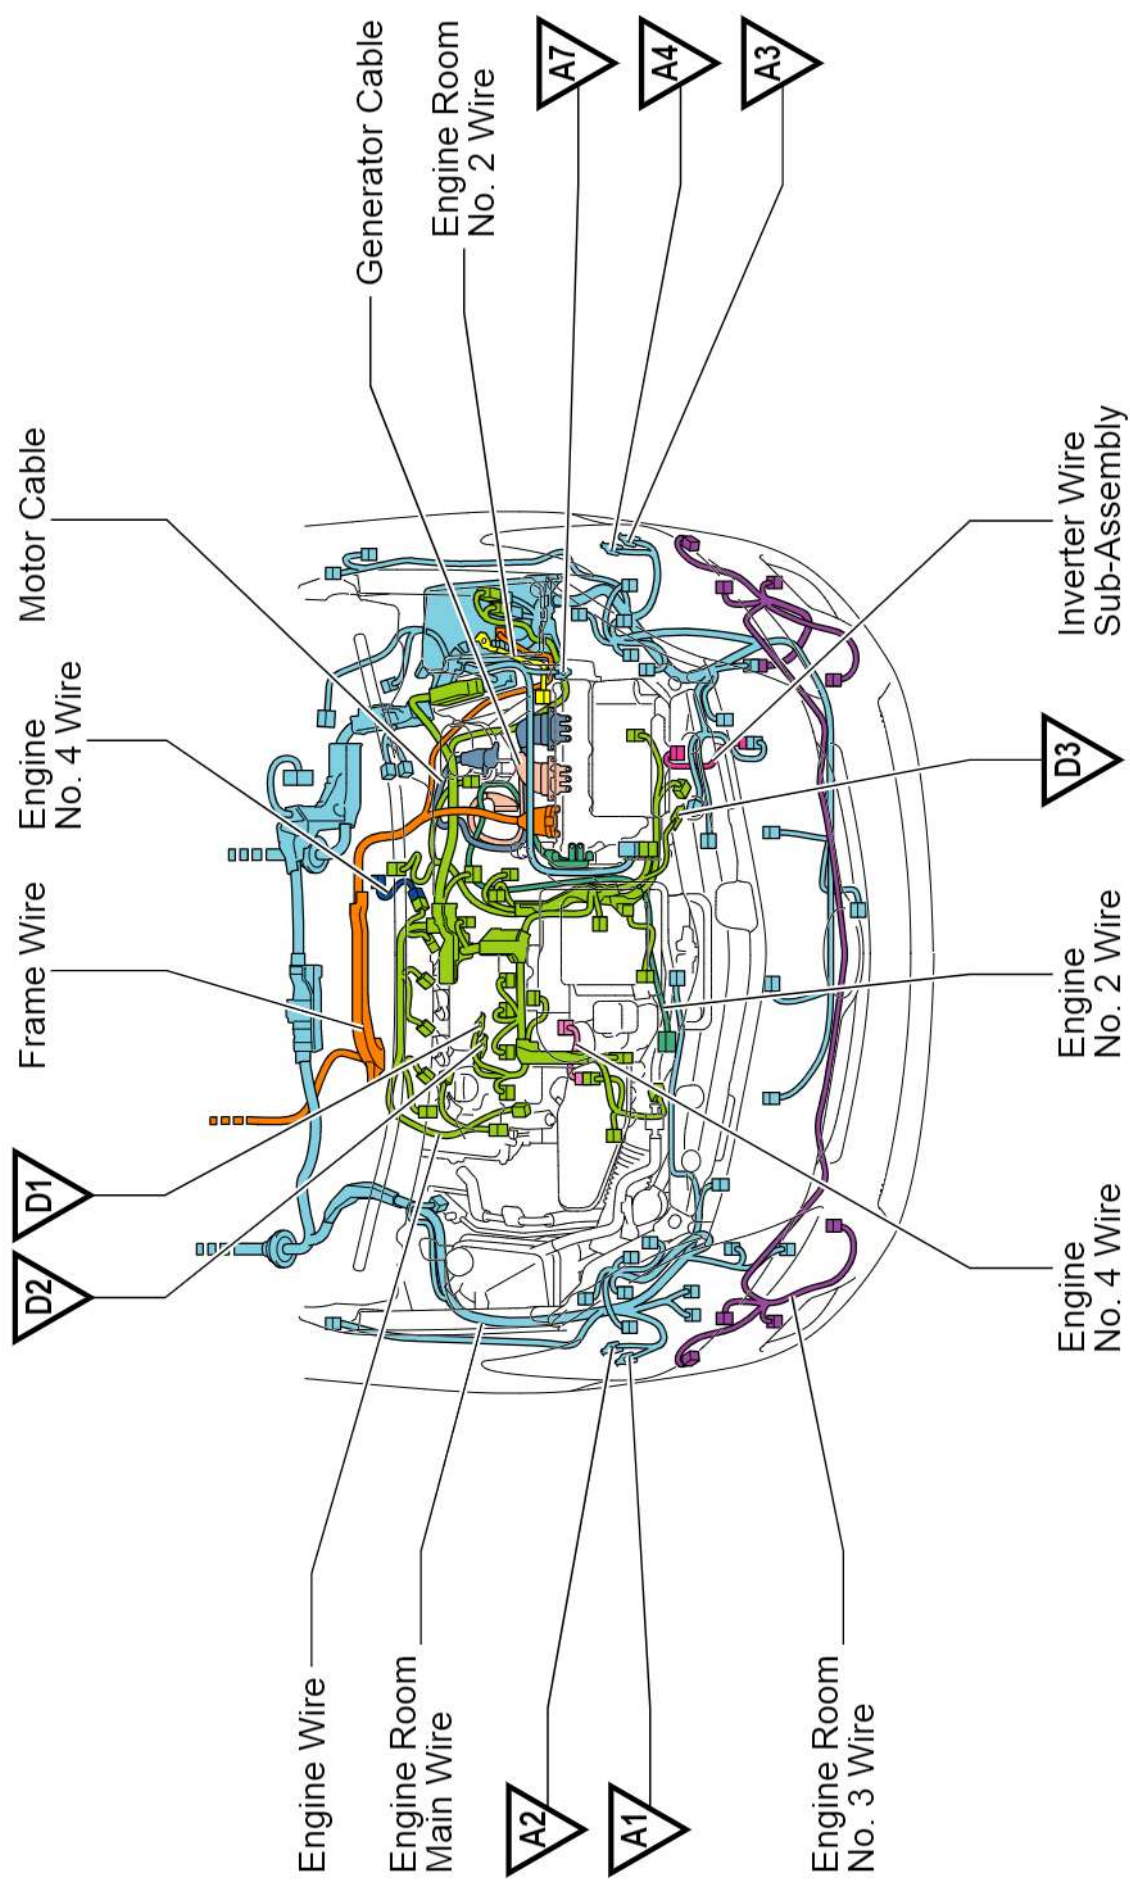


Position of Parts in Engine Compartment <LHD>

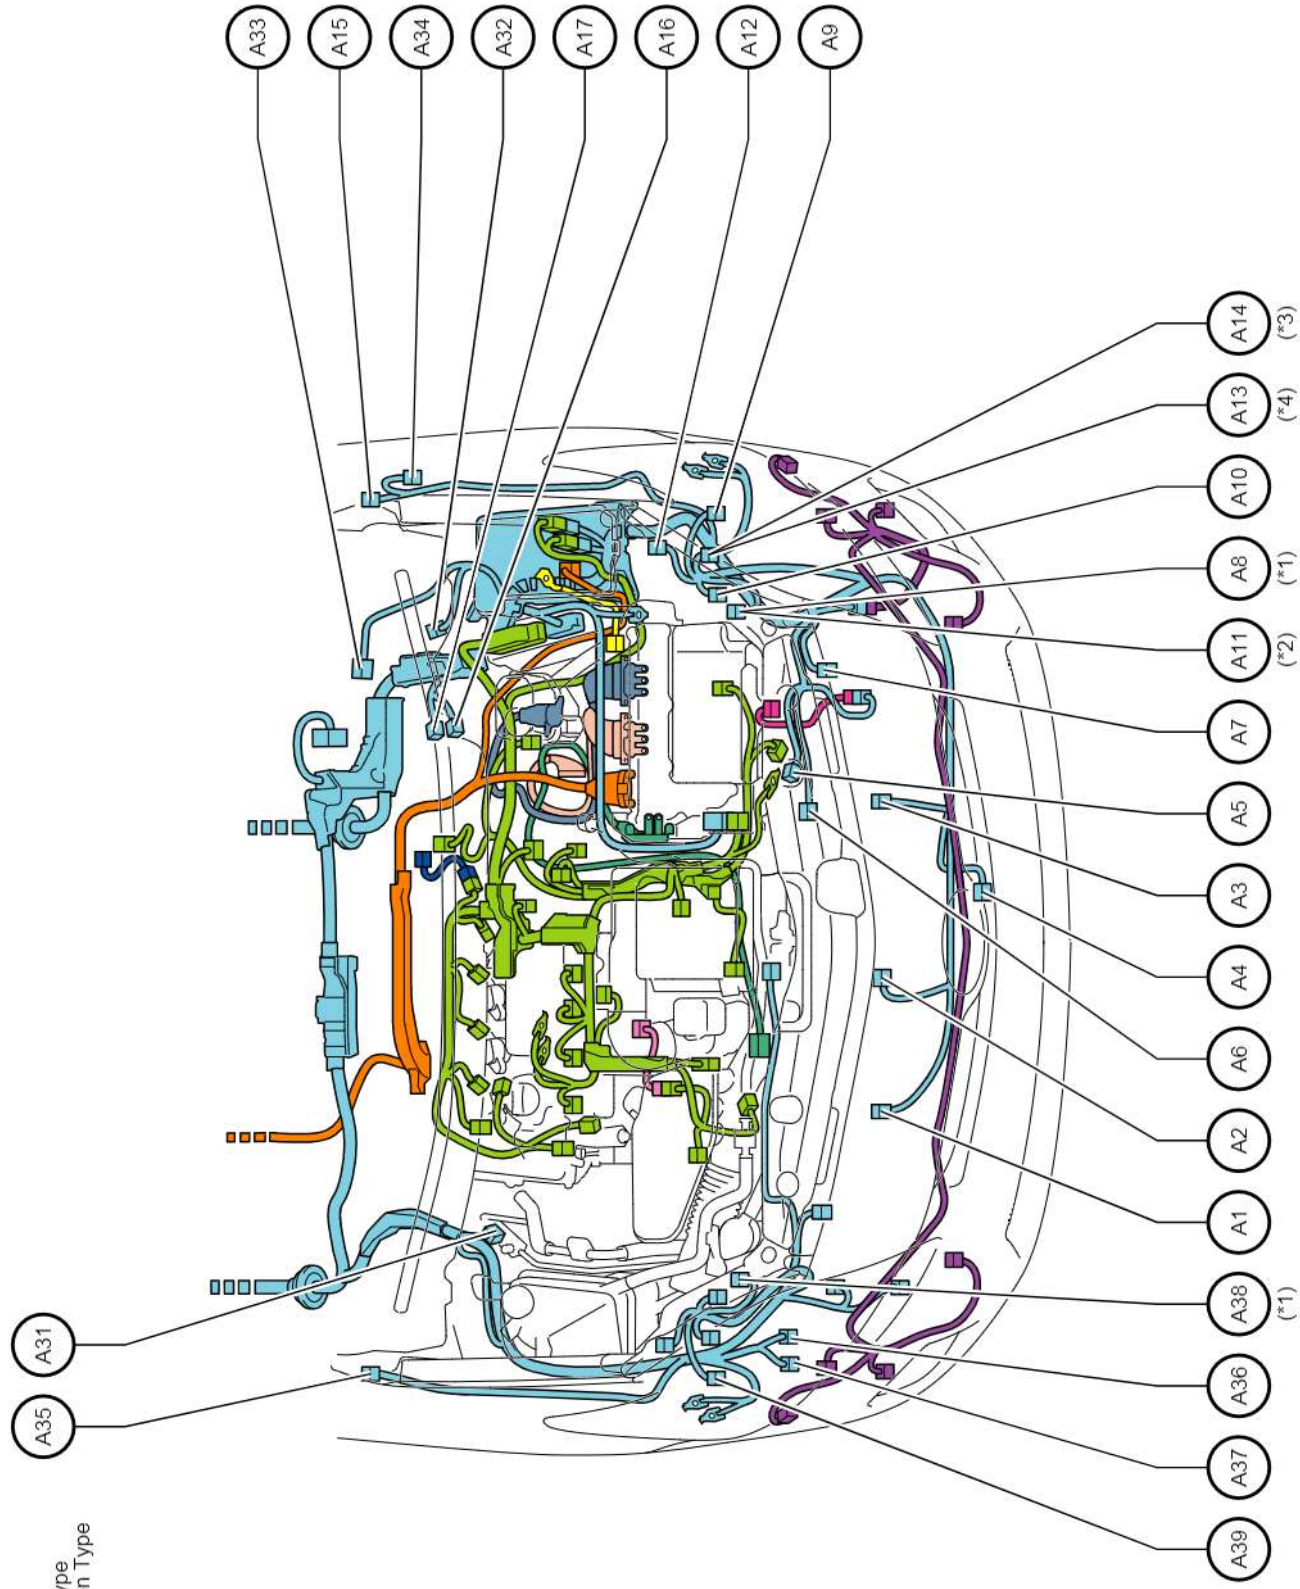


- * 1: Headlight (Low) LED Type
- * 2: Headlight (Low) Halogen Type
- * 3: LED Type
- * 4: Halogen Type

A	1	High Pitched Horn Assembly
A	2	Millimeter Wave Radar Sensor Assembly
A	3	Low Pitched Horn Assembly
A	4	Ambient Temperature Sensor
A	5	Cooling Fan Motor
A	6	No. 2 Cooling Fan Motor
A	7	Front Airbag Sensor LH
A	8	Headlight Assembly LH
A	9	Headlight Assembly LH
A	10	Headlight Assembly LH
A	11	Headlight Assembly LH
A	12	Headlight Assembly LH
A	13	Headlight Assembly LH
A	14	Headlight Assembly LH
A	15	Front Speed Sensor LH
A	16	Brake Booster Pump Assembly
A	17	Brake Booster Pump Assembly
A	31	A/C Pressure Sensor
A	32	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	33	Windshield Wiper Motor Assembly
A	34	Wireless Door Lock Buzzer
A	35	Front Speed Sensor RH
A	36	Windshield Washer Motor and Pump Assembly
A	37	Rear Washer Motor and Pump Assembly
A	38	Headlight Assembly RH
A	39	Headlight Assembly RH

Position of Parts in Engine Compartment <LHD>

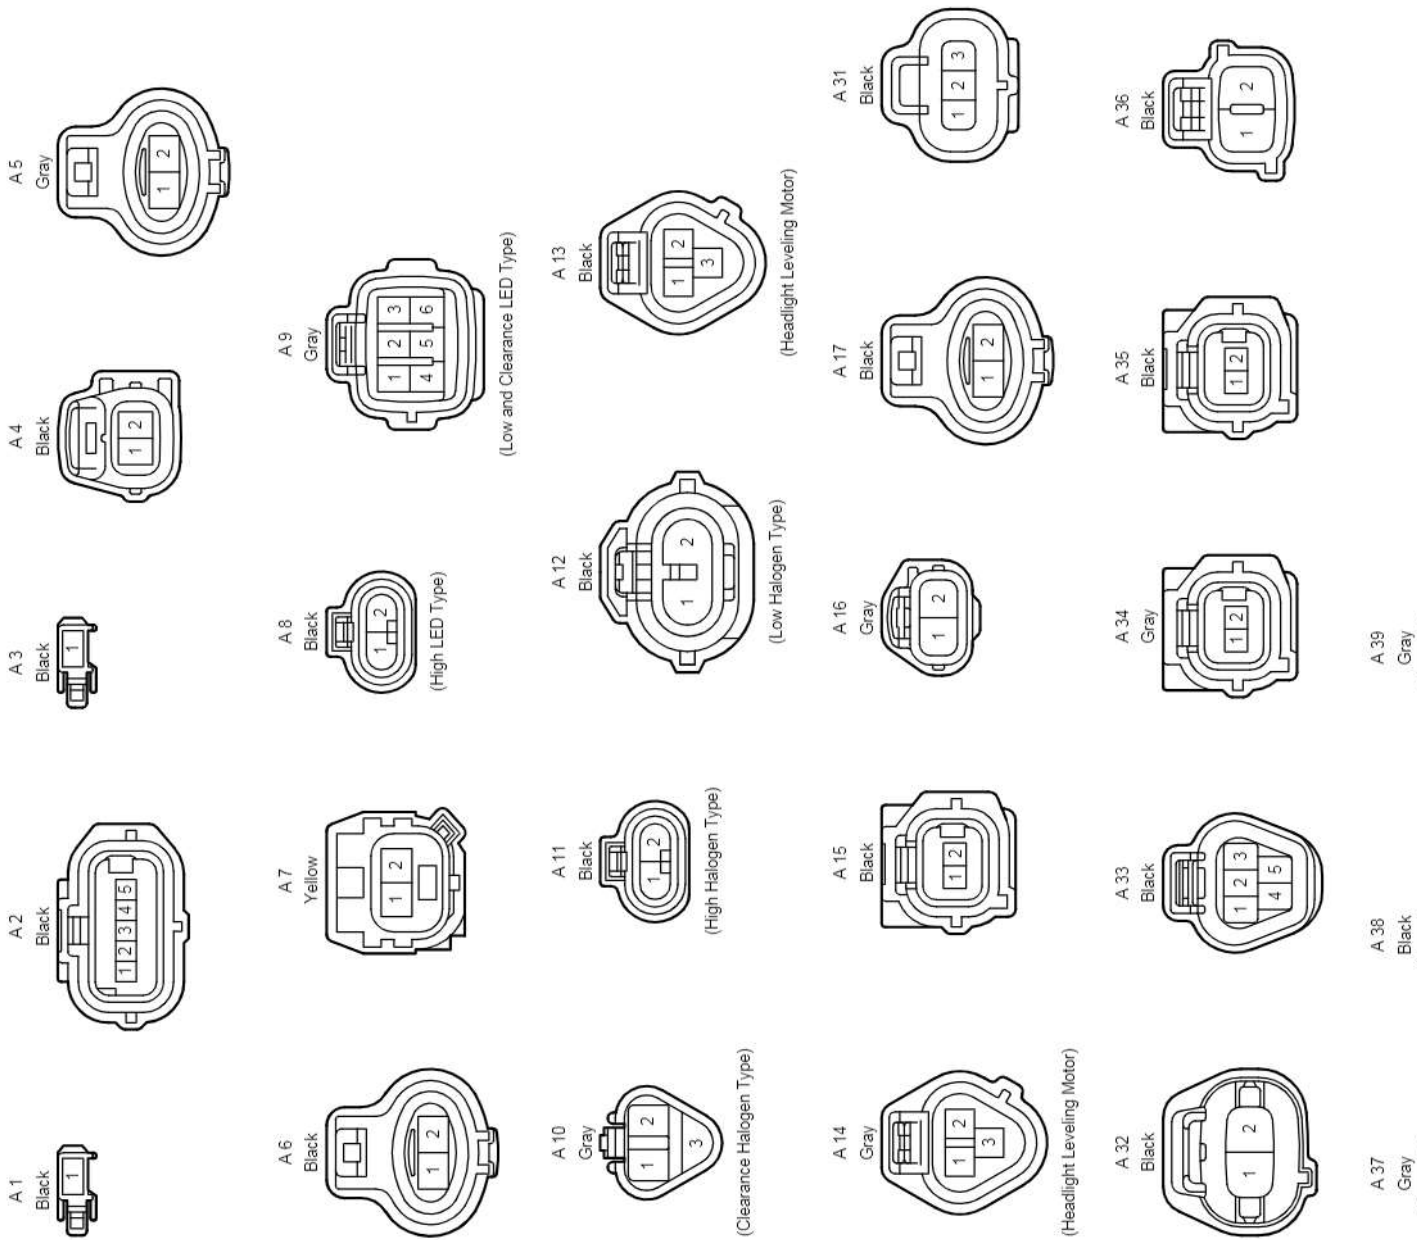


Position of Parts in Engine Compartment <LHD>

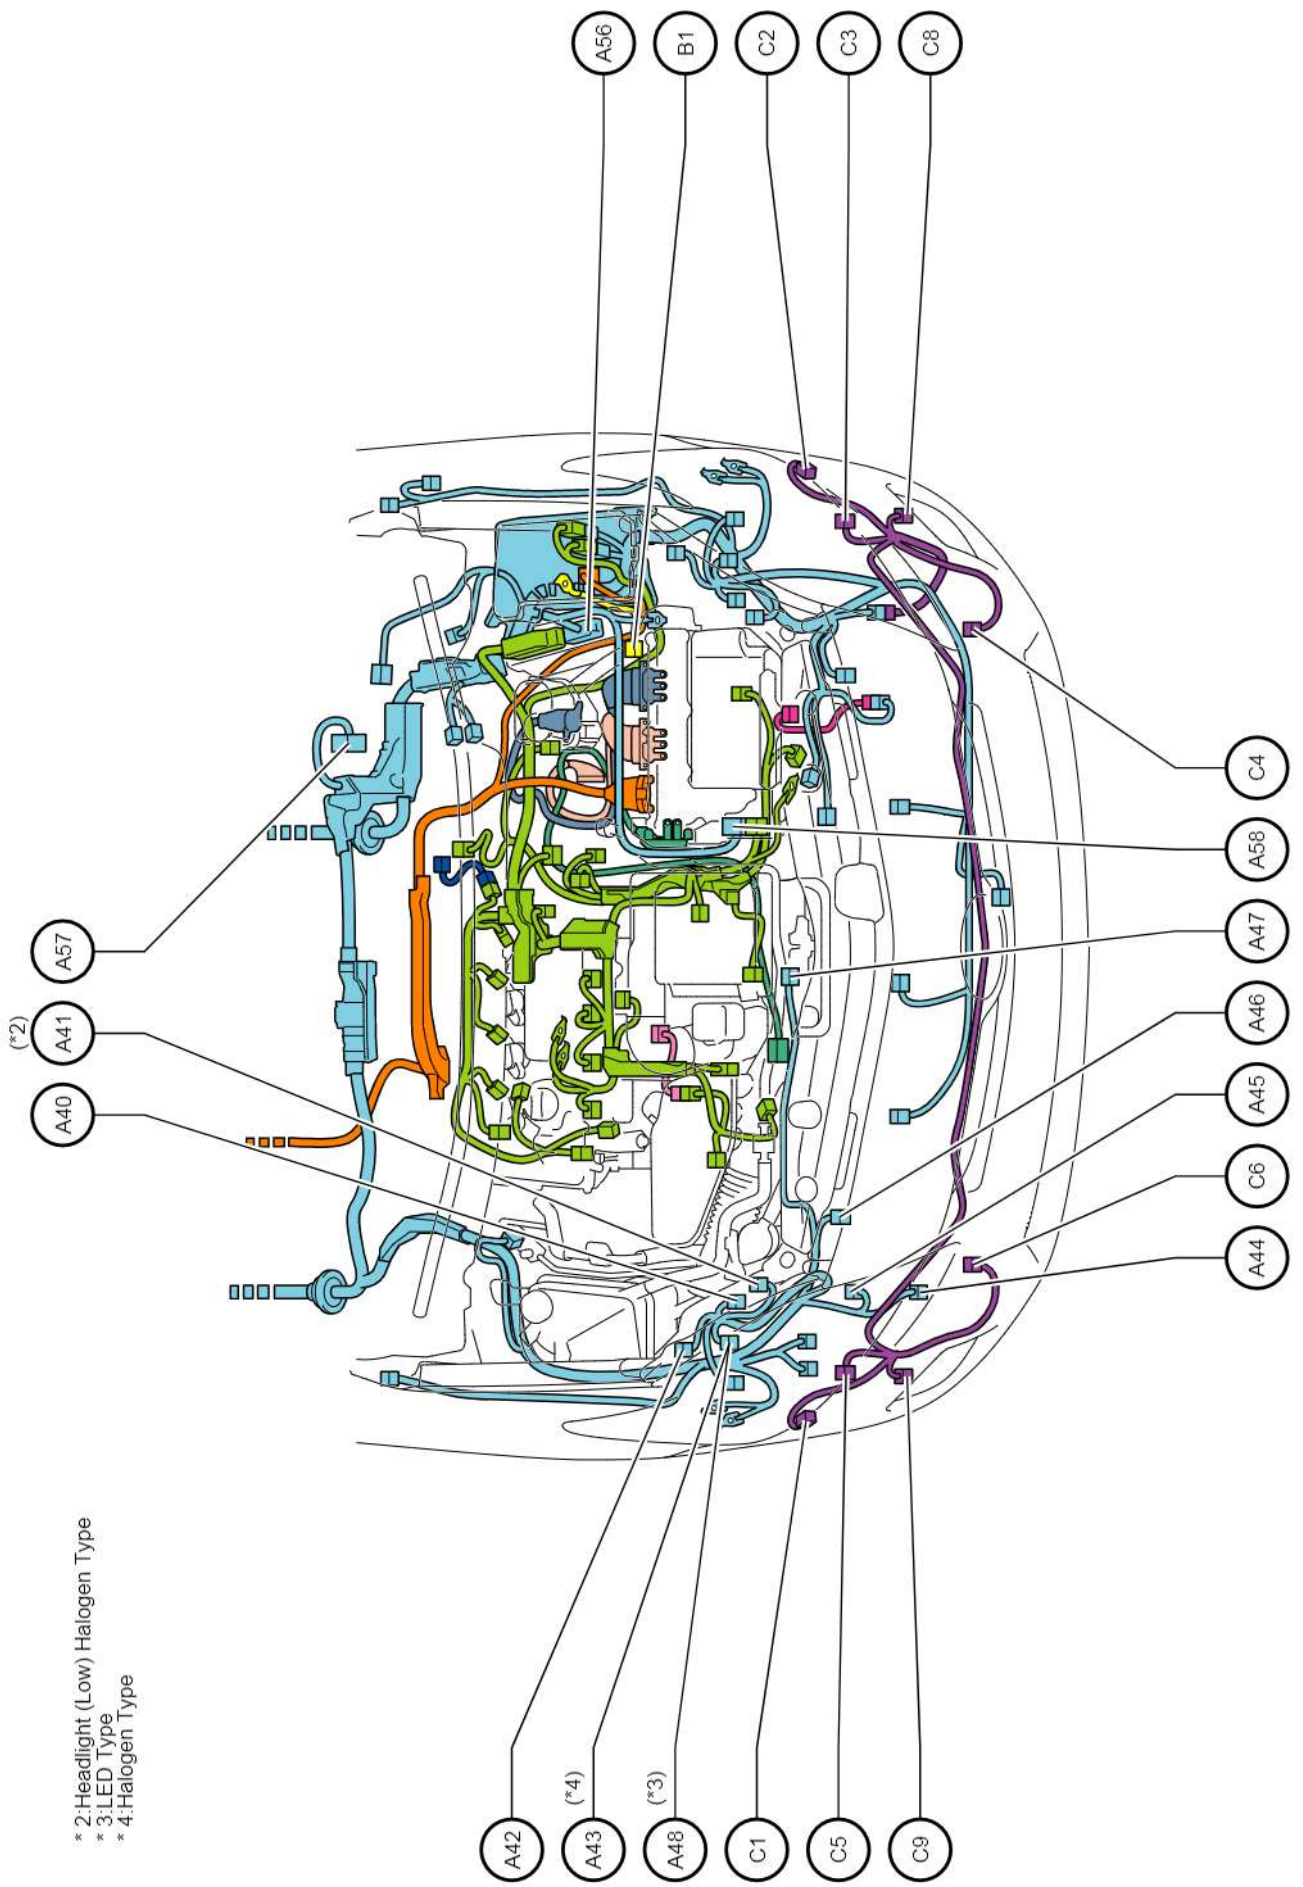


- * 2:Headlight (Low) Halogen Type
- * 3:LED Type
- * 4:Halogen Type


A 40	Headlight Assembly RH
A 41	Headlight Assembly RH
A 42	Headlight Assembly RH
A 43	Headlight Assembly RH
A 44	Headlight Cleaner Motor and Pump Assembly
A 45	Headlight Cleaner Control Relay
A 46	Front Airbag Sensor RH
A 47	Engine Hood Courtesy Switch Assembly
A 48	Headlight Assembly RH
A 56	ECM
A 57	Skid Control ECU with Actuator Assembly
A 58	Inverter with Converter Assembly
B 1	Inverter with Converter Assembly
C 1	No. 1 Ultrasonic Sensor RH
C 2	No. 1 Ultrasonic Sensor LH
C 3	Front Turn Signal Light LH
C 4	Fog Light Assembly LH
C 5	Front Turn Signal Light RH
C 6	Fog Light Assembly RH
C 8	Front Turn Signal Light LH
C 9	Front Turn Signal Light RH

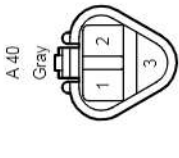


(Clearance Halogen Type)

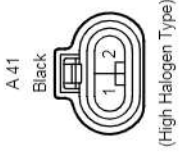






(High Halogen Type)

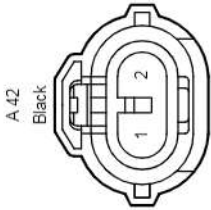

(Low Halogen Type)

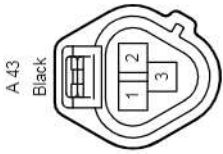


(Headlight Leveling Motor)

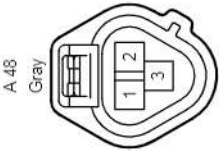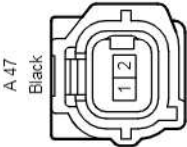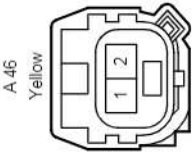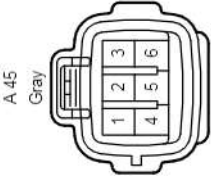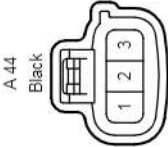


(Headlight Leveling Motor)



A 56
Black

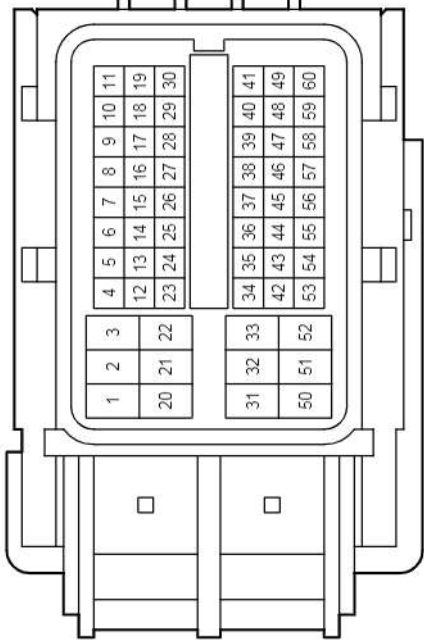


A 57
Gray

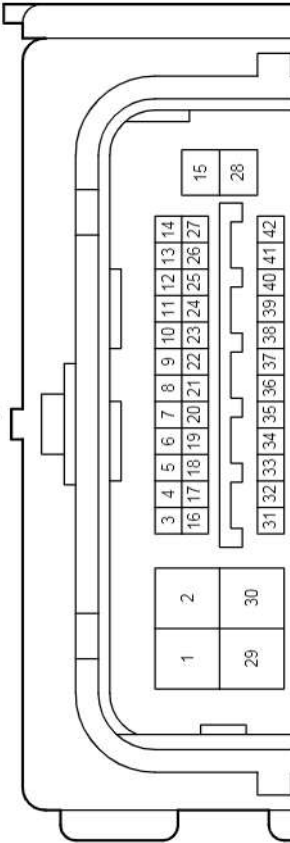

Position of Parts in Engine Compartment <LHD>






















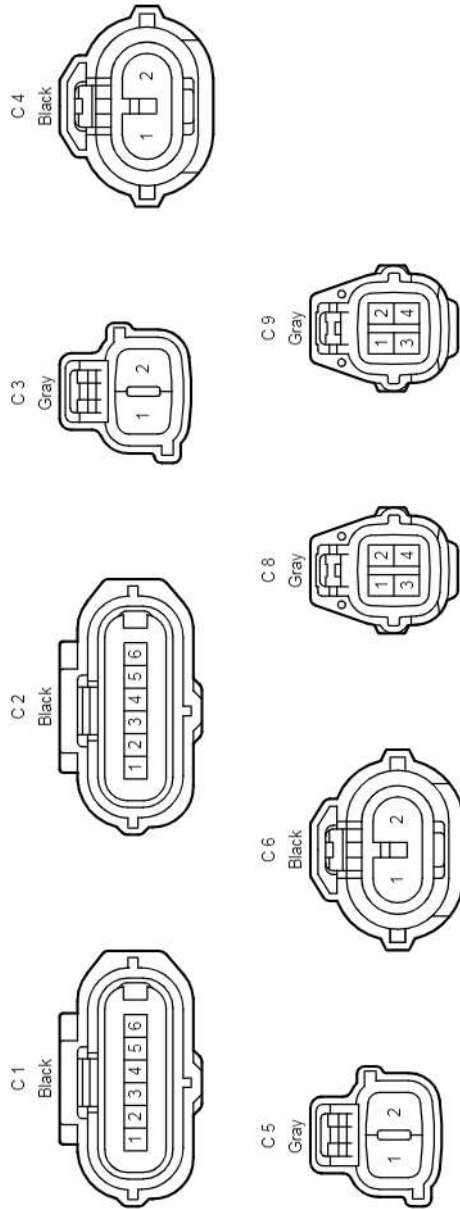
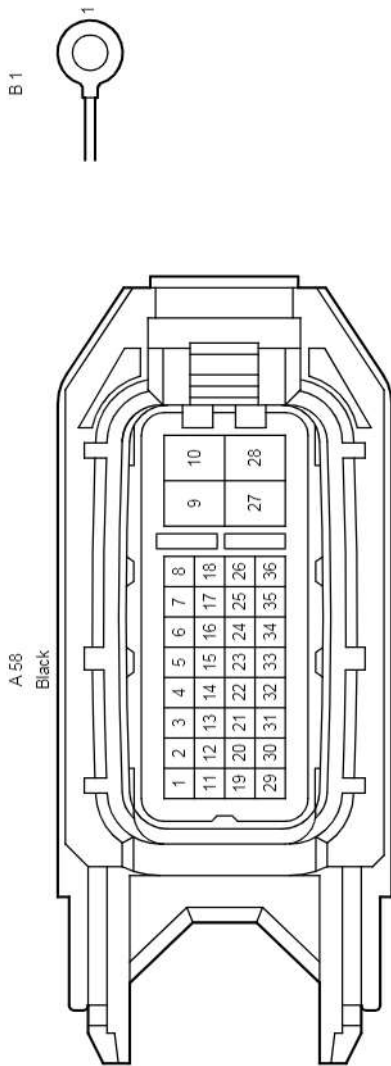


Position of Parts in Engine Compartment <LHD>

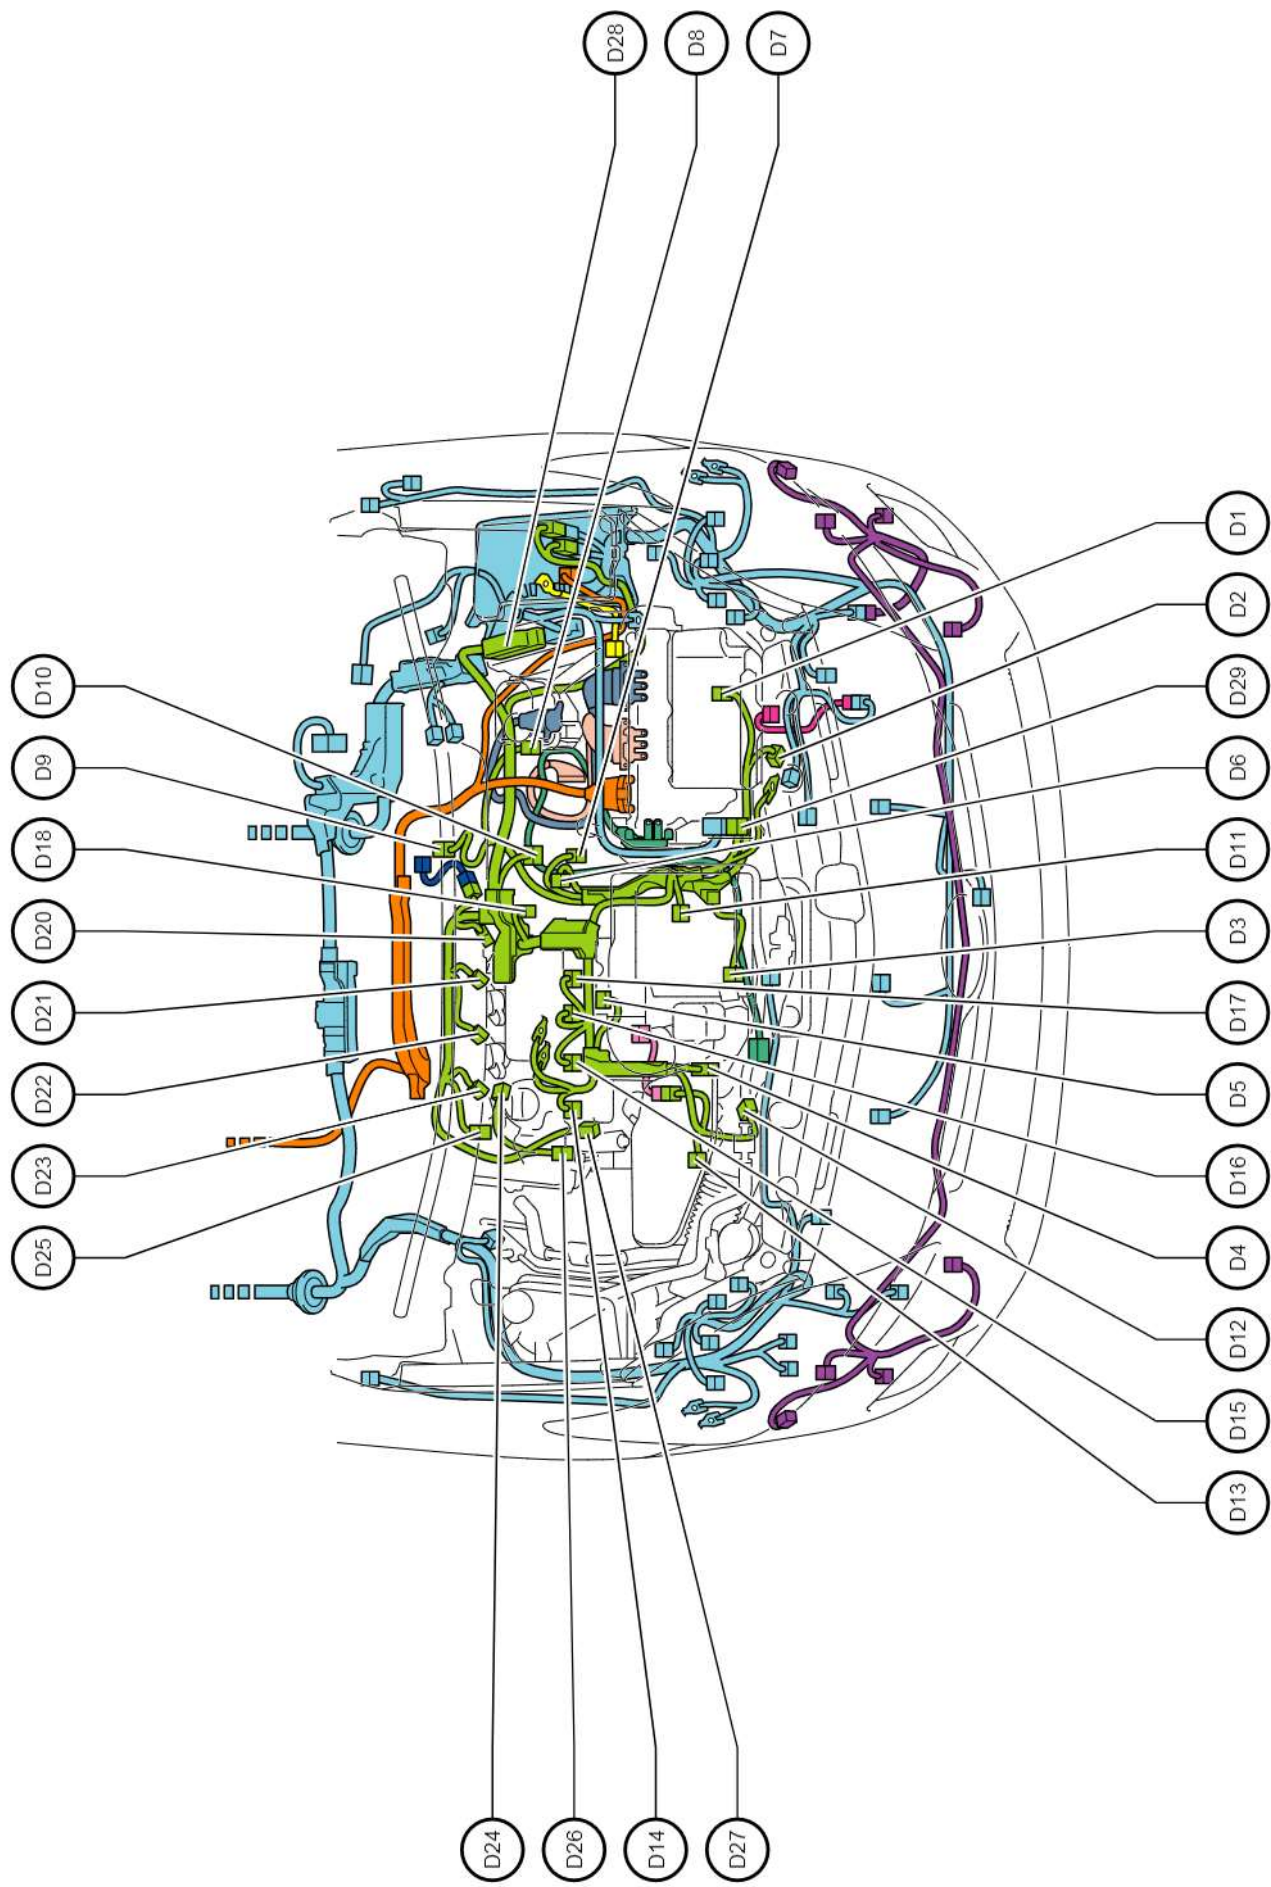


D 1	No. 2 Motor Generator
D 2	Shift Control Actuator Assembly
D 3	E.F.I. Vacuum Sensor Assembly
D 4	Throttle Body Assembly
D 5	Intake Mass Air Flow Meter Sub-Assembly
D 6	E.F.I. Engine Coolant Temperature Sensor
D 7	No. 1 Motor Generator
D 8	No. 2 Motor Generator
D 9	Oxygen Sensor (Bank 1 Sensor 2)
D 10	EGR Valve Assembly
D 11	Purge VSV
D 12	Compressor with Motor Assembly
D 13	Engine Water Pump Assembly
D 14	Fuel Injector Assembly No. 1
D 15	Fuel Injector Assembly No. 2
D 16	Fuel Injector Assembly No. 3
D 17	Fuel Injector Assembly No. 4
D 18	WT Sensor (Intake Side)
D 20	Ignition Coil Assembly No. 4
D 21	Ignition Coil Assembly No. 3
D 22	Ignition Coil Assembly No. 2
D 23	Ignition Coil Assembly No. 1
D 24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 25	Camshaft Timing Oil Control Valve (Intake Side)
D 26	Engine Oil Pressure Switch Assembly
D 27	Crankshaft Position Sensor
D 28	ECM
D 29	Inverter with Converter Assembly

Position of Parts in Engine Compartment <LHD>

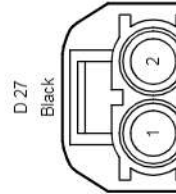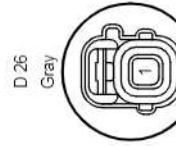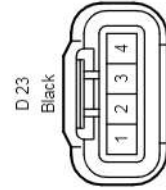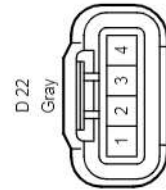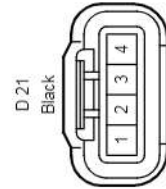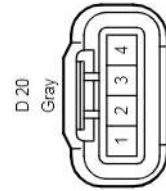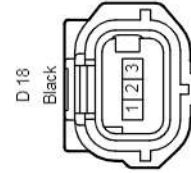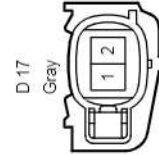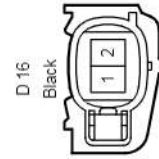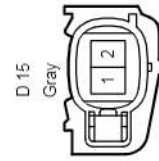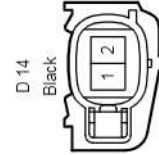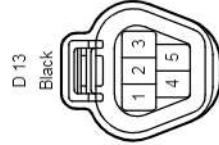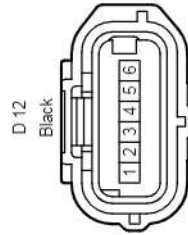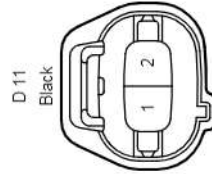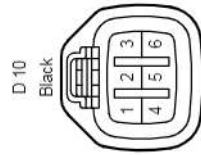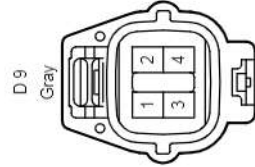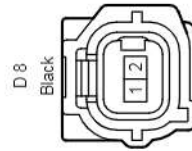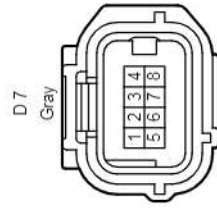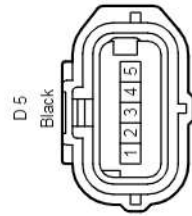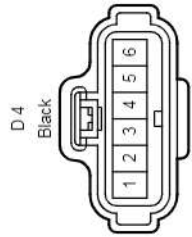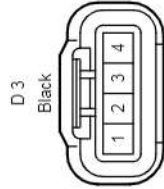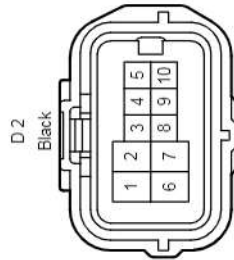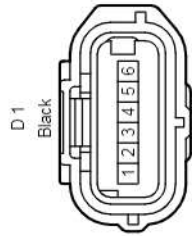


Position of Parts in Engine Compartment <LHD>


D 28
Black

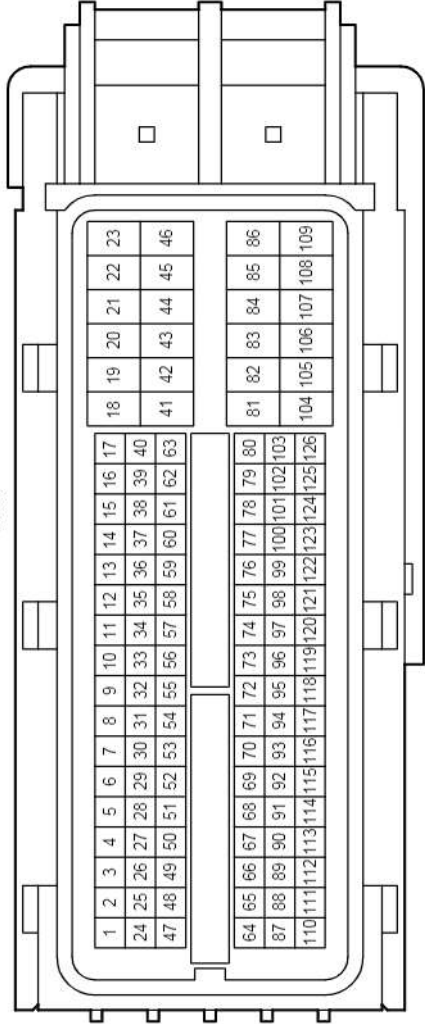

D 29
Black









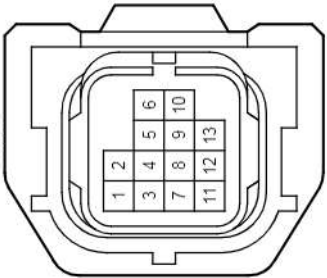


Position of Parts in Engine Compartment <LHD>

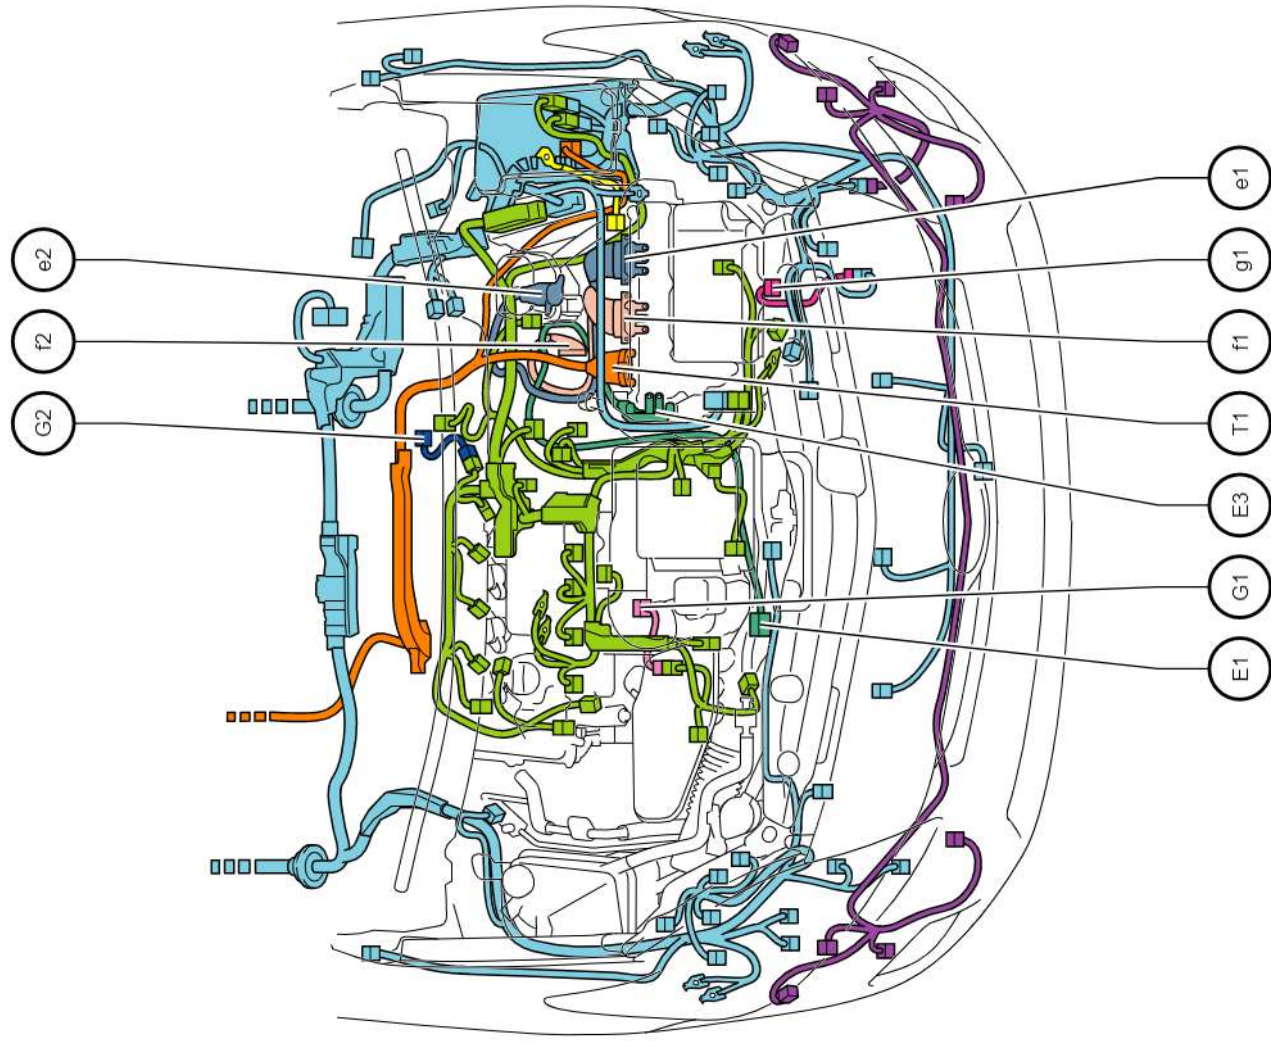



- E 1 Compressor with Motor Assembly
- E 3 Inverter with Converter Assembly
- G 1 Knock Control Sensor (Bank 1)
- G 2 Engine Coolant Temperature Sensor
- T 1 Inverter with Converter Assembly
- e 1 Inverter with Converter Assembly
- e 2 No. 2 Motor Generator
- f 1 Inverter with Converter Assembly
- f 2 No. 1 Motor Generator
- g 1 Inverter Water Pump Motor Assembly


Position of Parts in Engine Compartment <LHD>

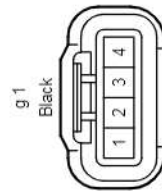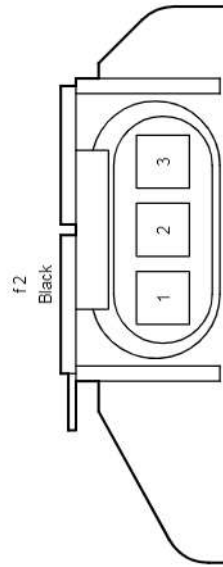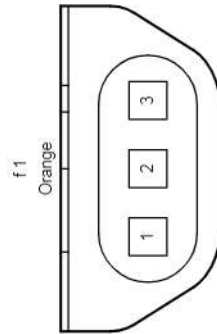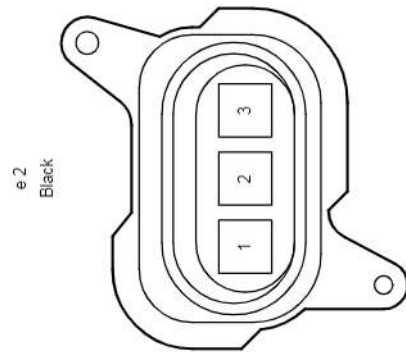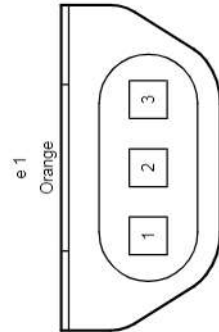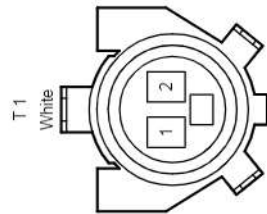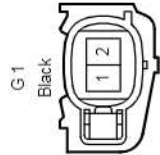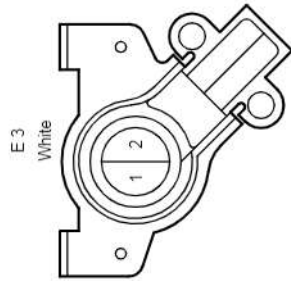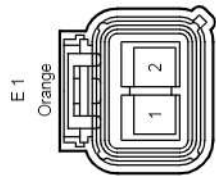


Wire and Wire in Engine Compartment <LHD>

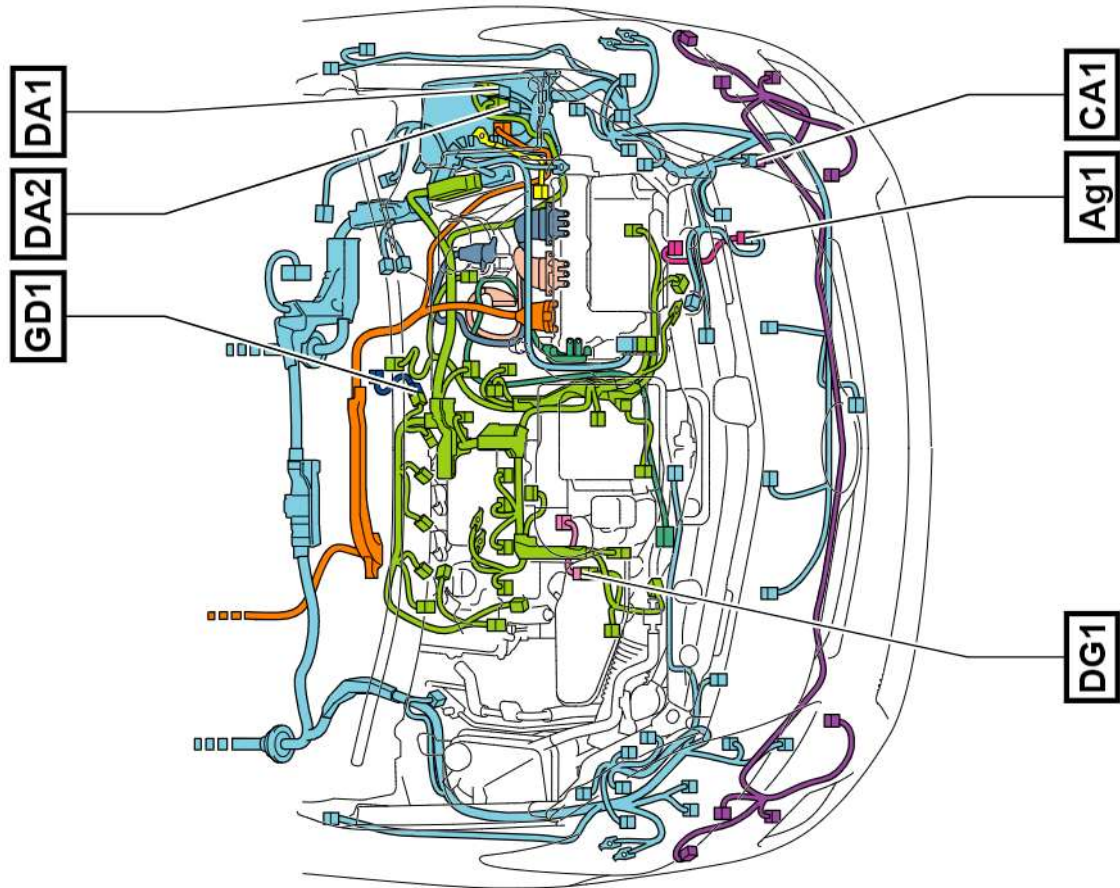

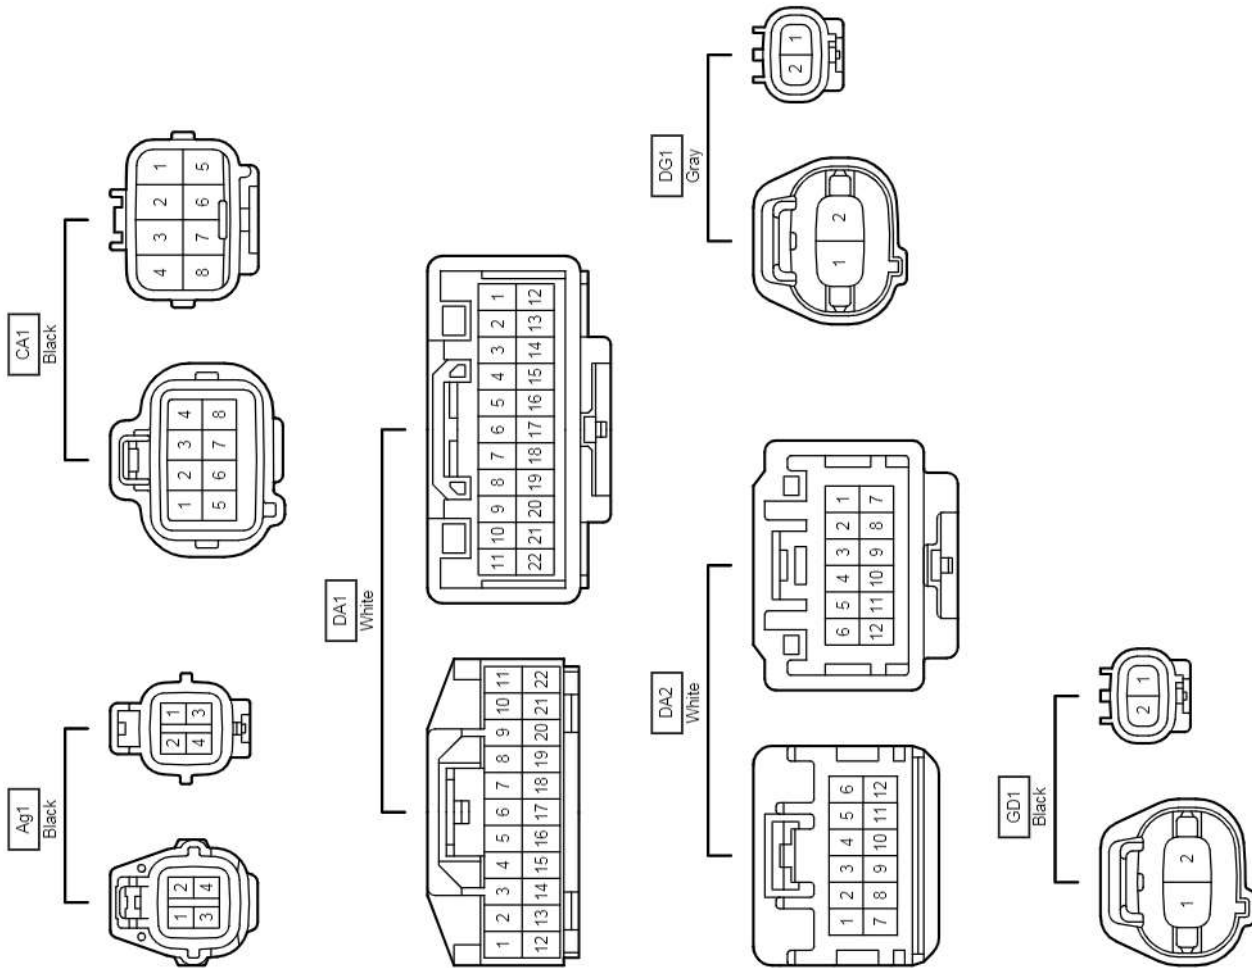

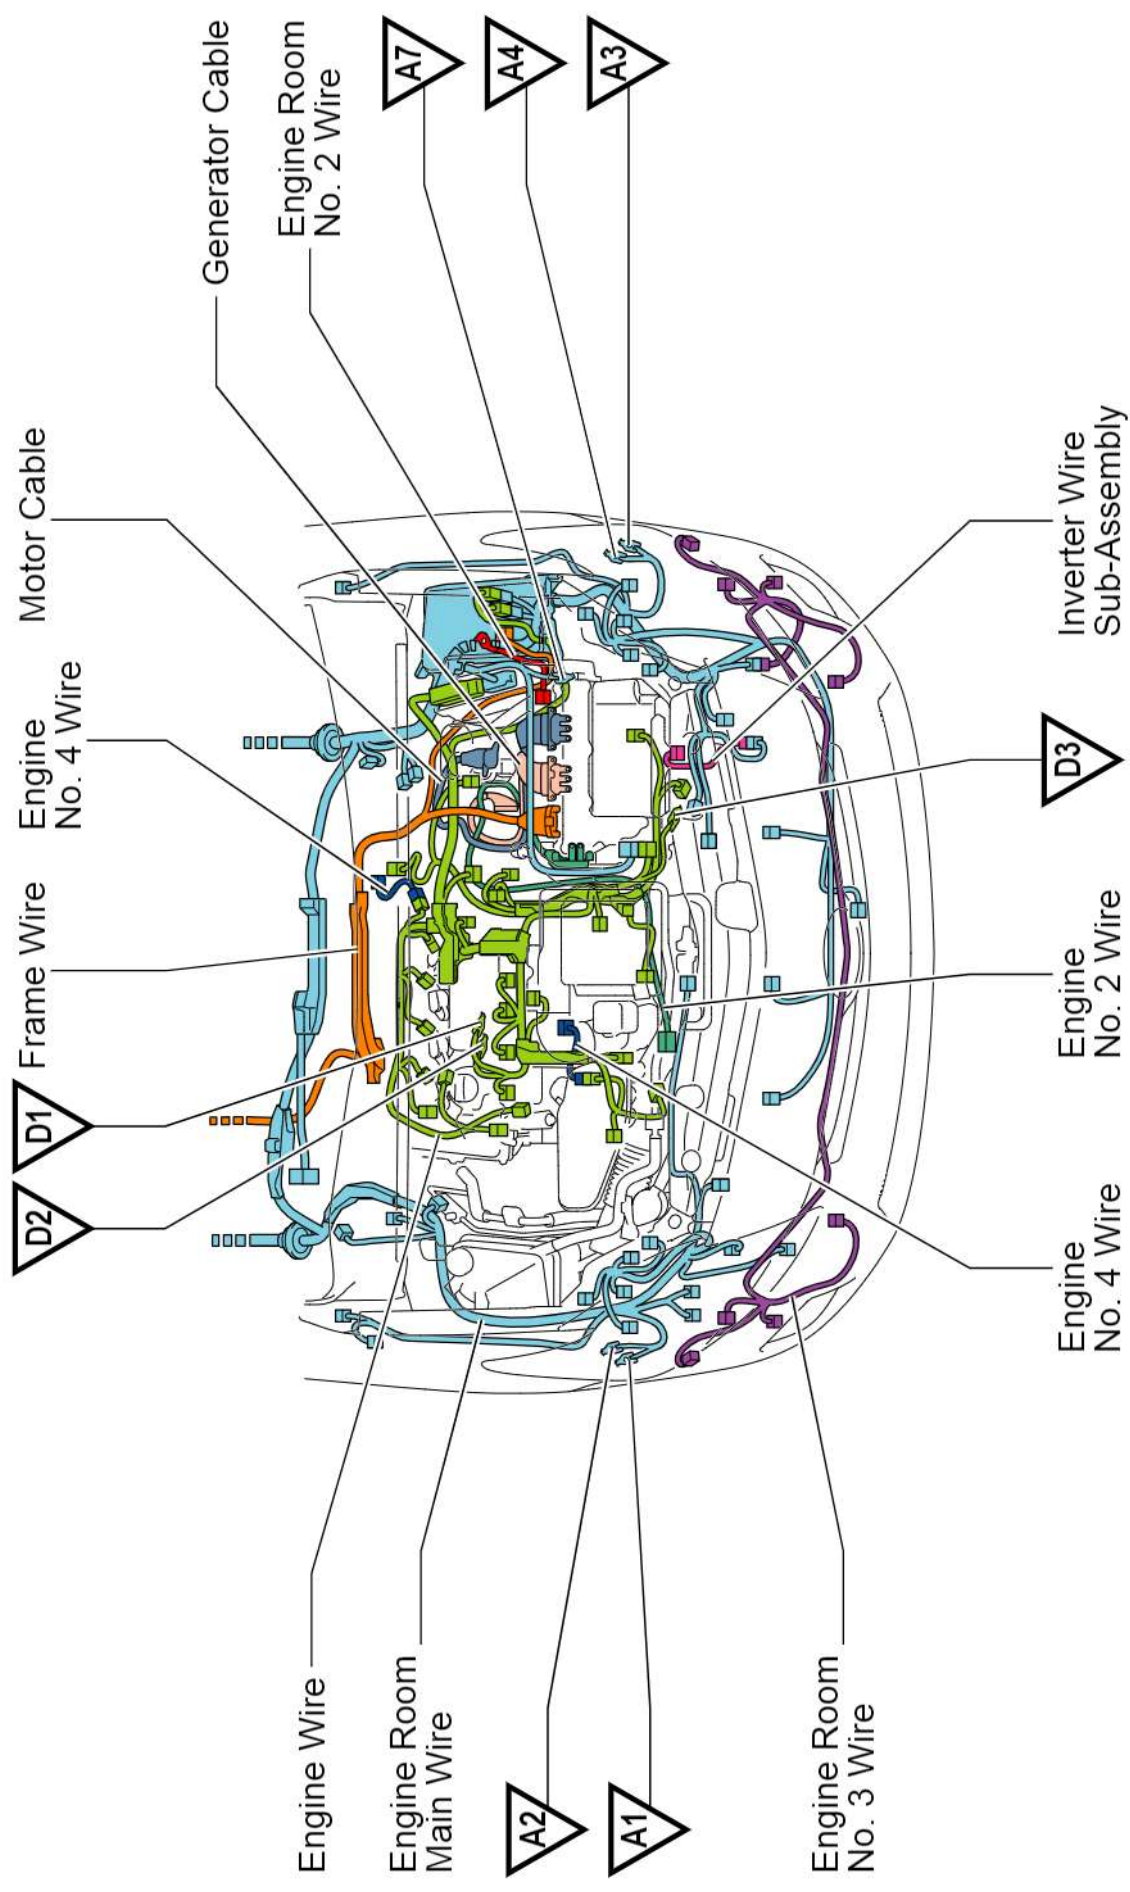






Position of Parts in Engine Compartment <RHD>

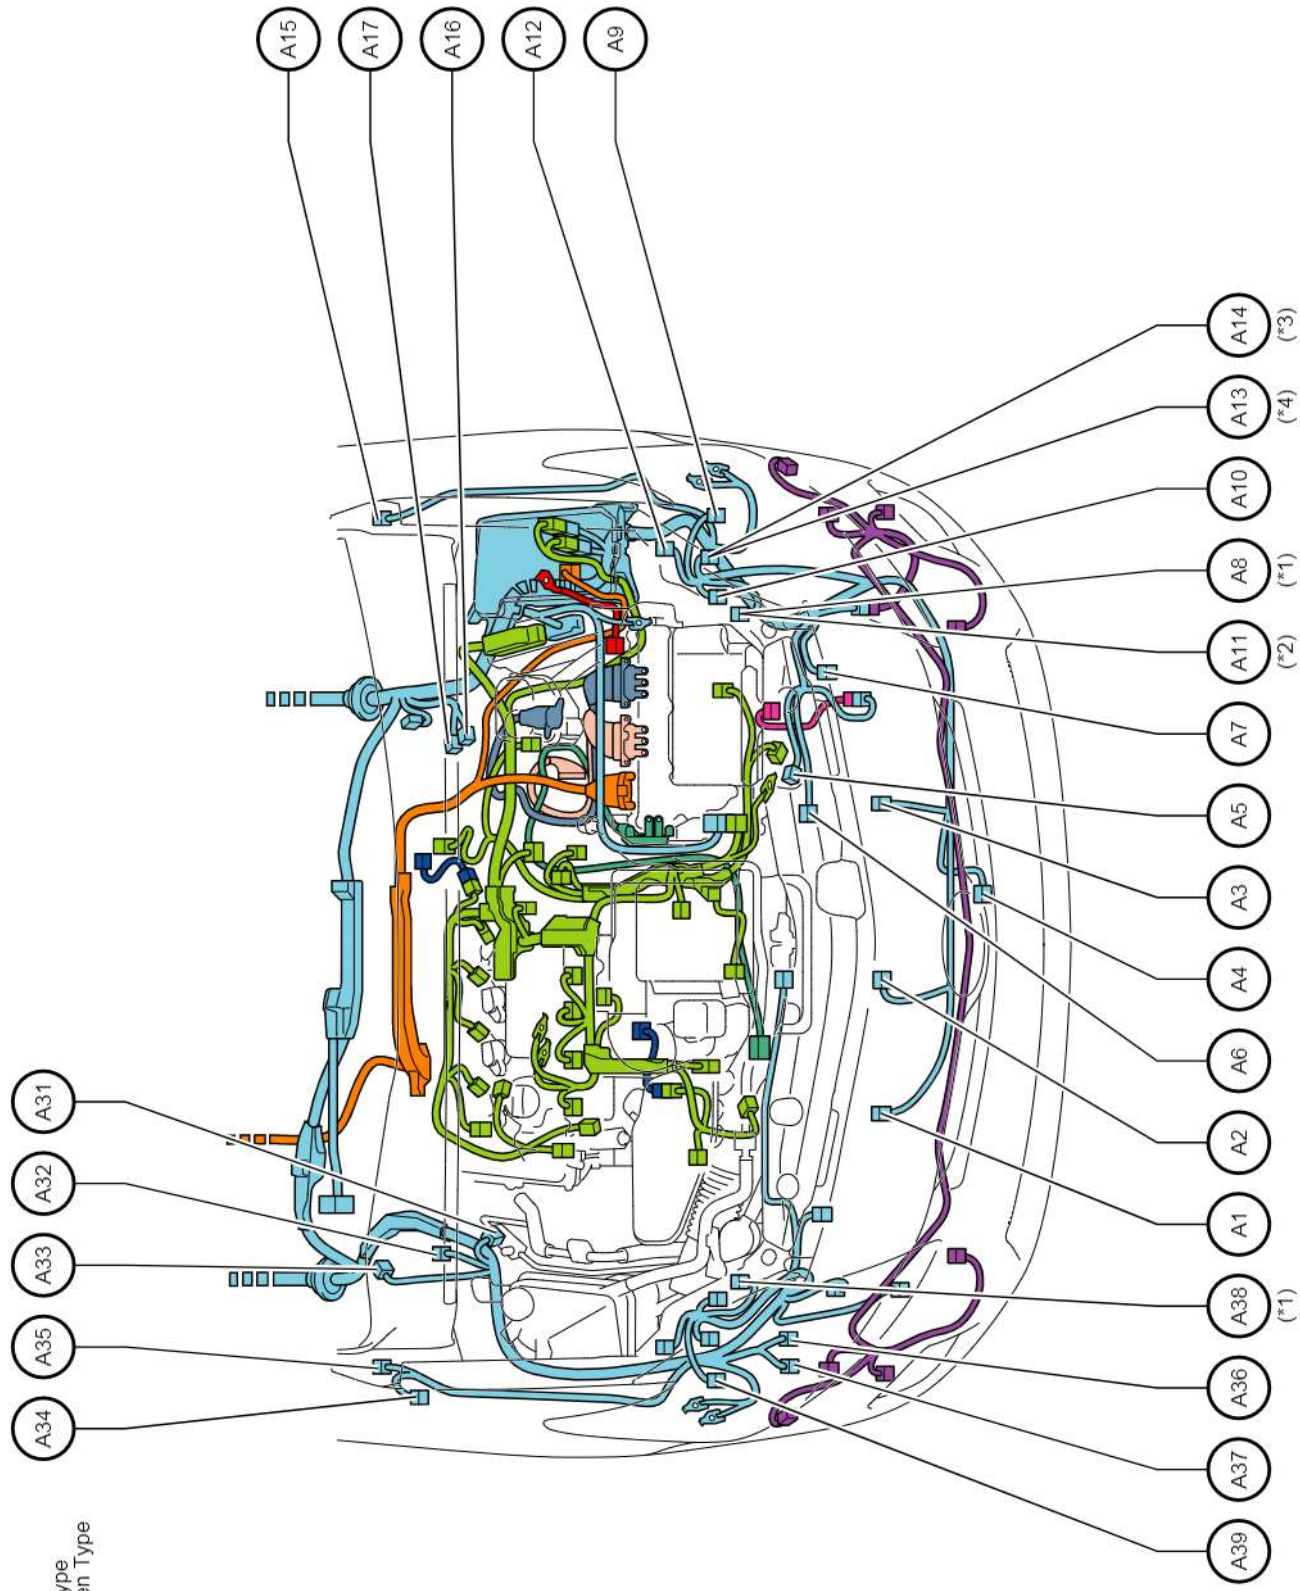

- * 1: Headlight (Low) LED Type
- * 2: Headlight (Low) Halogen Type
- * 3: LED Type
- * 4: Halogen Type

A	1	High Pitched Horn Assembly
A	2	Millimeter Wave Radar Sensor Assembly
A	3	Low Pitched Horn Assembly
A	4	Ambient Temperature Sensor
A	5	Cooling Fan Motor
A	6	No. 2 Cooling Fan Motor
A	7	Front Airbag Sensor LH
A	8	Headlight Assembly LH
A	9	Headlight Assembly LH
A	10	Headlight Assembly LH
A	11	Headlight Assembly LH
A	12	Headlight Assembly LH
A	13	Headlight Assembly LH
A	14	Headlight Assembly LH
A	15	Front Speed Sensor LH
A	16	Brake Booster Pump Assembly
A	17	Brake Booster Pump Assembly
A	31	A/C Pressure Sensor
A	32	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	33	Windshield Wiper Motor Assembly
A	34	Wireless Door Lock Buzzer
A	35	Front Speed Sensor RH
A	36	Windshield Washer Motor and Pump Assembly
A	37	Rear Washer Motor and Pump Assembly
A	38	Headlight Assembly RH
A	39	Headlight Assembly RH


Position of Parts in Engine Compartment <RHD>

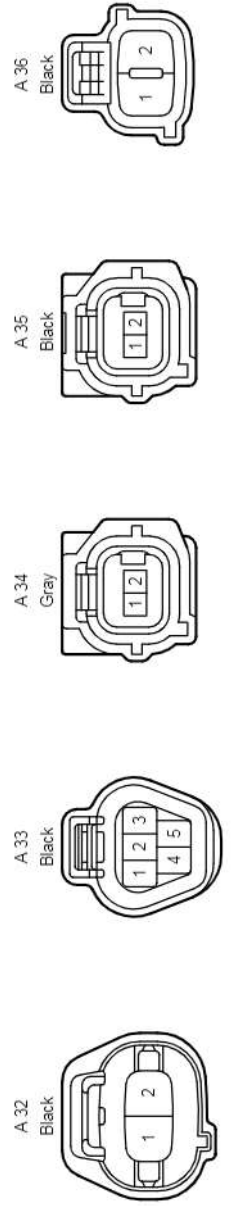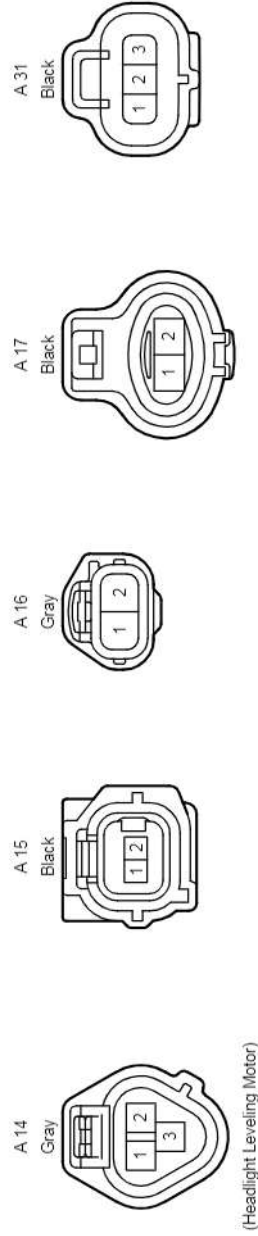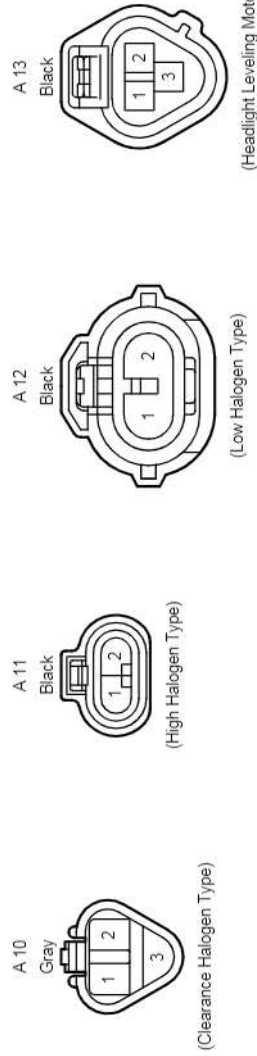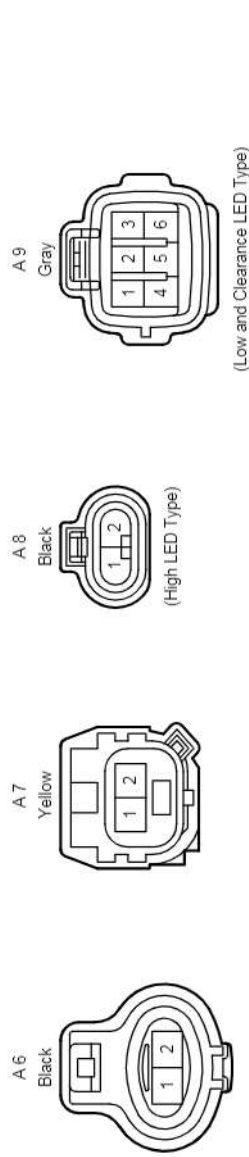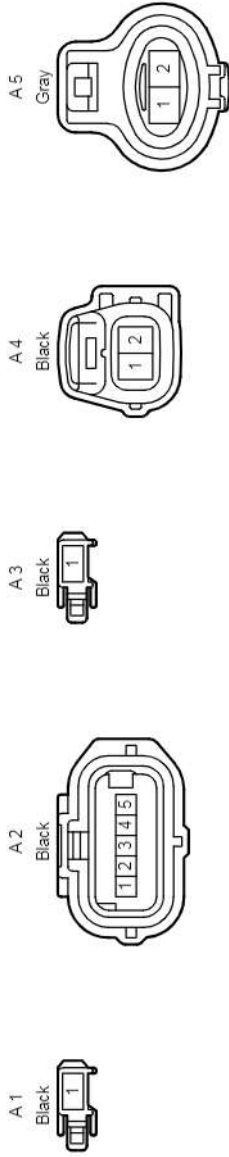


Position of Parts in Engine Compartment <RHD>

(*2)


- * 2:Headlight (Low) Halogen Type
- * 3:LED Type
- * 4:Halogen Type

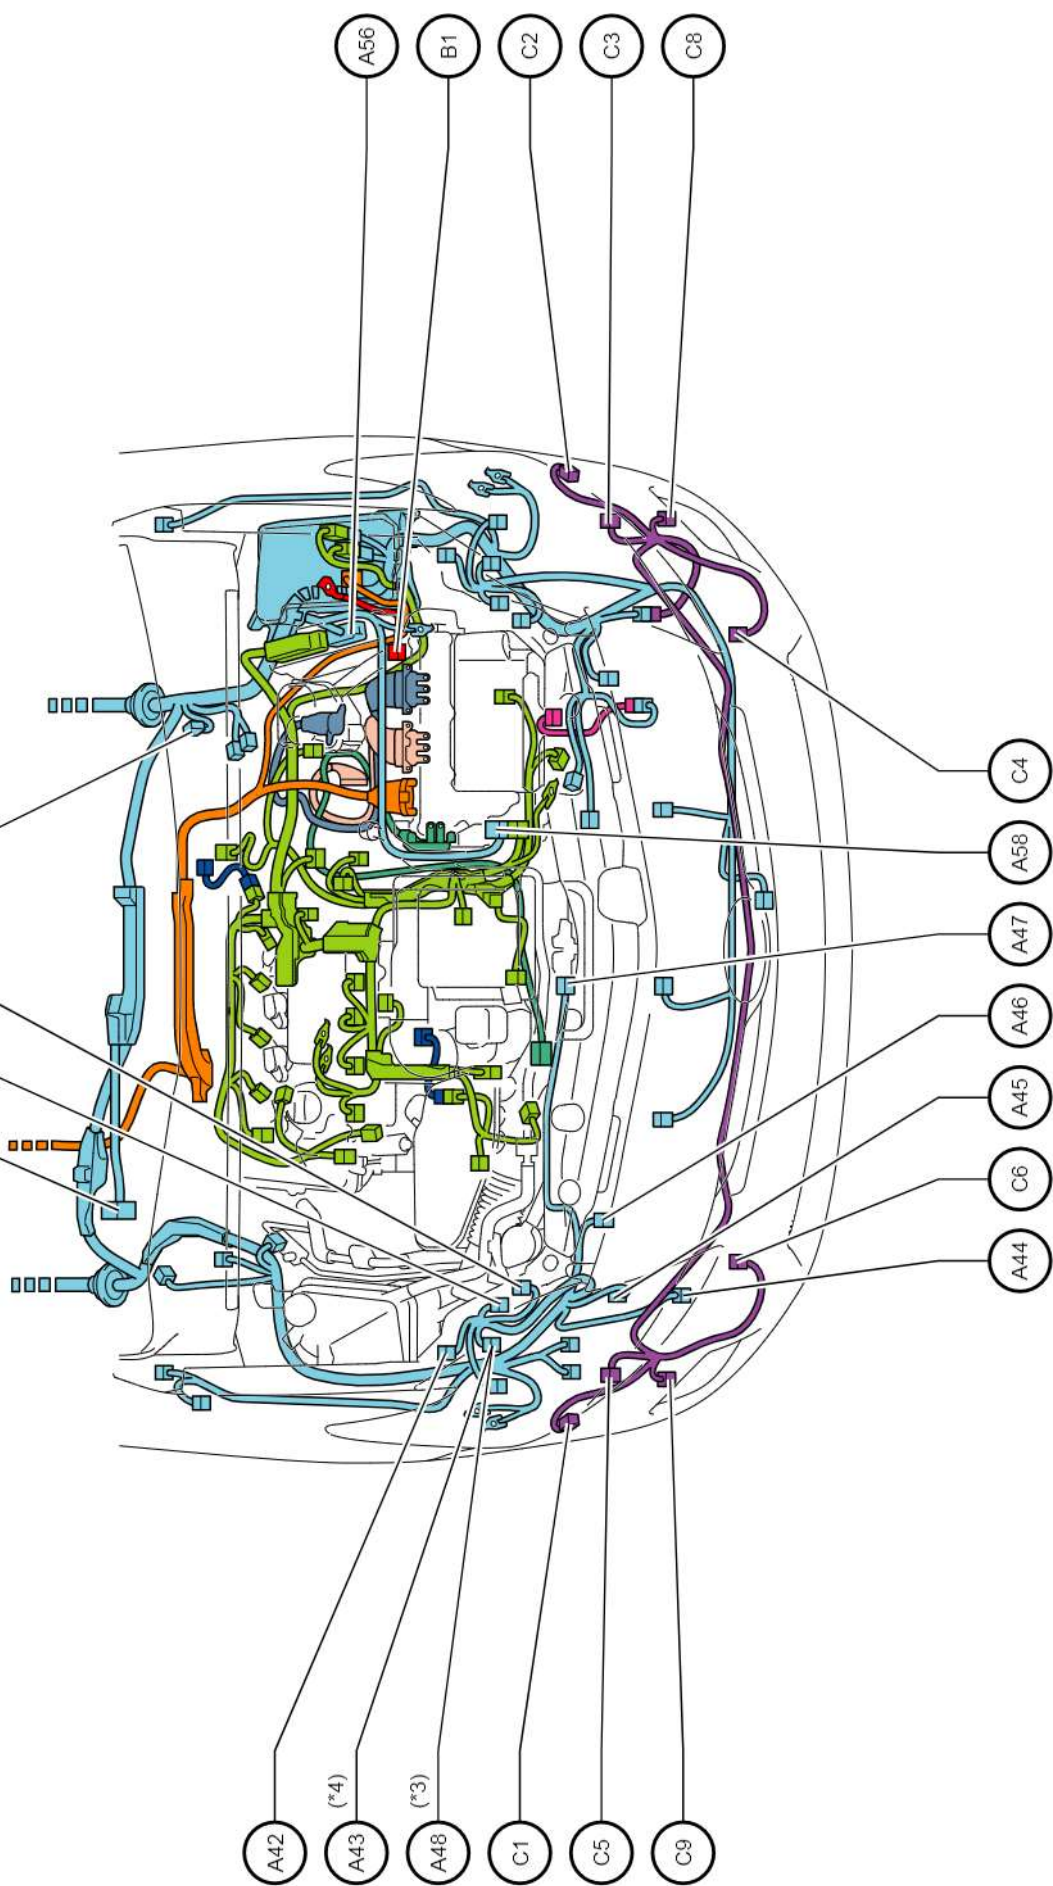


A 40	Headlight Assembly RH
A 41	Headlight Assembly RH
A 42	Headlight Assembly RH
A 43	Headlight Assembly RH
A 44	Headlight Cleaner Motor and Pump Assembly
A 45	Headlight Cleaner Control Relay
A 46	Front Airbag Sensor RH
A 47	Engine Hood Courtesy Switch Assembly
A 48	Headlight Assembly RH
A 56	ECM
A 57	Skid Control ECU with Actuator Assembly
A 58	Inverter with Converter Assembly
A 59	Security Horn Assembly
B 1	Inverter with Converter Assembly
C 1	No. 1 Ultrasonic Sensor RH
C 2	No. 1 Ultrasonic Sensor LH
C 3	Front Turn Signal Light LH
C 4	Fog Light Assembly LH
C 5	Front Turn Signal Light RH
C 6	Fog Light Assembly RH
C 8	Front Turn Signal Light LH
C 9	Front Turn Signal Light RH

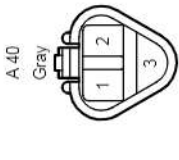


(Clearance Halogen Type)

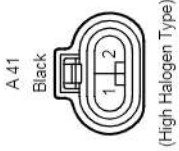






(High Halogen Type)

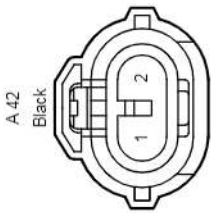

(Low Halogen Type)

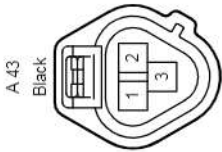


(Headlight Leveling Motor)

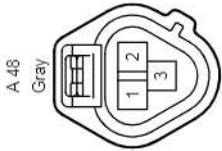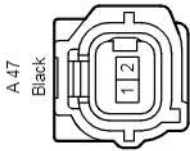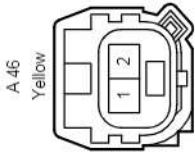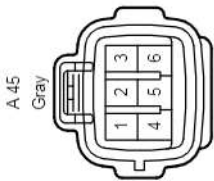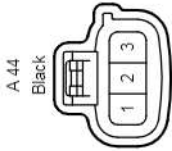


(Headlight Leveling Motor)


A 56
Black

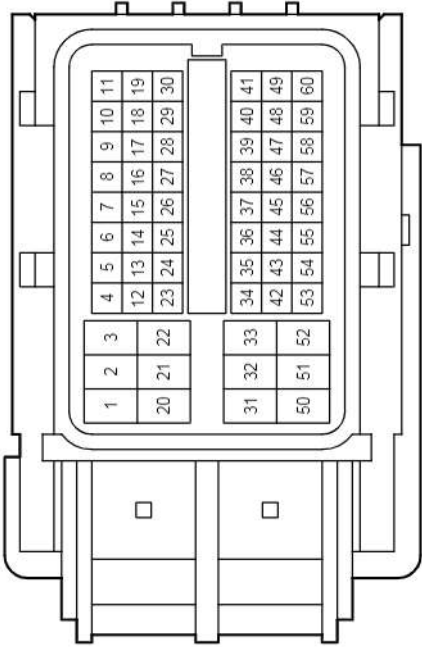


A 57
Gray

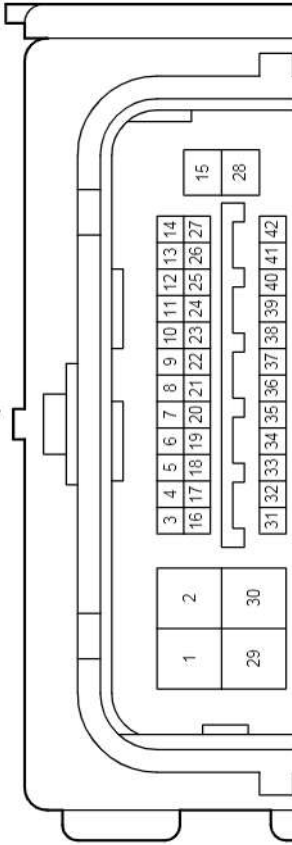

Position of Parts in Engine Compartment <RHD>























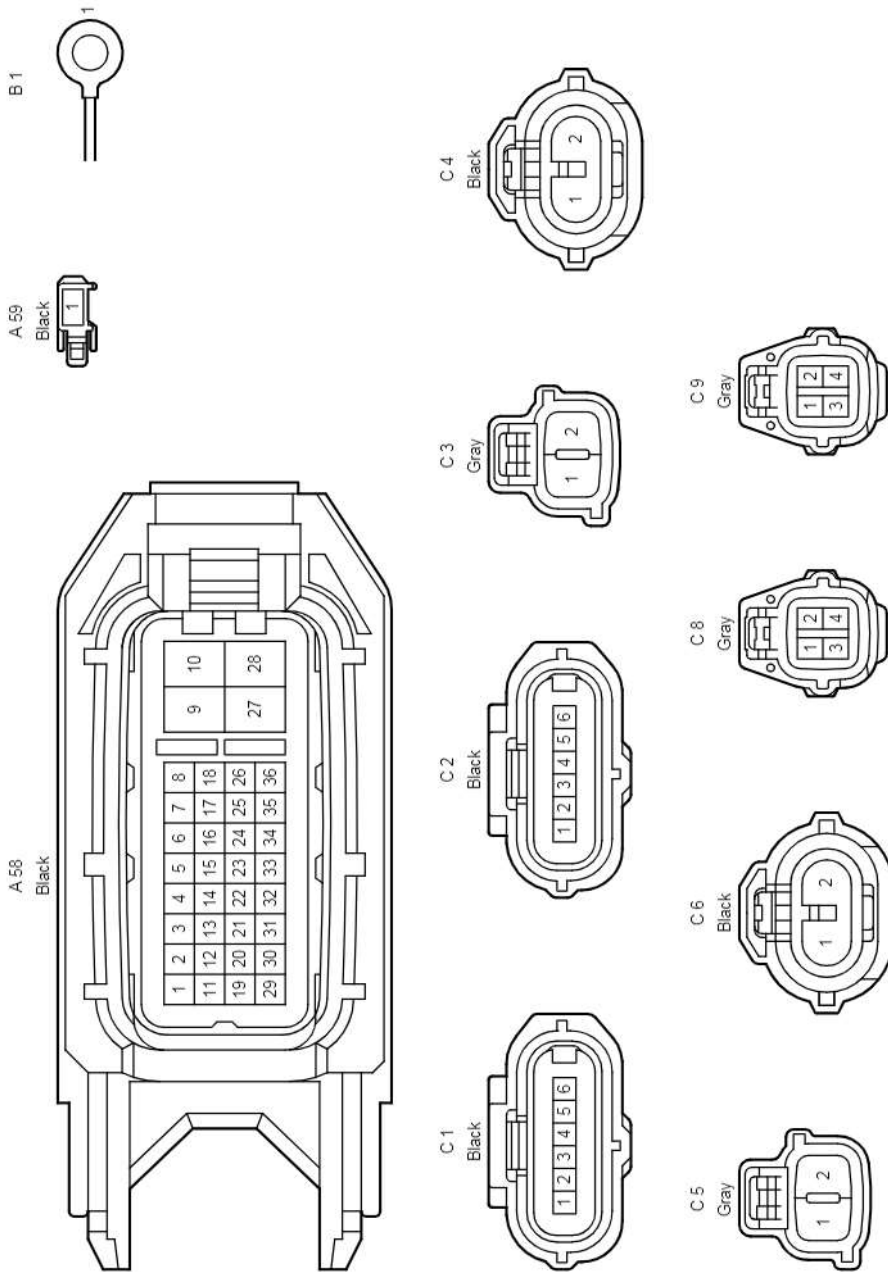


Position of Parts in Engine Compartment <RHD>

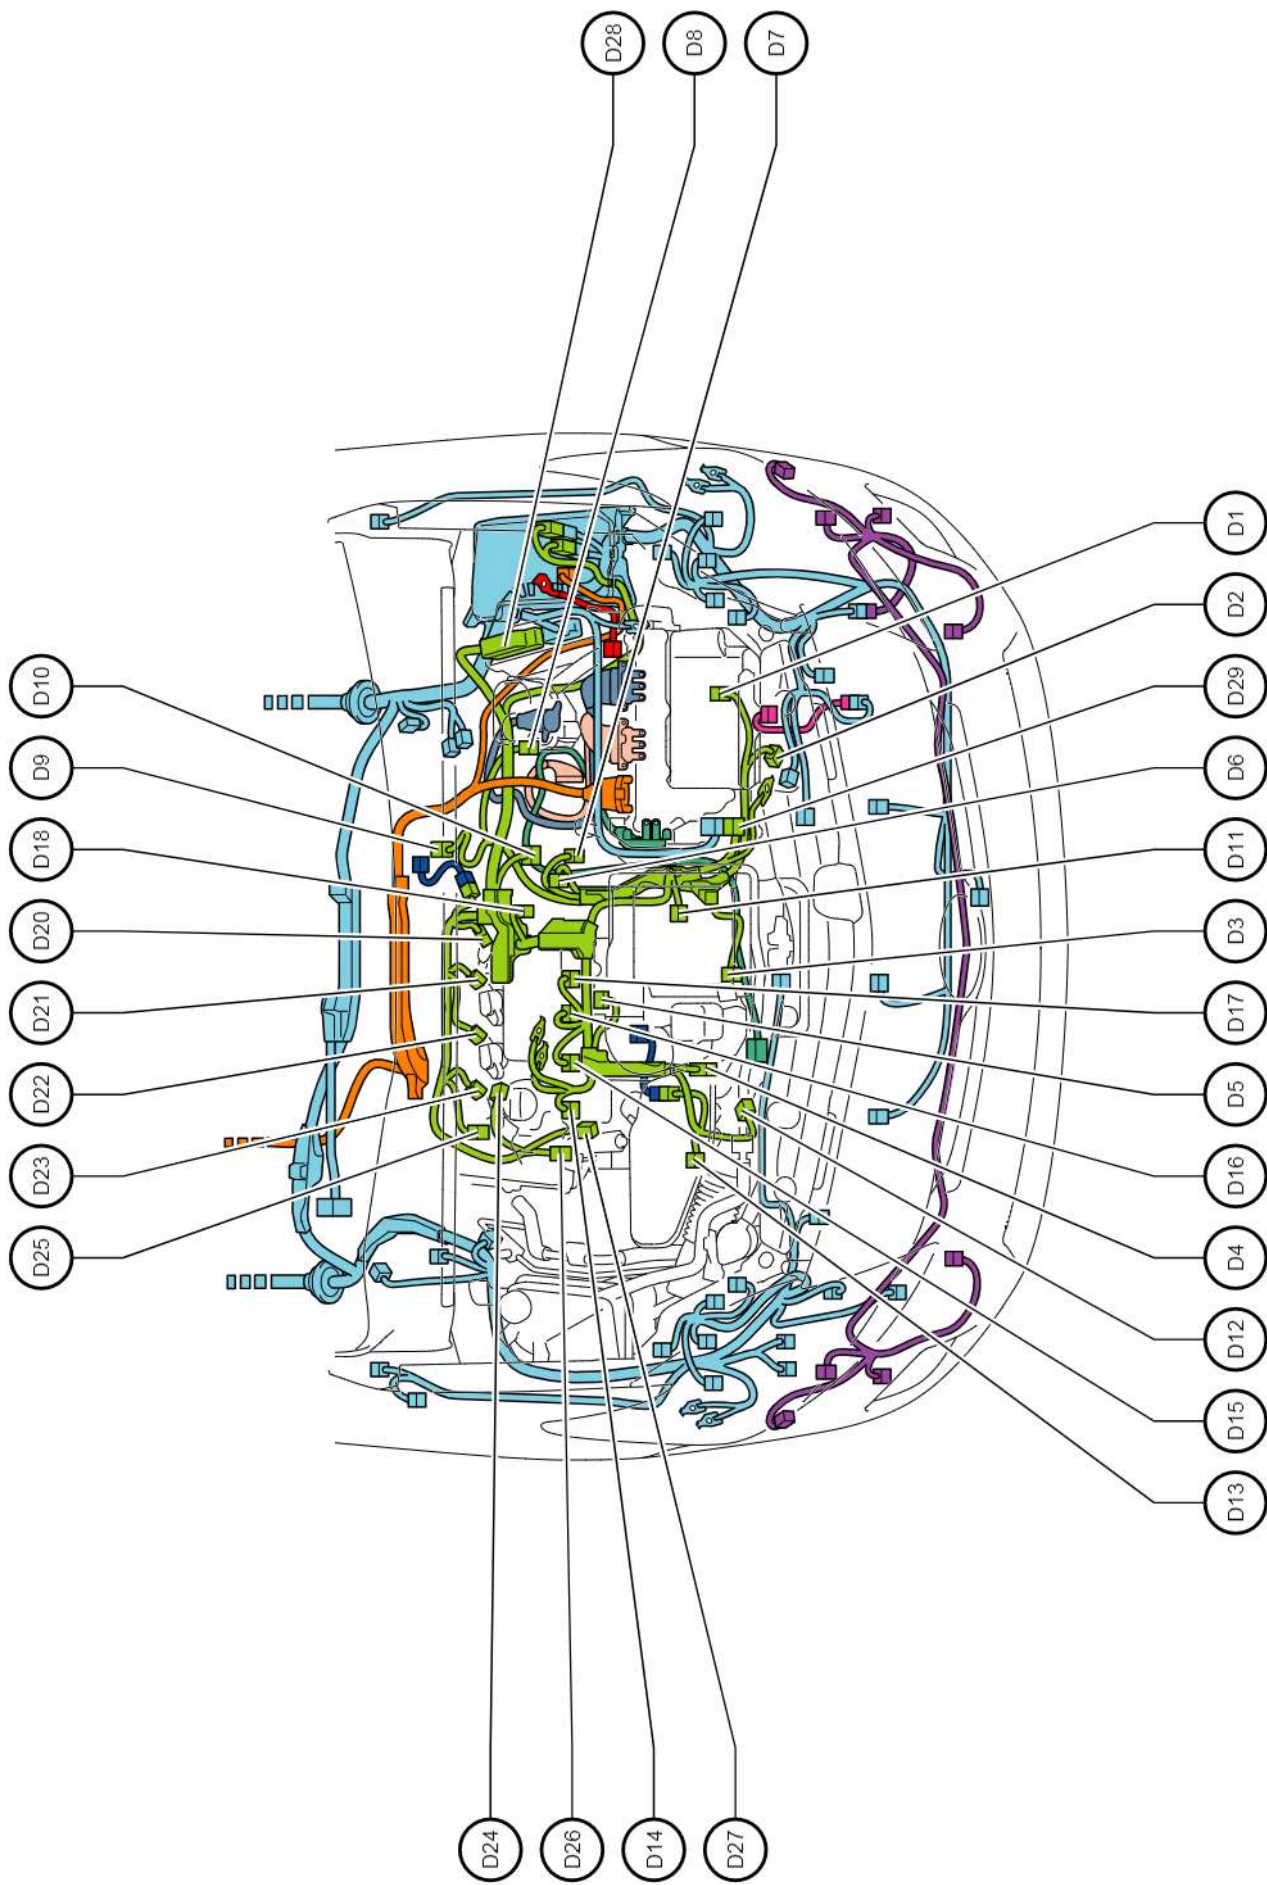


D 1	No. 2 Motor Generator
D 2	Shift Control Actuator Assembly
D 3	E.F.I. Vacuum Sensor Assembly
D 4	Throttle Body Assembly
D 5	Intake Mass Air Flow Meter Sub-Assembly
D 6	E.F.I. Engine Coolant Temperature Sensor
D 7	No. 1 Motor Generator
D 8	No. 2 Motor Generator
D 9	Oxygen Sensor (Bank 1 Sensor 2)
D 10	EGR Valve Assembly
D 11	Purge VSV
D 12	Compressor with Motor Assembly
D 13	Engine Water Pump Assembly
D 14	Fuel Injector Assembly No. 1
D 15	Fuel Injector Assembly No. 2
D 16	Fuel Injector Assembly No. 3
D 17	Fuel Injector Assembly No. 4
D 18	WT Sensor (Intake Side)
D 20	Ignition Coil Assembly No. 4
D 21	Ignition Coil Assembly No. 3
D 22	Ignition Coil Assembly No. 2
D 23	Ignition Coil Assembly No. 1
D 24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 25	Camshaft Timing Oil Control Valve (Intake Side)
D 26	Engine Oil Pressure Switch Assembly
D 27	Crankshaft Position Sensor
D 28	ECM
D 29	Inverter with Converter Assembly


Position of Parts in Engine Compartment <RHD>

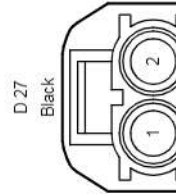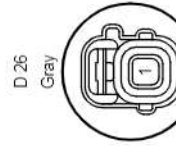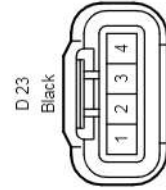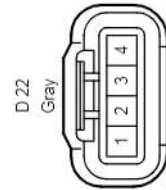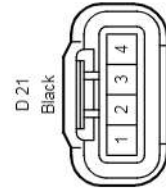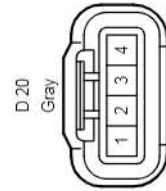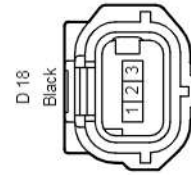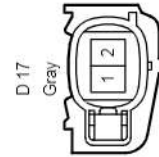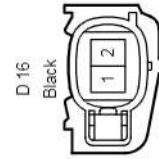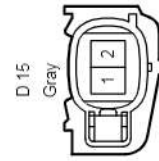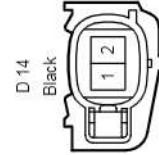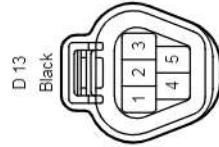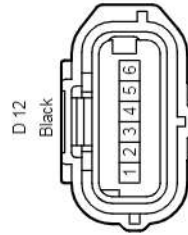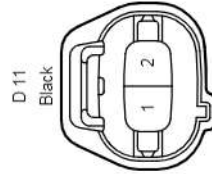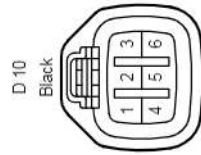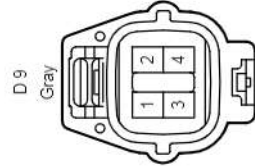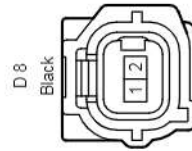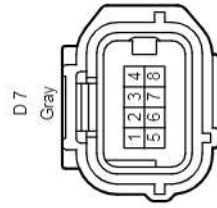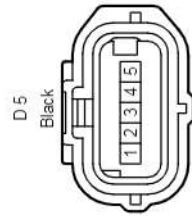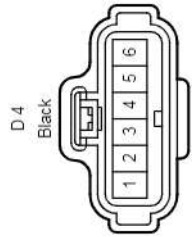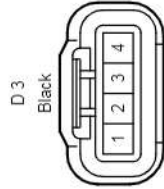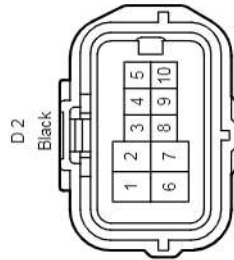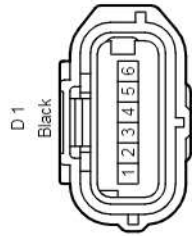


D 28
Black

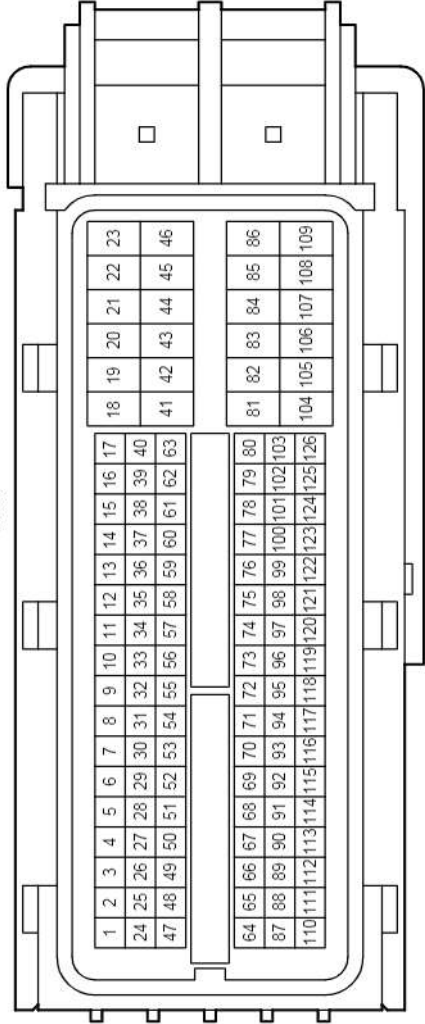

D 29
Black










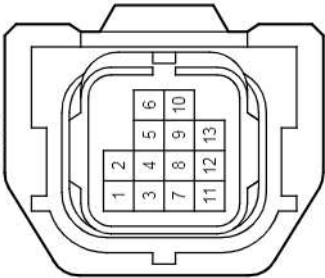



Position of Parts in Engine Compartment <RHD>

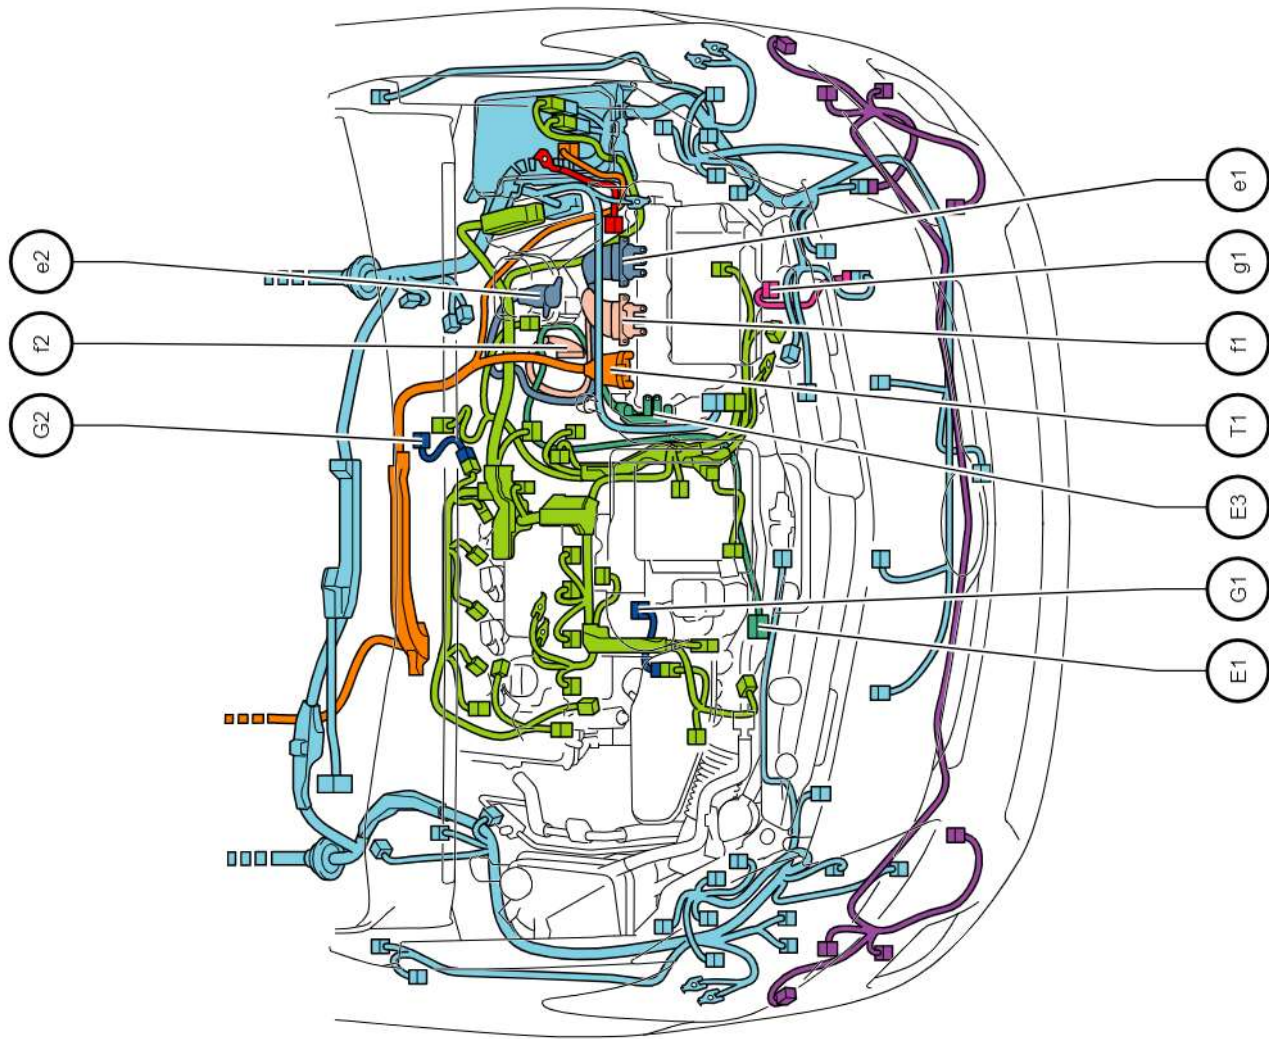


- E 1 Compressor with Motor Assembly
- E 3 Inverter with Converter Assembly
- G 1 Knock Control Sensor (Bank 1)
- G 2 Engine Coolant Temperature Sensor
- T 1 Inverter with Converter Assembly
- e 1 Inverter with Converter Assembly
- e 2 No. 2 Motor Generator
- f 1 Inverter with Converter Assembly
- f 2 No. 1 Motor Generator
- g 1 Inverter Water Pump Motor Assembly

 
Position of Parts in Engine Compartment <RHD>

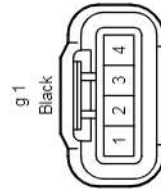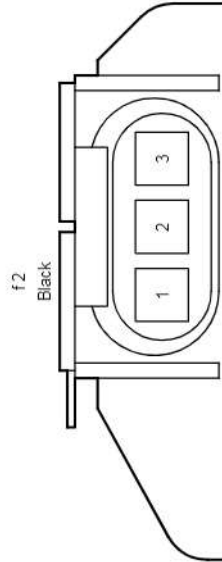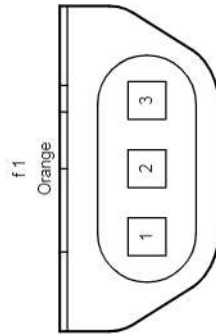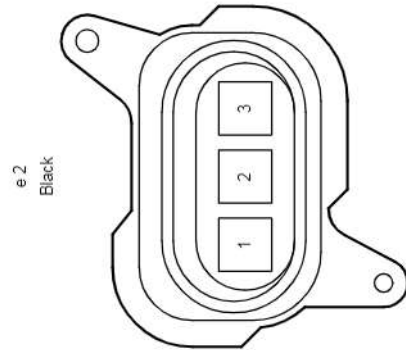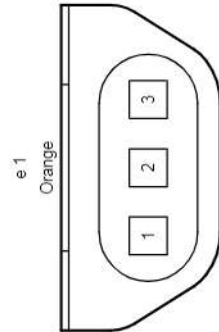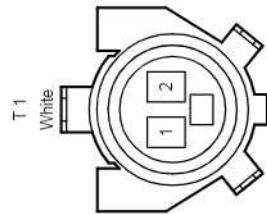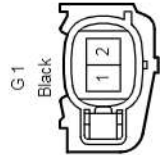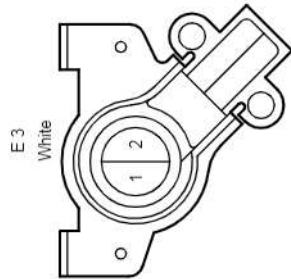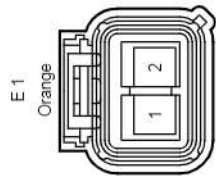

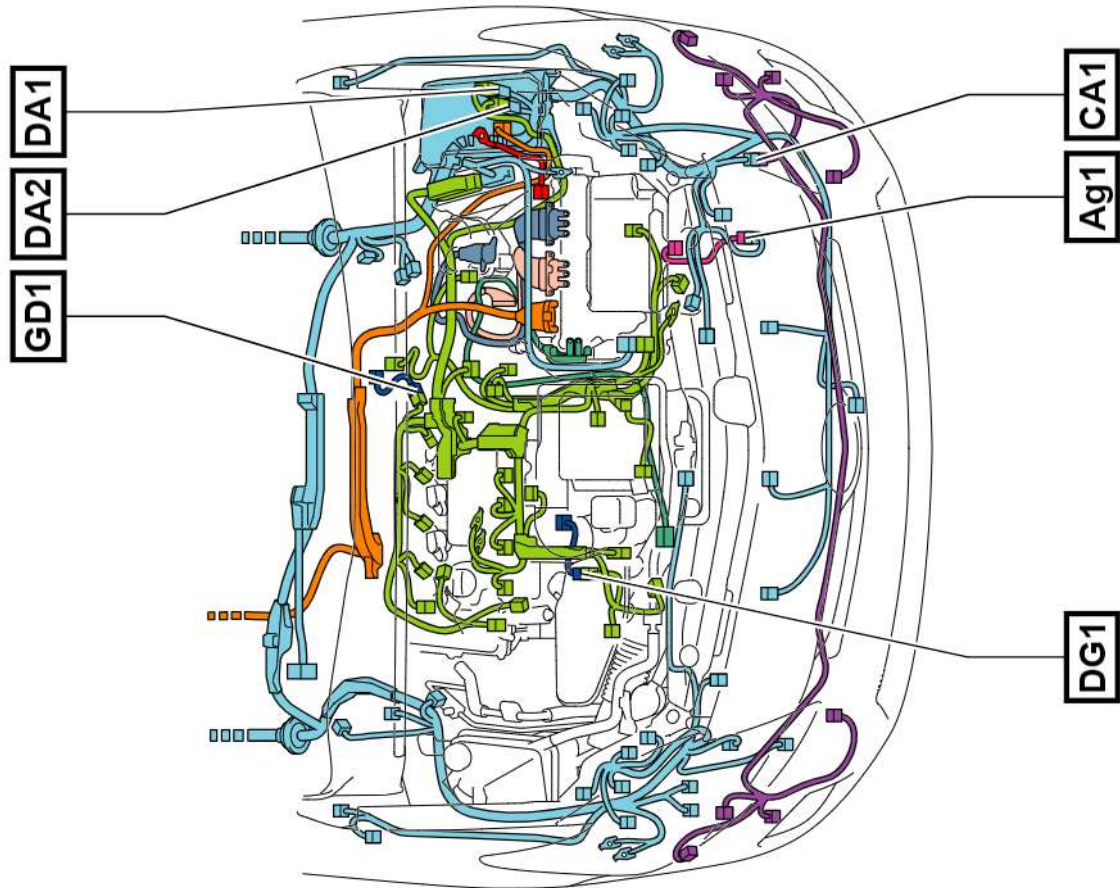

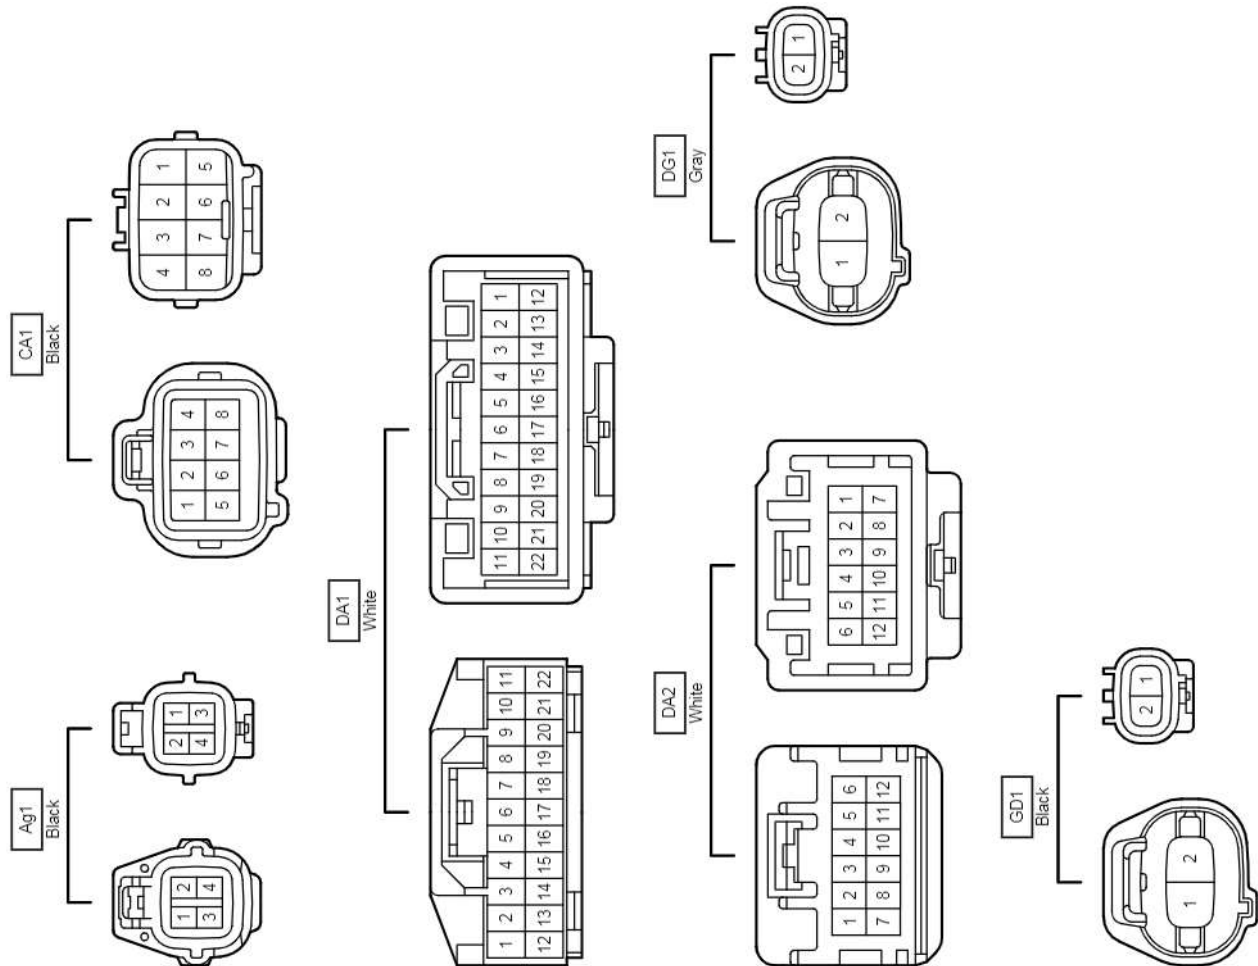

Position of Parts in Luggage Room <LHD>

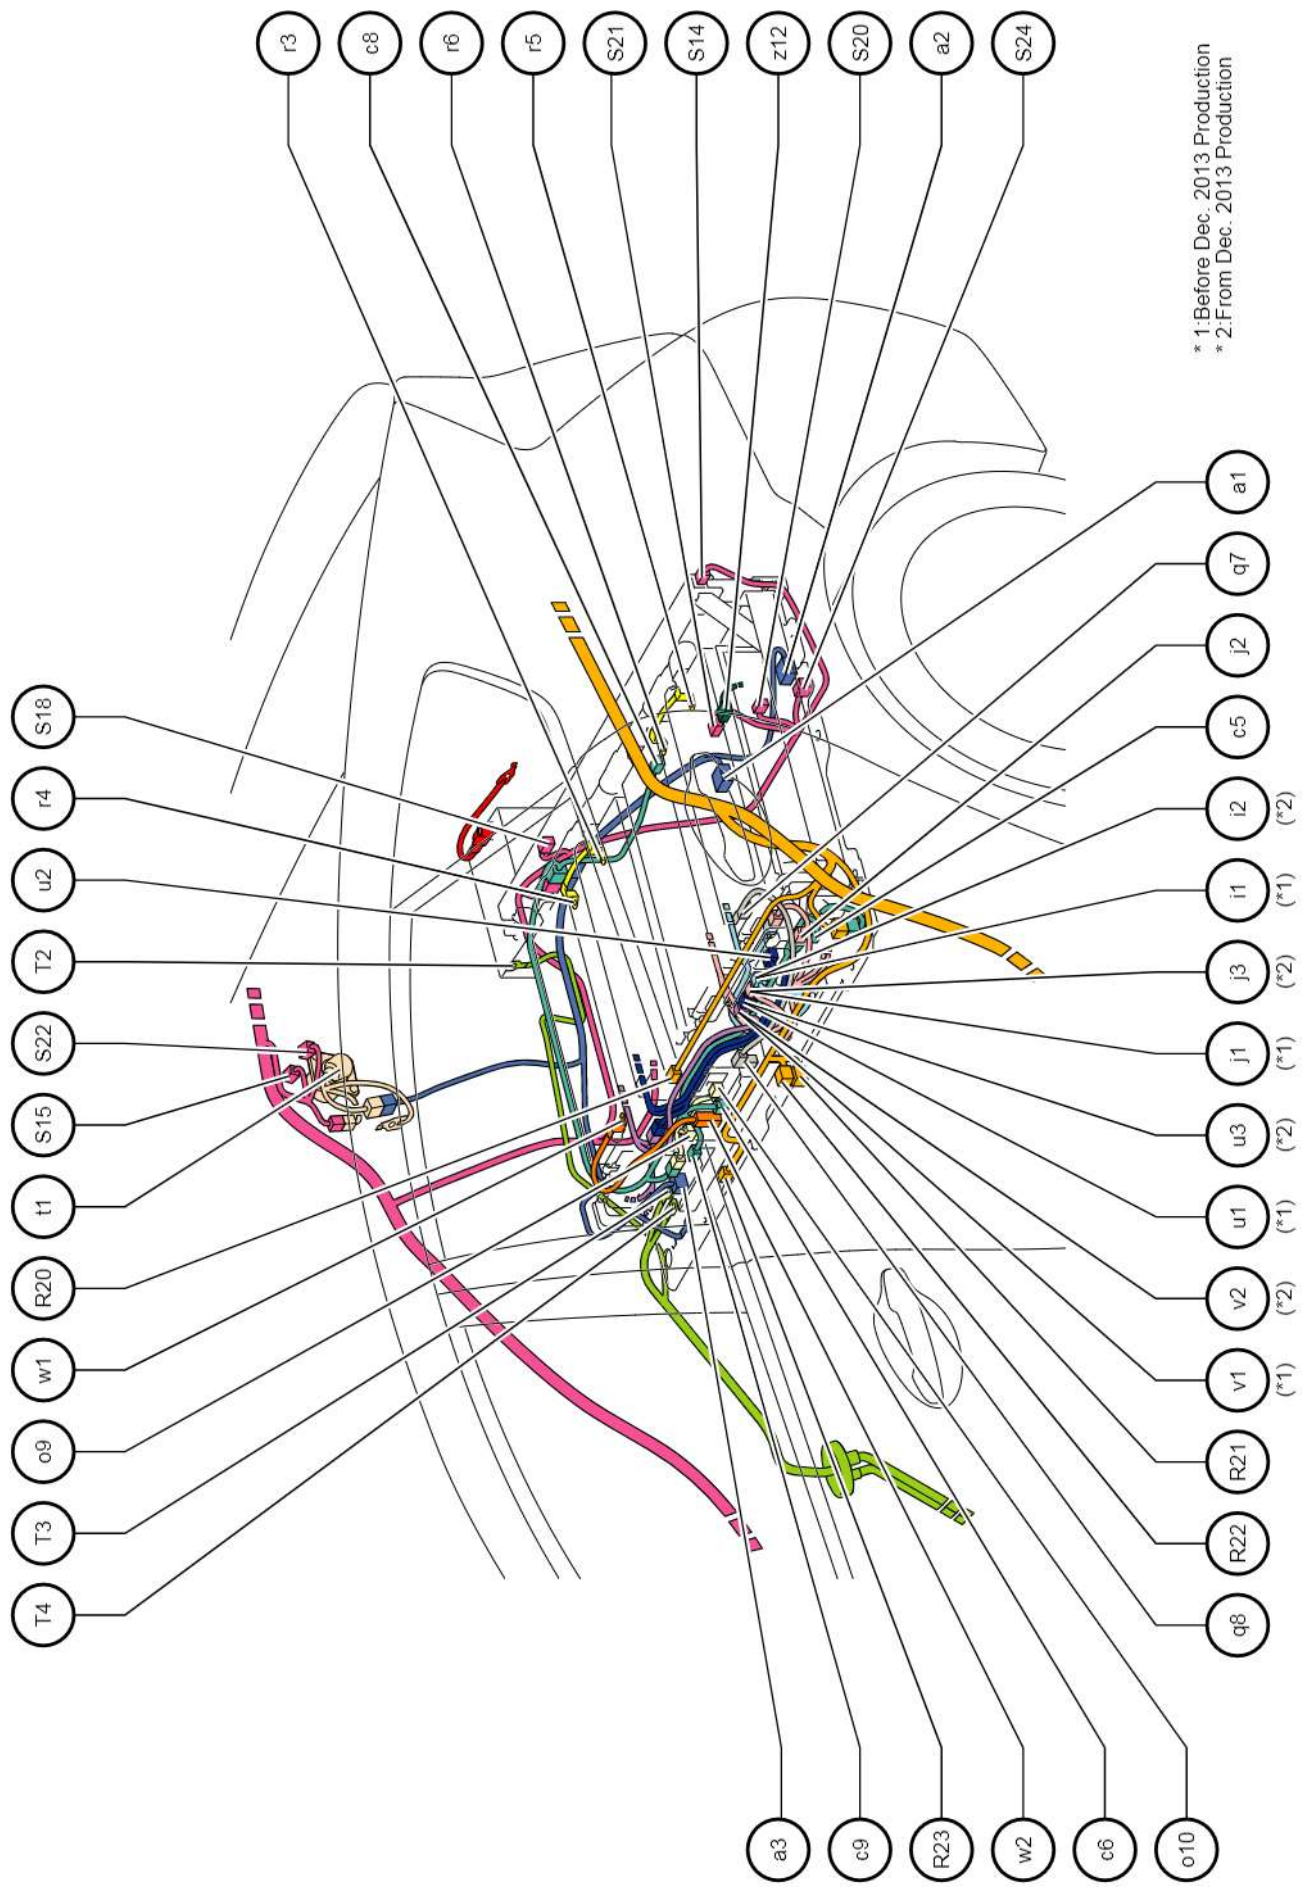



* 1: Before Dec. 2013 Production
* 2: From Dec. 2013 Production

Position of Parts in Luggage Room <LHD>


R	20	Indoor Luggage Compartment Electrical Key Oscillator
R	21	Rear Seat Inner with Center Belt Assembly LH
R	22	Rear Seat Inner with Center Belt Assembly LH
R	23	Rear Seat Belt Assembly Inner RH
S	14	Battery Cooling Blower Assembly (Main)
S	15	Spot Light Assembly
S	18	Battery Cooling Blower Assembly (Sub 1)
S	20	Electric Vehicle Charger Assembly
S	21	Plug-in Charge Control ECU Assembly
S	22	Indicator Light Assembly
S	24	Junction Connector
T	2	Fusible Link Block
T	3	HV Battery Junction Block Assembly (Main)
T	4	HV Battery Junction Block Assembly (Main)
a	1	Electric Vehicle Charger Assembly
a	2	Electric Vehicle Charger Assembly
a	3	HV Battery Junction Block Assembly (Main)
c	5	Battery Voltage Sensor
c	6	HV Battery Junction Block Assembly (Main)
c	8	Inter Lock Switch
c	9	HV Battery Junction Block Assembly (Main)
i	1	Battery Voltage Sensor , HV Battery
i	2	Battery Voltage Sensor , HV Battery
j	1	Battery Voltage Sensor , HV Battery
j	2	Battery Voltage Sensor , HV Battery
j	3	Battery Voltage Sensor , HV Battery
o	9	HV Battery Junction Block Assembly (Main)
o	10	HV Battery Junction Block Assembly (Main)
q	7	HV Battery
q	8	HV Battery Junction Block Assembly (Main)
r	3	HV Battery
r	4	HV Battery
r	5	HV Battery
r	6	HV Battery


Position of Parts in Luggage Room <LHD>

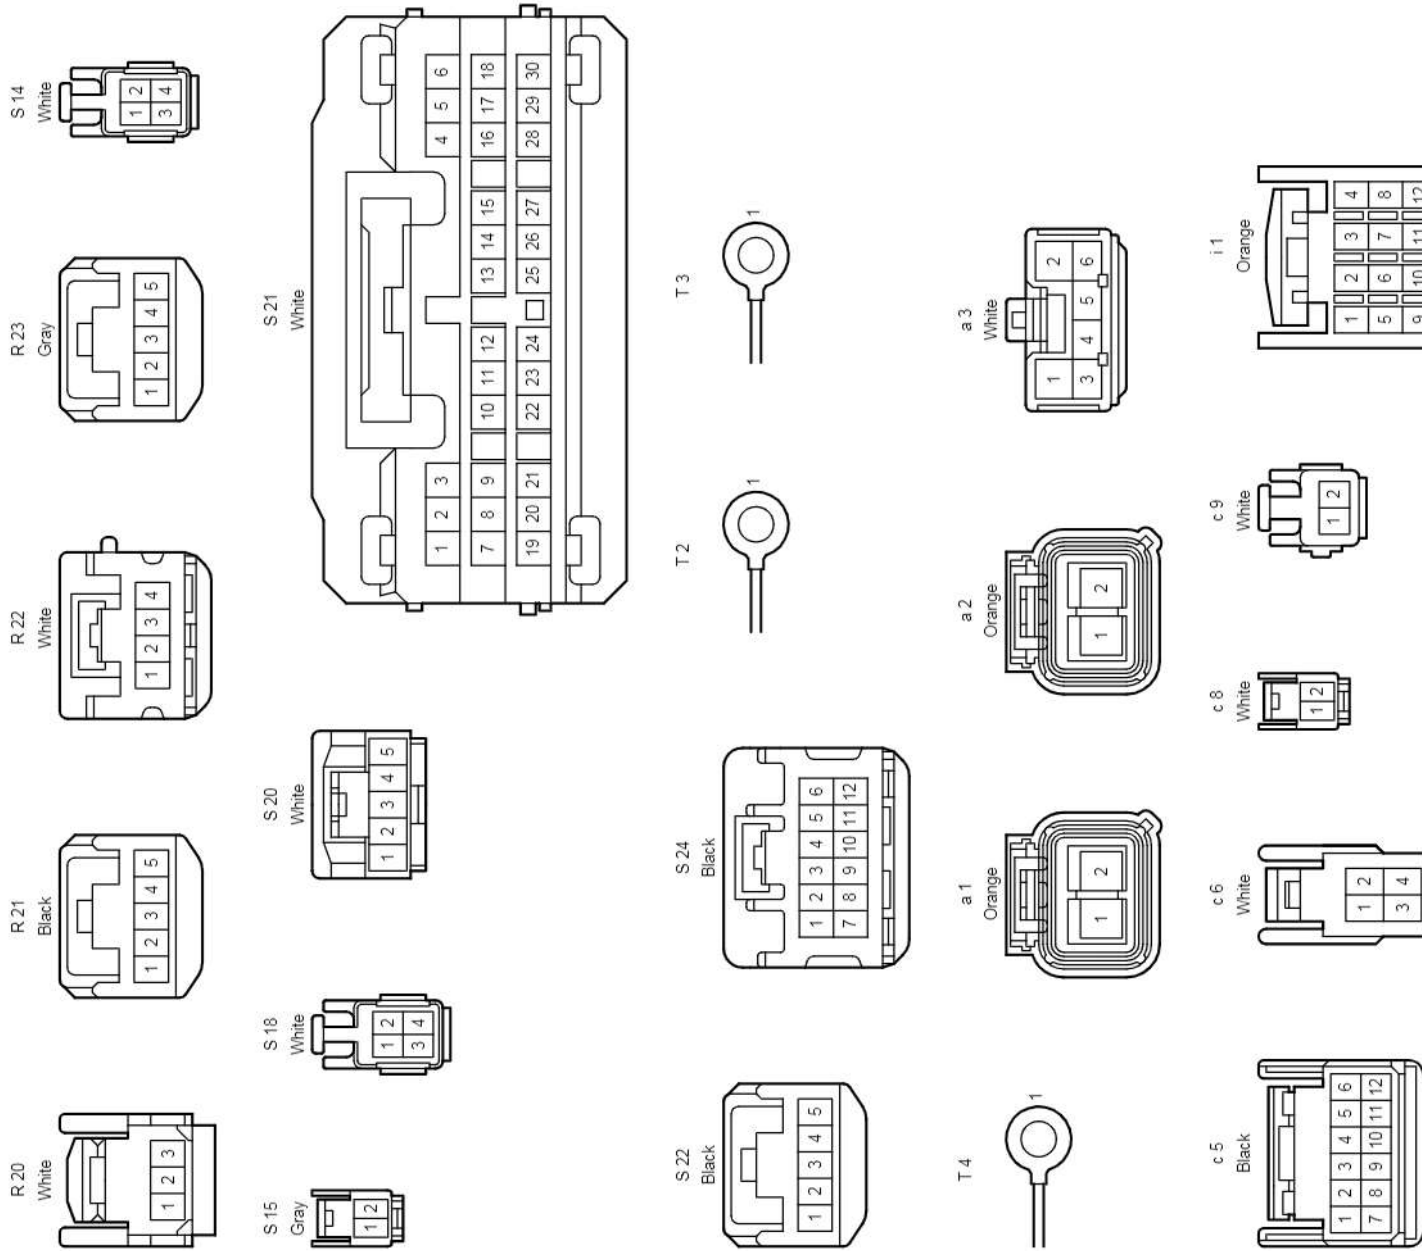


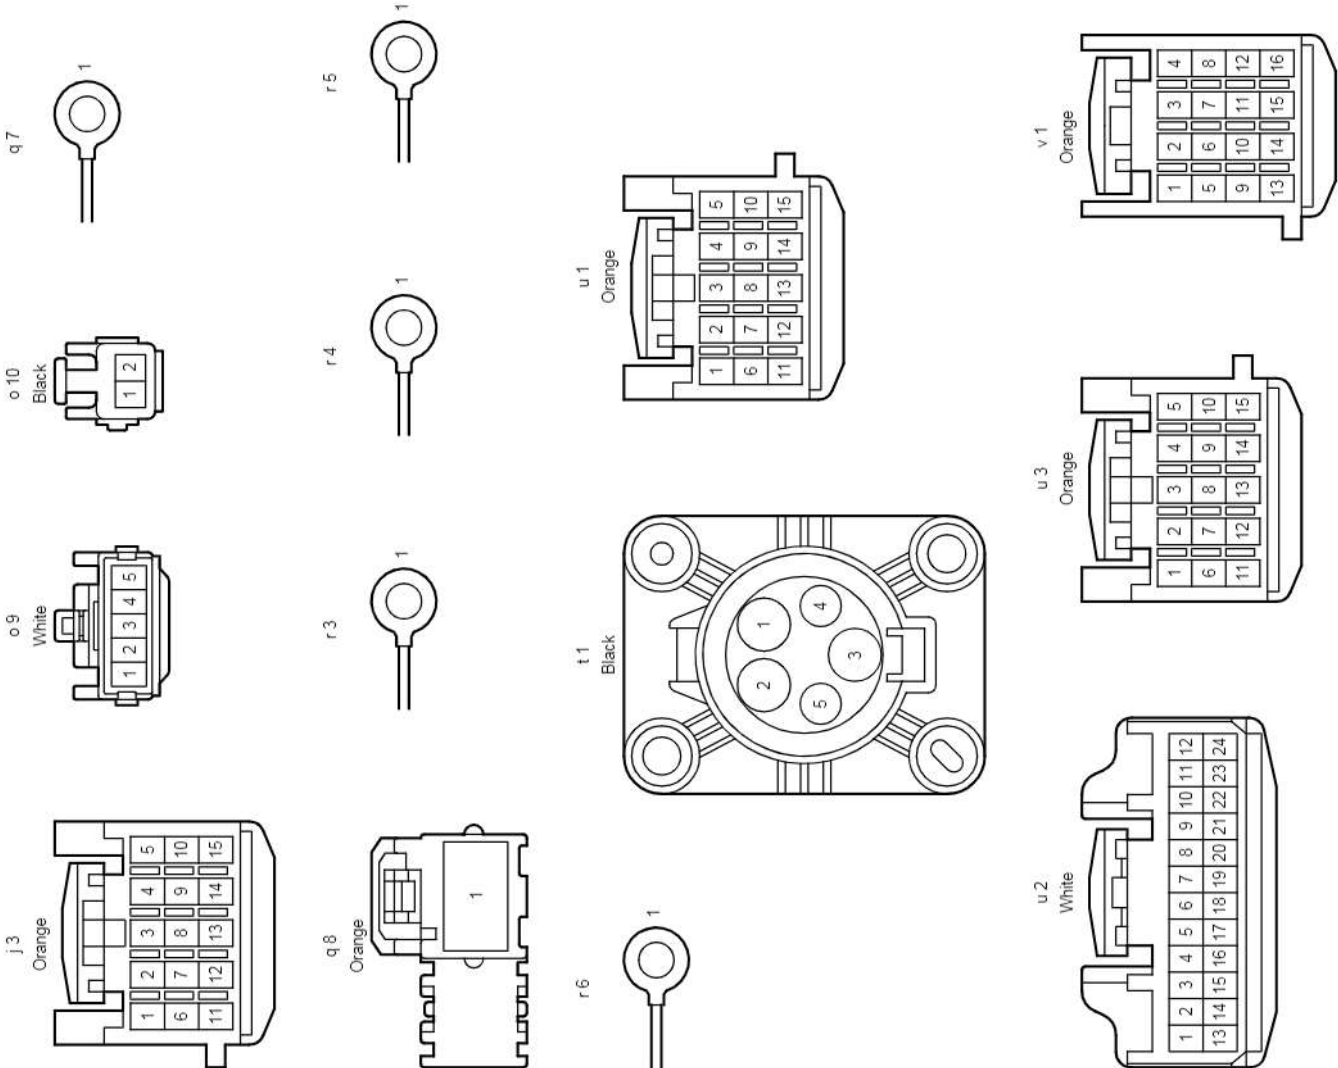


z 12
White

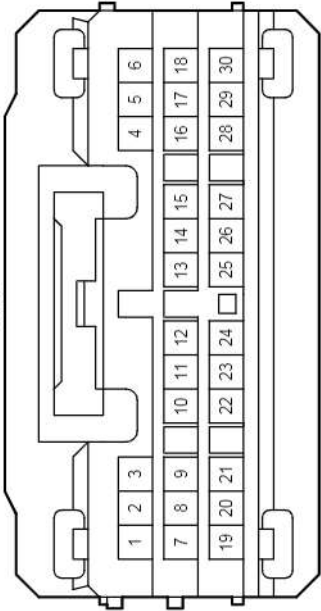

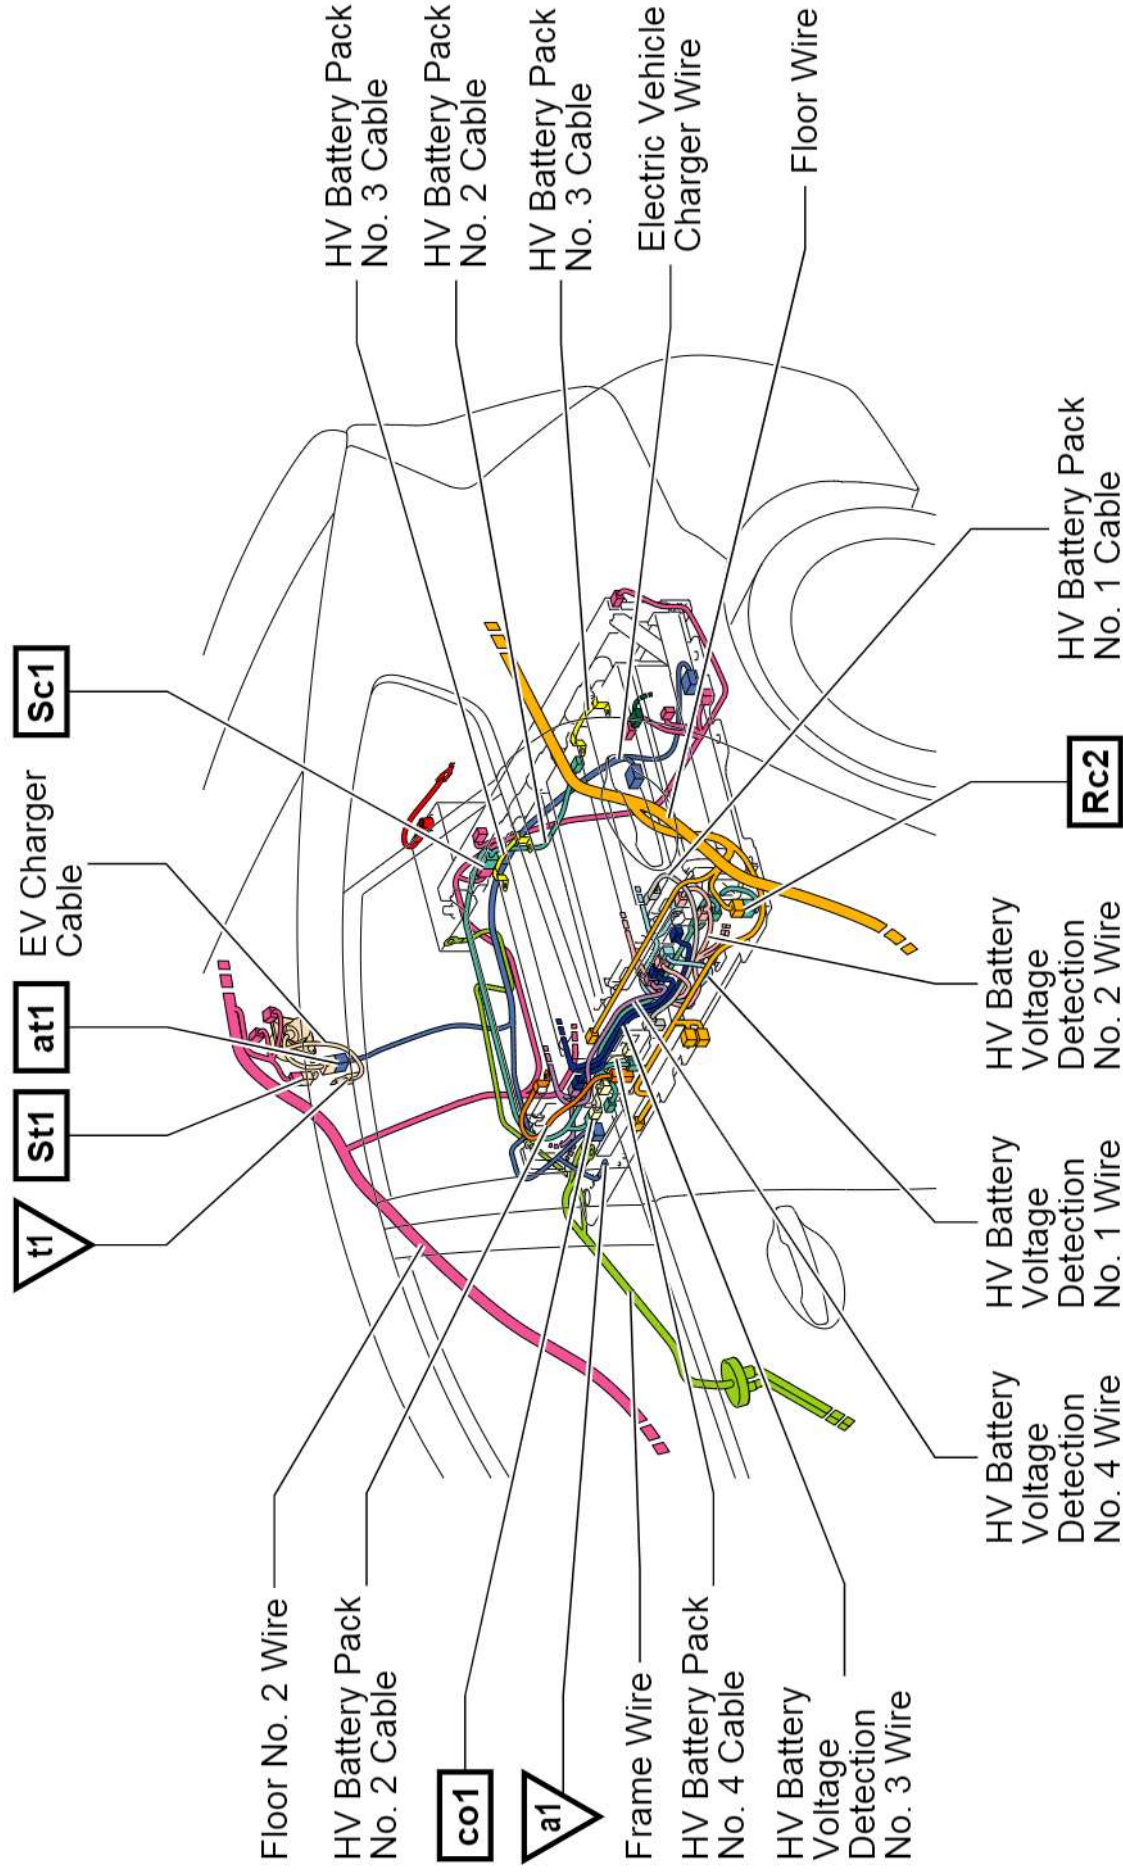

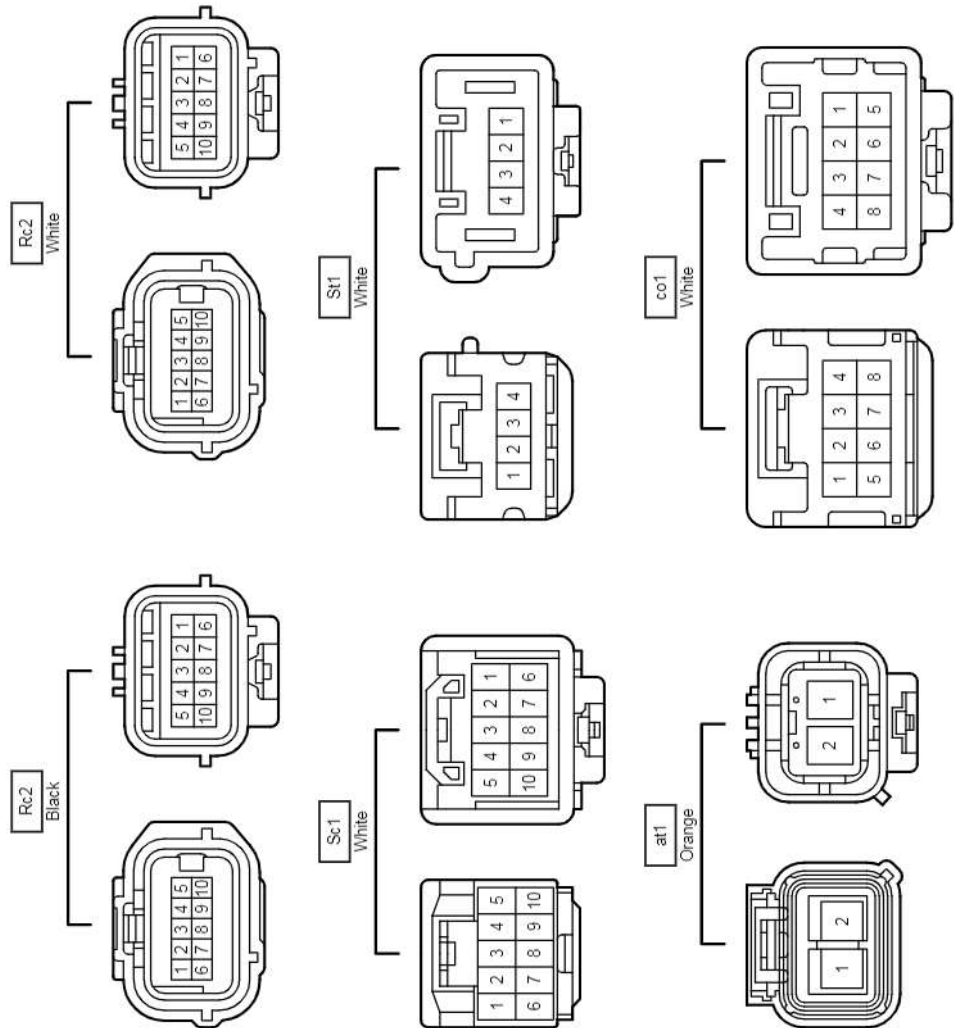


Position of Parts in Luggage Room <RHD>

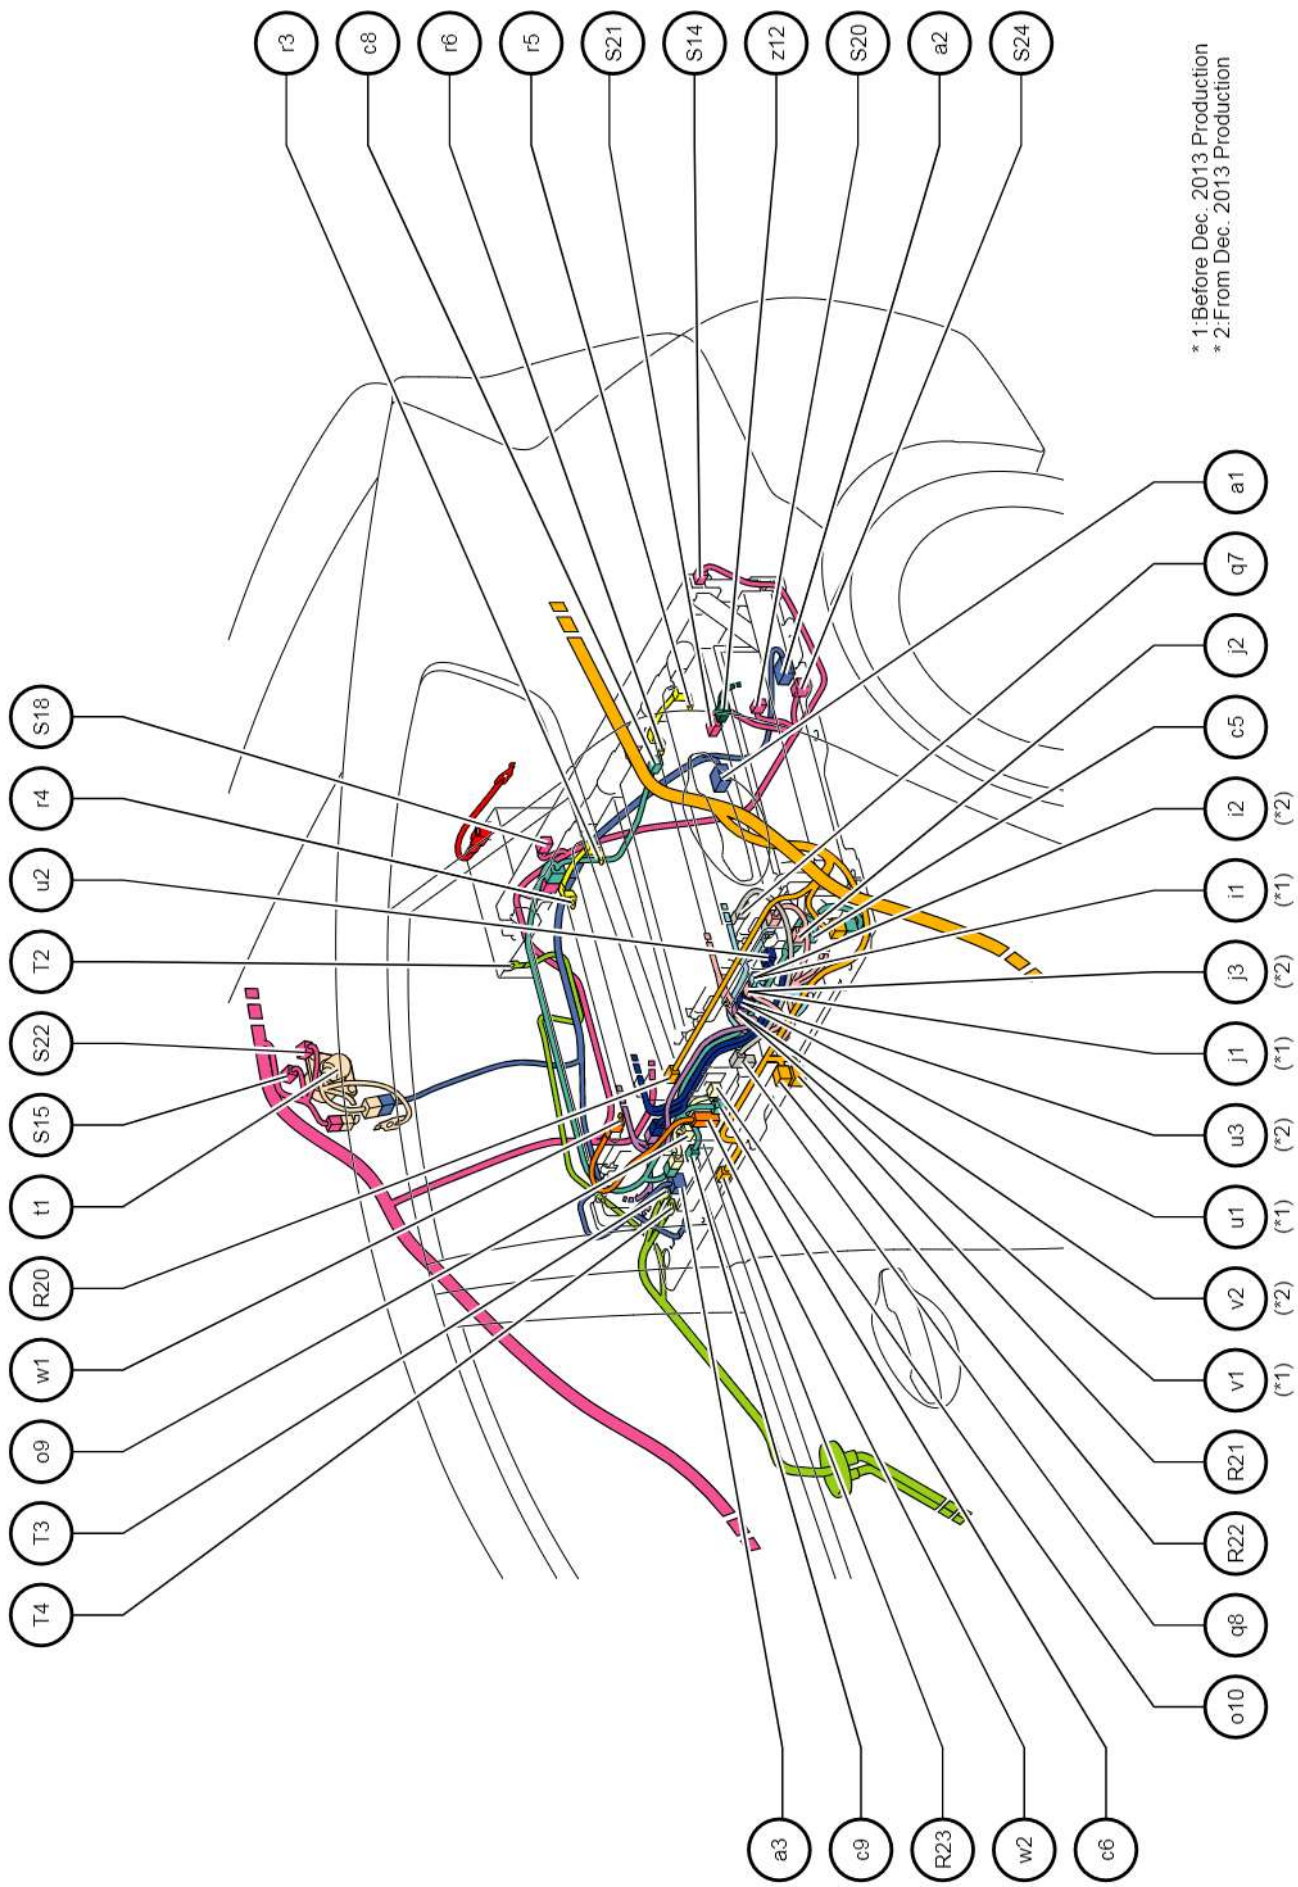










* 1: Before Dec. 2013 Production
* 2: From Dec. 2013 Production

R	20	Indoor Luggage Compartment Electrical Key Oscillator
R	21	Rear Seat Inner with Center Belt Assembly LH
R	22	Rear Seat Inner with Center Belt Assembly LH
R	23	Rear Seat Belt Assembly Inner RH
S	14	Battery Cooling Blower Assembly (Main)
S	15	Spot Light Assembly
S	18	Battery Cooling Blower Assembly (Sub 1)
S	20	Electric Vehicle Charger Assembly
S	21	Plug-in Charge Control ECU Assembly
S	22	Indicator Light Assembly
S	24	Junction Connector
T	2	Fusible Link Block
T	3	HV Battery Junction Block Assembly (Main)
T	4	HV Battery Junction Block Assembly (Main)
a	1	Electric Vehicle Charger Assembly
a	2	Electric Vehicle Charger Assembly
a	3	HV Battery Junction Block Assembly (Main)
c	5	Battery Voltage Sensor
c	6	HV Battery Junction Block Assembly (Main)
c	8	Inter Lock Switch
c	9	HV Battery Junction Block Assembly (Main)
i	1	Battery Voltage Sensor , HV Battery
i	2	Battery Voltage Sensor , HV Battery
j	1	Battery Voltage Sensor , HV Battery
j	2	Battery Voltage Sensor , HV Battery
j	3	Battery Voltage Sensor , HV Battery
o	9	HV Battery Junction Block Assembly (Main)
o	10	HV Battery Junction Block Assembly (Main)
q	7	HV Battery
q	8	HV Battery Junction Block Assembly (Main)
r	3	HV Battery
r	4	HV Battery
r	5	HV Battery
r	6	HV Battery


Position of Parts in Luggage Room <RHD>

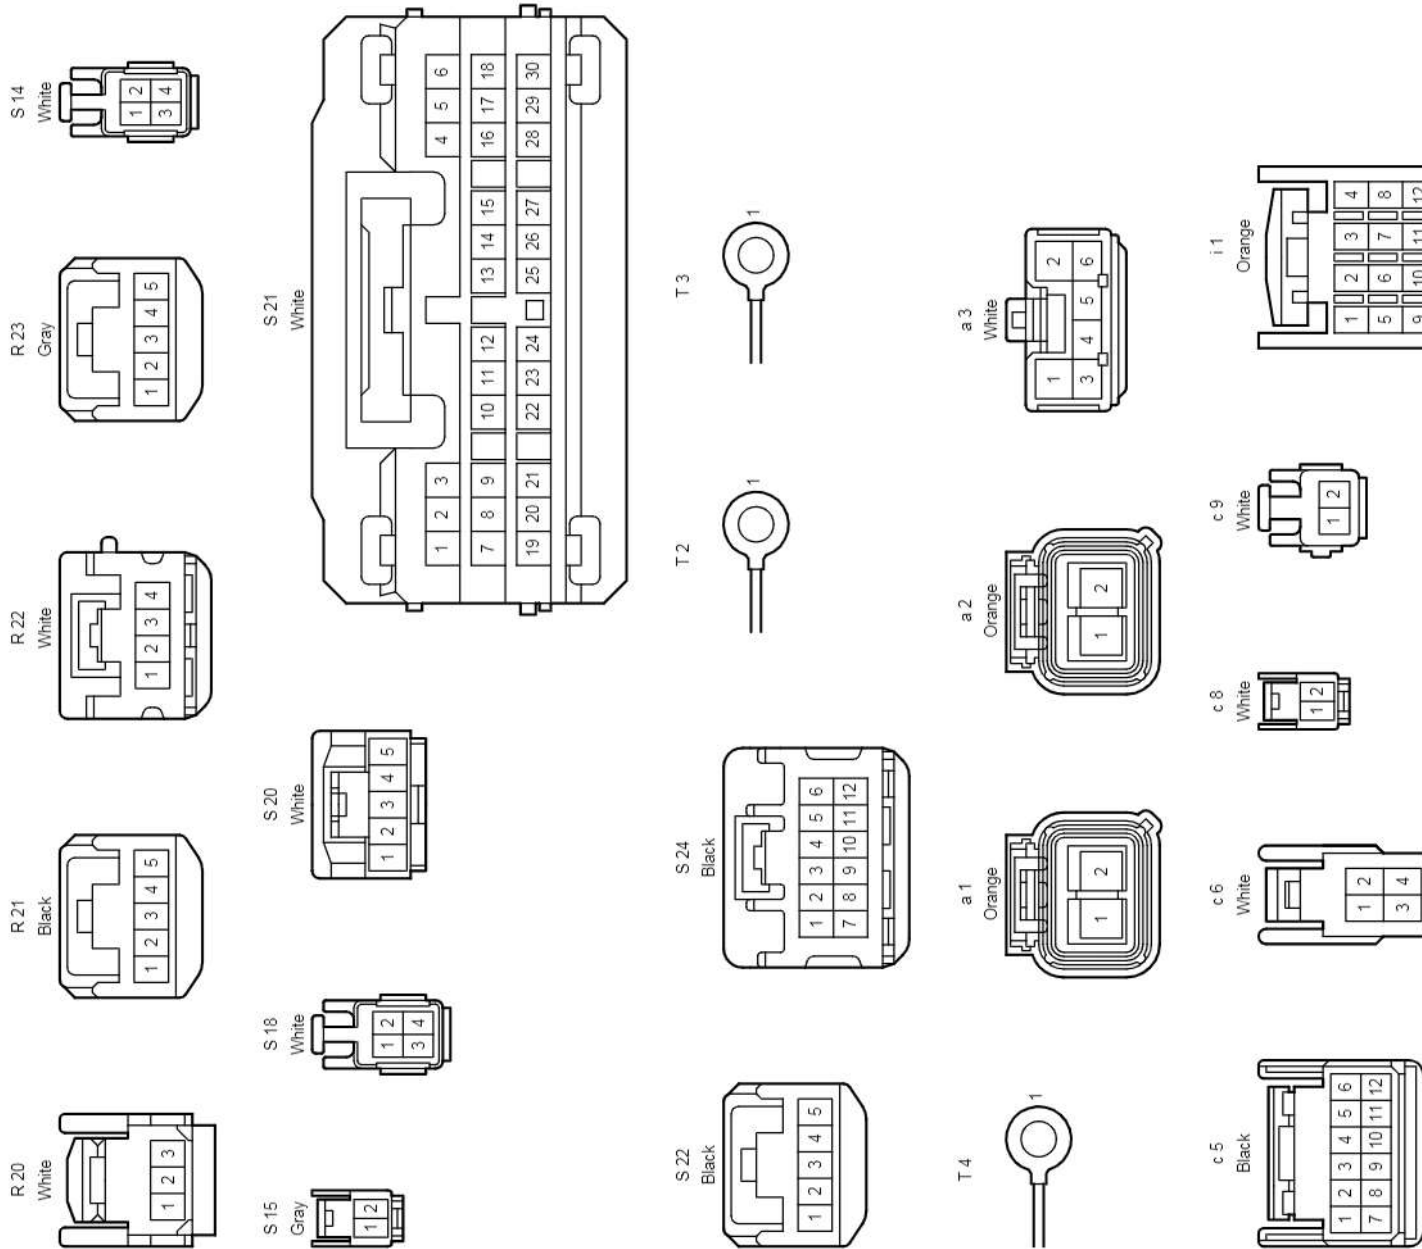



cardiagn.com

 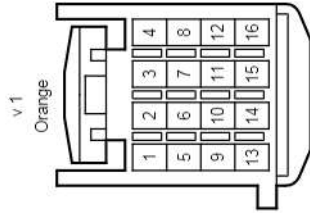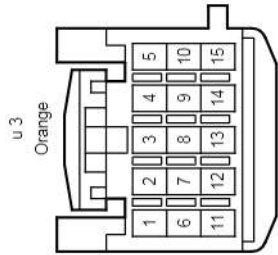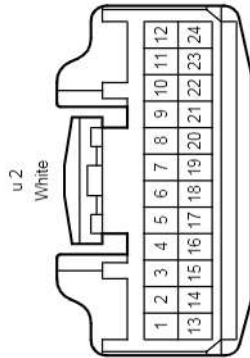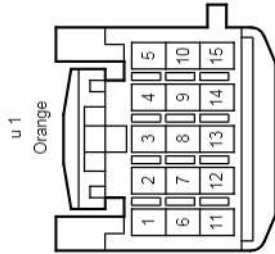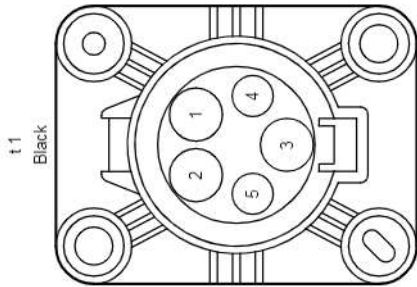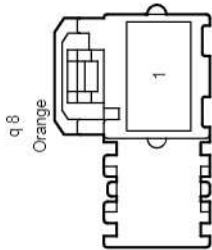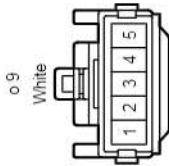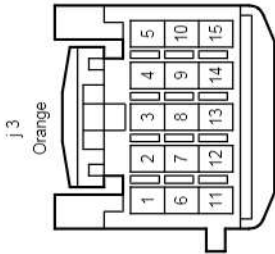


z 12
White

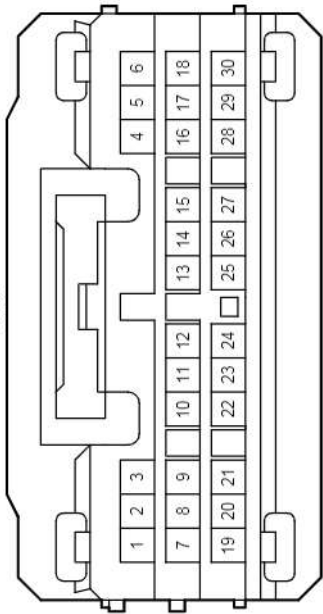

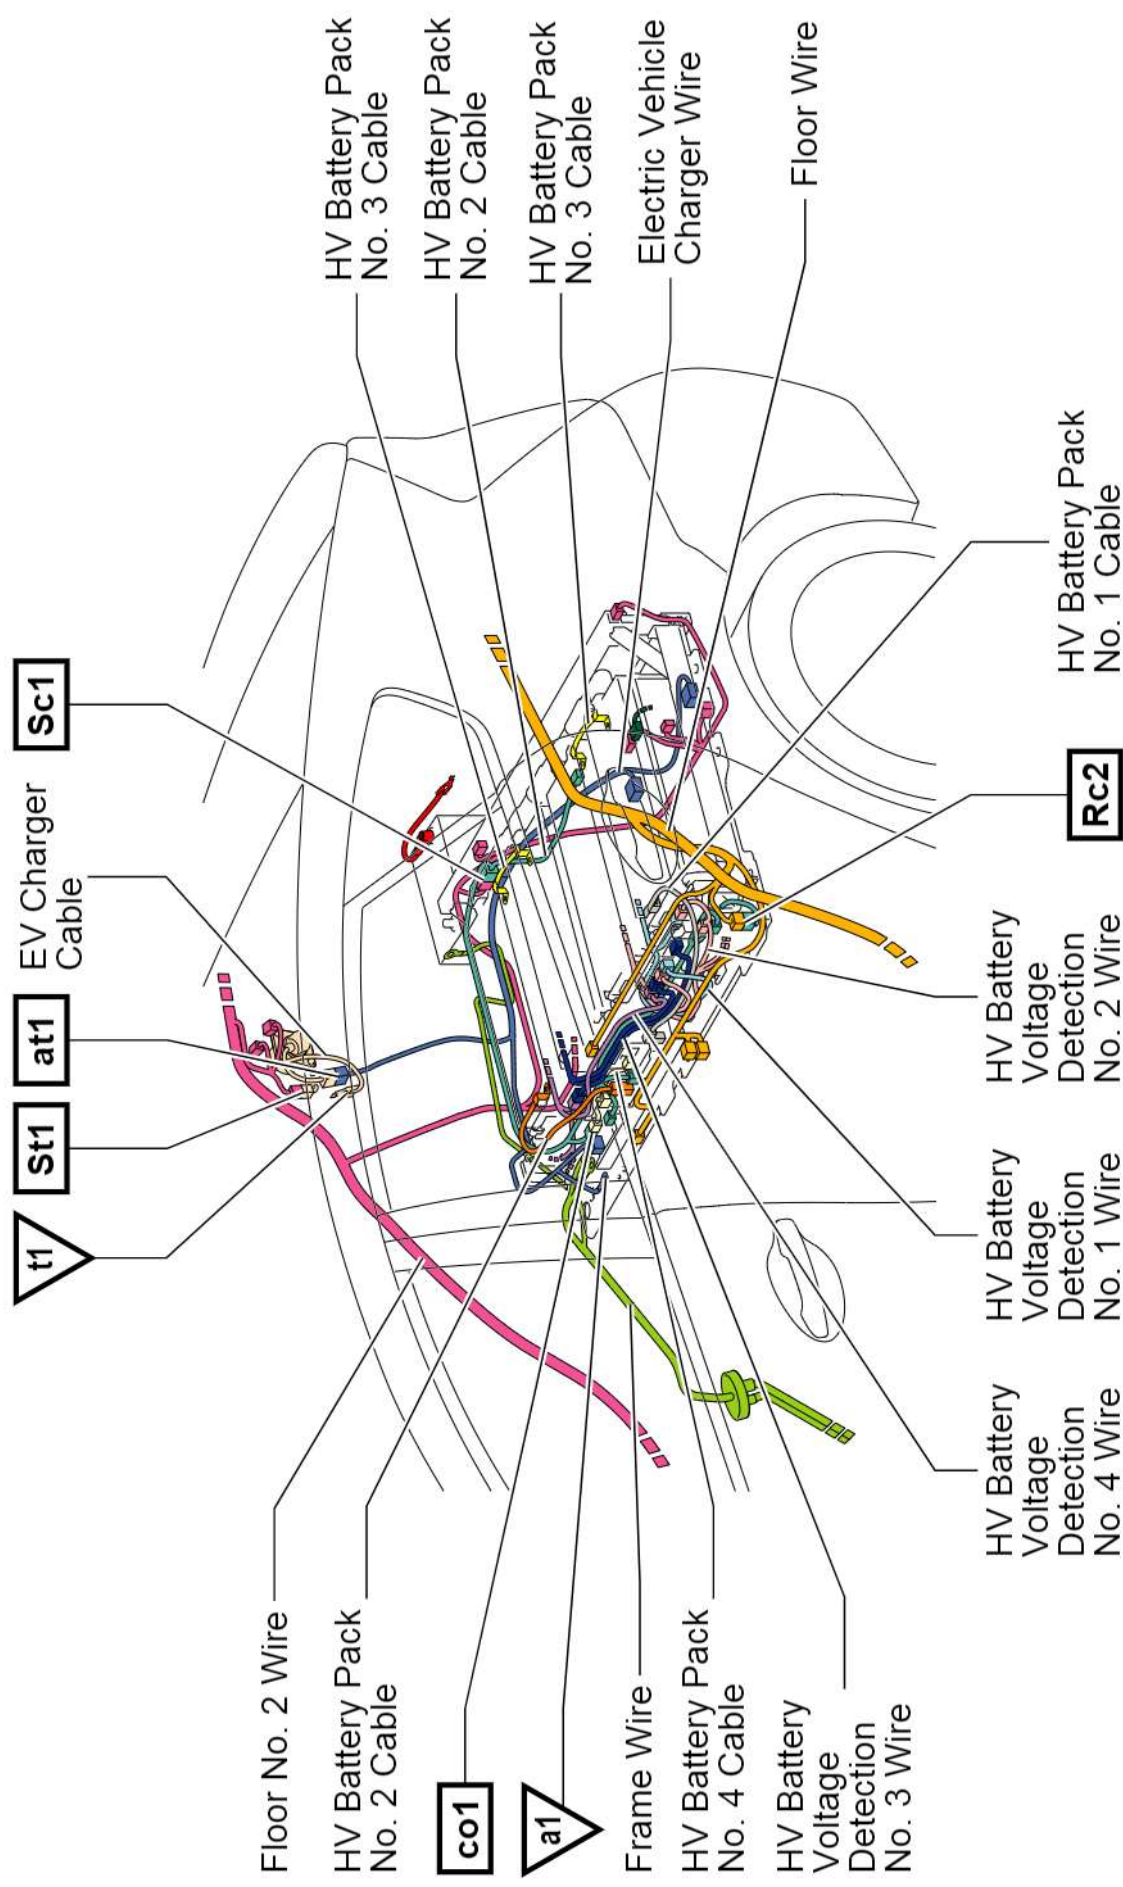


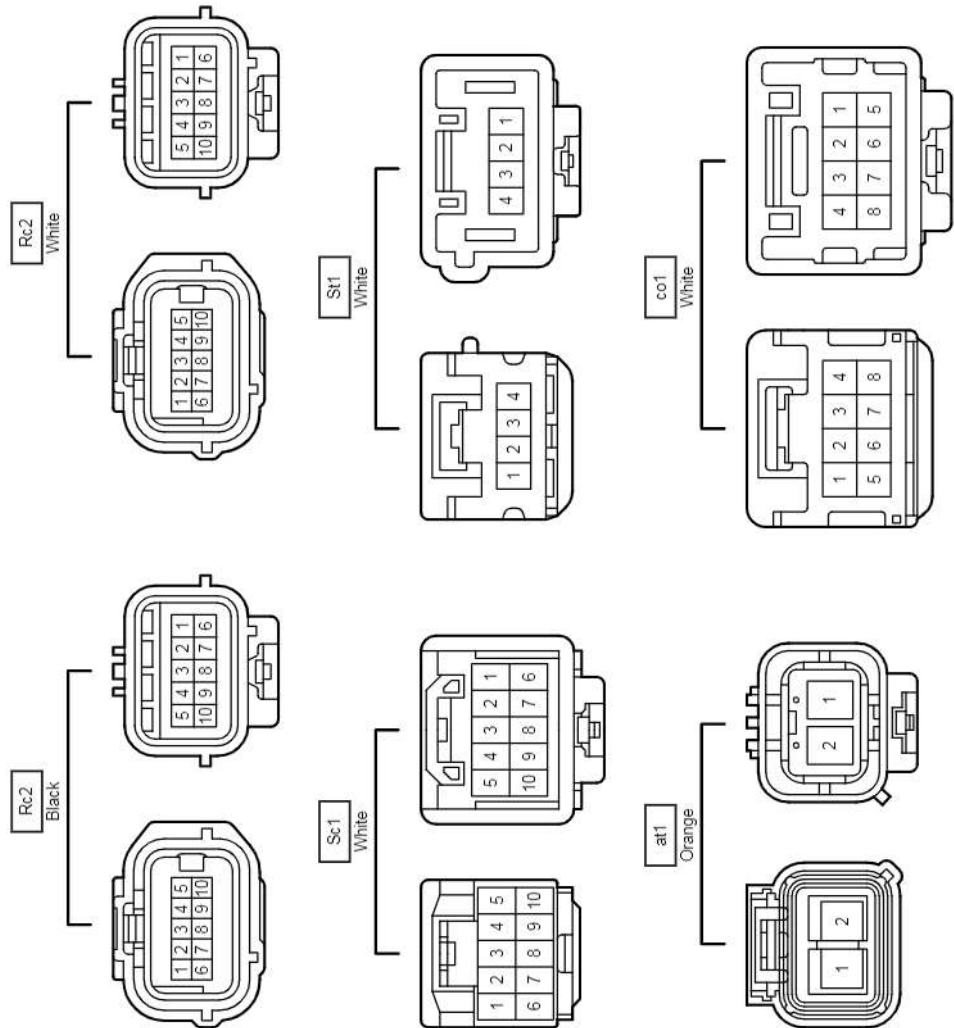

Ground Points in Instrument Panel <LHD>

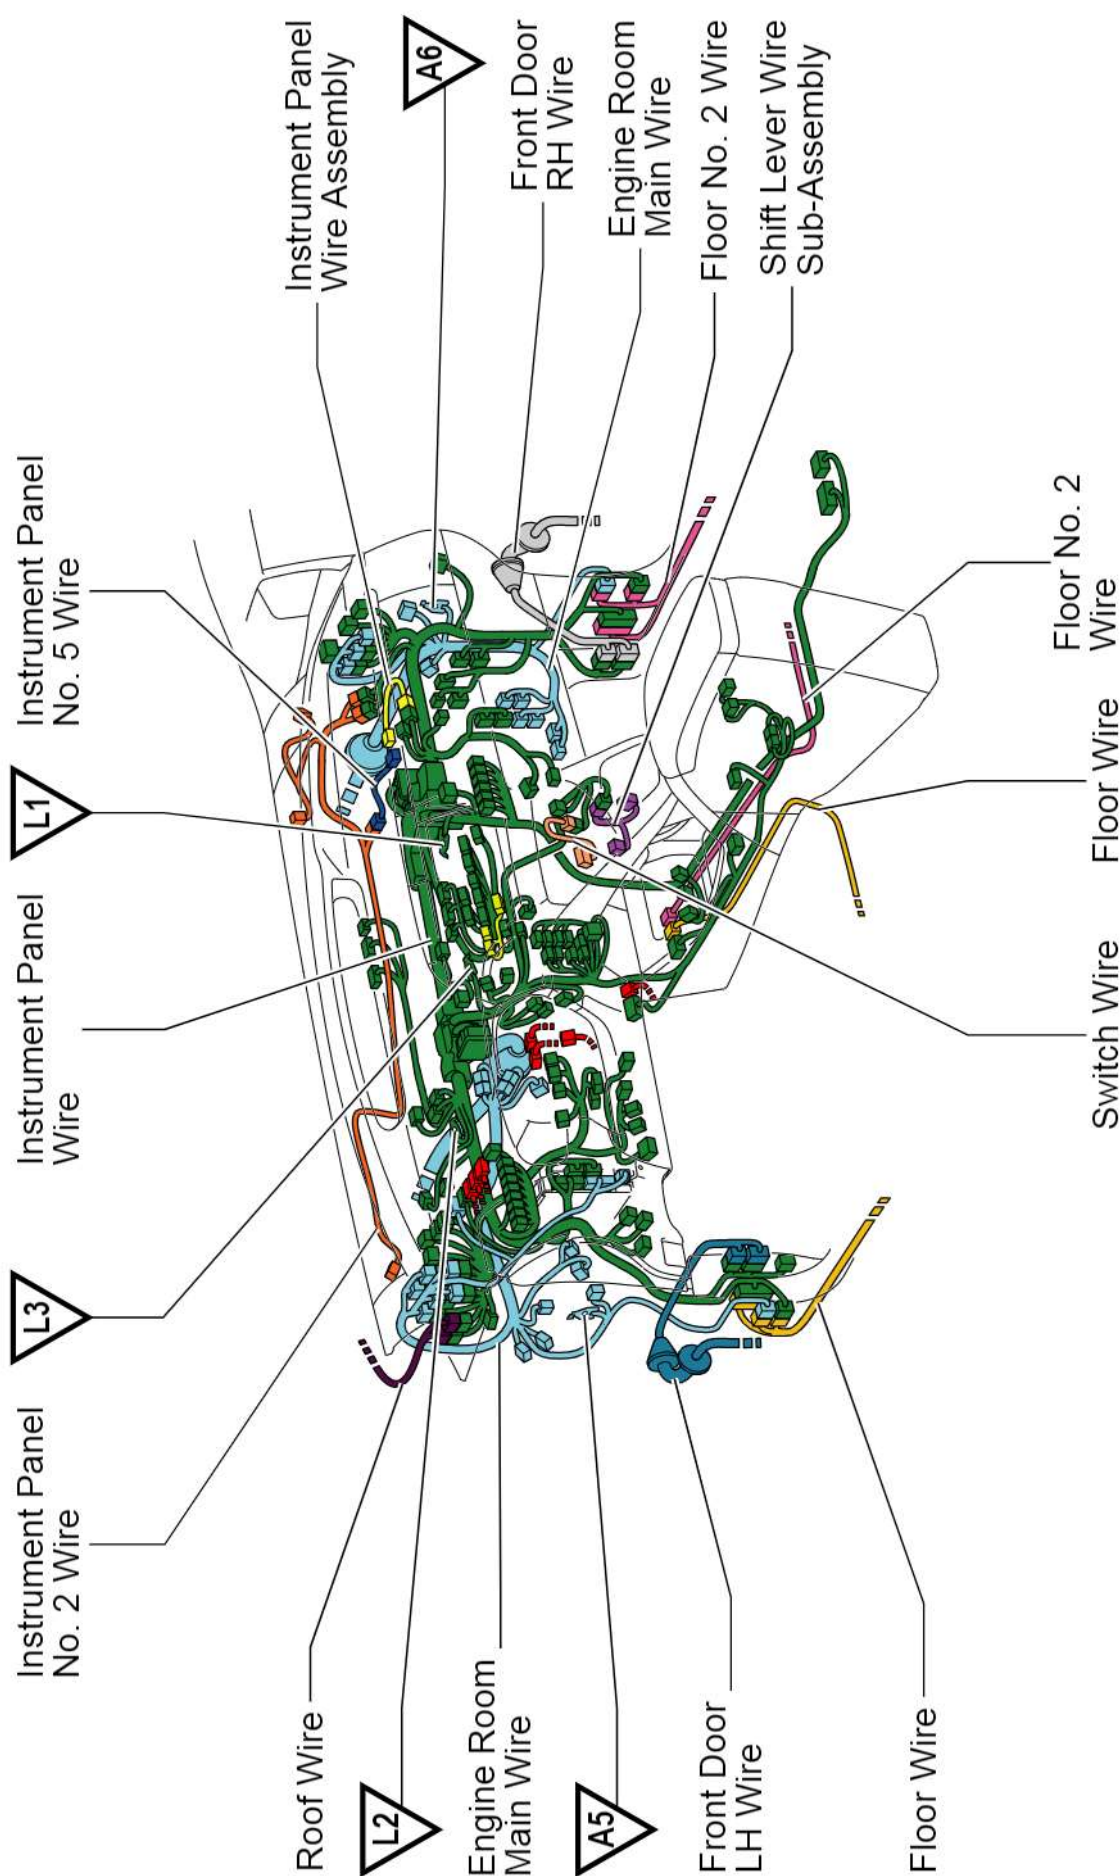











Position of Parts in Instrument Panel <LHD>

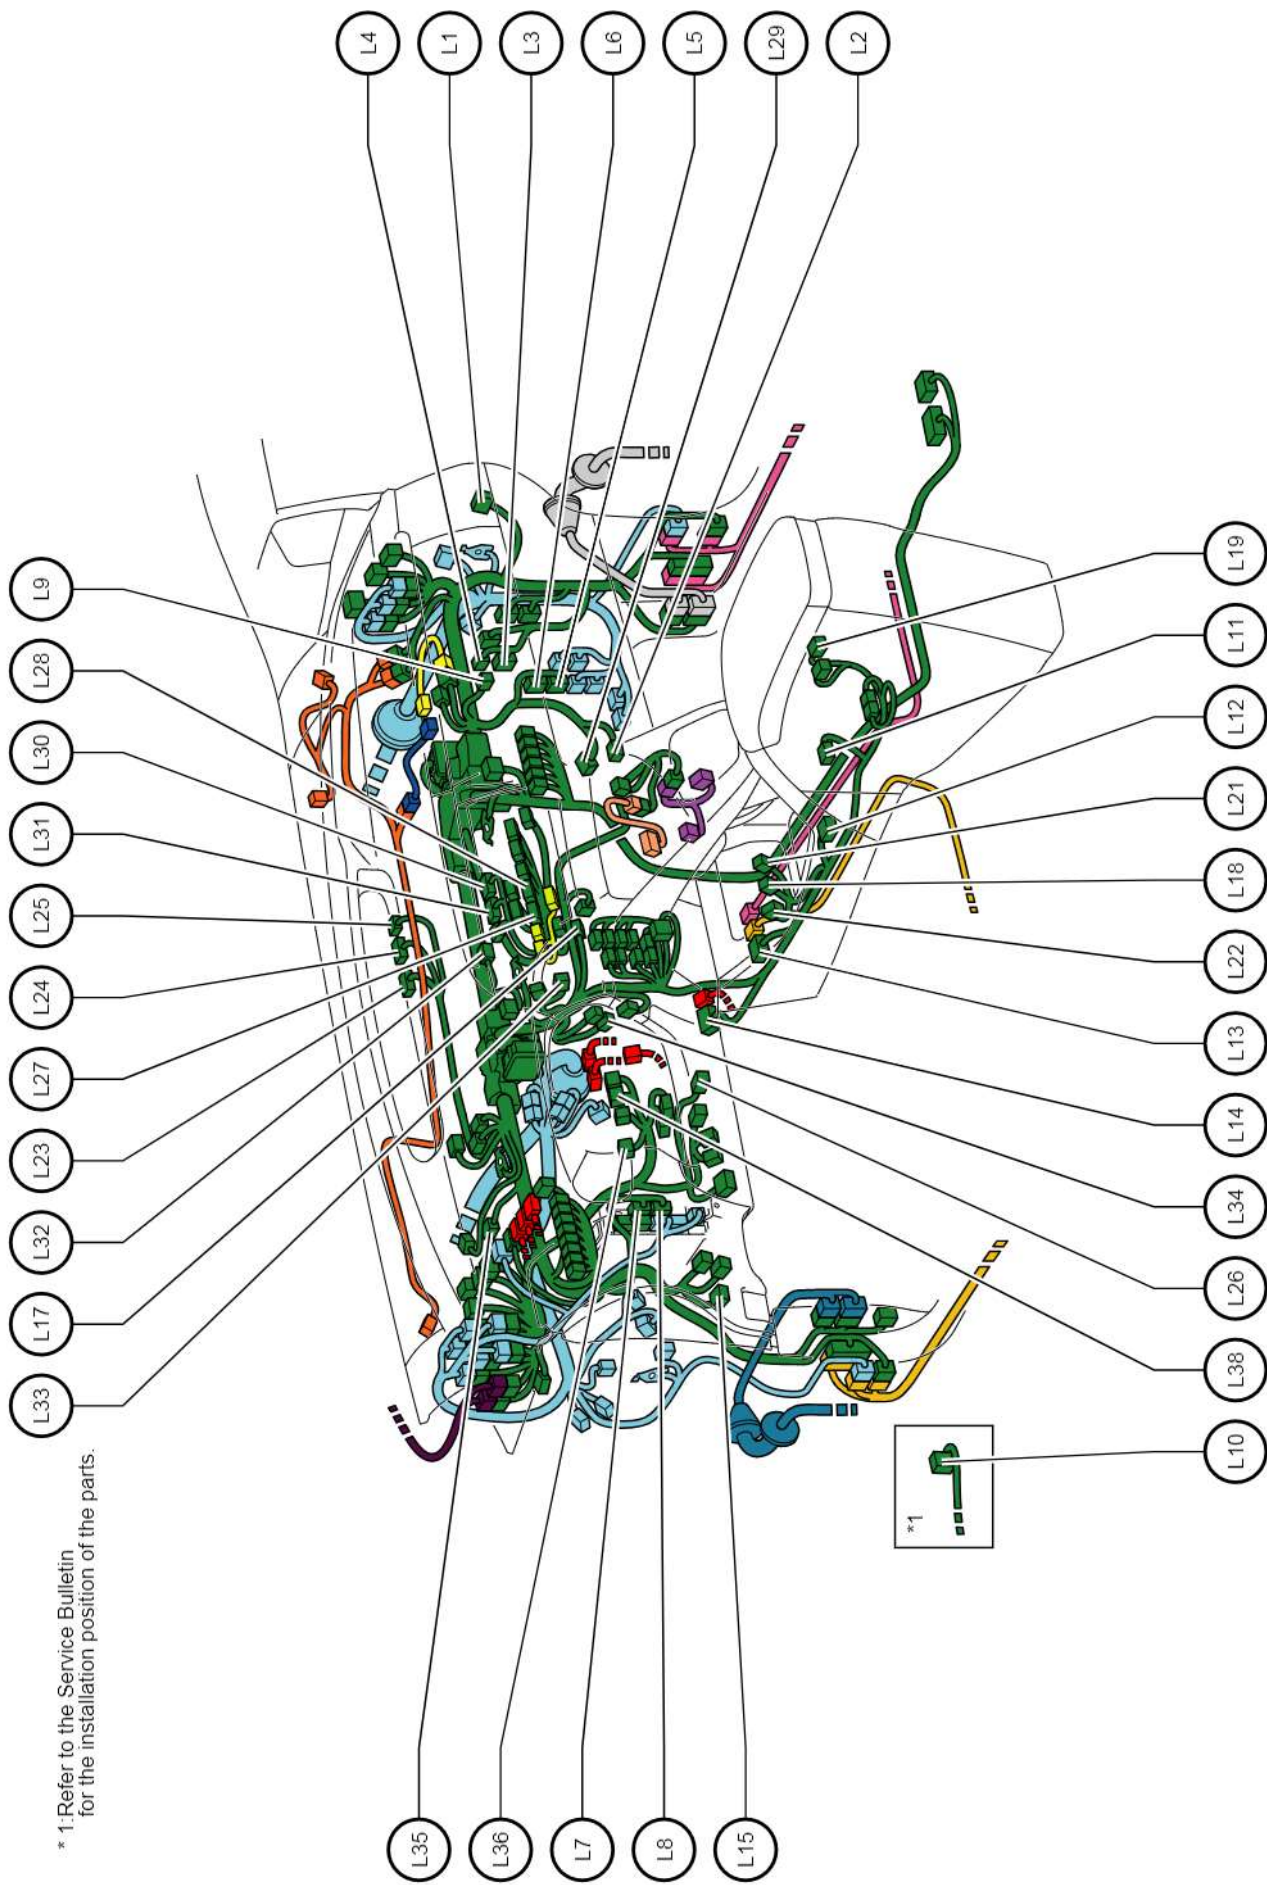






* 1: Refer to the Service Bulletin
for the installation position of the parts.

L	1	Airbag Cut Off Switch Cylinder Sub-Assembly
L	2	No. 1 Interior Illumination Light Assembly RH
L	3	Seat Belt Control ECU
L	4	Seat Belt Control ECU
L	5	Power Management Control ECU
L	6	Power Management Control ECU
L	7	Main Body ECU
L	8	Main Body ECU
L	9	Glove Box Light (No. 1 Interior Illumination Light Assembly)
L	10	ID Code Box
L	11	Front Indoor Electrical Key Oscillator
L	12	Yaw Rate Sensor Assembly
L	13	Airbag ECU Assembly
L	14	A/C Amplifier Assembly
L	15	Outer Mirror Switch Assembly
L	17	A/C Control Assembly
L	18	No. 3 Power Outlet Socket Assembly
L	19	Center Power Outlet Socket Assembly
L	21	Seat Heater Switch RH
L	22	Seat Heater Switch LH
L	23	Combination Meter Assembly
L	24	Combination Meter Assembly
L	25	Combination Meter Assembly
L	26	Lower No. 1 Instrument Panel Airbag Assembly
L	27	Navigation Receiver Assembly
L	28	Navigation Receiver Assembly
L	29	Blower with Fan Motor Sub-Assembly
L	30	Radio Receiver Assembly
L	31	Radio Receiver Assembly
L	32	Amplifier Antenna Assembly
L	33	Power Switch
L	34	Cooler (Room Temperature Sensor) Thermistor
L	35	Skid Control Buzzer Assembly
L	36	Headlight Dimmer Switch Assembly
L	38	Windshield Wiper Switch Assembly


Position of Parts in Instrument Panel <LHD>

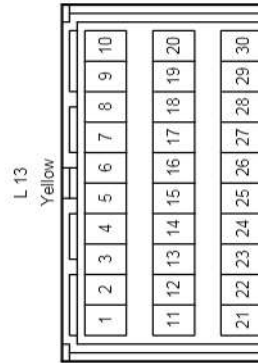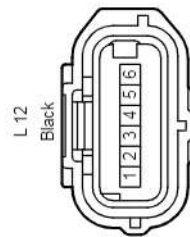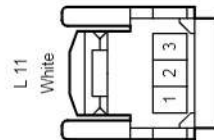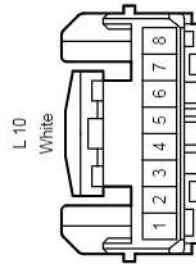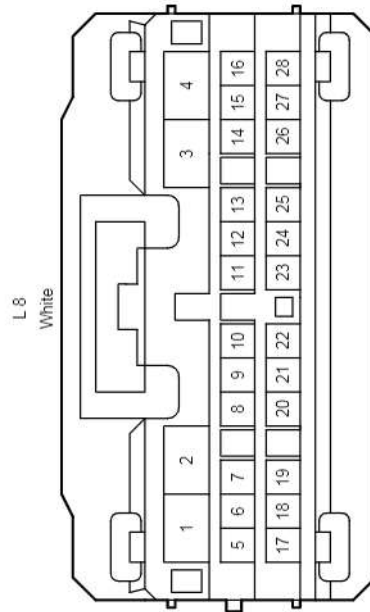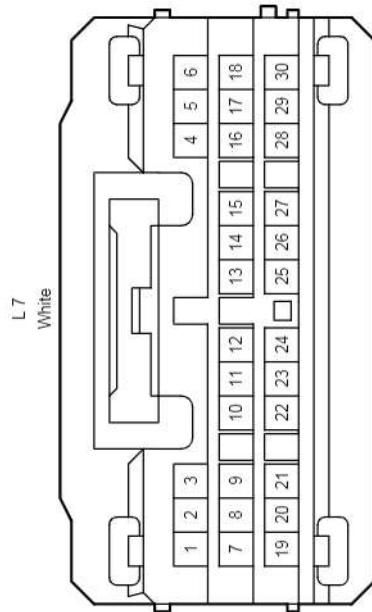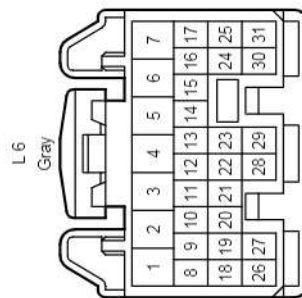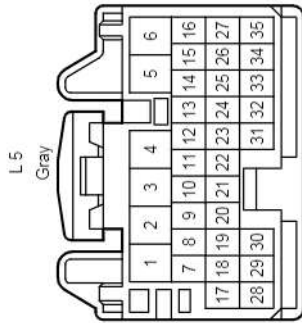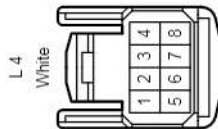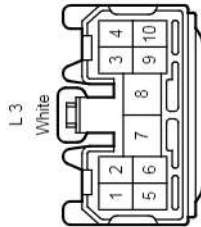

Position of Parts in Instrument Panel <LHD>

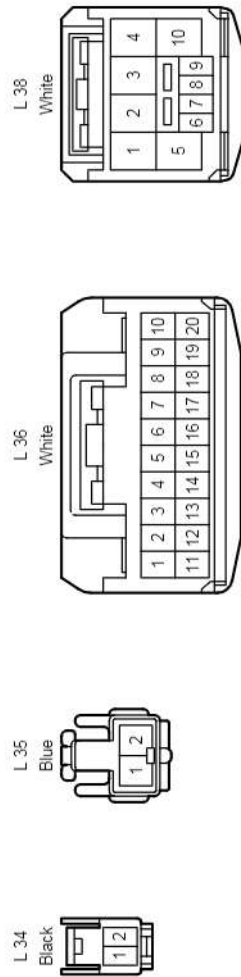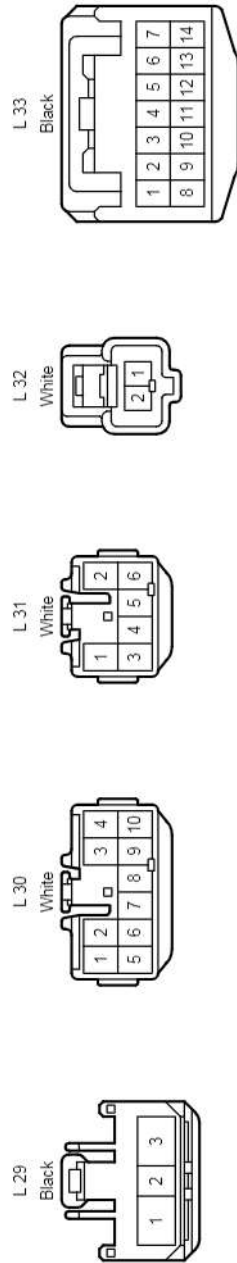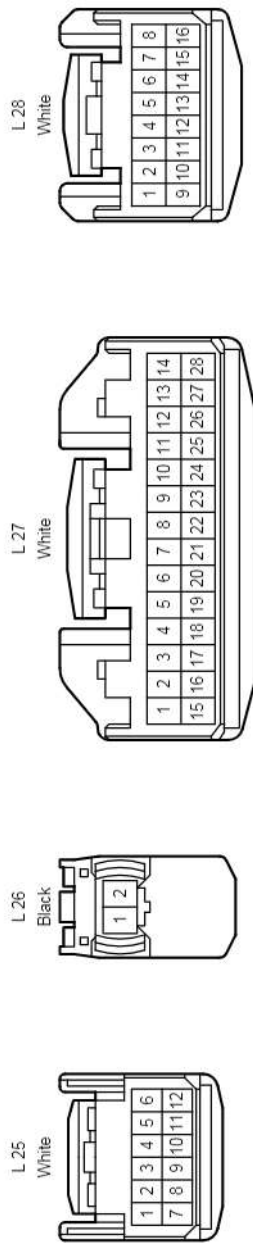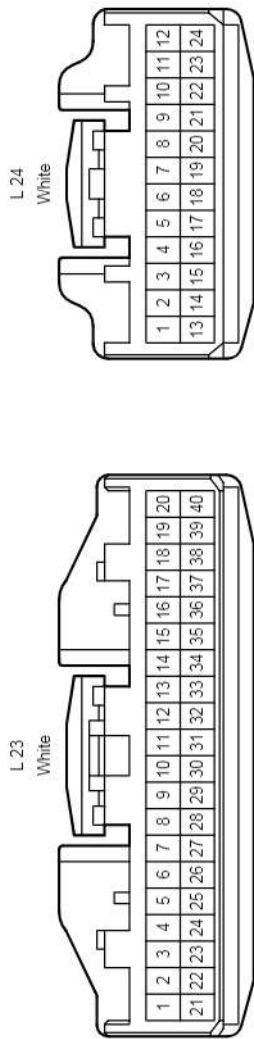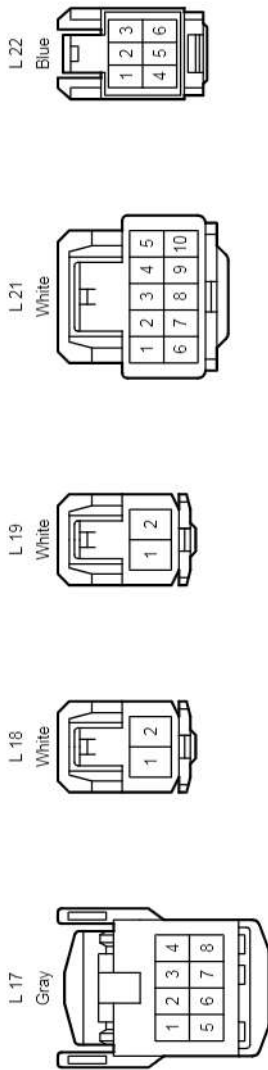

















Position of Parts in Instrument Panel <LHD>

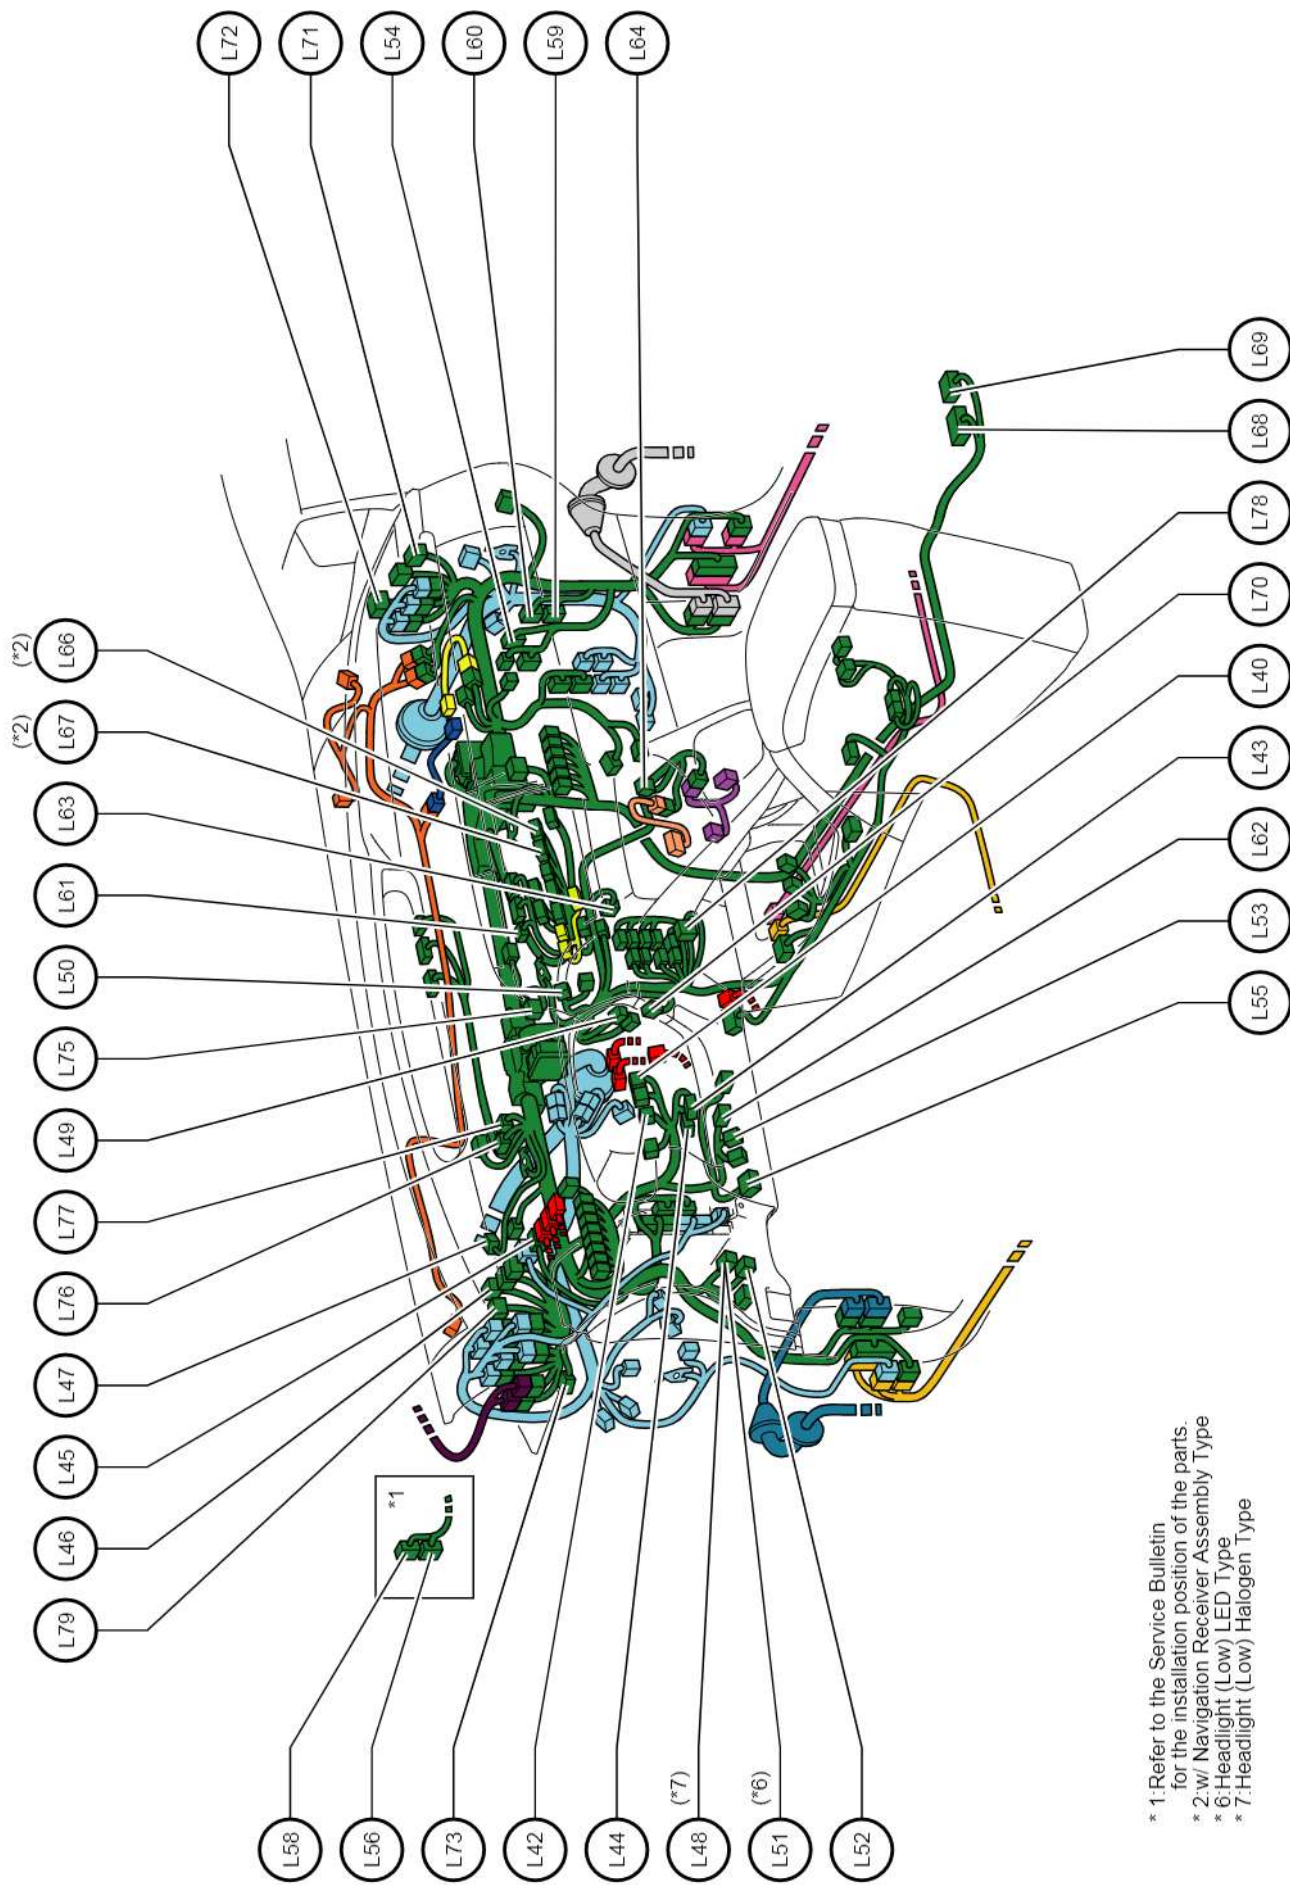

- * 1: Refer to the Service Bulletin for the installation position of the parts.
- * 2: w/ Navigation Receiver Assembly Type
- * 6: Headlight (Low) LED Type
- * 7: Headlight (Low) Halogen Type


L 40	Windshield Wiper Switch Assembly
L 42	Steering Sensor
L 43	Spiral Cable Sub-Assembly
L 44	Spiral Cable Sub-Assembly
L 45	Power Steering ECU Assembly
L 46	Turn Signal Flasher Assembly
L 47	Combination Meter Mirror
L 48	Headlight Leveling Switch
L 49	Back Sonar or Clearance Sonar Switch Assembly
L 50	Satellite Switch Set
L 51	Headlight Cleaner Switch Assembly
L 52	Light Control Rheostat
L 53	Pre-Crash System Cancel Switch Assembly
L 54	Driving Support ECU Assembly
L 55	DLC3
L 56	Certification ECU Assembly
L 58	Certification ECU Assembly
L 59	Parking Assist ECU
L 60	Parking Assist ECU
L 61	Radio Receiver Assembly
L 62	No. 1 Interior Illumination Light Assembly LH
L 63	Windshield Wiper Relay Assembly
L 64	Integration Control and Panel Assembly
L 66	Navigation Receiver Assembly
L 67	Navigation Receiver Assembly
L 68	Stereo Component Amplifier Assembly
L 69	Stereo Component Amplifier Assembly
L 70	Junction Connector
L 71	Junction Connector
L 72	Junction Connector
L 73	Junction Connector
L 75	Junction Connector
L 76	Diode (Front Courtesy Light RH)
L 77	Diode (Front Courtesy Light LH)
L 78	Junction Connector
L 79	Junction Connector

 Position of Parts in Instrument Panel <LHD>

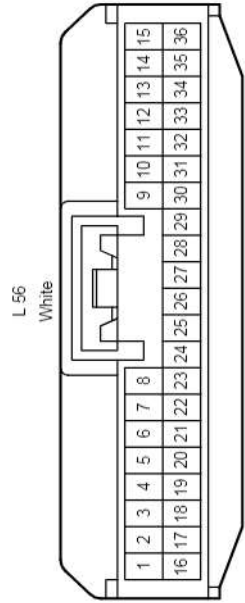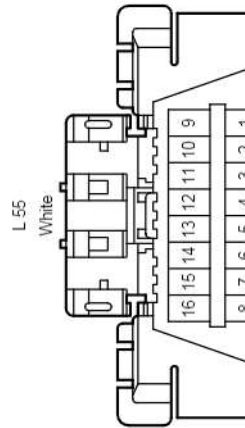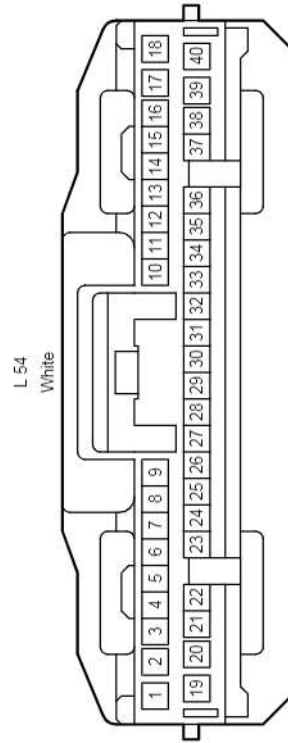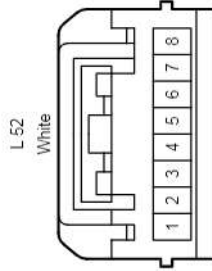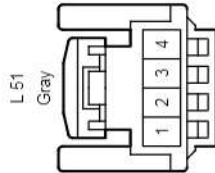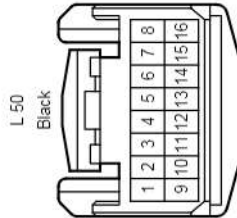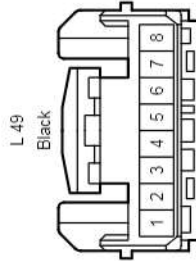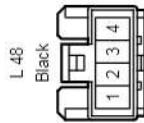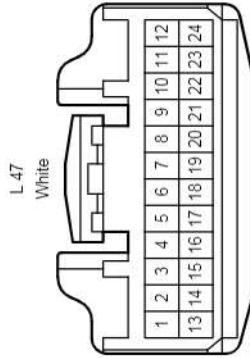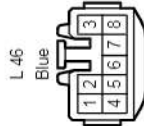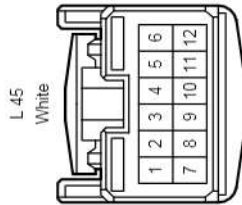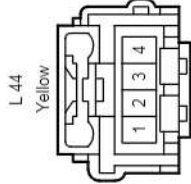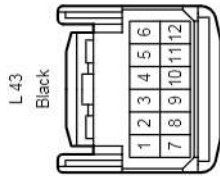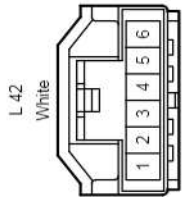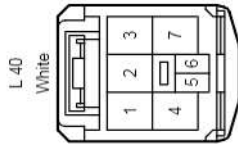





L 78
Gray

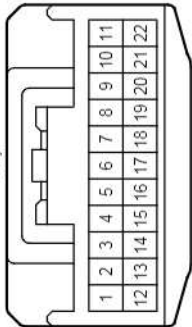

L 79
White


















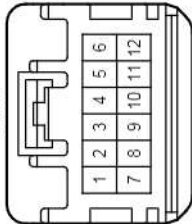


Position of Parts in Instrument Panel <LHD>

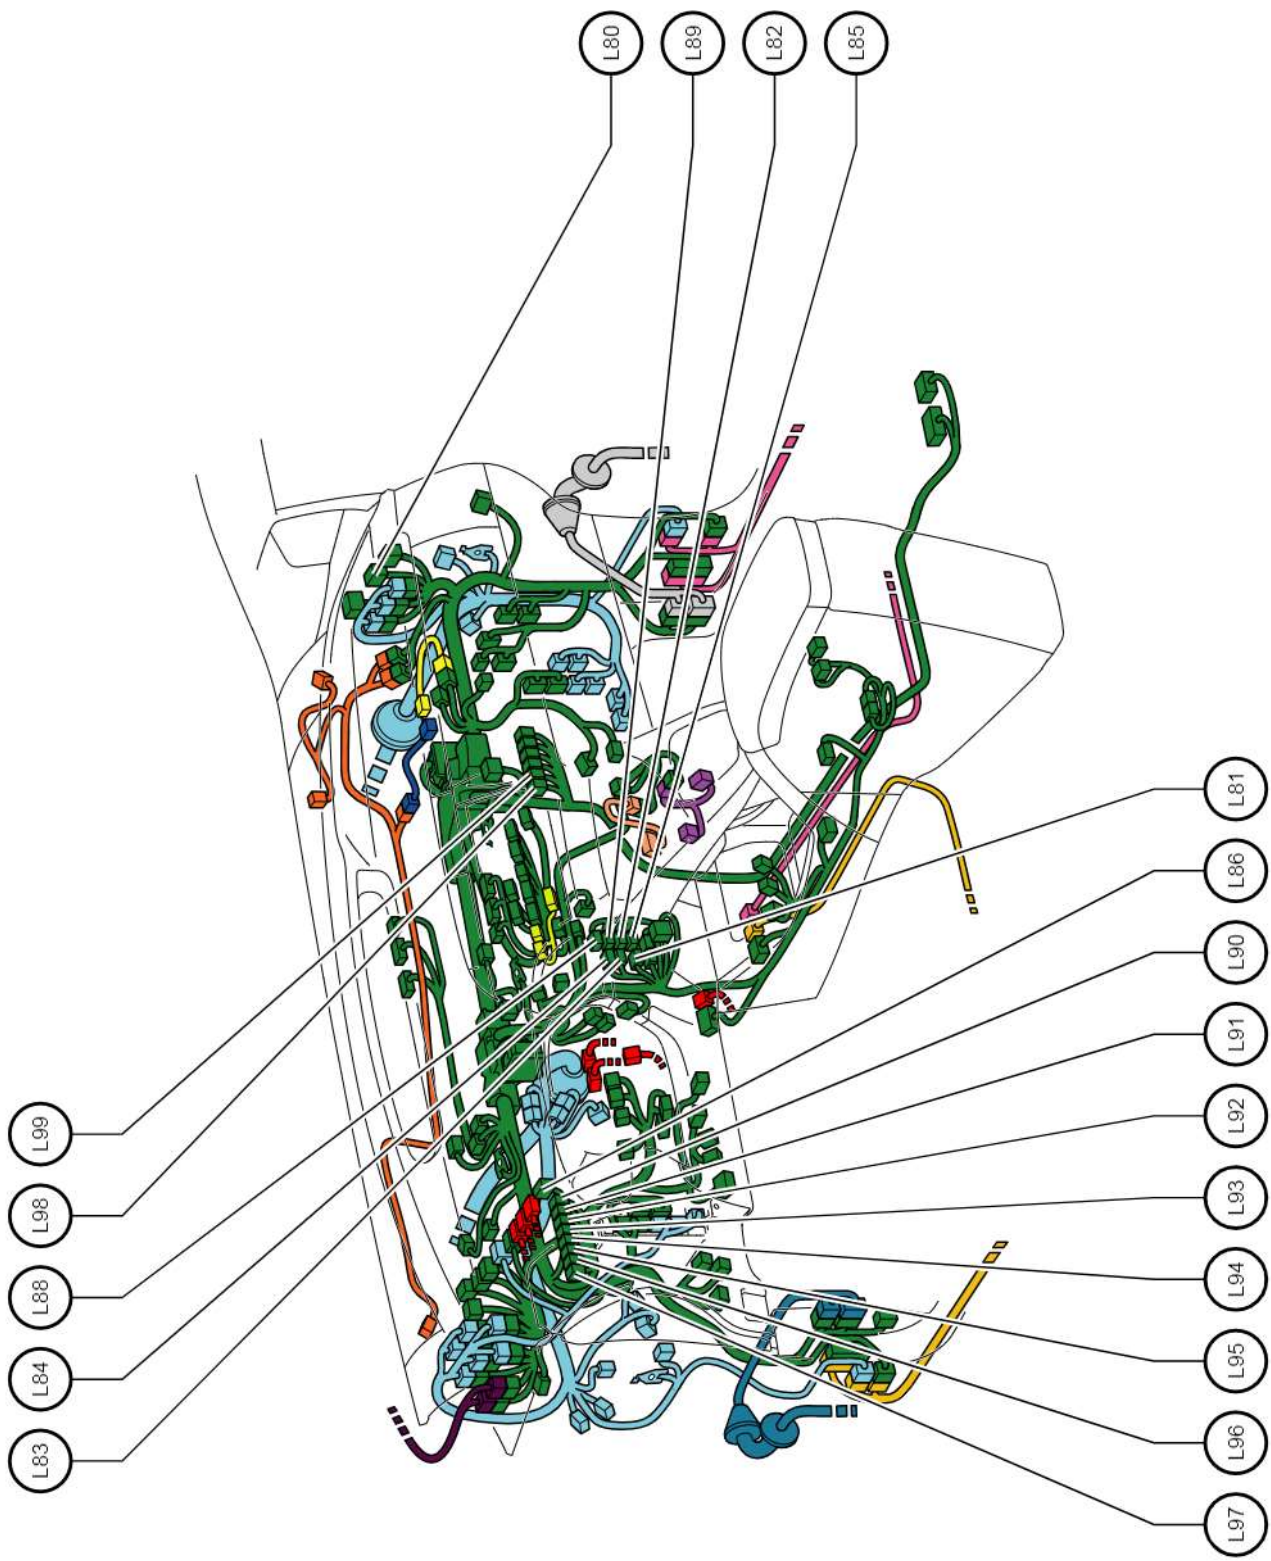


L 80	Junction Connector
L 81	Junction Connector
L 82	Junction Connector
L 83	Junction Connector
L 84	Junction Connector
L 85	Junction Connector
L 86	Junction Connector
L 88	Junction Connector
L 89	Junction Connector
L 90	Junction Connector
L 91	Junction Connector
L 92	Junction Connector
L 93	Junction Connector
L 94	Junction Connector
L 95	Junction Connector
L 96	Junction Connector
L 97	Junction Connector
L 98	Junction Connector
L 99	Junction Connector

                Position of Parts in Instrument Panel <LHD>

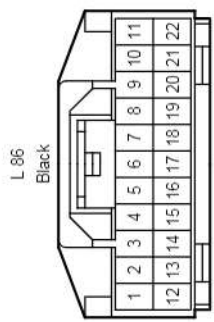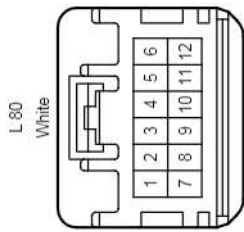






Position of Parts in Instrument Panel <LHD>

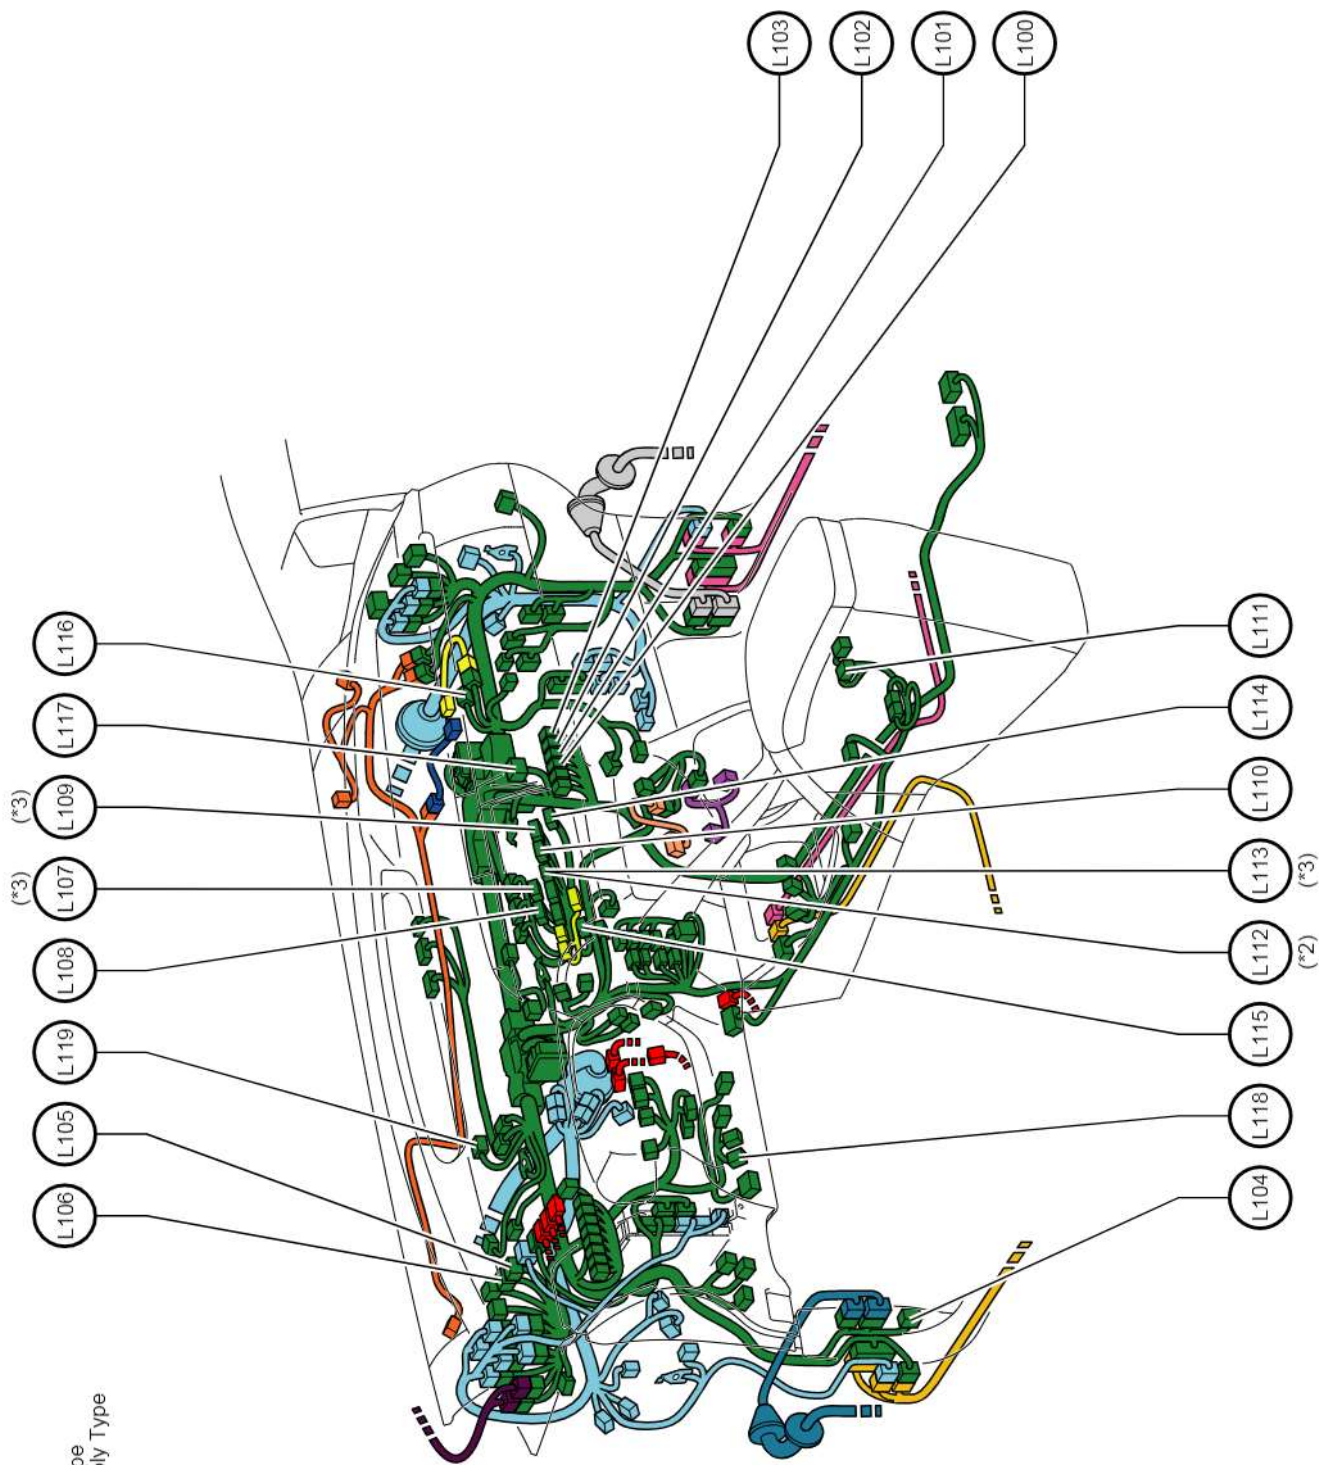


- * 2.w/ Navigation Receiver Assembly Type
- * 3.w/ Radio & Display Receiver Assembly Type

L 100	Junction Connector
L 101	Junction Connector
L 102	Junction Connector
L 103	Junction Connector
L 104	Fuse Block
L 105	Rear Fog Light Relay
L 106	PIMR Relay
L 107	Radio & Display Receiver Assembly
L 108	Radio & Display Receiver Assembly
L 109	Radio & Display Receiver Assembly
L 110	Radio & Display Receiver Assembly
L 111	No. 1 Stereo Jack Adapter Assembly
L 112	Navigation Receiver Assembly
L 113	Radio & Display Receiver Assembly
L 114	Extension Module
L 115	Navigation Receiver Assembly
L 116	Navigation Antenna Assembly
L 117	Junction Connector
L 118	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
L 119	Junction Connector

Position of Parts in Instrument Panel <LHD>














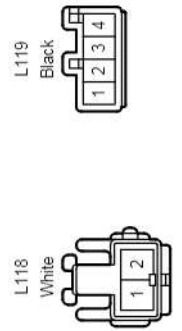
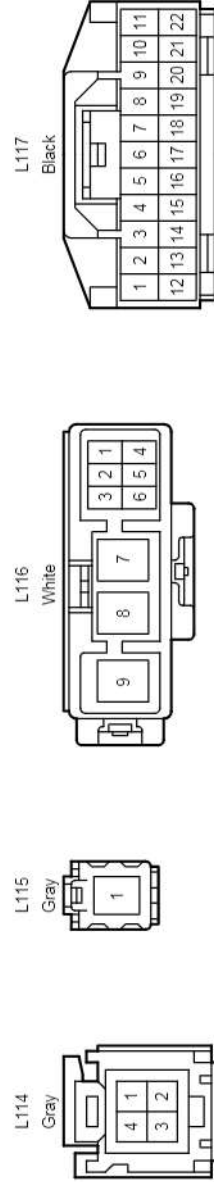
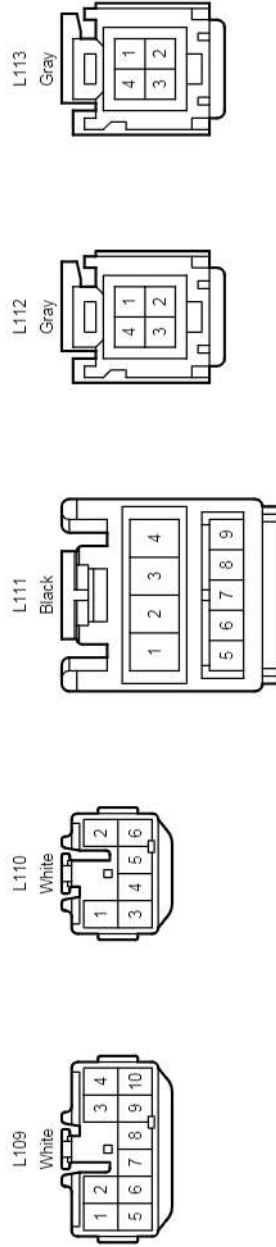
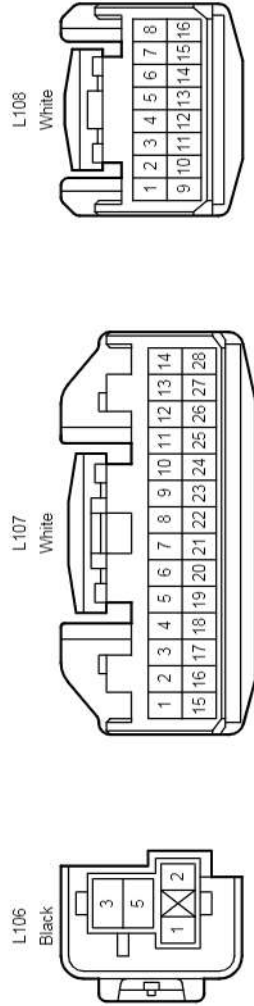
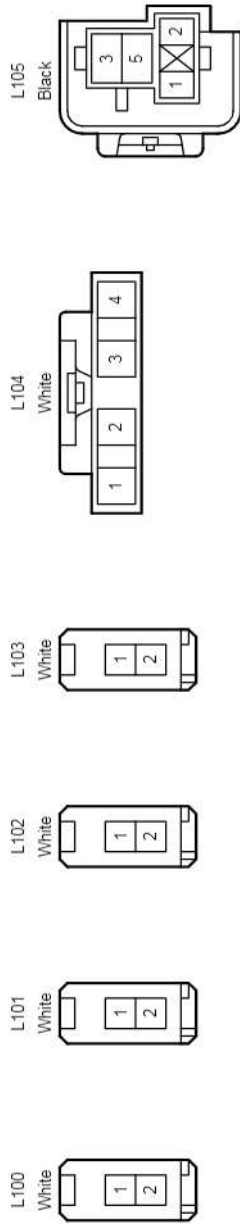


Position of Parts in Instrument Panel <LHD>

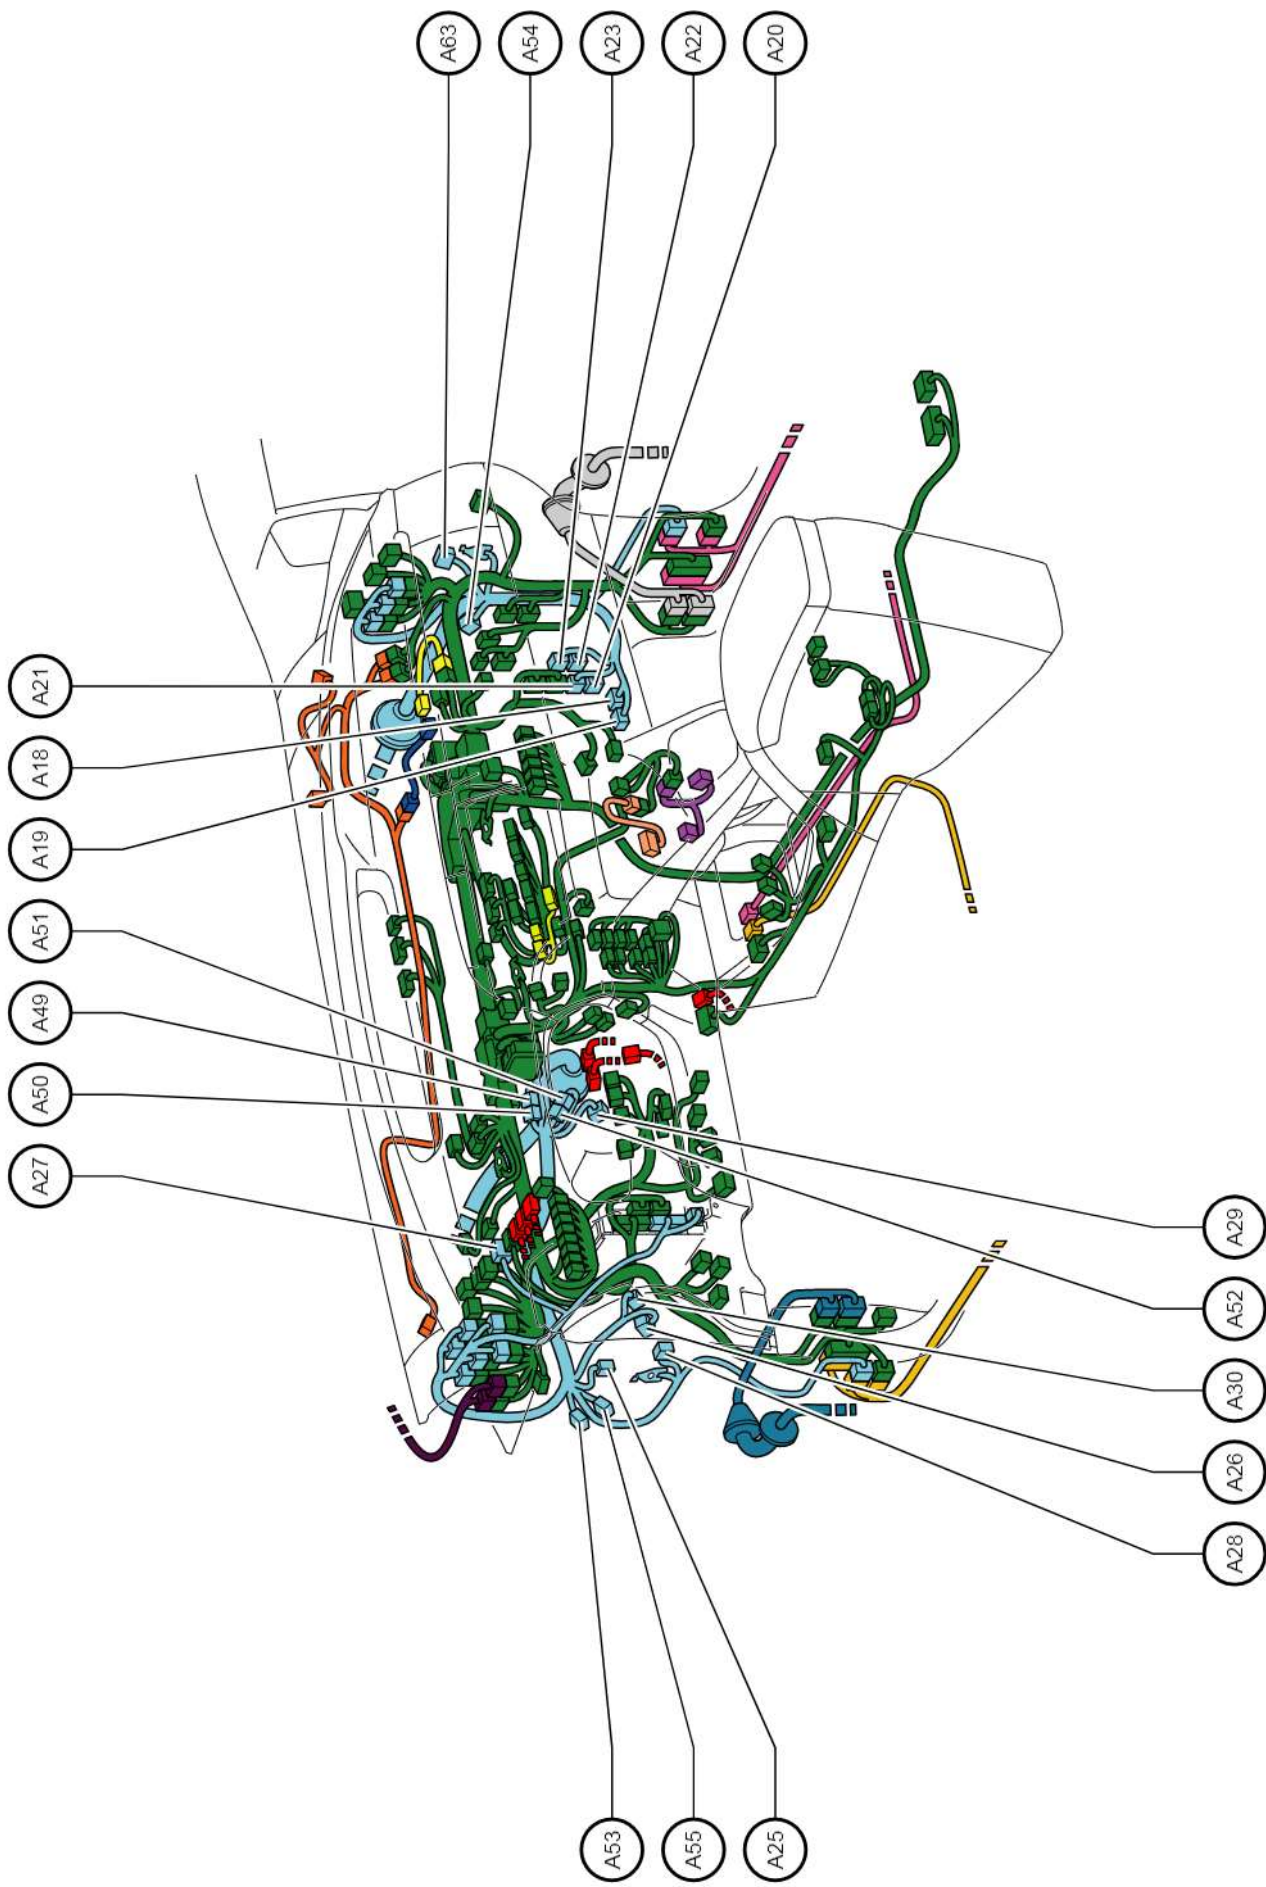


A 18	Quick Heater Assembly
A 19	Quick Heater Assembly
A 20	Power Management Control ECU
A 21	Power Management Control ECU
A 22	Transmission Control ECU Assembly
A 23	Transmission Control ECU Assembly
A 25	Parking Brake Switch Assembly
A 26	Stop Light Switch Assembly
A 27	Power Steering ECU Assembly
A 28	Stop Light Control ECU Assembly
A 29	Accelerator Pedal Sensor Assembly
A 30	Brake Pedal Stroke Sensor Assembly
A 49	Junction Connector
A 50	Junction Connector
A 51	Junction Connector
A 52	Junction Connector
A 53	Junction Connector
A 54	Junction Connector
A 55	Junction Connector
A 63	Headlight Leveling ECU Assembly

 Position of Parts in Instrument Panel <LHD>

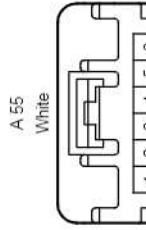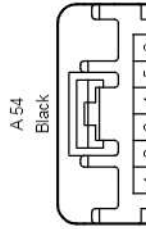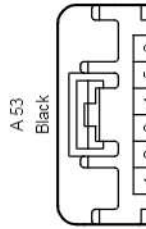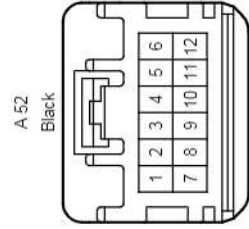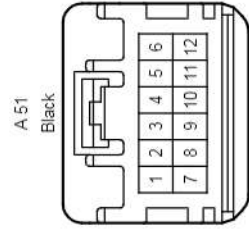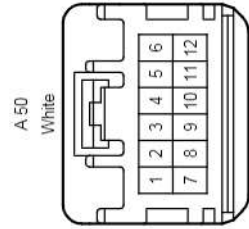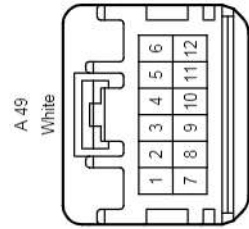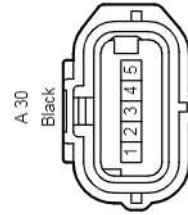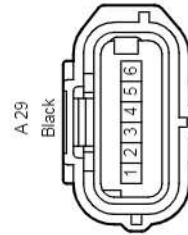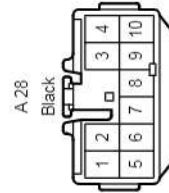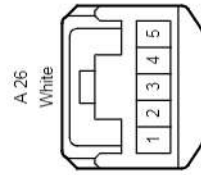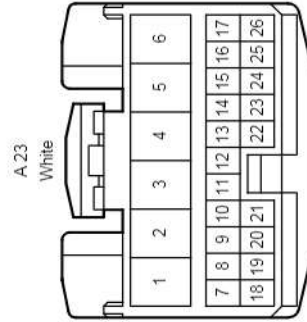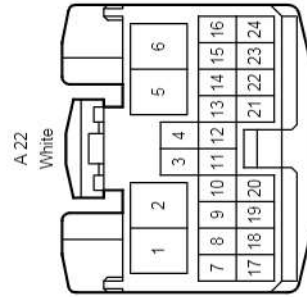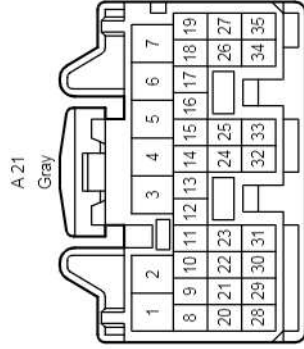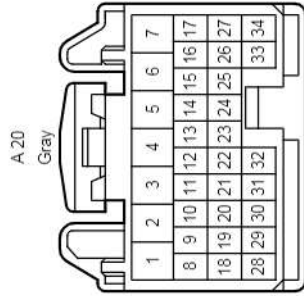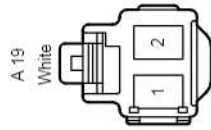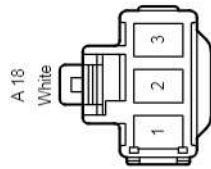























Position of Parts in Instrument Panel <LHD>

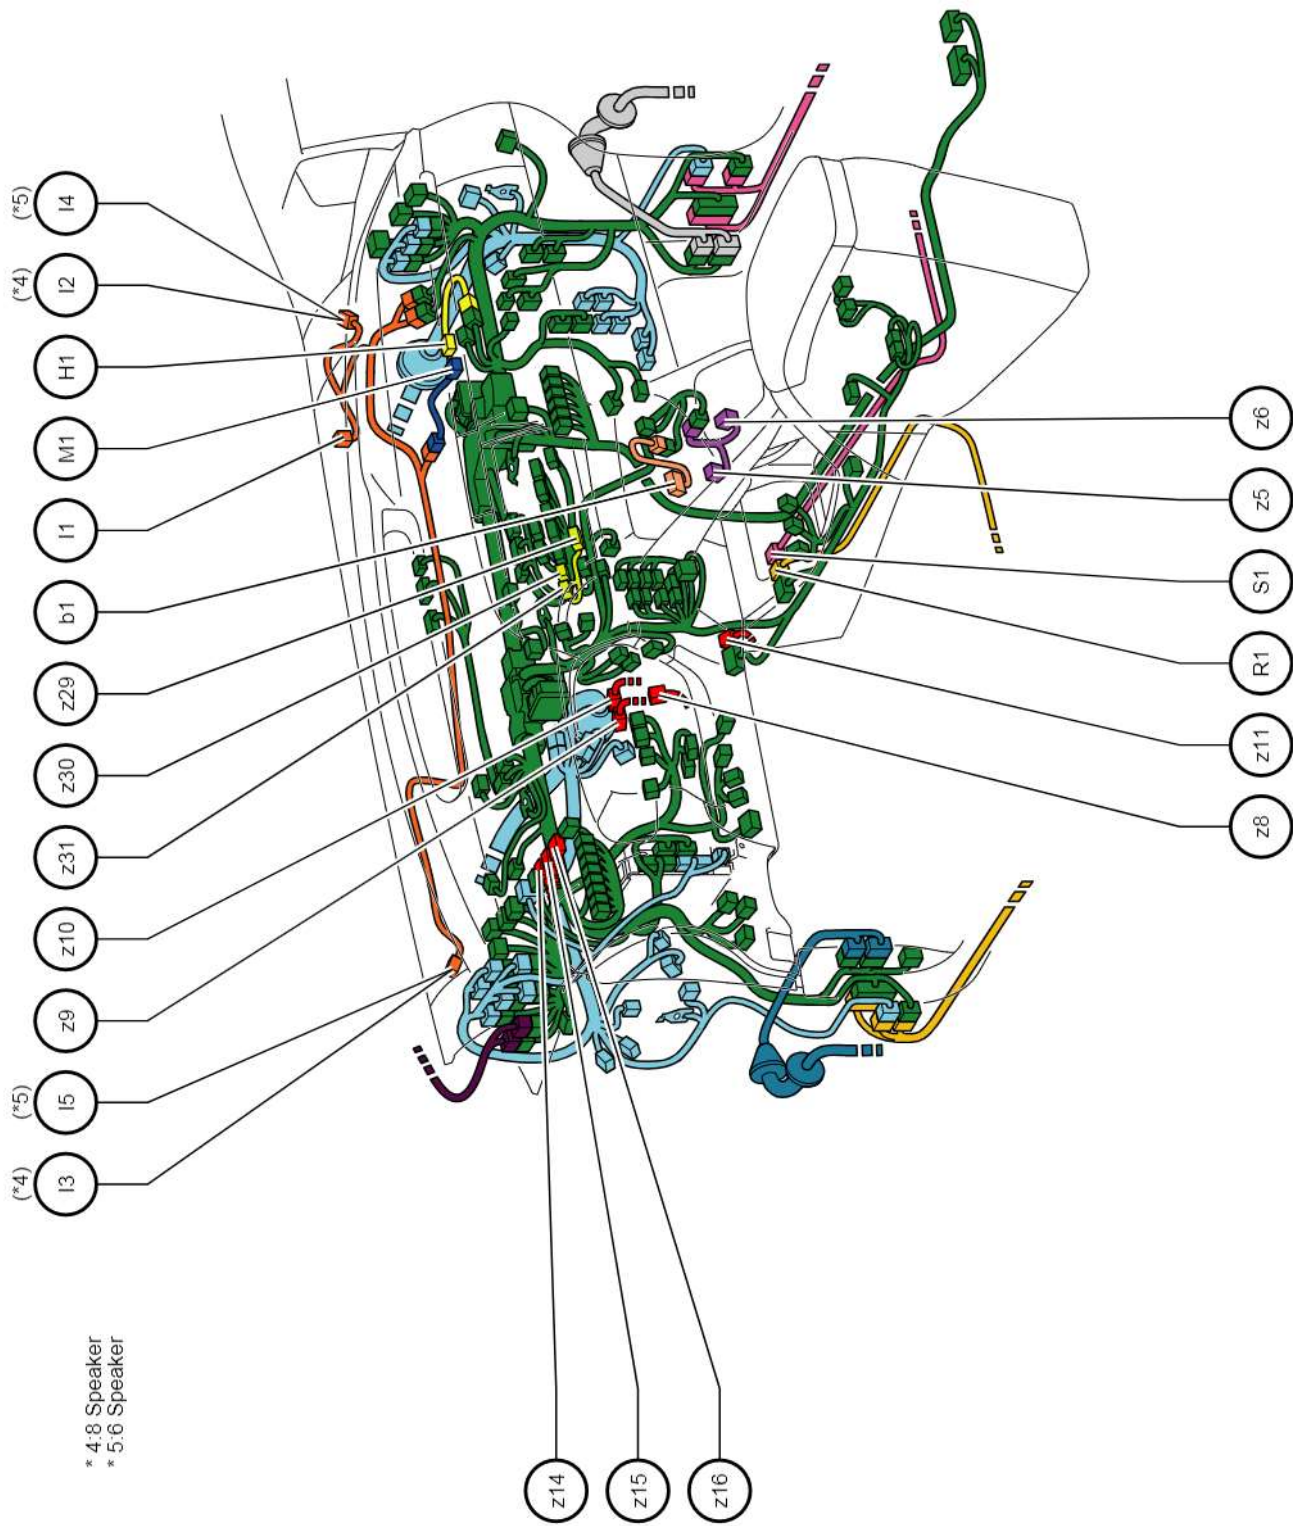


Position of Parts in Instrument Panel <LHD>


H	1	Front Passenger Side Squib Circuit
I	1	Automatic Light Control Sensor
I	2	Front No. 2 Speaker Assembly RH
I	3	Front No. 2 Speaker Assembly LH
I	4	Instrument Panel Speaker RH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
I	5	Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
M	1	Passenger Seat Belt Warning Light Assembly
R	1	Airbag ECU Assembly
S	1	Airbag ECU Assembly
b	1	Transmission Shift Main Switch
z	5	Shift Lever Position Sensor
z	6	No. 2 Shift Lever Position Sensor
z	8	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z	9	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	10	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	11	A/C Amplifier Assembly , A/C Blower Assembly
z	14	Power Steering ECU Assembly , Power Steering Torque Sensor
z	15	Power Steering ECU Assembly , Power Steering Motor Assembly
z	16	Power Steering ECU Assembly , Power Steering Motor Assembly
z	29	Extension Module
z	30	Radio & Display Receiver Assembly
z	31	Radio & Display Receiver Assembly

      Position of Parts in Instrument Panel <LHD>

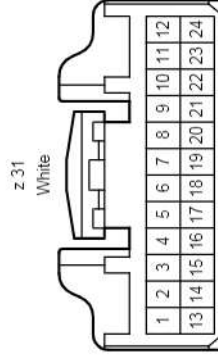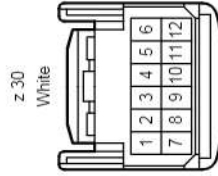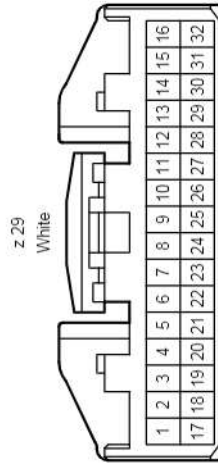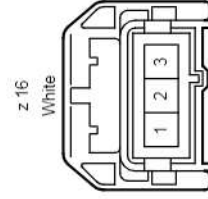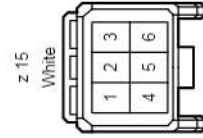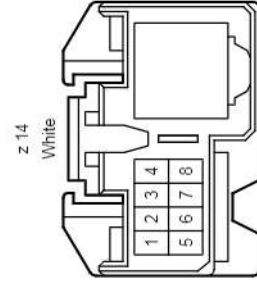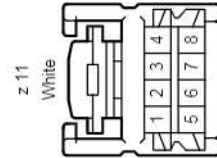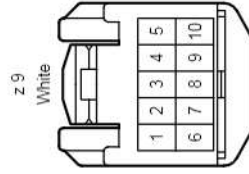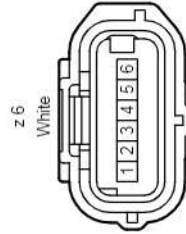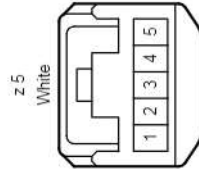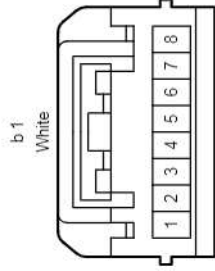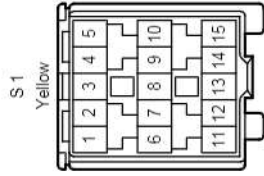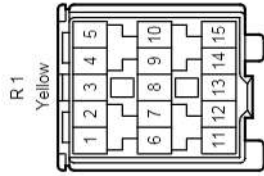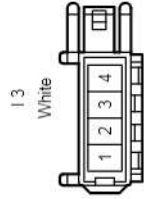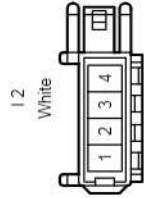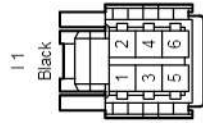


Wire and Wire in Instrument Panel <LHD>

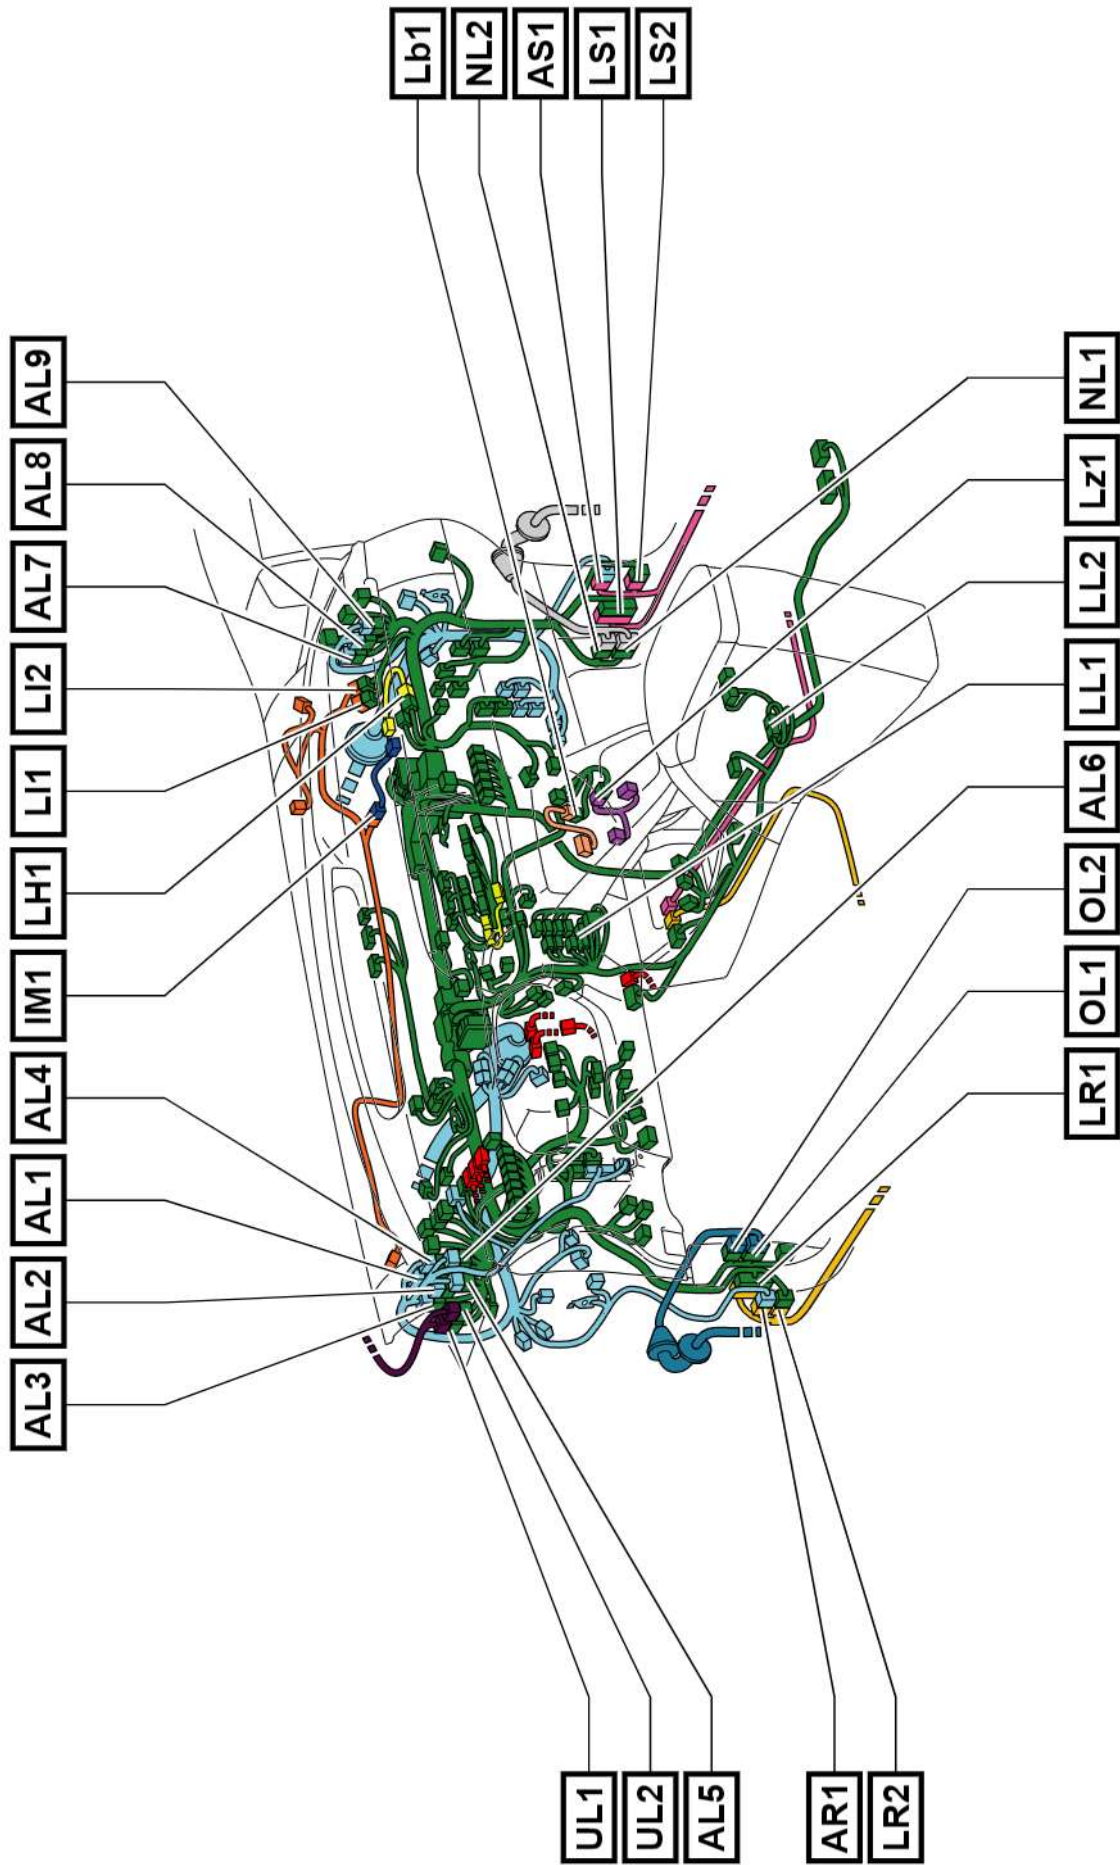


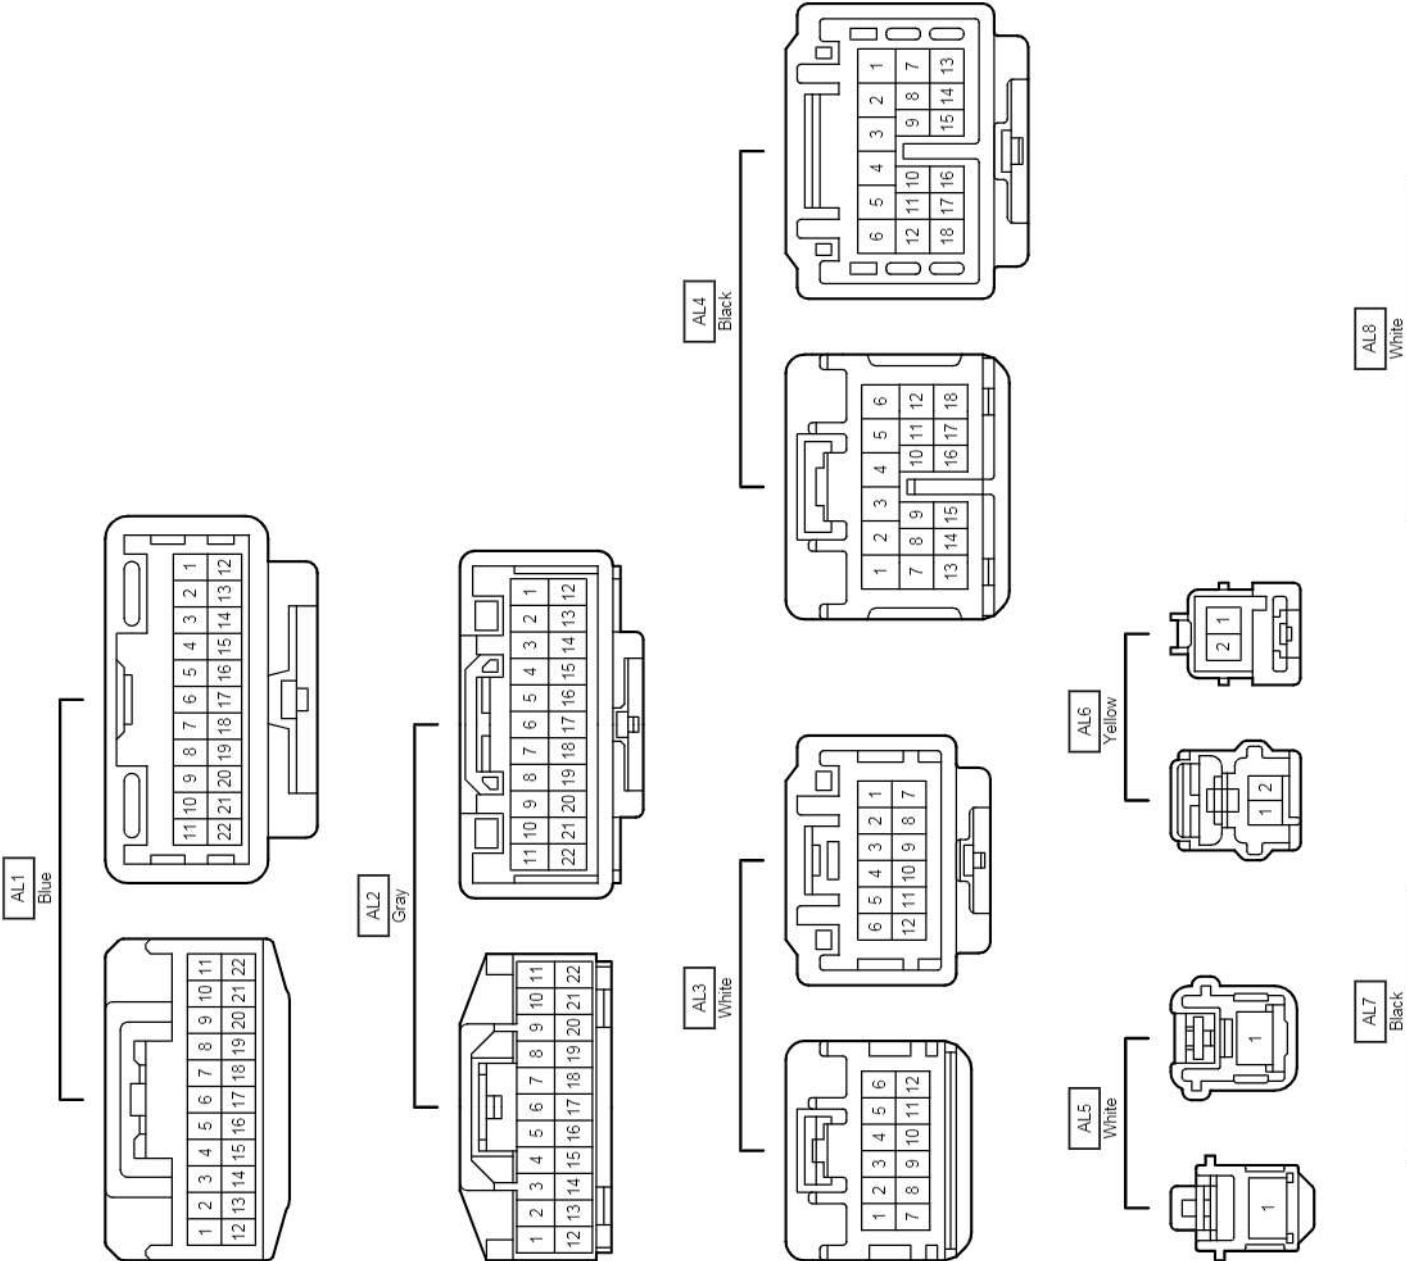



Wire and Wire in Instrument Panel <LHD>

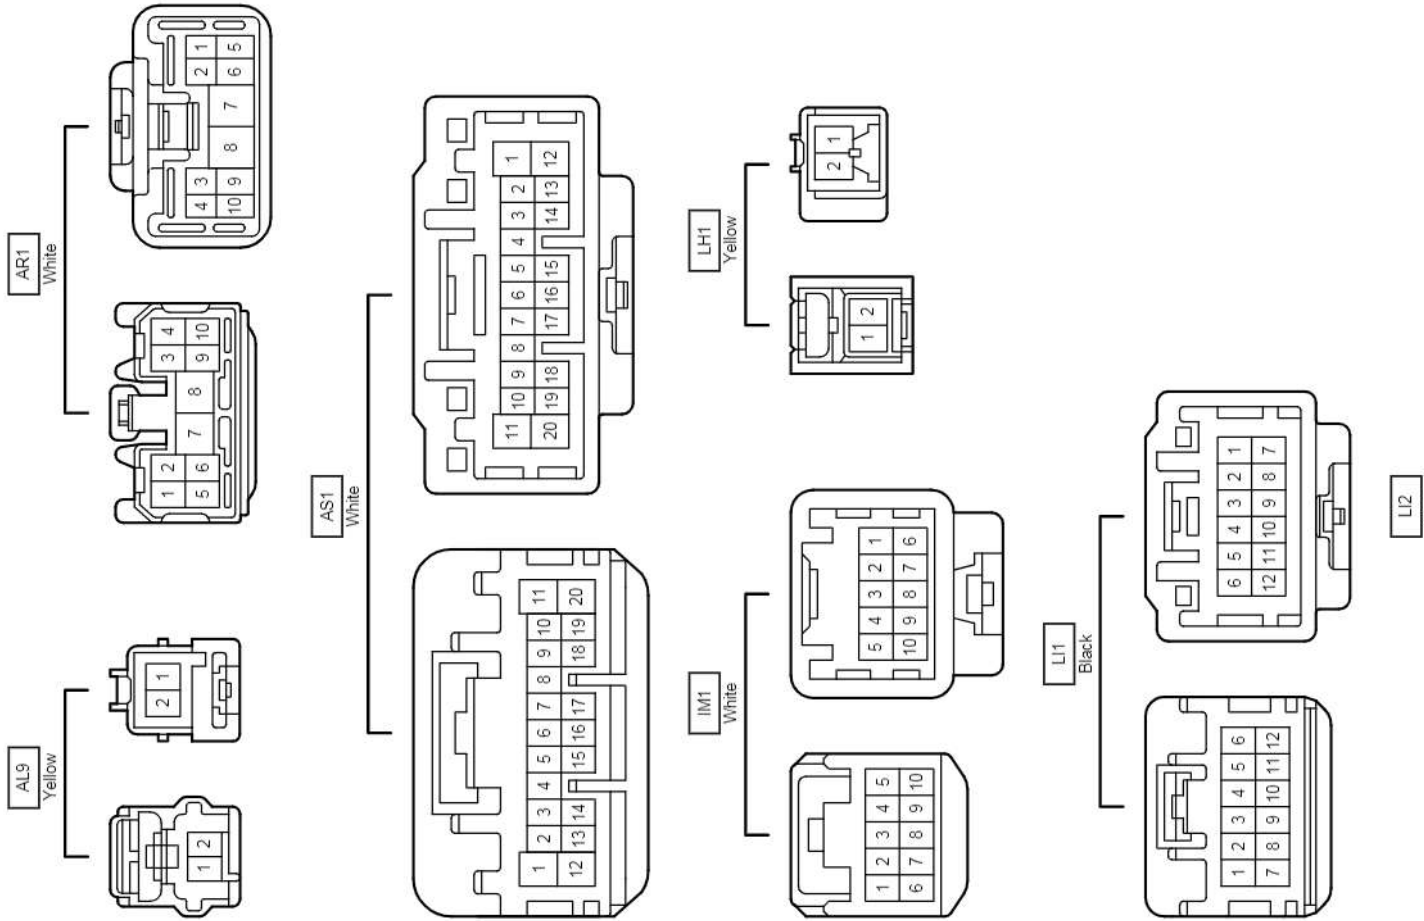


cardiagn.com

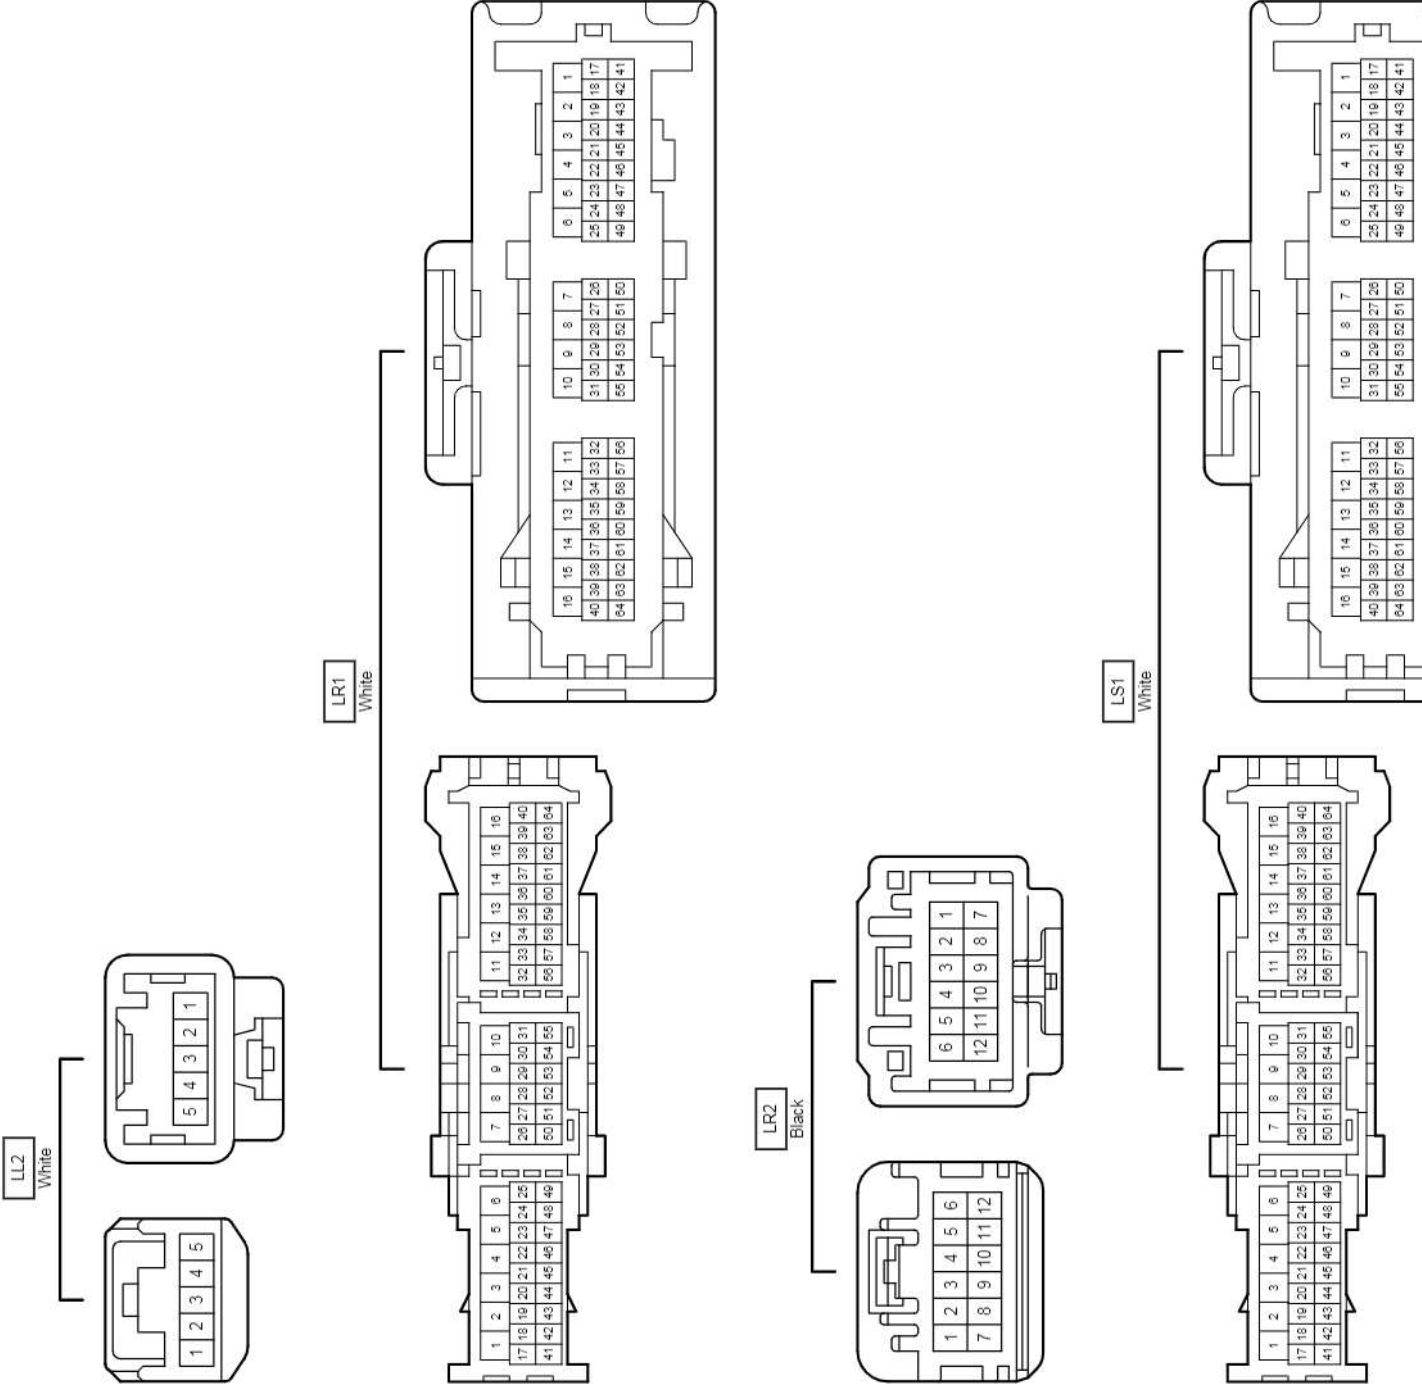


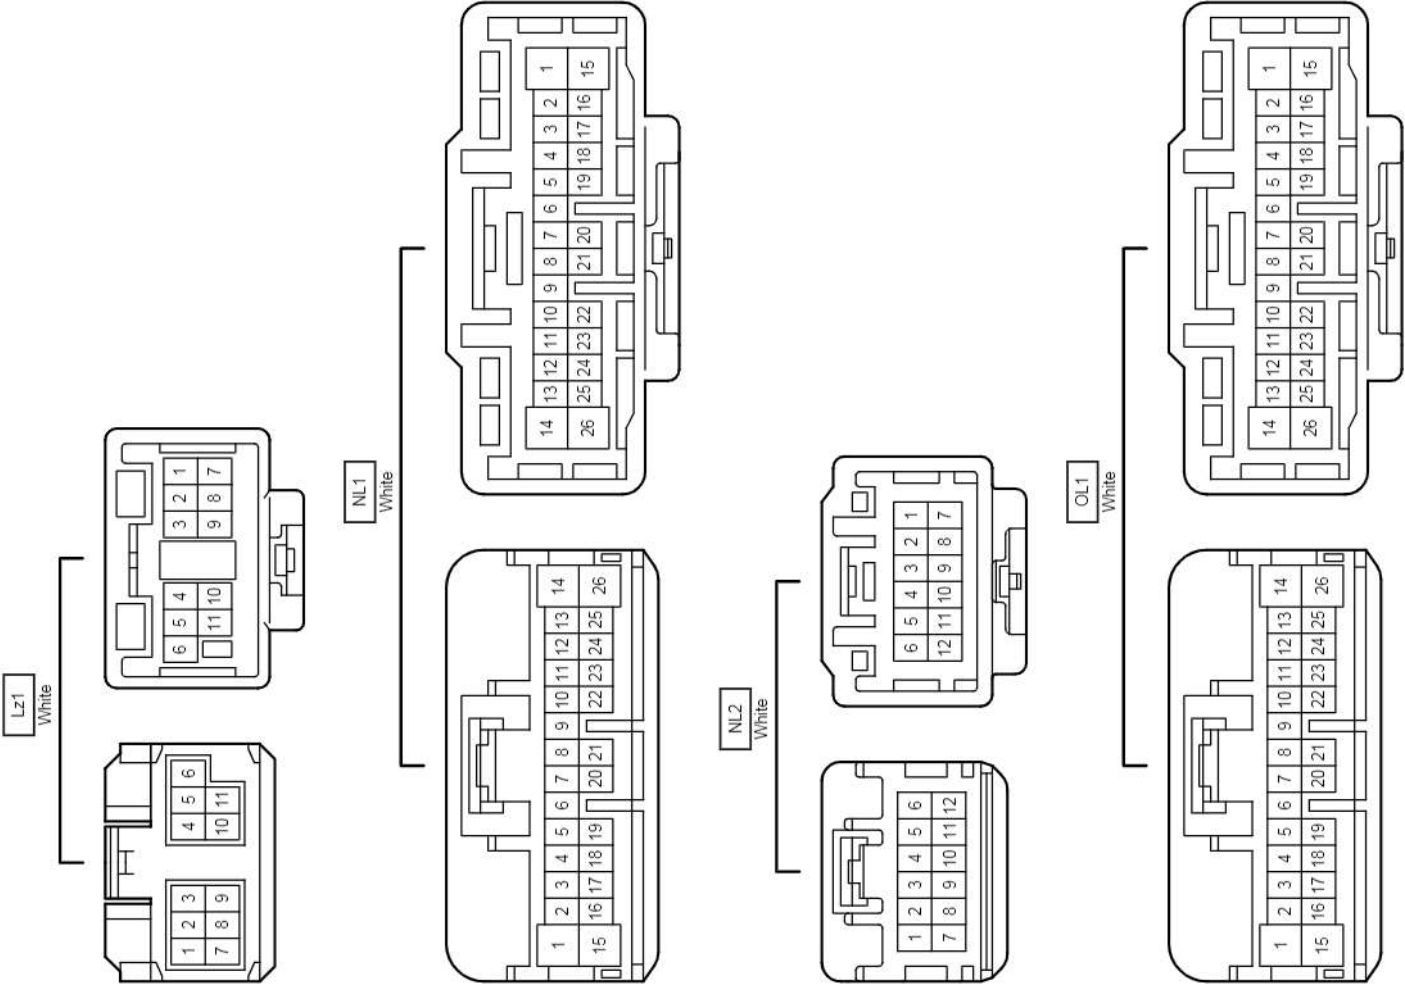

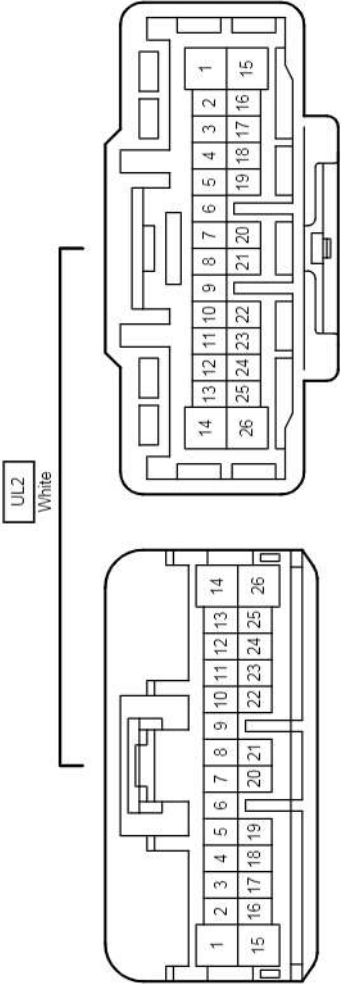










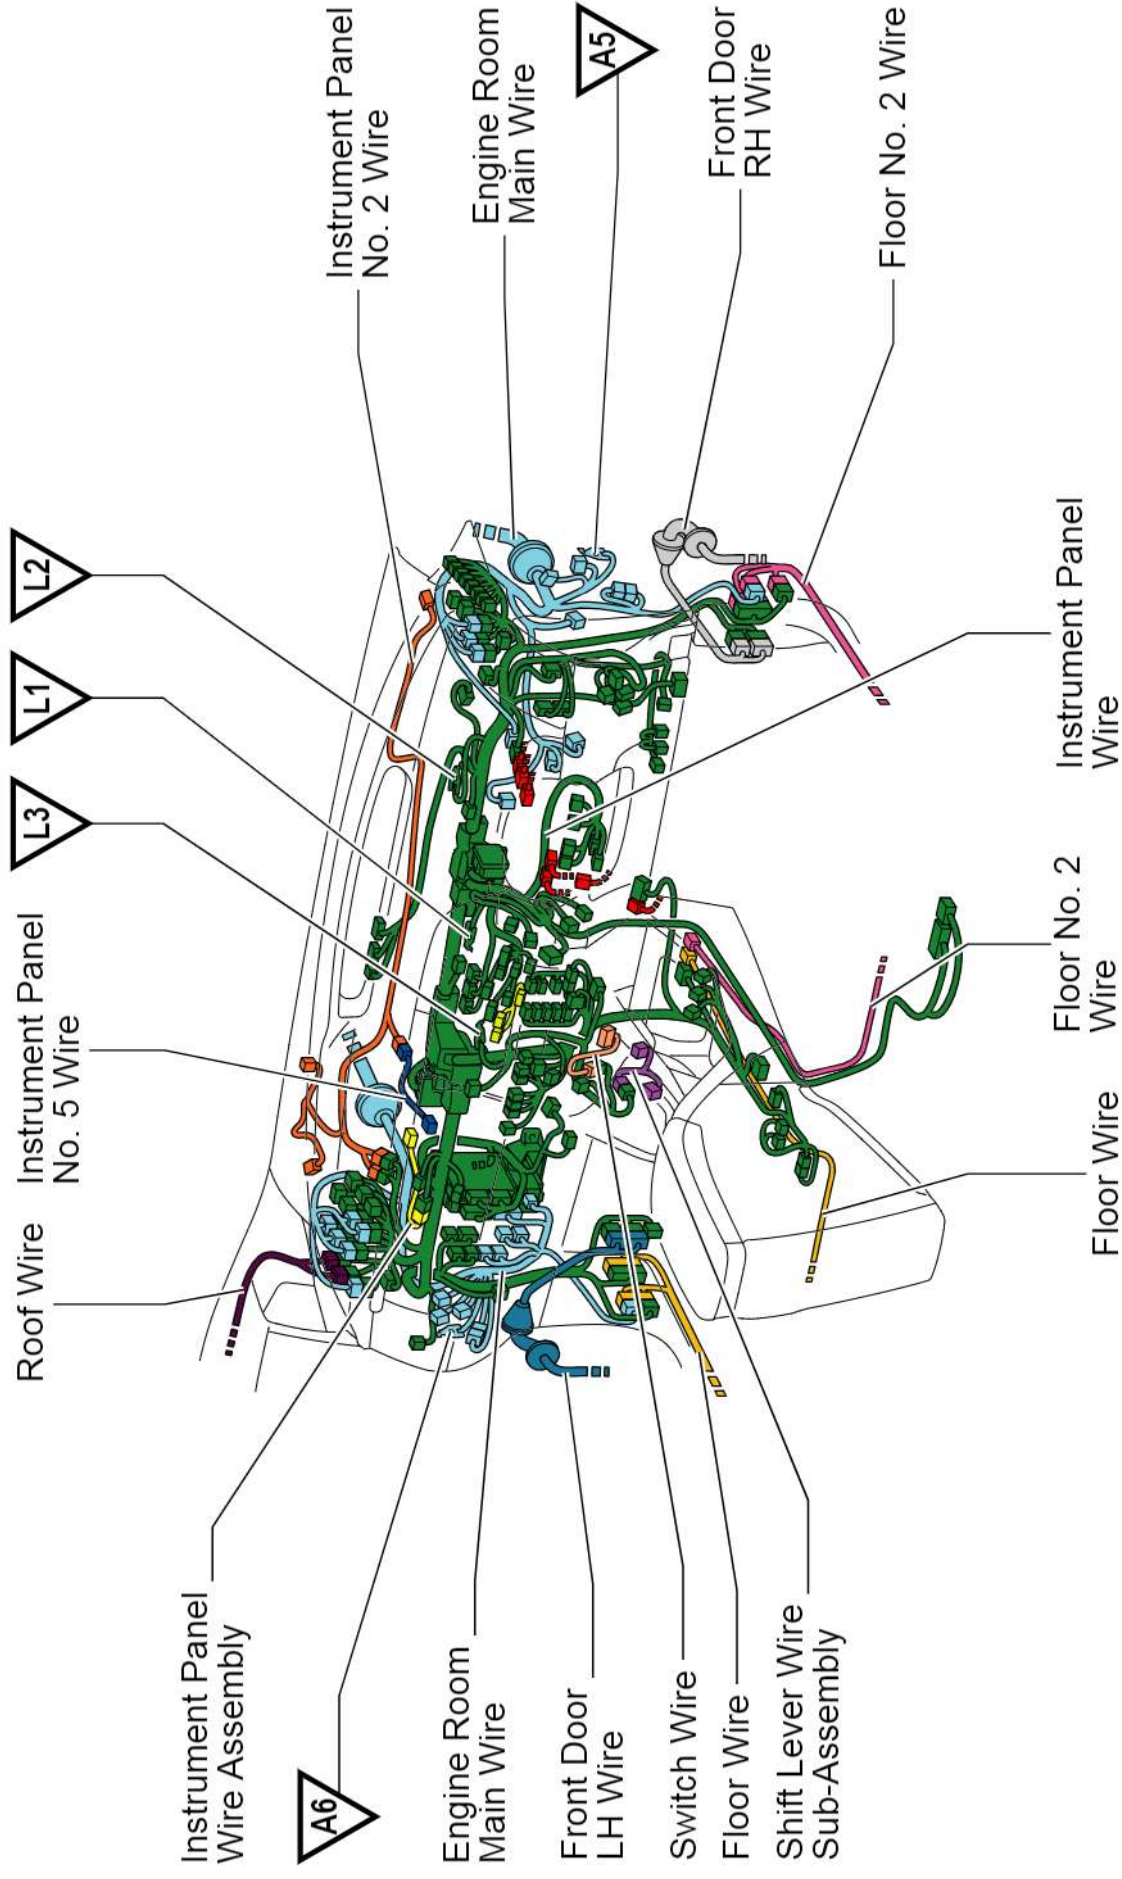


Position of Parts in Instrument Panel <RHD>


















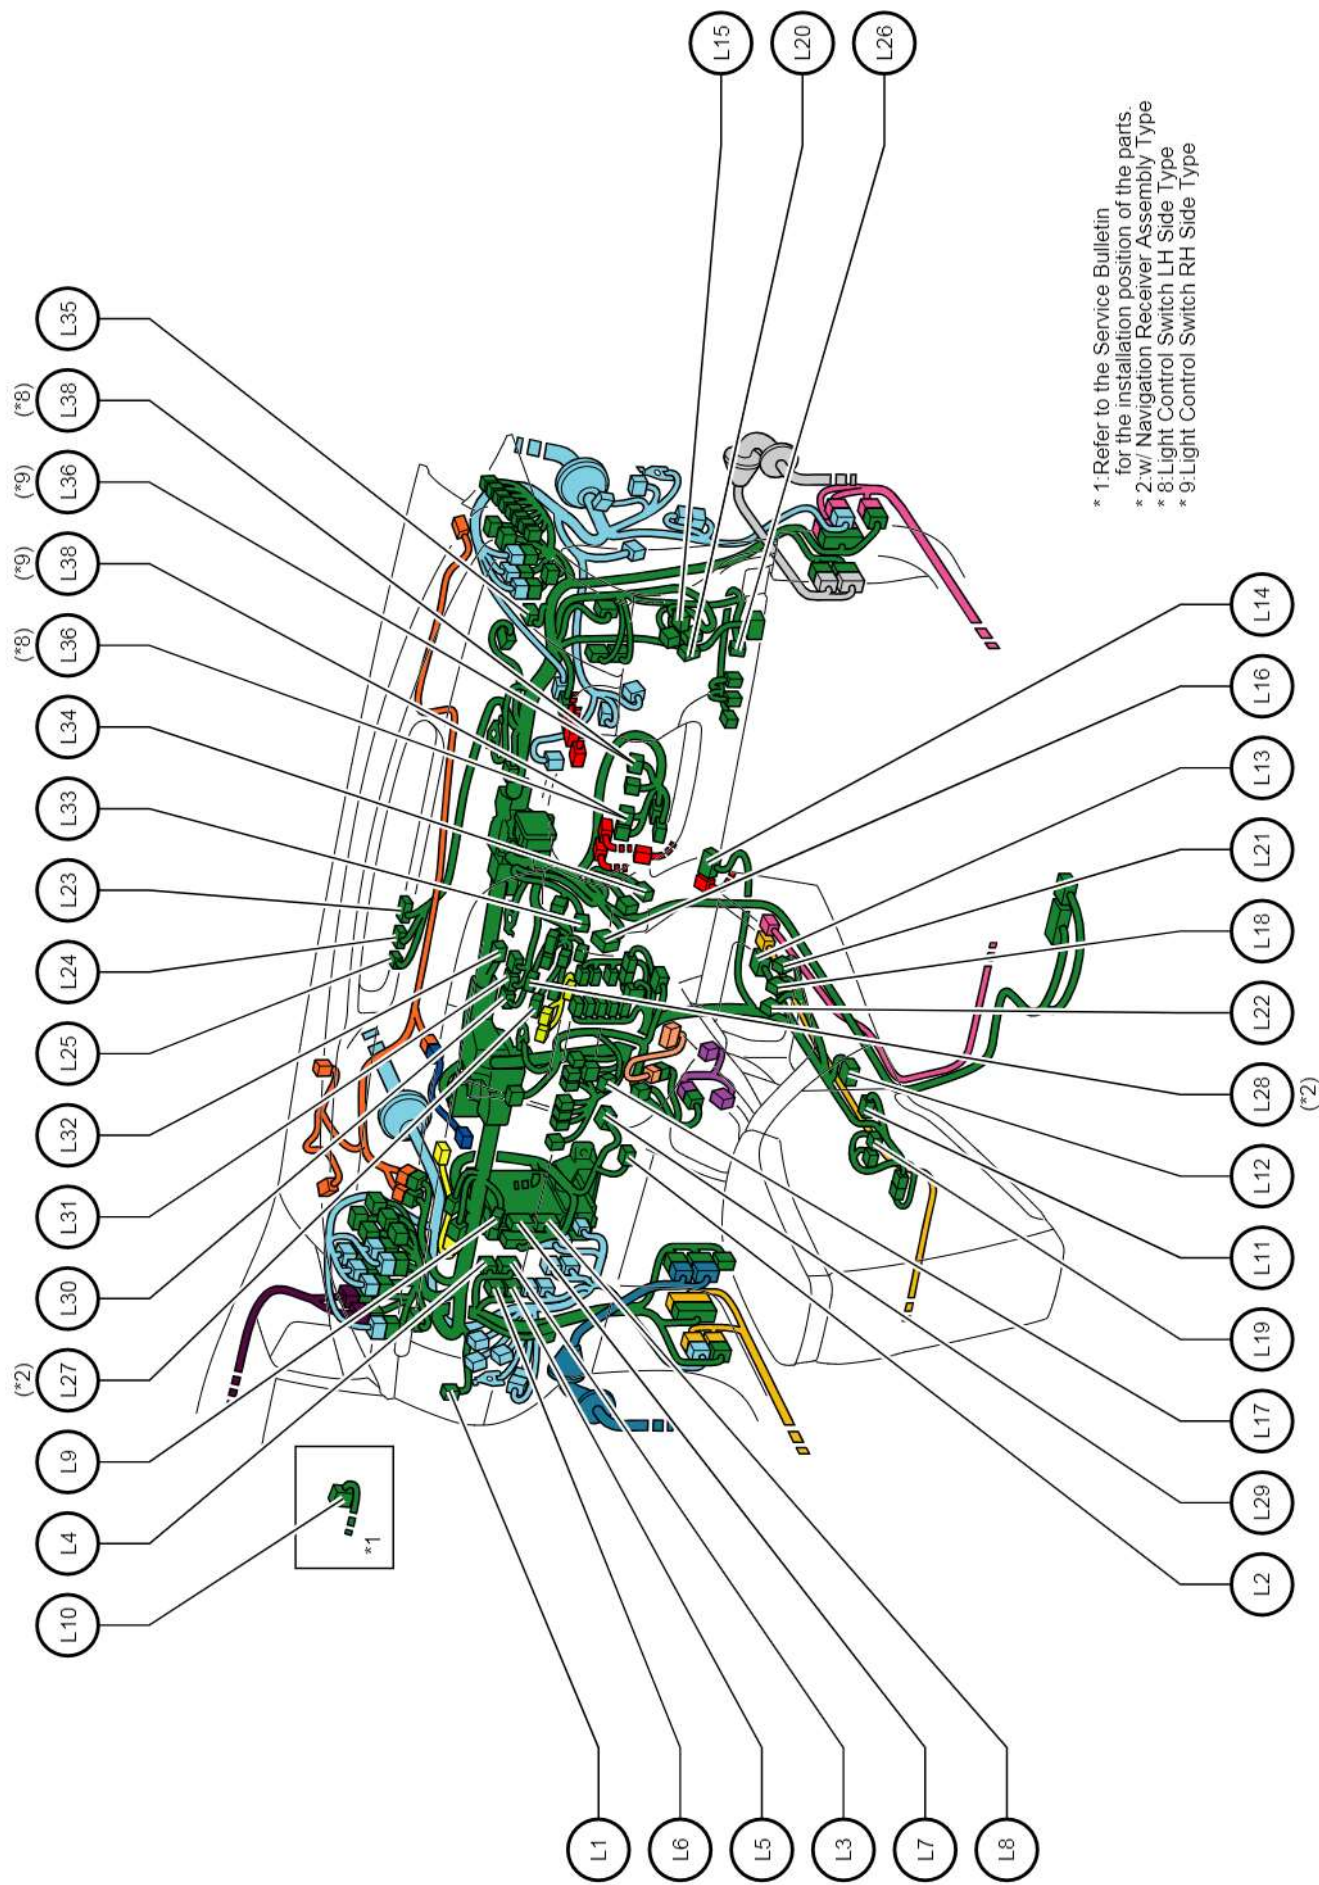


L	1	Airbag Cut Off Switch Cylinder Sub-Assembly
L	2	No. 1 Interior Illumination Light Assembly RH
L	3	Seat Belt Control ECU
L	4	Seat Belt Control ECU
L	5	Power Management Control ECU
L	6	Power Management Control ECU
L	7	Main Body ECU
L	8	Main Body ECU
L	9	Glove Box Light (No. 1 Interior Illumination Light Assembly)
L	10	ID Code Box
L	11	Front Indoor Electrical Key Oscillator
L	12	Yaw Rate Sensor Assembly
L	13	Airbag ECU Assembly
L	14	A/C Amplifier Assembly
L	15	Outer Mirror Switch Assembly
L	16	Double Lock Door Control Relay Assembly
L	17	A/C Control Assembly
L	18	No. 3 Power Outlet Socket Assembly
L	19	Center Power Outlet Socket Assembly
L	20	Pattern Select Switch Assembly
L	21	Seat Heater Switch RH
L	22	Seat Heater Switch LH
L	23	Combination Meter Assembly
L	24	Combination Meter Assembly
L	25	Combination Meter Assembly
L	26	Lower No. 1 Instrument Panel Airbag Assembly
L	27	Navigation Receiver Assembly
L	28	Navigation Receiver Assembly
L	29	Blower with Fan Motor Sub-Assembly
L	30	Radio Receiver Assembly
L	31	Radio Receiver Assembly
L	32	Amplifier Antenna Assembly
L	33	Power Switch
L	34	Cooler (Room Temperature Sensor) Thermistor
L	35	Skid Control Buzzer Assembly
L	36	Headlight Dimmer Switch Assembly
L	38	Windshield Wiper Switch Assembly


Position of Parts in Instrument Panel <RHD>

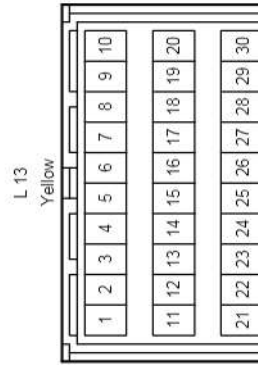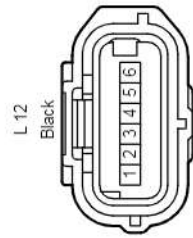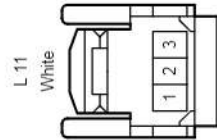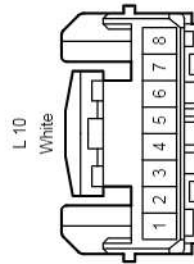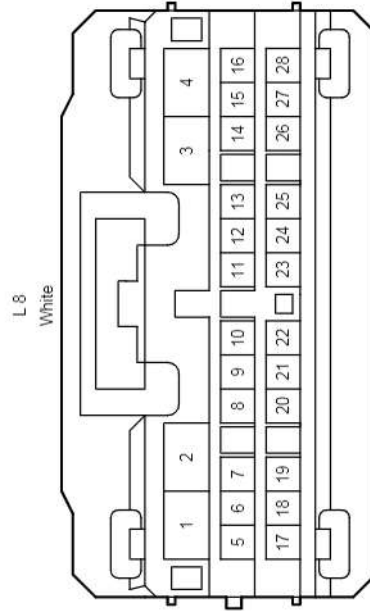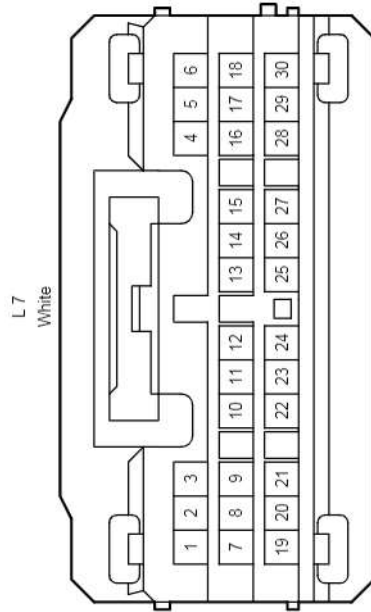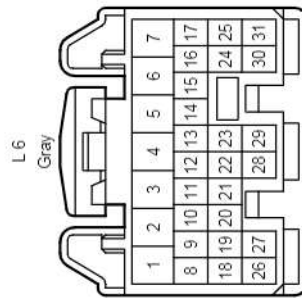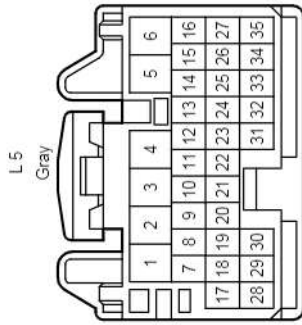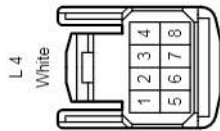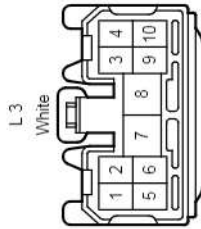

     Position of Parts in Instrument Panel <RHD>

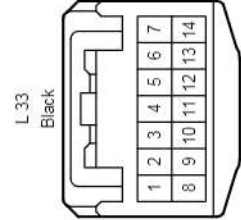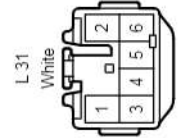
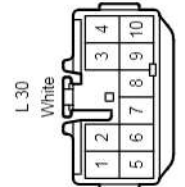
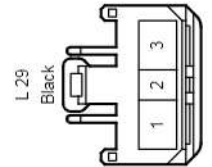
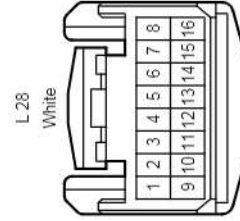
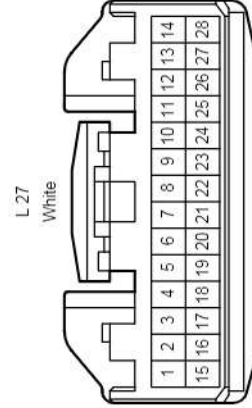

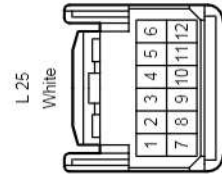
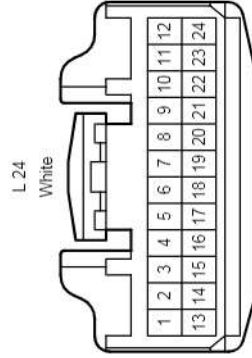
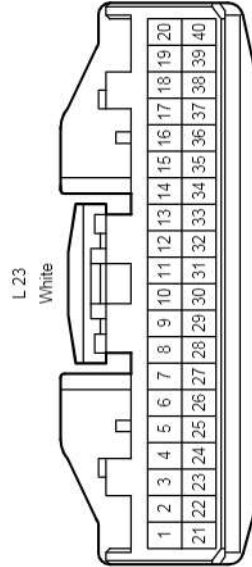

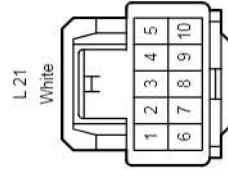
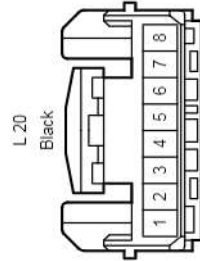


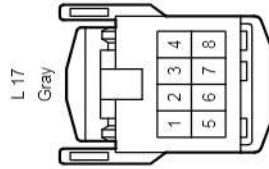
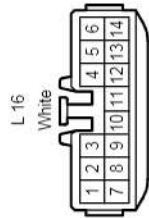


Position of Parts in Instrument Panel <RHD>

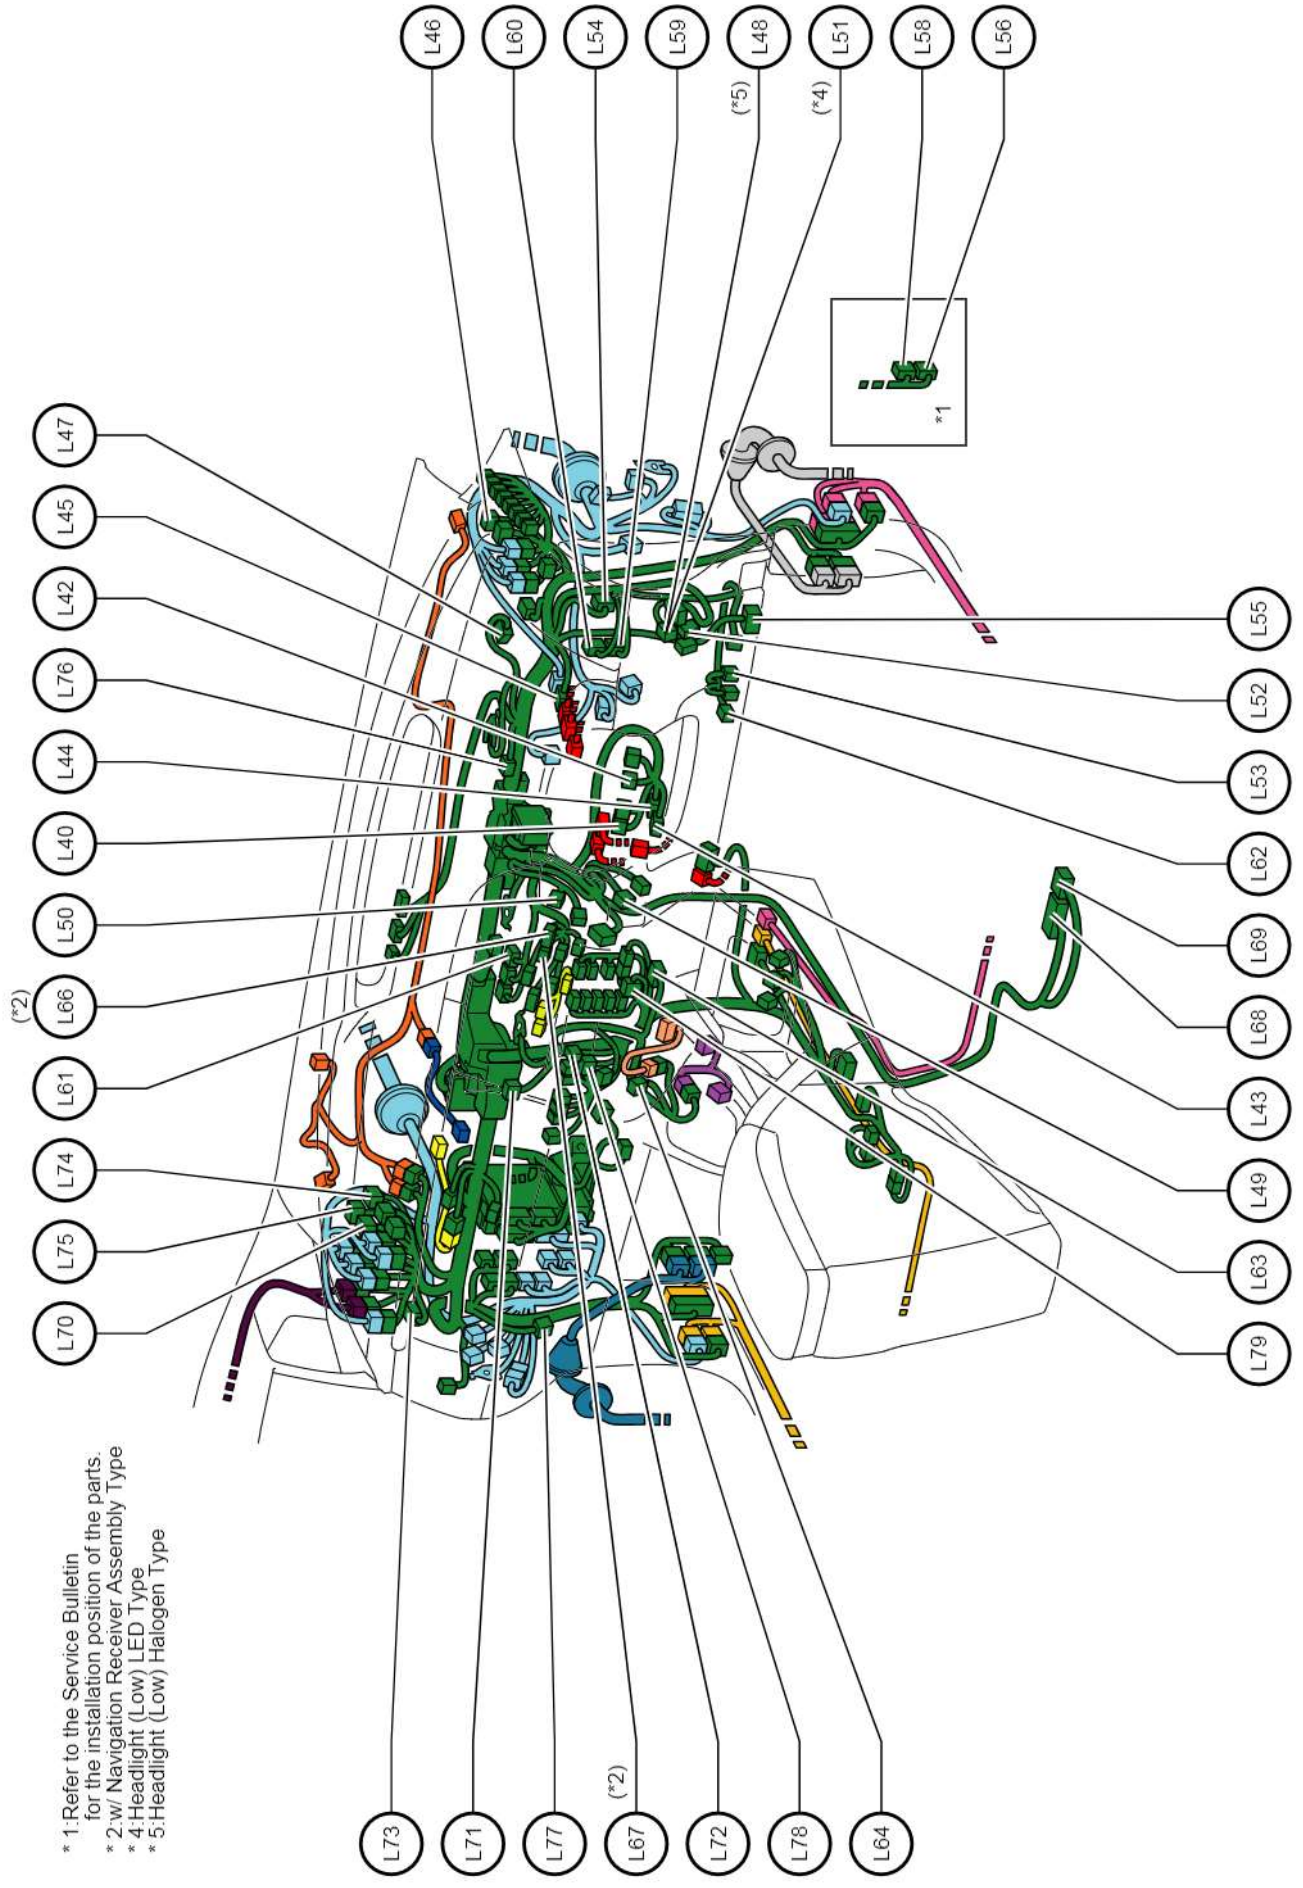


L 40	Windshield Wiper Switch Assembly
L 42	Steering Sensor
L 43	Spiral Cable Sub-Assembly
L 44	Spiral Cable Sub-Assembly
L 45	Power Steering ECU Assembly
L 46	Turn Signal Flasher Assembly
L 47	Combination Meter Mirror
L 48	Headlight Leveling Switch
L 49	Back Sonar or Clearance Sonar Switch Assembly
L 50	Satellite Switch Set
L 51	Headlight Cleaner Switch Assembly
L 52	Light Control Rheostat
L 53	Pre-Crash System Cancel Switch Assembly
L 54	Driving Support ECU Assembly
L 55	DLC3
L 56	Certification ECU Assembly
L 58	Certification ECU Assembly
L 59	Parking Assist ECU
L 60	Parking Assist ECU
L 61	Radio Receiver Assembly
L 62	No. 1 Interior Illumination Light Assembly LH
L 63	Windshield Wiper Relay Assembly
L 64	Integration Control and Panel Assembly
L 66	Navigation Receiver Assembly
L 67	Navigation Receiver Assembly
L 68	Stereo Component Amplifier Assembly
L 69	Stereo Component Amplifier Assembly
L 70	Junction Connector
L 71	Junction Connector
L 72	Junction Connector
L 73	Junction Connector
L 74	Junction Connector
L 75	Junction Connector
L 76	Diode (Front Courtesy Light RH)
L 77	Diode (Front Courtesy Light LH)
L 78	Junction Connector
L 79	Junction Connector

 Position of Parts in Instrument Panel <RHD>

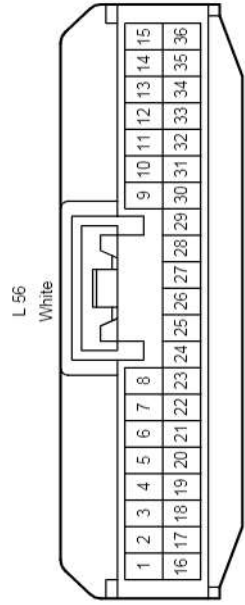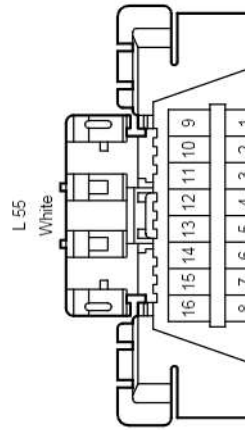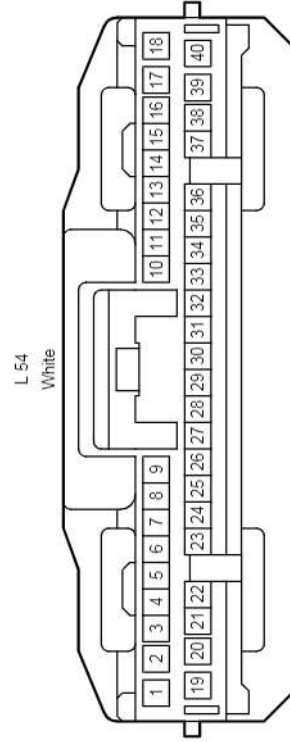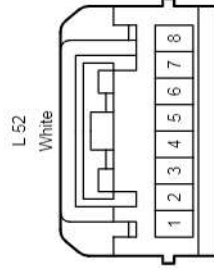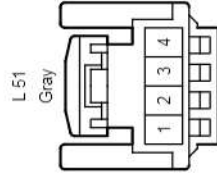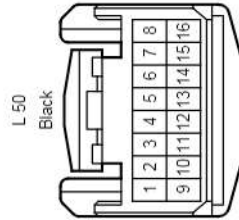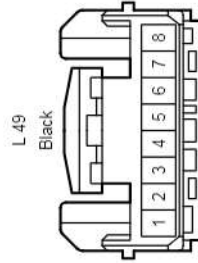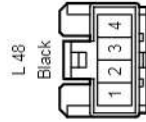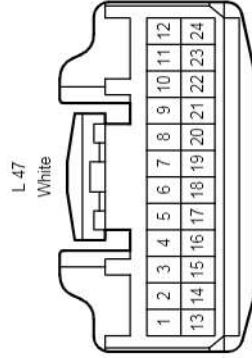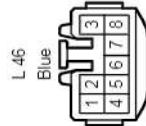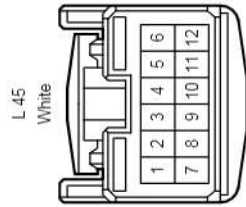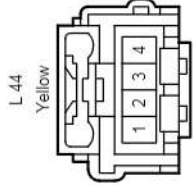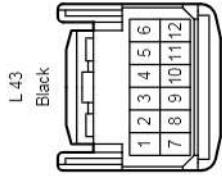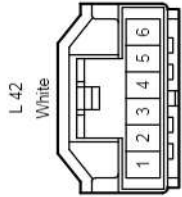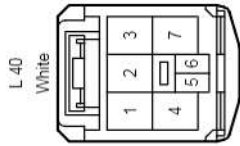


Position of Parts in Instrument Panel <RHD>


L 59
Black

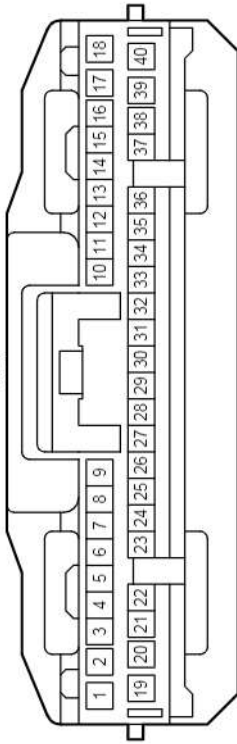

L 60
White

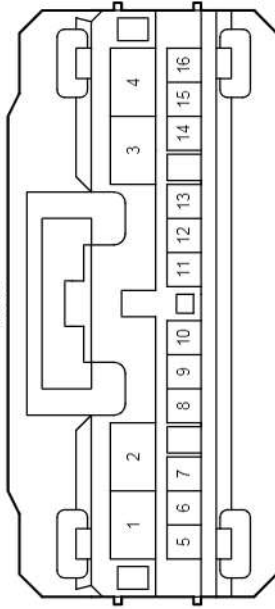


L 61
White

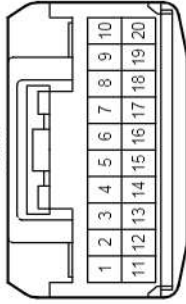


L 62
White




L 63
White

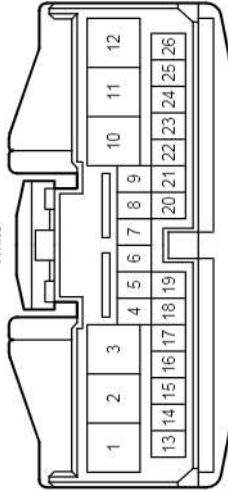


L 64
Black

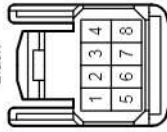


L 66
White

 


L 67
White

 


L 68
White

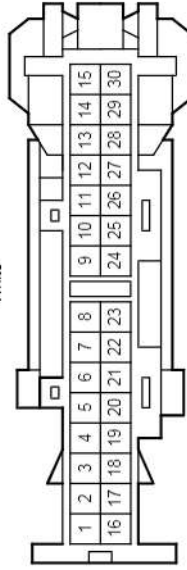


L 69
White




 


L 70
White

 


L 71
Black

 

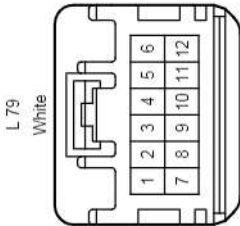
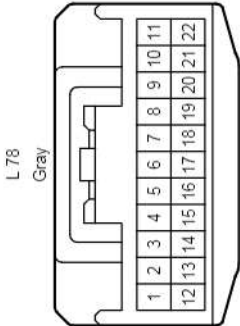
 
 


Position of Parts in Instrument Panel <RHD>

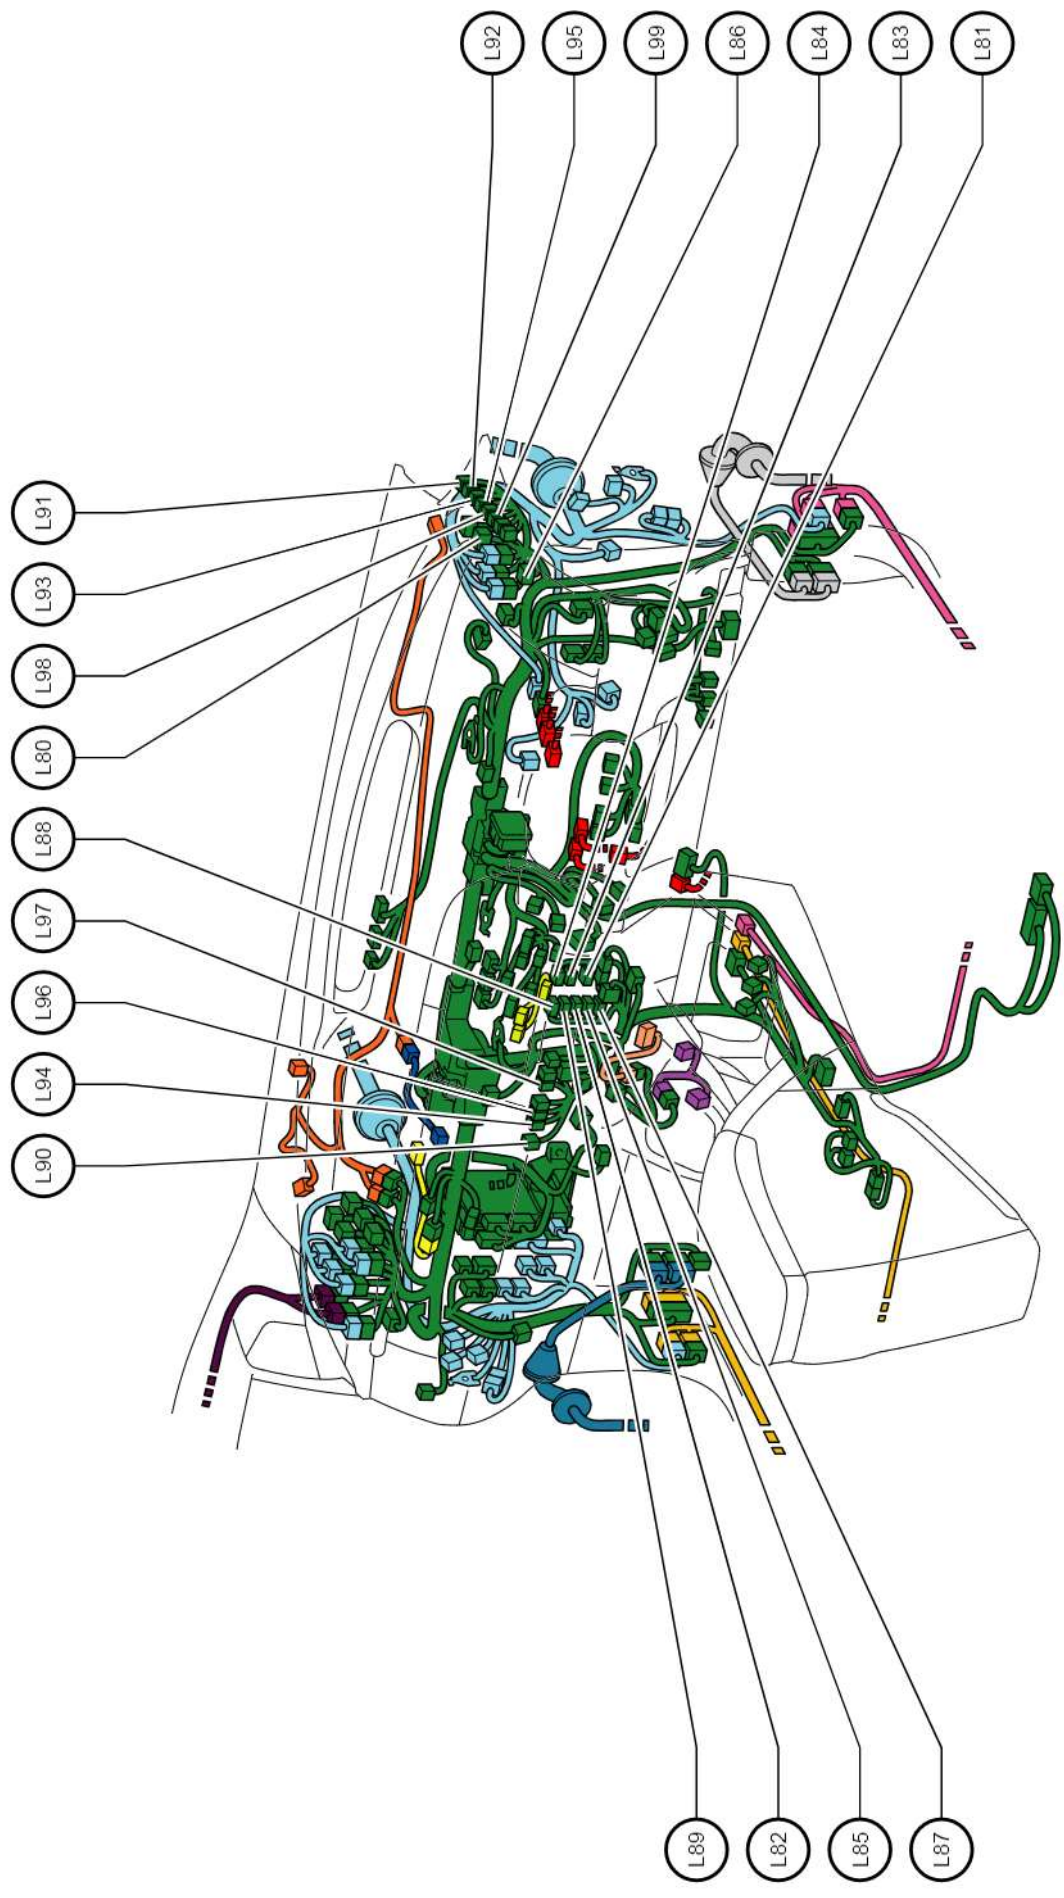


L 80	Junction Connector
L 81	Junction Connector
L 82	Junction Connector
L 83	Junction Connector
L 84	Junction Connector
L 85	Junction Connector
L 86	Junction Connector
L 87	Junction Connector
L 88	Junction Connector
L 89	Junction Connector
L 90	Junction Connector
L 91	Junction Connector
L 92	Junction Connector
L 93	Junction Connector
L 94	Junction Connector
L 95	Junction Connector
L 96	Junction Connector
L 97	Junction Connector
L 98	Junction Connector
L 99	Junction Connector

Position of Parts in Instrument Panel <RHD>

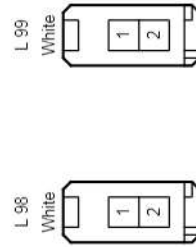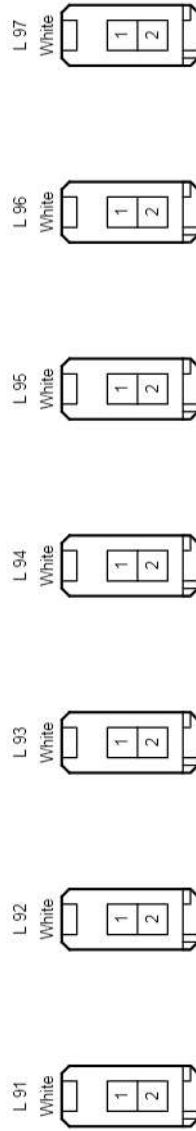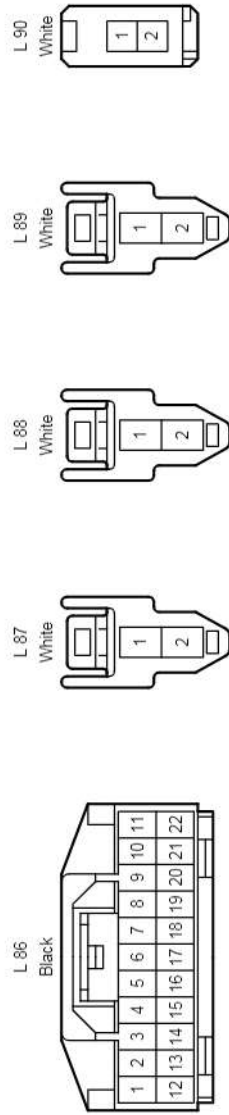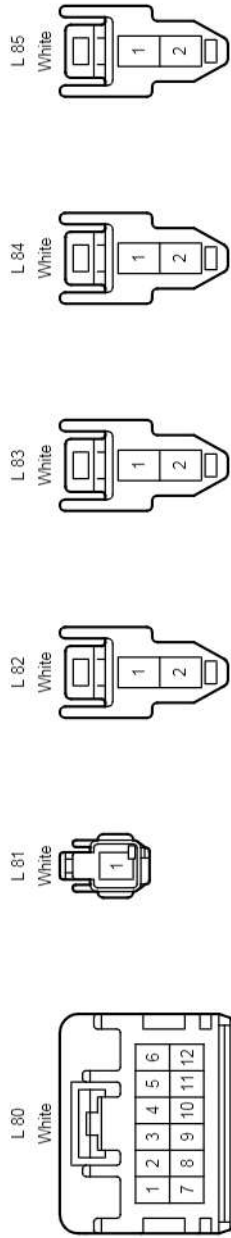



















Position of Parts in Instrument Panel <RHD>

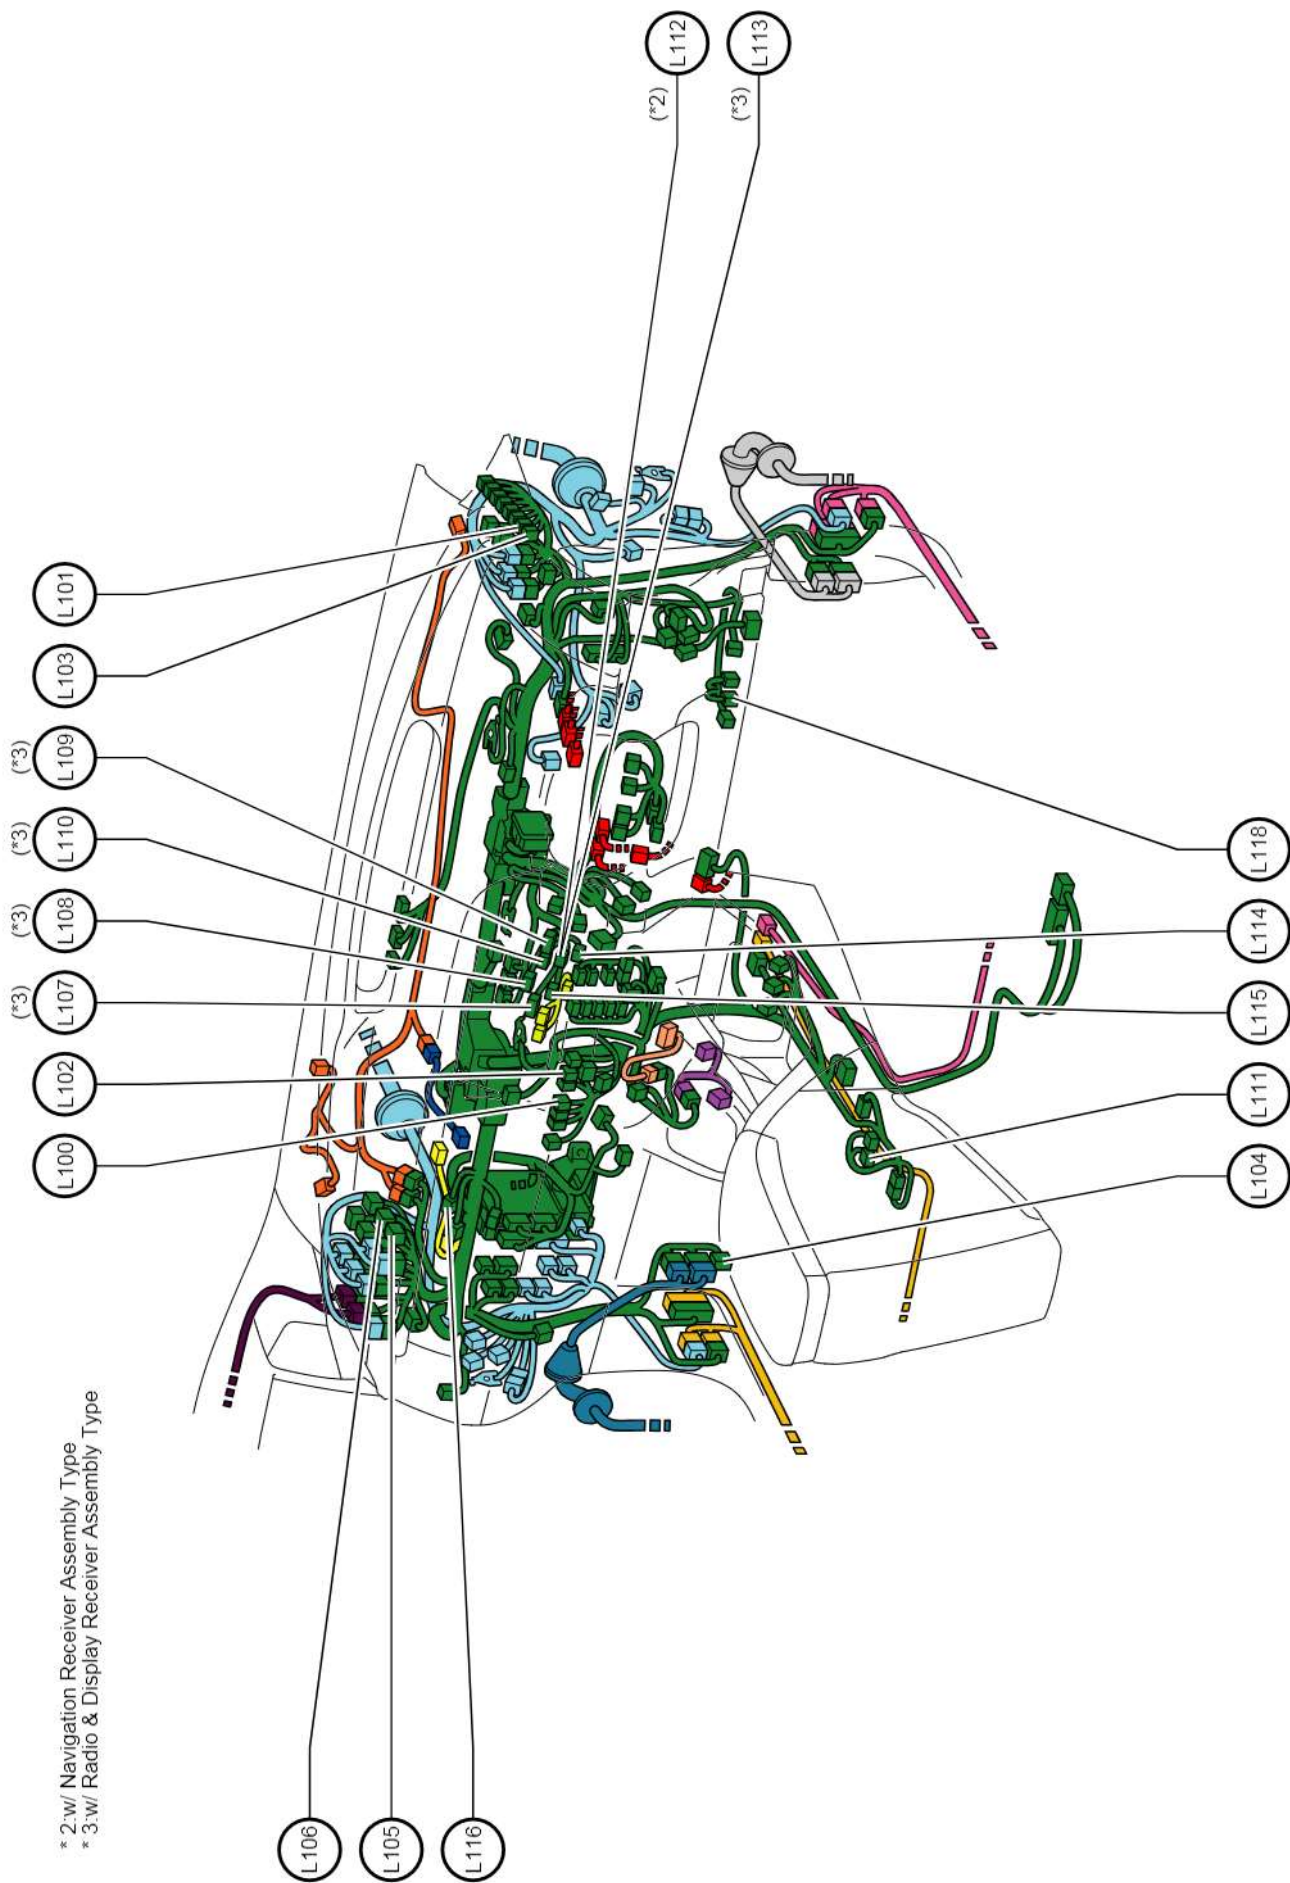


* 2-w/ Navigation Receiver Assembly Type
* 3-w/ Radio & Display Receiver Assembly Type

L 100	Junction Connector
L 101	Junction Connector
L 102	Junction Connector
L 103	Junction Connector
L 104	Fuse Block
L 105	Rear Fog Light Relay
L 106	PIMR Relay
L 107	Radio & Display Receiver Assembly
L 108	Radio & Display Receiver Assembly
L 109	Radio & Display Receiver Assembly
L 110	Radio & Display Receiver Assembly
L 111	No. 1 Stereo Jack Adapter Assembly
L 112	Navigation Receiver Assembly
L 113	Radio & Display Receiver Assembly
L 114	Extension Module
L 115	Navigation Receiver Assembly
L 116	Navigation Antenna Assembly
L 118	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)

      Position of Parts in Instrument Panel <RHD>

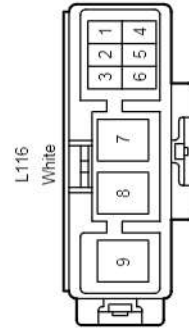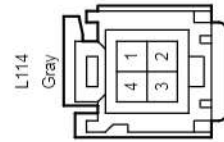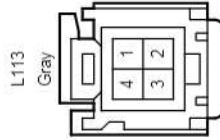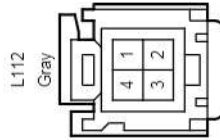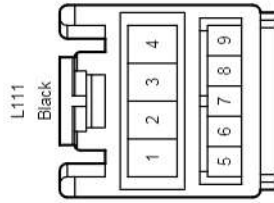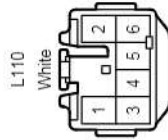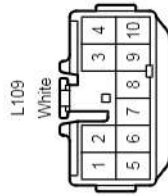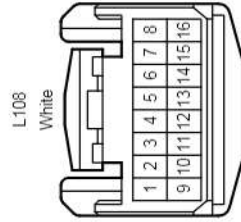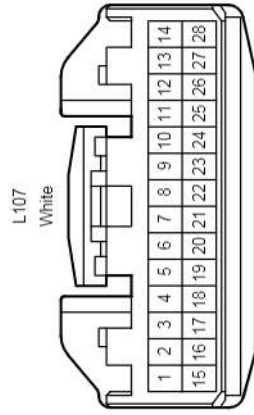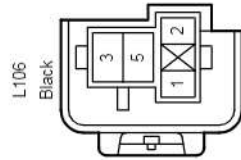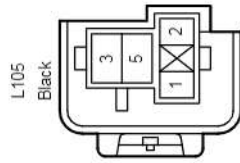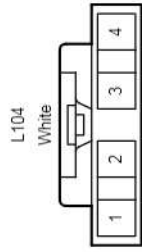
















Position of Parts in Instrument Panel <RHD>

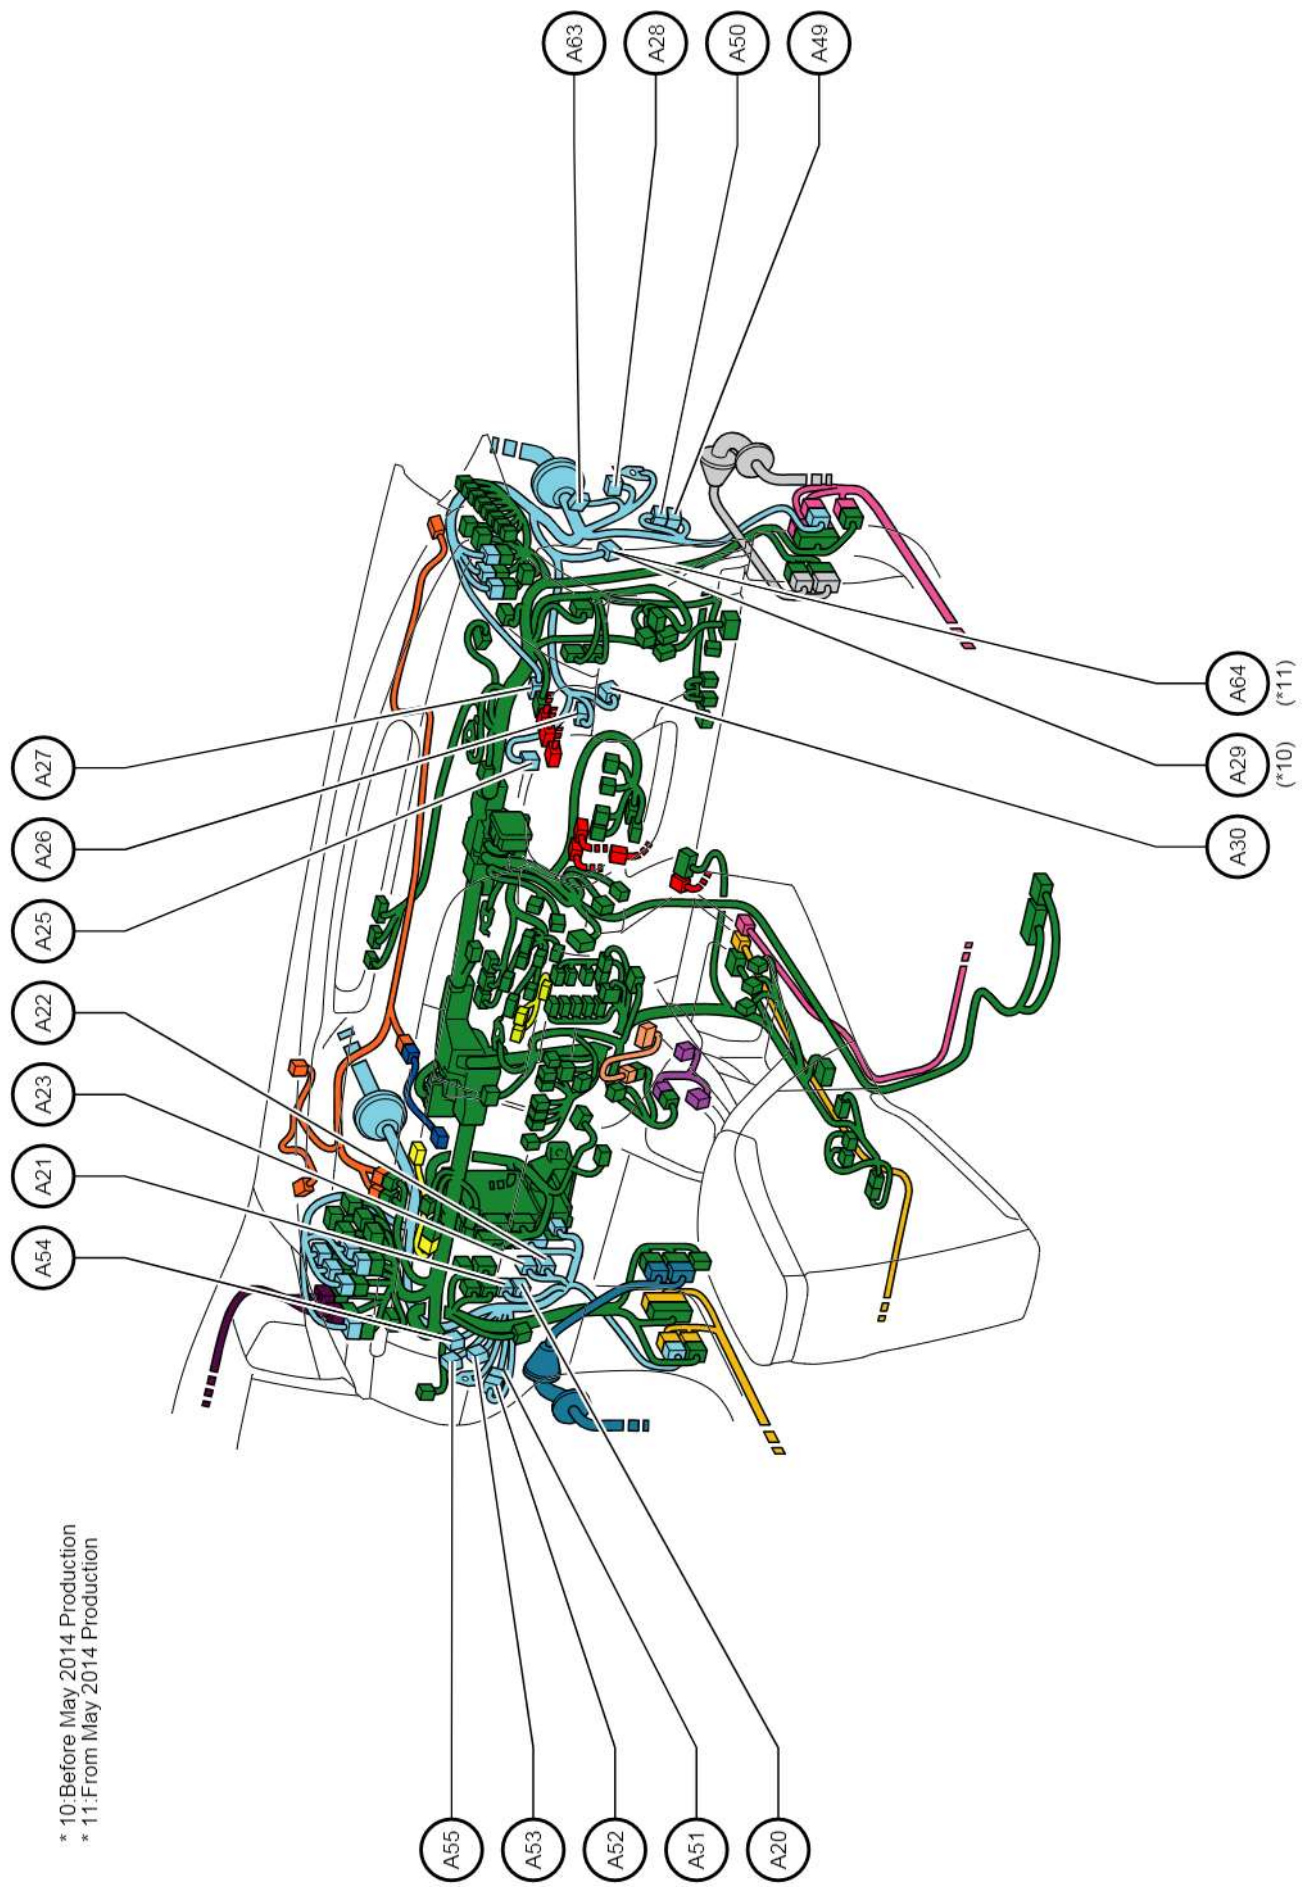


* 10: Before May 2014 Production
* 11: From May 2014 Production

A 20	Power Management Control ECU
A 21	Power Management Control ECU
A 22	Transmission Control ECU Assembly
A 23	Transmission Control ECU Assembly
A 25	Parking Brake Switch Assembly
A 26	Stop Light Switch Assembly
A 27	Power Steering ECU Assembly
A 28	Stop Light Control ECU Assembly
A 29	Accelerator Pedal Sensor Assembly
A 30	Brake Pedal Stroke Sensor Assembly
A 49	Junction Connector
A 50	Junction Connector
A 51	Junction Connector
A 52	Junction Connector
A 53	Junction Connector
A 54	Junction Connector
A 55	Junction Connector
A 63	Headlight Leveling ECU Assembly
A 64	Accelerator Pedal Sensor Assembly

 Position of Parts in Instrument Panel <RHD>

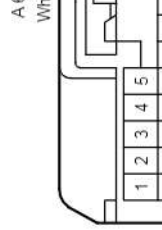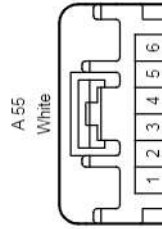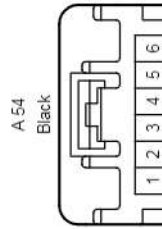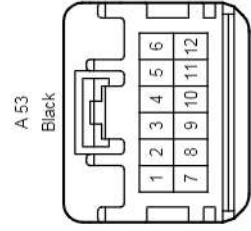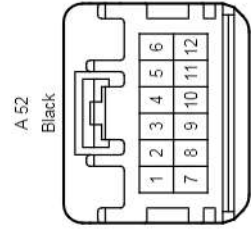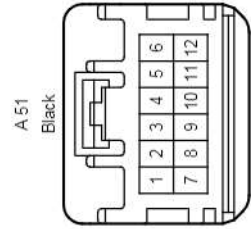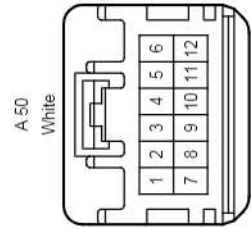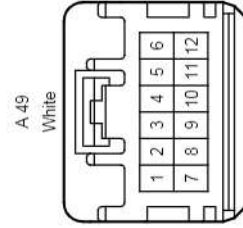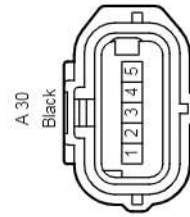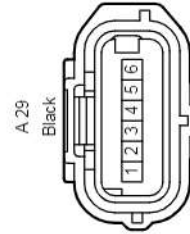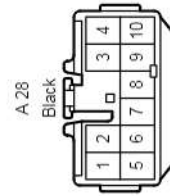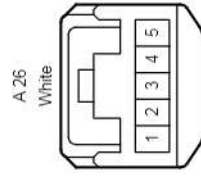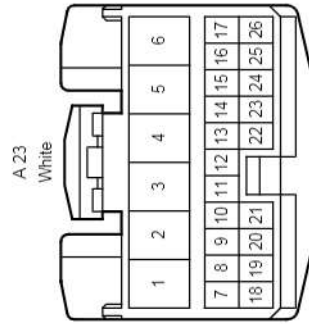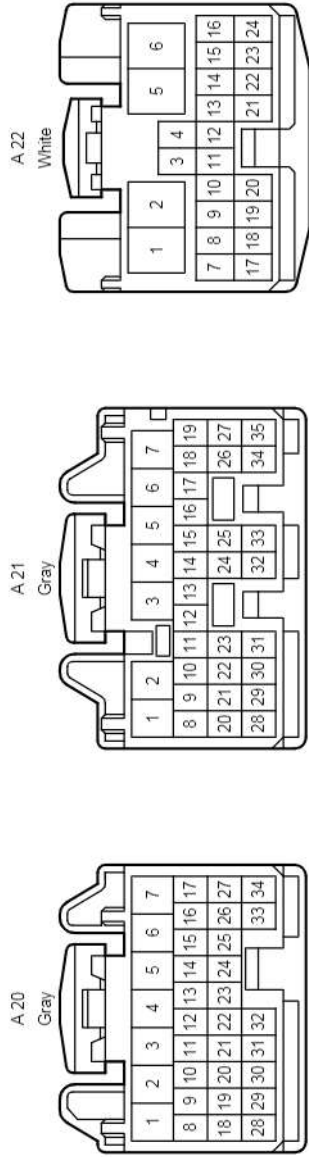

Position of Parts in Instrument Panel <RHD>

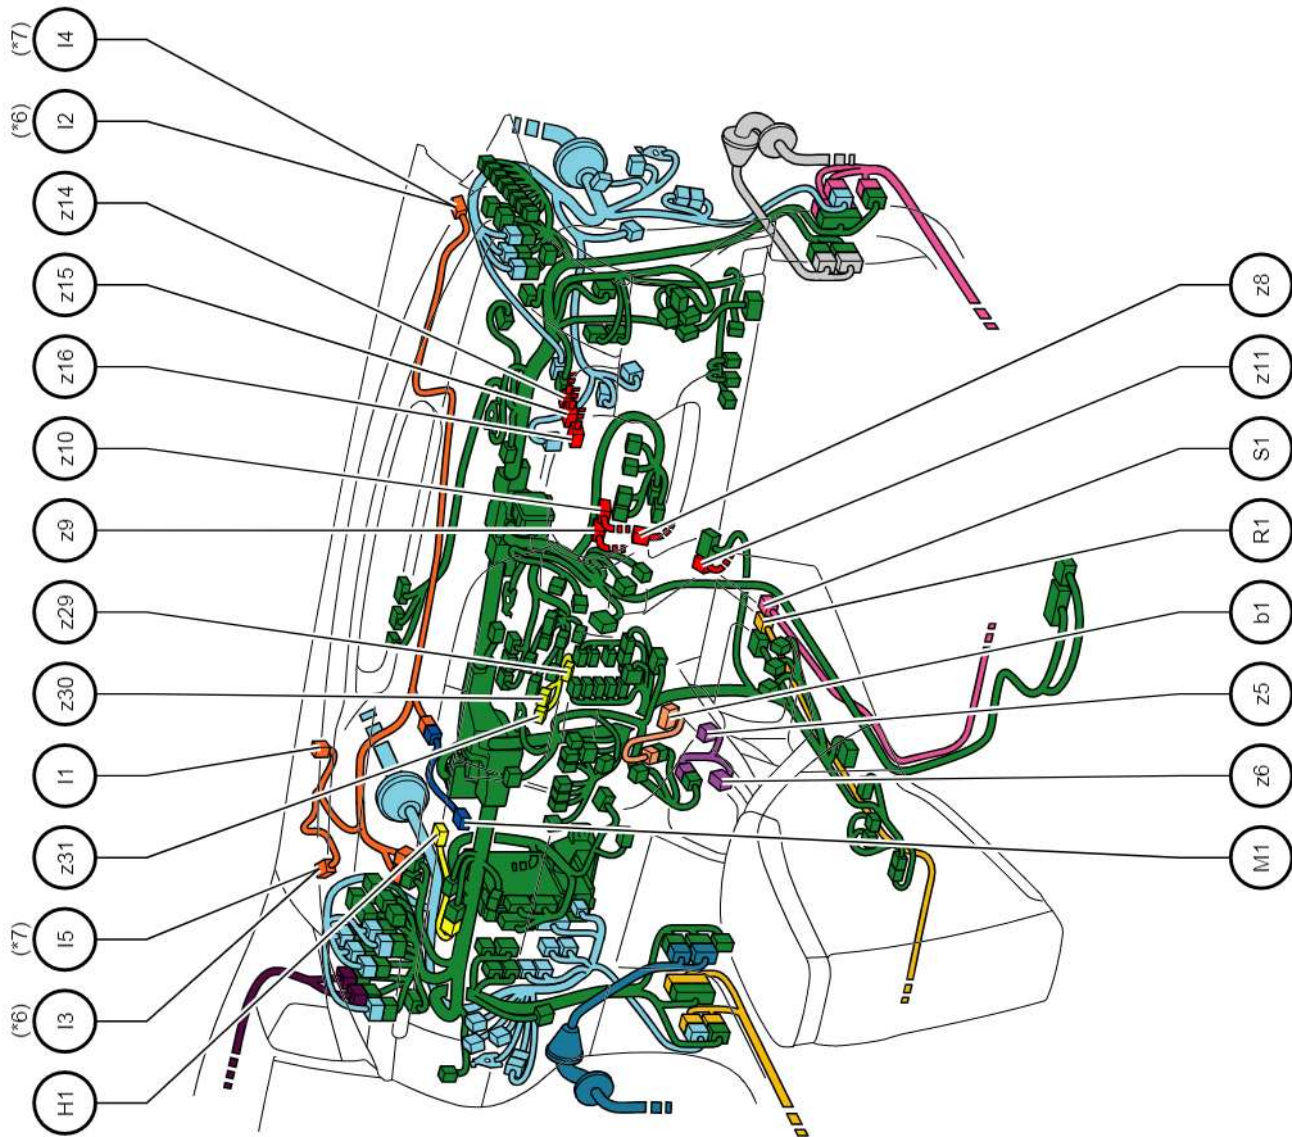


* 6.8 Speaker
* 7.6 Speaker


Position of Parts in Instrument Panel <RHD>

H	1	Front Passenger Side Squib Circuit
I	1	Automatic Light Control Sensor
I	2	Front No. 2 Speaker Assembly RH
I	3	Front No. 2 Speaker Assembly LH
I	4	Instrument Panel Speaker RH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
I	5	Instrument Panel Speaker LH (No. 2 Instrument Panel Speaker Panel Sub-Assembly)
M	1	Passenger Seat Belt Warning Light Assembly
R	1	Airbag ECU Assembly
S	1	Airbag ECU Assembly
b	1	Transmission Shift Main Switch
z	5	Shift Lever Position Sensor
z	6	No. 2 Shift Lever Position Sensor
z	8	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z	9	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	10	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	11	A/C Amplifier Assembly , A/C Blower Assembly
z	14	Power Steering ECU Assembly , Power Steering Torque Sensor
z	15	Power Steering ECU Assembly , Power Steering Motor Assembly
z	16	Power Steering ECU Assembly , Power Steering Motor Assembly
z	29	Extension Module
z	30	Radio & Display Receiver Assembly
z	31	Radio & Display Receiver Assembly


Position of Parts in Instrument Panel <RHD>

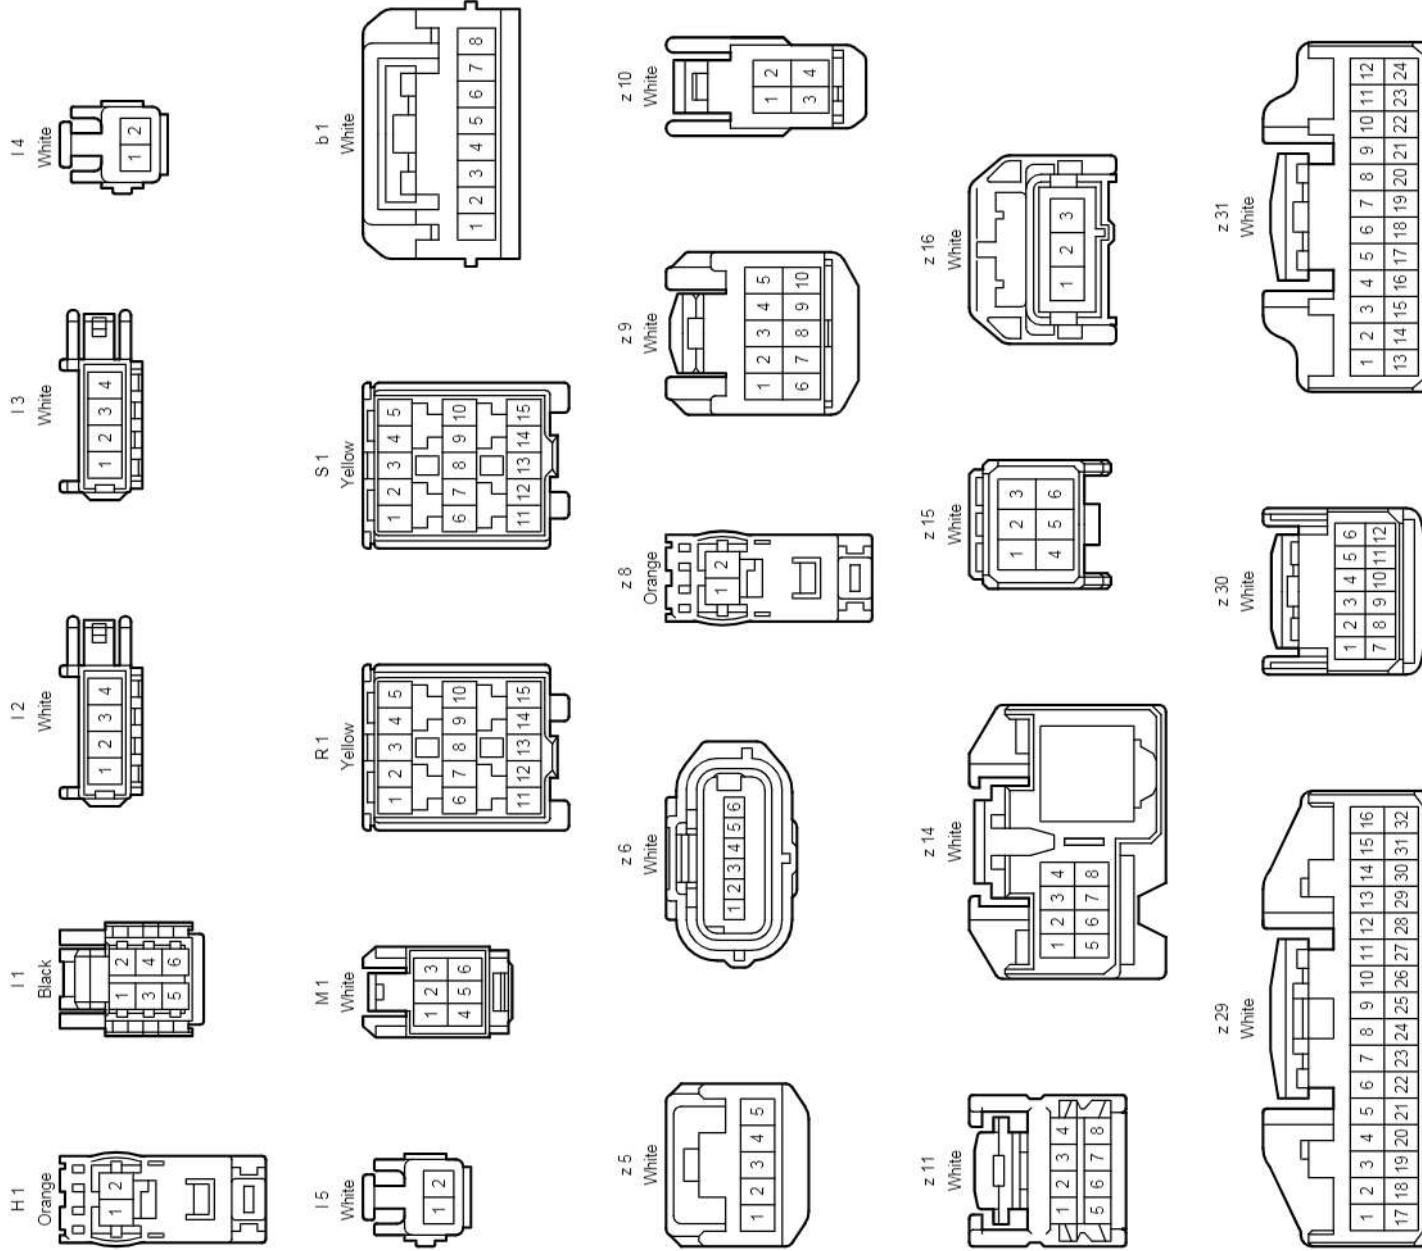


Wire and Wire in Instrument Panel <RHD>

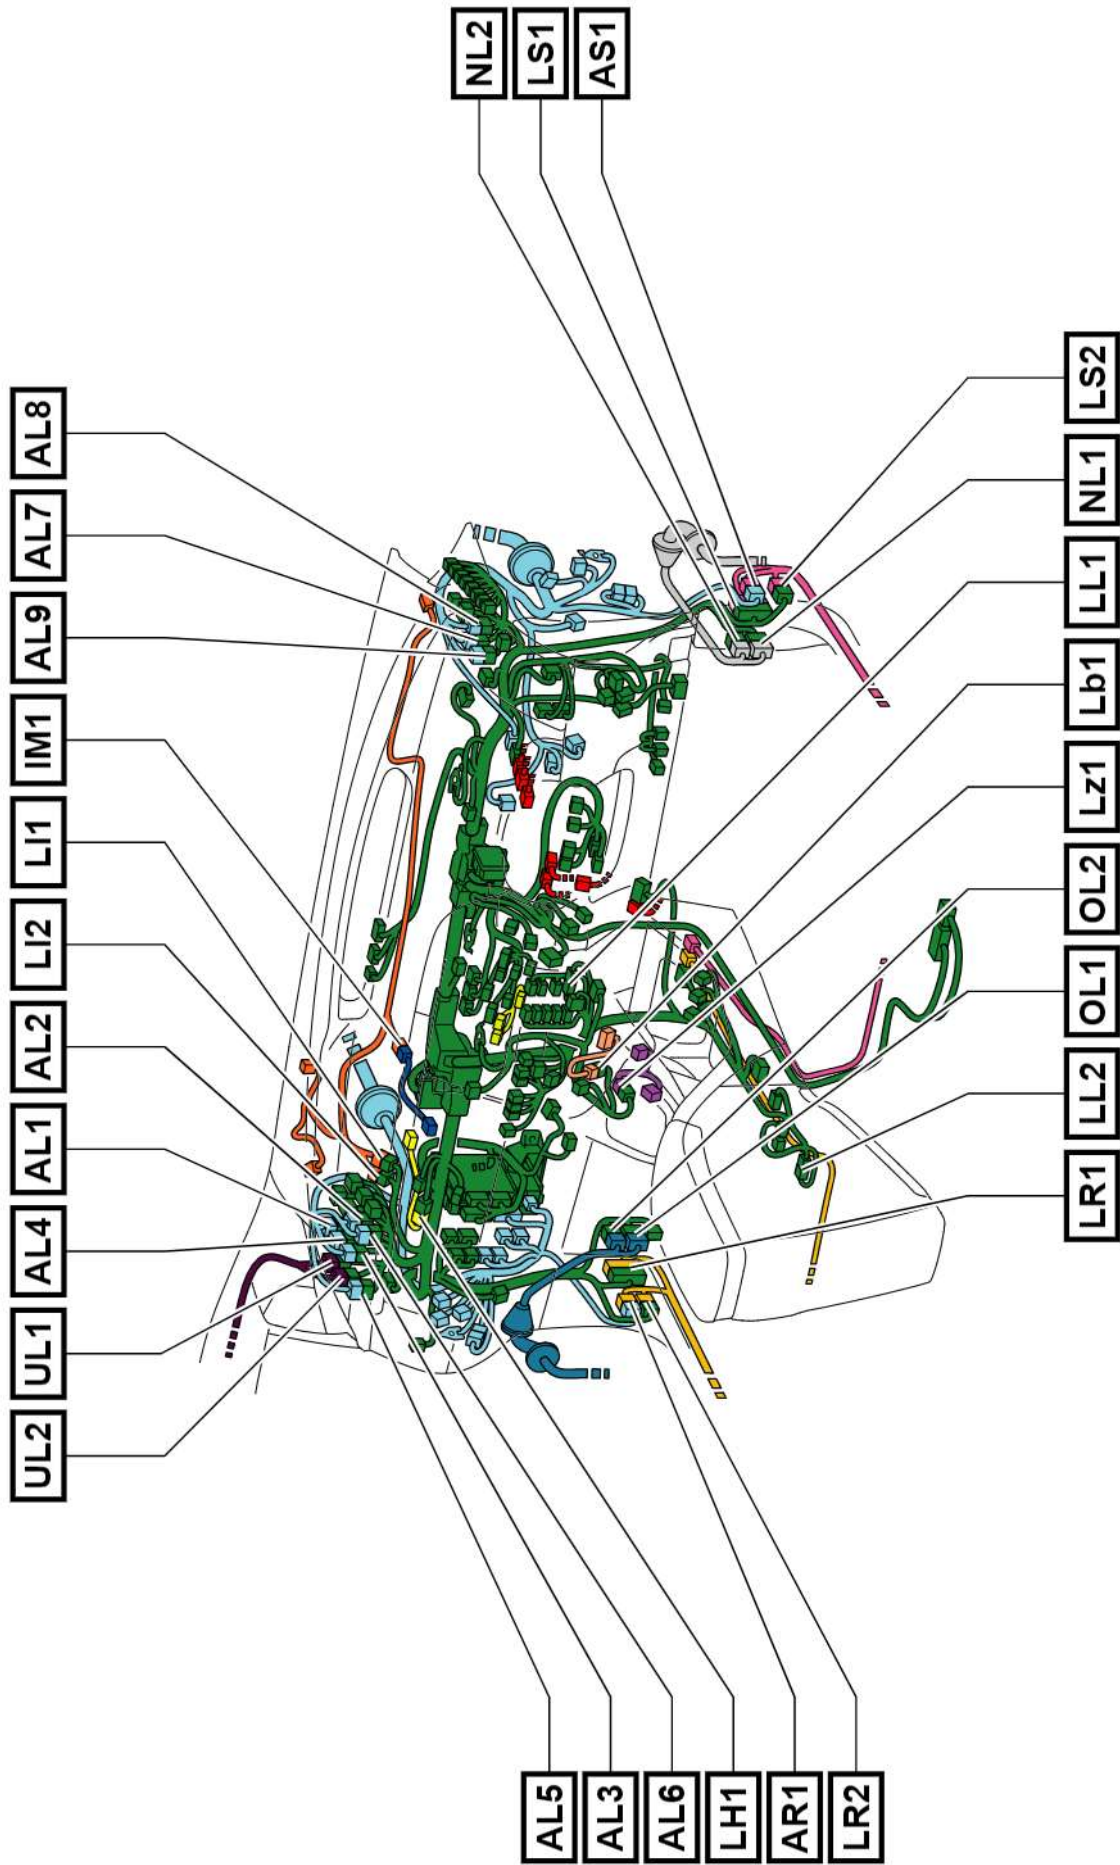





AL1
Blue

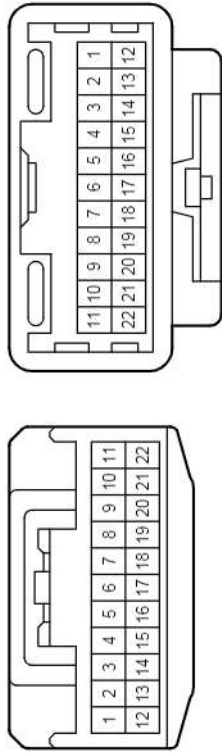

AL2
Gray


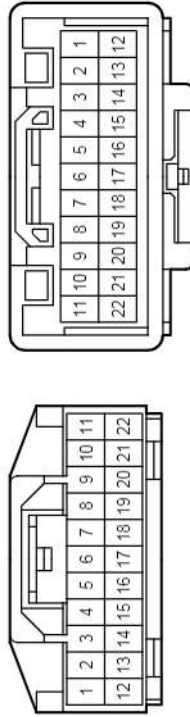


AL3
White

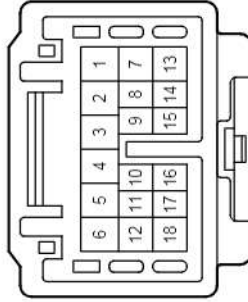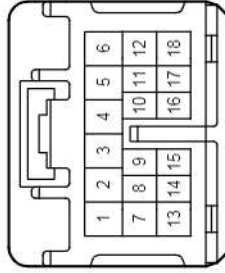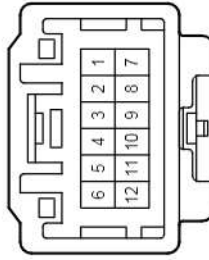
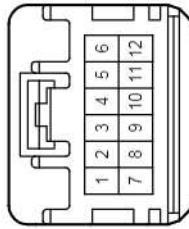


AL4
Black

 AL5
White

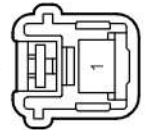


AL6
Yellow

 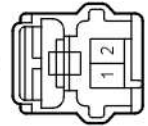


AL7
Black


AL8
White


Wire and Wire in Instrument Panel <RHD>

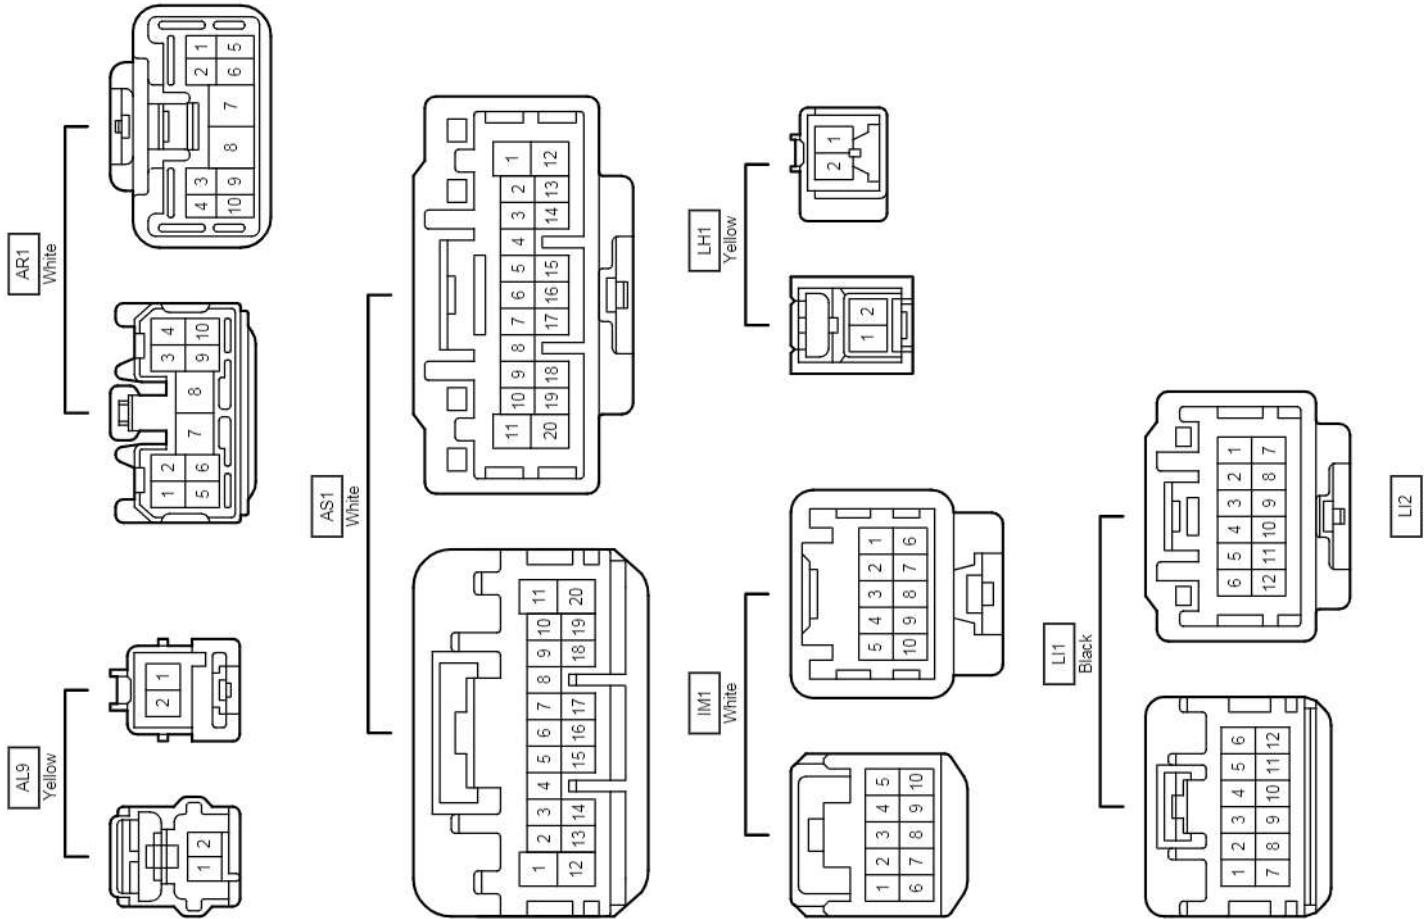


cardiagn.com

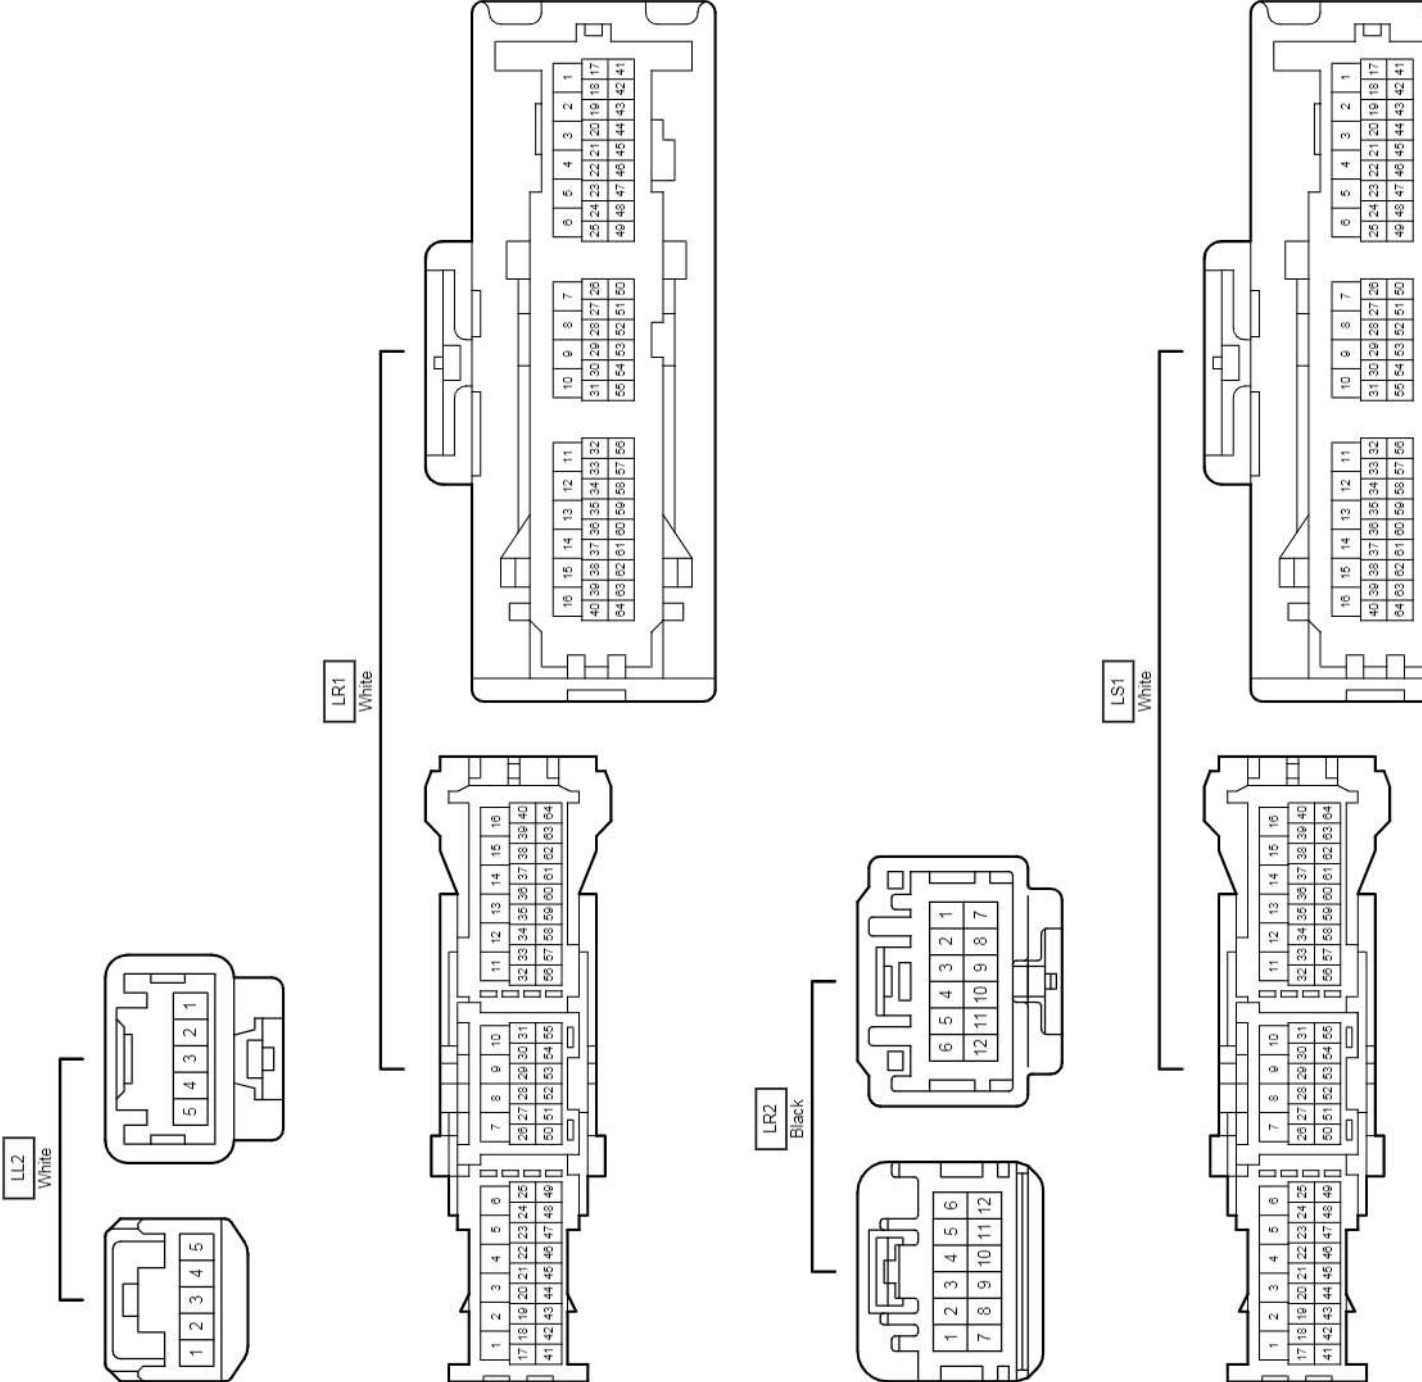

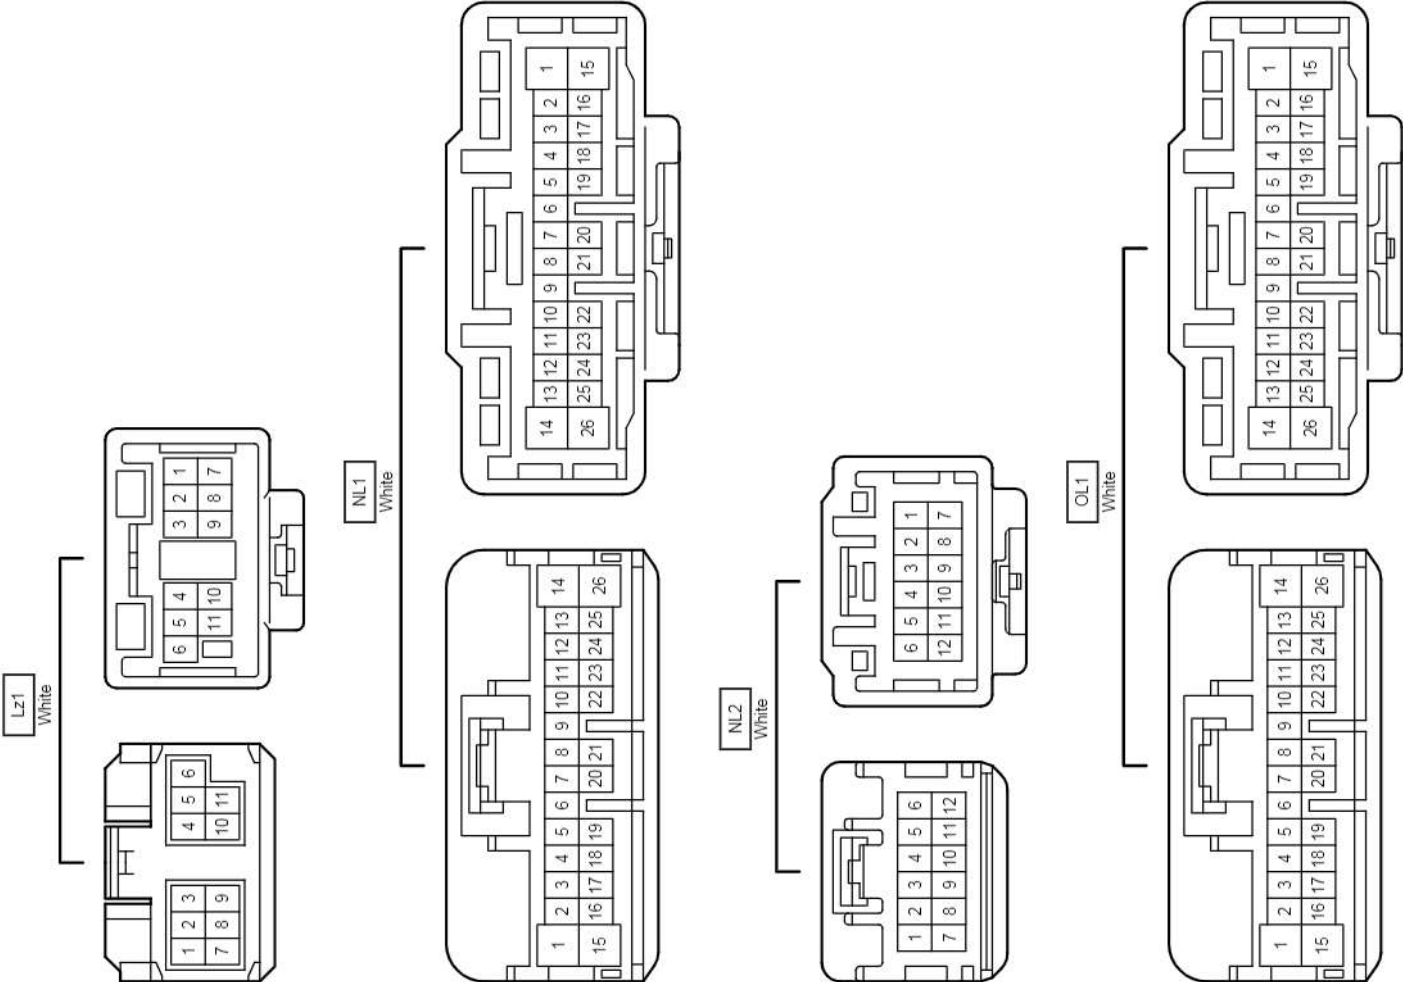

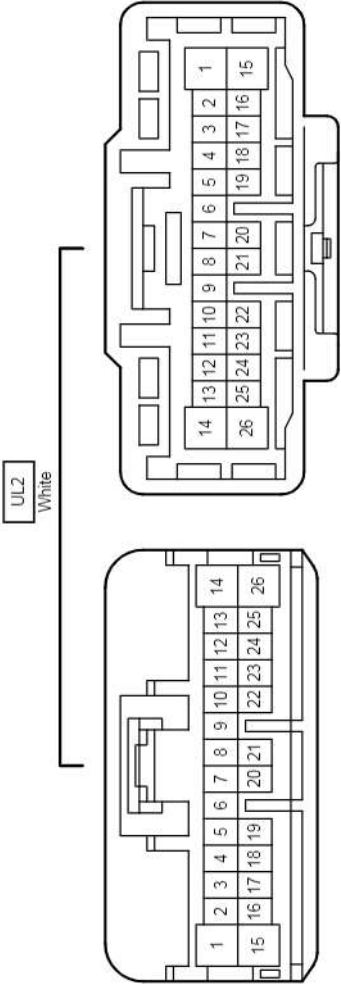










Position of Parts in Seat <LHD>

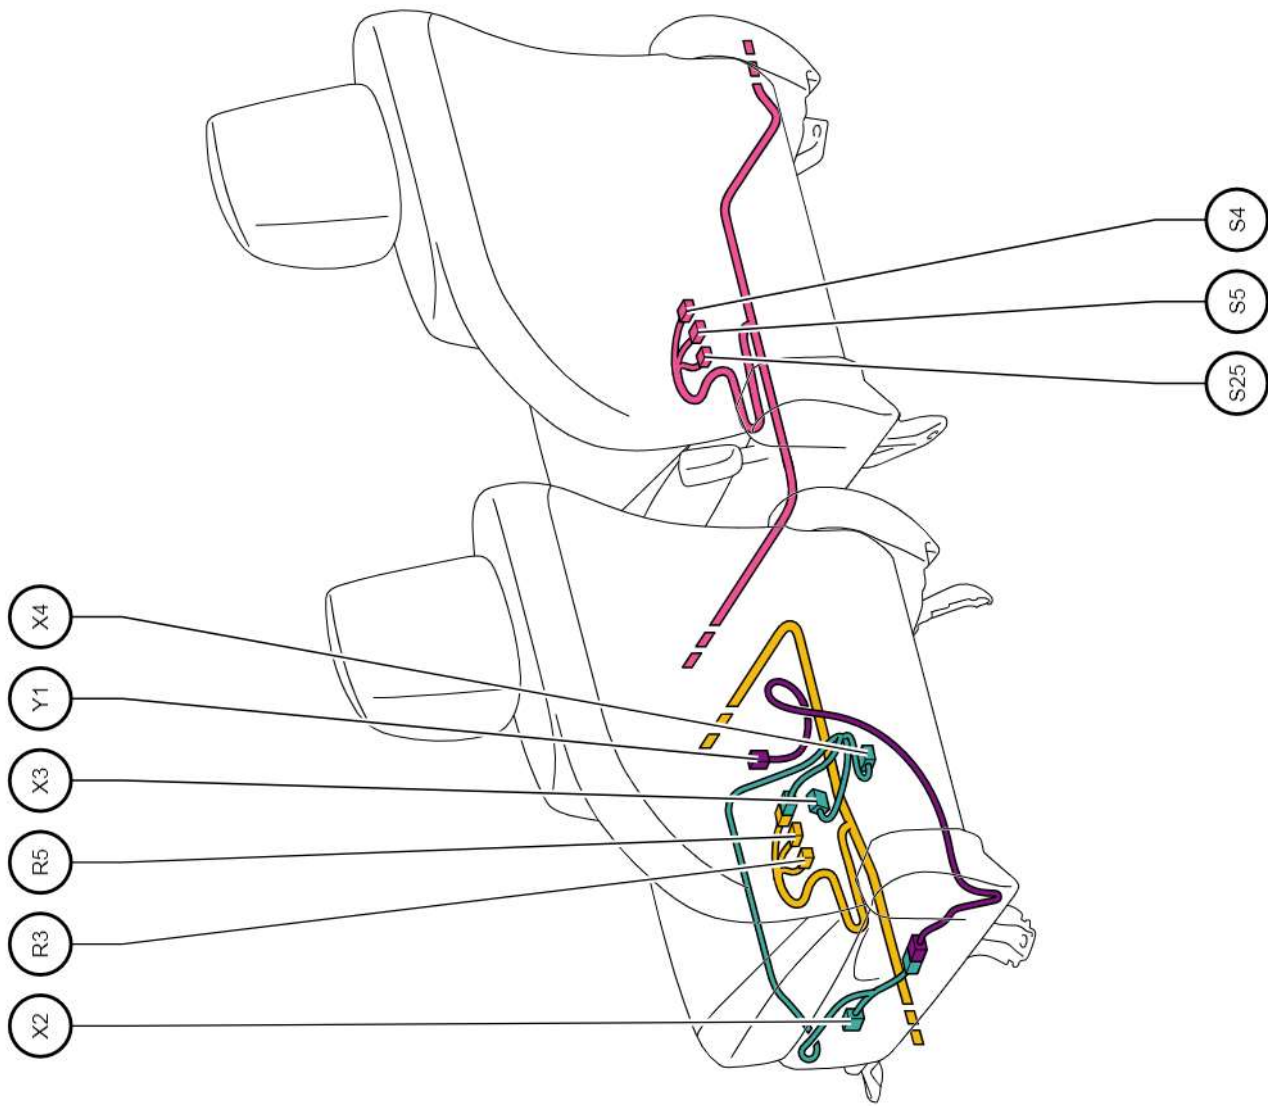



Position of Parts in Seat <LHD>

R	3	Side Airbag Squib Circuit LH
R	5	Front Seat Inner Belt Assembly LH
S	4	Side Airbag Squib Circuit RH
S	5	Front Seat Inner Belt Assembly RH
S	25	Seat Heater Control Sub-Assembly RH
X	2	Lumbar Support Switch LH (Power Seat Switch LH)
X	3	Seat Heater Control Sub-Assembly LH
X	4	Junction Connector
Y	1	Front Lumbar Support Motor Assembly RH

  
Position of Parts in Seat <LHD>

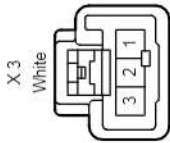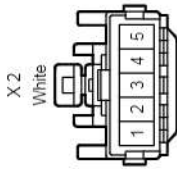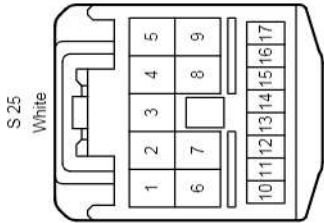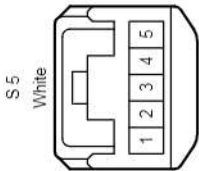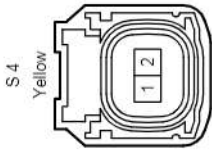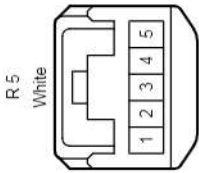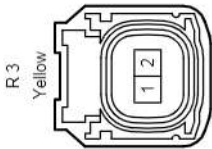

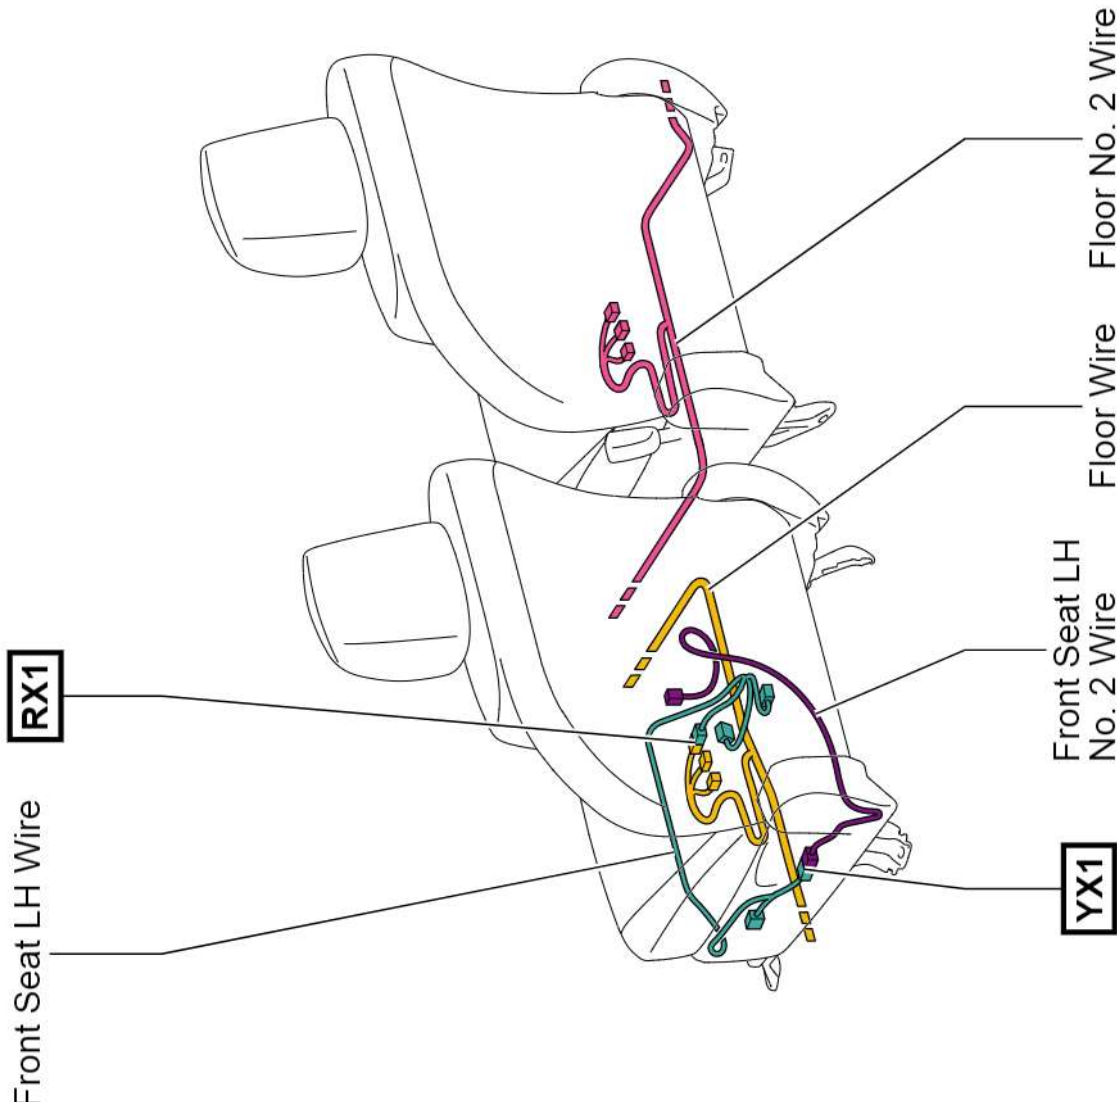

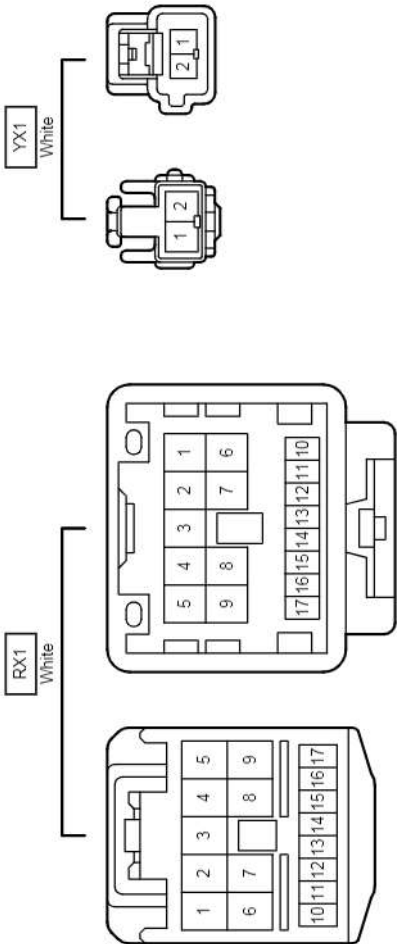


















Position of Parts in Seat <RHD>

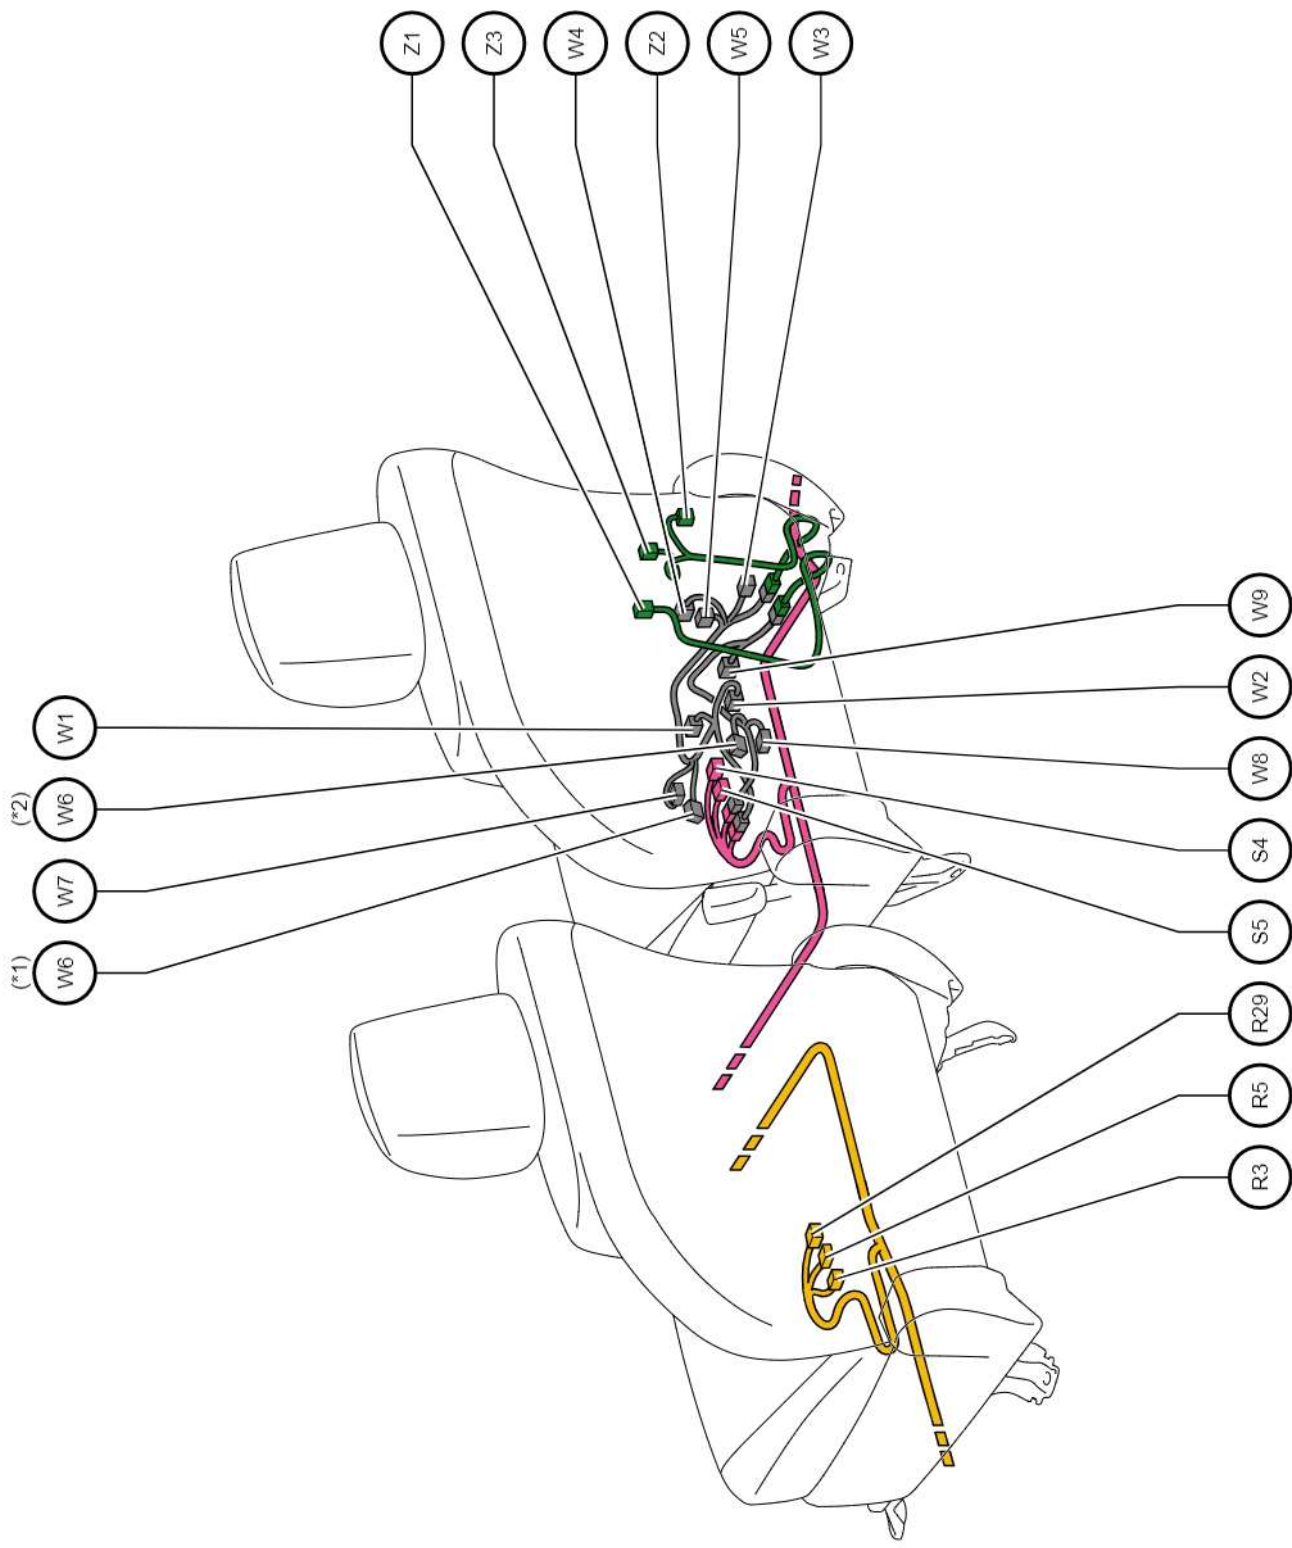


* 1: Australia
* 2: Europe

R	3	Side Airbag Squib Circuit LH
R	5	Front Seat Inner Belt Assembly LH
R	29	Seat Heater Control Sub-Assembly LH
S	4	Side Airbag Squib Circuit RH
S	5	Front Seat Inner Belt Assembly RH
W	1	Front Power Seat Slide Position Motor Assembly RH
W	2	Front Power Seat Vertical Position Motor Assembly RH
W	3	Front Power Seat Lift Position Motor Assembly RH
W	4	Front Power Seat Switch RH
W	5	Lumbar Support Switch RH (Power Seat Switch RH)
W	6	Seat Heater Control Sub-Assembly RH
W	7	Junction Connector
W	8	Junction Connector
W	9	Lumbar Support Switch RH (Power Seat Switch RH)
Z	1	Front Lumbar Support Motor Assembly RH
Z	2	Front Power Seat Reclining Position Motor Assembly RH
Z	3	Front Lumbar Support Motor Assembly RH

       Position of Parts in Seat <RHD>

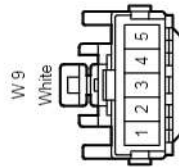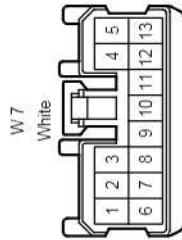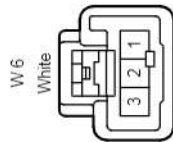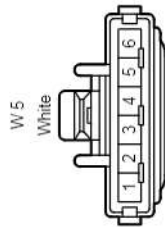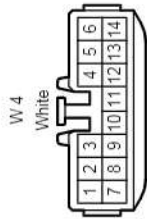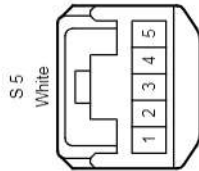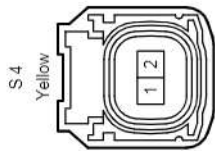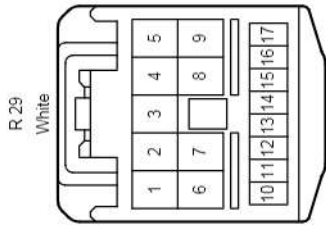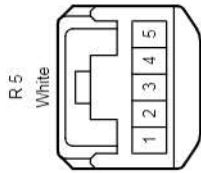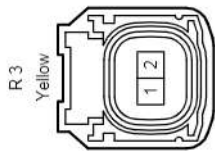

- * 1:Australia
- * 2:Europe

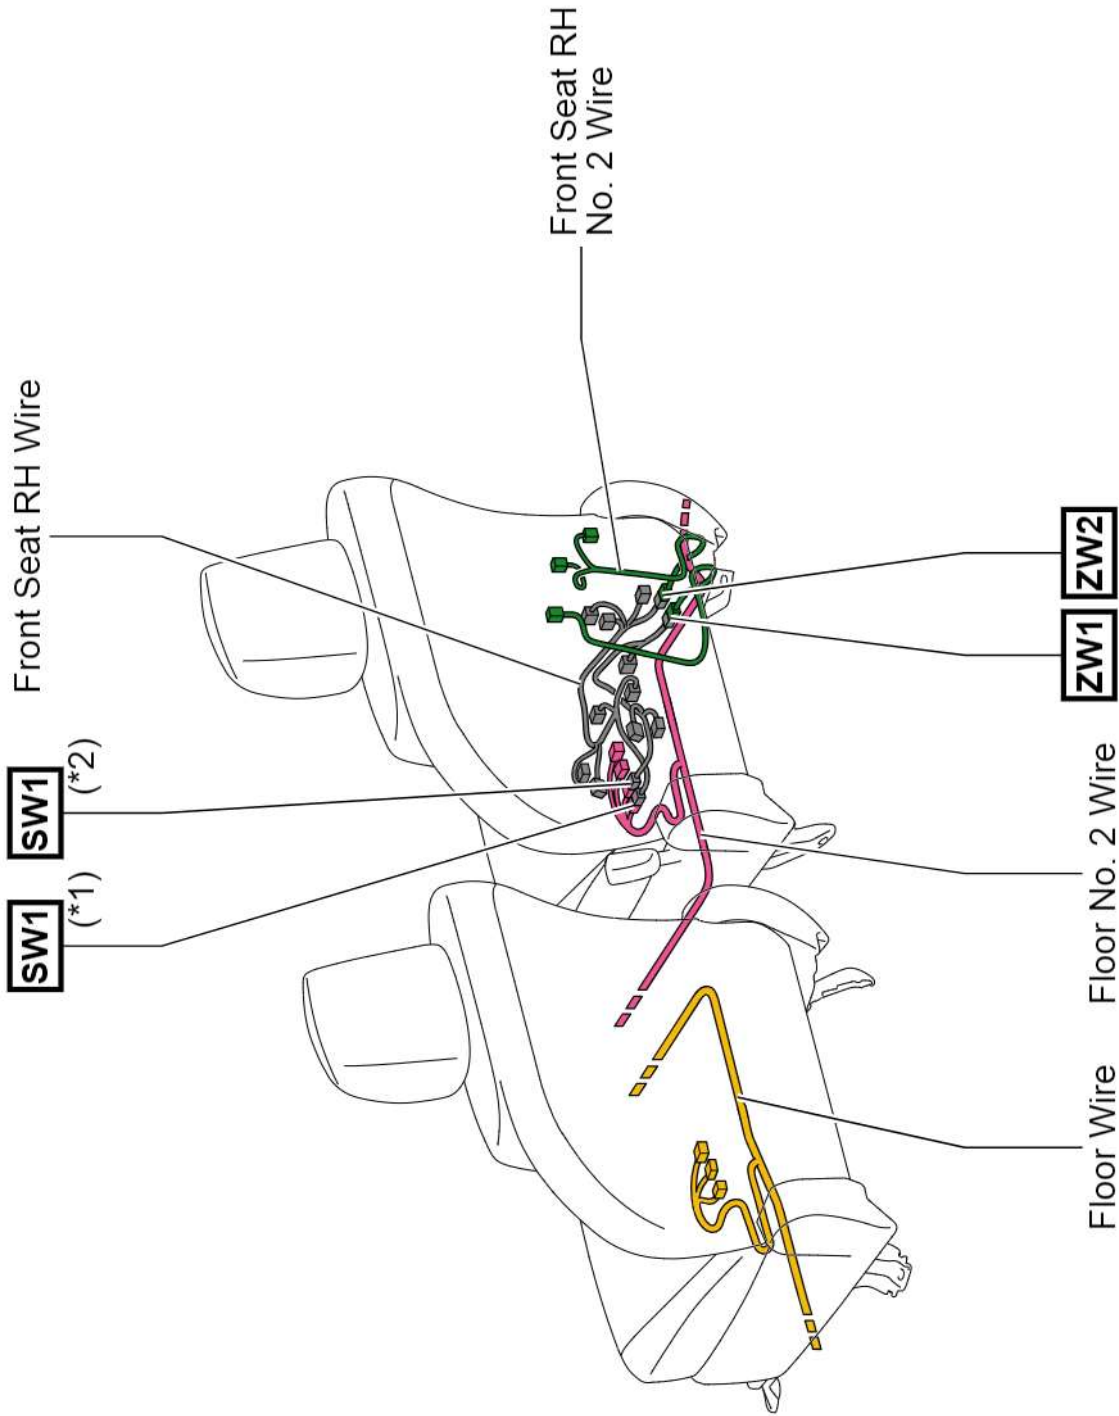

Wire and Wire in Seat <RHD>

