 


Dodge Durango 2004 – 2009 fuse box diagram

Passenger Compartment Fuse Box

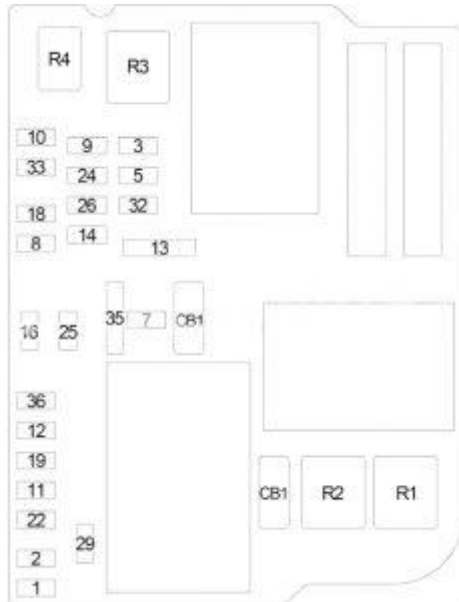

Dodge Durango – fuse box diagram – passenger

compartment


No.	A	Circuit Protected
1	–	–
2	10	Power Mirror
3	20	Power Outlet – Instrument Panel
4	–	–
5	–	–
6	–	–
7	25	Radio Amplifier

8	10	Mirror Switch, Mirror Memory Module
9	20	Cluster
10	15	Cluster
11	10	Satellite Receiver, Monitor/DVD Media System
12	25	Radio
13	15	A/C Heater Control (Automatic A/C)
14	15	Electronic Overhead Module, Data Link Connector, Hands-Free Module, Sentry Key Remote Entry Module, Air Conditioner Compressor Clutch Relay, Fuel Pump Relay, Powertrain Control Module
15	–	–
16	10	Occupant Classification Module, Occupant Restraint Controller Module, Passenger Airbag On/Off Indicator Lamp
17	–	–
18	10	Sentry Key Remote Entry Module, Integrate Power Module, Air Conditioner Compressor Clutch Relay, Fuel Pump Relay, Powertrain Control Module
19	10	Cluster, Transfer Case Selector Switch, Driver/Passenger Heated Seat Switch, Inside Rearview Mirror, Infrared Sensor
20	–	–
21	–	–

22	–	–
23	–	–
24	10	A/C Heater Control (Manual A/C), Rear A /C Heater Control (Automatic A/C), Rear Blower Motor Relay, Rear Window Defogger Relay
25	10	Occupant Restraint Controller Module
26	10	ABS, Stop Lamp Inhibit (Traction Control), Steering Angle Sensor (Traction Control), Dynamics Sensor (Traction Control)
27	–	–
28	–	–
29	–	–
30	–	–
31	–	–
32	10	'03-'04: Starter Relay, Powertrain ControlModule, Cluster
33	10	Occupant Classification Module
36	10	Powertrain Control Module, Cluster
35	20	Power Outlet – Console, Rear Power Outlet
Circuit Breaker		

CB 1	25	Sunroof Motor, Power Window
CB 2	–	–
Relay		
R1	Rear Window Defogger	
R2	Rear Blower Motor	
R3	Accessory	
R4	–	

 Integrated Power Module

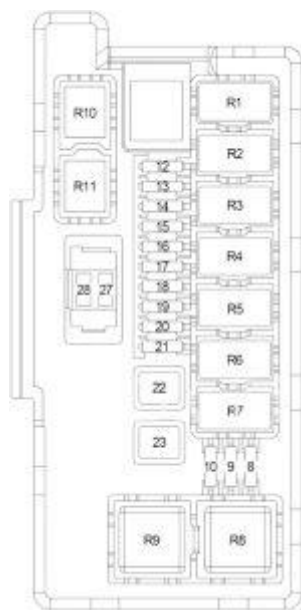


Dodge Durango – fuse box diagram – integrated power module

No.	A	Circuit Protected
8	10	Left Front Park/Turn Lamp, Left Front Marker Side Lamp, Left Tail/Stop/Turn Lamp, License Lamp

9	10	Trailer Tow Connector
10	10	Right Front Park/Turn Lamp, Right Front Marker Side Lamp, Right Tail/Stop/Turn Lamp
12	20	Front Control Module
13	20	Front Control Module
14	20	Adjustable Pedals Relay
15	20	Fog Lamp Relay
16	20	Horn Relay
17	20	Wiper Rear Relay
18	20	Front Control Module
19	20	'05-'09: Left Trailer Tow Relay (Trailer Tow Brake Lamp Relay Control, Trailer Connector)
	15	'03-'04: Left Trailer Tow Relay (Trailer Tow Brake Lamp Relay Control, Trailer Connector)
20	20	Front Control Module
21	20	'05-'09: Right Trailer Tow Relay (Trailer Tow Brake Lamp Relay Control, Trailer Connector)
	15	'03-'04: Right Trailer Tow Relay (Trailer Tow Brake Lamp Relay Control, Trailer Connector)
22	30	Front Control Module

23	40	Radiator Fan (High) Relay, Radiator Fan (Low) Relay
27	30	Front Control Module, Fuse (Passenger Compartment): "11", "12"
28	30	Fuse (Passenger Compartment): "13", "14"
Relay		
R1	Wiper On/Off	
R2	Wiper High/Low	
R3	Horn	
R4	Wiper Rear	
R5	Left Trailer Tow	
R6	Right Trailer Tow	
R7	Park Lamp	
R8	Radiator Fan (High)	
R9	Radiator Fan (Low)	
R10	Fog Lamp	
R11	Adjustable Pedals	

 Engine Compartment Fuse Box

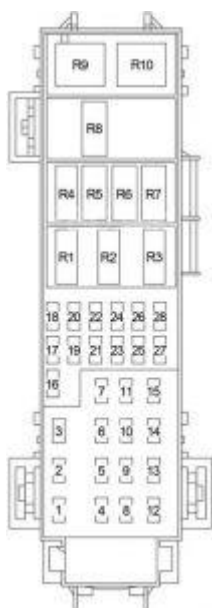

Dodge Durango – fuse box diagram – engine compartment

No.	A	Circuit Protected
1	30	Starter Relay, Ignition Switch (Fuse (Passenger Compartment): “16”, “18”, “19”, “32”, “34”; (Engine Compartment): “16”), Run/Start Relay
2	30	Integrate Power Module (Wiper High/Low Relay, Wiper On/Off Relay)
3	40	Brake Provision Module
4	30	Ignition Switch (Fuse (Passenger Compartment): “25”), Sunroof Motor, Fuse (Passenger Compartment): “35”
5	40	’05-’09: Driver/Passenger Seat Switch, Heated Seat Module, Seat Memory Module
	50	’03-’04: Driver/Passenger Seat Switch, Heated Seat Module, Seat Memory Module
6	20	Ignition Switch (Fuse (Passenger Compartment): “24”, “25”, “26”)
7	40	Front Blower Motor Relay, Run/Remote Relay

8	40	Accessory Relay (Circuit Breaker, Fuse (Passenger Compartment): "3")
9	–	–
10	30	Automatic Shut Down Relay (Powertrain Control Module, ASD Relay, Ignition Coil, Fuel Injector, Ignition Capacitor)
11	40	'05-'09: Liftgate Power Module
12	40	Rear Window Defogger Relay (Fuse (Passenger Compartment): "2"), Shift Motor/Mode Sensor Assembly
13	30	Rear Blower Motor Relay
14	40	ABS
15	50	Fuse (Passenger Compartment): "7", "8", "9", "10", "33"
16	10	'05-'09: Starter Relay, Cluster, Powertrain Control Module, Front Control Module
17	–	–
18	20	Fuel Pump Relay
19	20	Transmission Control Relay
20	–	–
21	20	ABS
22	20	Powertrain Control Module

23	20	Trailer Tow Connector
24	15	Air Conditioner Compressor Clutch Relay
25	15	Stop Lamp Switch
26	–	–
27	10	Ignition Switch (Instrument Cluster)
28	–	–
Relay		
R1	'05-'09: Run/Start	
R2	'05-'09: Run/Remote	
R3	–	
R4	Starter	
R5	Transmission Control	
R6	Air Conditioner Compressor Clutch	
R7	Fuel Pump	
R8	'05-'09: Stop Lamp Inhibit (Traction Control)	

R9	Front Blower Motor
R10	Automatic Shut Down