


Pontiac Boneville 1993 fuse box diagram

Left Side Fuse Panel

The main fuse panel is located to the left of the steering wheel, under the instrument panel.

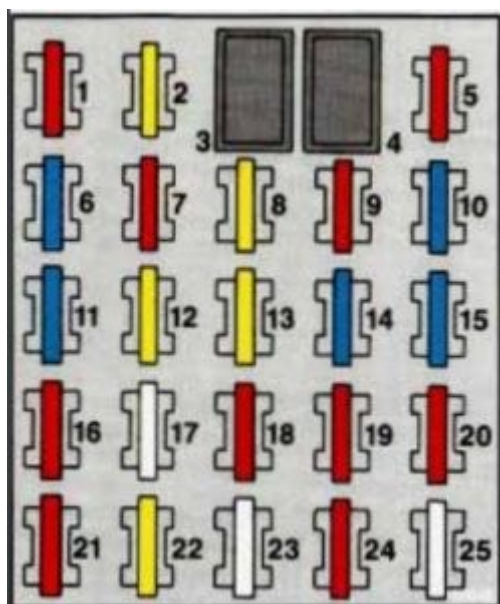


Pontiac Boneville – fuse box – left side

Fuse	Ampere rating [A]	Usage
1	10	Start-up Signal-SIR
2	20	Trunk Release/Back-Up Lights/Brake-Shift Interlock (with Retained Accessory Power Option)
3	30	Breaker-Power Window/Sunroof
4	30	Breaker-Power Accessor
5	10	Heated Mirror/Compass
6	15	IgnitiodRetained Accessory Power/Illuminated EntryKeyless Entry
7	10	Supplemental Inflatable Restraint (Air Bag)
8	20	Cornering Lights/Turn Signals/(Back-Up Lights/Trunk Release/Brake-Shift Interlock without Retained Accessory Power Option)
9	10	Spare
10	15	Spare
11	15	Battery/Radio/Instrument Panel/Oil Level
12	20	Electronic Level Control
13	20	Brake/Hazard Warning Flashers
14	15	Parking Lights
15	15	Courtesy Lights/Power Mirrors

16	10	Cooling Fan/Transaxl
17	10	Air Conditioning
18	—	Blank
19	10	Anti-Lock Brake System
20	10	Low Coolant/Light Monitor/Oil Level/HUD/Compas
21	10	Instrument Panel Lighting
22	20	Spare
23	25	Spare
24	10	IgnitiodRadio
25	25	WipedWasher

Right Side Fuse Panel

Additional fuses are located in the relay center, on the far right side, below the instrument panel.

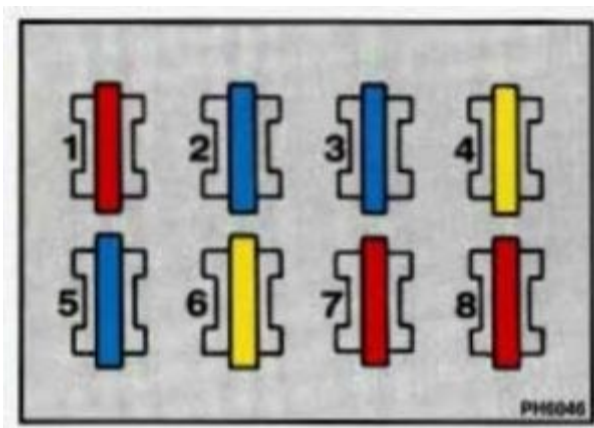

Pontiac Boneville – fuse box – right side

Fuse	Ampere rating [A]	Usage
1	10	A/C Programmer
2	15	Fog Lamps
3	15	Power Antenna/Door Locks
4	20	Horns
5	15	Engine Relays and Miscellaneous Engine Content
6	20	Fuel Pump
7	10	Fuel Injector
8	10	Powertrain Control Module PASS-Key