



Mercury Villager 1993 – 1998 fuse box diagram

Fuse box in instrument panel

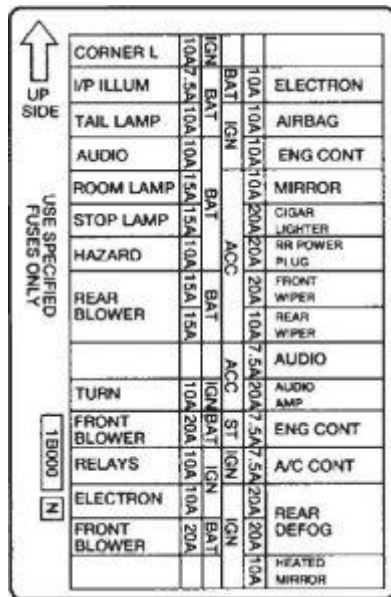

Mercury Villager – fuse box diagram – instrument panel

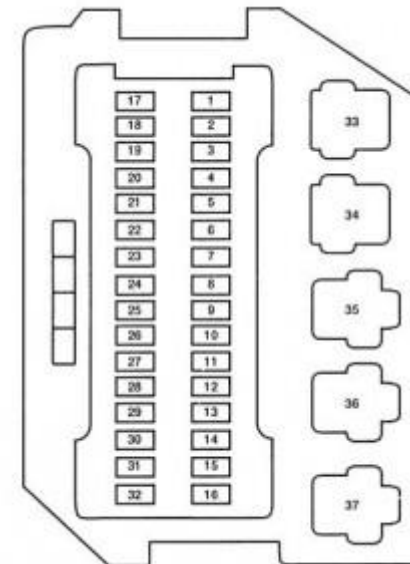

Mercury

Villager First Generation – fuse box – instrument panel

Nº	Fuse	A	Description
1	Open	—	Not Used

2	Electron	10	A/C (Air Conditioning), Timer Module
3	Airbag	10	Air Bag
4	Engine Cont	10	Engine Emissions, Evaporative Emissions, Powertrain Control Module (PCM)
5	Mirror	10	Power Mirror, Timer Module
6	Cigar Lighter	20	Cigar Lighter
7	Rear Power Plug	20	Rear Power Plug
8	Front Wiper	20	Front Windshield Wiper/Washer


9	Rear Wiper	10	Rear Window Wiper/Washer
10	Audio	7.5	Radio, Power Antenna, Rear Integrated Control Panel (RICP)
11	Audio Amp	20	Subwoofer Amplifier
12	Electron	7.5	Powertrain Control Module (PCM)
13	A/C Cont	7.5	A/C, Auto Light, Rear Defrost Switch
14	Rear Defog	20	Rear Defrost
15	Rear Defog	20	Rear Defrost
16	Heated Mirror	10	Heated Power Outside Side View Mirrors

17	Corner L	10	Cornering Lamp
18	I/P Ilum	7.5	Instrument Illumination, Radio Illumination
19	Tail Lamp	10	Tail Lamp, Rear Parking Lights
20	Audio	10	CD, Power Antenna, Radio
21	Room Lamp	15	Dome Lamps, Step Lamps, Warning Chime
22	Stop Lamp	15	Shift-Lock Solenoid, Stoplamps
23	Hazard	10	Hazard Flasher
24	Rear Blower	15	Rear Blower Motor

25	Rear Blower	15	Rear Blower Motor
26	Open	—	Not Used
27	Turn	10	Turn Signal Lamps
28	Front Blower	20	Front Blower Motor
29	Relays	10	Relays in Main Fuse Junction Panel
30	Electron	10	Anti-lock Brakes (ABS), Backup Lamps, Overdrive Off Lamp, PRND Switch
31	Front Blower	20	Front Blower Motor
32	Open	—	Not Used

Relay		
33	Accessory #1	Fuses 17,18,19
34	Ignition	Fuses 26, 27, 29, 30
35	Accessory #2	Fuses 5, 6, 7,8,9
36	Rear Defrost	Fuses 14,15,16
37	Blower	Fuses 28, 31

Engine compartment main fuse panel

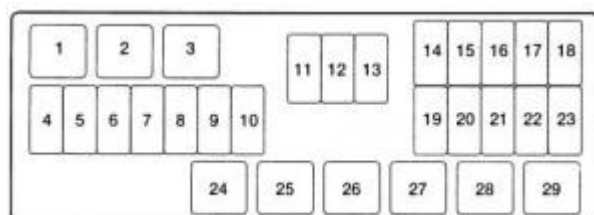

Mercury Villager First Generation – fuse box – engine compartment

Nº	Fuse	A	Description
4	POWER WINDOW	30	Power Seat, Power Window, Sun Roof
5	ABS	30	Anti-lock Brake Control Module
6	RAD FAN	65	Cooling Fan
7	FRONT BLOWER	65	Front Blower Motor
8	MAIN	100	Hazard Lamps, Interior Illumination, Radio, Stoplamps, Transmission Control Module
9	ALT	120	Mini Fuse Portion of Main Fuse Junction Panel
10	RRDEF	45	Heated Mirrors, Heated Rear Window, Rear Blower Motor

11	IGNSW	30	Ignition Switch
12	OPEN	—	Not Used
13	OPEN	—	Not Used
14	H/LRH	15	Right-Hand Headlamp
15	H/LLH	15	Left-Hand Headlamp
16	ALT	10	Alternator Input
17	ENG CONT	10	Powertrain Control Module (PCM) Relay
18	INJ	10	Fuel Injectors
19	FUEL PUMP	15	Fuel Pump Relay

20	HORN	15	Horn Relay
21	ABS	20	Anti-lock Brake Hydraulic Actuator
22	HOODLAMP/ TRLRTOW	—	Hood Lamp/Trailer Tow
23	S.E.C.	7.5	Keyless Entry Beeper, Timer Module
Relay			
1	RAD FAN LO	Cooling Fan (Low Speed)	
2	RADFAN HI 1	Cooling Fan (Medium Speed)	
3	RADFAN HI 2	Cooling Fan (High Speed)	
24	HORN	High Horn, Low Horn	

25	FUEL PUMP	Fuel Pump
26	INHIBIT	Starter Motor
27	HEADLAMP RH	Right-Hand Headlamp
28	BULB CHECK	Brake Warning Lamp, Charge Warning Lamp
29	ASCD HOLD	Speed Control Module

Relay box



Mercury Villager First Generation – relay box

Nº	Description
1	Antitheft (Interrupt) (If equipped)

2	Headlamp LH
3	Blank
4	FICD
5	Auto Light Headlamp/Antitheft Headlamp
6	Air Conditioner