


Buick Century 1998 fuse box diagram

Instrument Panel Fuse Block

The fuse panel is located inside the glove box, on the left side.

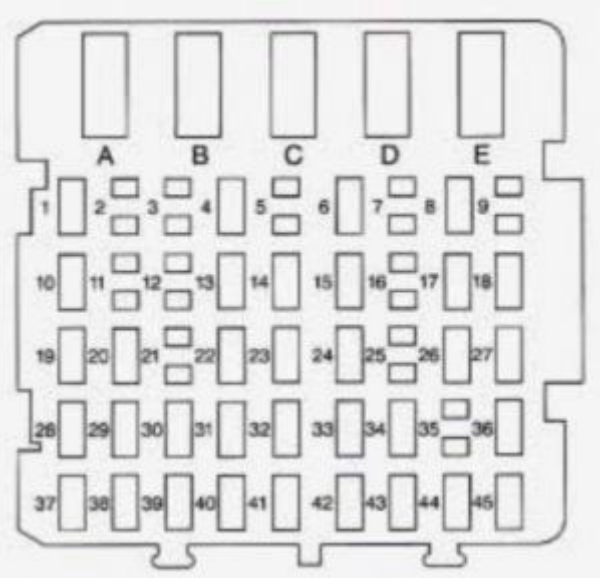

Buick Century – fuse box diagram – instrument


panel

Circuit Breaker	Usage
A	—
B	Power Windows/Sunroof
C	Rear Defog
D	Power Seats

Fuse	Usage
1	—
4	Ignition Signal — Hot in Run and Start — PCM, BCM U/H Relay
6	Power Mirrors
8	Panel Dimming
10	Ignition Signal — Hot in Run, Unlock and Start — Cluster, Powertrain Control Module, Body Control Module
13	DRL Module
14	Interior Lamps
15	Door Locks
17	Taillamps, License Lamp
18	Radio
19	Heated Mirror
20	Cruise Control
22	Clusters

23	Cigarette Lighter — Auxiliary Power Connection (Power Drop), Data Link
24	Stoplamps
26	Parking Lamps
27	Auxiliary Power Connection (Power Drop) — Hot in ACC and RUN
28	Crank Signal — Body Control Module, Cluster, Powertrain Control Modules
29	Ignition Signal — HVAC Control Head
30	Brake Transmission Shift Interlock (BTSI)
31	Air Bag
32	Anti-lock Brake Controls, Body Control Module
33	Hazard Flashers
34	—
36	Ignition Signal — Hot in ACC and Run — Body Control Module
37	Anti-lock Brake Solenoids
38	Low Blower
39	Anti-lock Brakes
40	Turn Signals
41	Radio, HVAC Head, Remote Keyless Entry, Cluster
42	High Blower
43	—
44	Audio Steering Wheel Controls
45	Wipers

Underhood Electrical Center — Passenger's Side

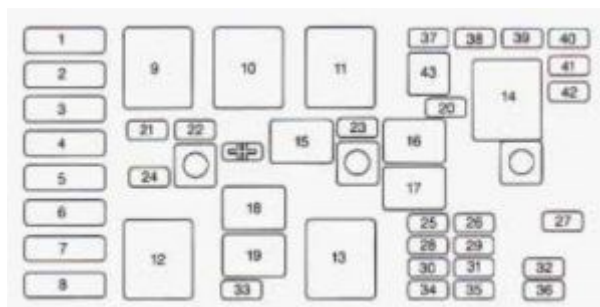

Buick Century – fuse box diagram – engine

compartment

Fuse	Usage
1	Cooling Fan
2	Starter Solenoid
3	Power Seats, Rear Defog
4	High Blower, Hazard Flasher, Stoplamps, Power Mirror, Door Locks
5	Ignition Switch, BTSI, Stoplamps, ABS, Turn Signals, Cluster, Air Bag, DRL Module
6	Cooling Fan
7	Interior Lamps, Retained Accessory Power, ABS, Keyless Entry, Data Link, HVAC Head, Cluster, Radio, AUX Power (Power Drop), Cigarette Lighter

8	Ignition Switch, Wipers, Radio, Steering Wheel Controls, Body Control Module, AUX Power (Power Drop), Power Windows, Sunroof, HVAC Controls, DRL, Rear Defog Relay
---	--

Relay	Usage
9	Cooling Fan 2
10	Cooling Fan 3
11	Starter Solenoid
12	Cooling Fan 1
13	Ignition Main
14	—
15	A/C Clutch
16	Horn
17	—
18	—
19	Fuel Pump

Fuse	Usage
20	—
21	Generator
22	ECM
23	A/C Compressor Clutch
24	—
25	Electronic Ignition
26	Transaxle
27	Horn
28	Fuel Injector
29	Oxygen Sensor
30	Engine Emissions
31	—
32	Headlamp (Right)
33	Rear Compartment Release
34	Parking Lamps
35	Fuel Pump
36	Headlamp (Left)
37	Spare
38	Spare
39	Spare

40	Spare
41	Spare
42	Spare
43	Fuse Puller
SYMBOL	A/C Commessor Clutch Diode