

G80

DIS NAVIGATION SYSTEM / QUICK REFERENCE GUIDE

G80

ENGLISH

FRANÇAIS

ESPAÑOL

KOREAN



GENESIS

GENESIS BRANDED VEHICLE OWNER PRIVACY POLICY

Your Genesis Branded Vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Genesis Branded Vehicle has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect use and share this information.

You may read our Vehicle Owner Privacy Policy on the [genesismotorsusa.com](https://www.genesismotorsusa.com/privacy-policy.html) website at:
<https://www.genesismotorsusa.com/privacy-policy.html>

If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Genesis Customer Care at:

Genesis Customer Care
PO Box 20850
Fountain Valley, CA 92728
844-340-9741
customercare@genesismotorsusa.com

Genesis Customer Care representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English).

For Genesis Customer Care assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

Thank you for purchasing this DIS Navigation system.

This user's manual explains how to use the GENESIS DIS Navigation system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.



 
All Map Database cannot be copied without permission.

Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without Hyundai MnSoft, Inc's prior written consent.

Precautions for Safety

Notations used within this User's Manual

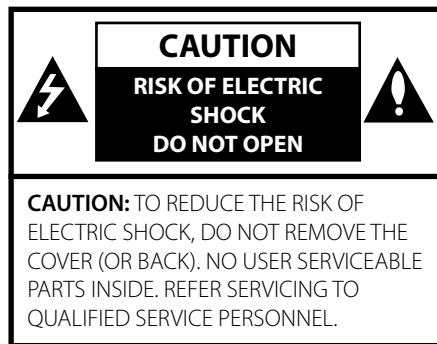

The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving and always be fully aware of all driving conditions. Do not change settings or any functions.

Pull over in a safe and legal manner before attempting such operations.

To promote safety, certain functions are disabled unless the parking brake is on.



To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



When driving your vehicle, be sure to keep the volume of the unit low enough to allow you to hear sounds coming from the outside.



 
Do not drop it and avoid heavy impacts at anytime.



The driver should not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.

Precautions for Safety

CAUTION:



This product uses a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

WARNING:

- Don't use a cellular phone when you are driving. You must stop at a safe place to use a cellular phone.
- The use of the navigation radio by no means relieves the driver of his/her responsibilities. The highway code must always be observed. Always observe the current traffic situation.
- The applicable traffic regulations and the prevailing traffic situation always take precedence over the instructions issued by the navigation system if they contradict one another.
- For traffic safety reasons, use the navigation system menus only before starting a journey or when the vehicle is stationary.
- In certain areas, one-way streets and turn off and entry prohibitions (e.g. pedestrian zones) are not recorded. In areas such as these the navigation system will issue a warning. Pay particular attention to one-way streets and turn off and entry restrictions.
- The navigation system does not take the relative safety of the suggested routes into consideration. Road blocks, building sites, height or weight restrictions, traffic or weather conditions or other influences which affect the route safety or travel time are not taken into consideration for the suggested routes. Use your own discretion in order to decide on the suitability of the suggested routes.
- The current legal road traffic speed limit always takes priority over the values saved on the data. It is impossible to provide an assurance that the speed values of the navigation system will always match those of the current traffic regulations in every situation.
- Always observe the applicable legal speed limits the traffic regulations. The vehicle speedometer must always be given priority for display of the vehicle speed.
- Do not rely exclusively on the navigation system when attempting to locate an emergency service (hospital, fire service etc.). It cannot be guaranteed that all available emergency services in your vicinity are saved in the database. Use your own discretion and abilities to secure help in such situations.

Precautions for Safety

CAUTION:

- Do not keep the navigation system running with the engine stopped. Doing so may discharge the vehicle battery. When you use the navigation system, always keep the engine running.
- When the driver wants to operate the navigation system, first park the vehicle in a safe location and set the parking brake. Operating the system while driving can distract the driver and may result in a serious accident.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.
- Some states/provinces may have laws limiting the use of video screens while driving. Use the system only where it is legal to do so.
- Do not use your phone in private mode when you are driving. You must stop at a safe location to use it.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer (or party responsible) for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Warning

"This device complies with Industry Canada licence-exempt RSS standard(s)."

Operation is subject to the following conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Table of Contents

Precautions for Safety 4

Notations used within this User's Manual . . . 4

FCC Warning 6

IC Warning 6

Table of Contents 7

Name of Each Component 11

Head unit. 11

Driver Information System (DIS) Control
(USA Only) 13

Driver Information System (DIS) Control
(CANADA Only) 14

Steering wheel remote control 15

Radio Operation (FM/AM) 16

Listening to FM/AM radio. 16

Listening to HD Radio™ Stations
(USA Only) 16

HD Radio screen 16

HD Radio™ Reception On/Off

(USA Only) 17

Tag (USA Only) 17

Radio Operation (SiriusXM™) 18

SiriusXM™ screen 18

Listening to SiriusXM™ radio 19

Selecting SiriusXM™ broadcast channel . . 19

Selecting a channel through manual

search 19

Selecting with channel up/down 19

Selecting a channel through preset 19

Selecting channel through channel/
category list 19

Audio CD/MP3 CD Operation 20

Playing an Audio CD/MP3 CD 20

Pause 20

Skip 20

Search 20

Seek 21

List 21

Shuffle 21

Repeat 22

Scan 22

DVD/VCD Operation 23

Playing a DVD/VCD 23

Switching to Menu display or Full

Screen Display 23

Pause 23

Skip 23

Search 24

Seek 24

Jukebox Operation 25

Playing Jukebox Music 25

Pause 25

Skip 25

Search 25

Seek 25

Cover Flow View 25

List 26

Shuffle 26

Scan 26

Repeat 26

Playing Jukebox Video 27

Switching to Menu display or Full

Screen Display 27

Pause 27

Skip 27

Search 27

Seek 27

List 27

Shuffle 27

Repeat 27

Viewing Jukebox Image 28

Switching to Menu display or Full

Screen Display 28

Skip 28

Zoom in/out 28

Table of Contents

Slideshow	29
List	29
Slideshow Settings	29

USB Operation 30

Playing USB Music	30
Pause	30
Skip	30
Search	30
Seek	30
Cover Flow View	30
List	31
Shuffle	31
Repeat	31
Hide Current File	31
Copying the USB music file to Jukebox ..	31
Scan	31

Playing USB Video 32

Switching to Menu display or Full	
Screen Display	32
Pause	32
Skip	32
Search	32
Seek	32
List	33
Shuffle	33
Repeat	33
Copying the USB video file to Jukebox ..	33

Viewing USB Image	34
Switching to Menu display or Full	
Screen Display	34
Skip	34
Zoom in/out	34
Slideshow	34
List	34
Slideshow Settings	34
Copying the USB image file to Jukebox ..	34

iPod® Operation 35

Playing iPod®	35
Pause	35
Skip	35
Search	35
Seek	35
List	35
Shuffle	35
Repeat	35
Scan	35

Auxiliary Device Operation 36

Playing an AUX source	36
-----------------------------	----

Bluetooth® Audio 37

Playing Bluetooth® Audio	37
Before playing the Bluetooth® Audio	37
Starting the Bluetooth® Audio	37
Pause	37
Skip	37
Shuffle	37
Repeat	37

Getting Started with Navigation 38

Operating Navigation Screen	38
Map screen	38

Searching for Destination of Navigation 41

Search	41
Address Search	42
Previous Destinations	43
Address Book	43
Adding to Address Book	44
Deleting Address Book	44
Editing Address Book	44
POI	45
Searching for POI by category	45
Searching for POI by phone number	45
Emergency	45
Online Search (USA Only)	46

Table of Contents

Intersection	46
Freeway Exit / Enter	46
Coordinates	47
Home / Work	47
Registering Home or Work	47
Finding your Home or Work	47

Using the Route Menu 48

Route menu overview	48
Cancel Route	48
Route Options	48
Edit Route	49
Route Info / Avoid	50
Route Overview	50
Route Preview	50

Bluetooth® Wireless Technology 51

Before Using the Bluetooth Handsfree	51
What is Bluetooth Wireless Technology?...	51
Precautions for Safe Driving	51
Cautions upon Connecting Bluetooth Phone	51

Pairing and connecting the unit and a

Bluetooth phone	51
When no phones have been paired	52
When a phone is already paired	53

Change Device	54
Disconnecting the connected phone	54

Deleting Bluetooth Devices	54
Making a call by entering phone number .	55
Making a call by redialing	55
Making a call with speed dial numbers . . .	55
Answering/Rejecting a call	55
Responding with messages	56
Switching call to the mobile phone	56
Ending a call	56
Using the menu during a phone call	56
Call history	57
Making a call from call history	57
Downloading call history	57
Contacts	57
Downloading mobile phone contacts	58
Searching for contacts	58
Favorites	58
Calling Favorites	58
Editing Favorites	59
Deleting Favorites	59
Messages	59
Checking new messages	59
Checking new message contents	60

Voice Recognition System 61

What is voice recognition?	61
Voice recognition features by language . . .	61
Operating voice command	61
Condition for voice command system	61
Starting voice recognition	61

Skipping prompt messages	62
Re-starting voice recognition	62
Ending voice recognition	62
Adjusting voice recognition volume	62
Voice recognition quick start (Manual Control)	62
About voice command "Help"	62

Siri® 63

Operating Siri® command	63
What is Siri®?	63
Starting Siri®	63
Re-starting Siri®	63
Ending Siri®	63
Adjusting Siri® volume	63

SiriusXM™ Data 64

About SiriusXM™ Data	64
Accessing SiriusXM™ Data	64
SiriusXM™ Weather Information (USA Only)	64
Current weather information (USA Only)	64
Weather forecast (USA Only)	64
Weather information in other region (USA Only)	65
Weather information at ski resorts (USA Only)	65

Table of Contents

Searching for other region or ski resort (USA Only).....	66
Favorites (USA Only).....	66
Weather & Security Alerts (USA Only)...	67
Weather Map (USA Only).....	68
SiriusXM Traffic Information.	68
SiriusXM™ Fuel Prices Information (USA Only)	68
Finding gas station (USA Only).....	68
Searching for gas station (USA Only)....	69
Favorites (USA Only).....	69
SiriusXM™ Stocks Information.	71
Favorites.....	71
SiriusXM™ Sports Information	72
Favorites.....	73
SiriusXM™ Movie Times Information (USA Only)	74
Finding theater by searching for movie (USA Only).....	74
Viewing movie list by searching for theater (USA Only).....	75
Favorites (USA Only).....	76
 Android Auto/Apple CarPlay 77	
What is Android Auto/Apple CarPlay?. . . .	77
Cautions	77
Using Android Auto or Apple CarPlay	78
NOTICE.....	78
NOTICE-Android Auto	78

NOTICE-Apple CarPlay	78
----------------------------	----


Connected Services (USA Only)79

Before using Connected Services	79
What is Connected Services?	79
What Is Telematics?	79
About Transmission and Reception of Radio Waves.....	79
Using the Rear View Mirror Key	79
Connected Services Safety and Security . .	80
Auto Crash Notification.....	80
SOS	80
Stolen Vehicle Recovery.....	80
Vehicle Slowdown.....	80
Vehicle Immobilization	80
Getting Started with Connected Services . .	81
Driving Info	81
Send to Car with Google	82
Vehicle Diagnostics.	82
Apps	83
Download Center	83
Apps Settings.....	84
Connected Settings	85
Modem Information	85
Wi-Fi Settings.....	85
Service Activation	87

Name of Each Component

Head unit

The image of this product may be different from the actual product.

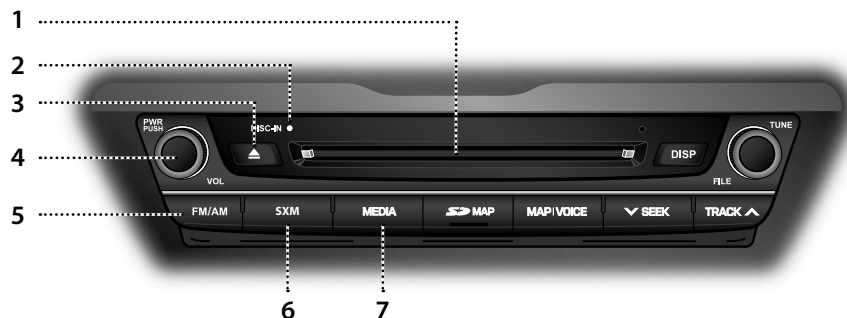 

1. Disc slot

Insert a disc into the disc slot.

2. DISC IN indicator light (DISC-IN)

When a disc is inserted, the indicator is illuminated.

3. Disc eject (▲) button

Press to insert or eject disc

4. • PWR PUSH button

- Power on
Press this button in power OFF status.
- Power off
Press and hold this button in power ON status.

• Volume control knob (VOL)

Turn left/right to control volume.

• AV on/off button

Press this button to turn AV on or off in power on status.

5. FM/AM Button

Selects the FM/AM band.

 
6. SXM Button

Selects the SiriusXM band.

7. MEDIA button

Press this button to move to the [Media] menu in media playing screen. Press this button again to display the media playing screen.

Name of Each Component

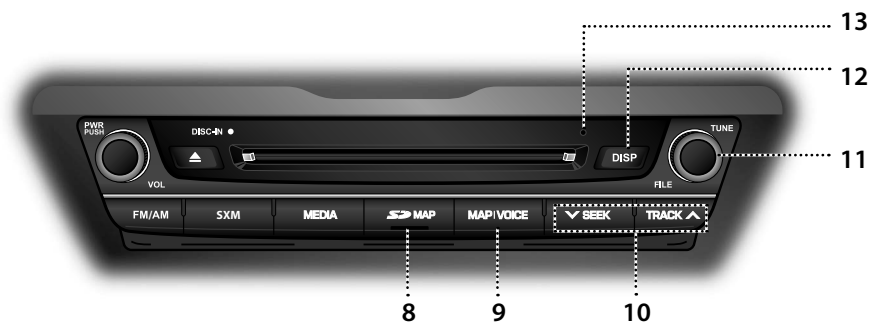

8. SD map card slot

Insert the SD card into the slot.

9. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.

10. V SEEK/TRACK ^ button

- When pressed momentarily (less than 0.8 sec.)
 - FM/AM/SiriusXM mode: plays previous/next station.
 - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
 - FM/AM/SiriusXM mode: changes the station until the button is released.
 - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

11. TUNE/FILE button

- FM/AM/SiriusXM mode: Turn to change the station.
- CD/DVD/VCD/Jukebox/USB/iPod mode: Turn to search for the desired track, file or chapter.

12. DISP button

- Press to turn the screen on or off.
- Press and hold to move to the [Display] menu screen.


13. RESET hole

Press to reset the unit.

Name of Each Component

Driver Information System (DIS) Control (USA Only)

The image of this product may be different from the actual product.

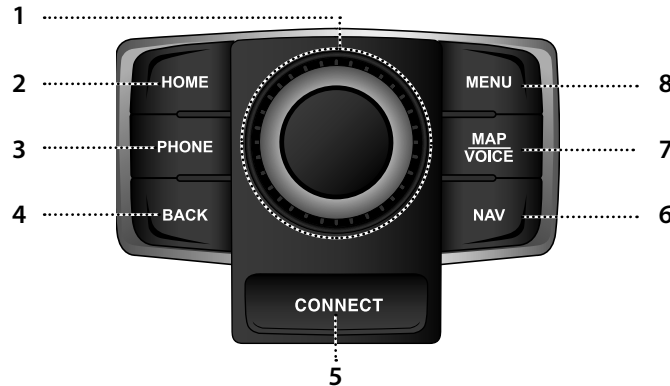 

1. Controller

Tap or rotate to navigate through the menu screens.

2. HOME button

Press to move to the [HOME] menu screen.

3. PHONE button

Press to move to the Phone menu screen.

4. BACK button

Press to move to the previous screen.

5. CONNECT button

Press to move to the [Connected Services] menu screen.

6. NAV button

Press to move to the [Navigation] menu screen.

7. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.


8. MENU button

Press to move to the pop-up menu in each mode.

Name of Each Component

Driver Information System (DIS) Control (CANADA Only)

The image of this product may be different from the actual product.

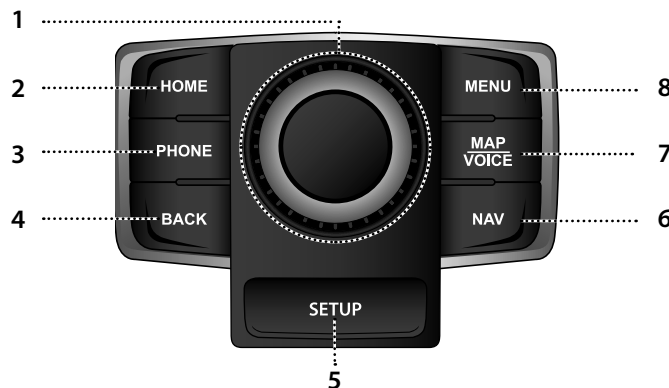 

1. Controller

Tap or rotate to navigate through the menu screens.

2. HOME button

Press to move to the [HOME] menu screen.

3. PHONE button

Press to move to the Phone menu screen.

4. BACK button

Press to move to the previous screen.

5. SETUP button

Press to move to the [Setup] menu screen.

6. NAV button

Press to move to the [Navigation] menu screen.

7. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.


8. MENU button

Press to move to the pop-up menu in each mode.

Name of Each Component

Steering wheel remote control

The image of this product may be different from the actual product.

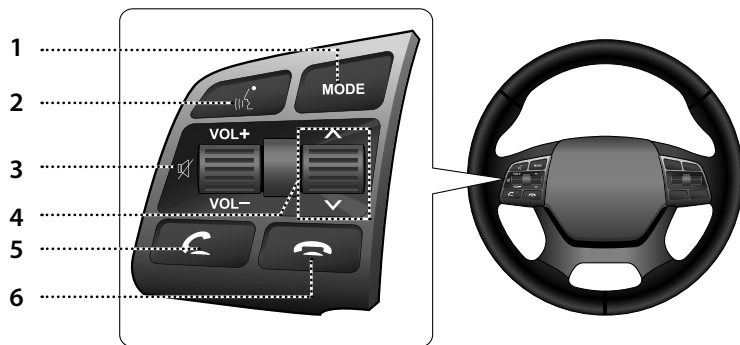 

1. MODE button

- Each time this button is pressed, the mode is changed. You can select the accessible media manually from [Steering Mode button] menu. Only active/available media can be accessed.
- If no media or disc is inserted, the mode will be skipped.
- Press and hold the button (over 0.8 seconds) to turn the AV on/off.
- When power is off, press the button to turn power back on.

2. button

- Press the button (under 0.8 seconds) to activate voice recognition mode.
- Press and hold the button (over 0.8 seconds) to cancel voice recognition.
- Press and hold the button (over 0.8 seconds) to activate or end the Siri function if an iPhone is paired to the system.

3. Volume (VOL+/VOL-) button

Increases or decreases the volume level.

button

Press to mute the sound.

4. Seek up/down (Λ/V) button

- When pressed momentarily (less than 0.8 sec.)
 - FM/AM/SiriusXM mode: plays previous/next preset station.
 - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
 - FM/AM/SiriusXM mode: changes the station until the button is released.
 - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

5. button

Press to operate Bluetooth Hands-Free function.

- Press to accept a call.
- Press to make a call from last calls.
- Press and hold for redialing.

6. button

Press to hang up a call.

Radio Operation (FM/AM)

Listening to FM/AM radio

1. Press [FM/AM] on the head unit. Or press [HOME] > [FM/AM].
2. Press [FM] or [AM] on the screen.

The FM/AM screen of the most recent listened station is displayed.



3. Auto tuning:

Press [V SEEK/TRACK ▲] on the head unit.
- When a station is received, searching stops.

Manual tuning:

Turn [TUNE/FILE] on the head unit in clockwise or counter-clockwise direction.
- The stations move up and down step by step.

Preset tuning:

From the 12 presets, select the station you want to listen to.



 
Listening to HD Radio™ Stations (USA Only)

The HD Radio function is not supported for vehicles purchased in Canada.

You can turn HD Radio reception on from the menu and listen to HD Radio Broadcasts.

The HD Radio screen is displayed only when a HD Radio broadcast is being received.

HD Radio screen

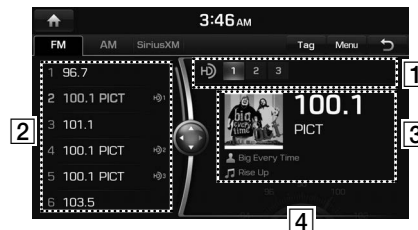

1 HD Radio Reception & Channel buttons

Displays main HD Radio channels and used to directly select the currently available local channels.



Radio Operation (FM/AM)

② HD Channel Number

- HD Channel number saved in preset.
- Preset tuning: From the 12 presets, select the HD Channel you want to listen to.

③ Broadcast Information

Displays detailed information about the current broadcast. (Album Cover Art, Artist name, Song title, HD Radio channel, Frequency, PTY, etc...)

④ Frequency controller

When controller is focused, it moves to center of screen. Turn the controller to search for frequency and move the red line.

! Note

HD Radio reception is included when the vehicle is in Radio mode. Methods used to reorder between channels, save preset stations, or other methods of searching frequencies used for standard radios are identical for HD Radio receivers. The HD Radio icon will be displayed when the vehicle is within regions where HD Radio signals can be received.

HD Radio™ Reception On/Off (USA Only)

1. Select the band (FM, AM) you want.

If an HD Radio broadcast is received, the radio mode will switch from analog broadcast to HD Radio broadcast.



Press [Menu] > [HD Radio] on the screen.

The HD Radio receiver will be off and switch to analog broadcast.

! Note

- The default setting of [HD Radio] is set to on.
- HD Radio Technology is a digital radio technology used by FM and AM radio stations to transmit audio and data via a digital signal in conjunction with their analog signals.
- While listening to the radio, the HD Radio icon will become displayed if receiving an HD Radio broadcast.

Tag (USA Only)

If the HD Radio broadcast includes Tag information, then the tag information is displayed on the screen.

1. Press [Tag] on the HD Radio screen.

 


! Note

When HD Radio reception is off, the [Tag] button is deactivated.

Radio Operation (SiriusXM™)

SiriusXM™ screen

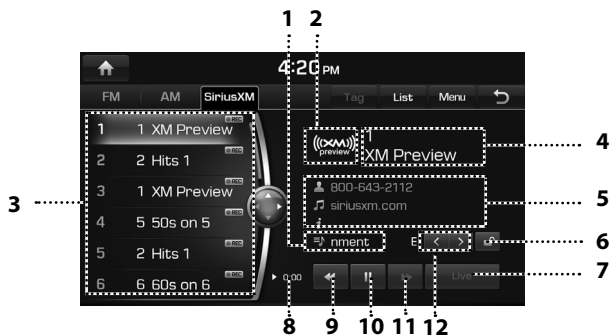

1. Category Info

Displays the category currently playing.

2. Channel Logo

Displays the logo of the channel currently playing.

3. Preset list

Displays the channels saved in the Preset list.

Smart Favorites (REC)

SXM supports 6 smart favorites. It is buffered 1 hour for the currently tuned channel (Instant Replay) and at least 1/2 hour for each of the 6 smart favorites.

4. Channel Info

Displays the current channel number and name.

5. Contents Info

Displays the artist, title and other information about the song currently playing.

6. (Category Lock)

If the Category Lock is Off, you can change or search all channels. If the Category Lock is On, you can change or search only the channels of the currently active category.

7. Live

Changes to the Live Broadcast mode.

8. 0:00 (Time difference)

Displays the time difference between the song playing and the Live broadcast.

9. ◀◀

Repeats the previously broadcasted program.

- When it is pressed shortly (less than 0.8 sec.): Moves to the previous item.
- When it is pressed and held (0.8 sec. or longer): Searches backwards until the button is released.

10. ▶/|| (Play/Pause)

Plays/Pauses the currently broadcasting program.

11. ▶▶

- When it is pressed shortly (less than 0.8 sec.): Moves to the next item.
- When it is pressed and held (0.8 sec. or longer): Searches forward until the button is released.

12. ◀ / ▶ (Category Selection Buttons)

This feature is used to select the Previous/Next category.

Radio Operation (SiriusXM™)

Listening to SiriusXM™ radio

1. Press [SXM] on the head unit. Or press [HOME] > [SiriusXM].

The SiriusXM radio screen of the most recent listened channel will be displayed.



2. Select the desired broadcast channel.
For more details, Refer to "Selecting SiriusXM broadcast channel".

Selecting SiriusXM™ broadcast channel

Selecting a channel through manual search

Turn [TUNE/FILE] on the head unit clockwise or counter-clockwise to display the previous or next channel information.

Selecting with channel up/down

Press [V SEEK/TRACK Δ] on the head unit.

- The previous or next channel will be selected.

Selecting a channel through preset

Press the preset button of the desired channel.



Selecting channel through channel/category list

1. Press [List] on the screen.
Or press [Menu] > [Channel List].



2. Select the desired category and channel.
Press [Menu] > [Now Listening] to return to the current playing channel.
Press [Menu] > [Featured Favorites] to move to the [Featured Favorites] menu.
If you want to skip a channel, press [Menu] > [Skip]. After press the channel to skip, press [↵] to confirm your selection.

Note

The channel list may be different according to the region.

Audio CD/MP3 CD Operation

Playing an Audio CD/MP3 CD

Insert a disc into the disc slot and playback will start automatically.



Audio CD



MP3 CD

! Note

To play the Audio CD or MP3 CD while a different source is playing, press [HOME] > [Media] > [CD] or [MP3 Disc].

Pause

Press [II] on screen or with the controller.
Press [▶] on screen or with the controller to play it again.

Skip

You can play the previous or next track/file.

Position	Description
Screen	- Press [◀◀/▶▶]. - Pressing [◀◀] after 3 seconds of playback time plays the current track/file from the beginning.
Head unit	- Press [V SEEK/TRACK ▲]. - Pressing [V SEEK] after 3 seconds of playback time plays the current track/file from the beginning.
Controller	- Push the controller left or right. - Push the controller left after 3 seconds of playback time plays the current track/file from the beginning.

Search

You can rewind/fast forward to a specific point of a track/file.

Position	Description
Screen	Press and hold [◀◀◀/▶▶▶] and then release at the point you want.
Head unit	Press and hold [V SEEK/TRACK ▲] and then release at the point you want.
Controller	Push and hold the controller left or right and then release at the point you want.

Audio CD/MP3 CD Operation

Seek


You can play the track/file directly by searching for the desired music.

Position	Description
Head unit	Turn [TUNE/FILE] to search for a desired track/file. If the desired track/file is displayed, press the [TUNE/FILE] to play the track/file.
Controller	Turn the controller to search for a desired track/file. If the desired track/file is displayed, press the controller to play the track/file.

List

You can play the desired track/file by searching the track/file list included in the disc.

 1. Press [List].
Or press [Menu] > [List].

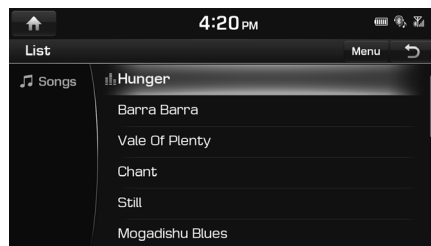

For example: Audio CD

- Press [Menu] > [Now Playing] to move to the current playing screen.
2. Press the desired track/file.

Shuffle

All tracks/files can be played randomly. Press [Menu] > [Shuffle].



For example: Audio CD

Note

You can set or cancel the Shuffle function by pressing [Shuffle] on the playing screen.

Audio CD/MP3 CD Operation

Repeat

The current playing track/file or folder is played repeatedly.

1. Press [Menu] > [Repeat].



For example: MP3 CD

2. Press the desired item.
 - [Repeat All]: Repeats all tracks/files.
 - [Repeat Folder]: Repeats all files within the current folder. (MP3 CD Only)
 - [Repeat One]: Repeats the current track/file.

! Note

 
You can change the Repeat function by pressing [↺]/[↻]/[↻] on the playing screen.

↺: Repeat All, ↻: Repeat Folder (MP3 CD Only), ↻: Repeat One

Scan

This function scans the beginning of each track/file for 10 seconds.

1. Press [Menu] > [Scan].

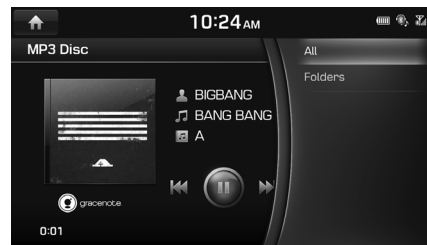


For example: MP3 CD

2. Press the desired item.

CD	Menu	Description
Audio CD	-	Scans the beginning of each track for 10 seconds.
MP3 CD	All	Scans the beginning of each file for 10 seconds.
	Folders	Scans the beginning of all files within the current folder for 10 seconds.

 3. Press [■] to cancel the Scan function.

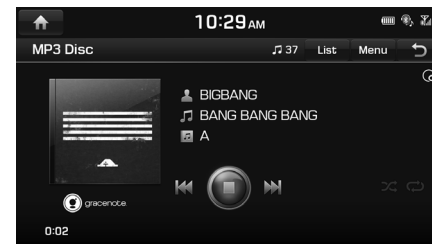

DVD/VCD Operation

Playing a DVD/VCD

Insert a disc into the disc slot, with the label facing up.

Playback will start automatically. In some cases, the disc menu might appear.

Note

- To play the DVD or VCD while a different source is playing, press [HOME] > [Media] > [DVD] or [VCD].
- If a menu screen is displayed, select the desired option by using the controller.
- Video is not available while driving. (Because of traffic regulations, video is only available while the vehicle is stopped.)

Not Available while Driving.
Please try again after parking the vehicle.

Switching to Menu display or Full Screen Display

Position	Description
Screen	Press the screen.
Controller	Push the controller up or down on full screen display mode.

Note

Press [Menu] > [Full Screen Display] or wait 5 seconds to display full screen mode.

Pause

Press [II] on screen or with the controller.

Press [▶] on screen or with the controller to play it again.

Skip

You can play the previous or next chapter/track.

Position	Description
Screen	• Press [◀◀/▶▶]. • Pressing [◀◀] after 3 seconds of playback time plays the current chapter/track from the beginning.
Head unit	• Press [V SEEK/TRACK ▲]. • Pressing [V SEEK] after 3 seconds of playback time plays the current chapter/track from the beginning.
Controller	• Push the controller left or right. • Push the controller left after 3 seconds of playback time plays the current chapter/track from the beginning.

DVD/VCD Operation

Search

You can rewind/fast forward to a specific point of a chapter/track.

Position	Description
Screen	Press and hold [⏮ / ⏭] and then release at the point you want.
Head unit	Press and hold [▼ SEEK/TRACK ▲] and then release at the point you want.
Controller	Push and hold the controller left or right and then release at the point you want.

Seek

You can play the chapter/track directly by searching for the desired chapter/track.

Position	Description
Head unit	Turn [TUNE/FILE] to search for a desired chapter/track. If the desired chapter/track is displayed, press the [TUNE/FILE] to play the chapter/track.
Controller	Turn the controller to search for a desired chapter/track. If the desired chapter/track is displayed, press the controller to play the chapter/track.

Jukebox Operation

 
Playing Jukebox Music

You can play music files saved in Jukebox.

If there is no music file in Jukebox, copy the desired music file to Jukebox. For more details, refer to “Copying the USB music file to Jukebox” on page 31.

1. Press [HOME] > [Media].
2. Press [Jukebox Music].

Jukebox music automatically plays.

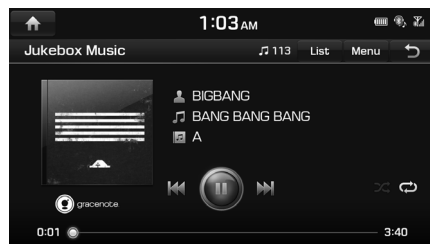

! Note

If there are no songs, Jukebox music won't be available in [Media] menu screen.

Pause

You can pause the playing file.

For more details, refer to “Pause” on page 20.

Skip

You can play the previous or next file.

For more details, refer to “Skip” on page 20.

Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to “Search” on page 20.

Seek

 
You can play the file directly by searching for the desired file.

For more details, refer to “Seek” on page 21.

Cover Flow View

You can search and select the cover flow in Jukebox.

1. Press [Menu] > [Cover Flow View].

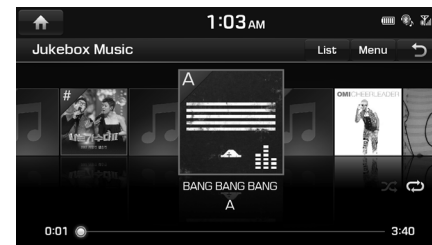


2. Press the desired album.
 - Press [Menu] > [View Default Player] to move to the current playing screen.
 - Press [Menu] > [List] to move to the list menu.
 - Press [Menu] > [Shuffle] to set the Shuffle function.
 - Press [Menu] > [Repeat] to set the Repeat function.
 - Press [Menu] > [Scan] to set the Scan function.
 - Press [Menu] > [Sound Settings] to set the sound.

Jukebox Operation

List

You can play the desired file by searching the file list included in Jukebox.

 1. Press [List].
Or press [Menu] > [List].

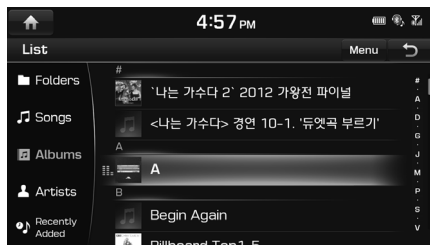

For example: Jukebox music screen

2. Select the desired file.
 - Press [Menu] > [Now Playing] to move to the current playing screen.
 - Press [Menu] > [Delete] to delete the desired file.
 - Press [Menu] > [Clear Jukebox] to delete all files and playlists in Jukebox.
 - Press [Menu] > [View Capacity] to check the storage capacity saved in Jukebox.

Shuffle

All files can be played randomly.

For more details, refer to "Shuffle" on page 21.

Scan

 
This function scans the beginning of each file for 10 seconds.

For more details, refer to MP3 CD operation of "Scan" on page 22.

Repeat

The current playing file is played repeatedly.

1. Press [Menu] > [Repeat].

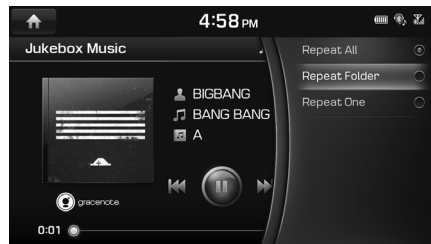

2. Press the desired item.

- [Repeat All]: Repeats all files. Displayed as [Repeat Album] or [Repeat Artist] during playback from the [Albums] or [Artists] category.
- [Repeat Folder]: Repeats all files within current folder.
- [Repeat One]: Repeats the current file.

Note

You can change the Repeat function by pressing [Repeat All]/[Repeat Album]/[Repeat Artist]/[Repeat One] on the playing screen.

- [Repeat All]: Repeat All
- [Repeat Album/Repeat Artist]: Repeat Album/Repeat Artist (It is displayed when all files repeat during playback from the [Albums] or [Artists] category.)
- [Repeat Folder]: Repeat Folder
- [Repeat One]: Repeat One

Jukebox Operation

Playing Jukebox Video

You can play the video files saved in Jukebox.

If there is no video file in Jukebox, copy the desired video to Jukebox. For more details, refer to “Copying the USB video file to Jukebox” on page 33.

1. Press [HOME] > [Media].
2. Press [Jukebox Video].

The Jukebox Video is played.

Note

- If there are no videos, Jukebox Video won't be available in the [Media] menu screen.
- Video is not available while driving. (Because of traffic regulations, video is only available while the vehicle is stopped.)

Not Available while Driving.
Please try again after parking the vehicle.

Switching to Menu display or Full Screen Display

Position	Description
Screen	Press the screen.
Controller	Push the controller up or down on full screen display mode.

Note

Press [Menu] > [Full Screen Display] or wait 5 seconds to display full screen mode.

Pause

You can pause the playing file.

For more details, refer to “Pause” on page 20.

Skip

You can play the previous or next file.

For more details, refer to “Skip” on page 20.

Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to “Search” on page 20.

Seek

You can play the file directly by searching for the desired file.

For more details, refer to “Seek” on page 21.

List

You can play the desired file by searching the file list included in Jukebox.

For more details, refer to “List” on page 26.

Shuffle

All files can be played randomly.

For more details, refer to “Shuffle” on page 21.

Repeat

The current playing file is played repeatedly.

For more details, refer to “Repeat” on page 26.

Jukebox Operation

Viewing Jukebox Image

You can view the image files saved in Jukebox.

 
If there is no image file in Jukebox, copy the desired image to Jukebox. For more details, refer to “Copying the USB image file to Jukebox” on page 34.

- 1. Press [HOME] > [Media].
- 2. Press [Jukebox Image].

The Jukebox Image is viewed.

! Note

- If there are no images, Jukebox image won't be available in the [Media] menu screen.
- Image is not available while driving.
(Based on the traffic regulation, Image is only available whenever vehicle is in stop condition with parking gear.)



Switching to Menu display or Full Screen Display

Position	Description
Screen	Press the screen.
Controller	Push the controller up or down on full screen display mode.

! Note

Press [Menu] > [Full Screen Display] or wait 5 seconds to display full screen mode.

Skip

You can view the previous or next image.

Position	Description
Screen	Press [◀◀/▶▶].
Controller	Push the controller left or right.

Zoom in/out

- 1. Turn the controller left or right.

 


- 2. Push the controller up, down, left or right to move the image.

Jukebox Operation

Slideshow

1. Press [Menu] > [Slideshow].

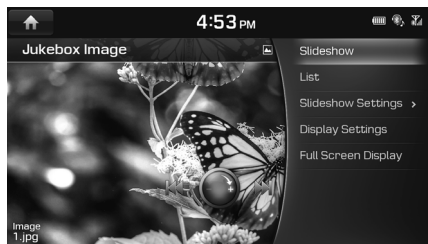


The slideshow is played.

2. Press the controller to stop the slideshow.

List

You can view the desired image by searching the image list included in Jukebox.

 1. Press [List].
Or press [Menu] > [List].

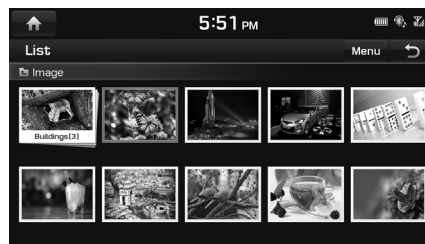


2. Press the desired image.
 - Press [Menu] > [Now Playing] to move to the current playing screen.
 - Press [Menu] > [Delete] to delete the desired file.
 - Press [Menu] > [Clear Jukebox] to delete all files and playlists in Jukebox.
 - Press [Menu] > [View Capacity] to check the storage capacity saved in Jukebox.

Slideshow Settings

You can set the slideshow interval. The slideshow is played according to the time interval.

 1. Press [Menu] > [Slideshow Settings].

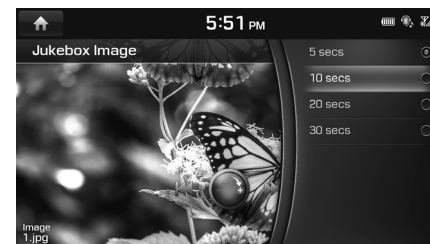

2. Press the desired slideshow interval.

USB Operation

Playing USB Music

You can play music files saved in a USB memory device.

Connect a USB device to the USB port. Playback will start automatically.



! Note

To play USB music while a different source is playing, press [HOME] > [Media] > [USB Music].

Pause

You can pause the playing file.

For more details, refer to "Pause" on page 20.

Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 20.

Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to "Search" on page 20.

Seek

 
You can play the file directly by searching for the desired file.

For more details, refer to "Seek" on page 21.

Cover Flow View

You can search and select the cover flow in USB.

1. Press [Menu] > [Cover Flow View].

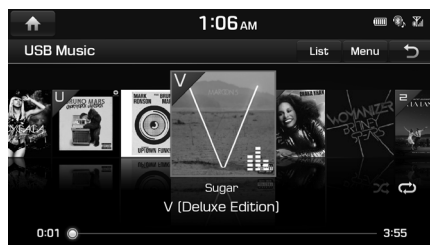


2. Press the desired album.
 - Press [Menu] > [View Default Player] to move to the current playing screen.
 - Press [Menu] > [List] to move to the list menu.
 - Press [Menu] > [Shuffle] to set the Shuffle function.
 - Press [Menu] > [Repeat] to set the Repeat function.
 - Press [Menu] > [Hide Current File] to hide the current playing file.
 - Press [Menu] > [Copy to Jukebox] to copy the desired files to Jukebox. For more details, refer to "Copying the USB music file to Jukebox" on page 31.
 - Press [Menu] > [Scan] to set the Scan function.
 - Press [Menu] > [Sound Settings] to set the sound.

USB Operation

List

You can play the desired file by searching the file list included in USB.

 1. Press [List].
Or press [Menu] > [List].

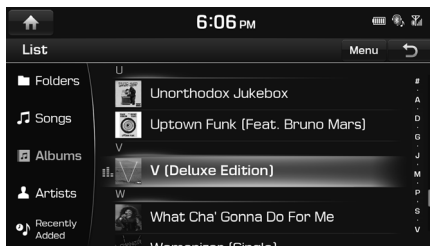

2. Press the desired file after searching for [Folders], [Songs], [Albums], [Artists], or [Recently Added].
 - Press [Menu] > [Now Playing] to move to the current playing screen.
 - Press [Menu] > [Copy to Jukebox] to copy the desired files to Jukebox.

Shuffle

All files can be played randomly.
For more details, refer to "Shuffle" on page 21.

Repeat

The current playing file is played repeatedly.
For more details, refer to "Repeat" on page 26.

 
Hide Current File

You can hide the current playing file.
Press [Menu] > [Hide Current File] from the playing screen.

Copying the USB music file to Jukebox

You can copy the desired files to Jukebox.

1. Press [Menu] > [Copy to Jukebox].

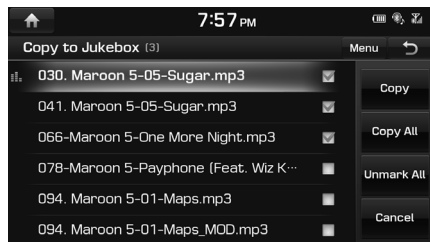

2. Select the desired file, then press [Copy].
 - [Copy]: Copies the selected file.
 - [Copy All]: Copies all the files.
 - [Unmark All]: Unmarks all the files.
 - [Cancel]: Cancels the copy function.

Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

Scan

This function scans the beginning of each file for 10 seconds.

For more details, refer to MP3 CD operation of "Scan" on page 22.

USB Operation

Playing USB Video

You can play video files saved in a USB memory device.

Connect a USB device to the USB port and playback starts automatically.

 Note

- To play USB Video while a different source is playing, press [HOME] > [Media] > [USB Video].
- Video is not available while driving. (Because of traffic regulations, video is only available while the vehicle is stopped.)

Not Available while Driving.
Please try again after parking the vehicle.

Switching to Menu display or Full Screen Display

Position	Description
Screen	Press the screen.
Controller	Push the controller up or down on full screen display mode.

 Note

Press [Menu] > [Full Screen Display] or wait 5 seconds to display full screen mode.

Pause

You can pause the playing file.

For more details, refer to “Pause” on page 20.

Skip

You can play the previous or next file.

For more details, refer to “Skip” on page 20.

Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to “Search” on page 20.

Seek

You can play the file directly by searching for the desired file.

 
For more details, refer to “Seek” on page 21.

USB Operation

List

You can play the desired file by searching the file list included in USB.

1. Press [List].
Or press [Menu] > [List].

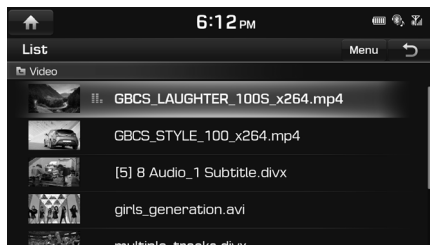

2. Press the desired file.
 - Press [Menu] > [Now Playing] to move to the current playing screen.
 - Press [Menu] > [Copy to Jukebox] to copy the desired files to Jukebox.

Shuffle

All files can be played randomly.

For more details, refer to “Shuffle” on page 21.

 
Repeat

The current playing file is played repeatedly.
For more details, refer to “Repeat” on page 26.

Copying the USB video file to Jukebox

You can copy the desired files to Jukebox.

1. Press [Menu] > [Copy to Jukebox].

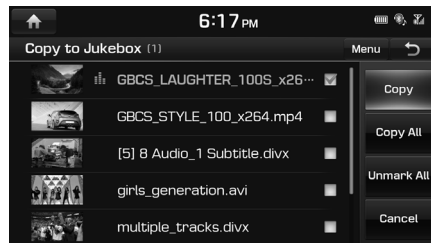

2. Select the desired file, then press [Copy].
 - [Copy]: Copies the selected file.
 - [Copy All]: Copies all the files.
 - [Unmark All]: Unmarks all the files.
 - [Cancel]: Cancels the copy function.

! Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

USB Operation

Viewing USB Image

You can play image files saved in a USB memory device.

1. Connect a USB device to the USB port.
2. Press [HOME] > [Media] > [USB Image].

! Note

Image is not available while driving. (Based on the traffic regulation, Image is only available whenever vehicle is in stop condition with parking gear.)

Not Available while Driving.
Please try again after parking the vehicle.

Switching to Menu display or Full Screen Display

Position	Description
Screen	Press the screen.
Controller	Push the controller up or down on full screen display mode.

! Note

Press [Menu] > [Full Screen Display] or wait 5 seconds to display full screen mode.

Skip

You can view the previous or next image.
For more details, refer to "Skip" on page 28.

Zoom in/out

Turn the controller left or right.
For more details, refer to "Zoom in/out" on page 28.

Slideshow

You can set the slideshow.
For more details, refer to "Slideshow" on page 29.

List

You can view the desired image by searching the image list included in USB.
For more details, refer to "List" on page 29.

 
Slideshow Settings

You can set the slideshow interval. The slideshow is played according to the time interval.
For more details, refer to "Slideshow Settings" on page 29.

Copying the USB image file to Jukebox

You can copy the desired files to Jukebox.

1. Press [Menu] > [Copy to Jukebox].

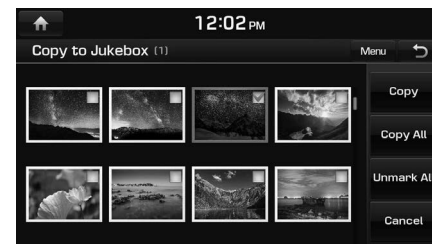

2. Select the desired file, then press [Copy].
 - [Copy]: Copies the selected file.
 - [Copy All]: Copies all the files.
 - [Unmark All]: Unmarks all the files.
 - [Cancel]: Cancels the copy function.

! Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

iPod® Operation

Playing iPod®

1. Use iPod exclusive cable to connect iPod to USB connector.
2. Press [HOME] > [Media] > [iPod].

It runs iPod mode.

Pause

You can pause the playing file. For more details, refer to "Pause" on page 20.

Skip

You can play the previous or next file. For more details, refer to "Skip" on page 20.

Search

You can rewind/fast forward to a specific point of a file. For more details, refer to "Search" on page 20.

 
Seek

You can play the file directly by searching for the desired file. For more details, refer to "Seek" on page 21.

List

You can play the desired file by searching the file list included in iPod.

1. Press [List].
Or press [Menu] > [List].

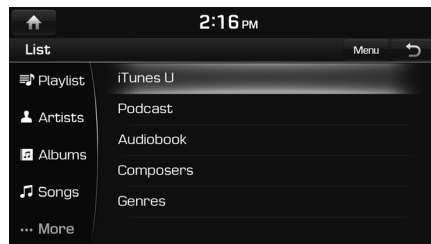

2. Press the desired file.
 - Press [Menu] > [Now Playing] to move to the current playing screen.
 - Press [Menu] > [Edit Category] to edit the category, then press the desired category. After moving to the desired category by turning the controller left or right, press the controller.

Shuffle

All files can be played randomly.

For more details, refer to "Shuffle" on page 21.

Repeat

The current playing file is played repeatedly.

1. Press [Menu] > [Repeat].



2. Press the desired item.
 - [Repeat All]: Repeats all files.
 - [Repeat One]: Repeats the current file.

Note

You can change the Repeat function by pressing [Repeat All]/[Repeat One] on the playing screen.

[Repeat All]: Repeat All, [Repeat One]: Repeat One

 
Scan

This function scans the beginning of each file for 10 seconds. For more details, refer to MP3 CD operation of "Scan" on page 22.

Auxiliary Device Operation

Playing an AUX source

1. Connect an auxiliary device to the AUX terminal.

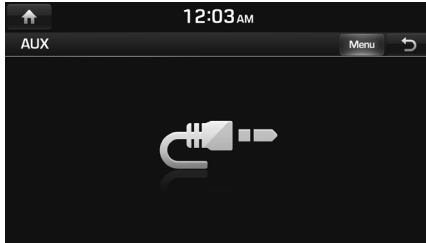

2. Play the auxiliary device.

Note

If you want to play the auxiliary device when playing other source, press [HOME] > [Media] > [AUX].

Playing Bluetooth® Audio

Before playing the Bluetooth® Audio

- Music saved in the mobile phone can be played in the car through Bluetooth audio streaming.
- Bluetooth audio can be played only when a Bluetooth phone has been connected. To play Bluetooth audio, connect the Bluetooth phone to the car system. For more information on connecting Bluetooth, please refer to user's manual "Pairing and connecting the unit and a Bluetooth phone" on page 51.
- The audio streaming function may not be supported in some mobile phones. Only one function can be used at a time between the Bluetooth handsfree or Bluetooth audio function. For example, if you convert to the Bluetooth handsfree while playing Bluetooth audio, the music will be discontinued.

Starting the Bluetooth® Audio

1. Press [HOME] > [Media] > [Bluetooth Audio].
2. The Bluetooth audio screen is displayed.



Pause

Press [▶||] on screen or with the controller.

Press [▶||] on screen or with the controller to play it again.

! Note

This feature may not be supported on some Bluetooth devices.

Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 20.

! Note

This feature may not be supported on some Bluetooth devices.

Shuffle

All files can be played randomly.

For more details, refer to "Shuffle" on page 21.

! Note

This feature may not be supported on some Bluetooth devices.

Repeat

The current playing file is played repeatedly.

1. Press [Menu] > [Repeat].
2. Press the desired item.
 - [Repeat All]: Repeats all files.
 - [Repeat One]: Repeats the current file.
 - [Repeat Off]: Cancels the repeat function.

! Note

 
- You can change the Repeat function by pressing [↺]/[↻]/[↺] on the playing screen. ↺: Repeat All, ↻: Repeat One, ↺: Repeat Off
- This feature may not be supported on some Bluetooth devices.

Getting Started with Navigation

Operating Navigation Screen

The navigation system displays various information on the screen.

Map screen

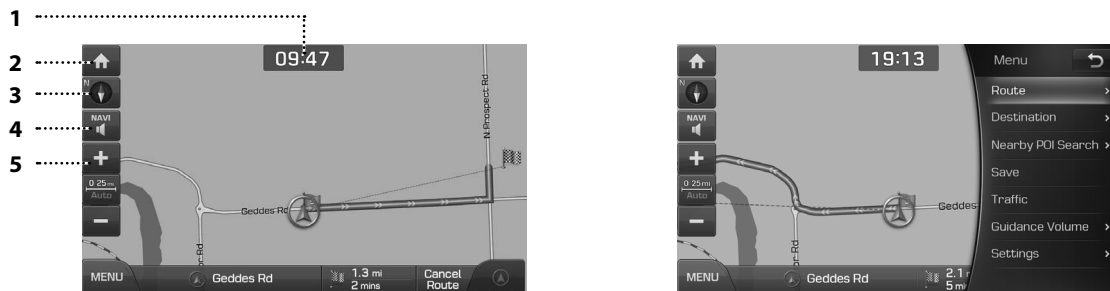

1. Clock display

Displays current time.

2. [Home] button

Press [Home] to move to [HOME] menu screen.

3. Map display

- Displays the direction of the map.
- Press [North], [Heading], or [3D].
 - [North] (North up (2D)): Displays always shows the vehicle's direction as proceeding towards the top of the screen.

- [North] (North up (2D)): Displays always has north at the top of screen.
- [3D] (3D) : Shows the map in 3 dimension.

GPS signal state display

Displays the state of GPS signal reception.

- Active - color : GPS reception is satisfactory.
- Inactive - gray : GPS reception is unsatisfactory.

4. Navigation voice guidance on/off

 


Sets the volume of voice guidance louder than that of audio.

5. [Zoom In] button

Zoom in the map. Press [Zoom In] repeatedly.

Getting Started with Navigation

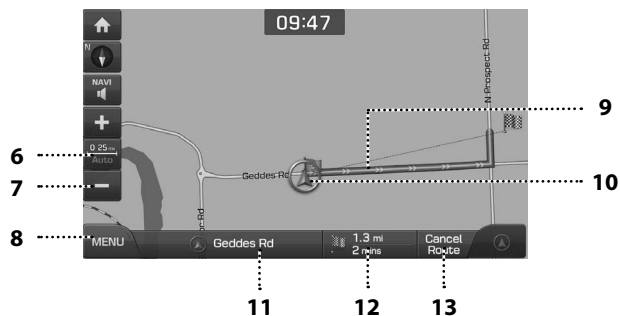

6. Map scale display

- Displays the current map scale.
- Sets the zoom level automatically to the guidance.

7. [-] button

Zoom out the map. Press [-] repeatedly.

8. [MENU] button

Moves to quick menu screen.

9. Route guidance

Displays the route guidance to the destination when a route is set.

10. Vehicle position

Displays current vehicle position and direction.

11. Current position

Displays the current position. Press to check the destination information.



12. Remaining distance display/ Remaining time

Displays the distance and time of arrival to the destination or waypoint. Press and check the information on destination.

13. Cancel Route

Cancels the route guidance to the destination or waypoint.

14. [Route] button

Changes the route conditions when a route is set.

Getting Started with Navigation



15. [Destination] button

Moves to [Destination] menu.

16. [Nearby POI Search] button

Finds a POI (Point Of Interest) near current position, destination or route.

17. [Save] button

Adds frequently used address to [Address Book] menu.

18. [Traffic] button

Displays the traffic information.

19. [Guidance Volume] button

Adjusts the navigation volume.

20. [Settings] button

 
Moves to [Settings] menu.

Searching for Destination of Navigation

Search

You can search your destination by name, address or coordinates.


1. Press [MENU] or [NAV] > [Destination] > [Search].

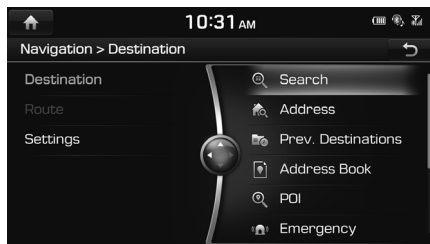


2. Enter the name of the location, address or coordinates and press [OK] or [Menu] > [Search].



 
You can change the state by pressing [State] or [Menu] > [State].

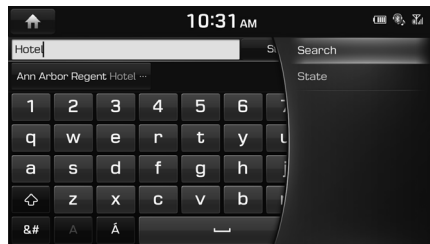

 
3. Select a location on the map from the list of your search results or filter your search results by city or category.

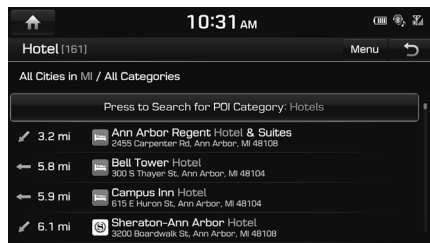

 - Press [Menu] > [Filter by City] to narrow your search results by city.
- Press [Menu] > [Filter by Category] to narrow your search results by category.

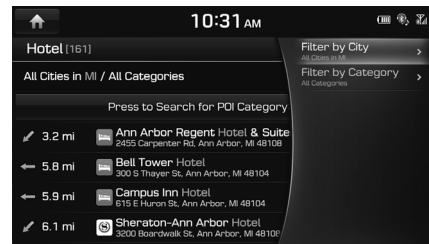

 4. Select the location from the search results to set as a destination.

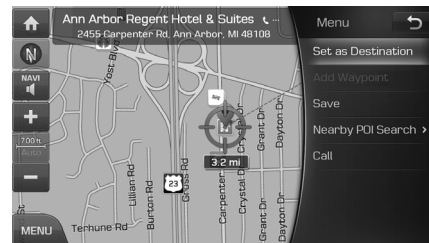

- Press [Set as Destination] to set the location as a destination.
- Press [Add Waypoint] to add the location as a waypoint.
- Press [Save] to add the location to the address book.
- Press [Nearby POI Search] to search the area in your proximity.
- Press [Call] to make a call to the location.

Searching for Destination of Navigation

 
Address Search

You can find the destination by searching for an address.

1. Press [MENU] or [NAV] > [Destination] > [Address].



2. Enter the name of the State, House No., Street or City corresponding to the desired destination.

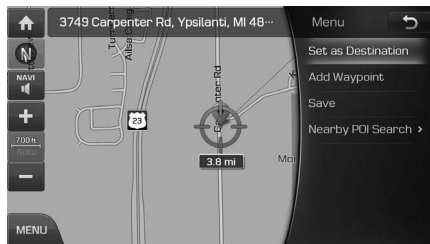


3. Press [Set as Destination].
 - If you want to add a waypoint when a route is set, press [Add Waypoint].
 - If you want to add the position to [Address Book] menu, press [Save].
 - If you want to find a POI (Point Of Interest) near current position, destination, route, scroll mark or city center, press [Nearby POI Search].

Note

When you set the [Alternative Routes], follow steps 4.

 4. Press [Faster Time] or [Shorter Distance].

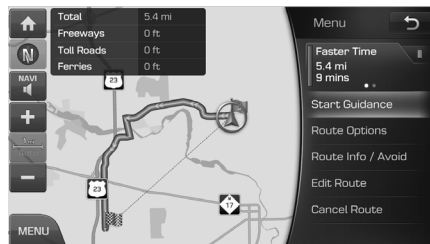

- [Faster Time]: Calculates the route based on the fastest arrival time.
- [Shorter Distance]: Calculates the route based on the shortest distance.

5. Press [Start Guidance].



- Press [Route Options] to set the route option. For more details, refer to "Route Options" on page 48.
- Press [Route Info / Avoid] to check route information and set a route to be avoided. For more details, refer to "Route Info / Avoid" on page 50.
- Press [Edit Route] to edit the route. For more details, refer to "Edit Route" on page 49.
- Press [Cancel Route] to cancel the route. For more details, refer to "Cancel Route" on page 48.

Searching for Destination of Navigation

 
! Note

The destination is saved in the [Prev. Destinations] menu automatically. (Page 43)

Previous Destinations

You can find the destination to a location that you have previously set as the destination.

1. Press [MENU] or [NAV] > [Destination] > [Prev. Destinations].

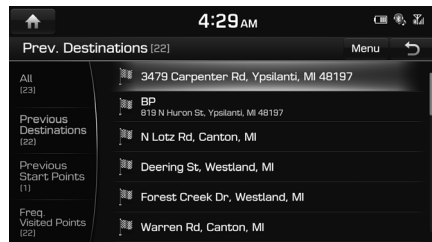

- [All]: Displays all previous destinations, departing places, and searched places.
- [Previous Destinations]: Displays previous destination places.
- [Previous Start Points]: Displays previous departing places.
- [Freq. Visited Points]: Displays frequently visited places.
- Press [Menu] > [Name] or [Date] to arrange the list in name or date order.

 
- Press [Menu] > [Delete] to select and delete items from various entries all at once.
2. Press the preferred previous point from the list.
3. Follow steps 3-5 of the "Address Search" on page 42.

Address Book

You can find the destination to a location saved in the [Address Book] menu. To utilize this function more effectively, destinations that you often travel to should be saved in advance.

First of all, store in the [Address Book] menu through destination search function.

1. Press [MENU] or [NAV] > [Destination] > [Address Book].

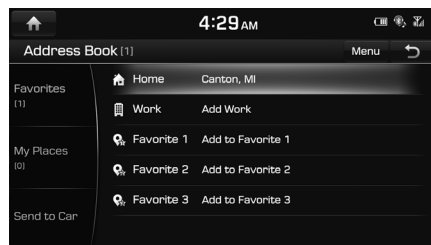


- Press [Menu] > [Date], [Name] or [Category] to arrange the list in date, name, or category order.
- Press [Menu] > [Add] to add a location [Address Book] menu.
- Press [Menu] > [Delete] to select and delete items from various entries all at once.
- Press [Menu] > [Edit] to select and edit an item among many items.
2. Press the desired item from the list.
3. Follow steps 3-5 of the "Address Search" on page 42.

Searching for Destination of Navigation

Adding to Address Book

 
1. Press [Menu] > [Add] in address book list.
2. Select a desired location through destination search function.

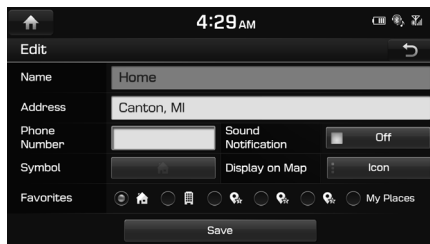

3. Set the desired item.
 - [Name]: Change the name.
 - [Phone Number]: Enter the phone number.
 - [Sound Notification]: Set the sound notification to [On]/[Off].
 - [Symbol]: Set the symbol displayed on the map screen.
 - [Display on Map]: Press [Icon], [Icon & Name] or [None] to display on the map screen.
 - [Favorites]: Select the address book type.
4. Press [Save] to save the setting.

Deleting Address Book

 
1. Press [Menu] > [Delete] in address book list.

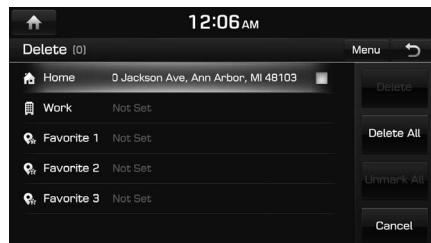

2. Select the desired item, then press [Delete].
 - [Delete]: Deletes the selected items.
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Editing Address Book

 1. Press [Menu] > [Edit] in address book list.
2. Select the item to edit.

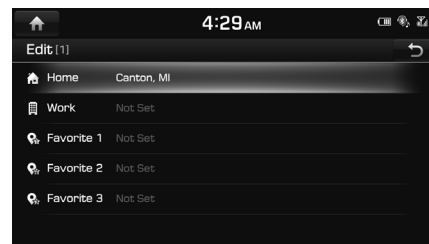

3. Edit the desired item.
 - [Name]: Change the name.
 - [Phone Number]: Enter the phone number.
 - [Sound Notification]: Set the sound notification to [On]/[Off].
 - [Symbol]: Set the symbol displayed on the map screen.
 - [Display on Map]: Press [Icon], [Icon & Name] or [None] to display on the map screen.
 - [Favorites]: Select the address book type.
4. Press [Save] to save the setting.

Searching for Destination of Navigation

 
POI

You can find a destination from various categories.

There are 2 ways to set the destination through POI search - by category, by phone number.

Searching for POI by category

1. Press [NAV] > [Destination] > [POI] > [POI Categories].

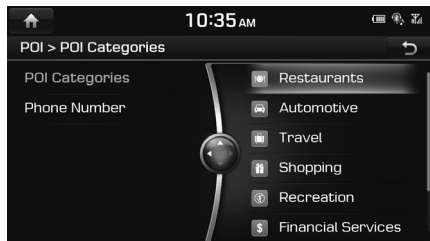


If you want to search for the POI category by name, press [Menu] > [Category History] or [Category Search]. Input the name, then press [OK] to finish.

2. Follow steps 3-5 of the "Address Search" on page 42.

Searching for POI by phone number

If you know the phone number of the destination, you may use this function to find the destination.

 1. Press [NAV] > [Destination] > [POI] > [Phone Number].

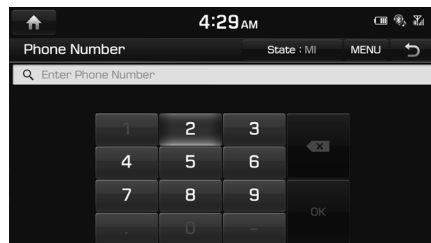


- Press [State] to change the state.

2. Input the desired phone number and press [OK].
3. Press the desired POI.
4. Follow steps 3-5 of the "Address Search" on page 42.

Emergency

You can find a destination by searching for a Police Stations, Hospitals, Dealerships or Roadside Assistance in emergency situations.

 1. Press [NAV] > [Destination] > [Emergency] > [Police Stations], [Hospitals], [Hyundai Dealerships] or [Roadside Assistance].

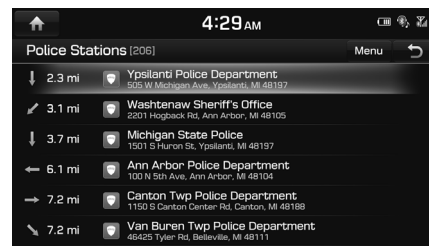

For example: Police Stations

 
- Press [Menu] > [Name] or [Distance] to arrange the list in name or distance order.
2. Press the preferred item from the list.
3. Follow steps 3-5 of the "Address Search" on page 42.

Searching for Destination of Navigation

Online Search (USA Only)

Please join in Connected Services service to use Online Search.

1. Press [NAV] or [MENU] > [Destination] > [Online Search].

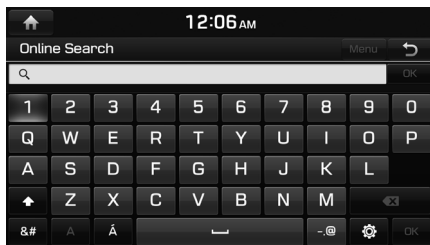

2. Enter the desired keywords and press [OK].
3. Select the desired item.
4. Follow steps 3-5 of the "Address Search" on page 42.

Intersection

You can find the destination by searching for the intersection.

1. Press [NAV] > [Destination] > [Intersection].



- Press [State] to change the state.
2. Enter the name of the State, 1st Street or 2nd Street corresponding to the desired destination.
 3. Press [OK].
 4. Follow steps 3-5 of the "Address Search" on page 42.

Freeway Exit / Enter

You can find the destination by searching for the Freeway Exit/Enter.

1. Press [NAV] > [Destination] > [Freeway Exit / Enter].



2. Enter the freeway name and exit/enter.
3. Press [OK].
4. Follow steps 3-5 of the "Address Search" on page 42.

 
Searching for Destination of Navigation

Coordinates

You can find a destination by inputting the coordinates of latitude and longitude.

There are two ways to search by coordinates (Deg. Min. Sec. or Decimal Degrees).

1. Press [NAV] > [Destination] > [Coordinates].

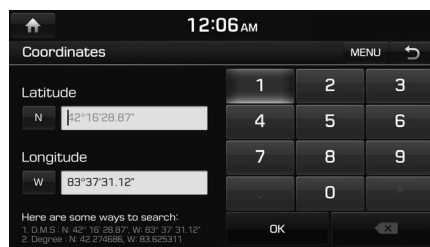

2. Press the latitude and longitude, then input the desired coordinates.
3. Press [OK].
4. Follow steps 3-5 of the "Address Search" on page 42.

Home / Work

If your home location and work location have been already saved in the [Favorite] menu, it can be easily retrieved to set the route to your home location and work location.

First of all, store in the [Favorites] menu through destination search function.

Registering Home or Work

1. Press [MENU] > [Destination] > [Add to Home] or [Add to Work].
2. Select the desired position through destination search function.
3. Press [OK] when the destination search is complete. It is saved in the [Favorites] menu automatically.

Note

Press [MENU] or [NAV] > [Destination] > [Address Book] > [Favorites] on the map screen to check items saved in the [Favorites] menu.

 
Finding your Home or Work

1. Press [MENU] > [Destination] > [Home] or [Work].
2. Follow steps 4-5 of the "Address Search" on page 42.

Using the Route Menu

Route menu overview

This allows you to change the route conditions by using the route menu when the route is activated.

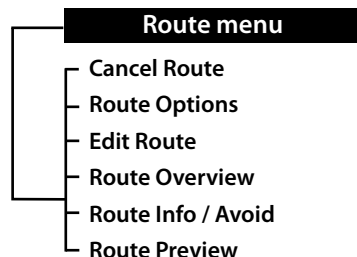

Cancel Route

If you want to stop the route guidance when a route is active, press [MENU] > [Route] > [Cancel Route] or press [NAV] > [Route] > [Cancel Route].

Route Options

You can modify the route conditions or confirm the route information. Set the appropriate route condition according to your purpose.

1. Press [NAV] or [MENU] > [Route] > [Route Options].



2. Set the desired options.
 - [Faster Time]: Calculates the route based on the fastest arrival time.
 - [Shorter Distance]: Calculates the route based on the shortest distance.
 - [Avoid Freeways]: Searches for a route that minimizes or avoids the freeway.
 - [Avoid Toll Roads]: Searches for a route that minimizes or avoids toll roads.
 - [Avoid Ferries]: Searches for a route that avoids the use of ferries.

- [Avoid HOV/Carpool Lanes]: Searches for a route that avoids the use of HOV/Carpool Lanes.
- [Avoid Electronic Tolls]: Searches for a route that avoids the use of Electronic Toll.
- [Use Traffic Info]: Searches for a route reflecting the real time Traffic Information.
- [Avoid Private/Gated Roads]: Searches for a route that minimizes or avoids the Private / Gated Roads.

3. Press [Recalculate].

Note

The Items set by user may not be reflected depending on condition.

 
Using the Route Menu

Edit Route


This feature allows you to travel through the searched routes by editing the current route. Waypoints can be added/deleted/edited and the order can be changed.

Adding waypoints

1. Press [NAV] > [Route] > [Edit Route].

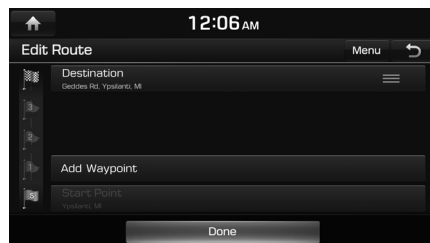

 2. Press [Add Waypoint].
3. Add the waypoint through destination search function.

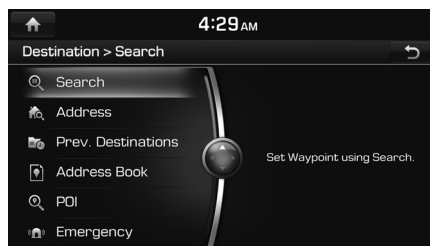


4. If you want to add an waypoint, follow steps 2~3.
5. Press [Done] > [Start Guidance].

Reordering Route

1. Press [NAV] > [Route] > [Edit Route].
2. Press the desired item from the list.
3. Move the selected item up and down. Or Drag it to the desired position.
4. Press [Done] > [Start Guidance].

Deleting Route

 1. Press [NAV] > [Route] > [Edit Route].
2. Press [Menu] > [Delete].

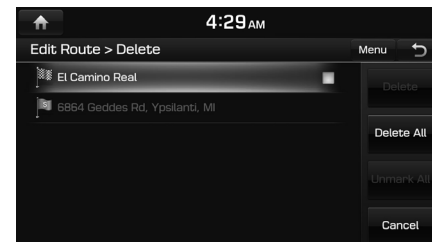

3. Select the desired item, then press [Delete].
 - [Delete]: Deletes the selected items.
 - [Delete All]: Cancels the route.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Using the Route Menu

Route Info / Avoid

This allows you to check the route information and search for new route by avoiding the selected street(s).

1. Press [NAV] > [Route] > [Route Info / Avoid].

 


2. Press [Avoid] to select the street(s) that you want to avoid.
3. Press [Done] to plan new route.

Route Overview

You can check the entire route between your current location and your destination.

1. Press [NAV] > [Route] > [Route Overview].

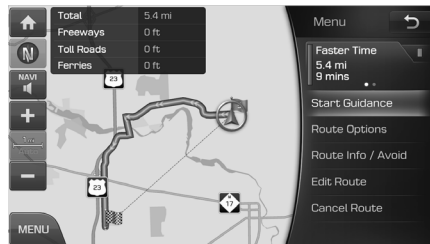


2. Press the desired item.
 - [Start Guidance]: Starts the route guidance.
 - Press [Route Options] to set the route option. For more details, refer to "Route Options" on page 48.
 - Press [Route Info / Avoid] to check route information and set a route to be avoided. For more details, refer to "Route Info / Avoid" on page 50.
 - Press [Edit Route] to edit the route. For more details, refer to "Edit Route" on page 49.
 - Press [Cancel Route] to cancel the route. For more details, refer to "Cancel Route" on page 48.

Route Preview

This allows you to check the detailed turn-by-turn list.

 1. Press [NAV] > [Route] > [Route Preview].

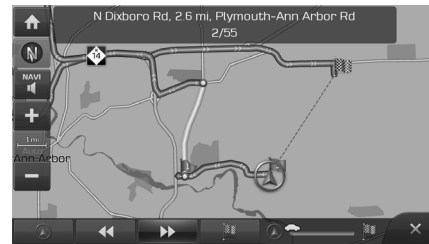

2. Press the desired item.
 - [Home]: Move to the departure location.
 - [Previous]: Move to the previous position.
 - [Next]: Move to the next position.
 - [Destination]: Move to the destination location.
 - [Quick Move]: Quick move to the specific position.
 - [Close]: Close the route preview.

Before Using the Bluetooth Handsfree

What is Bluetooth Wireless Technology?

- Bluetooth Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth phones, PDAs, various electronic devices, and automotive environments, Bluetooth Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth mobile phones through the system.
- The Bluetooth Handsfree feature may not be supported in some mobile phones.

Precautions for Safe Driving

- Bluetooth is a feature that enables drivers to use handsfree while driving. Connecting the head unit with a Bluetooth phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using Bluetooth Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

Cautions upon Connecting Bluetooth Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth features.
- If you do not want automatic connection with your Bluetooth device, turn the Bluetooth feature off of the Bluetooth device.

- Park the vehicle when pairing the head unit with the mobile phone.
- Some Bluetooth features may occasionally not operate properly depending on the firmware version of your mobile phone. If such features can be operated after receiving a S/W upgrade from your mobile phone manufacturer, unpair all devices and pair again before use.
- When pairing and the head unit with the iPhone for the first time while your iPhone is connected to the USB port with iPhone cable, error message may be displayed on your iPhone. But, this is intended operation. You may ignore it if your iPhone has been connected to the head unit.

 
Pairing and connecting the unit and a Bluetooth phone

To use the Bluetooth feature, make sure the Bluetooth on your phone is turned on. Refer to your phone's user guide.


Bluetooth® Wireless Technology

When no phones have been paired


1. Press [PHONE] on the remote control for head unit or [C] on the steering wheel remote control.

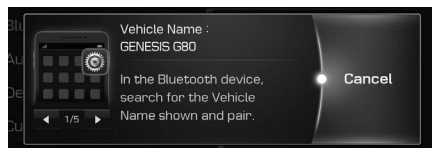

 
2. On your phone, initiate a search for Bluetooth devices. (The default vehicle name is GENESIS G80.)

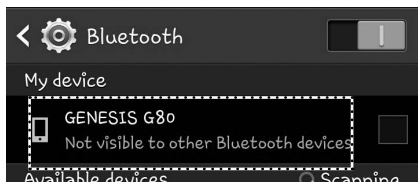

 
3. 1) If the SSP (Secure Simple Pairing) is not supported, input the passkey on your Bluetooth device. (The default passkey is 0000.)

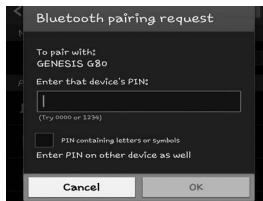

 - 2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of the your Bluetooth device. (The pop-up screen may differ from the actual information of the Bluetooth device.)

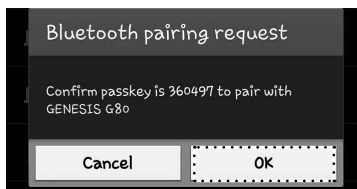


 4. Press [Yes] to connect automatically to the unit and a Bluetooth phone preferentially after ignition switch is in ON position.

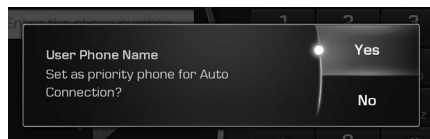


When you approve in the mobile phone,

 the mobile phone contacts and the latest call list are downloaded.

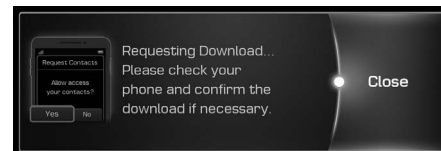

 5. When your phone is successfully connected, the phone screen is displayed on the screen. When the connection fails, a failure message is displayed on the screen.

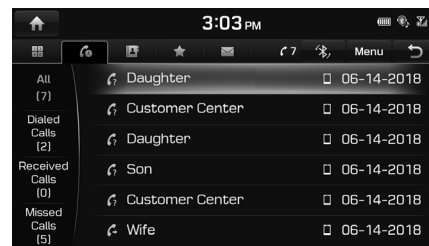


<Phone screen>

Once Bluetooth connection is successful, the name of the connected mobile phone will become displayed on the phone screen and Bluetooth handsfree functions will operate.


Bluetooth® Wireless Technology

When a phone is already paired

 
1. Press [HOME] > [Setup] > [Phone] > [Bluetooth Connection].

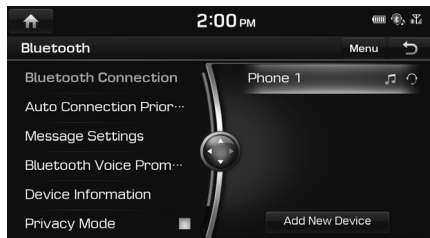

 
2. 1) Select the device you want to connect.
2) If there is no device you want to connect, press [Add New device].

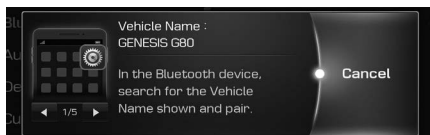

 
3. On your phone, initiate a search for Bluetooth devices. (The default vehicle name is GENESIS G80.)

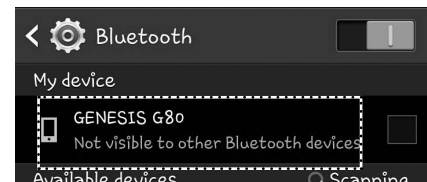

 
4. 1) If the SSP (Secure Simple Pairing) is not supported, input the passkey on your Bluetooth device. (The default passkey is 0000.)

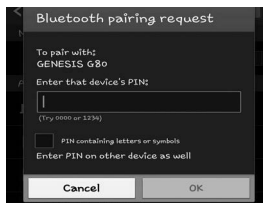

 
- 2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of the your Bluetooth device. (The pop-up screen may differ from the actual information of the Bluetooth device.)

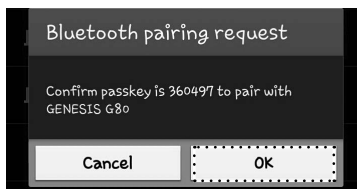

 5. Press [Yes] to connect automatically to the unit and a Bluetooth phone preferentially after ignition switch is in ON position.

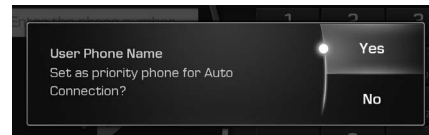

 When you approve in the mobile phone, the mobile phone contacts and the latest call list are downloaded.

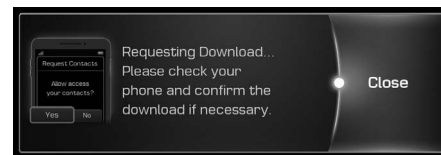

6. When your phone is successfully connected, the Bluetooth settings screen is displayed on the screen. When the connection fails, a failure message is displayed on the screen.



<Bluetooth settings screen>

Bluetooth® Wireless Technology

! Note

- For safety reasons, pairing a Bluetooth phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a Bluetooth phone. It is possible to pair up to 5 mobile phones. In order to pair a new phone when there are already 5 mobile phones paired, you must first delete one of the previously paired phones.
- Some functions may not be supported due to limited Bluetooth compatibility between the car system and mobile phone.
- When a Bluetooth device is connected, a new device cannot be paired. If you want to pair a new phone, first disconnect the connected Bluetooth device.

Change Device

You can connect the head unit and another Bluetooth device already paired.

- Press [Menu] > [Change Device] on the phone screen.



 
- Press the desired Bluetooth device on the pop-up.

! Note

You can use the Change Device function by pressing [] on the screen.

Disconnecting the connected phone

- Press [HOME] > [Setup] > [Phone] > [Bluetooth Connection].

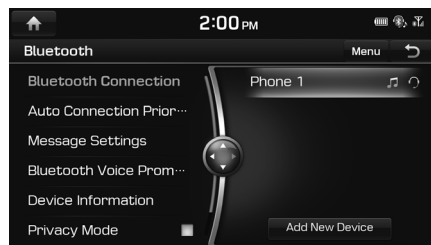

- Select the connected phone.

! Note

 
If you want to connect the disconnected phone again, select the disconnected phone.

Deleting Bluetooth Devices


If you no longer need to use a phone, you can delete the Bluetooth devices. Note that deleting a Bluetooth device will delete all call history and contact entries.

- Press [HOME] > [Setup] > [Phone] > [Bluetooth Connection].

- Press [Menu] > [Delete] on the Bluetooth settings screen.

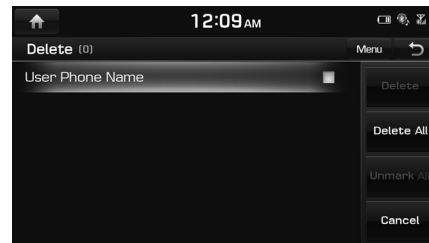

 - Select the phone you want to delete and press [Delete].
 - [Delete]: Deletes the selected items.
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.
- Press [Yes] on the pop-up screen.

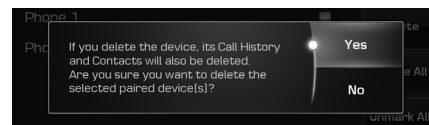

Making a call by entering phone number

Connect your unit and Bluetooth phone before making a call.

1. Enter the phone number using the keypad on the phone screen.
2. Press [📞] on the phone screen or [📞] on the steering wheel remote control.

! Note

If you press the wrong number, press [⬅️] to delete the inputted number one digit at a time.

Making a call by redialing

Press and hold [📞] on the phone screen or [📞] on the steering wheel remote control.

! Note

Redialing is not possible when there is no dialed call history.

Making a call with speed dial numbers

Press and hold speed dial number using the keypad on the phone screen.


Only speed dial numbers already saved on the mobile phone can be used for speed dial calls. Up to 3-digit speed dial numbers are supported.

! Note

For 3-digit speed dial numbers, press and hold the 3rd digit to make a call to the speed dial number.

Answering/Rejecting a call

 1. If there is an incoming call, a popup message will appear.
2. Press [Accept] to answer the call.

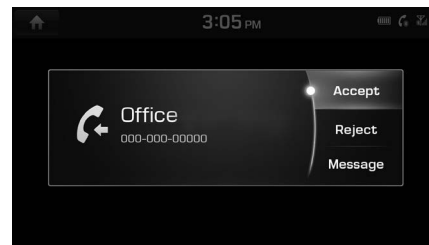

To reject a call, select [Reject].

 
! Note

- If the Call-ID service is available, the caller's phone number is displayed.
- If caller's phone number is saved in the phone book, the caller's name is displayed on the unit.
- Upon receiving a call, the [Reject] function may not be supported in some mobile phones.


Bluetooth® Wireless Technology

Responding with messages

1. If there is an incoming call, a popup message will appear.

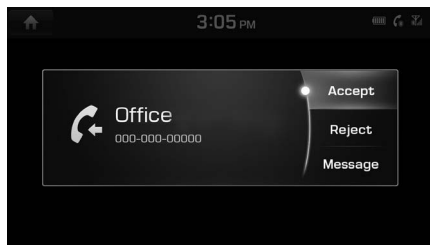

 2. Press [Message] to respond with messages.

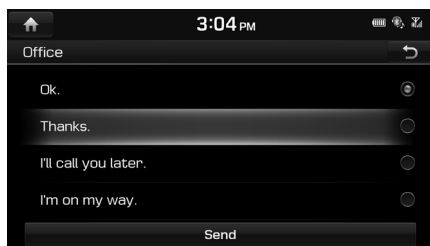

3. Select the desired message and press [Send].

 
! Note

Depending on the mobile phone model, the [Message] function may not be supported.

Switching call to the mobile phone

1. If you want to switch the call to the mobile phone while talking on the car handsfree, press [Use Private].

As shown below, the call is switched to the mobile phone.

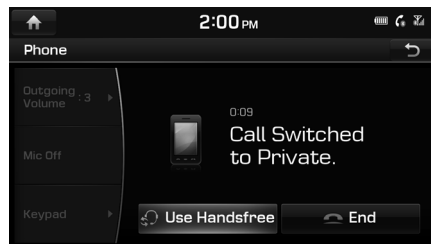


2. If you want to switch the call to the car handsfree while talking on the mobile phone, press [Use Handsfree].
The call is switched to the car handsfree.

Ending a call

1. To end a call, press [End] on the phone screen or [End] on the steering wheel remote control.
2. The call is ended.

Using the menu during a phone call

 When making a call, you can use the following menu items.

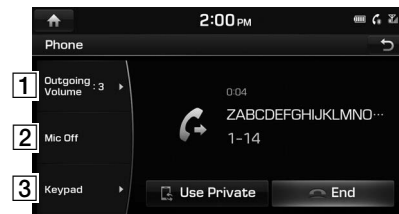

Position	Description
1 Outgoing volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5).
2 Mic On/Off	Turns the Mic On/Off.
3 Keypad	Moves to a screen for entering ARS numbers.

Call history

Making a call from call history

1. Press  on the phone screen.



2. Press [All], [Dialed Calls], [Received Calls], or [Missed Calls].
 - [All]: Displays entire call history list.
 - [Dialed Calls]: Displays the outgoing call history list.
 - [Received Calls]: Displays the incoming call history list.
 - [Missed Calls]: Displays the missed call history list.
3. Press the entry you want to call.

 
Note

The call history may not be saved in the call history list in some mobile phones.


Downloading call history

You can download the call history information from your mobile phone.

1. Press  > [Menu] > [Download] on the phone screen.

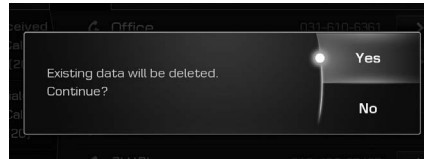

 2. Press [Yes].

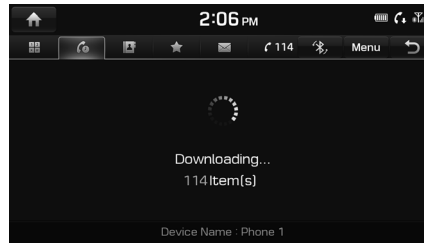


Note

- Up to 50 received, dialed, and missed call history lists can be downloaded.
- The download feature may not be supported in some mobile phones. Check to see that the Bluetooth device supports the download feature.

Contacts


1. Press  on the phone screen.

 The contacts are displayed on the screen.

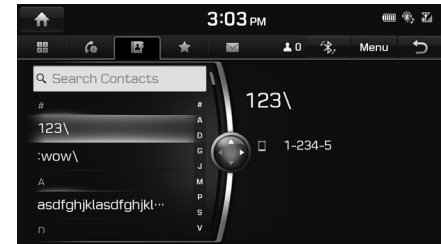

<Contacts screen>

 2. Select the contact you want to call from the list of contacts.

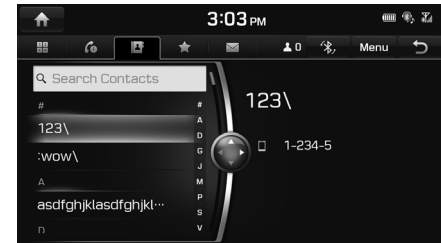

3. Press the phone number to make a call.

 
Bluetooth® Wireless Technology

Downloading mobile phone contacts


Up to 5,000 mobile phone contacts can be downloaded.

The phonebook download feature will only download contacts transmitted via Bluetooth (contacts saved on a Bluetooth device or on the SIM card). Contacts saved in a third-party app or contacts without a phone number will not be downloaded.

1. Press [Contacts] > [Menu] > [Download] on the phone screen.

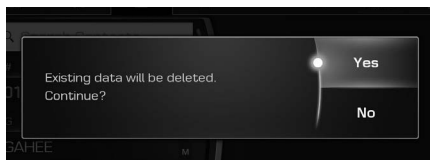

 2. Press [Yes].

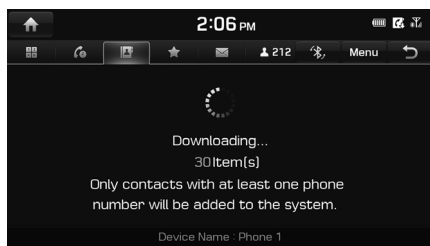


The present phone book is deleted and phone book of connected phone is duplicated.

Note


- Upon downloading mobile phone contacts, the previous data is deleted.
- This feature may not be supported on some mobile phones.

Searching for contacts

 1. Press [Contacts] > [Menu] > [Search Contacts] on the phone screen.

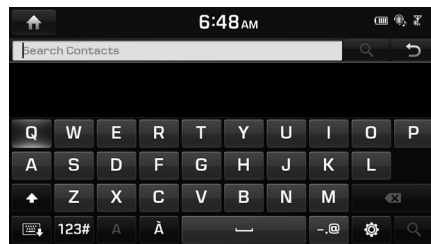

 2. Enter the name or phone number, press [Search].

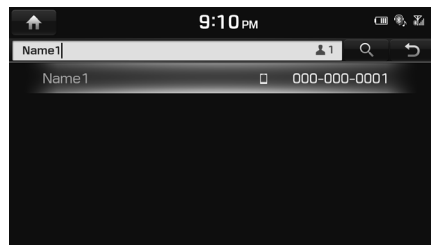

3. Select the contact you want to call.

 
Favorites

Calling Favorites

If the phone number has been already stored in the Favorites, it can be easily called.

First of all, add the phone number in the Favorites. Refer to "Editing Favorites".

1. Press [Star] on the phone screen.

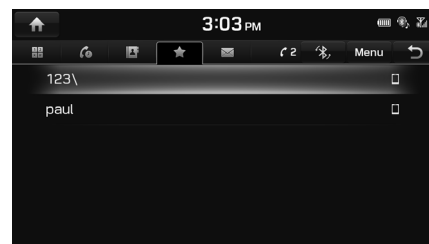


<Favorite screen>

2. Select the desired Favorite.

Editing Favorites

 
1. Press [★] on the phone screen.
2. Press [Menu] > [Add New] on the Favorites screen. Or Press [Menu] > [Edit] on the Favorites screen.

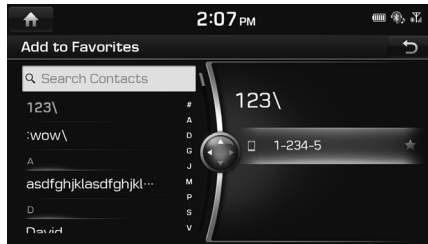

3. After you select the contacts you want to register, press [★] > [↻] to register them in Favorites. If you want to delete them which have already been registered, press [★] after selecting the corresponding them.

Deleting Favorites

 1. Press [★] on the phone screen.
2. Press [Menu] > [Delete] on the Favorites screen.

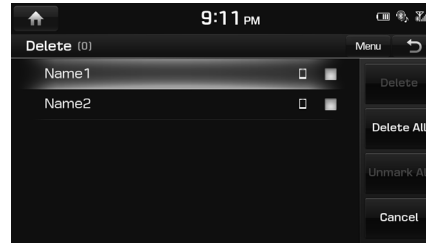


3. Select the item you want to delete and press [Delete].
 - [Delete]: Deletes the selected items.
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Messages

You can check the text messages or send any message on the screen. Depending on the mobile phone model, some functions may not be supported. The [Read] function of messages may not be supported in some languages.

Checking new messages

 1. When a message is received, the pop-up is displayed on the screen.

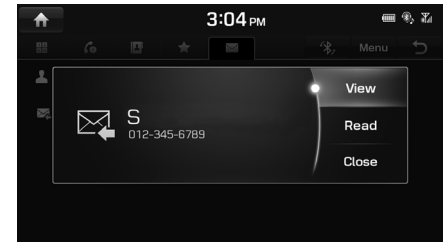

2. Select a desired item.
 - [View]: Moves to the message screen.
 - [Read]: Supports the message contents by voice.
 - [Close]: Closes the message pop-up.

 
Note

Mark the [Message Notification] of [Message Settings] on the Bluetooth settings screen.


Bluetooth® Wireless Technology

Checking new message contents

1. Press [Message] on the phone screen.

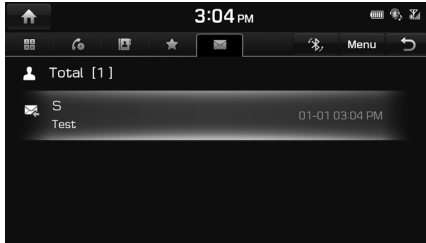

 2. Select a message.

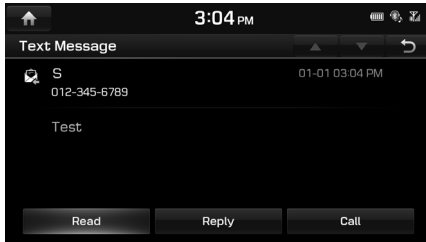

3. Check the information on message.
 - [Read]: Supports the message contents by voice.
 - [Reply]: Replies to the message.
 - [Call]: Calls the message sender.

Note

Only the messages received after the Bluetooth connection are specified in the list.

Voice Recognition System

What is voice recognition?

Voice recognition technology runs the system as ordered by recognizing your voice command to help with the operation of multimedia while you are driving the car. Regretfully, not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command under certain circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Voice recognition features by language

Voice recognition support availability varies according to the language set for the system.

Please verify the current language setting before using the voice recognition.

- If you change the language set for the system to Korean, voice recognition will not be supported. Change the system language to other language.

Operating voice command

Condition for voice command system

Most of the functions can be operated by voice. Please follow the instructions below for optimal voice recognition performance.

- To improve the voice recognition performance, keep your car interior quiet by closing all windows and the sunroof.
- Press the voice recognition button and say the desired voice command after the beep sound.
- The microphone is positioned above the driver. Voice commands should be spoken by driver practicing proper posture.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.
- Special symbols of Phonebook Name are not considered in voice recognition.
Ex) James-Smith : "James Smith"
- House number or digits in Phonebook Name should be spoken discretely.
Ex) S1234 : "South one two three four"
- Depending on the specifications, some commands may not be supported.

Starting voice recognition

1. Press [] on the steering wheel remote control.
2. Say a command.



Note

- For proper recognition, please say the command after the voice instruction and beep sound.
- When starting voice recognition, the voice command entry window with six representative commands is displayed.

Voice Recognition System

Skipping prompt messages

While a prompt is playing, press quickly on the steering wheel remote control labeled with [🔊]. The prompt is immediately ended and a beep will sound. After the beep, please say the voice command.

Re-starting voice recognition

While the system waits for input, press quickly on the steering wheel remote control labeled with [🔊]. The beep tone will sound, indicating the system is listening for a new input. Say a voice command.

Ending voice recognition

- While voice recognition is operating, press and hold the control labeled with [🔊] on the steering wheel remote control, or say 'Exit'.
- While using voice recognition, pressing other button except on the steering wheel remote control or a different button on head unit will end voice recognition.

Adjusting voice recognition volume

While voice recognition is operating, turn [VOL] knob on the head unit or press [VOL+/-VOL-] on the steering wheel remote control.

Basic operation for voice command (Setting FM)

1. Press the control on the steering wheel remote control labeled with [🔊].

The system waits for your command and displays a list of available commands on the screen.



2. Once the [🔊] icon changes into the [🔊] icon on the pop-up screen, a beep will sound. Say 'FM'.

Voice recognition quick start (Manual Control)

The usual way of activating voice recognition is waiting for the voice guide and then speaking your command for a task. Since this method requires that you wait a while for the voice guide, you can select one of the commands shown on the screen to speed up the process.

 
You might find this feature useful when you do

not want to wait for the full voice guide or when the system does not recognize your voice.



About voice command "Help"

1. Press the [🔊] on the steering wheel remote control.
2. Once the [🔊] icon changes into the [🔊] icon on the pop-up screen with a beep sound, say "Help".
The available commands are displayed on the screen.

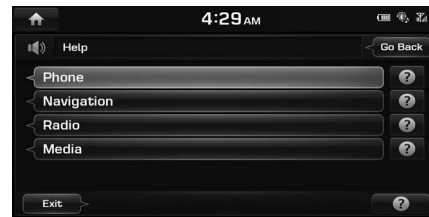

3. Select or say the displayed command on the screen.

Operating Siri® command

What is Siri®?

Apple wants to integrate the Siri to specific voice control system by working with car manufacturers.

You can ask Siri through the [] button on the steering wheel remote control while driving.

The Apple device (iOS device) screen does not light up to minimize impact on the driving.

If there is "Eyes-free" function, you can operate the Siri feature. (Making phone calls, Playing music, Listening to or writing a text message, Finding the destination by using the map, Looking for calendar information, etc)

Starting Siri®

1. Connect your Apple device (iOS device) to AVN system through Bluetooth.
Please check whether your Apple device (iOS device) supports Siri and turning Siri On.
2. Press and hold [] on the steering wheel remote control.



<Siri screen>

3. Say a command.
For proper recognition, please say the command after the voice instruction and Siri beep tone.

Re-starting Siri®

- While system waits, press [] on the steering wheel remote control. The command waiting condition is ended and the beep tone will make sound. After the "beep", say the voice command.
- Press [Speak] on the Siri screen. The command waiting condition is ended and the beep tone will make sound. After the "beep", say the voice command.

Ending Siri®

- While Siri is operating, press and hold [] on the steering wheel remote control or say "Exit".
- While using voice recognition, pressing other button except on the steering wheel remote control or a different button on head unit will end Siri feature recognition.
- Press [Exit] on the Siri screen.

Adjusting Siri® volume

While Siri is operating, turn [VOL] knob on the head unit or press [VOL+/VOL-] on the steering wheel remote control.

! Note

- Please see the AVN system only supports "Music" and "Phone" related functions. Other functions will be performed in the your Apple device (iOS device).
- Eyes-Free mode would be activated automatically while you are driving. If the car is stopped (when the transmission lever is put to P), Eyes-Free mode would be deactivated automatically.

 
SiriusXM™ Data

About SiriusXM™ Data

The SiriusXM Data Service is a paid membership satellite radio service which provides users with weather, traffic, fuel prices, stocks, sports, and movie times information. For information on registration or related content, please visit the SiriusXM radio website (www.siriusxm.com).

Accessing SiriusXM™ Data

1. Press [HOME] > [SiriusXM Data].

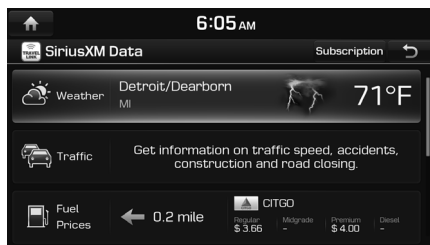

<SiriusXM Data screen>

2. If you want to subscribe to the SiriusXM Data Service, press [Subscription] > [Call] to enable Services.

 
SiriusXM™ Weather Information (USA Only)

Current weather information (USA Only)

This service provides current weather information in your region.

1. Press [HOME] > [SiriusXM Data].

This current weather information is displayed on the screen.

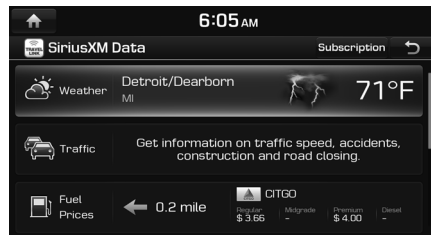

<SiriusXM Data screen>

2. Press [Weather] to check the detail information.



 
Weather forecast (USA Only)

This service provides weather forecasts for the next five days including today in your region.

1. Press [Weather] > [Menu] in SiriusXM Data screen.



2. Press [Forecast].

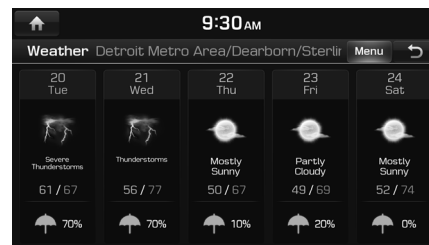


- Press [Menu] > [Today] to move to current weather information screen.
- Press [Menu] > [Location List] to move to the Location List screen.

- Press [Menu] > [Weather & Security Alerts] to move to the Weather & Security Alerts screen.
- Press [Menu] > [Weather Map] to move to the Radar Map screen.

Weather information in other region (USA Only)

This service provides weather information in other region.

 1. Press [Weather] > [Menu] > [Location List] > [Cities] in SiriusXM Data screen.

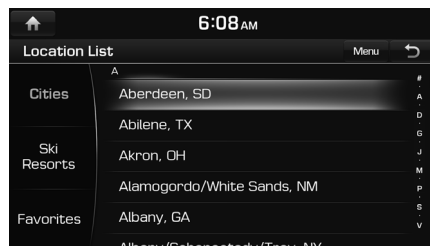

<Location List>

2. Select the desired region.



 
! Note

If you want to display weather information in your current location, press [📍].


Weather information at ski resorts (USA Only)

This service provides weather and facility information at ski resorts.

1. Press [Weather] > [Menu] > [Location List] > [Ski Resorts] in SiriusXM Data screen.

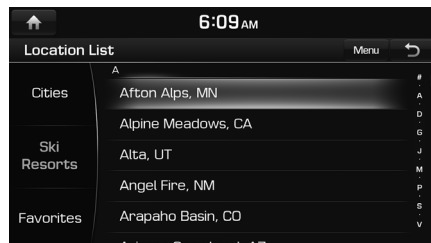

 2. Select the desired ski resort.

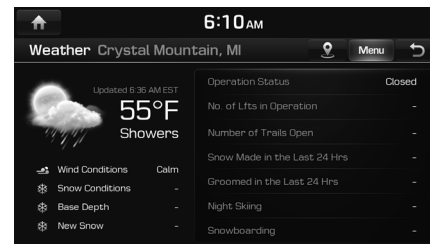


! Note


If you want to check weather information in your current location, press [📍].

Searching for other region or ski resort (USA Only)

 1. Press [Cities] or [Ski Resorts] > [Menu] > [Search] on the Location List.
2. Enter the desired region or ski resort, press [Q].

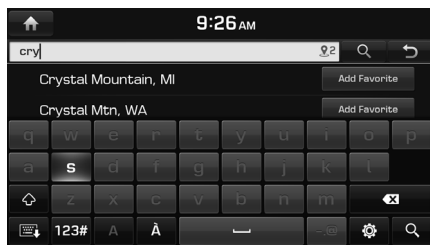

 3. Select the desired item.

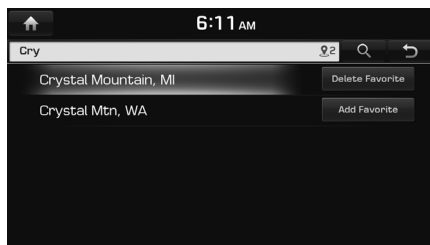


4. If you want to add the selected item in the Favorites, press [Add Favorite].
If you want to delete the item saved in the Favorites, press [Delete Favorite].

Favorites (USA Only)

If the city or ski resort have already been stored in the Favorites, it can be easily recalled.

Add the city or ski resort in the Favorites. Refer to "Adding to Favorites" on page 66.

 1. Press [Favorites] on the Location List.

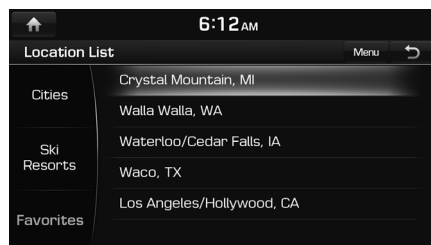


2. Select the desired item.



Adding to Favorites (USA Only)

A maximum of 10 items can be added.

 1. Press [Favorites] > [Menu] > [Add Favorite] on the Location List.
2. Enter the desired location, press [Q].

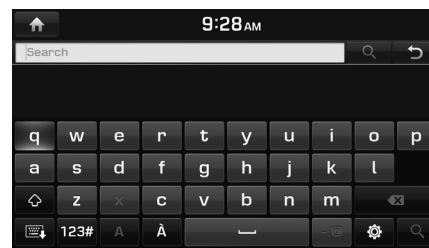


3. Select the desired item.


Reordering Favorites (USA Only)

The added items in Favorites can be reordered.

 1. Press [Favorites] > [Menu] > [Reorder] in Location List.
2. Press the desired item.

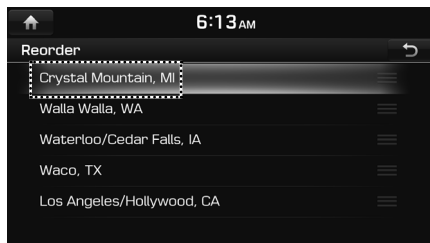


 3. Move up and down and press the selected item, or drag it to the desired position.

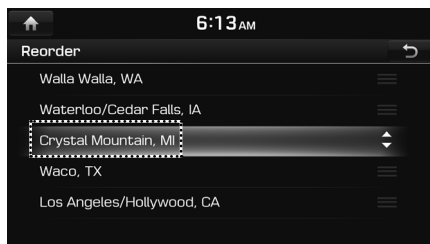

Deleting Favorites (USA Only)

 1. Press [Favorites] > [Menu] > [Delete] in Location List.

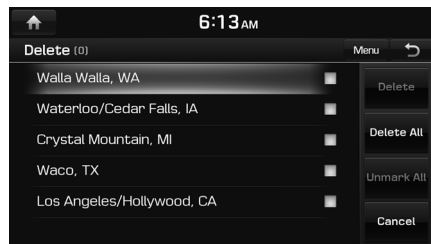


2. Select the item you want to delete and press [Delete].
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Weather & Security Alerts (USA Only)

Provides weather warnings and advisories, such as Tornado, Storm, Flood, Winter, Wind etc..

 1. Press [Weather] > [Menu] > [Weather & Security Alerts] in SiriusXM Data screen.

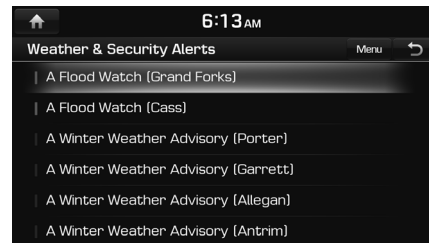

- Press [Menu] > [Prioritization Levels] > [All], [Low], [High] or [Severe] to set the prioritization levels.
- Press [Menu] > [Set Range] > [50 miles], [100 miles], [200 miles] or [300 miles] to set the distance range.
- Press [Menu] > [Marine/coastal] to set whether to include regional information of the Marine/coastal.
- Press [Menu] > [Show Popup] to set whether or not to display alert pop-up.

- Press the desired item.

 


Weather Map (USA Only)

Provides up-to-date weather information across the country.

Zoom in to view more detailed information in specific regions.

- Press [Weather] > [Menu] > [Weather Map] in SiriusXM Data screen.

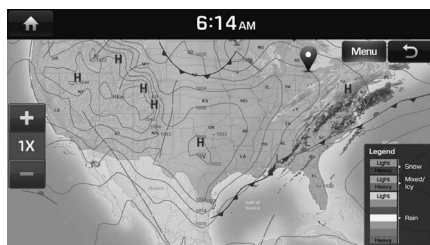

- Press [Menu] > [Full Screen] to hide the [Menu] and [Full Screen] button.

- Press [Menu] > [Weather Front] to set whether to display cold/warm air fronts.
- Press [Menu] > [Isobar] to set whether to display the Isobar.
- Press [Menu] > [Pressure Center] to set whether to display the Pressure center.
- Press [Menu] > [NOWRad] to set whether to display the weather radar.

- Press [+] / [-] to use the zoom in and out features.

Push the controller up, down, left, or right to move to the desired location.

 
SiriusXM Traffic Information

Press [Traffic] to enter the Traffic Announcement mode in SiriusXM Data screen.

SiriusXM™ Fuel Prices Information (USA Only)

Finding gas station (USA Only)


- Press [Fuel Prices] in SiriusXM Data screen.

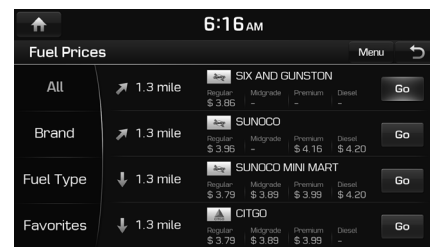

<Fuel Prices List>

- [All]: Displays all gas stations.
- [Brand]: Displays gas stations by brand.
- [Fuel Type]: Displays gas stations by fuel type.
- [Favorites]: Moves to the [Favorites] menu.
- Press [Menu] > [Sort by] > [Distance], [Price], [A - Z] to sort in Distance, Price, or Alphabetical order. The [On Route] option displays only gas stations when a route is set, starting with nearest to current location.

 - Press [Menu] > [Search] to search for the gas station. For more details, refer to “Searching for gas station” on page 69.
- Press [Go] > [Yes].

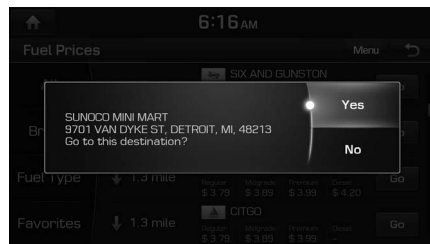

Note

 
Within 30 miles, a maximum of 65 items can be displayed.

Searching for gas station (USA Only)

- Press [Menu] > [Search] in Fuel Prices List.
- Enter the desired gas station and press [Q].



- To store the desired item as a favorite, press [Add Favorite].

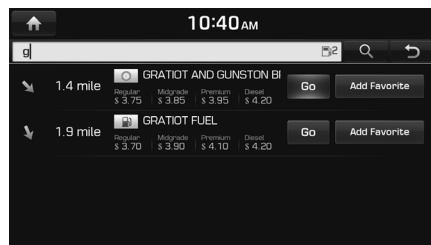


- Press [Go] > [Yes].

Favorites (USA Only)

If the gas station has been already stored in the Favorites, it can be easily recalled. First of all, add the gas station in the Favorites. Refer to “Adding to Favorites” on page 70.

 - Press [Favorites] in Fuel Prices List.

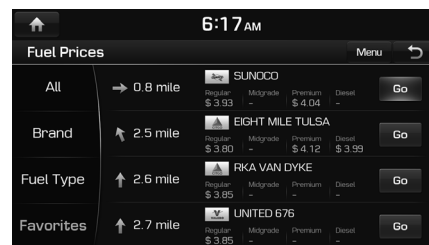


- Press [Go] > [Yes].

Adding to Favorites (USA Only)

A maximum of 10 items can be added.

 
1. Press [Favorites] > [Menu] > [Add Favorite] in Fuel Prices List.
2. Enter the desired gas station and press [Q].

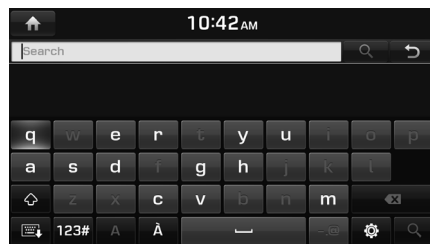

3. Select the desired item.

Deleting Favorites (USA Only)

 1. Press [Favorites] > [Menu] > [Delete] in Fuel Prices List.

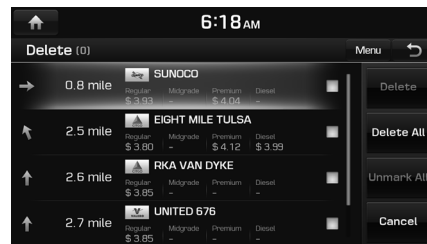

2. Select the item you want to delete and press [Delete].
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

SiriusXM™ Stocks Information

View real time information of the stock market.

Favorites

Press [Stocks] in SiriusXM Data screen.

Stocks added as favorites are displayed in the main screen.



<Stocks main screen>

 
! Note

When entering Stocks for the first time, if there are no favorites list, a [Search] screen is displayed.

Adding to Favorites

A maximum of 100 items can be added.

1. Press [Menu] > [Add Favorite] in Stocks main screen.
2. Enter the favorite stocks and press [Q].

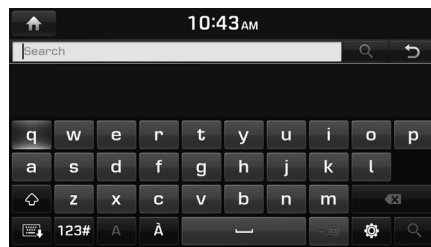


3. Select the desired item.


Reordering Favorites

The added items in Favorites can be reordered.

 1. Press [Menu] > [Reorder] in Stocks main screen.
2. Press the desired item.

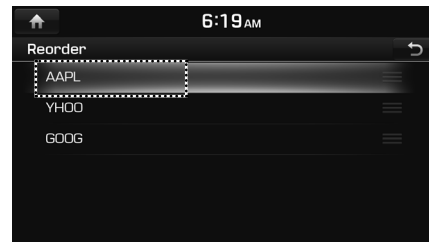


 3. Move up and down and press the selected item, or drag it to the desired position.

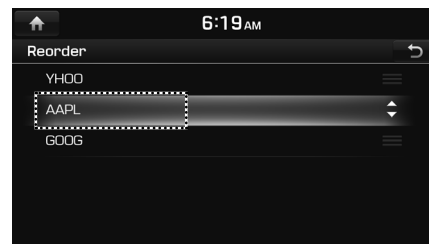

Deleting Favorites

 
1. Press [Menu] > [Delete] in Stocks main screen.

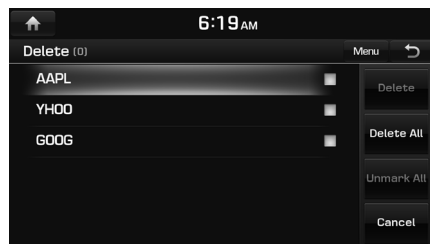


2. Select the item you want to delete and press [Delete].
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Stock Search

 1. Press [Search] in Stocks main screen.
2. Enter your favorite stocks and press [Q].

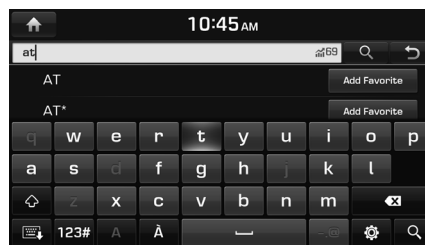

 3. Press [Add Favorite] to save them.

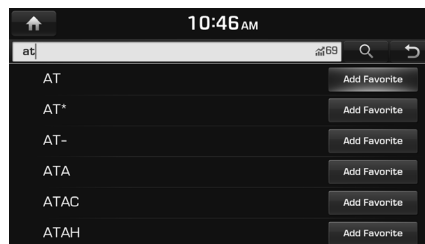


4. Added stocks will display in the Favorites screen.

SiriusXM™ Sports Information


Provides real-time information on scores and schedules all major sports.

 1. Press [Sports] in SiriusXM™ Data screen.

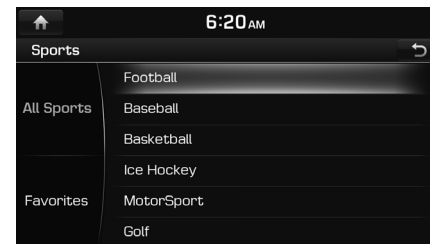


<Sports main screen>

 2. Press the desired item to view related sports information.

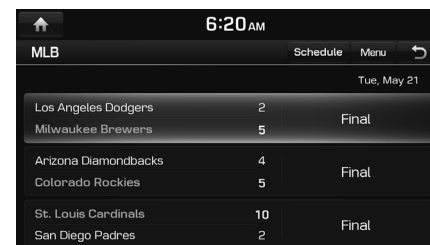


 - Press [Schedule] or [Menu] > [Schedule] to display schedules for the next seven days.
- Press [Score] or [Menu] > [Scores] to display scores for 2 days from today.
- Press [Menu] > [SXM Radio Game Zone] to tune into current games in Game Zone.
- Press [Menu] > [News] to check new information for each sport.

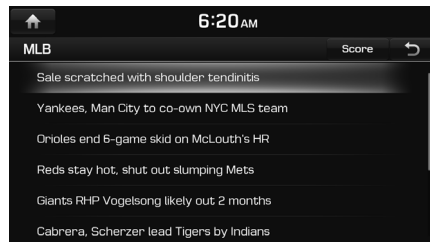

Favorites

 
1. Press [Favorites] in Sports main screen.
Football, Baseball, Basketball and Ice Hockey teams added as favorites will display in the Favorites list.

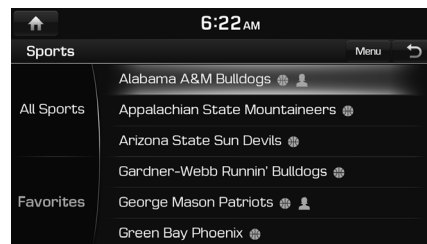

2. Select the favorite team.


! Note

 If there are no favorites added, press [Search] to find and add your favorite teams.



Adding to Favorites

 1. Press [Menu] > [Add Favorite] in Sports main screen.
2. Enter the favorite teams and press [Q].

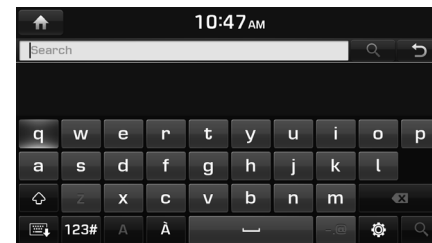


3. Select the desired item.


Reordering Favorites

The added items in Favorites can be reordered.

 1. Press [Menu] > [Reorder] in Sports main screen.
2. Press the desired item.

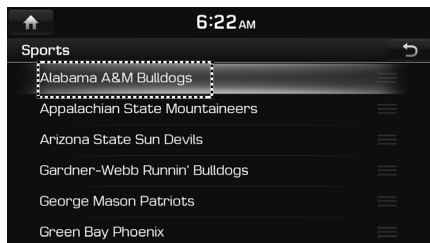


 3. Move up and down and press the selected item, or drag it to the desired position.

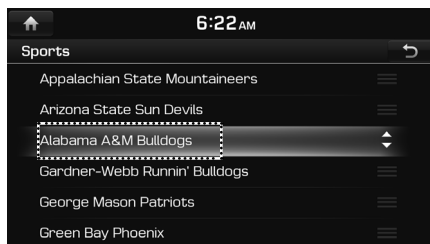

Deleting Favorites

 1. Press [Menu] > [Delete] in Sports main screen.

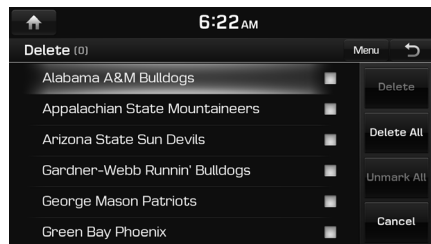

2. Select the item you want to delete and press [Delete].
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

SiriusXM™ Movie Times Information (USA Only)

You can check recent movies and nearby theaters, and also register your favorite theater locations.

Finding theater by searching for movie (USA Only)

1. Press [Movie Times] > [Movies] in SiriusXM™ Data screen.

 
The movie list is displayed in alphabetical order by default.



<Movies main screen>

- Press [Menu] > [Sort by] to sort the movies by ratings. Any movies rated higher will be filtered out.
- Press [i] to view more information about that movie.

2. Press the desired theater.
The theater list is displayed on the screen.

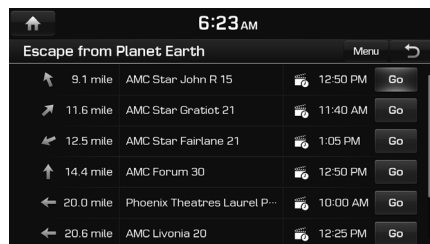


- Press [Menu] > [Sort by] > [Distance] or [Starting Time] to sort in Distance or Starting Time order.
3. Press [Go] > [Yes].

Viewing movie list by searching for theater (USA Only)


1. Press [Theaters] on the Movie Times main screen.

 The theater list is displayed on the screen.

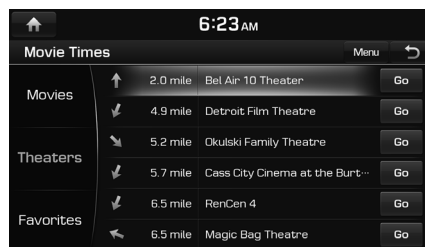

- Press [Menu] > [Sort by] > [Distance] or [A - Z] to sort in Distance or Alphabetical order.
- Press [Menu] > [Search] to search for the theater. For more details, refer to "Searching for gas station" on page 69.

 2. Press the desired theater.
The movie list is displayed on the screen.

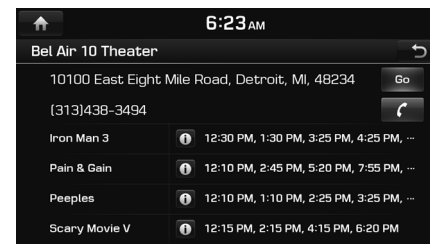


- Press [Go] > [Yes] to find the theater you selected.
- Press [Phone] to make a call to theater.
- Press [Info] to view more information about that movie.

Favorites (USA Only)

1. Press [Favorites] on the Movies main screen.

 
Favorites is displayed on the screen.
Favorites shows a list of theater added by the user.

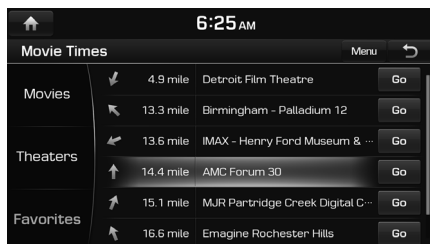

- Press [Menu] > [Add Favorite] to add the desired theater to Favorites. For more details, refer to “Adding to Favorites” on page 76.
 - Press [Menu] > [Delete] to delete the Favorites. For more details, refer to “Deleting Favorites” on page 76.
2. Press [Go] > [Yes].


! Note

 If there are no favorites added, press [Search] to find and add your favorite theaters.



Adding to Favorites (USA Only)

 
1. Press [Favorites] > [Menu] > [Add Favorite] on the Movie Times main screen.
2. Enter the favorite theater, press [Q].

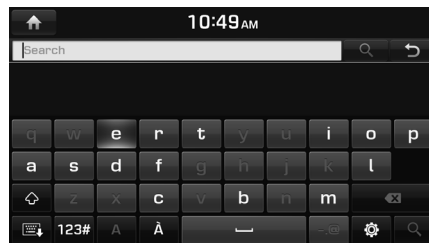

3. Select the desired item.

Deleting Favorites (USA Only)

 1. Press [Menu] > [Delete] on the Movie Times main screen.

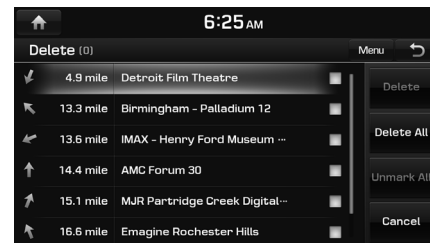

2. Select the item you want to delete and press [Delete].
 - [Delete All]: Deletes all items.
 - [Unmark All]: Unmarks all items.
 - [Cancel]: Exits delete screen.

Android Auto/Apple CarPlay

What is Android Auto/Apple CarPlay?

Securely access your smartphone while driving. Various functions of your smartphone are displayed on and operable from the screen of the multimedia device (e.g. navigation, making a call, listening to music etc.)

When connected, an Android Auto/Apple CarPlay icon appears on the screen. Available functions and operations may differ depending on the company model.

For more information, visit the Google or Apple website.

- Google: <http://support.google.com/androidauto/>
- Apple: <http://www.apple.com/ios/carplay/>

Cautions

- Android Auto is a registered trademark of Google Inc.
- Apple CarPlay is a registered trademark of Apple Inc.
- Android Auto and Apple CarPlay are unavailable if the phone OS is not the latest version or if the phone cannot be recognized due to a shutdown caused by a failure or defect in the device itself.

- Your phone may not be recognised if its battery is low. Charge your phone then try again.
 - If your phone is shut down due to a defect in the device itself, reset your phone and try again.
 - If the USB cable of the Android Auto/ Apple CarPlay device is repeatedly disconnected and reconnected in a short period of time, the phone may malfunction. This can also cause a device failure.
 - The device recognition time may differ depending on the device type and firmware/OS version.
 - Using the USB cable that came with the phone is recommended. (Using a non-genuine product may cause noise or malfunction.)
 - Normal operations cannot be guaranteed if the phone is arbitrarily manipulated while Android Auto/Apple CarPlay is active.
 - Apple CarPlay cannot be run while making a call via Bluetooth.
 - Android Auto or Apple CarPlay may not operate normally due to mobile phone issues.
 - Carrier charges may apply when using Android Auto or Apple CarPlay.
- ※ **Some features may not operate normally according to the version of iOS and Android.**

The following problems may occur due to phone-related issues:

[Android Auto]

- Intermittent black screens appear when entering Android Auto.
- Differentiation of phones that support Android Auto and those which do not, may not be possible.
- Black screens appear in some areas of the screen due to app errors.

[Apple CarPlay]

- Intermittent black screens appear when entering Apple CarPlay.
- Black screens appear in some areas of the screen due to app errors when navigating between screens in Apple CarPlay.
- The audio volume is depending on the volume status of the phone. If the phone volume is set to 0, then no sound will be hearable even if the multimedia system's volume is set to maximum.
- The sound output of a call may be cut upon disconnecting Apple CarPlay during a call via Apple CarPlay.

※ If services do not work properly due to problems similar to the specified above, check your phone, and if necessary, reconnect your phone after restarting.

Android Auto/Apple CarPlay

Using Android Auto or Apple CarPlay

1. Make sure only genuine USB cables are used that were provided by the mobile phone's manufacturer.
2. Enter [Android Auto] or [Apple CarPlay] from the [HOME] screen.
3. Now the features such as navigation, music and phone are ready to be used.

NOTICE

- Before connecting your mobile phone, check whether Android Auto or Apple CarPlay is activated in the [Phone Projection] menu.
- After connecting the mobile phone, the phone has to be unlocked and the disclaimers on the phone have to be accepted in order to launch Android Auto or Apple CarPlay.
- The screens and features displayed on the multimedia system correspond to the screens and features provided by Google or Apple. They are subject to changes according to the policy of the respective company.

NOTICE-Android Auto

- Bluetooth media features will be disabled when Android Auto is activated. After removing the USB cable, these features will be available again.
- If Android Auto is not activated even after a successful connection, follow these steps:
 - Check whether an error occurred on the phone.
 - Check whether Android Auto has been closed on the phone.
 - Check whether Android Auto is activated in the [Phone Projection] menu.
- If Android Auto does not work normally even after a reconnection has been made, visit the Google website <http://support.google.com/androidauto>.
- Please refer to the following websites to check the available countries for the [Android Auto].
<https://www.android.com/auto>

NOTICE-Apple CarPlay

- Bluetooth phone/media features will be disabled when Apple CarPlay is activated. After removing the USB cable, these features will be available again.
- If Apple CarPlay is not activated even after a successful connection, follow these steps:
 - Check whether Apple CarPlay is disabled in the iPhone's application settings.
 - Check whether Apple CarPlay is activated in the [Phone Projection] menu.
- If Apple CarPlay does not work normally even after a reconnection has been made, visit the Apple website <http://www.apple.com/ios/carplay/>
- Please refer to the following websites to check the available countries for the [Apple CarPlay].
<http://www.apple.com/ios/feature-availability/>

Connected Services (USA Only)

The Connected Services function is supported for vehicles purchased in USA.

Before using Connected Services

What is Connected Services?

This is a telematics service based on our cutting-edge IT system that makes your driving experience more convenient and fun and features safety, security, vehicle diagnostics, remote control and even smartphone synchronization functions.

Enjoy a smarter driving style with Connected Services.

What Is Telematics?

The word "Telematics" stems from the combination of telecommunications and informatics. It refers to an information system that provides a variety of driving information through the built-in terminal by analyzing each symptom and driving state. This allows for a much safer and more comfortable driving experience.

About Transmission and Reception of Radio Waves

Connection to the Connected Center or wireless data transmission may be disrupted in the following places.

For radio wave transmission/reception status, refer to the status displayed on the Connected Services screen.

 
It is recommended that you use the Connected Services system when the antenna icon (📶) shows four bars or more.

Places where Connected Services may be disrupted depending on the transmission/reception status:

- Inside tunnels
- Mountainous areas or dense forest
- Roads close to cliff edges
- Densely built-up areas
- On highways or roads underneath higher interchange roads
- Inside buildings

Using the Rear View Mirror Key

Selecting the Rear View mirror key will allow you to make service required inquiries, place info searches, and emergency rescues by connecting to the Connected Center. Such features can be used only after subscribing to the Connected Services service.

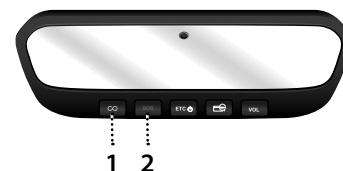

1. **CS (Connected Services) button**

Calls or ends the Connected Services call.

2. **SOS (SOS) button**

Calls or ends SOS call.

 
Connected Services (USA Only)

Connected Services Safety and Security

Auto Crash Notification

Provides immediate assistance when an accident occurs and an airbag is deployed.


In this event, an ACN signal, containing customer and location information, will automatically be transmitted to the response center. Upon receipt of the signal, a response specialist will attempt to establish voice communications with the vehicle occupants and forward any pertinent information to Connected Services emergency services.

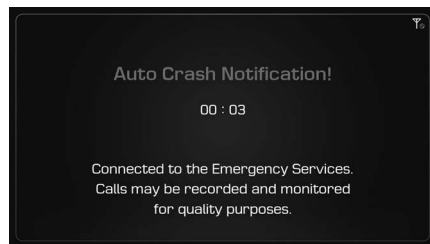

SOS

Customers request emergency Connected Services emergency services by pressing the dedicated "SOS" button in the vehicle. This action transmits vehicle information and location to specially trained response specialists, who assist in coordinating the dispatch of appropriate emergency assistance to the customer.

 The response specialist remains on the line with the customer until advised assistance has arrived.

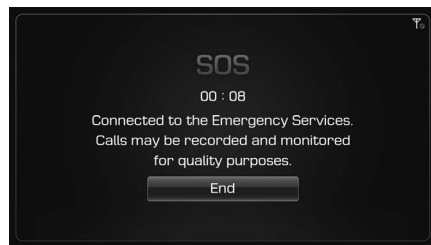

Stolen Vehicle Recovery

In the event a customer's vehicle is reported stolen (and a stolen vehicle report has been filed with the appropriate police department), the response center can provide assistance to the police in an attempt to recover the vehicle.

Vehicle Slowdown

Used with Stolen Vehicle Recovery, this enables law enforcement to gradually reduce the engine power of the vehicle, thus slowing it down to safe levels. A warning shall be transmitted to the driver prior to the slowdown procedure.

Vehicle Immobilization

 
Used with Stolen Vehicle Recovery, this enables law enforcement to send a signal to the vehicle which immobilizes the engine management system, thus preventing startup. This capability is only valid when the ignition is off, but can be saved for later immobilization if the vehicle is on or in motion at the time of signal transmission.

Connected Services (USA Only)

Getting Started with Connected Services

Use Connected Services features such as Driving Info and Vehicle Diagnostics. Connected Services features can be used after activating the service. A separate fee may be charged for using Connected Services, and features may differ according to your service plan.

1. Select [HOME] > [Connected Services].

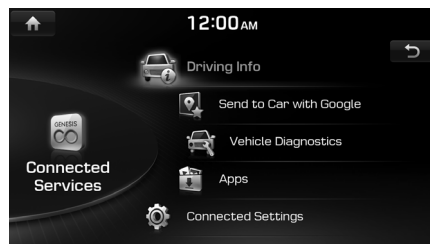

- [Driving Info]: Displays information such as Driving Time/Idle Time, Deceleration/Acceleration Distribution, Driving Speed and Driving Distance.
- [Send to Car with Google]: Displays information about Places received via Connected Services Voice Local Search.
- [Vehicle Diagnostics]: Inspects vehicle malfunctions and provides diagnostics.
- [Apps]: Displays paid or free applications with related information for installation.

- [Connected Settings]: Activates Connected Services service, sets Wi-Fi network, and displays modem information.

Driving Info

This service can be used while your car is stopped and the engine is on.

1. Select [HOME] > [Connected Services] > [Driving Info].



 
2. Select [Menu] > [Update] to receive up-to-date driving information.

Connected Services (USA Only)

Send to Car with Google

You can check information about Places received via Connected Services Voice Local Search. To use the "Send to Car with Google" function, first you need to sign up to the Connected Services.

1. Select [HOME] > [Connected Services] > [Send to Car with Google].

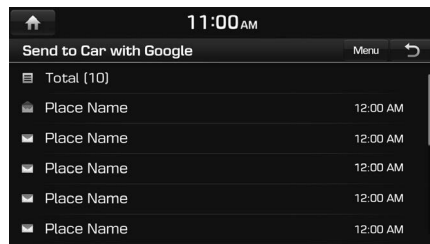

2. Select the desired place.



Feature	Description
1 Dial	Displays the phone number of a selected place. Press the number to make a call.
2 View Map	Displays the address of a selected place. Press the address to view map.
3 ◀/▶ (Previous/Next)	Displays the previous or next place information.

 
Vehicle Diagnostics

You can have your vehicle inspected only after stopping the vehicle because some control units can't be diagnosed while driving.


Vehicle Diagnostics will be canceled if you switch to another screen while diagnosis is in progress.

To receive result details, you need to first sign up to the Connected Services.

1. Select [HOME] > [Connected Services] > [Vehicle Diagnostics].

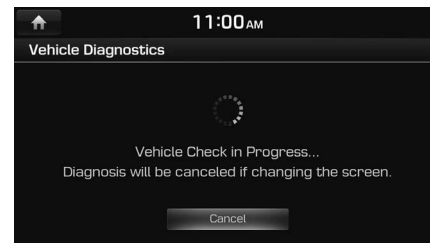

 2. Select the desired item.

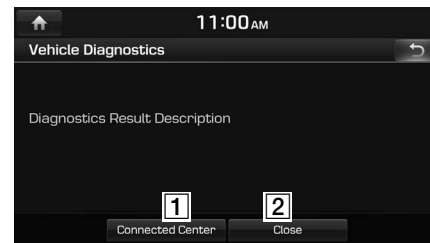

Name	Description
1 Connected Center	Calls the Connected Center to check for vehicle problems
2 Close	Ends the Vehicle Diagnostics.

Connected Services (USA Only)

 
Apps

Download Center



With Download Center, you can install paid/free applications or check for related information. Only Connected Center verified applications can be installed. You can use Download Center after agreeing to the terms of service and use on the screen. (Only 1 time for initial launch is required.)

Download Center and downloaded apps require a network connection through Wi-Fi.


1. Select [HOME] > [Connected Services] > [Apps].

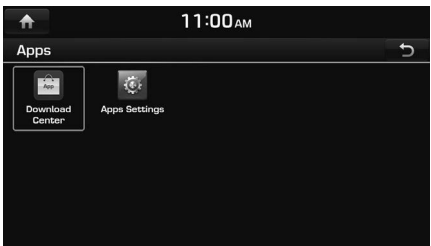

  2. 1) Select [Download Center].

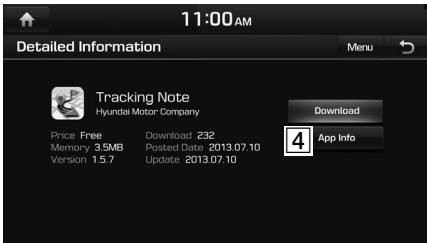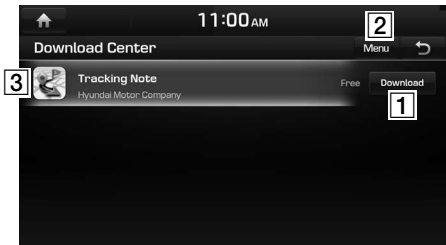

 - 2) Select [Download Center] > [Menu] > [My Apps].

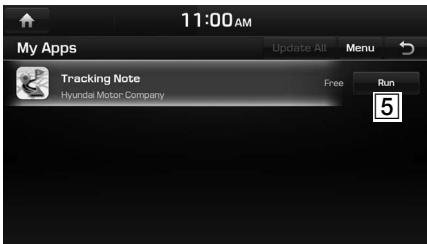

- [1]: Button state changes according to the application state.

Name	Description
Download	Downloads free applications.
Purchase	Downloads paid applications.
Re-download	Downloads deleted applications after previously installing them.
Retry	Downloads the applications that failed to download due to network or system errors.

Connected Services (USA Only)

Run	Runs installed applications.
Cancel	Cancels any downloads and updates.

- [2]: Updates and refreshes the app list, and shows [My Apps] screen.

Name	Description
Update	After installation, it shows applications requiring updates. The update screen shows the [Update All] button to update all applications that need updates.
Refresh	Refreshes the app list status.
My Apps	Moves to the My Apps screen.

- [3]: When the application list area is pressed, it moves to the Detailed Information screen.

- [4]: Shows more detailed information.

Name	Description
Preview	Displays application images.
Information	Displays application information.

- [5]: Button state changes according to the application state.

Name	Description
Re-download	Downloads deleted applications after previously installing them.
Update	Shows when applications require updates.
Run	Runs installed applications.

- [6]: Deletes the downloaded application.

Note

You can update applications already running only after closing them.

Apps Settings

Displays the applications that were downloaded through the Download Center.

Downloaded Apps

You can delete downloaded applications in the Download Center. To recover a deleted application, you can re-install the application with the Re-download function in the Download Center.

Select [HOME] > [Connected Services] > [Apps] > [Apps Settings] > [Downloaded Apps].



Connected Services (USA Only)

Storage

View the memory status of installed applications and available storage space.

Select [HOME] > [Connected Services] > [Apps] > [Apps Settings] > [Storage].



Connected Settings

Modem Information

This feature is used to show the MEID modem information.

Select [HOME] > [Connected Services] > [Connected Settings] > [Modem Information].



Wi-Fi Settings

This feature is used to set the Wi-Fi Application. You can share a digital-device network with the vehicle device through Wi-Fi.

1. Select [HOME] > [Connected Services] > [Connected Settings] > [Wi-Fi Settings].



2. Select the desired item.

- [Wi-Fi On/Off]: Select [On] or [Off] to turn the Wi-Fi on/off.



Displays the MAC address.

- [Wi-Fi Network]: Registers a network ID/ password to connect to a network AP (Access Point).

Connected Services (USA Only)




Name	Description
1  (Refresh)	Searches available networks near the vehicle.
2 Network Name	Displays available network AP (Access Point) names.
3 Add Wi-Fi Network	Searches for hidden APs to connect to.

The list of APs found is updated every 6 seconds when in Wi-Fi Settings. You can also search for new APs by selecting [ Refresh].

3. Select a network AP name to connect (e.g. Android_Hotspot).



 - In case of a secured AP, you may be required to enter a password.

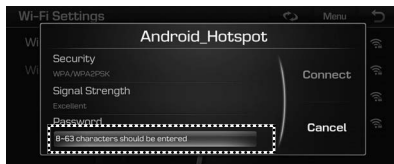

- If you cannot see the desired AP to connect to in the list, select [Menu] > [Add Wi-Fi Network]. (Up to five APs can be added.)




Name	Description
4 Network SSID	The unique name of the AP you want to connect to. (SSID is short for Service Set Identifier.)
5 Security	The pre-configured security type. (A password is required in the case of WEP and WPA/WPA2-PSK.)

4. Check the changed status of the Wi-Fi icon and the text "Connected" under the network AP name to ensure that the AP is enabled.



- If you select the currently connected AP or a previously connected AP from the list (up to 30 APs can be saved), you can view the following information.

 Connected Services (USA Only)

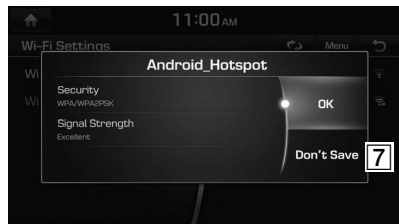

Name	Description
6 Disconnect	Disconnects the currently connected AP.

7 Don't Save

This option is only shown in the information window of an AP that you have connected to at least once. Selecting this option deletes the AP from the saved AP list. (Note: When you reconnect to an unsaved AP, you will have to enter its connection information again.)

! Note

If you connect to a Wi-Fi network after signing up for Connected Services, then you will be preferentially connected to a Wi-Fi network whenever you use Download Center or any downloaded apps.

Service Activation

1. Select [HOME] > [Connected Services] > [Connected Settings] > [Service Activation].



2. Select [Activation].

! Note

- Activation may take up to five minutes.
- Do not turn the engine off while activation is in progress.
- If activation fails, contact the Connected Center at 844-340-9741.
- During service activation, the hard keys in the head unit do not work.

P/N:MBM66364293