


Lincoln Navigator LS 2003 – 2006 fuse box diagram

Passenger compartment fuse panel

The fuse panel is located on the right-hand side kick panel.

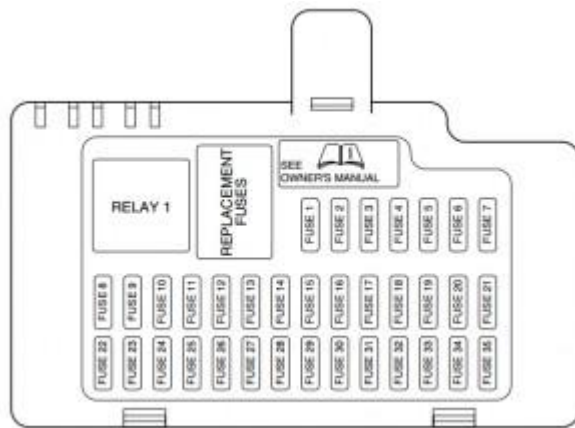

Lincoln Navigator LS – fuse box –

passenger compartment


No.	A	Circuit Protected
1	5	Starter relay coil
2	5	Radio
3	5	ABS/TCS/AdvanceTrac®
4	5	Cluster, Powertrain Control Module (PCM) relay, Fuel pump relay, REM
5	10	2003-2006: Restraints Control Module (RCM), Passenger Occupant Detection System (PODS) electronic control unit
	5	2000-2002: T/A switch, O/D cancel switch, Autolamp sensor, Heated seat modules, VCS (2002)

6	10	OBD II
7	5	DDM, DSM, Anti-theft LED, Power mirror switch, Electric Park Brake switch, PCM (2000-2001), Security horn
8	5	Right front turn, Right front sidemarker, Right front park lamps, Right front repeater (2000-2003)
9	15	2003-2006: Right front low beam/HID
	10	2000-2002: Right front low beam
10	5	Left front turn, Left front sidemarker, Left front park lamps, Left front repeater (2000-2003)
11	10	Left front high beam
12	5	2003-2006: Electrochromic mirror, Rain sensor (2003) 2002: Headlamp leveling
	10	2000: Headlamp leveling
13	5	Cluster
14	5	2003-2006: DATC
	10	2000-2002: RCM, DATC
15	5	2000-2002: Spare 2003-2006: O/D cancel, ABS/Traction-Assist switch

16	5	Heated seat controls, Climate control seat module (2003-2006), Electrochromic mirror (2000-2002), Rain sensor module (2000-2002)
17	5	RCM, Alternator warning lamp
18	20	Radio, CIA, Navigation unit (2003-2006)
19	15	Tilt/Tele motors
20	10	FEM, DATC, Cluster, REM, Brake shift interlock (2000-2002)
21	10	2000-2002: Power folding mirrors
	7.5	2003-2006: Spare
22	10	DDM, Driver door mirror (2002-2006)
23	10	Right front high beam
24	5	PATS
25	15	2003-2006: Left front low beam/HID
	10	2000-2002: Left front low beam
26	5	2003-2006: Wiper module
	10	2001-2002: Wiper relay, Windshield washer
	3	2000: Wiper relay

27	10	Radio, Navigation unit (2003-2006), Cellphone (2000-2002), VCS (2002)
28	5	2000-2001: Security horn 2002-2006: Not Used (spare)
29	5	FEM, Reverse park assist (2003-2006), Trailer tow ignition sense (2000-2001), VEMS (2000-2001)
30	5	FEM, Passenger power mirror (2003-2006)
31	—	Not used
32	20	Cigar lighter
33	10	Switch backlighting, FEM (2002-2006)
34	10	Spare
35	5	Stop lamp signal
Relay		
R1	Accessory (cigar lighter, power point)	

Engine Compartment Fuse Box

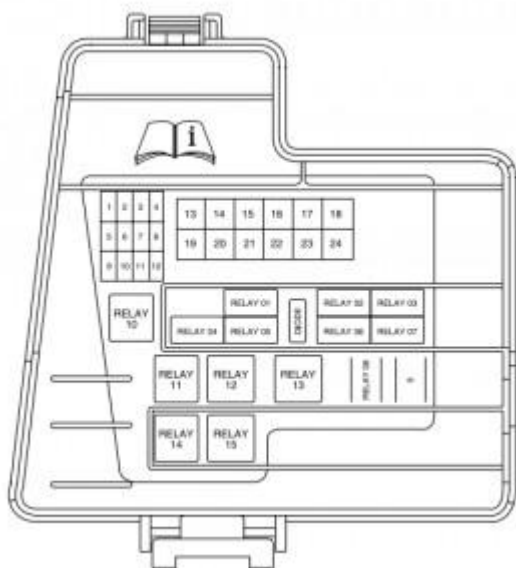

Lincoln Navigator LS – fuse box diagram –
front power distribution box

No.	A	Circuit Protected
1	10	A/C clutch, Coolant control valve (2003-2006), Auxiliary coolant pump (2003-2006)
2	10	2000: Windshield washer pump
3	15	Fog lamp
4	20	2003-2006: Horn
	15	2000-2002: Horn
5	15	2003-2006: Fuel injectors, Electric cooling fan, Mass Air Flow (MAF) sensor
	20	2000-2002: Fuel injectors


6	15	Transmission solenoid, EGR (2003-2006)
7	—	Not used
8	—	Not used
9	5	2002: PCM KAPWR
10	5	2002: IAC Solenoid
11	15	HEGOs
12	15	2003-2006: Coil-on-plug
	10	2000-2002: Coil-on-plug
13	30	Heated wiper park
14	30	ABS module
15	—	Not used
16	30	Blower motor
17	20	2000-2002: Thermactor air pump (low emission vehicles only)
18	40	2000-2002: PCM
19	30	2003-2006: Electric park brake

20	30	Wiper motor
21	30	Starter solenoid
22	40	2003-2006: ABS motor
	30	2000-2002: ABS motor
23	—	Not used
24	—	Not used
Relay		
R01	2000-2002: Wiper Hi/Lo	
R02	2000-2002: Wiper park	
R03	Coil-on-plug and HEGOs	
R04	2003-2006: Right-hand HID headlamps 2000: Windshield washer	
R05	Auxiliary coolant pump	
R06	2003-2006: Left-hand HID headlamps 2000-2002: Horn	
R07	Fog lamps	

R08	A/C clutch
R09	2000-2002: Wiper Run/Acc
R10	Blower motor
R11	Not used
R12	Heated wiper park
R13	2003-2006: Horn
R14	PCM power
R15	Starter motor
Diode	
D	PCM

Luggage Compartment Fuse Box

The rear power distribution box is located in the luggage compartment under the spare tire well cover.

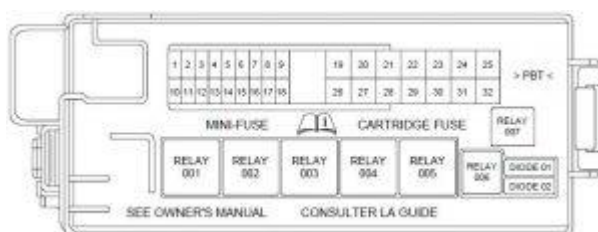

Lincoln Navigator LS – fuse box diagram

– luggage compartment

No.	A	Circuit Protected
-----	---	-------------------

1	15	Decklid release solenoid, Passenger door lock motors (2002-2006), Steering column lock (2003)
2	10	Right rear turn lamp, License plate lamp (2002-2006)
3	5	Left rear stop/tail lamp
4	10	Fuel door release solenoid, Decklid lamp (2003-2006)
5	10	Courtesy and map lamps, Radio antenna module (2003-2006)
6	10	Left rear turn and back-up lamps
7	5	Right rear stop/tail lamp
8	5	2003-2006: Center high-mounted stop lamp
	10	2000-2002: Center high-mounted stop lamp
9	5	Heated mirror
10	20	2001-2006: Power point – console
11	20	2003-2006: Rear heated seats
	15	2000-2002: Heated seats
12	20	2003-2006: Power point – ashtray
	5	2000-2002: Transit relay

13	—	Not used
14	10	2003-2006: Navigation unit
	5	2000-2002: Phone, CD, VEMS
15	5	Alternator sense
16	20	Moonroof
17	15	Fuel pump
18	20	2000-2006: Subwoofer amp
	30	2004-2006: THX amp, Subwoofer amp
19	20	REM – Left rear window
20	30	2003-2006: Front window motors
	20	2000-2002: DDM – Driver window
21	20	Driver lumbar, Power seats
22	20	Ignition switch
23	30	SSP4
24	30	SSP3

25	40	P-J/B
26	30	2003-2006: Climate control seat module
	20	2000-2002: FEM – Front passenger window
27	30	SSP1
28	20	Passenger lumbar, Power seats
29	40	2003-2006: Rear defroster
	30	2000-2002: Rear defroster
30	20	REM – Right rear window
31	30	2003-2006: Powertrain main power
	20	2001-2002: Ignition switch (V6 manual trans)
32	30	SSP2
Diode		
D01	Not used	
D02	Fuel pump motor	
Relay		

R001	SSP1
R002	SSP4
R003	Rear defroster
R004	SSP3
R005	SSP2
R006	Not used
R007	Fuel pump