

Dodge Viper 2008 – 2010 fuse box diagram

Power Distribution Center

A power distribution center is located in the engine compartment on the driver's side of the vehicle.

Cavity	Cartridge fuse	Mini fuse	Circuits
1	40	—	Blower Motor
2	40	—	Anti-Lock Brakes (ABS) Pump Feed/Starter
3	30	—	Body Control Module (BCM) – Battery Feed
4	20	—	Amplifier
5	30	—	Ignition Switch Run/Accessory Feed – Windows/Adjustable Pedals
6	40	—	Body Control Module (BCM) – Battery Feed
7	30	—	Anti-Lock Brakes (ABS) Module
8	30	—	Ignition Switch Run/Accessory Feed
9	40	—	Headlights
10	30	—	Ignition Switch Run Feed
11	—	20	Auto Shutdown Relay (ASD)

12	—	20	Cigar Lighter
13	—	15	Hazard Flasher
14	—	20	Auto Shutdown Relay (ASD)
15	—	20	Rear Window Defogger (EBL)
16	—	20	Selectable Power Outlet
17			
18	—	15	Ignition Off Draw (IOD)
19	—	15	Horn
20	—	15	Air Conditioning (A/C) Clutch Relay
21	—	15	Stop Light Switch
22	—	25	Fuel Pump/Powertrain Control Module (PCM)
23	—	10	Airbag
24			
60	—	15	Ignition Run/Start Relay Feed
61			

61	—	15	Gauges
63			
64	—	10	Airbag
65			
66	—	20	Wiper Switch
67			
68	—	20	Left HID Headlight
69			
70	—	20	Right HID Headlight
71			

Fuses (Mini-Power Distribution Center)

A mini-power distribution center is located in the engine compartment on the passenger's side of the vehicle.