


Toyota Previa First Generation mk1 XR10, XR20; 1990–1999 fuse box diagrams


Year of production: 1990, 1991, 1992, 1993, 1994, 1995, 1996, 1997, 1998, 1999

Instrument panel

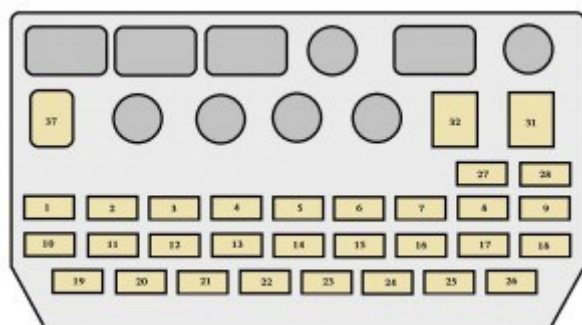

Toyota Previa mk1 – fuse box – instrument panel

Front compartment

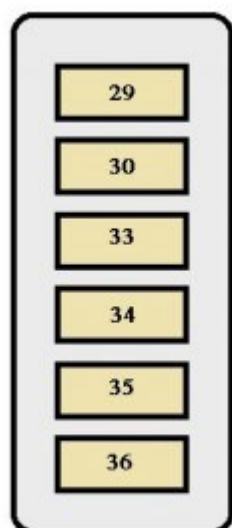

Toyota Previa mk1 – fuse box – front compartment

Fuses (type A)

Fuse		Ampere rating [A]	Circuit
1	ST	7,5	Starter system
2	IGN	7,5	Charging system, discharge warning light, emission control system, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
3	OBD	7,5	On-board diagnosis system
4	FOG	20	Front fog lights
5	T/M ACC	7,5	Automatic transmission shift indicator

6	TAIL	15	Tail lights, parking lights, side marker lights, license plate lights, instrument panel lights
7	HAZ-HORN	15	Emergency flashers, horns, turn signal lights
8	HEAD (LH)	15 (USA)	Left-hand headlight
	HEAD (LH-L WR)	10 (Canada)	
9	HEAD (RH)	15 (USA)	Right-hand headlight
	HEAD (RH-L WR)	10 (Canada)	
10	ENGINE	7,5	Charging system, emission control system
11	RADIO	7,5	Radio, cassette tape player, Compact Disc player
12	ST-A	7,5	Starter system
13	STOP	20	Stop lights, anti-lock brake system
14	DOME	15	Interior lights, luggage compartment light, clock, open door warning light, radio, cassette tape player, Compact Disc player
15	DEFOG	15	Rear window defogger
16	ECU-B	15	Anti-lock brake system, electronically controlled automatic transmission system
17	CIG	15	Cigarette lighter, digital clock display, power rear view mirrors, theft deterrent system, SRS airbag system, automatic transmission shift lock system
18	EFI	15	Multiport fuel injection system/sequential multiport fuel injection system
19	TURN	7,5	Turn signal lights
20	GAUGE	10	Gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), back-up lights, automatic transmission overdrive system, rear window defogger, electric rear sun roof, power windows, power door lock system
21	FR-WIPER	30	Windshield wipers and washer
22	ENGINE OIL	15	Engine oil autofeed system
23	RR-WIPER	15	Rear window wiper and washer
24	A/C	15	Air conditioning cooling system, cool box

25	ECU-IG	15	Cruise control system, electronically controlled automatic transmission system, anti-lock brake system, theft deterrent system
26	FR-W ASHER	10	Windshield washer motor
27	HEAD (LH-UPR)	10	Left-hand headlight (Canada only)
28	HEAD (RH-UPR)	10	Right-hand headlight (Canada only)
29	ALT-S	7,5	Charging system
30	AM2	20	Charging system, discharge warning light, emission control system, multiport fuel injection system/ sequential multiport fuel injection system

Fuses (type B)

Fuse	Ampere rating [A]	Circuit
31 DOOR	30	Power door lock system, theft deterrent system
32 POWER	30	Electric rear sun roof, power windows

Fuses (type C)

Fuse	Ampere rating [A]	Circuit
33 ABS	60	Anti-lock brake system
34 ALT	100	"ABS", "AM1", "STOP", "DEFOG", "FOG", "ECU-B", "TAIL", "A/C" and "RR A/C" fuses, and "FR-HTR" circuit breaker
35 AM1	50	"ENGINE", "GAUGE", "TURN", "FR-WIPER", "ECU-IG", "A/C", "RADIO", "CIG", "ST", "POWER" and DOOR" fuses
36 MAIN	50	"HAZ-HORN", "DOME", "HEAD (LH)", "HEAD (RH)" and "EFI" fuses

Circuit breaker

Fuse	Ampere rating [A]	Circuit
37 FR-HTR C/B	40	Air conditioning control system

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.