

Toyota Celica (T200; 1996-1999) fuses

*In this article, we consider the sixth-generation Toyota Celica (T200), produced from 1993 to 1999. Here you will find fuse box diagrams of **Toyota Celica 1996, 1997, 1998 and 1999**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Celica:

Fuse Layout Toyota Celica 1996-1999



Cigar lighter (power outlet) fuse in the Toyota Celica is the fuse #25 “CIG & RAD” in the Instrument panel fuse box.


Passenger Compartment Fuse Boxes

Fuse Box Location

There are two fuse boxes in the passenger compartment. The first is behind the cover on the control panel, and the second is behind the cover on the passenger's side kick panel.



Fuse Box Diagram

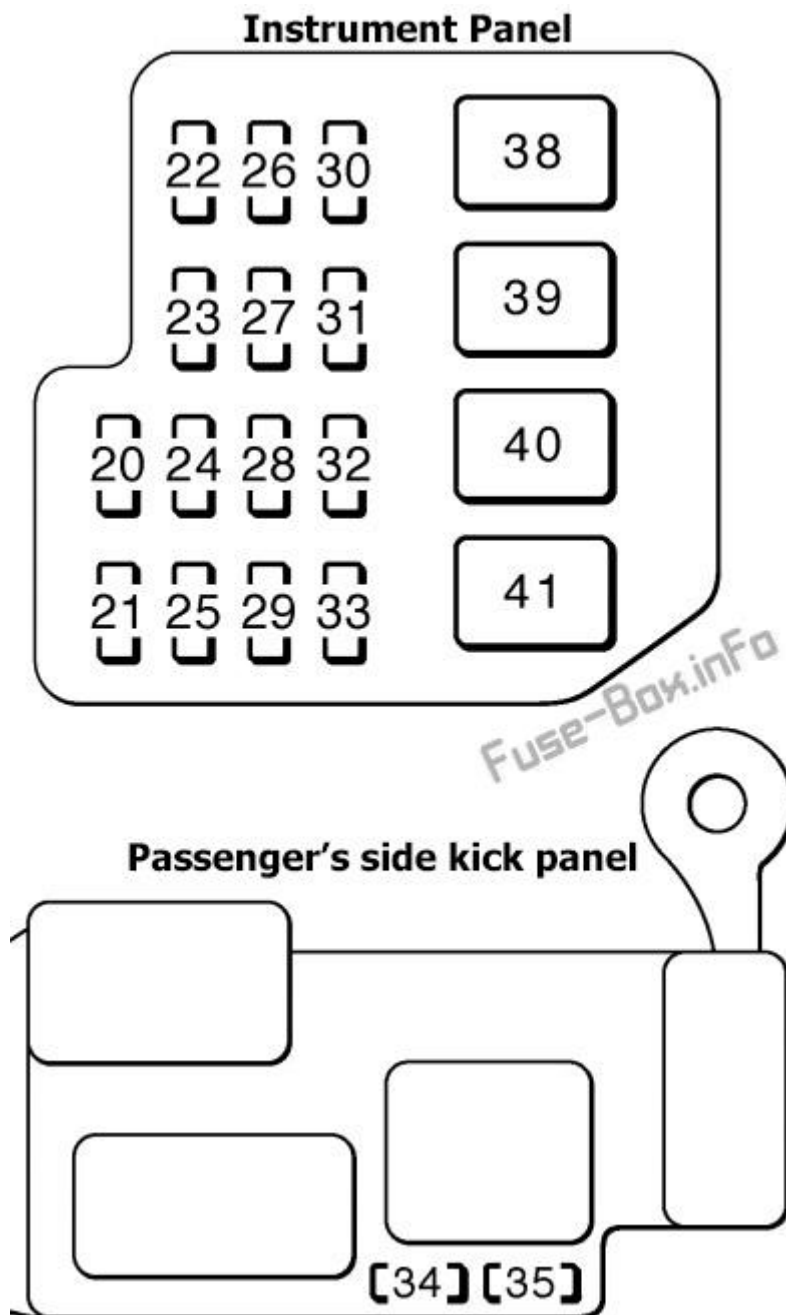

Advertisements

Assignment of the fuses in the passenger compartment

Nº	Name	Amp	Description
20	ECU-IG	15A	Electronically controlled automatic transmission system, antilock brake system
21	SEAT-HTR	20A	No circuit
22	PANEL	7.5A	Instrument panel lights


No	Name	Amp	Description
23	STOP	15A	Stop lights, high mounted stoplight, multiport fuel injection system/sequential multiport fuel injection system, cruise control system cancel device, electronically controlled automatic transmission system, anti-lock brake system
24	FOG	20A	Front fog lights
25	CIG & RAD	15A	Cigarette lighter, digital clock display, car audio system
26	IGN	7.5A	Charging system, discharge warning light, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
27	WIPER	20A	Windshield wipers and washer, rear window wiper and washer
28	MIR-HTR	10A	Multiport fuel injection system/sequential multiport fuel injection system
29	TURN	10A	Turn signal lights, emergency flashers
30	TAIL	15A	Tail lights, parking lights, front side marker lights, rear side marker lights, license plate lights
31	HTR	10A	Air conditioning system, rear window defogger
32	GAUGE	10A	Gauges and meters, power door lock system
33	ST	7.5A	Starting system, multiport fuel injection system/sequential multiport fuel injection system
34	A/C	10A	Air conditioning system
35	OBD II	7.5A	On-board diagnosis system
38	AM1	40A	Electronic ignition system/ distributor ignition system
39	DOOR	30A	Power door lock system, convertible top control system

№	Name	Amp	Description
40	DEF	30A	Rear window defogger
41	POWER	30A	Power windows, electric moon roof

Engine Compartment Fuse Boxes

Fuse Box Location


The fuse box is located next to the battery. In versions for Canada (and in some others), there is an additional fuse box nearby.

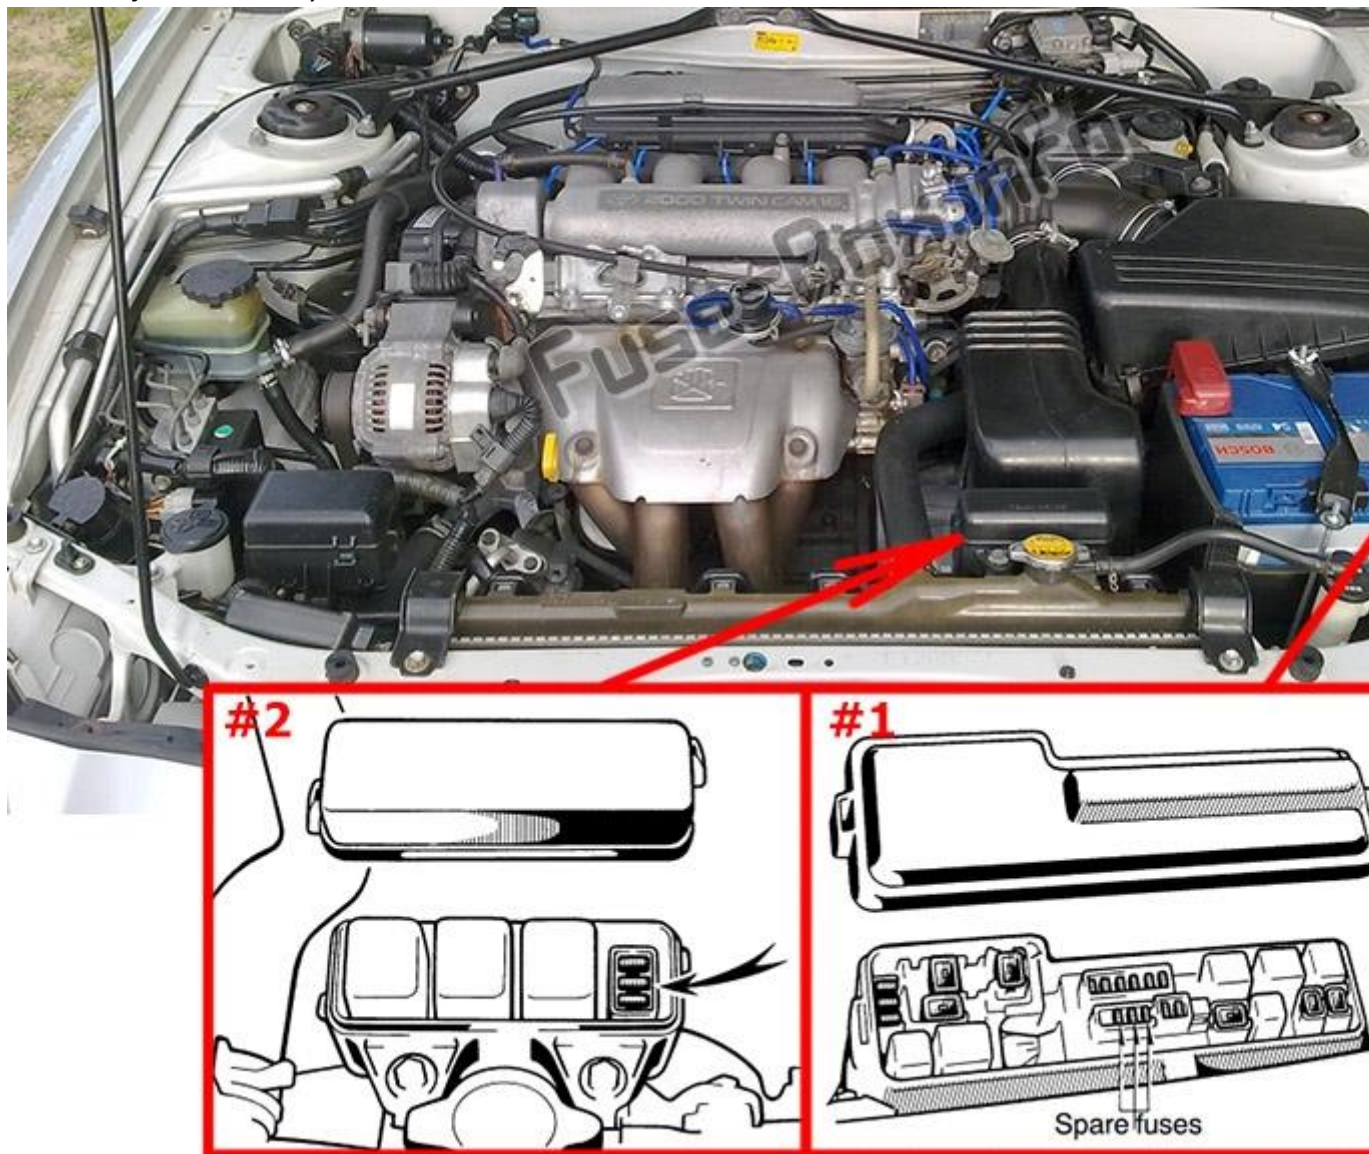



Advertisements

Fuse Box Diagram

#1

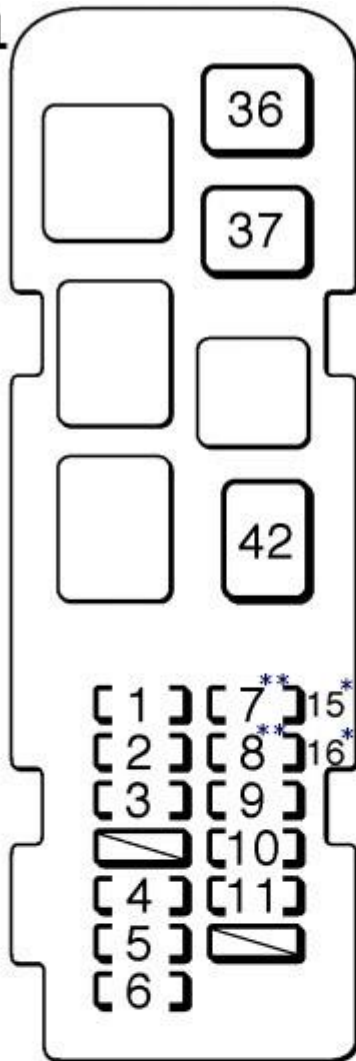

#2

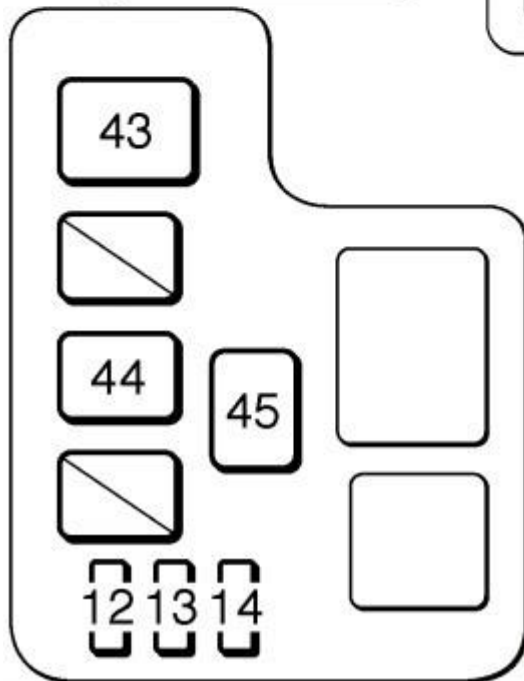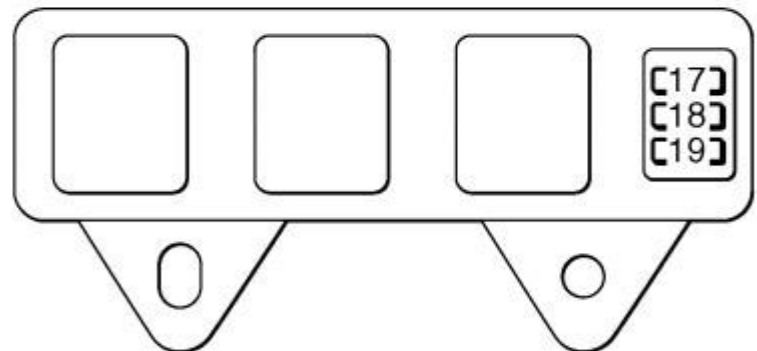

* - Canada
** - US

Fuse-Box.info

Assignment of the fuses in the engine compartment

No	Name	Amp	Description
1	AM2	30A	Starting system
2	HAZARD	10A	Emergency flashers
3	HORN	7.5A	Horns
4	RADIO No.1	20A	Car audio system
5	ECU-B	15A	Anti-lock brake system, cruise control system
6	DOME	10A	Interior lights, personal lights, luggage compartment light, trunk light, door courtesy lights, clock
7	HEAD (LH)	15A	Left-hand headlight
8	HEAD (RH)	15A	Right-hand headlight
9	SPARE		Spare
10	SPARE		Spare
11	SPARE		Spare
12	ALT-S	7.5A	Charging system
13	SRS WRN	7.5A	SRS airbag warning light
14	EFI	15A	Multiport fuel injection sys-tem/sequential multiport fuel injection system
15	HEAD (LH) LO	15A	Left-hand headlight (low beam)
16	HEAD (RH) LO	15A	Right-hand headlight (low beam)
17	HEAD-HI (RH)	15A	Right-hand headlight (high beam)

No	Name	Amp	Description
18	HEAD-HI (LH)	15A	Left-hand headlight (high beam)
19	DRL	7.5A	Daytime running light system
36	RDI	30A	Electric cooling fan
37	CDS	30A	Electric cooling fan
42	HTR	40A	Air conditioning system
43	ALT	100A	"ALT-S", "TAIL", "DOOR", "DEF" and "POWER" fuses
44	MAIN	60A	Starting system, headlights, "AM2", "HAZARD", "HORN", "DOME" and "RADIO" fuses
45	ABS	50A	Anti-lock brake system