


Charging

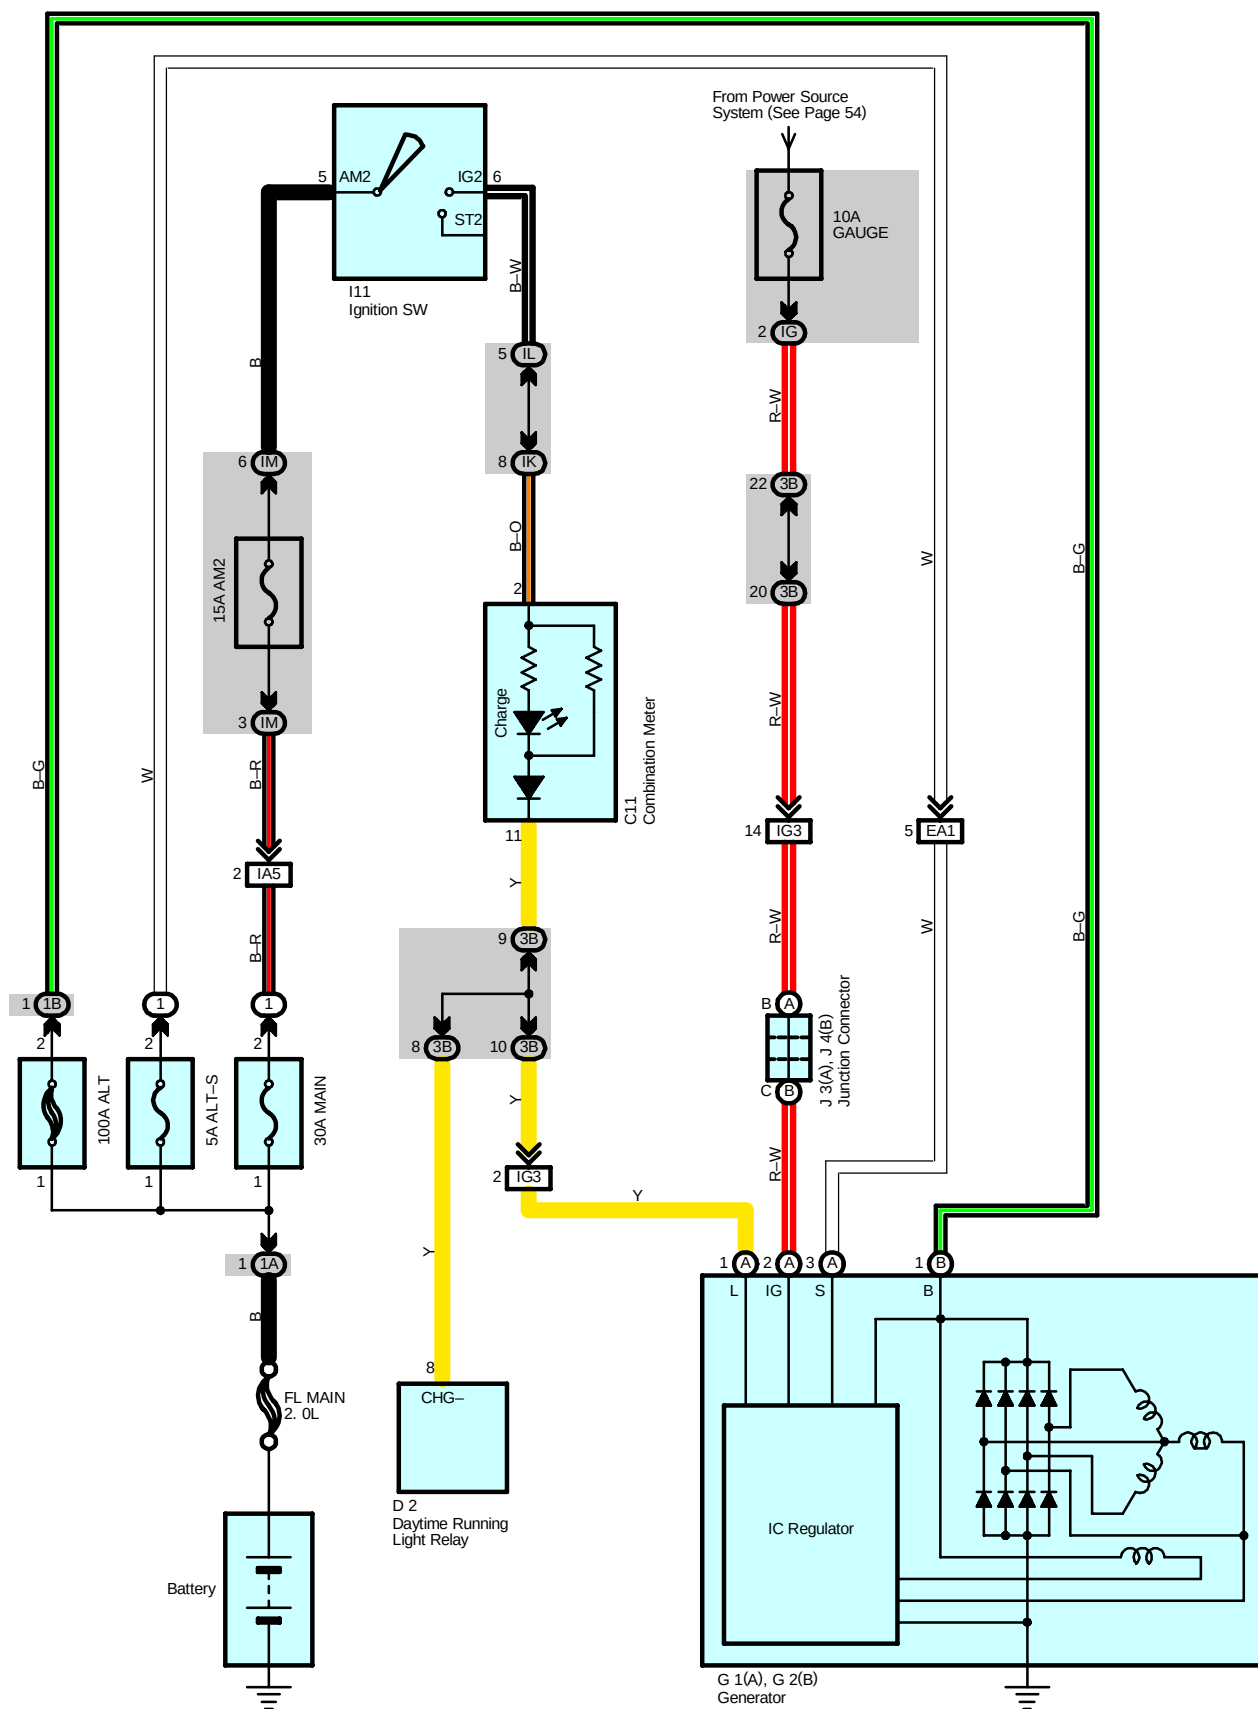

Service Hints

G1 (A) Generator

(A) 3–Ground : 13.2–14.0 volts with the engine running at 5000 rpm and 115°C (239°F)

(A) 1–Ground : 0–4 volts with the ignition SW at ON position and the engine not running

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C11	38	G1	A 36 (1ZZ–FE)	I11	39
D2	38	G2	B 34 (2ZZ–GE)	J3	A 39
G1	A 34 (2ZZ–GE)		36 (1ZZ–FE)	J4	B 39

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
1B		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ–GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	44 (1ZZ–FE)	
IA5	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)