


Power Outlet (12V)

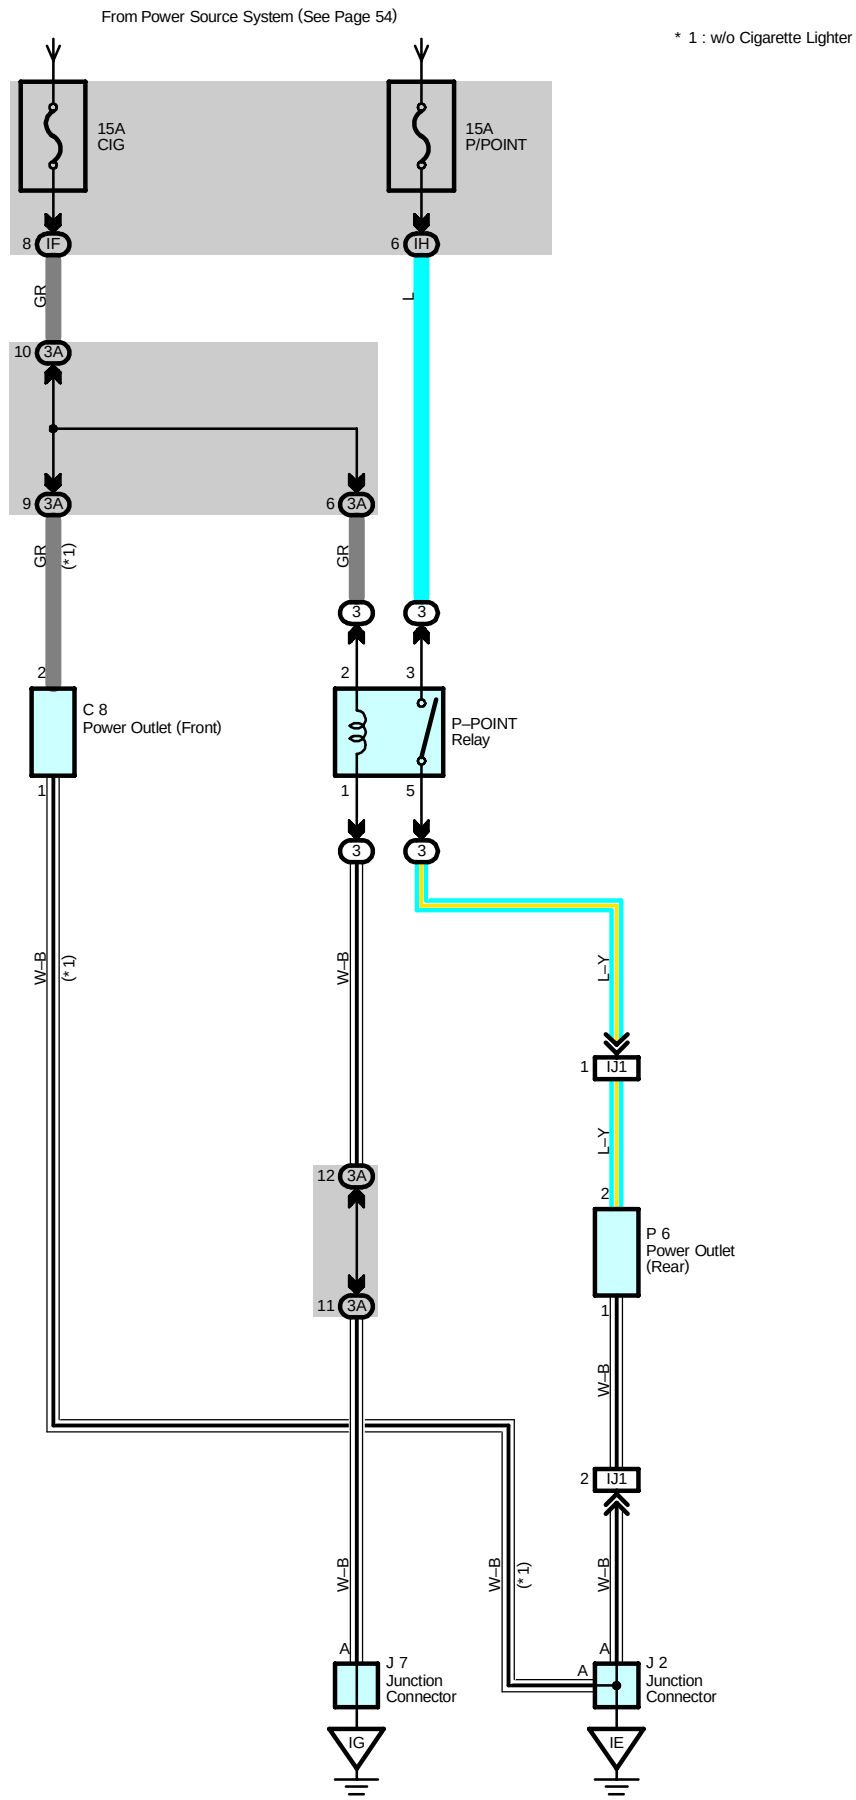

Service Hints

P-POINT Relay

3-5 : Closed with ignition SW at ACC or ON position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	J7	39		
J2	39	P6	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	48	Console Wire and Instrument Panel Wire (Front Side of the Parking Brake Lever)

: Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
IG	46	Right Kick Panel