


Pontiac GTO 2004 – 2006 fuse box diagram

Instrument Panel Fuse Block

This fuse block is located under the driver's side of the instrument panel.

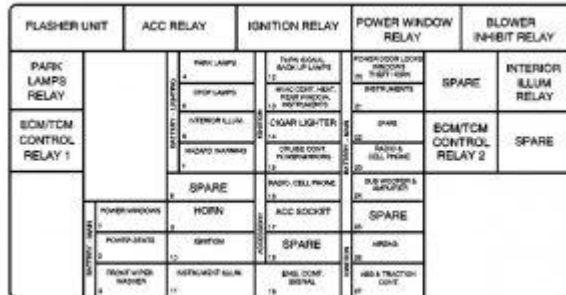

Pontiac GTO – fuse box – instrument

panel

Fuses	Usage
FLASHER UNIT	Hazard Warning Flashers
POWER WINDOWS	Power Window Switches
POWER SEATS	Power Seat Controls
FRONT WIPER WASHER	Front Windshield Wiper Washer
PARK LAMPS	Parking Lamps
STOP LAMPS	Stop Lamps
INTERIOR ILLUM	Interior light Controls
HAZARD WARNING	Hazard Warning Flashers

SPARE	Spare
HORN	Horn
IGNITION	Ignition Switch
INSTRUMENT ILLUM.	Instrument Panel Lighting
TURN SIGNAL, BACK UP LAMPS	Turn Signal Lamp, Back-Up Lamps
HVAC CONT. HEAT, REAR WINDOW, INSTRUMENTS	Heater Controls, Rear Window, Trip Computer
CIGAR LIGHTER	Cigarette Lighter
CRUISE CONT. POWER MIRRORS	Cruise Control, Power Mirror
RADIO, CELL PHONE	Radio System, Cell Phone
ACC. SOCKET	Accessory Power Outlet
SPARE	Spare
ENG. CONT. SIGNAL	Engine Control Signal
POWER DOOR LOCKS, WINDOWS & THEFT HORN	Power Door Locks, Power Windows, Theft System, Horn
INSTRUMENTS	Instruments
SPARE	Spare

RADIO & CELL PHONE	Radio System, Cell Phone
SUB WOOFER & AMPLIFIER	Sub Woofer and Amplifier
SPARE	Spare
AIRBAG	Airbag
ABS & TRACTION CONT	Anti-Lock Brake System, Traction Control System

Relays	Usage
ACC RELAY	Accessory Power Outlet
IGNITION RELAY	Ignition Switch
POWER WINDOW RELAY	Power Windows
BLOWER INHIBIT RELAY	Blower
PARK LAMPS RELAY	Parking Lamps
SPARE	Spare
INTERIOR ILLUM RELAY	Interior Light Controls
ECM/TCM CONTROL RELAY 1	Engine Control Module, Transmission Control Module 1

ECM/TCM CONTROL RELAY 2	Engine Control Module, Transmission Control Module 2
SPARE	Spare

Engine Compartment Fuse Block

The engine compartment fuse block is located in the engine compartment and protects all electrical loads.

IGN	FUEL PUMP RELAY	IGN RELAY	LOW BEAM RELAY	ENGINE COOL FAN 2 RELAY	ENGINE COOL FAN 3 RELAY	ENGINE COOL FAN 1 RELAY	BLOWER	WASH FL	ENGINE FL	ABS FL	LIGHTING FL	ENGINE FL
IGN/IGN	FOG LAMP CANCEL RELAY	HIGH BEAM RELAY	A/C RELAY	ENGINE COOL FAN 1 RELAY	ENGINE COOL FAN 2 RELAY	HEATED REAR WINDOW RELAY	BLOWER RELAY	START RELAY	REAR WINDOW	SPARE	SPARE	ABS FL
IGN/IGN	FOG LAMP RELAY	DAYTIME RUNNING LAMP RELAY	HORN RELAY	ENGINE COOL FAN 1 RELAY	ENGINE COOL FAN 2 RELAY	HEATED REAR WINDOW RELAY	BLOWER RELAY	START RELAY	REAR WINDOW	SPARE	SPARE	ABS FL
IGN/IGN	FOG LAMP RELAY	DAYTIME RUNNING LAMP RELAY	HORN RELAY	ENGINE COOL FAN 1 RELAY	ENGINE COOL FAN 2 RELAY	HEATED REAR WINDOW RELAY	BLOWER RELAY	START RELAY	REAR WINDOW	SPARE	SPARE	ABS FL

Pontiac GTO – fuse box – engine

compartment

Fuses	Usage
INJ/IGN	Fuel Injectors and Ignition Modules
INJ/IGN	Fuel Injectors and Ignition Modules
ENG SENSORS	Engine Sensors
AUTO TRANS	Automatic Transmission
LH HEADLAMP	Left Headlamp
RH HEADLAMP	Right Headlamp
ENG CONT. BCM	Engine, Body Control Module
FUEL PUMP	Fuel Pump

RAD FAN 1 F/L	Engine Cooling Fan 1
BLOWER F/L	Blower Fan
MAIN F/L	Main
ENGINE F/L	Engine
ABS F/L	Anti-lock Brakes
LIGHTING F/L	Lighting
RAD FAN 2 F/L	Engine Cooling Fan 2
REAR WINDOW	Heated Rear Window
SPARE	Spare
SPARE	Spare
ABS/TCS	Anti-lock Brake System, Traction Control System

Relays	Usage
FUEL PUMP RELAY	Fuel Pump
FOG LAMP CANCEL RELAY	Fog Lamp Cancel

FOG LAMP RELAY	Fog Lamp
BTSI RELAY	Brake Transmission Shift Interlock
HIGH BEAM RELAY	High-Beam Headlamp
DAYTIME RUNNING LAMP RELAY	Daytime Running Lamps
LOW BEAM RELAY	Low-Beam Headlamp
A/C RELAY	Air Conditioning
HORN RELAY	Horn
ENGINE COOL FAN 2 RELAY	Engine Cooling Fan 2
ENGINE COOL FAN 1 RELAY	Engine Cooling Fan 1
ENGINE COOL FAN 3 RELAY	Engine Cooling Fan 3
ENGINE CONT. RELAY	Engine Controls
HEATED REAR WINDOW RELAY	Rear Window Defogger
BLOWER RELAY	Blower
START RELAY	Start