

24.A/C Filter

A: REPLACEMENT

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-55, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)

EC(H6DO)

INTAKE (INDUCTION)

IN(H6DO)

MECHANICAL

ME(H6DO)

EXHAUST

EX(H6DO)

COOLING

CO(H6DO)

LUBRICATION

LU(H6DO)

SPEED CONTROL SYSTEMS

SP(H6DO)

IGNITION

IG(H6DO)

STARTING/CHARGING SYSTEMS

SC(H6DO)

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

GENERAL DESCRIPTION

GD(H6DO)

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

	Page
1. General Description	2
2. Throttle Body	19
3. Intake Manifold	22
4. Engine Coolant Temperature Sensor	31
5. Crankshaft Position Sensor	33
6. Camshaft Position Sensor	36
7. Knock Sensor	39
8. Throttle Position Sensor	40
9. Manifold Absolute Pressure Sensor	41
10. Mass Air Flow and Intake Air Temperature Sensor	43
11. EGR Valve	44
12. Fuel Injector	45
13. Oil Flow Control Solenoid Valve	48
14. Oil Temperature Sensor	50
15. Front Oxygen (A/F) Sensor	51
16. Rear Oxygen Sensor	53
17. Engine Control Module (ECM)	55
18. Main Relay	56
19. Fuel Pump Relay	58
20. Electronic Throttle Control Relay	59
21. Fuel Pump Control Unit	61
22. Fuel	62
23. Fuel Tank	64
24. Fuel Filler Pipe	67
25. Fuel Pump	69
26. Fuel Level Sensor	71
27. Fuel Sub Level Sensor	72
28. Fuel Filter	74
29. Fuel Delivery and Evaporation Lines	78
30. Fuel System Trouble in General	82