 


■Indicator light

Displays the status of the system is being operated.



 
Direction indicator
(light 122)



Headlight
Indicator upward (→ P. 135)



Front fog light
Indicator (→ P. 138)



Rear fog light
Indicators * (→ P. 138)



Security indicator light *
(→ P. 72)



Seat belt
Information
Indicator light



※ VSC OFF Indicators *
(→ P. 157)



※ TRC OFF Indicators *
(→ P. 156)



※ Slip indicator light *
(→ P. 156)
(Flashing)



※ Eco-driving indicator
(→ P. 105)



Low water temperature
indicator



※ Stop & Start Indicators *
(→ P. 144)



Indicators sports drive *
(→ P. 121)



Shift position indicator (→ P. 119)

※ the engine switch for the operation confirmation "ON" Indicator lights when the, vanishing after a few seconds

Lights. Remain lit when it is not lit, or if the risk of system malfunction There. Please check in by Toyota dealers.