



F RELAY LOCATIONS


[Engine Compartment]

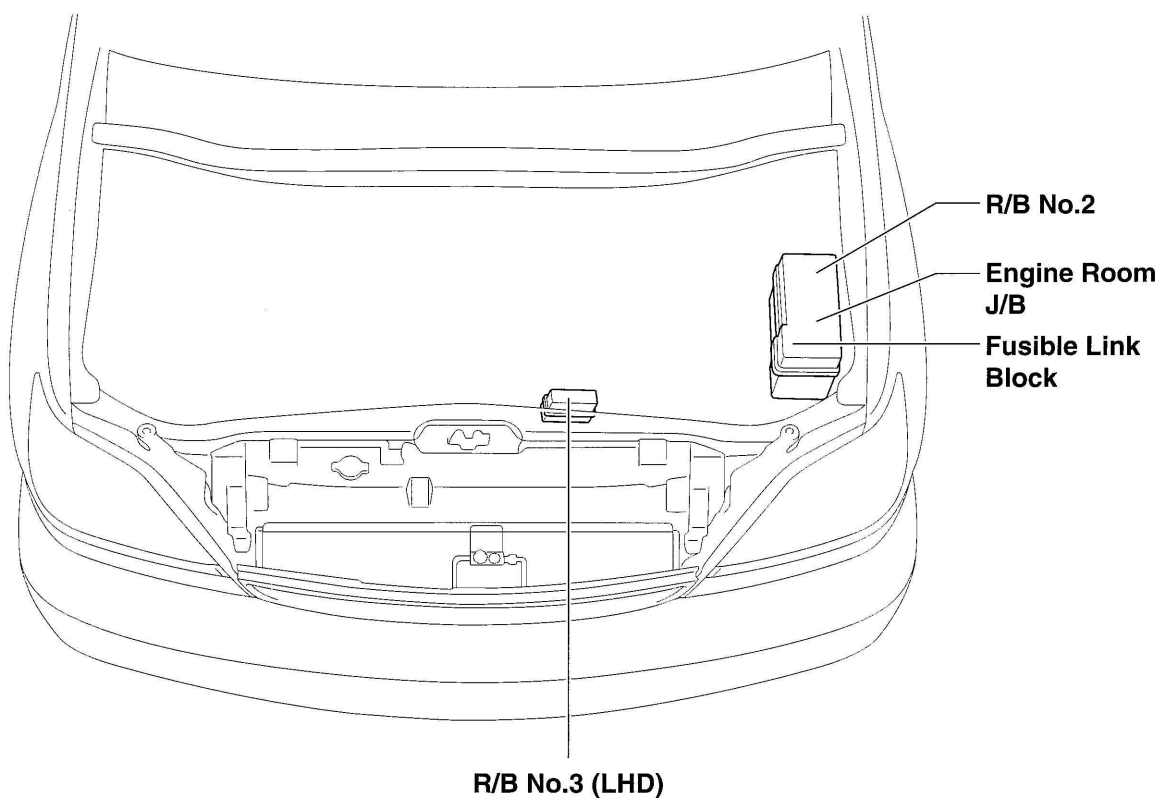


[Body]

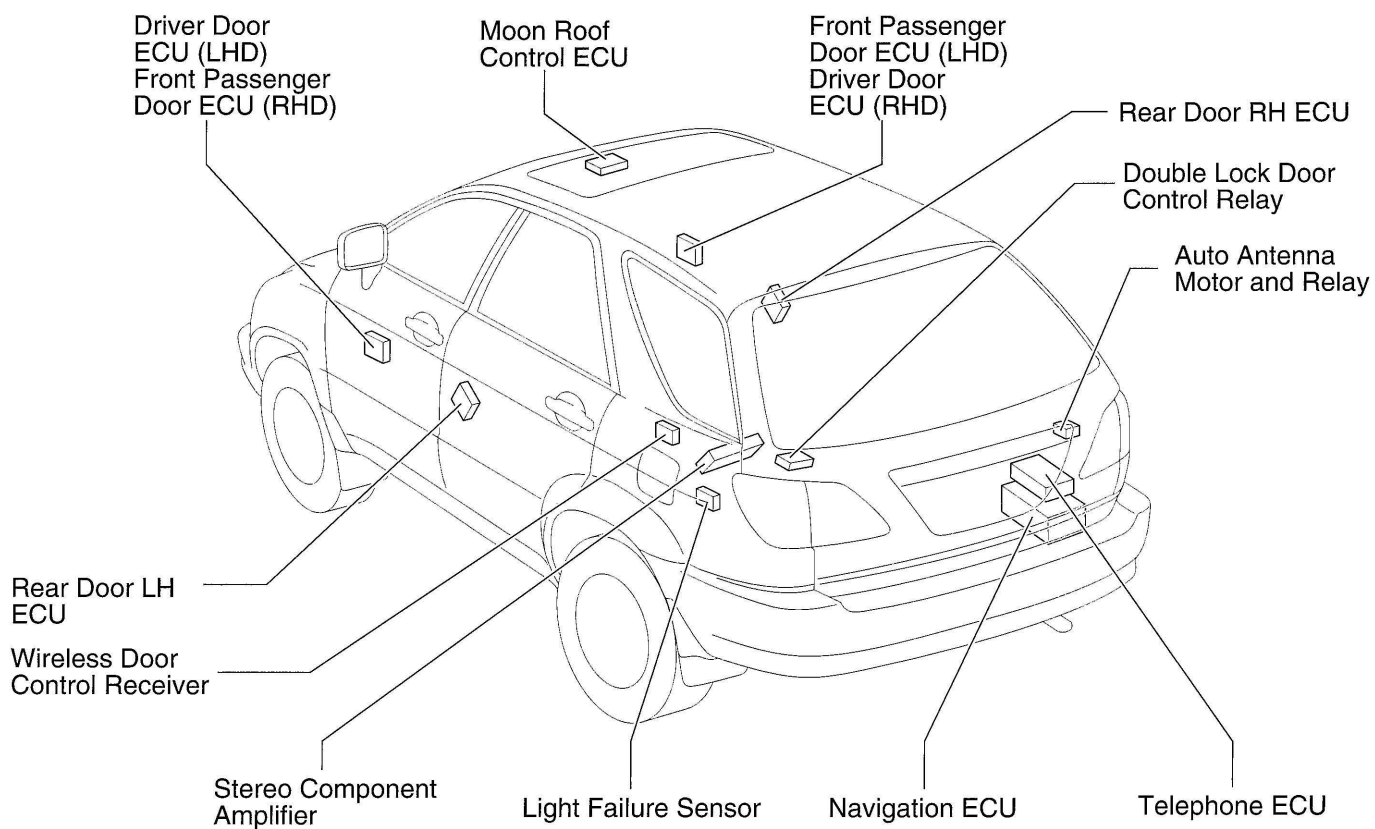

[Instrument Panel] (LHD)

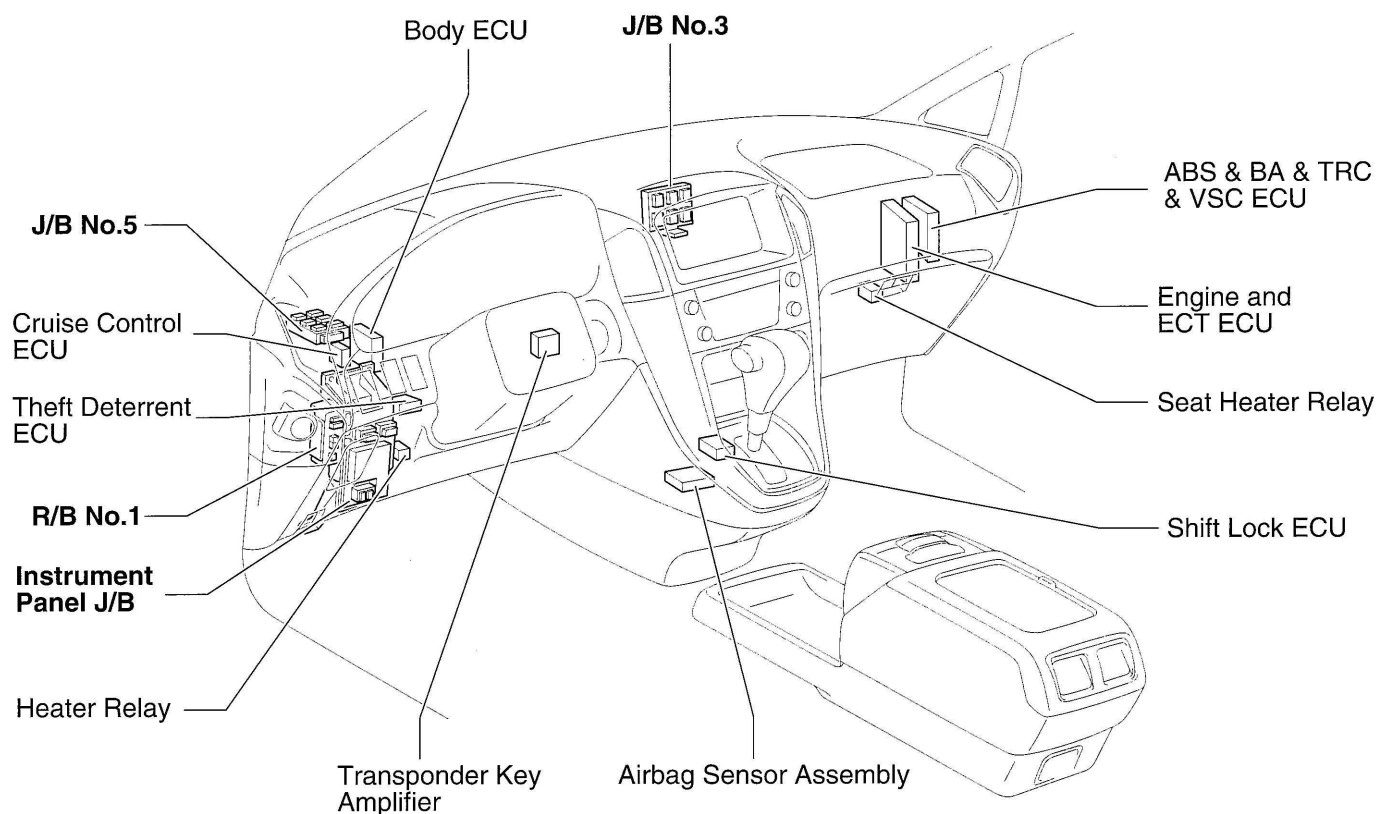


(RHD)

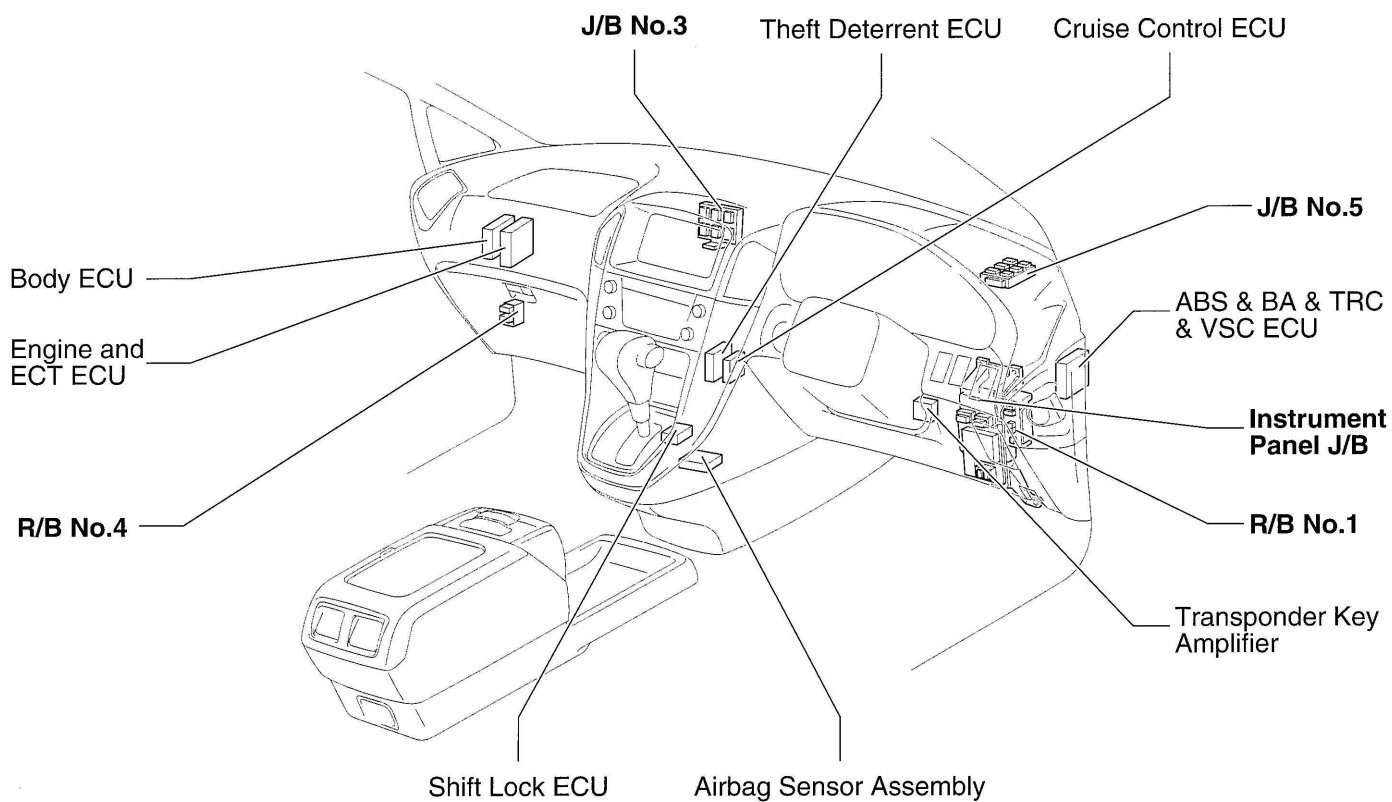


F RELAY LOCATIONS

○ : Instrument Panel J/B Lower Finish Panel (See Page 77)

[LHD]

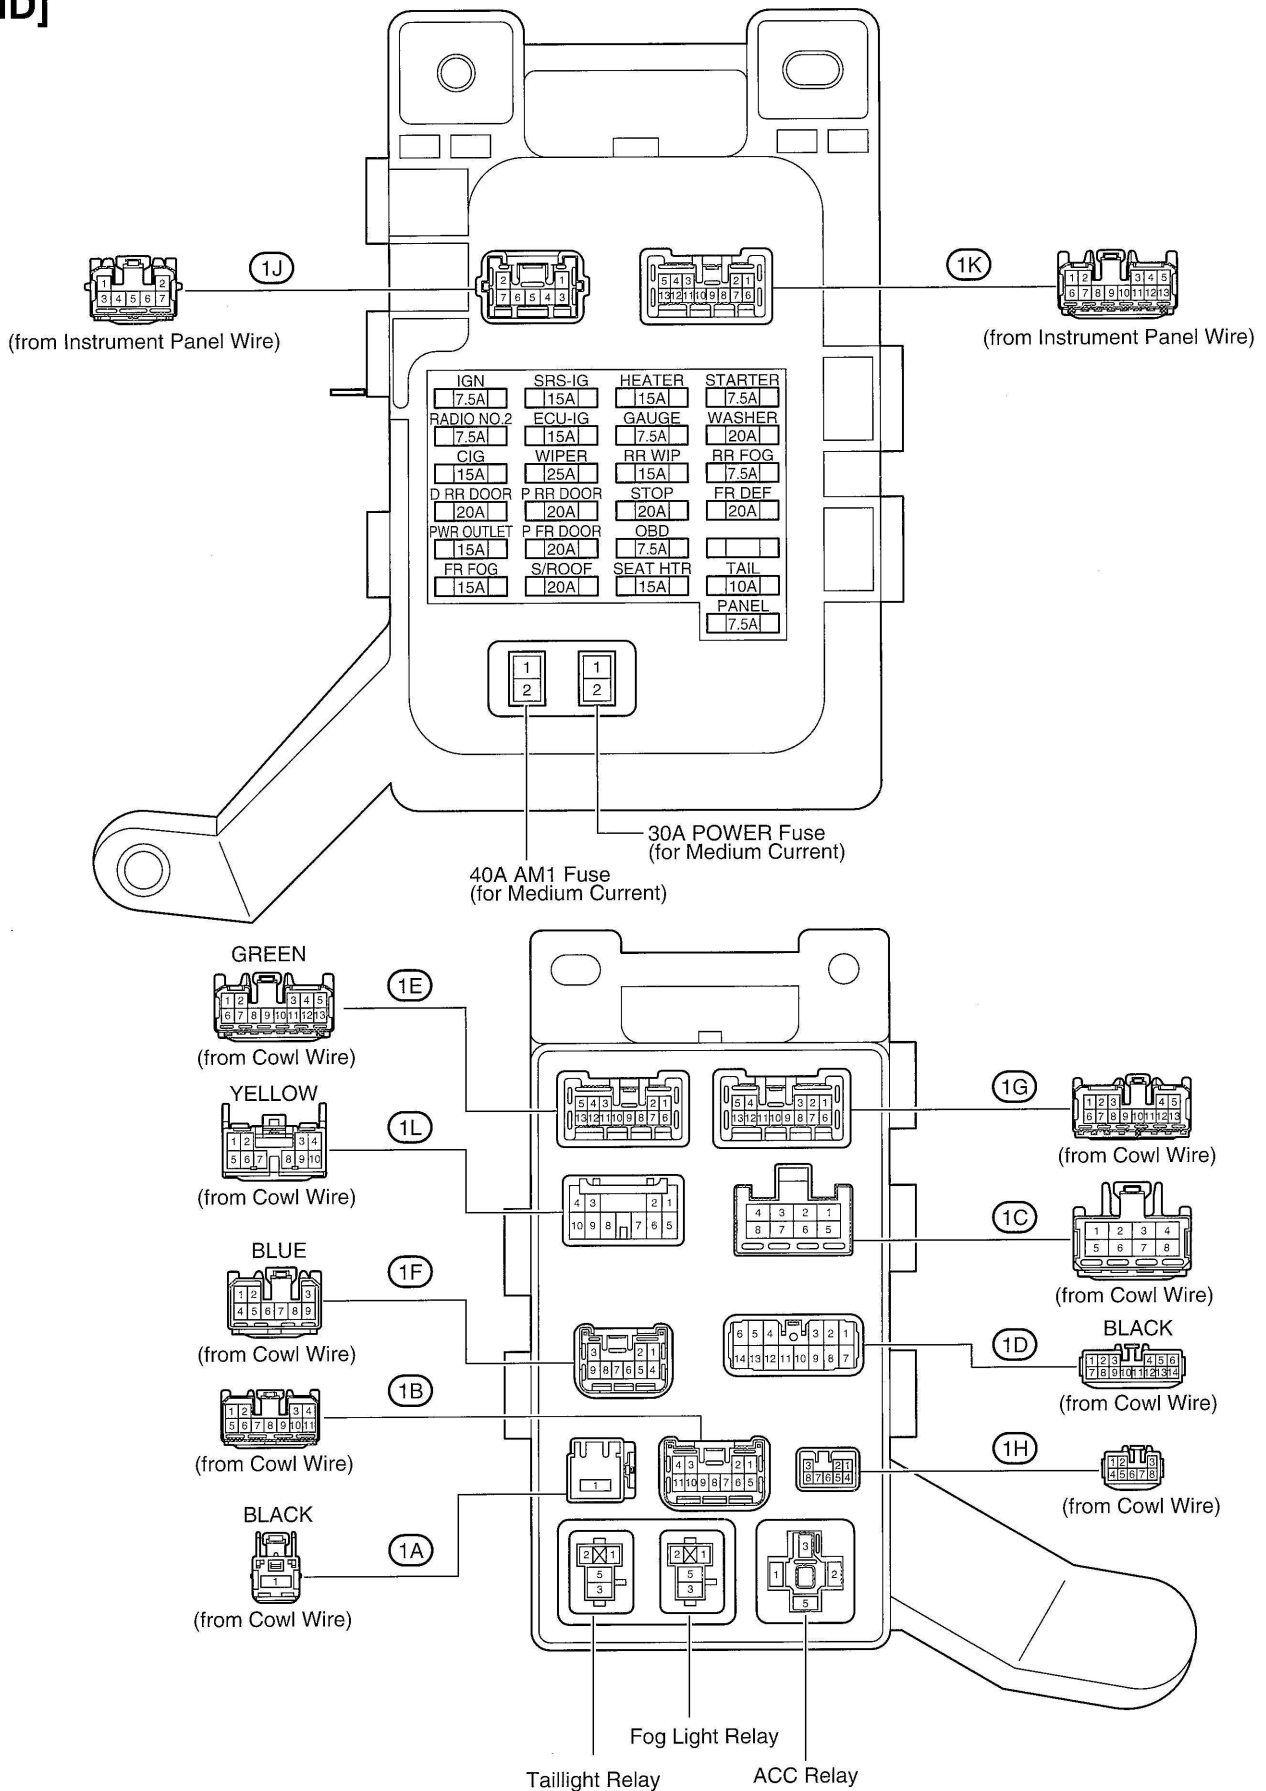


[Instrument Panel J/B Inner Circuit]

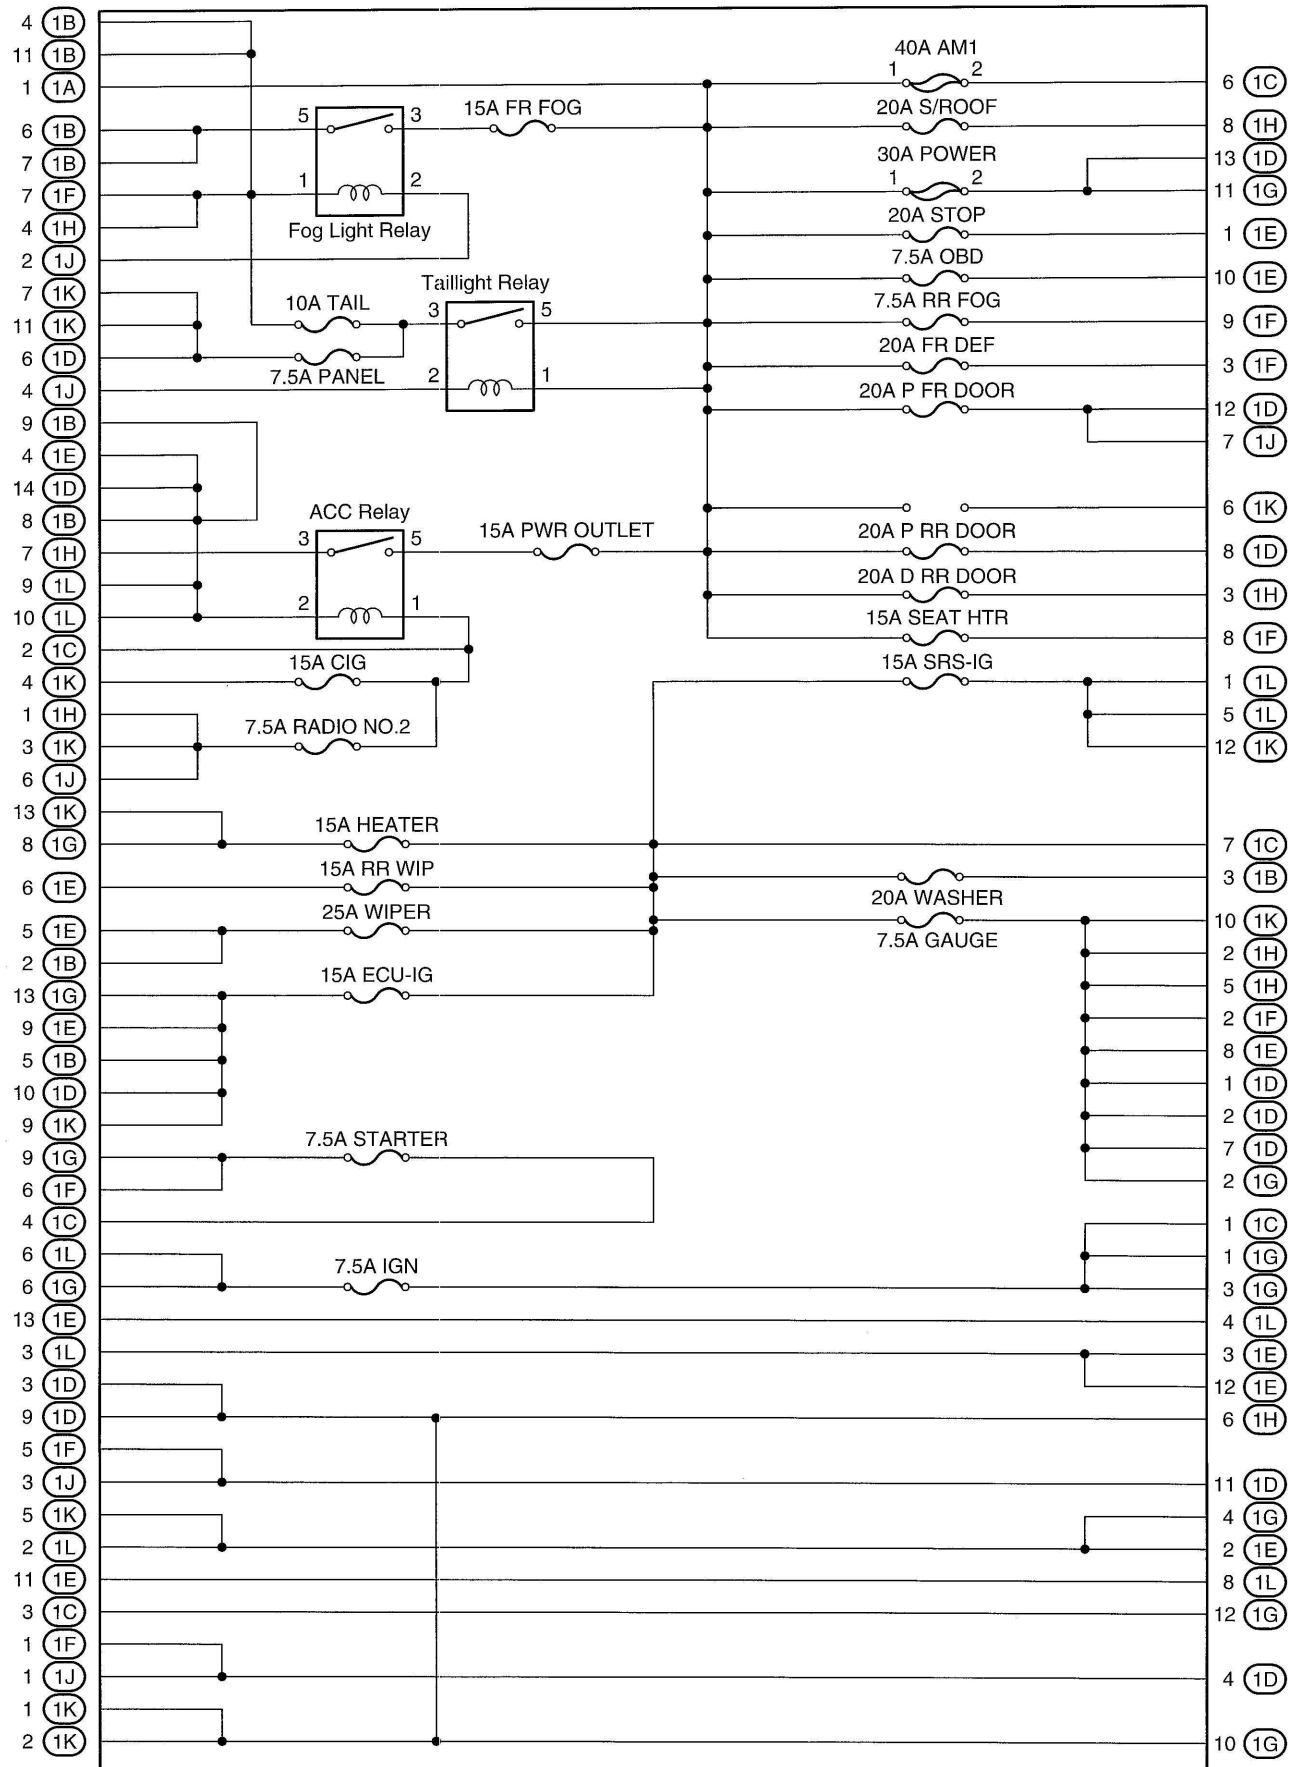


F RELAY LOCATIONS

○ : Instrument Panel J/B Lower Finish Panel (See Page 77)

[RHD]

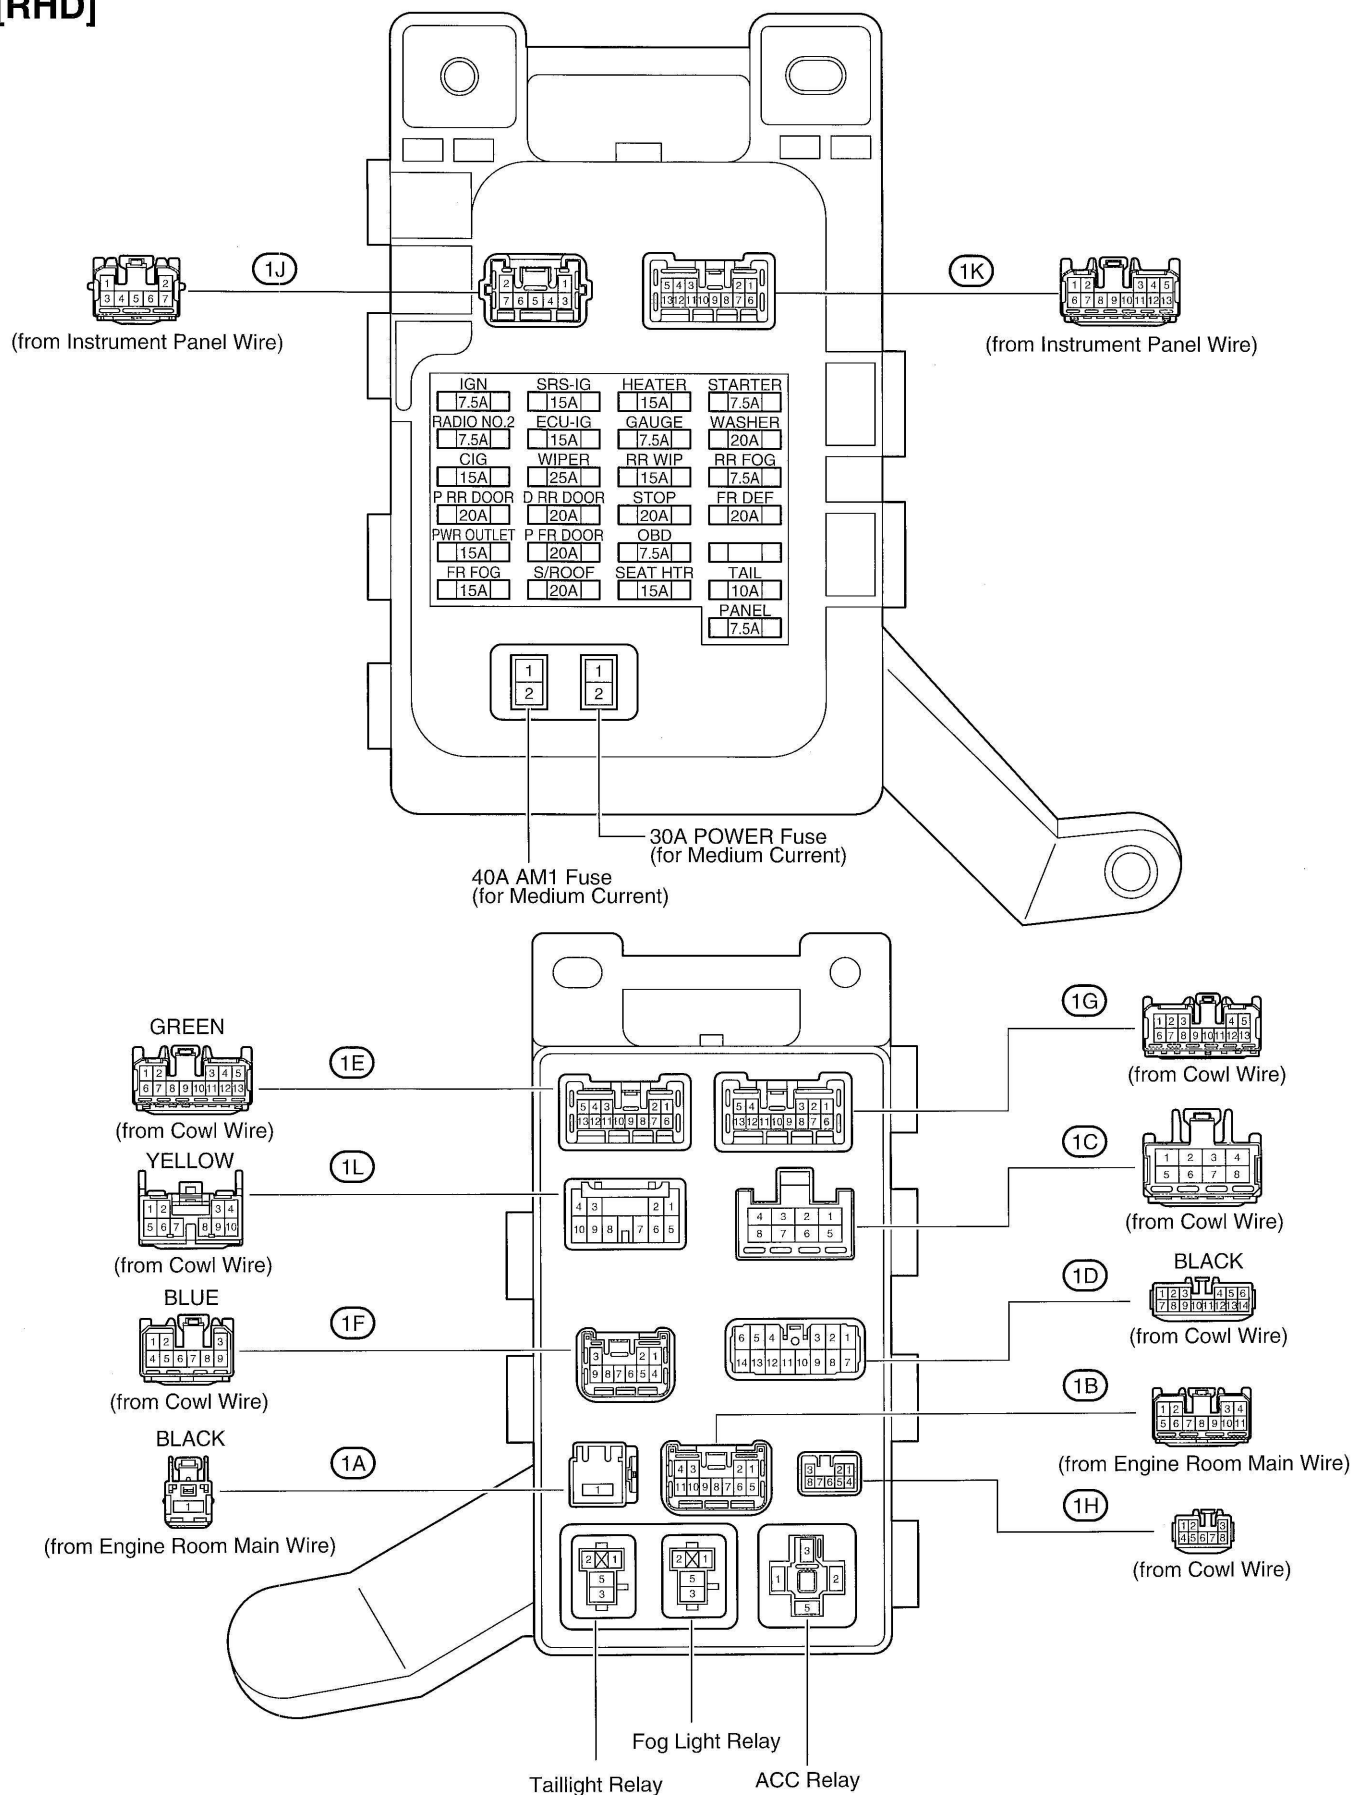


[Instrument Panel J/B Inner Circuit]

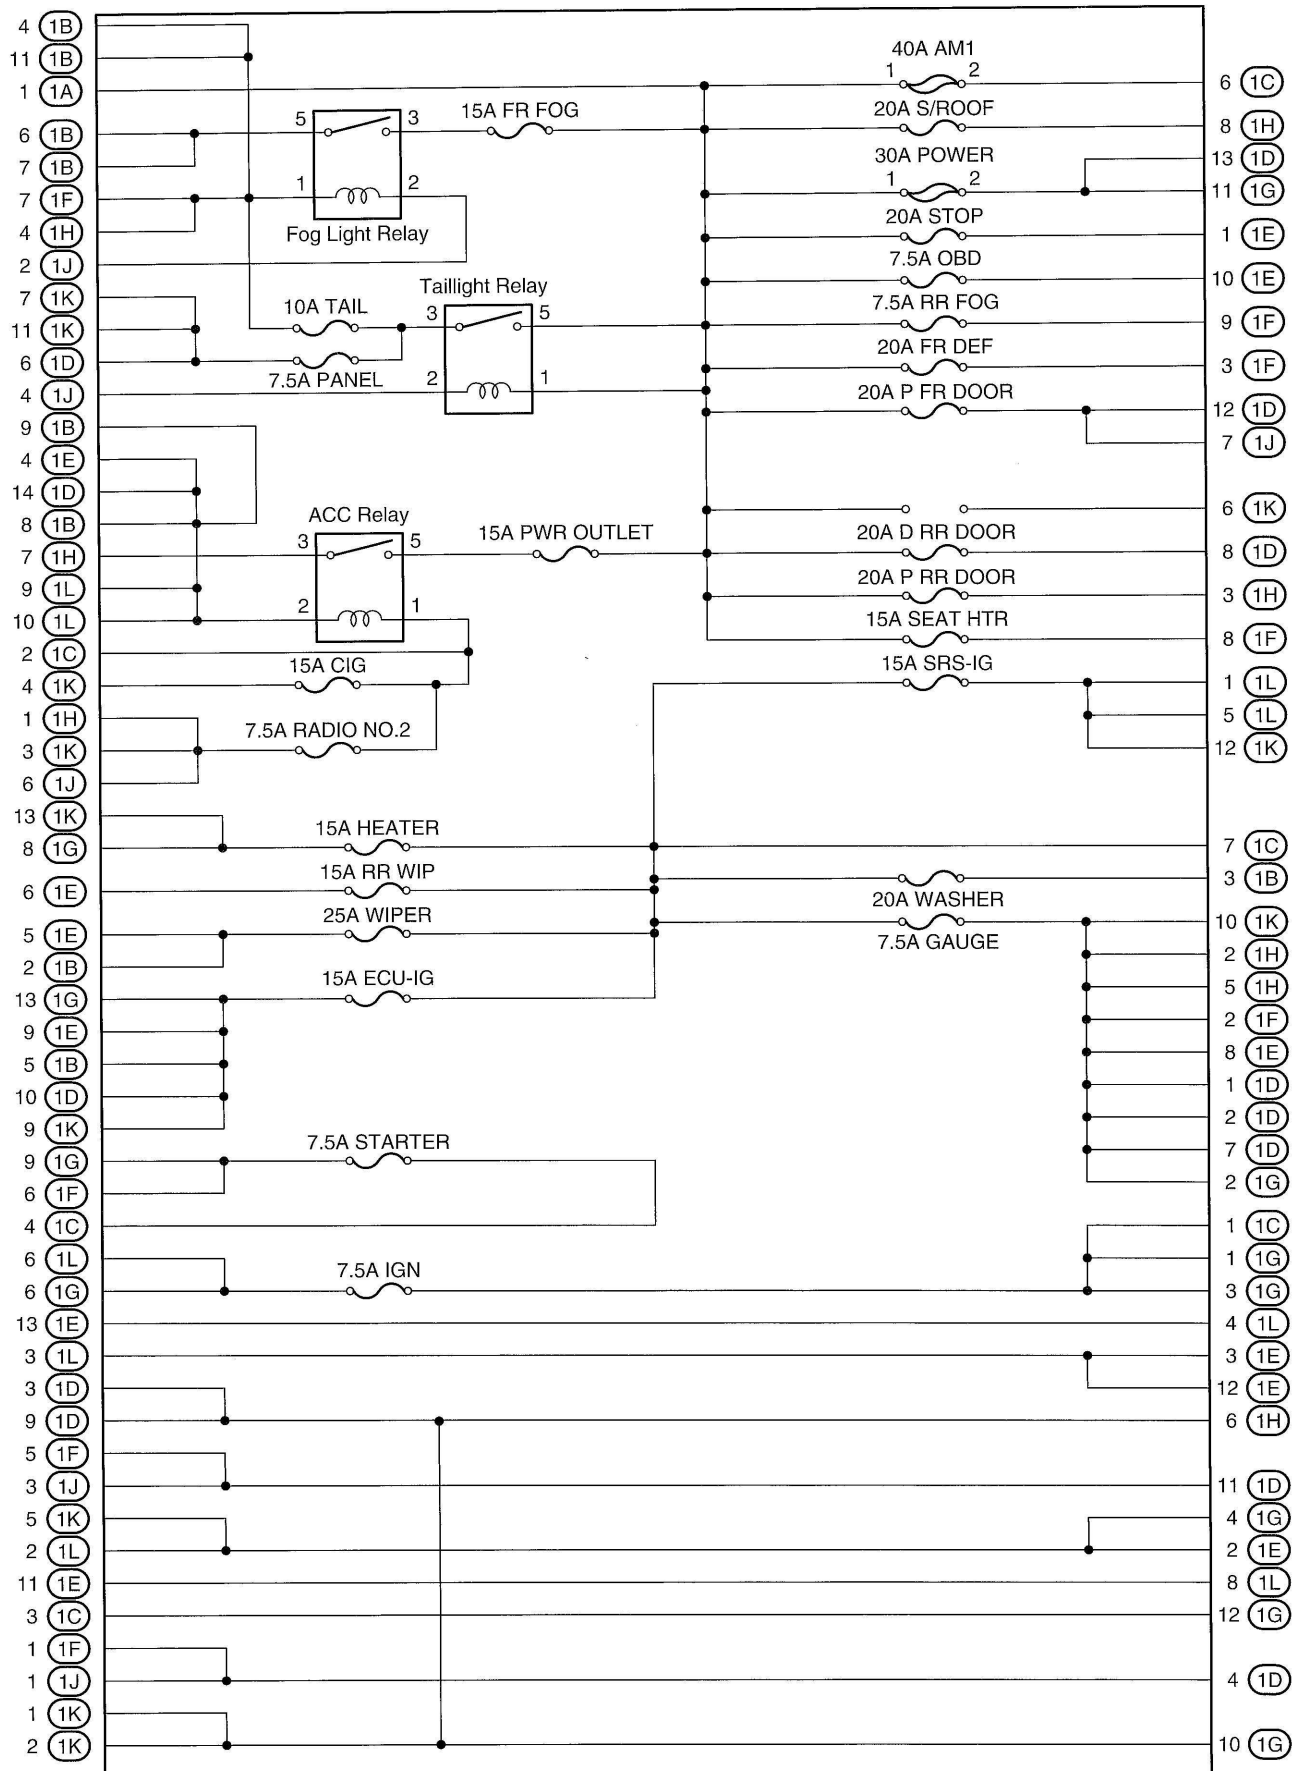


F RELAY LOCATIONS

 : Engine Room J/B

Engine Compartment Left (See Page 76)

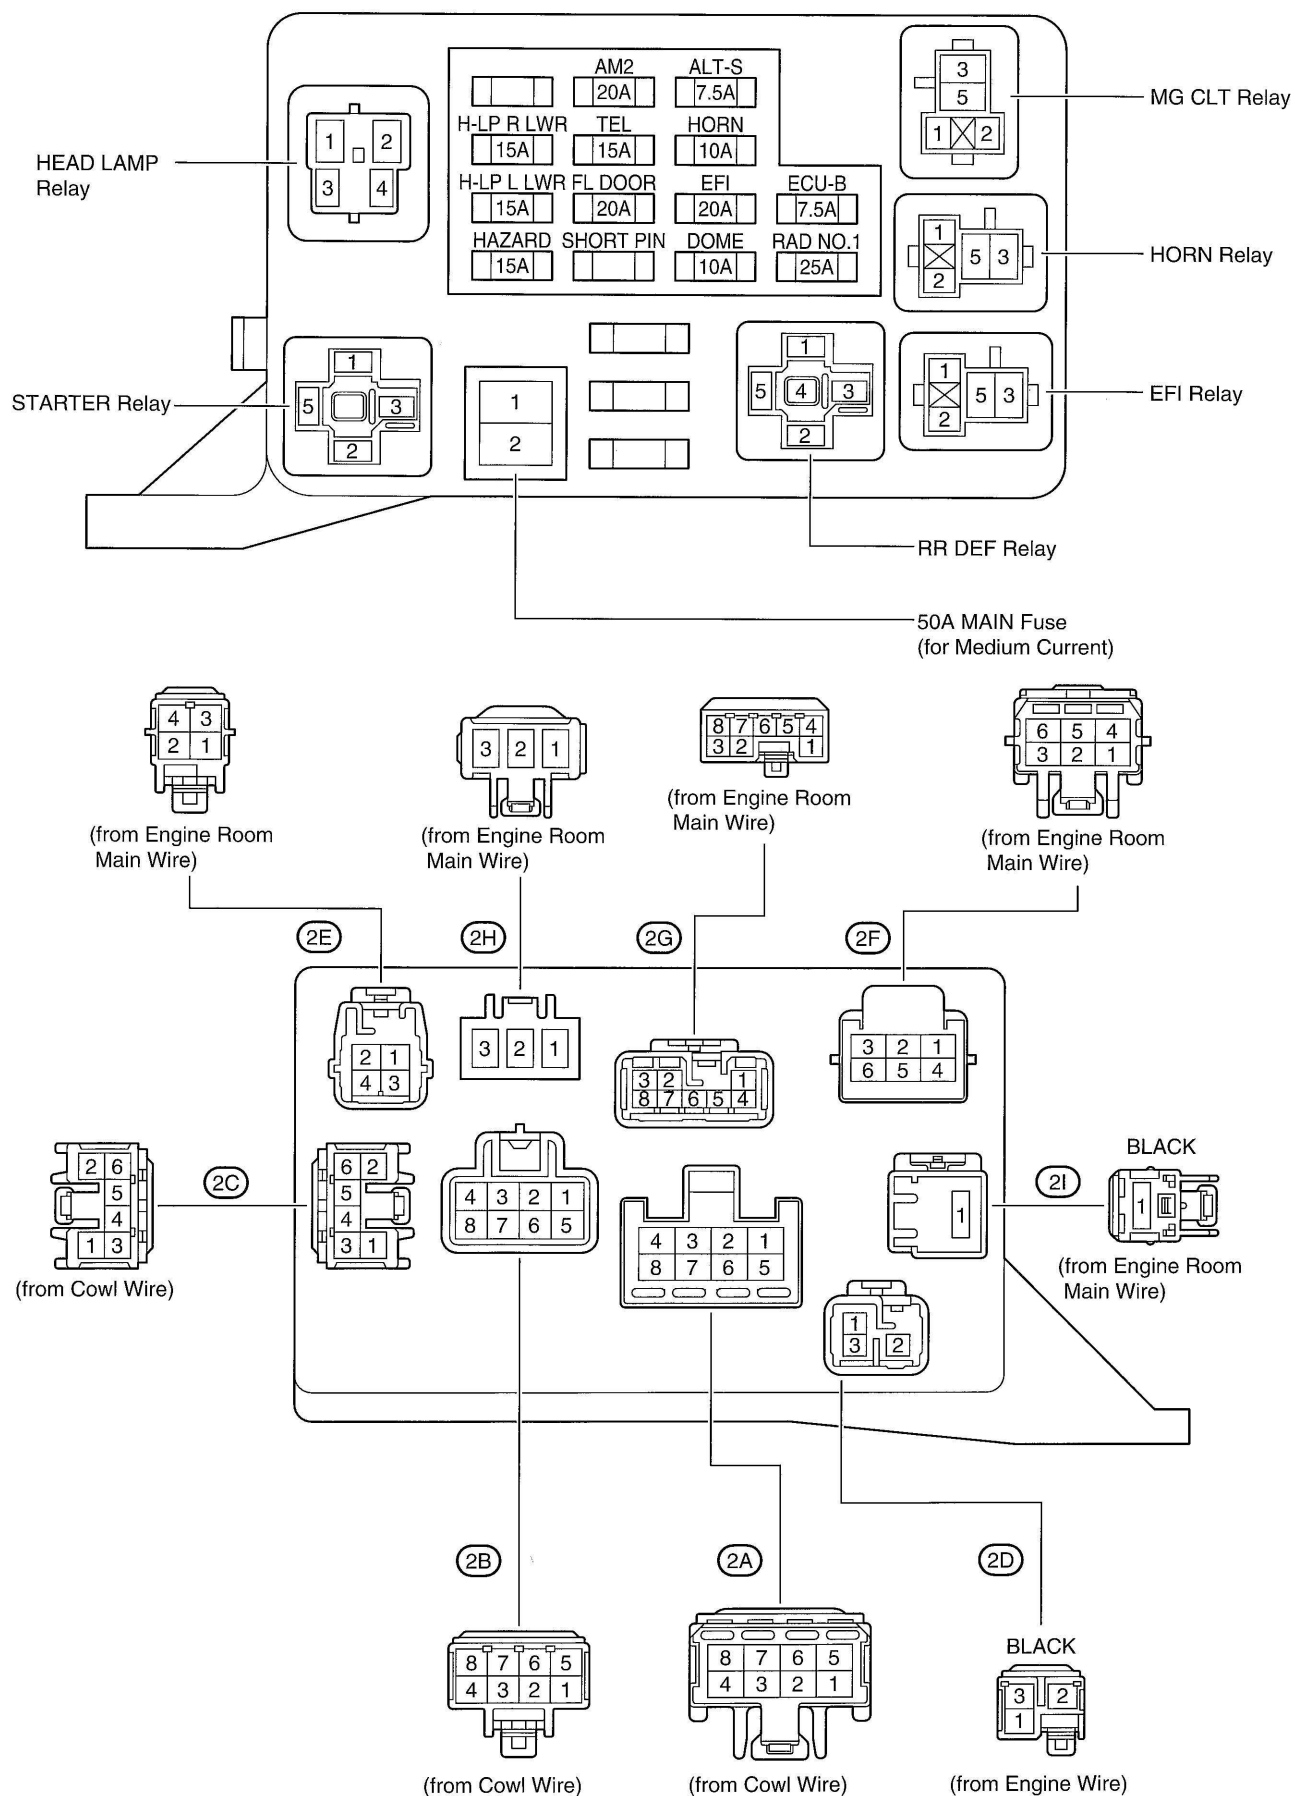


[Engine Room J/B Inner Circuit]

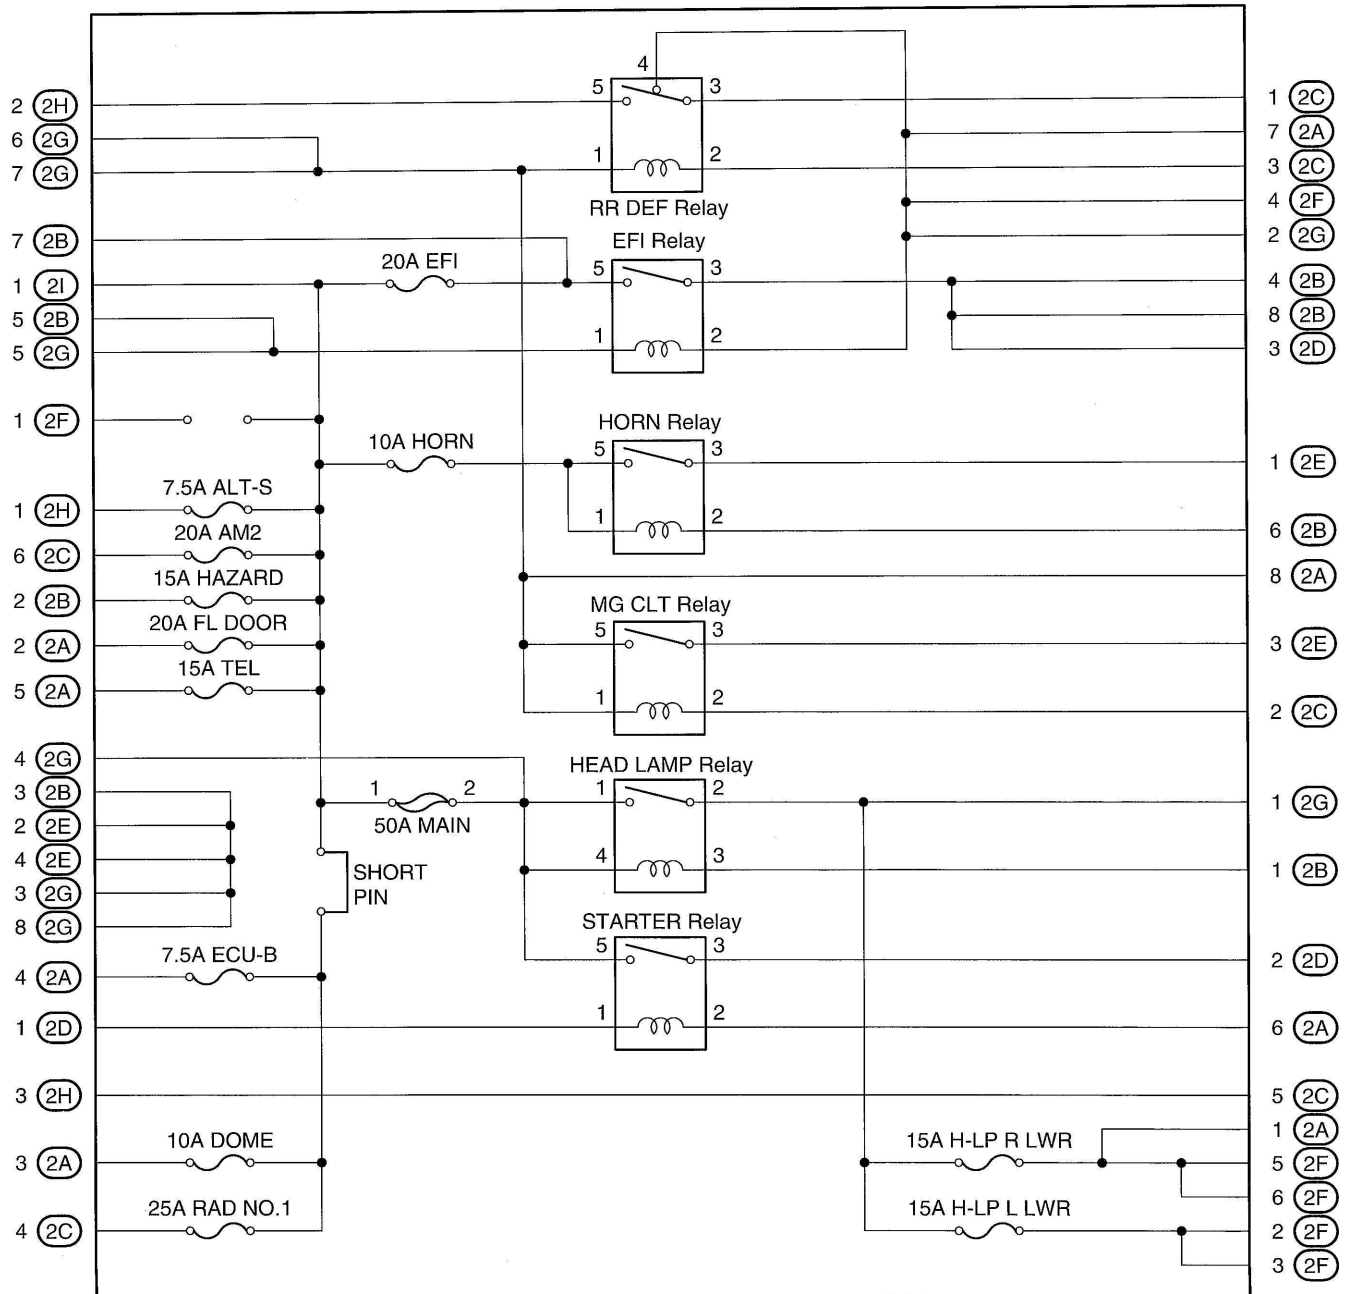


F RELAY LOCATIONS

○ : J/B No.3

Behind the Instrument Panel Center
(See Page 77)

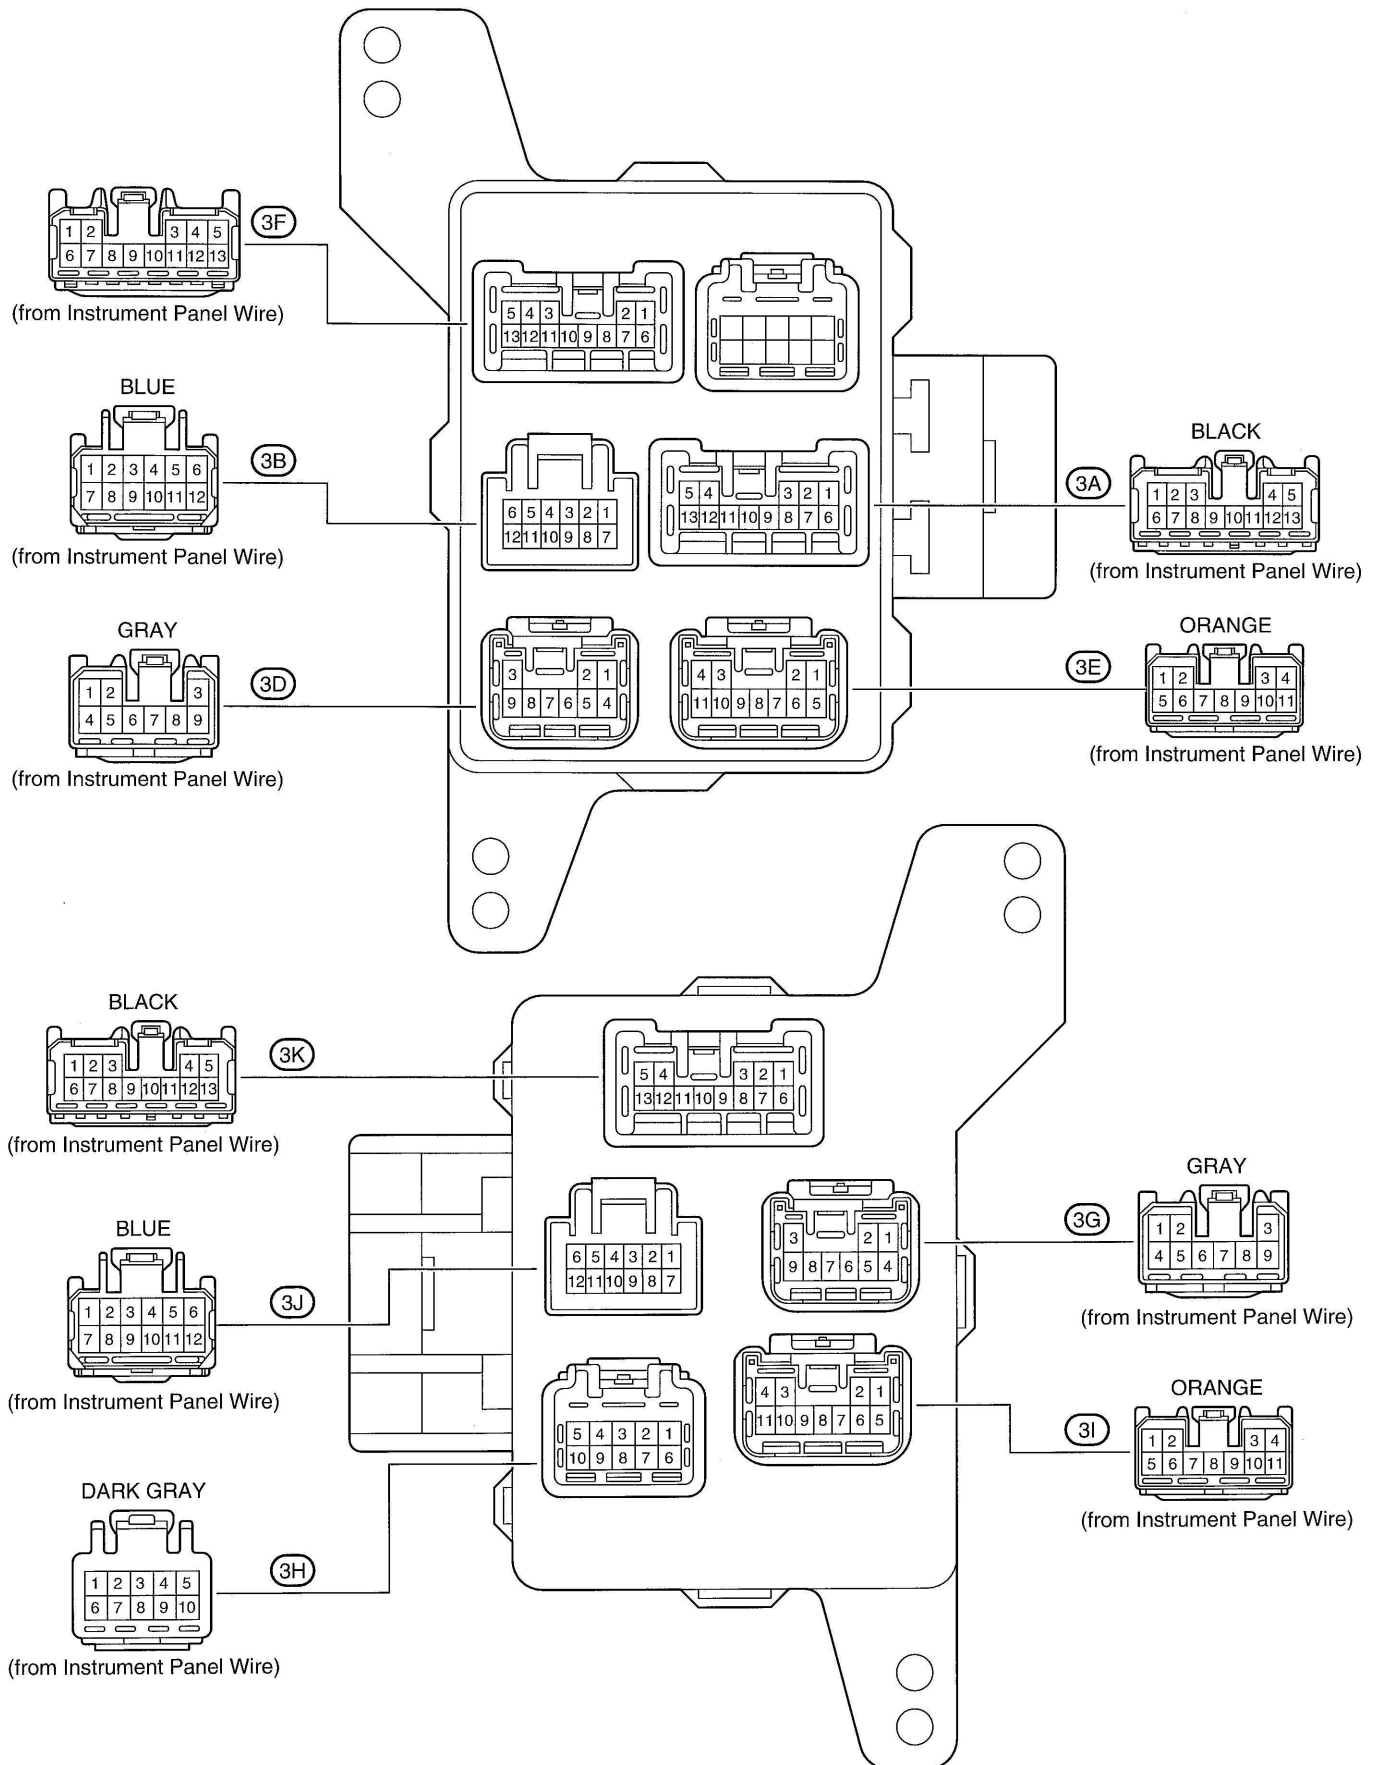


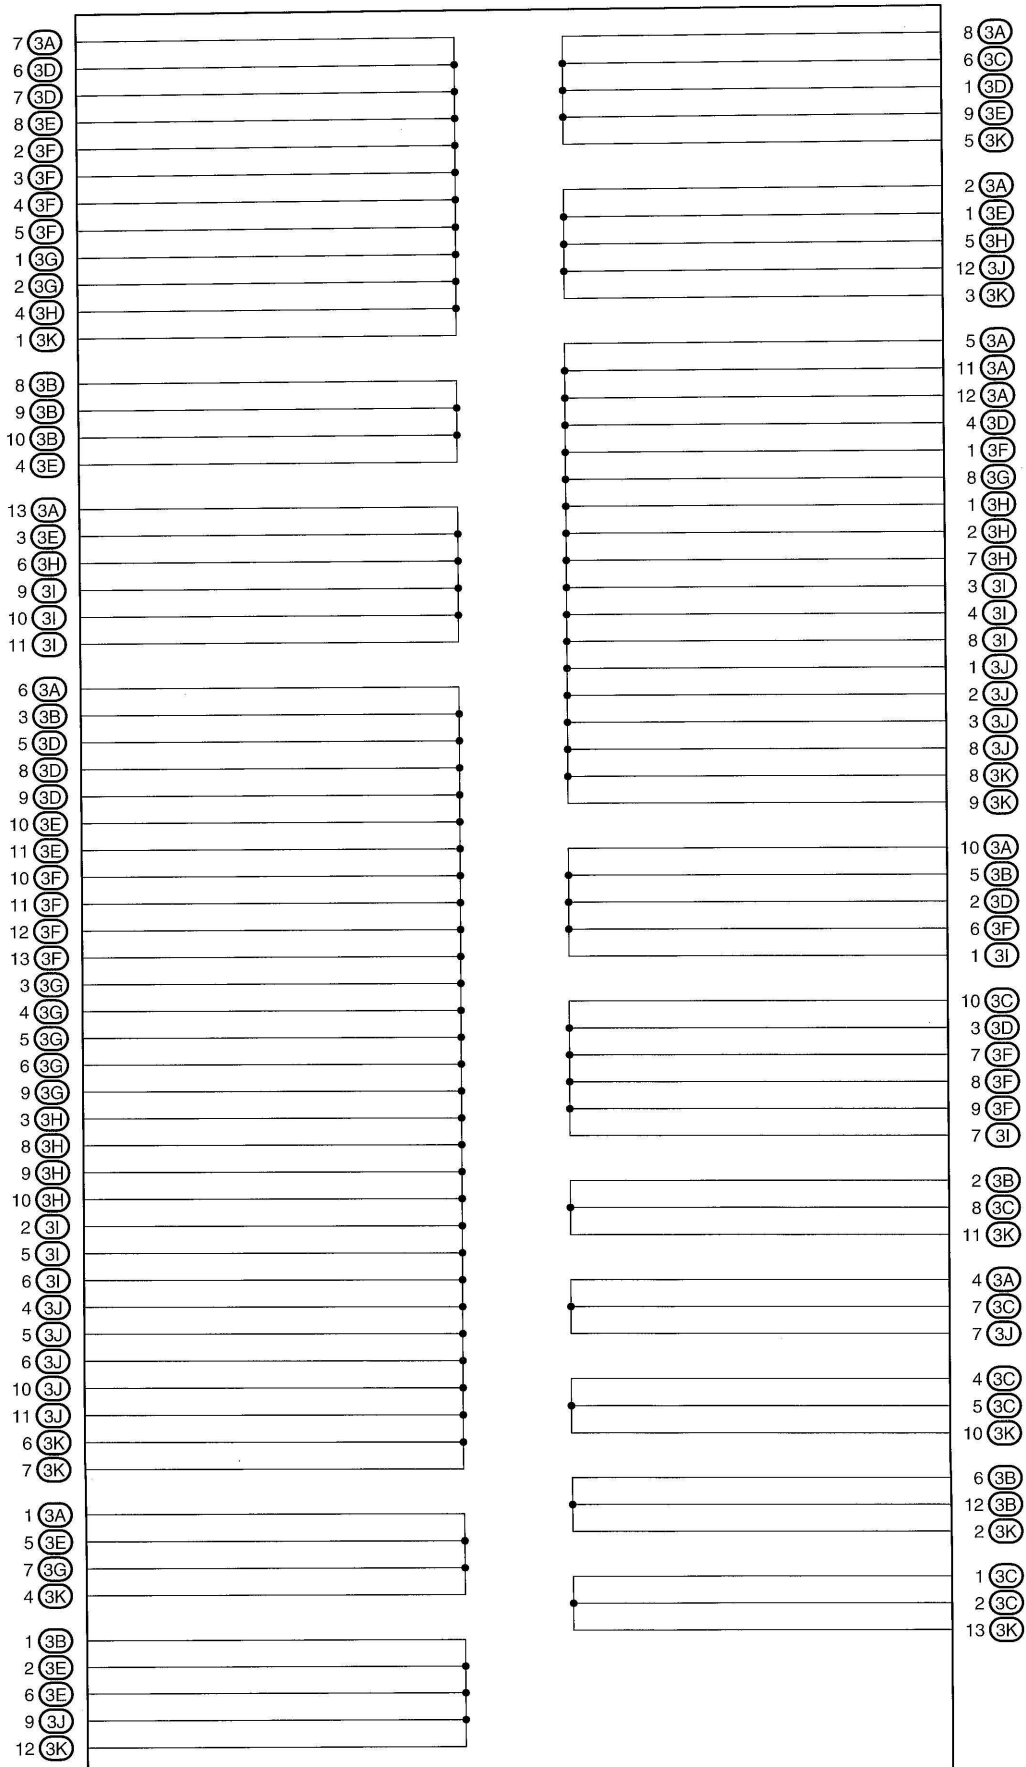[J/B No.3 Inner Circuit]


F RELAY LOCATIONS



○ : J/B No.5

Behind the Instrument Panel Left
(See Page 77)

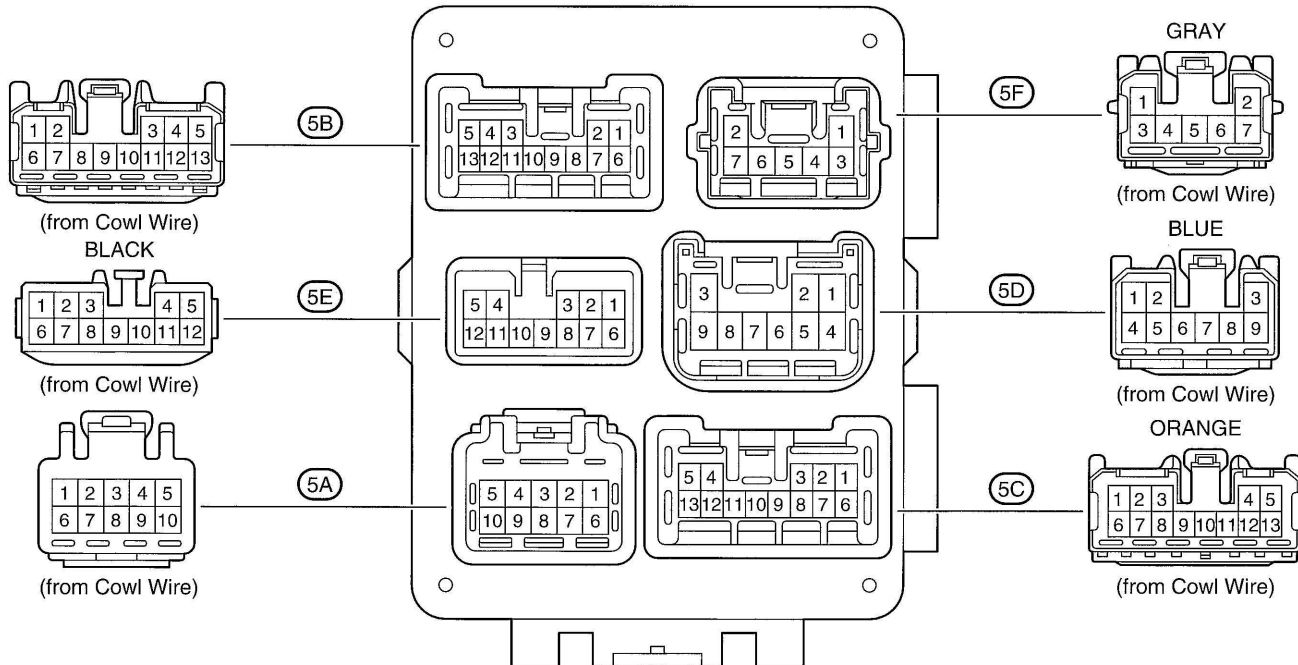

[J/B No.5 Inner Circuit]

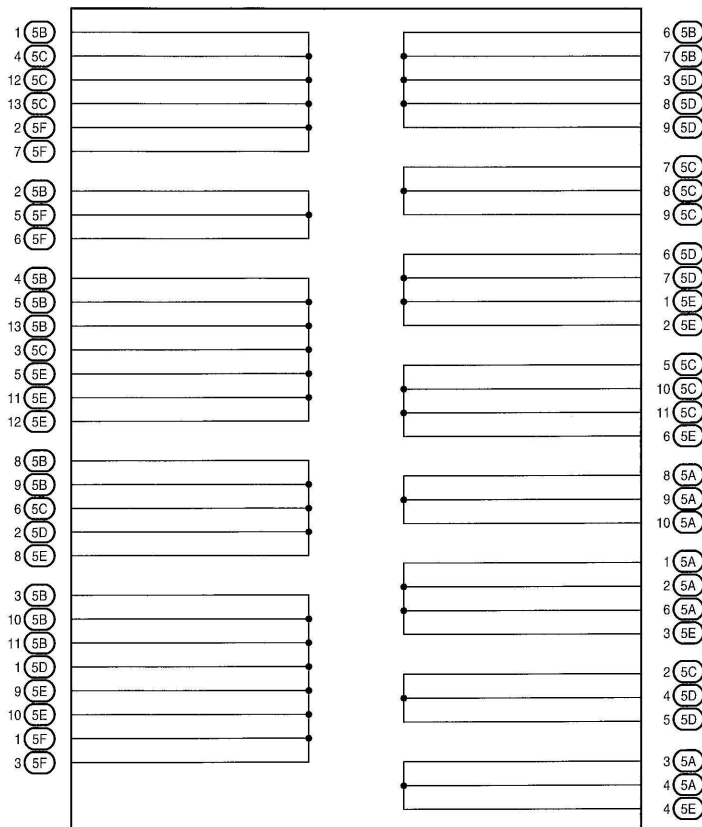


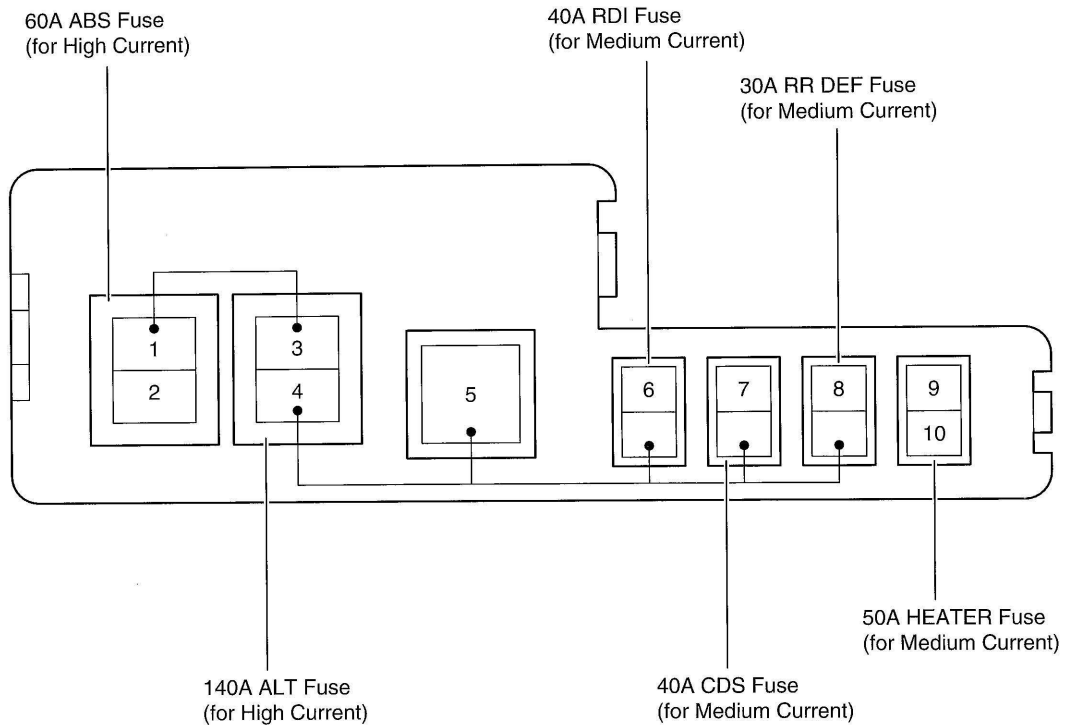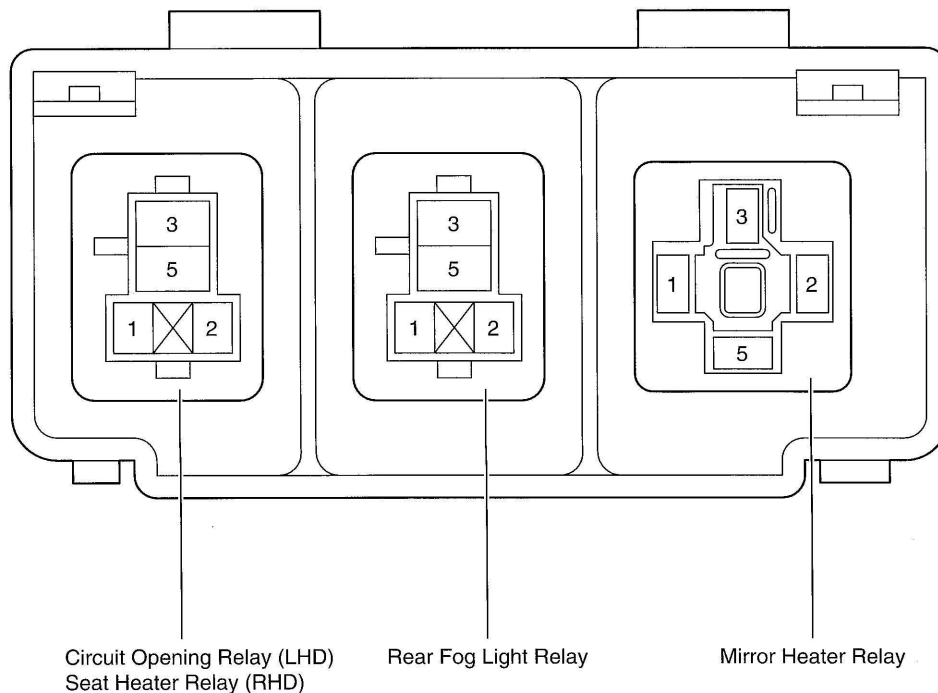Fusible Link Block**Engine Compartment Left (See Page 76)
[Inside Engine Room J/B]****① : R/B No.1****Lower Finish Panel (See Page 77)**

F RELAY LOCATIONS

② : R/B No.2

Engine Compartment Left (See Page 76)
[Inside Engine Room J/B]

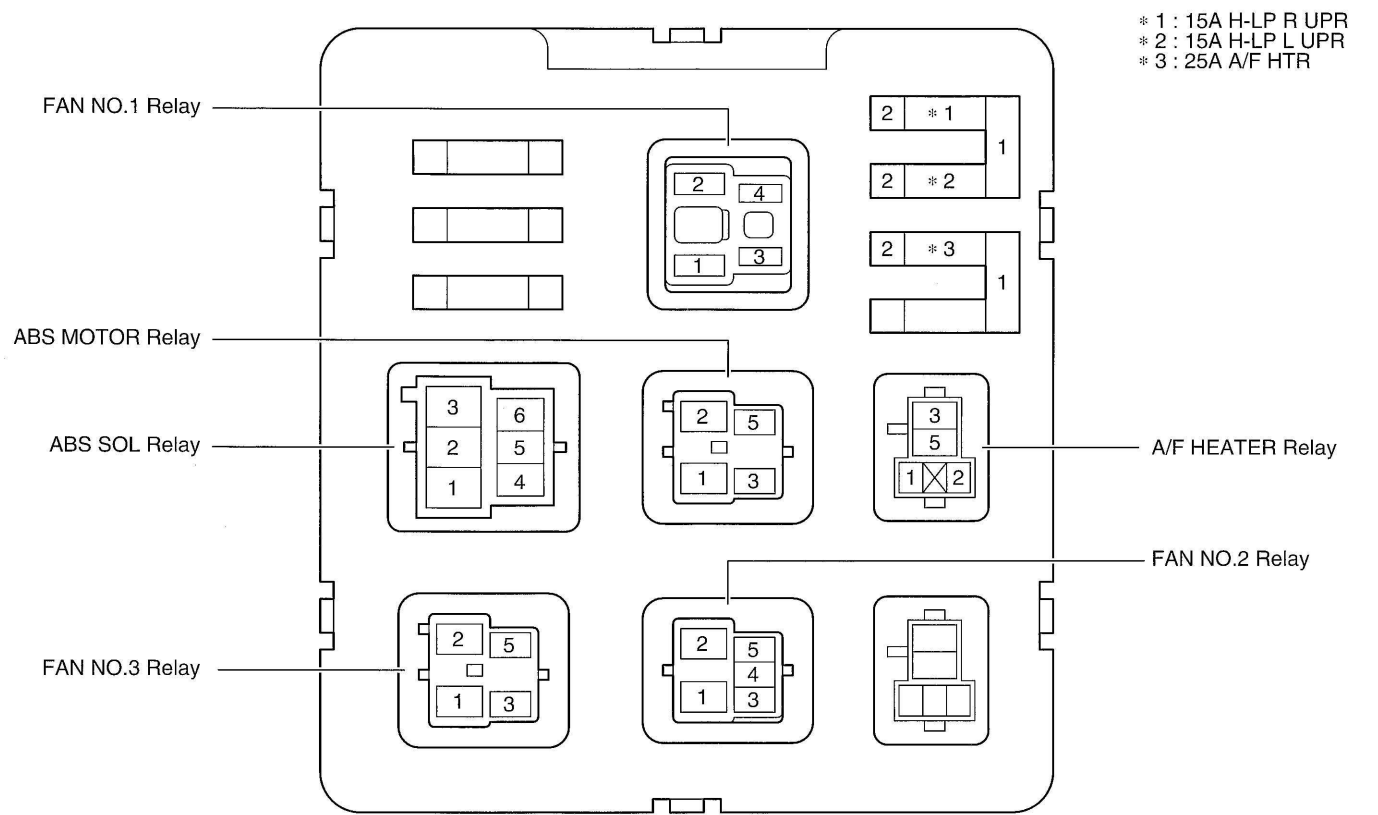

④ : R/B No.4

Left Kick Panel (See Page 77)

[RHD]

