

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT FENDER LINER LH**

- (a) Using a screwdriver, remove the fender liner retainer.
- (b) Remove the screw, nut and bolt.
- (c) w/ Splash Shield:
Remove the front fender splash shield LH.
- (d) Partially remove the fender liner.

HINT:

It is not necessary to fully remove the fender liner. Partially remove it so that the bumper cover can be removed later.

3. **REMOVE FRONT FENDER LINER RH**

HINT:

Use the same procedures described for the LH side.

4. **REMOVE RADIATOR SUPPORT OPENING COVER**




- (a) Remove the 2 clips.
- (b) Partially remove the radiator support opening cover.

HINT:

It is not necessary to fully remove the radiator support opening cover. Partially remove it so that the bumper cover can be removed later.


5. **REMOVE RADIATOR GRILLE PROTECTOR**

- (a) Remove the 2 radiator grille protectors.

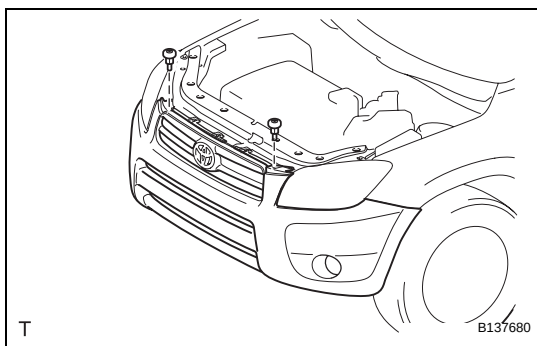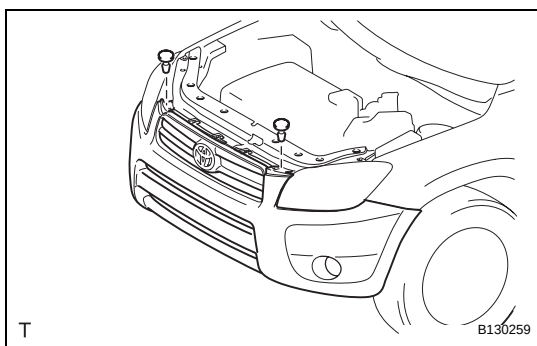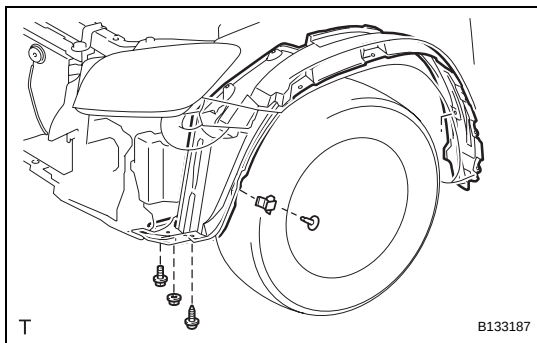

6. REMOVE FRONT BUMPER COVER

(a) Remove the 8 screws.

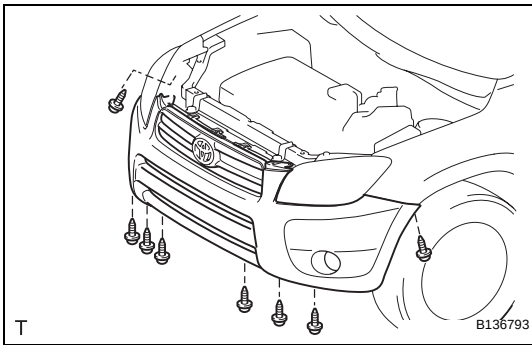

(b) Apply protective tape under the front fender and headlight.


(c) Using a screwdriver, detach the 4 claws.

HINT:


Tape the screwdriver tip before use.

(d) w/ Fog Light:


Disconnect the 2 fog light connectors.

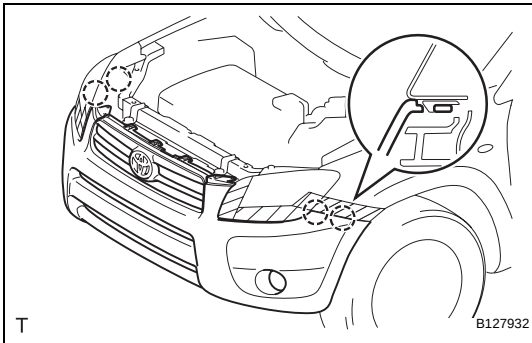


(e) Using a clip remover, remove the hood cushion center.

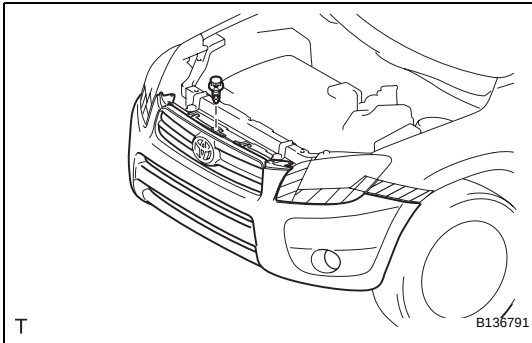


(f) Using a clip remover, remove the 4 clips and remove the front bumper cover.

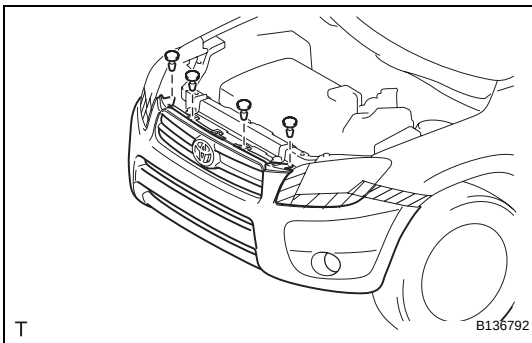**7. REMOVE NO. 2 FRONT BUMPER ENERGY ABSORBER**


(a) Remove the absorber.

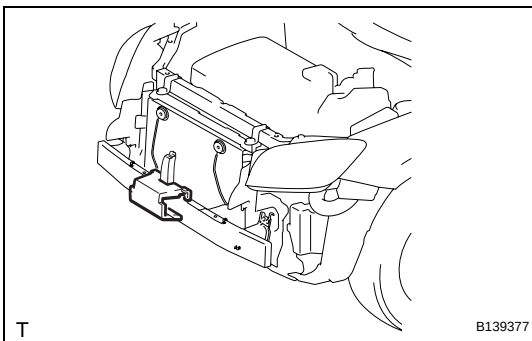

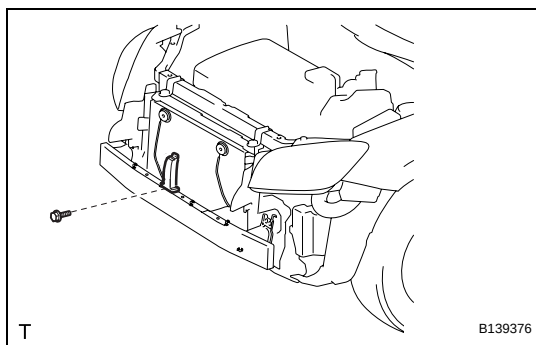


8. REMOVE FRONT BUMPER RETAINER

- (a) Remove the bolt and retainer.

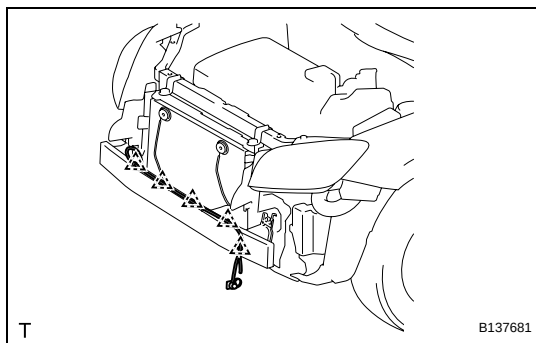


9. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSEMBLY

- (a) Detach 5 clamps and remove the wire harness.

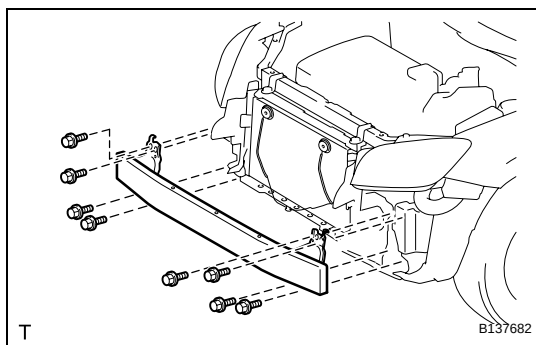

- (b) Remove the 8 bolts and reinforcement.

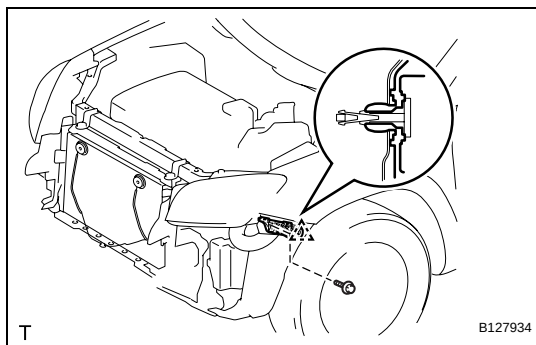

10. REMOVE FRONT BUMPER SIDE RETAINER LH

- (a) Remove the bolt.
 (b) Using a screwdriver, detach the clip and remove the bumper side retainer.

HINT:

Tape the screwdriver tip before use.

11. REMOVE FRONT BUMPER SIDE RETAINER RH


HINT:


Use the same procedures described for the LH side.

DISASSEMBLY


1. REMOVE RADIATOR GRILLE SUB-ASSEMBLY

- (a) Remove the 4 bolts and 4 nuts.

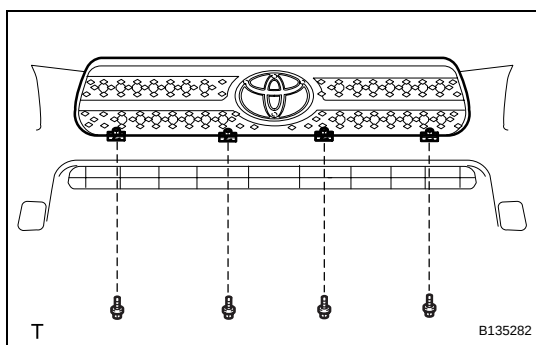

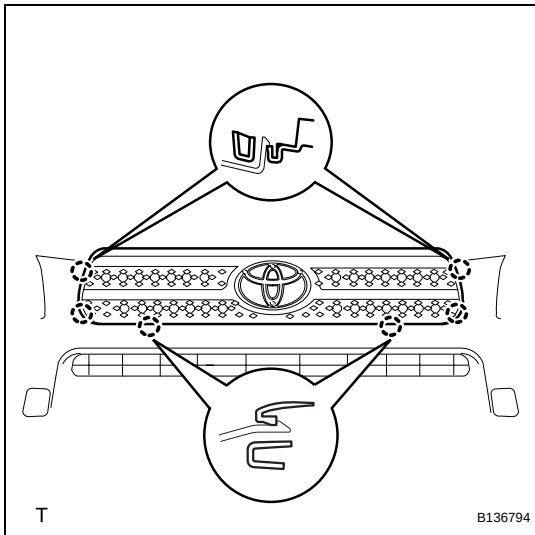


(b) Detach the 6 claws and remove the radiator grille.

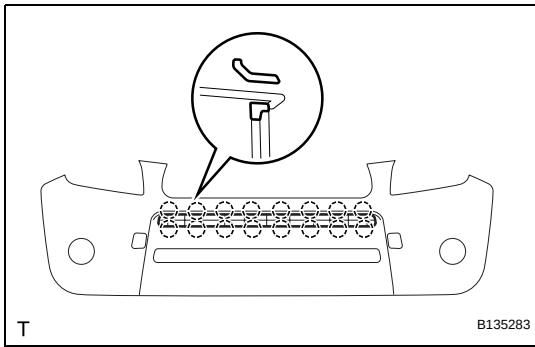


2. REMOVE NO. 1 RADIATOR GRILLE LOWER

(a) Detach the 18 claws and remove the radiator grille.

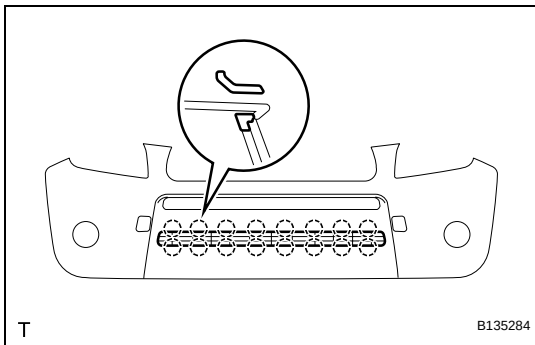

3. REMOVE NO. 2 RADIATOR GRILLE LOWER

(a) Detach the 16 claws and remove the radiator grille.

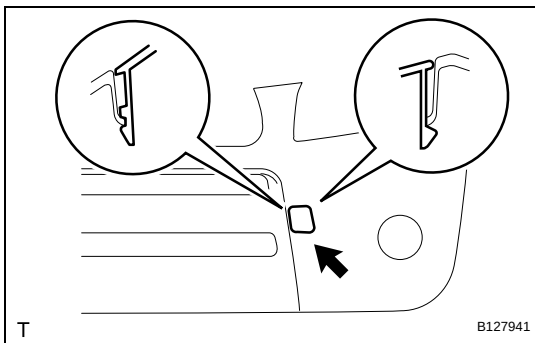


4. REMOVE FRONT BUMPER ARM HOLE COVER LH

(a) Detach the 2 claws and disconnect the arm hole cover.

(b) Remove the hook and bumper arm hole cover.

5. REMOVE FRONT BUMPER ARM HOLE COVER RH

(a) Use the same procedures described for the LH side.

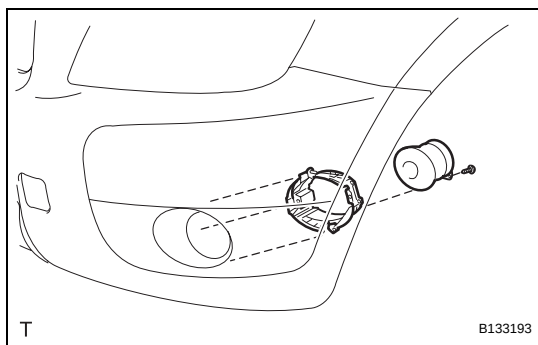
**6. REMOVE FOG LIGHT ASSEMBLY LH**

- (a) Remove the screw and fog light.
- (b) Remove the 3 bolts and fog light mounting bracket.

7. REMOVE FOG LIGHT ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

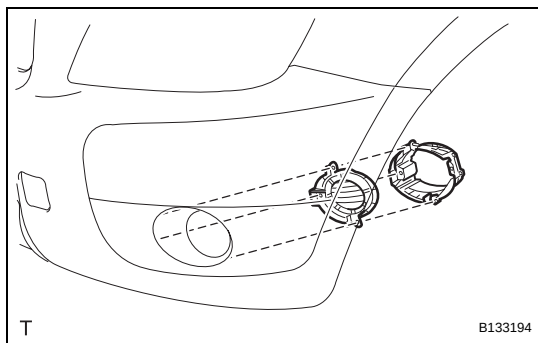
**8. REMOVE FRONT BUMPER HOLE COVER LH (w/o Fog Light)**

- (a) Remove the 3 bolts, bumper hole cover and fog light mounting bracket.

9. REMOVE FRONT BUMPER HOLE COVER RH (w/o Fog Light)

HINT:

Use the same procedures described for the LH side.

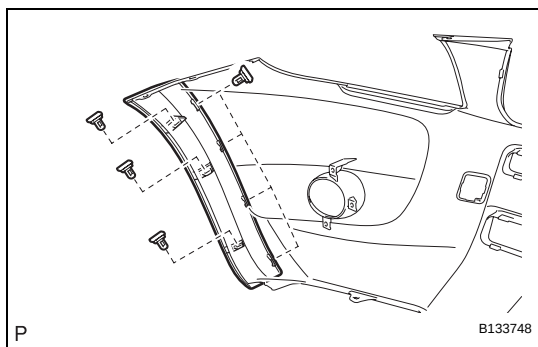**10. REMOVE FRONT BUMPER EXTENSION LH (for Wide Body)**

- (a) Detach the 7 outside moulding retainers and remove the extension LH.

NOTICE:

- If reusing the extension, take care not to damage the extension.
- Be careful not to damage the vehicle body.

11. REMOVE FRONT BUMPER EXTENSION RH (for Wide Body)

HINT:

Use the same procedures described for the LH side.


REASSEMBLY**1. INSTALL FRONT BUMPER EXTENSION LH (for Wide Body)**


- (a) Attach the 7 outside moulding retainers to install the extension.

2. INSTALL FRONT BUMPER EXTENSION RH (for Wide Body)

HINT:

Use the same procedures described for the LH side.

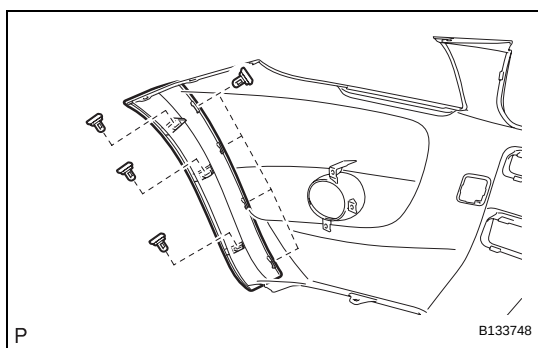

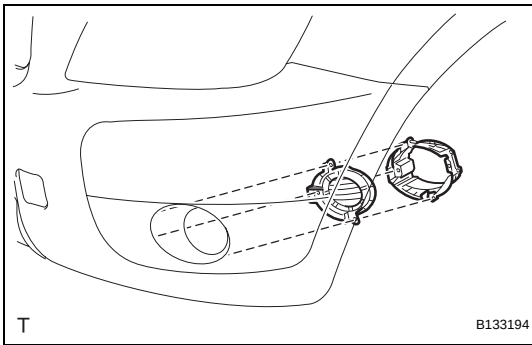

3. INSTALL FRONT BUMPER HOLE COVER LH (w/o Fog Light)

- (a) Install the bumper hole cover with the fog light mounting bracket and 3 bolts.

4. INSTALL FRONT BUMPER HOLE COVER RH (w/o Fog Light)

HINT:

Use the same procedures described for the LH side.

5. INSTALL FOG LIGHT ASSEMBLY LH

- (a) Install the fog light mounting bracket with the 3 bolts.
(b) Install the fog light with the screw.



6. INSTALL FOG LIGHT ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

7. INSTALL FRONT BUMPER ARM HOLE COVER LH

- (a) Install the hook.

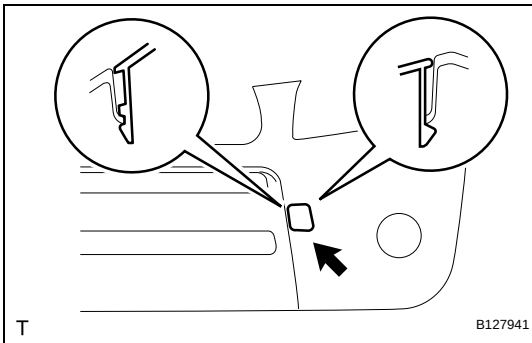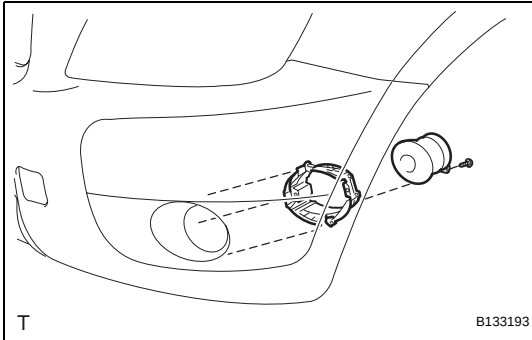


- (b) Attach the 2 claws and install the hole cover.

8. INSTALL FRONT BUMPER ARM HOLE COVER RH


HINT:

Use the same procedures described for the LH side.

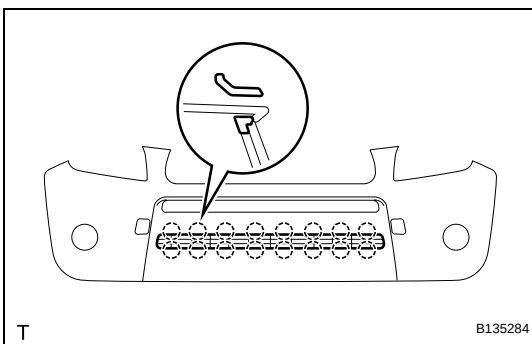

9. INSTALL NO. 2 RADIATOR GRILLE LOWER

- (a) Install the radiator grille and attach the 16 claws.

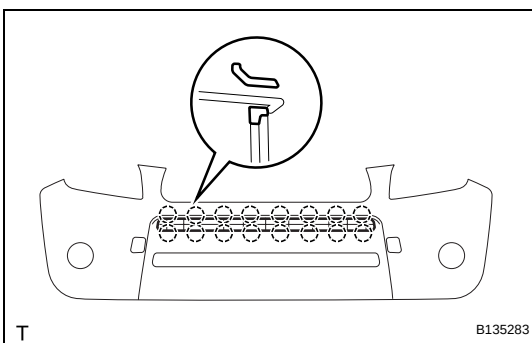


10. INSTALL NO. 1 RADIATOR GRILLE LOWER


- (a) Install the radiator grille and attach the 18 claws.

11. INSTALL RADIATOR GRILLE SUB-ASSEMBLY

(a) Install the radiator grille with the 6 claws.

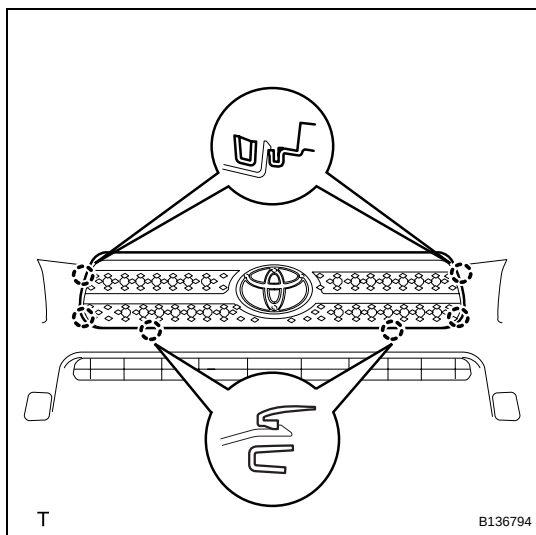

(b) Install the 4 bolts and 4 nuts.

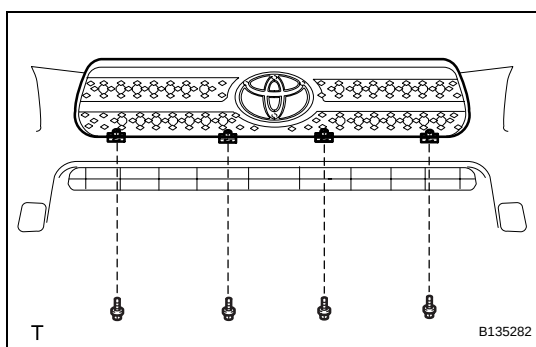


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL FRONT PILLAR COVER SUB-ASSEMBLY UPPER LH

- (a) Attach the 3 clips to install the pillar cover.

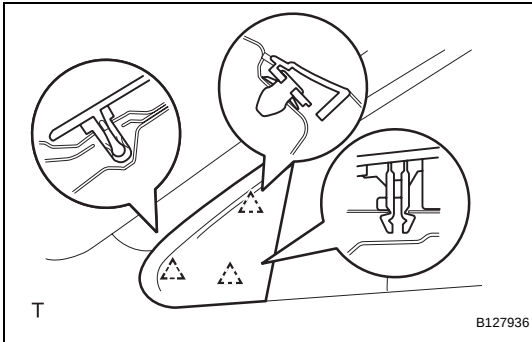

INSTALLATION

1. INSTALL FRONT BUMPER SIDE RETAINER LH

(a) Install the clip and bumper side retainer.



(b) Install the bolt.

Torque: 6.0 N*m (61 kgf*cm, 53 in.*lbf)

2. INSTALL FRONT BUMPER SIDE RETAINER RH

HINT:


Use the same procedures described for the LH side.

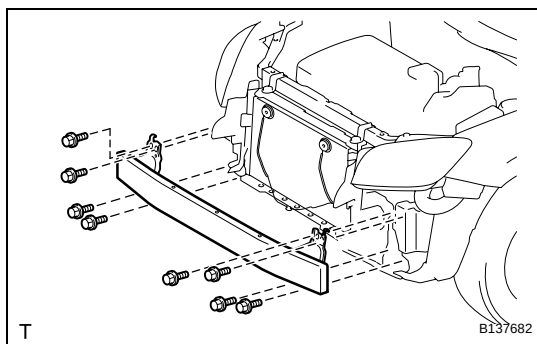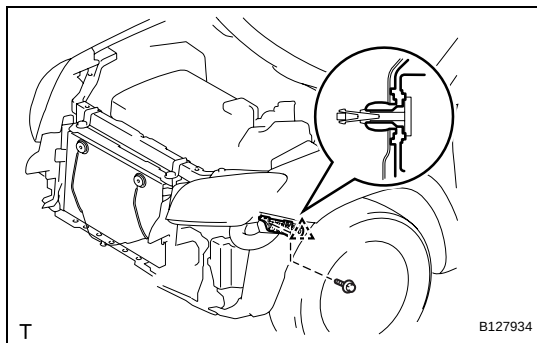


3. INSTALL FRONT BUMPER REINFORCEMENT

(a) Install the reinforcement with the 8 bolts.

Torque: 70 N*m (713 kgf*cm, 51 ft.*lbf)

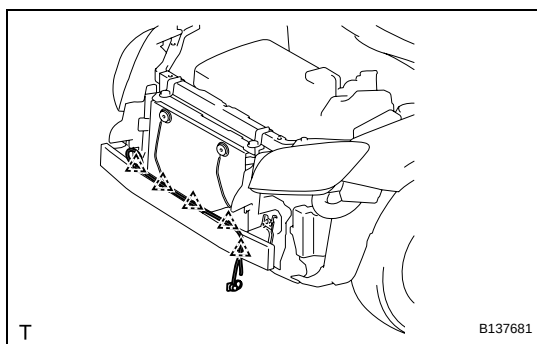


(b) Install the wire harness and attach the 5 claws.

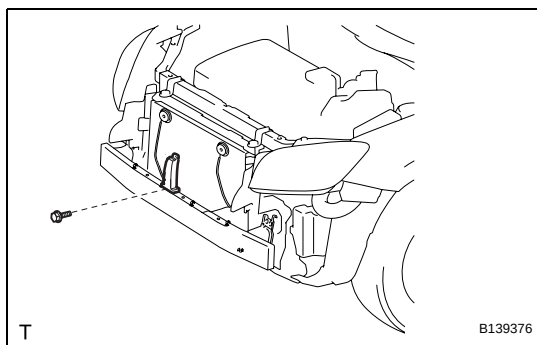

4. INSTALL FRONT BUMPER RETAINER

(a) Install the bolt with the retainer.

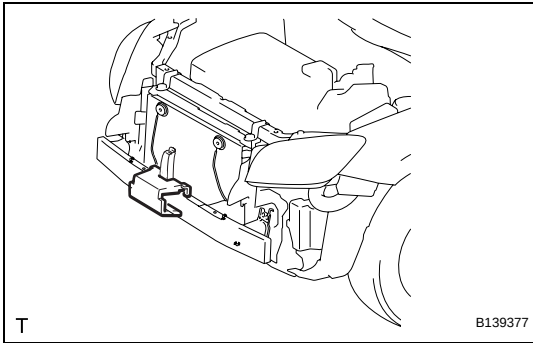


5. INSTALL NO. 2 FRONT BUMPER ENERGY ABSORBER


(a) Install the absorber.

6. INSTALL FRONT BUMPER COVER

(a) Put protective tape under the front fender and headlight.

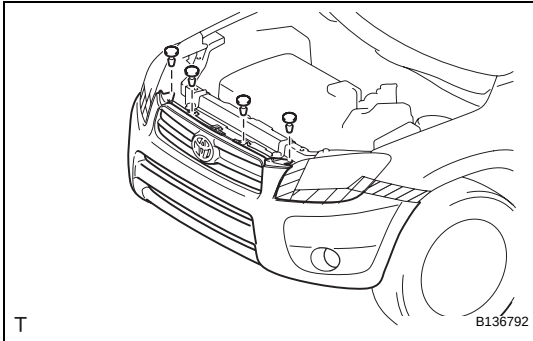


(b) Install the 4 clips.

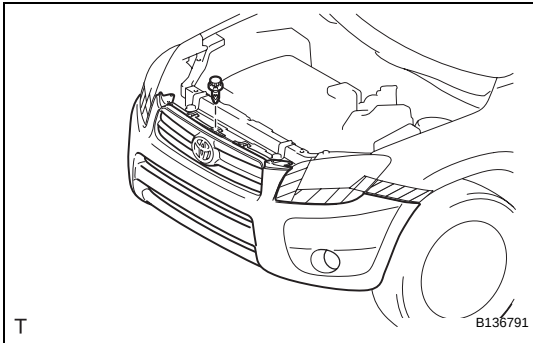


(c) Install the hood cushion center.


(d) w/ Fog Light:
Connect the 2 fog light connectors.

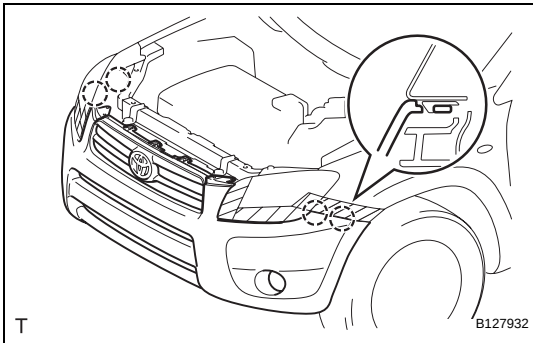


(e) Attach the 4 claws to install the bumper cover.

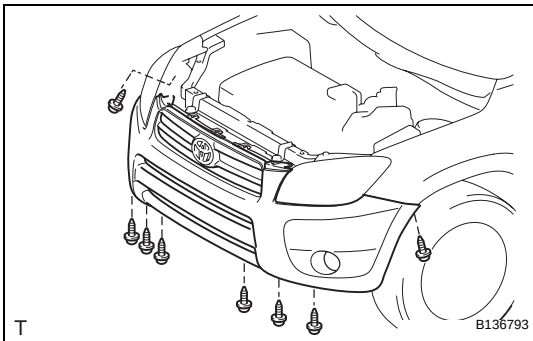


(f) Install the 8 screws.

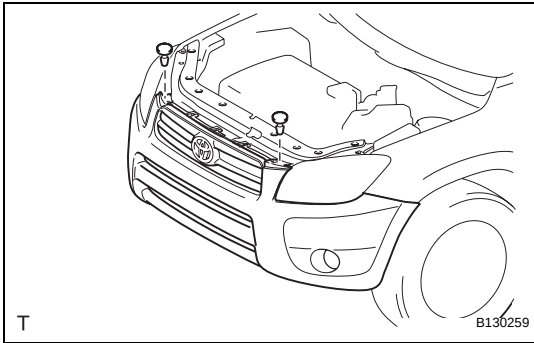**7. INSTALL RADIATOR SUPPORT OPENING COVER**

- (a) Install the 2 clips.

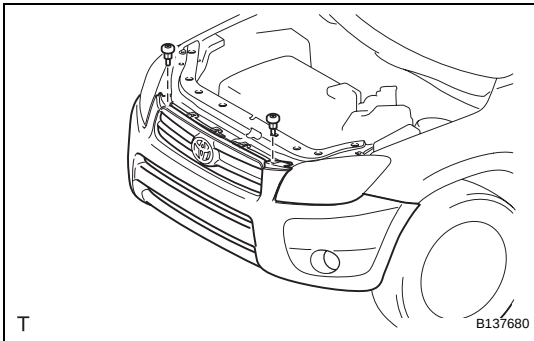**8. INSTALL RADIATOR GRILLE PROTECTOR**

- (a) Install the 2 radiator grille protectors.

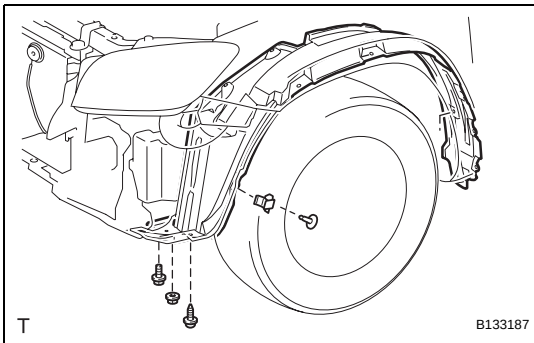**9. INSTALL FRONT FENDER LINER LH**

- (a) Install the fender liner with the fender liner retainer.
(b) w/ Splash Shield:
Install the front fender splash shield LH.
(c) Install the screw, nut and bolt.

10. INSTALL FRONT FENDER LINER RH

HINT:

Use the same procedures described for the LH side.

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


REASSEMBLY

HINT:
When installing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.
Standard heating temperature


Item	Specified Condition
Emblem base, emblem	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the emblem base and emblem excessively.


1. **INSTALL RADIATOR GRILLE EMBLEM**
(a) Attach the 4 claws to install the radiator grille.

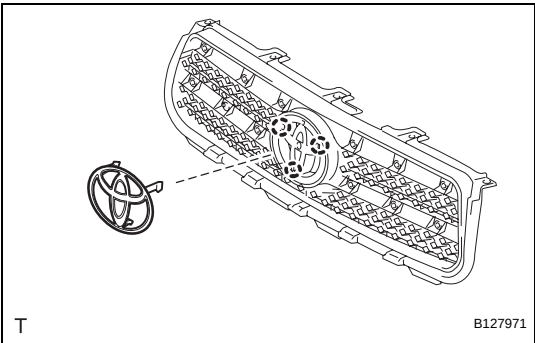

2. **INSTALL RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)**
(a) Install the ornament plate with the 12 screws.

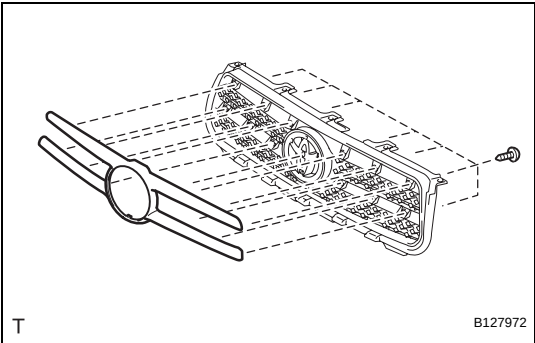

3. **INSTALL HOOD TO RADIATOR GRILLE SEAL**
(a) Install the new double-side tape.
(b) Attach the 7 clips and install the hood to radiator grille seal.

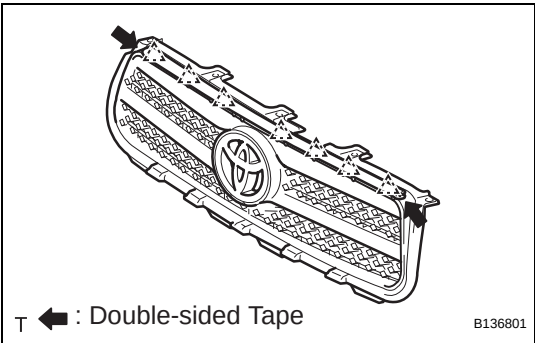

INSTALLATION

1. INSTALL NO. 2 RADIATOR GRILLE LOWER (See page [ET-9](#))
2. INSTALL NO. 1 RADIATOR GRILLE LOWER (See page [ET-9](#))
3. INSTALL RADIATOR GRILLE (See page [ET-10](#))


DISASSEMBLY

HINT:
When removing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.
Standard heating temperature


Item	Specified Condition
Radiator grille, ornament plate, emblem	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the radiator grille, ornament plate and emblem excessively.


1. REMOVE HOOD TO RADIATOR GRILLE SEAL
- (a) Remove the double-sided tape.
 - (b) Detach the 7 clips and remove the hood to radiator grille seal.

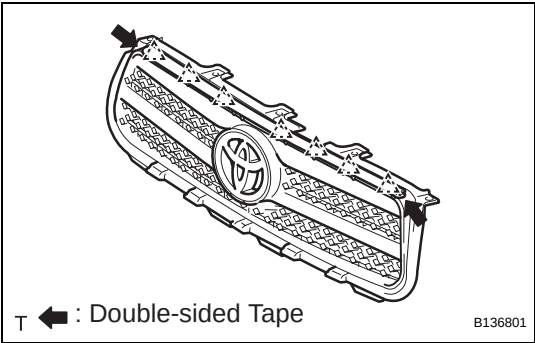


2. REMOVE NO. 2 RADIATOR GRILLE EMBLEM
- (a) Remove the 2 screws.
 - (b) Detach the claw and remove the emblem.

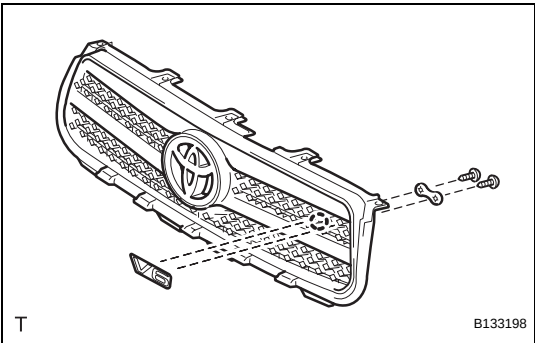

3. REMOVE RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)
- (a) Remove the 12 screws and ornament plate.

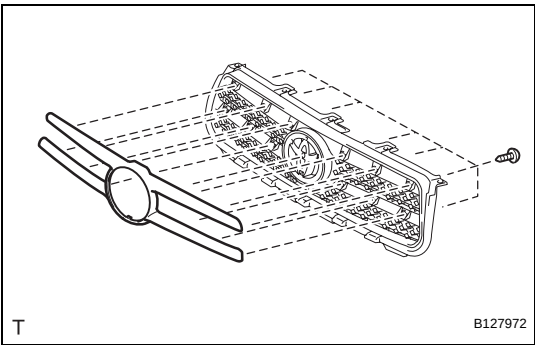

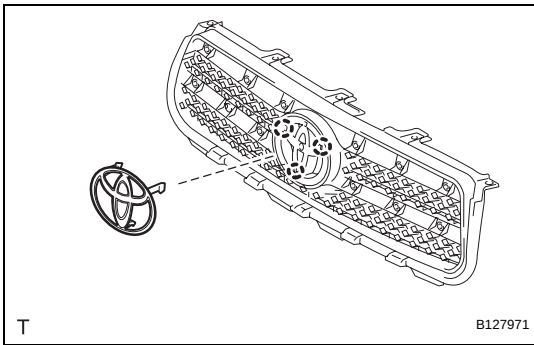**4. REMOVE RADIATOR GRILLE EMBLEM**

- (a) Using a screwdriver, detach the 3 claws and remove the emblem from the radiator grille.

HINT:

Tape the screwdriver tip before use.

NOTICE:

- If reusing the emblem, take care not to damage the emblem.
- Be careful not to damage the emblem base.


DISASSEMBLY

HINT:
When removing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.
Standard heating temperature


Item	Specified Condition
Radiator grille, ornament plate, emblem	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the radiator grille, ornament plate and emblem excessively.


1. REMOVE HOOD TO RADIATOR GRILLE SEAL
- (a) Remove the double-sided tape.
 - (b) Detach the 7 clips and remove the hood to radiator grille seal.

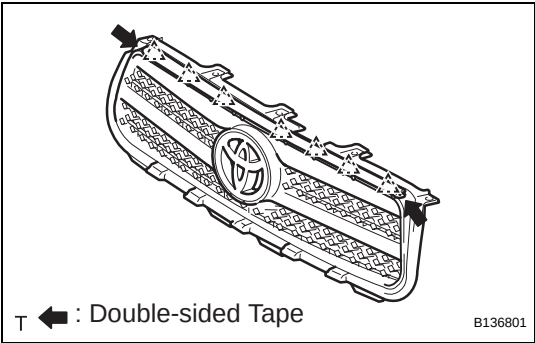


2. REMOVE NO. 2 RADIATOR GRILLE EMBLEM
- (a) Remove the 2 screws.
 - (b) Detach the claw and remove the emblem.

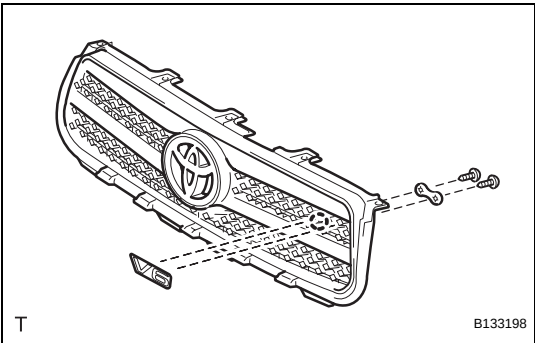

3. REMOVE RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)
- (a) Remove the 12 screws and ornament plate.

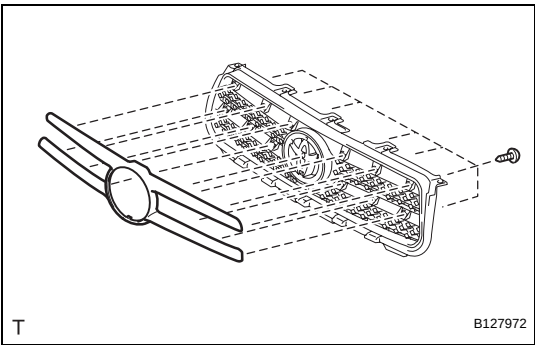

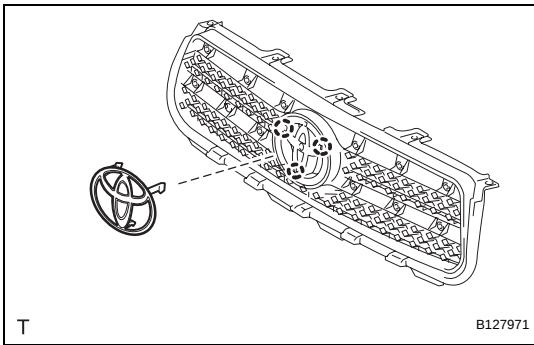**4. REMOVE RADIATOR GRILLE EMBLEM**

- (a) Using a screwdriver, detach the 3 claws and remove the emblem from the radiator grille.

HINT:

Tape the screwdriver tip before use.

NOTICE:

- If reusing the emblem, take care not to damage the emblem.
- Be careful not to damage the emblem base.


REASSEMBLY

HINT:
When installing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.
Standard heating temperature


Item	Specified Condition
Radiator grille, Ornament plate, emblem	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the radiator grille, ornament plate and emblem excessively.


1. **INSTALL RADIATOR GRILLE EMBLEM**
(a) Attach the 3 claws to install the emblem.

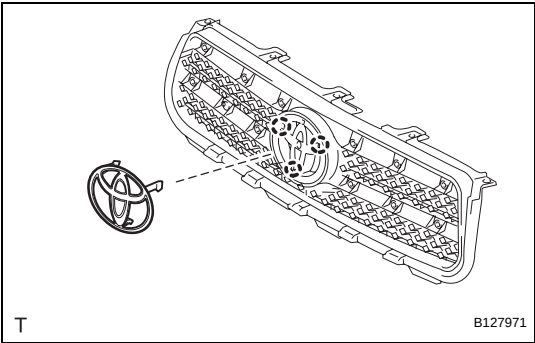


2. **INSTALL RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)**
(a) Install the ornament plate with the 12 screws.

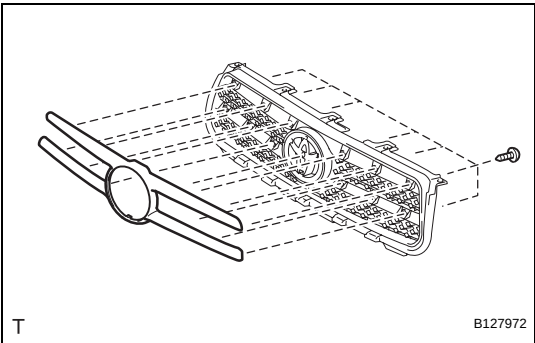

3. **INSTALL NO. 2 RADIATOR GRILLE EMBLEM**
(a) Attach the claw to install the emblem.
(b) Install the 2 screws.

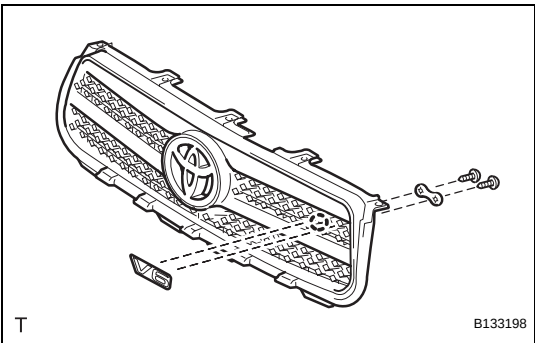

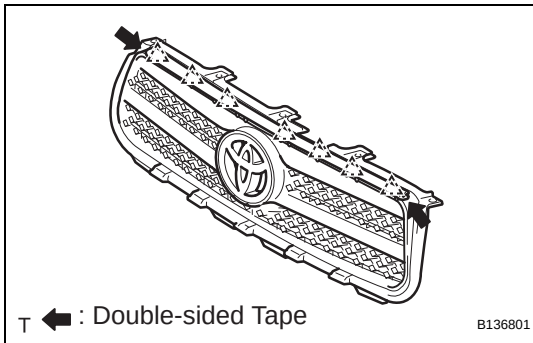


4. INSTALL HOOD TO RADIATOR GRILLE SEAL

- (a) Install new double-sided tape.
- (b) Attach the 7 clips and install the hood to radiator grille seal.

INSTALLATION


1. INSTALL NO. 2 RADIATOR GRILLE LOWER

- (a) Install the radiator grille and attach the 16 claws.

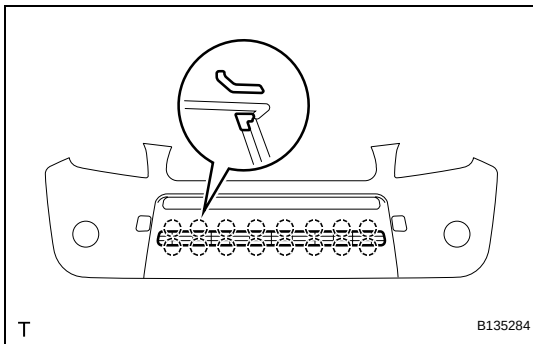


2. INSTALL NO. 1 RADIATOR GRILLE LOWER


- (a) Install the radiator grille and attach the 16 claws.

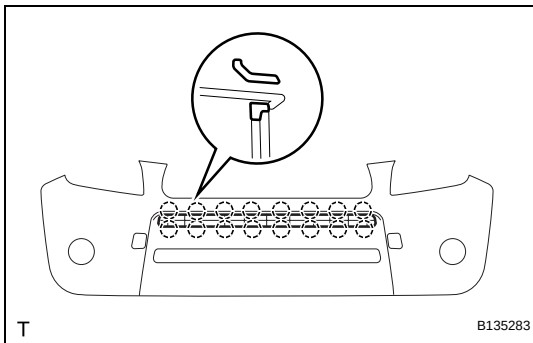

3. INSTALL RADIATOR GRILLE

- (a) Install the radiator grille with the 6 claws.

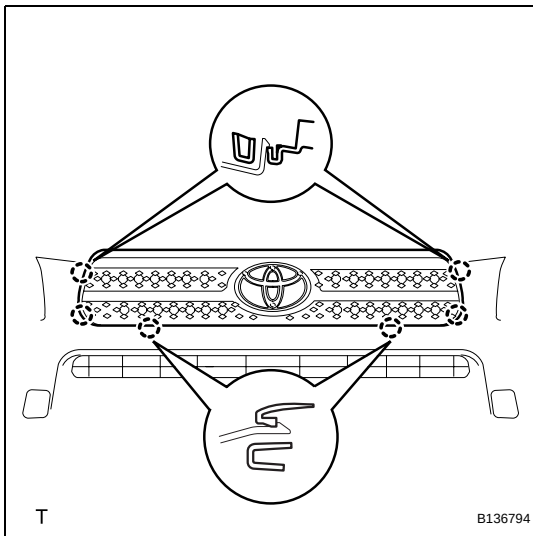

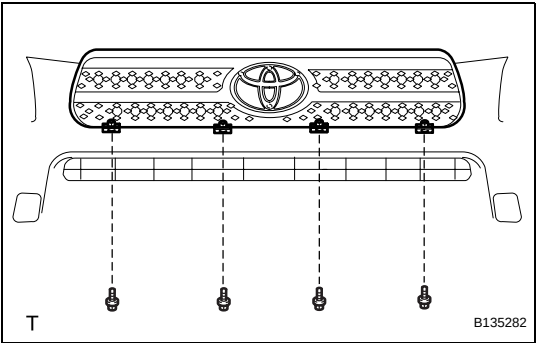

(b) Install the 4 bolts and 4 nuts.


REASSEMBLY

HINT:
When installing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.
Standard heating temperature


Item	Specified Condition
Radiator grille, Ornament plate, emblem	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the radiator grille, ornament plate and emblem excessively.


1. **INSTALL RADIATOR GRILLE EMBLEM**
(a) Attach the 3 claws to install the emblem.

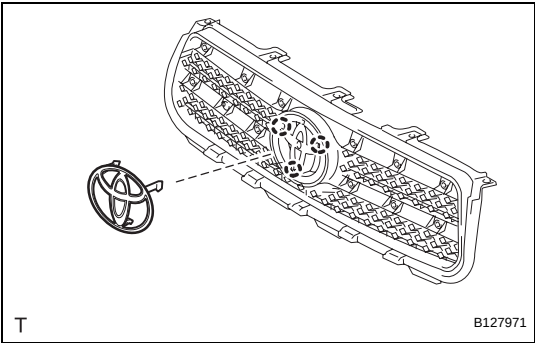


2. **INSTALL RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)**
(a) Install the ornament plate with the 12 screws.

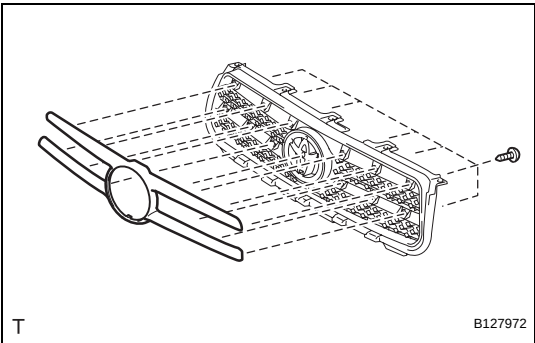

3. **INSTALL NO. 2 RADIATOR GRILLE EMBLEM**
(a) Attach the claw to install the emblem.
(b) Install the 2 screws.

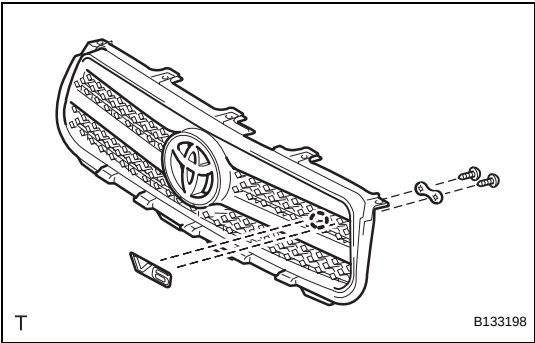

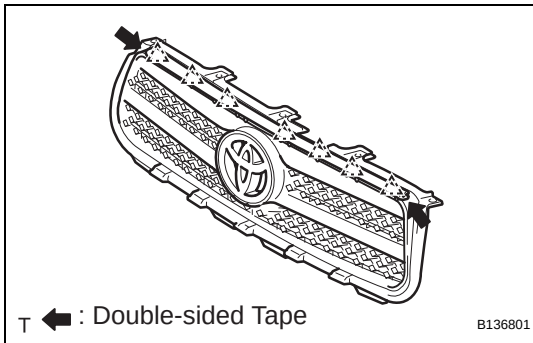


4. INSTALL HOOD TO RADIATOR GRILLE SEAL

- (a) Install new double-sided tape.
- (b) Attach the 7 clips and install the hood to radiator grille seal.

INSTALLATION


1. INSTALL NO. 2 RADIATOR GRILLE LOWER

- (a) Install the radiator grille and attach the 16 claws.

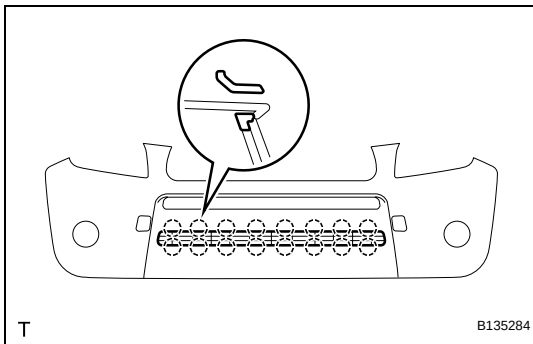


2. INSTALL NO. 1 RADIATOR GRILLE LOWER


- (a) Install the radiator grille and attach the 16 claws.

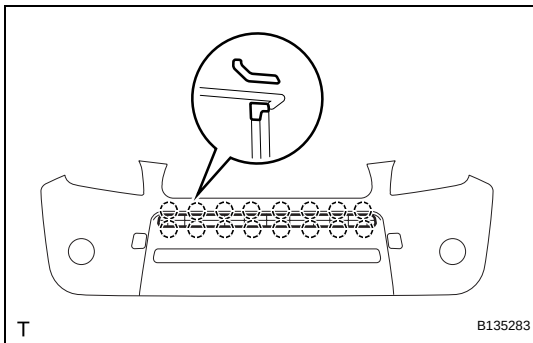

3. INSTALL RADIATOR GRILLE

- (a) Install the radiator grille with the 6 claws.

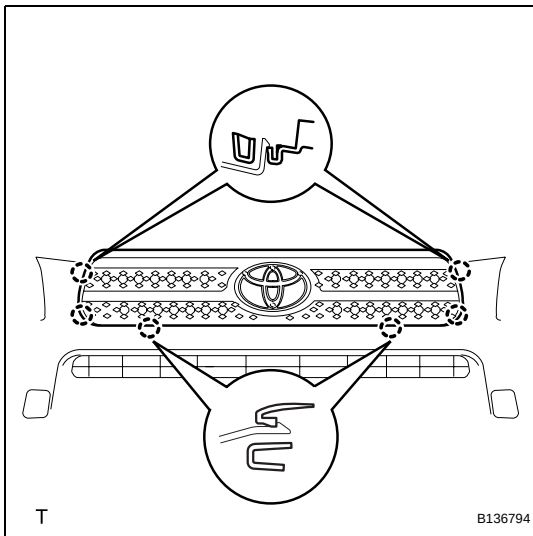

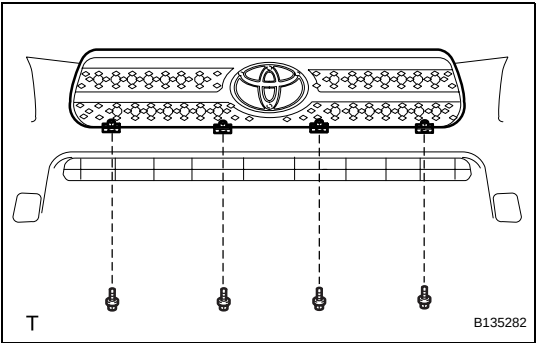

(b) Install the 4 bolts and 4 nuts.

REMOVAL

NOTICE:


Do not heat the vehicle body, emblem and name plate excessively.

HINT:

When removing the emblem and name plate, heat the vehicle body, emblem and name plate using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Name plate	20 to 30°C (68 to 86°F)

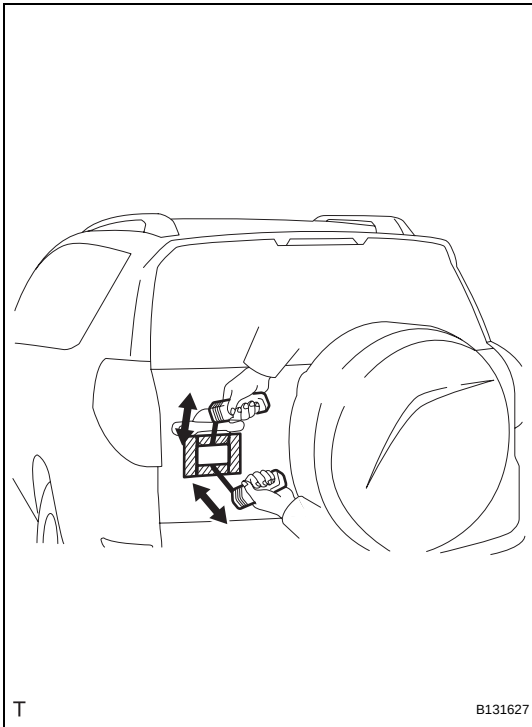**1. REMOVE NO. 1 BACK DOOR EMBLEM ASSEMBLY**


- Put protective tape around the emblem.
- Insert a piano wire between the vehicle body and emblem.
- Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- Pull the piano wire and scrape off the double-sided tape that holds the emblem to the vehicle body.

NOTICE:

- If reusing the emblem, take care not to damage the emblem.
- Be careful not to damage the vehicle body.

ET

ET

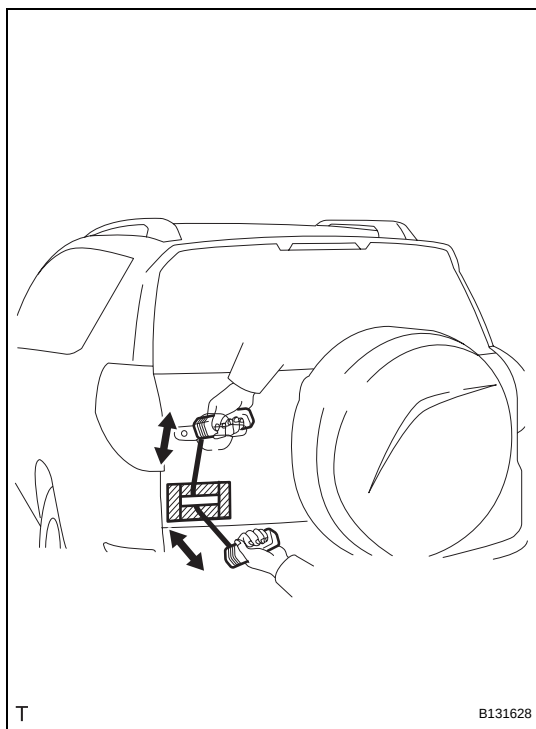


2. REMOVE BACK DOOR NAME PLATE

- Put protective tape around the name plate.
- Insert a piano wire between the vehicle body and name plate.
- Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- Pull the piano wire and scrape off the double-sided tape that holds the name plate to the vehicle body.

NOTICE:

- If reusing the name plate, take care not to damage the name plate.
- Be careful not to damage the vehicle body.

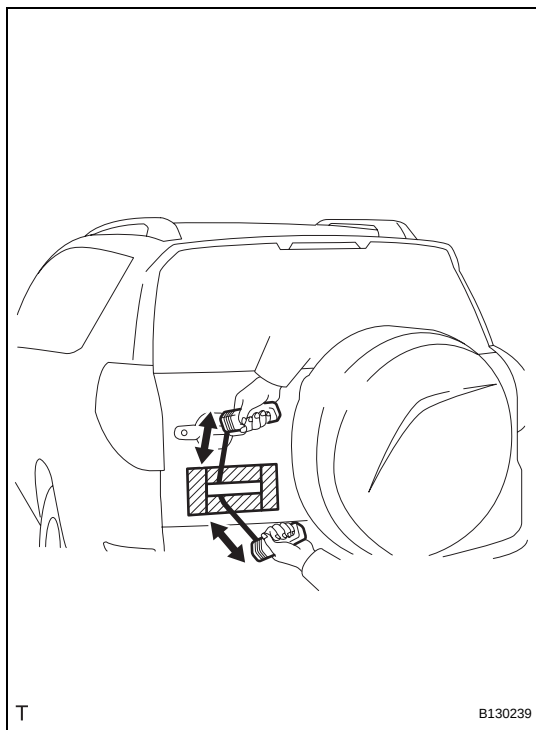


3. REMOVE NO. 1 BACK DOOR EMBLEM

- Put protective tape around the emblem.
- Insert a piano wire between the vehicle body and emblem.
- Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- Pull the piano wire and scrape off the double-sided tape that holds the emblem to the vehicle body.

NOTICE:

- If reusing the emblem, take care not to damage the emblem.
- Be careful not to damage the vehicle body.

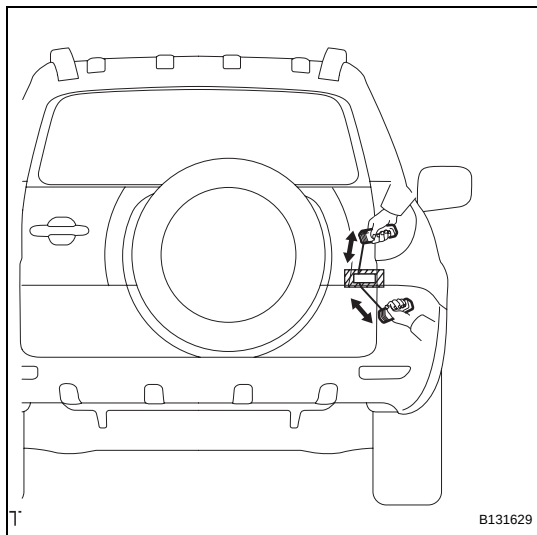**4. REMOVE NO. 4 BACK DOOR NAME PLATE (for 4WD)**

- (a) Put protective tape around the name plate.
- (b) Insert a piano wire between the vehicle body and name plate.
- (c) Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- (d) Pull the piano wire and scrape off the double-sided tape that holds the name plate to the vehicle body.

NOTICE:

- If reusing the name plate, take care not to damage the name plate.
- Be careful not to damage the vehicle body.

INSTALLATION

NOTICE:

Do not heat the vehicle body, emblem and name plate excessively.

HINT:

When installing the emblem and name plate, heat the vehicle body, emblem and name plate using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Name plate	20 to 30°C (68 to 86°F)

1. INSTALL NO. 4 BACK DOOR NAME PLATE (for 4WD)

- (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
 - (2) Remove the double-sided tape from the vehicle body.
 - (3) Wipe off any tape adhesive residue with cleaner.
- (b) If reusing the name plate:
Clean the name plate.
 - (1) Using a heat light, heat the name plate.
 - (2) Remove the double-sided tape from the name plate.
 - (3) Wipe off any tape adhesive residue with cleaner.
 - (4) Apply new double-sided tape to the name plate.
- (c) Install the name plate.
 - (1) Using a heat light, heat the vehicle body and name plate.
 - (2) Remove the peeling paper from the face of the name plate.


HINT:

After removing the peeling paper, keep the exposed adhesive free from foreign matter.

- (3) Install the name plate.

NOTICE:

Install the name plate exactly according to the specifications below.

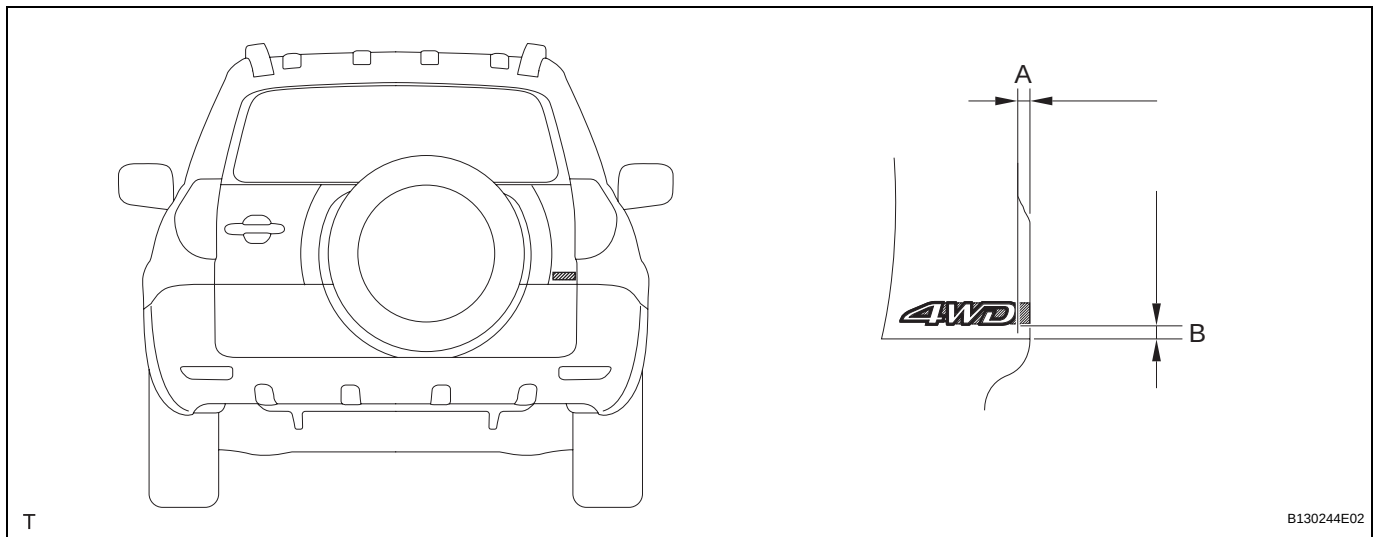

Standard measurement

Area	Specified Condition
A	8 mm (0.314 in.)
B	8.6 mm (0.338 in.)

2. INSTALL NO. 1 BACK DOOR EMBLEM

3. INSTALL BACK DOOR NAME PLATE

4. INSTALL NO. 1 BACK DOOR EMBLEM ASSEMBLY

- (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
 - (2) Remove the double-sided tape from the vehicle body.
 - (3) Wipe off any tape adhesive residue with cleaner.
- (b) If reusing the name plate and emblem: Clean the name plate and emblem.
 - (1) Using a heat light, heat the name plate and emblem.
 - (2) Remove the double-sided tape from the name plate and emblem.
 - (3) Wipe off any tape adhesive residue with cleaner.
 - (4) Apply new double-sided tape to the name plate and emblem.
- (c) Install the name plate and emblem.
 - (1) Using a heat light, heat the vehicle body, name plate and emblem.
 - (2) Remove the peeling paper from the face of the name plate and emblem.

HINT:


After removing the peeling paper, keep the exposed adhesive free from foreign matter.

- (3) Install the name plate and emblem.

NOTICE:

Install the name plate and emblem exactly according to the specifications below.

ET

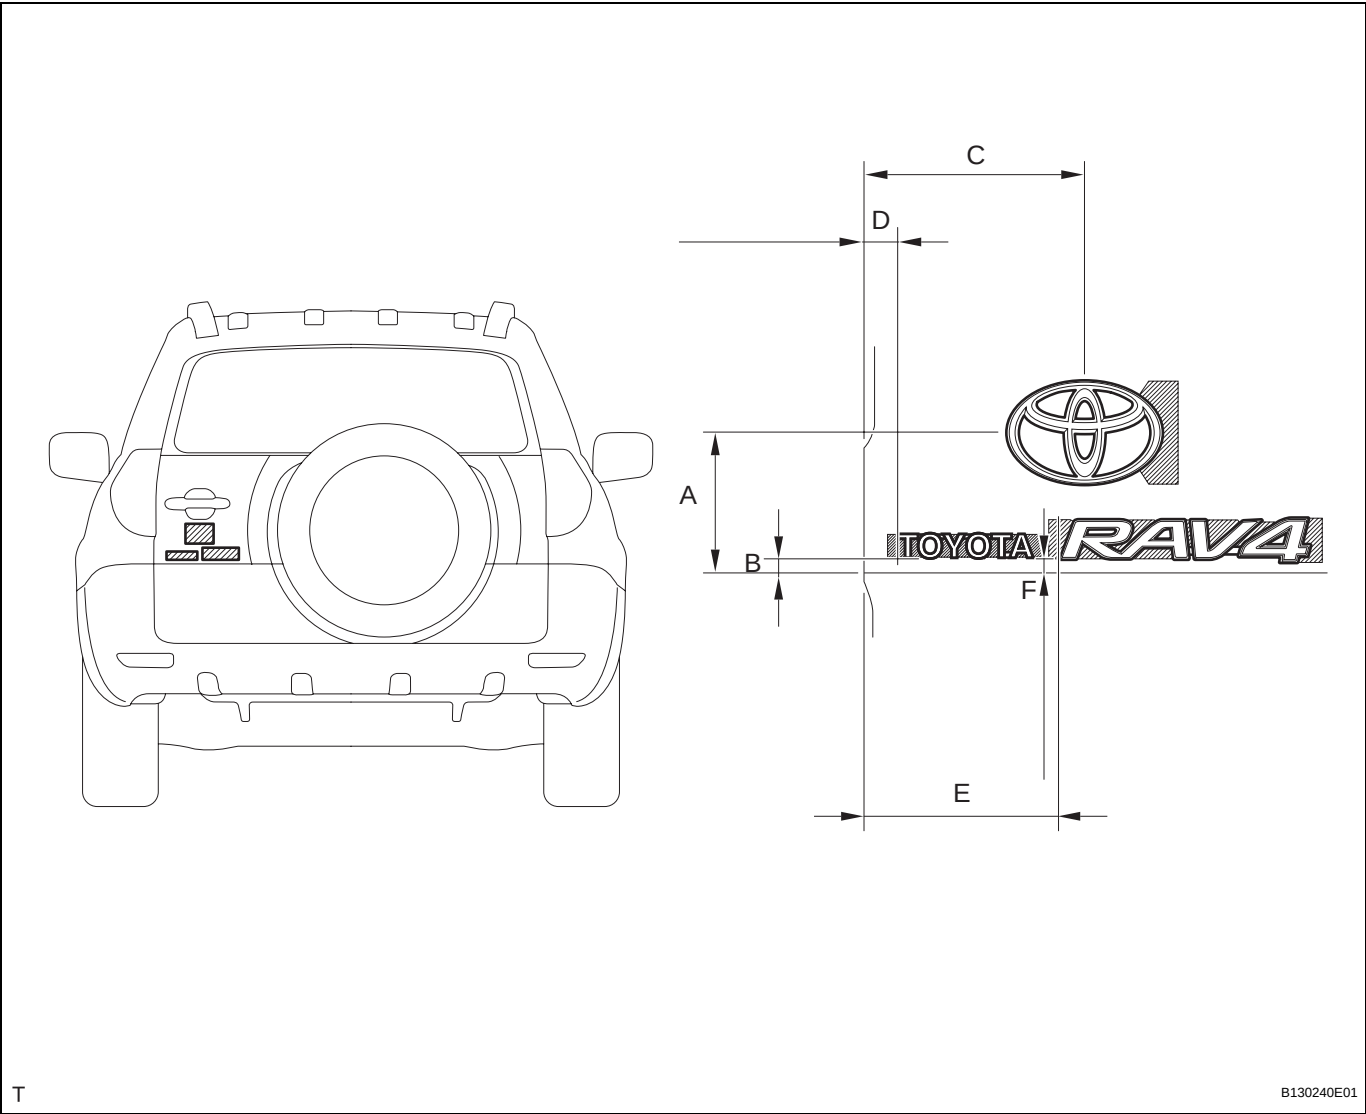

Standard measurement

Area	Specified Condition
A	92.8 mm (3.653 in.)
B	9.3 mm (0.366 in.)
C	157.5 mm (6.200 in.)
D	25.3 mm (0.996 in.)
E	138.0 mm (5.433 in.)
F	8.2 mm (0.322 in.)

INSTALLATION

HINT:

- When installing the spoiler, heat the vehicle body and spoiler using a heat light.




Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and spoiler excessively.

1. **INSTALL CENTER STOP LIGHT**
 - (a) Install the center stop light with the 2 screws.
2. **INSTALL REAR SPOILER**
 - (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
 - (b) If reusing the spoiler:
Clean the spoiler.
 - (1) Using a heat light, heat the spoiler.
 - (c) Connect the center stop light connector.
 - (d) Install the spoiler with 3 clips.

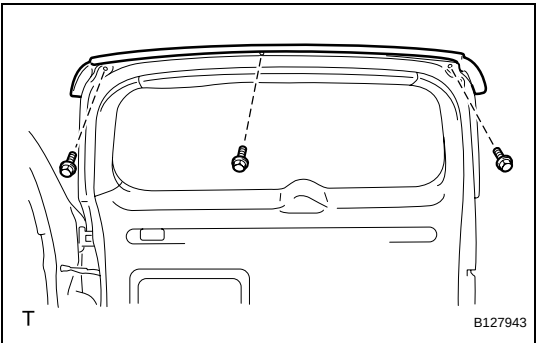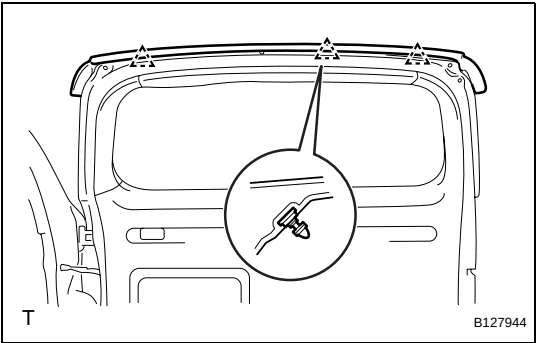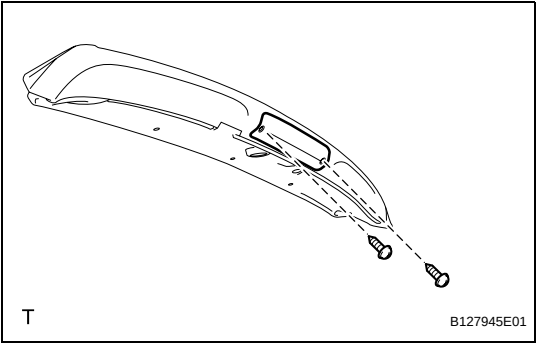

- (e) Install the 3 bolts.
Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)
3. **INSTALL BACK DOOR CENTER GARNISH (See page [ED-67](#))**
 4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**


REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. REMOVE ROOF RACK SUPPORT SUB-ASSEMBLY CENTER

- (a) Remove the 4 roof carrier caps and roof rack support center.

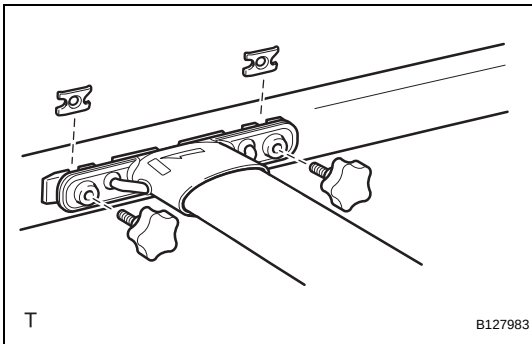


2. REMOVE ROOF RACK BAR FRONT

- (a) Remove the 4 screws and roof rack bar.

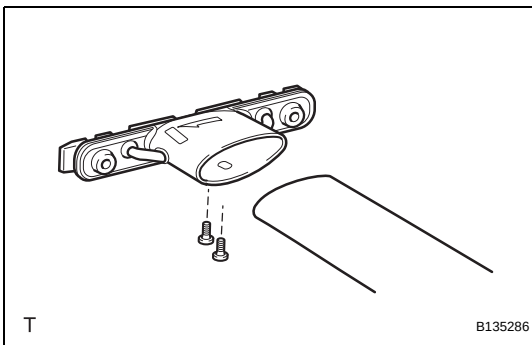


3. REMOVE ROOF RACK LEG COVER FRONT LH


- (a) Remove the leg cover.
- (1) Using a screwdriver, detach the 4 claws.
- HINT:
Tape the screwdriver tip before use.
- (2) Detach the rib from the bar.

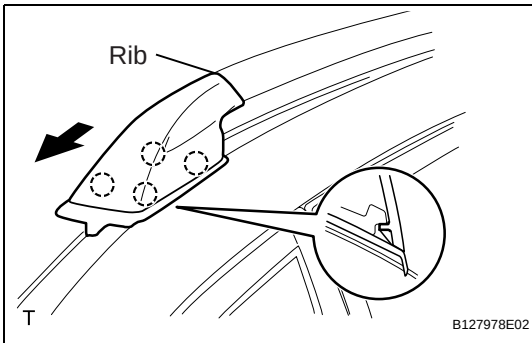

4. REMOVE ROOF RACK LEG COVER REAR LH

- (a) Remove the leg cover.
- (1) Using a screwdriver, detach the 4 claws.
- HINT:
Tape the screwdriver tip before use.
- (2) Detach the rib from the bar.

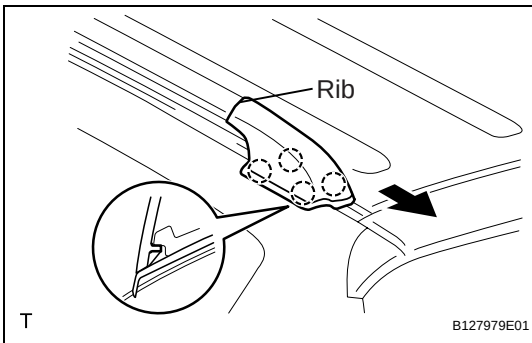

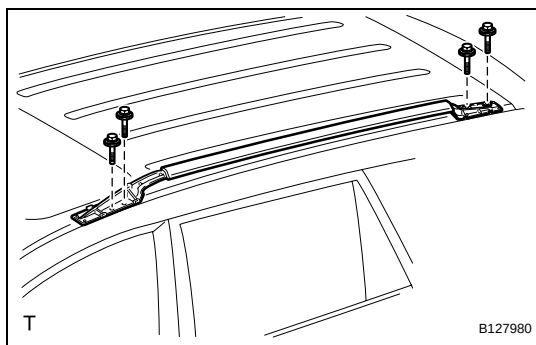

5. REMOVE ROOF RACK ASSEMBLY LH

Remove the 4 bolts and the roof rack.

6. REMOVE ROOF RACK LEG FRONT LH

- Remove the 2 screws and roof rack leg front.
- Remove the leg cushion front.

7. REMOVE ROOF RACK LEG REAR LH

- Remove the 2 screws and roof rack leg rear.
- Remove the leg cushion rear.

INSTALLATION

1. REPLACE ROOF CARRIER SEAL

- Remove the seals.
- Install new seals as shown in the illustration.

2. INSTALL ROOF RACK LEG FRONT LH

- Install the leg cushion front.
- Install the roof rack leg front with the 2 screws.

Torque: 2.8 to 5.0 N*m (29 to 51 kgf*cm, 25 to 44 in.*lbf)

3. INSTALL ROOF RACK LEG REAR LH



- Install the leg cushion rear.
- Install the roof rack leg rear with the 2 screws.

Torque: 2.8 to 5.0 N*m (29 to 51 kgf*cm, 25 to 44 in.*lbf)

4. INSTALL ROOF RACK ASSEMBLY LH


- Install the roof rack with the 4 bolts.

Torque: 38 N*m (387 kgf*cm, 28 ft.*lbf)

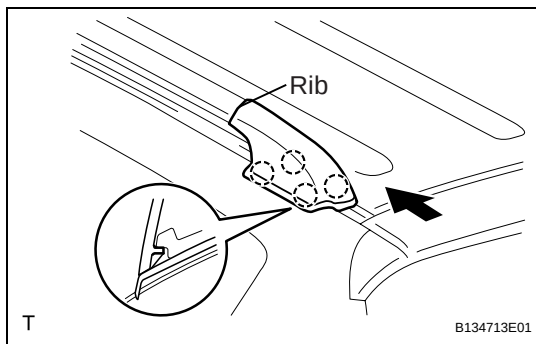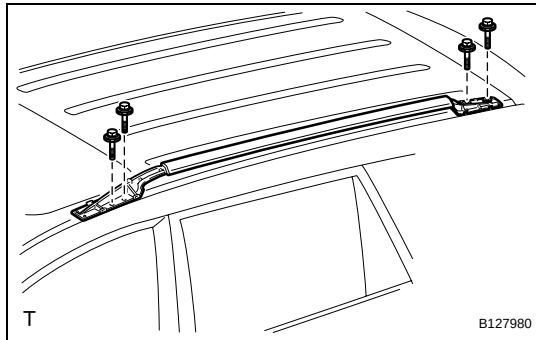


5. INSTALL ROOF RACK LEG COVER REAR LH


- Install the leg cover.
 - Attach the rib to the bar.
 - Attach the 4 claws.

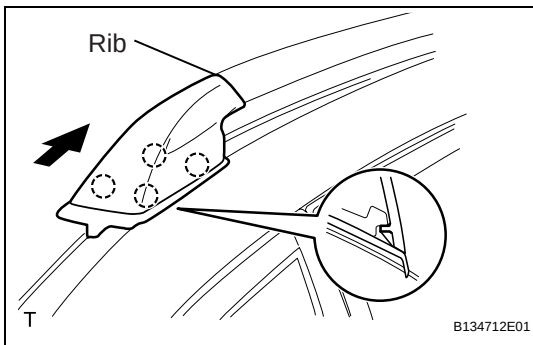**6. INSTALL ROOF RACK LEG COVER FRONT LH**

- (a) Install the leg cover.
- (1) Attach the rib to the bar.
 - (2) Attach the 4 claws.

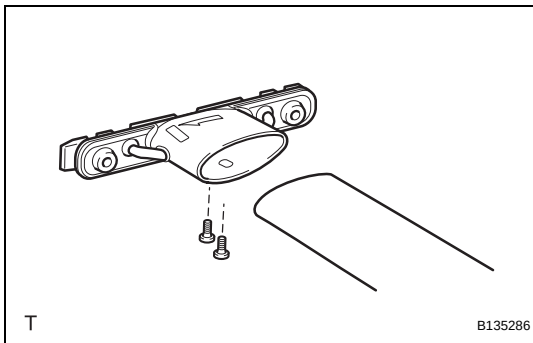**7. INSTALL ROOF RACK BAR FRONT**

- (a) Install the roof rack bar with the 4 screws.
- Torque: 1.96 to 2.94 N*m (20 to 30 kgf*cm, 17 to 26 in.*lbf)**

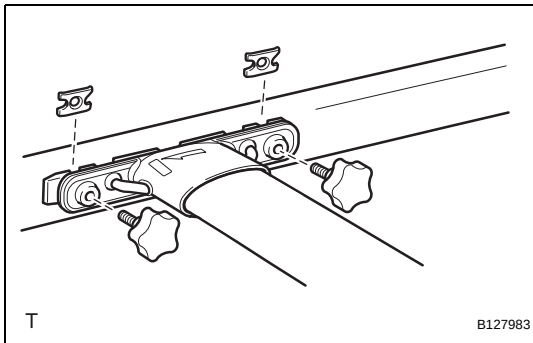**8. INSTALL ROOF RACK SUPPORT SUB-ASSEMBLY CENTER**

- (a) Install the roof rack support center with the 4 roof carrier caps.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL FRONT DOOR BELT MOULDING ASSEMBLY LH

- (a) Attach the claws to install the belt moulding.

HINT:

Confirm that the moulding is firmly installed.


2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-12](#))

3. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-33](#))

4. INSTALL FRONT ARMREST BASE PANEL UPPER LH (See page [ED-34](#))

5. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-35](#))


6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

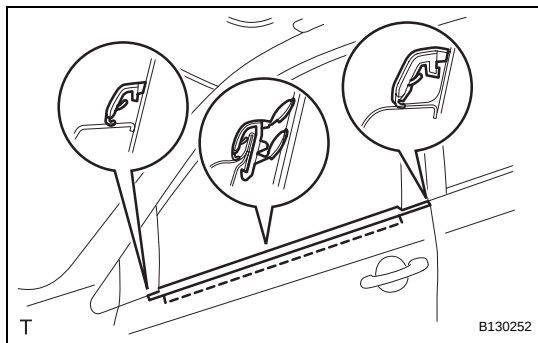

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

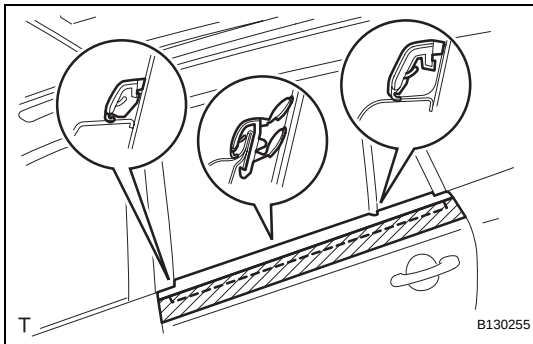

1. INSTALL REAR DOOR BELT MOULDING ASSEMBLY LH

- (a) Attach the claws to install the moulding.

HINT:

Confirm that the moulding is firmly installed.

2. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-53](#))

3. INSTALL REAR DOOR ARMREST BASE PANEL UPPER LH (See page [ED-54](#))

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the clip, heat the clip and body using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Clip	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the clip and vehicle body excessively.

ET

1. REPLACE ROOF DRIP SIDE FINISH MOULDING CLIP

HINT:

Use the procedures below to replace damaged or accidentally removed clips. If this step is not necessary, go to the next step.

NOTICE:


After press-fitting the clips, wait 30 minutes or more before installing the moulding.

HINT:

- Minimum hardening time: 30 minutes
- Time needed for complete hardening: 24 hours
- (a) Remove the double-sided tape that remains on the surfaces of the moulding and vehicle body, and then clean the surface with white gasoline.
- (b) Using a heat light, heat the clip installation surface of the vehicle body and installation part of the clips.

2. INSTALL ROOF DRIP SIDE FINISH MOULDING LH

- Install the No. 2 center roof drip side finish moulding and roof drip side finish moulding.
- Install the 2 roof drip moulding joint covers to the vehicle body.

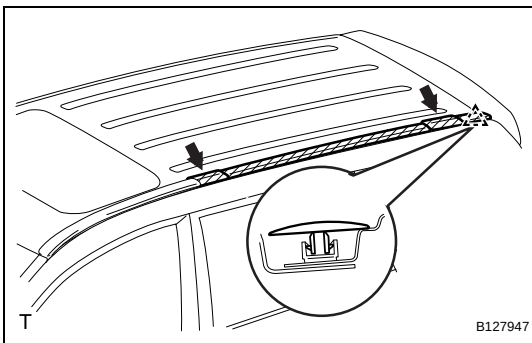

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When installing the moulding, heat the vehicle body and moulding using a heat light.

Standard heating temperature


Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the vehicle body and moulding excessively.


1. INSTALL NO. 1 ROCKER PANEL MOULDING RETAINER LH

- (a) Install the 2 retainers with the 4 screws.

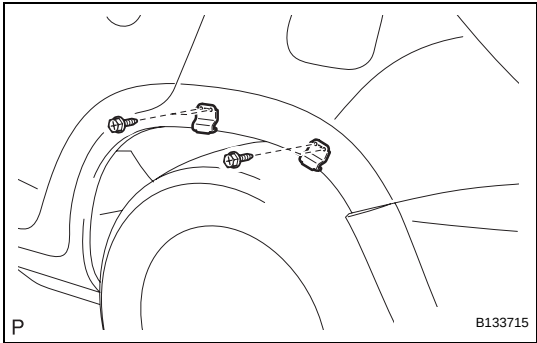


2. INSTALL QUARTER OPENING RETAINER LH


- (a) Install the retainer with the 4 screws.

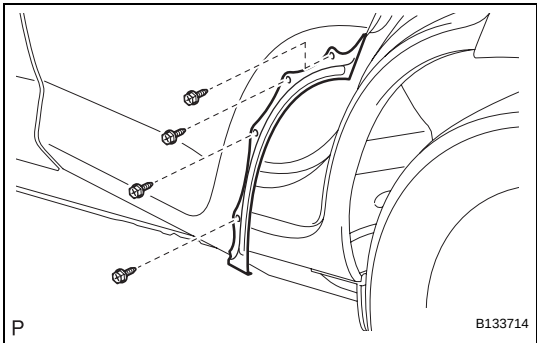

3. INSTALL NO. 2 ROCKER PANEL MOULDING RETAINER LH


- (a) Install the retainer with the 2 screws.

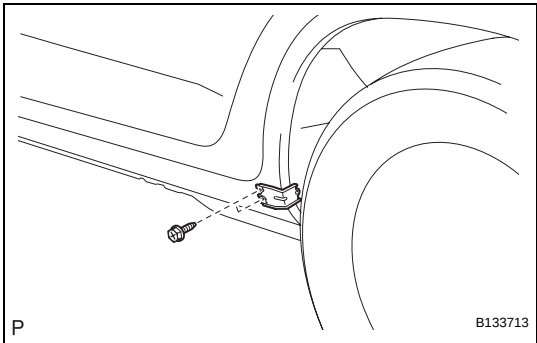

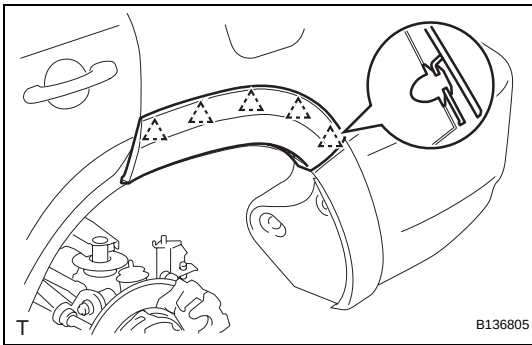

4. INSTALL REAR QUARTER OUTSIDE MOULDING LH




(a) Attach the 5 clips to install the moulding.

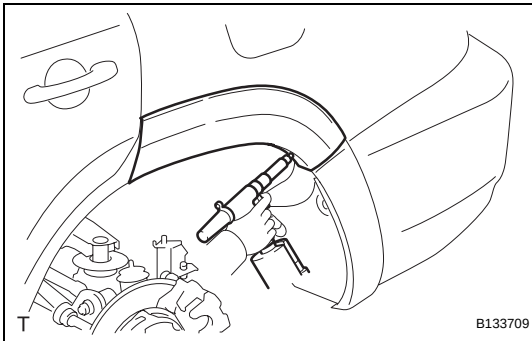


(b) Using an air riveter or hand riveter with a nose piece, strike 2 rivets to the vehicle to install the rear quarter outside moulding to the vehicle.

NOTICE:

- If the rivet is not positioned perpendicularly, it will bend the mandrel.
- Do not pry the rivet with the riveter, as this will cause damage to the riveter and mandrel.

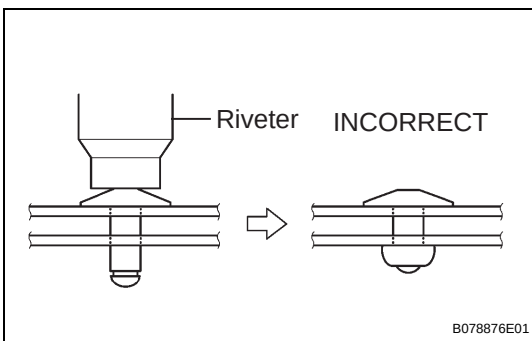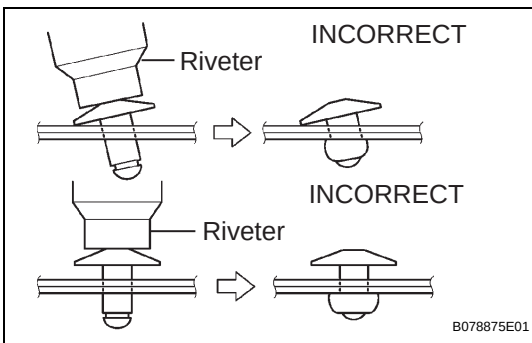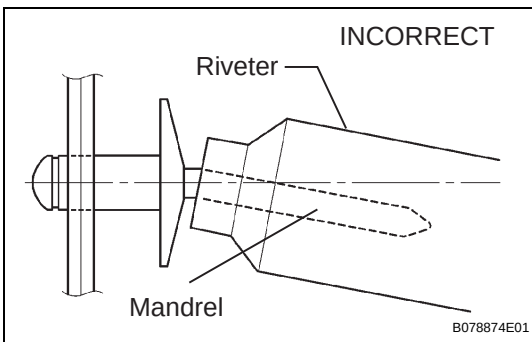


- Confirm that the rivets are seated properly against the moulding. Do not tilt the riveter when installing the rivet to the moulding. Do not leave any space between the rivet head and moulding.
- Do not leave any space between the moulding and door panel. Firmly hold together the 2 items while installing the rivet.

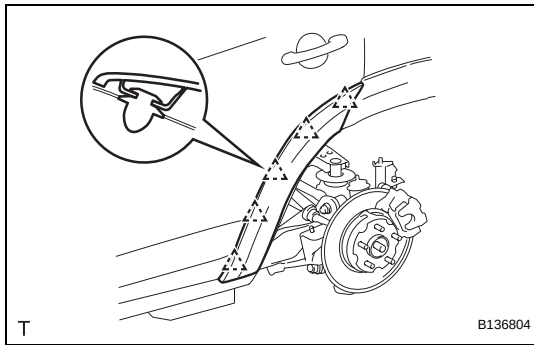




5. INSTALL NO. 1 REAR WHEEL OPENING EXTENSION LH

- (a) Attach the 5 clips to install the extension.
Using an air riveter or hand riveter with a nose piece, strike 2 rivets to the vehicle to install the rear wheel opening extension to the vehicle.

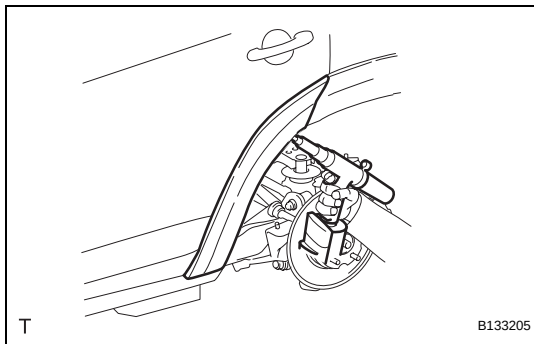


NOTICE:


- If the rivet is not positioned perpendicularly, it will bend the mandrel.
- Do not pry the rivet with the riveter, as this will cause damage to the riveter and mandrel.

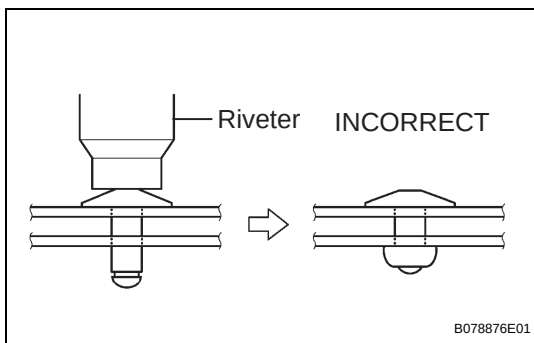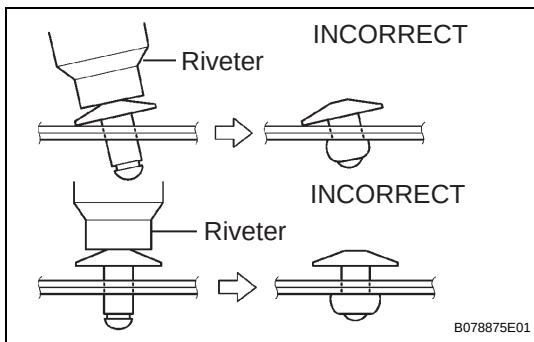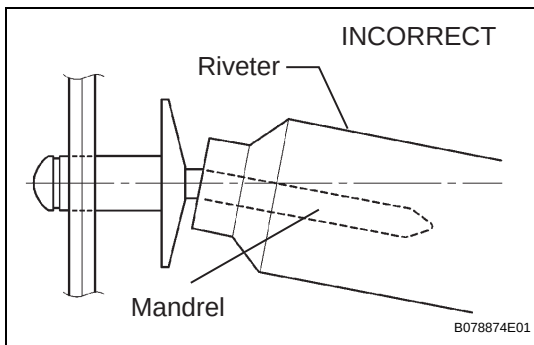

- Confirm that the rivets are seated properly against the moulding. Do not tilt the riveter when installing the rivet to the moulding. Do not leave any space between the rivet head and moulding.
- Do not leave any space between the moulding and door panel. Firmly hold together the 2 items while installing the rivet.

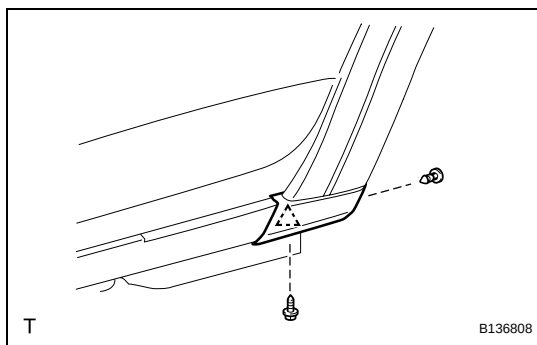**6. INSTALL NO. 2 REAR WHEEL OPENING EXTENSION LH**

- (a) Attach the clip to install the extension.
Install the screw and clip.

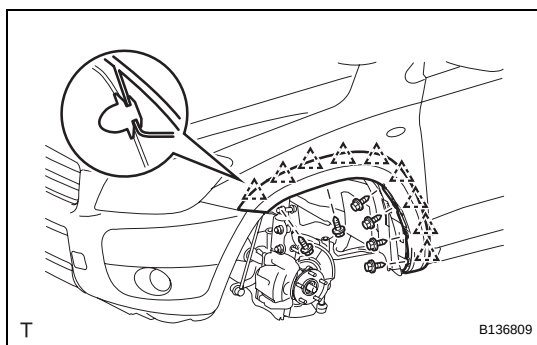
**7. INSTALL FRONT FENDER MOULDING SUB-ASSEMBLY LH**

- (a) Attach the 9 clips to install the extension
(b) Install the 4 screws and 2 clips.


ET


FRONT BUMPER

COMPONENTS

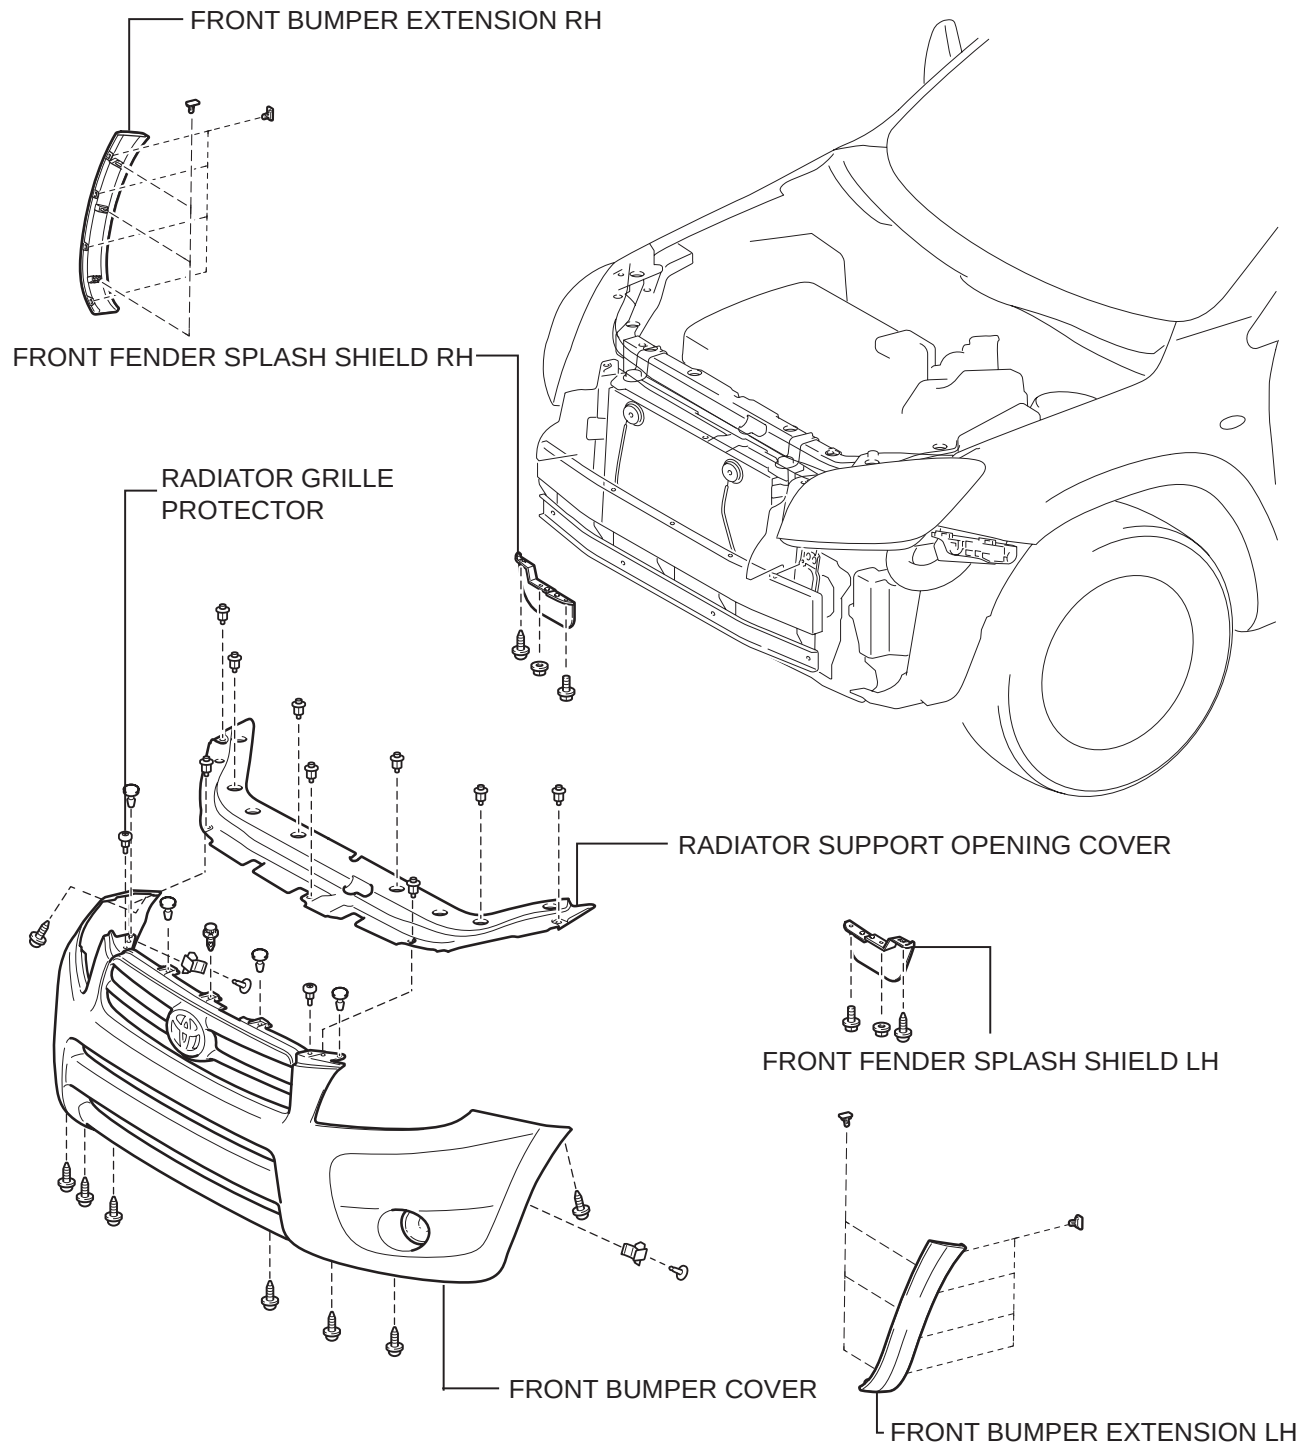

ET

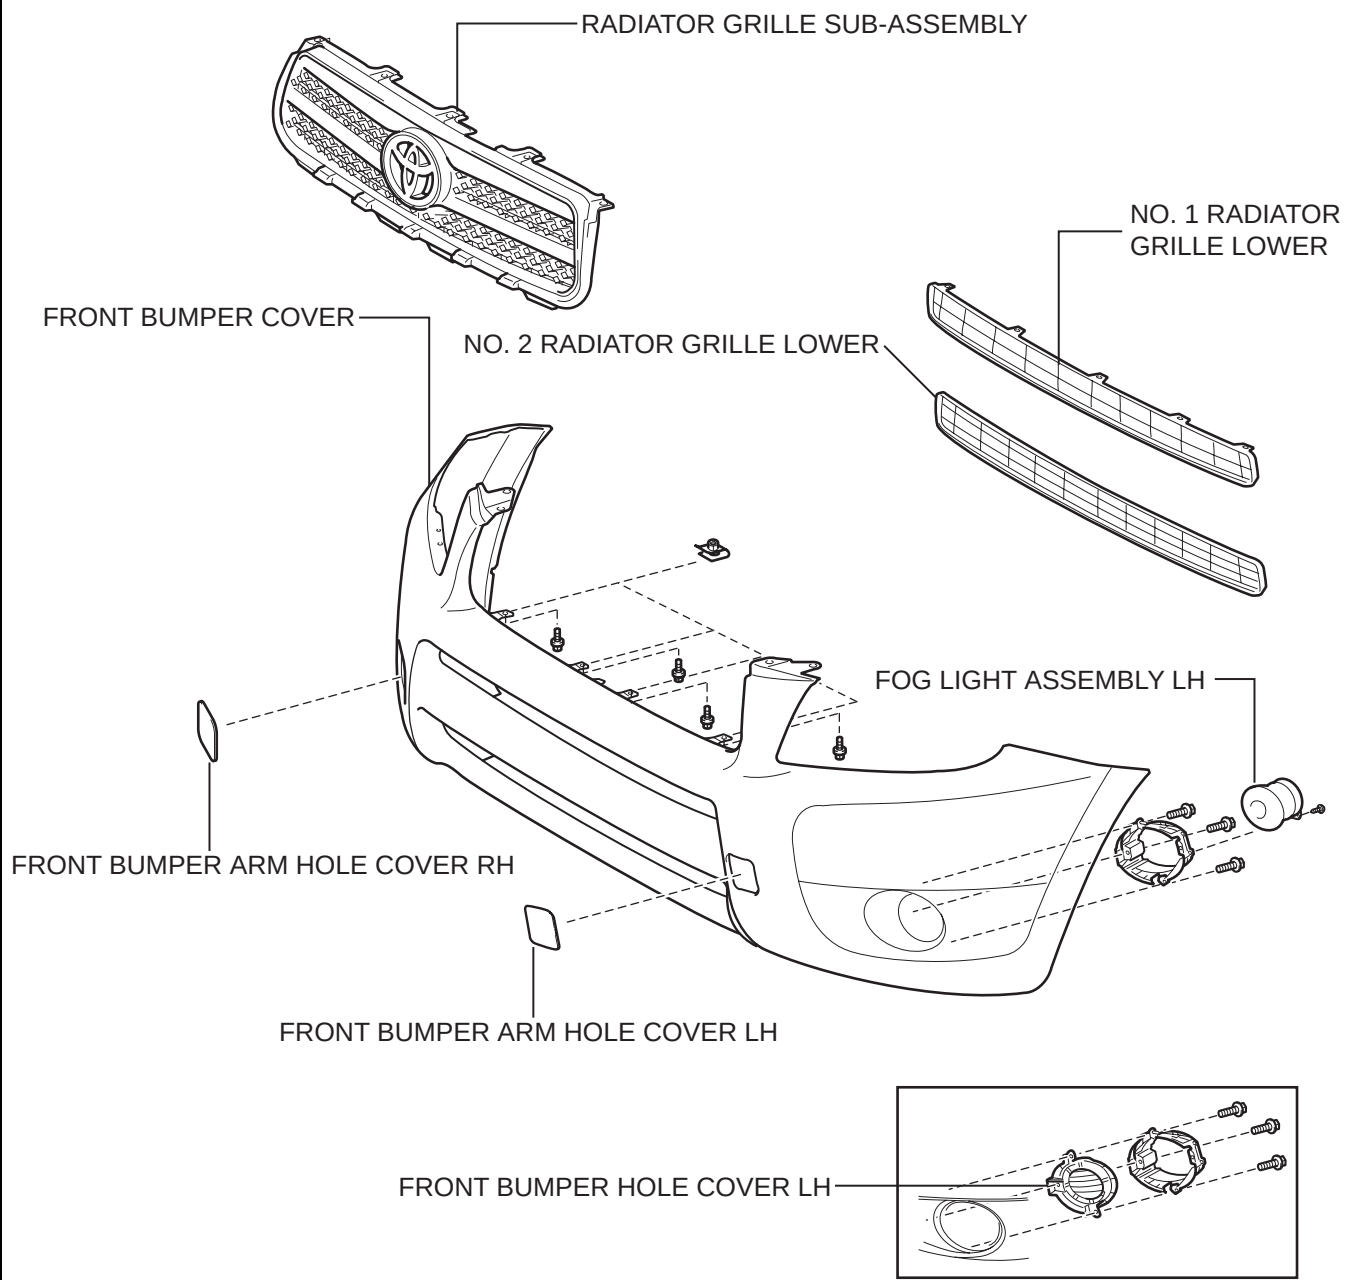

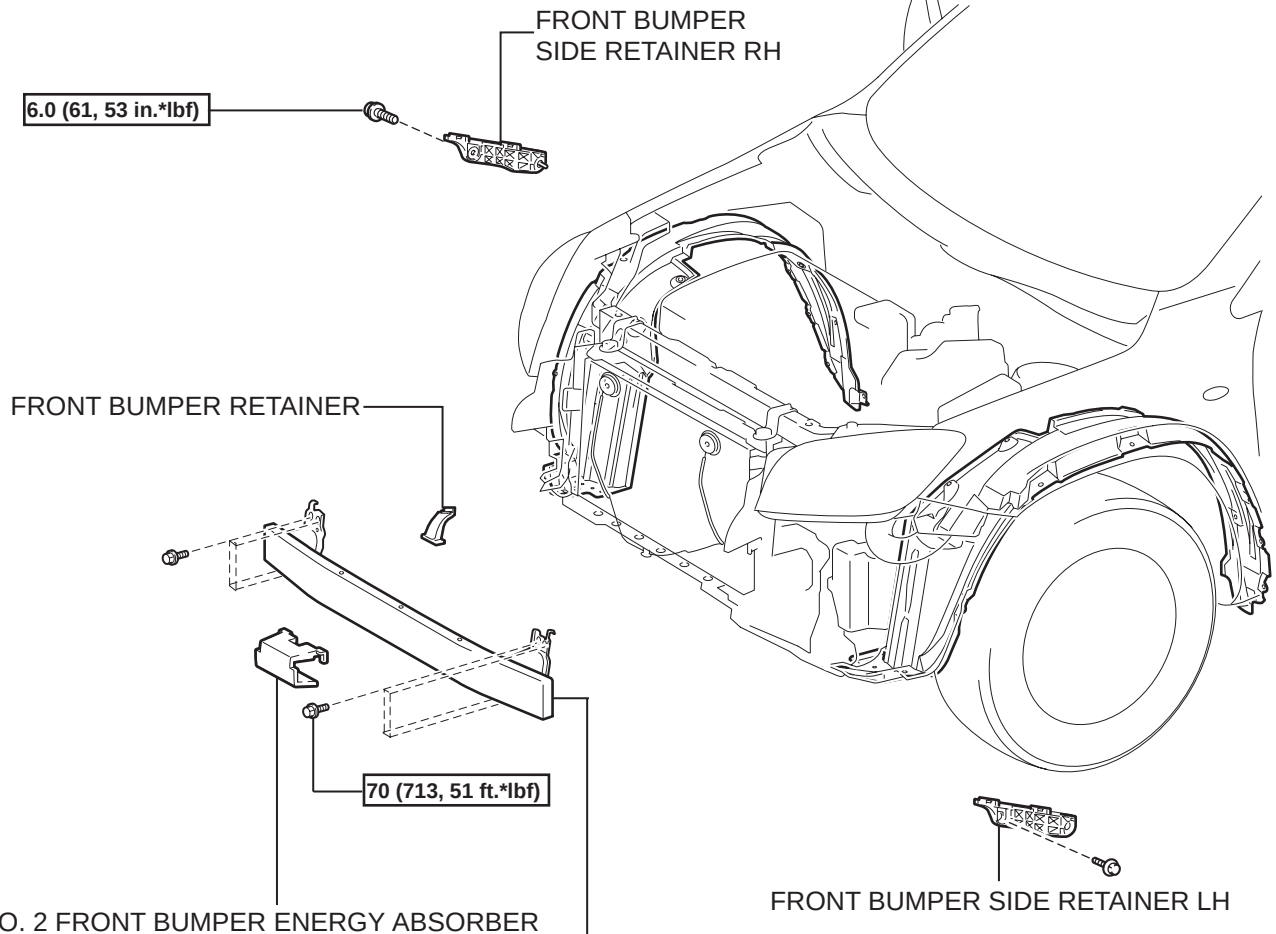


FRONT BUMPER REINFORCEMENT
SUB-ASSEMBLY

N*m (kgf*cm, ft.*lbf) : Specified torque

ET

REAR BUMPER


COMPONENTS

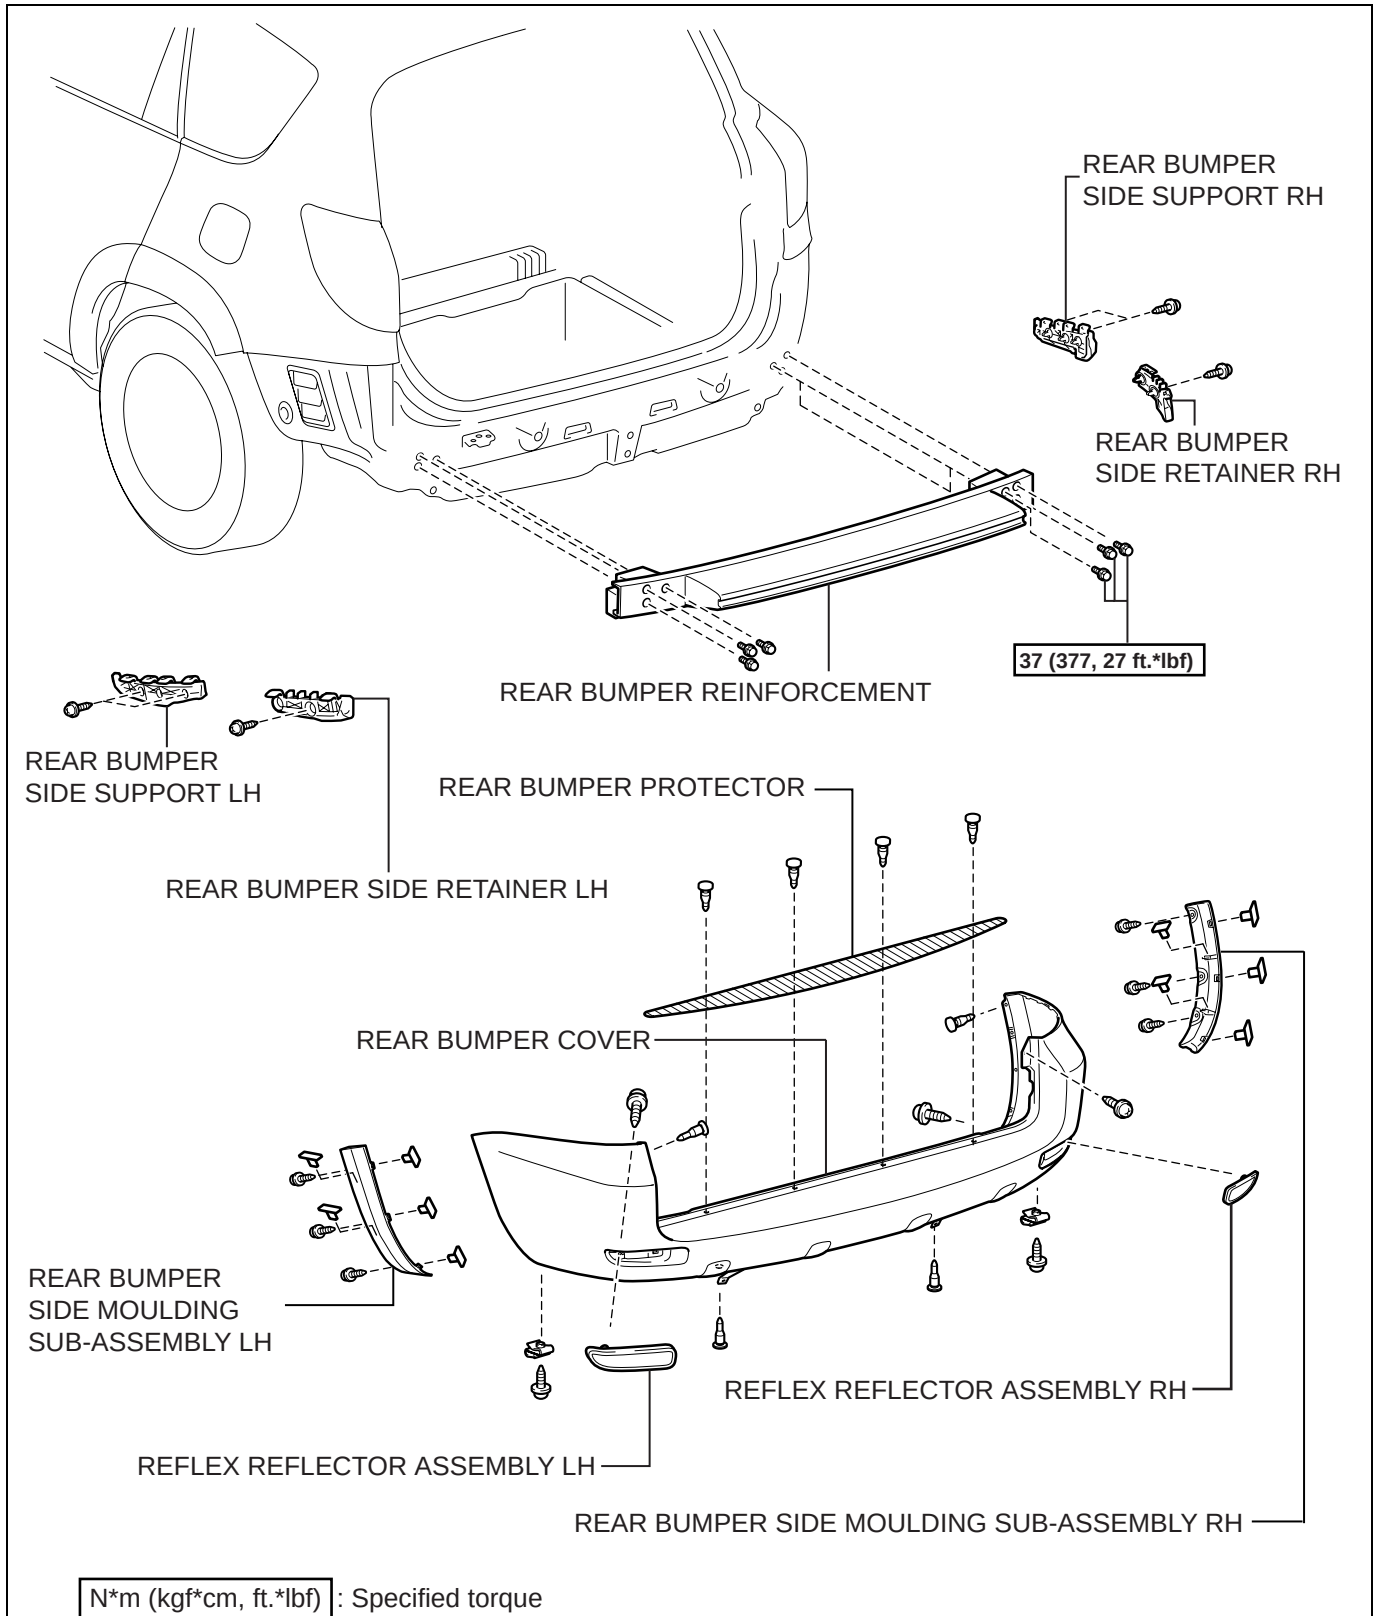

ET

REMOVAL

1. REMOVE REAR BUMPER COVER
- (a) Remove the 9 screws and 7 clips.
- (b) Put protective tape under the quarter panel.

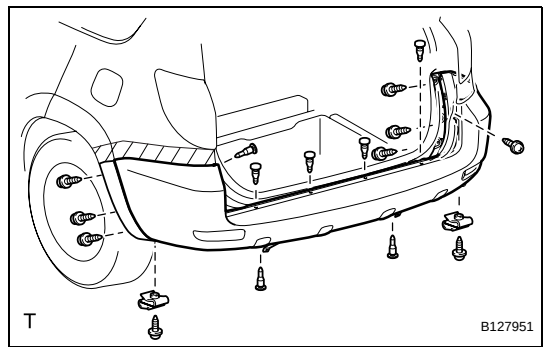


- (c) Detach the 12 claws and remove the bumper cover.


2. REMOVE REAR BUMPER PROTECTOR

HINT:
When removing the bumper protector, heat the bumper protector.
Standard heating temperature

Item	Specified Condition
bumper protector	40 to 60°C (104 to 140°F)

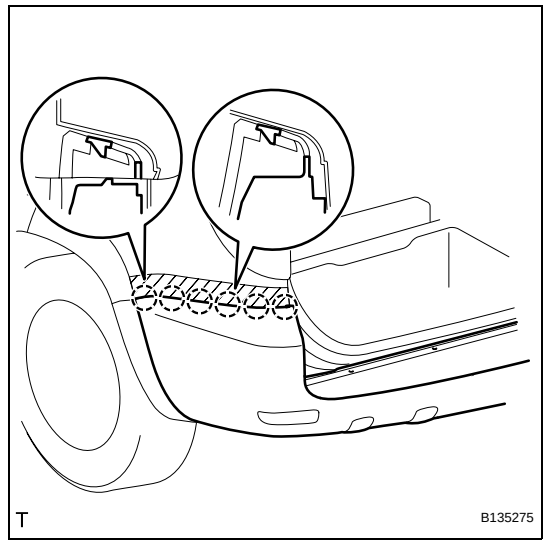

- (a) Using a moulding remover, remove the bumper protector.

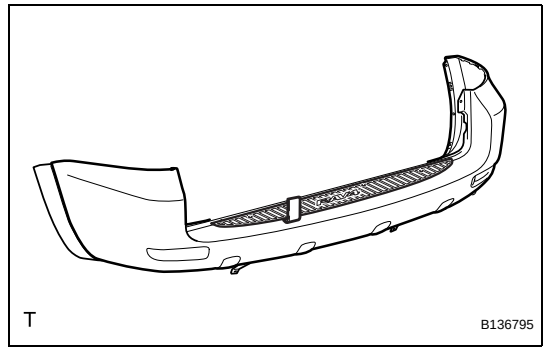



3. REMOVE REFLEX REFLECTOR ASSEMBLY LH

- (a) Remove the screw and reflex reflector.

4. REMOVE REFLEX REFLECTOR ASSEMBLY RH


HINT:
Use the same procedures described for the LH side.

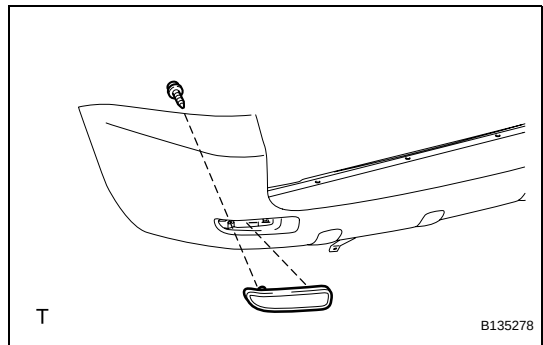

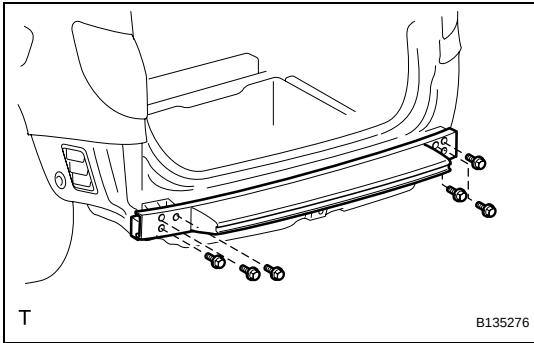

5. REMOVE REAR BUMPER REINFORCEMENT

- (a) Remove the 6 bolts and reinforcement.

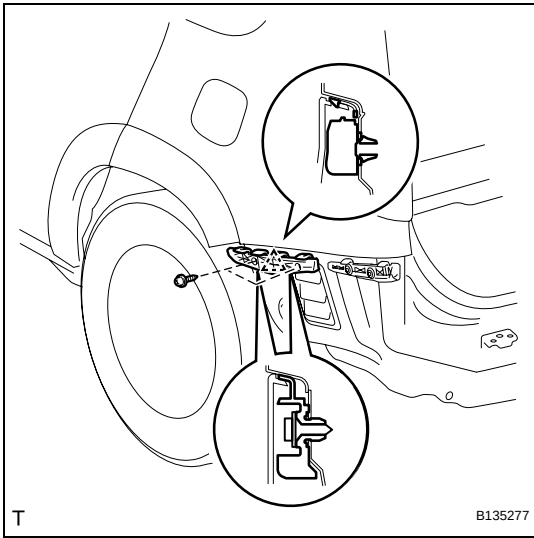

6. REMOVE REAR BUMPER SIDE SUPPORT LH

- (a) Remove the 2 screws.
(b) Using a screwdriver, detach the claw and remove the bumper side support.


HINT:

Tape the screwdriver tip before use.

7. REMOVE REAR BUMPER SIDE SUPPORT RH

HINT:

Use the same procedures described for the LH side.

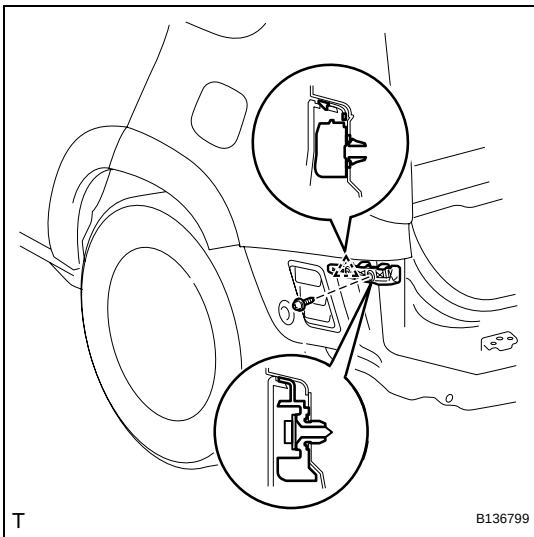

8. REMOVE REAR BUMPER SIDE RETAINER LH

- (a) Remove the screw.
(b) Using a screwdriver, detach the claw and remove the side retainer.


HINT:

Tape the screwdriver tip before use.

9. REMOVE REAR BUMPER SIDE RETAINER RH

HINT:

Use the same procedures described for the LH side.

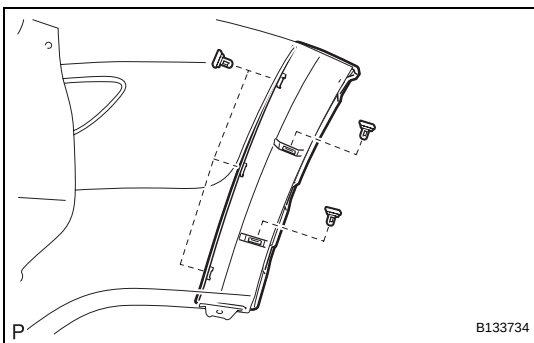

10. REMOVE REAR BUMPER SIDE MOULDING SUB-ASSEMBLY LH (for Wide Body)

- (a) Detach the 5 outside moulding retainers and remove the moulding.

NOTICE:

- If reusing the extension, take care not to damage the moulding.
- Be careful not to damage the vehicle body.

11. REMOVE REAR BUMPER SIDE MOULDING SUB-ASSEMBLY RH (for Wide Body)

HINT:

Use the same procedures described for the LH side.

INSTALLATION

1. INSTALL REAR BUMPER SIDE MOULDING SUB-ASSEMBLY LH (for Wide Body)

- (a) Attach the 5 outside moulding retainers to install the moulding.

2. INSTALL REAR BUMPER SIDE MOULDING SUB-ASSEMBLY RH (for Wide Body)

HINT:

Use the same procedures described for the LH side.

3. INSTALL REAR BUMPER SIDE RETAINER LH

- (a) Attach the claw to install the side retainer.
- (b) Install the screw.

4. INSTALL REAR BUMPER SIDE RETAINER RH

HINT:

Use the same procedures described for the LH side.




5. INSTALL REAR BUMPER SIDE SUPPORT LH


- (a) Attach the claw to install the bumper side support.
- (b) Install the 2 screws.

6. INSTALL REAR BUMPER SIDE SUPPORT RH

HINT:


Use the same procedures described for the LH side.

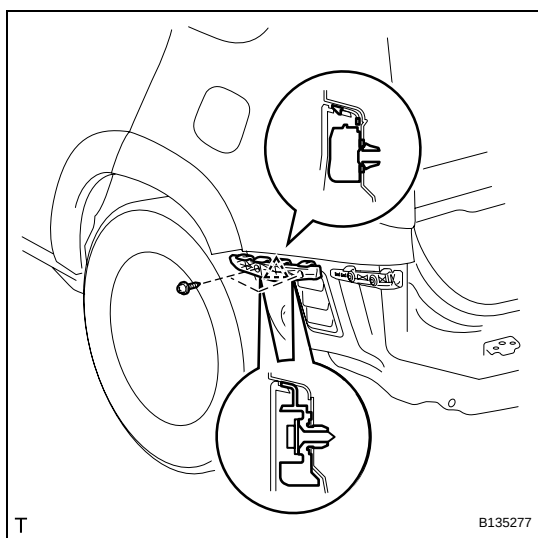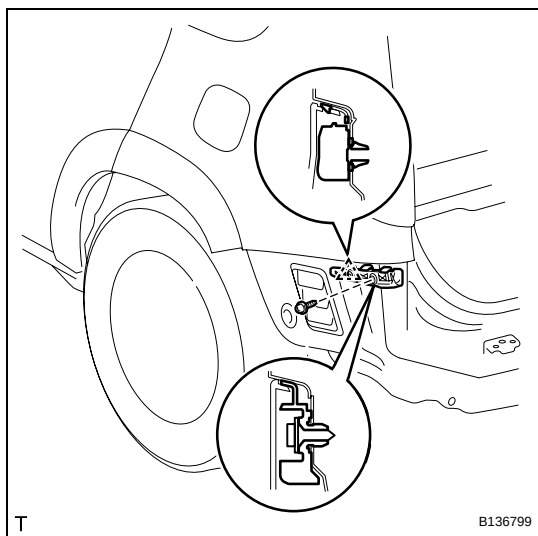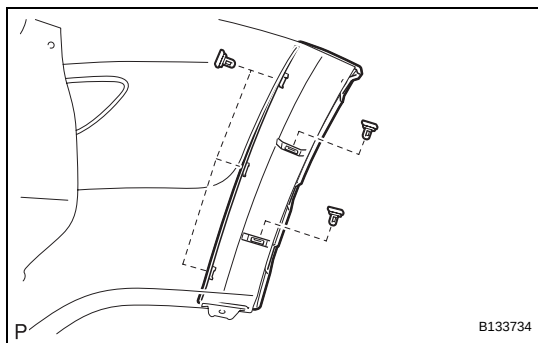

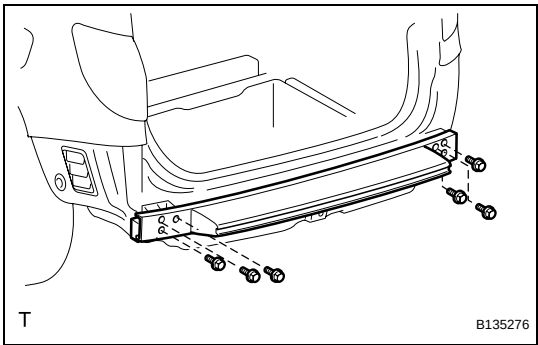

7. INSTALL REAR BUMPER REINFORCEMENT

- (a) Install the bumper reinforcement with the 6 bolts.
Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)

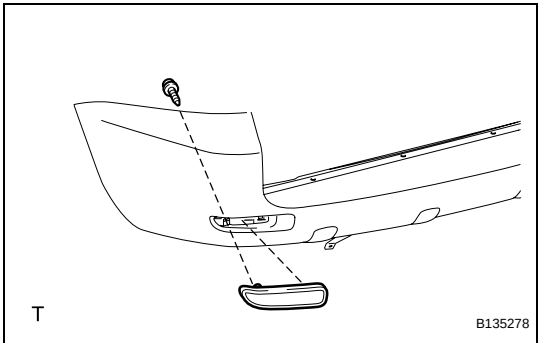

8. INSTALL REFLEX REFLECTOR ASSEMBLY LH

- (a) Install the reflex reflector with the screw.

9. INSTALL REFLEX REFLECTOR ASSEMBLY RH

HINT:
Use the same procedures described for the LH side.

10. INSTALL REAR BUMPER PROTECTOR


HINT:
When removing the double-side tape, heat the rear bumper.

Standard heating temperature

Item	Specified Condition
Rear bumper	40 to 60°C (104 to 140°F)


- (a) Clean the bumper surface.
- (1) Using a heat light, heat the bumper surface.
 - (2) Remove the double-sided tape from the bumper.
 - (3) Wipe off any tape adhesive residue with cleaner.

- (b) Install the new bumper protector.

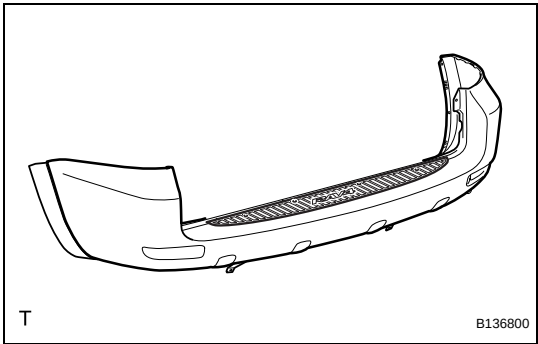


11. INSTALL REAR BUMPER COVER

- (a) Put protective tape under the quarter panel.
- (b) Attach the 12 claws to install the bumper cover.

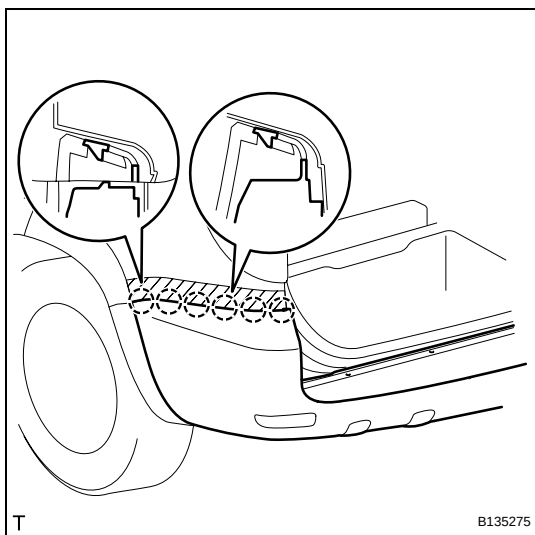


- (c) Install the 9 screws and 7 clips.

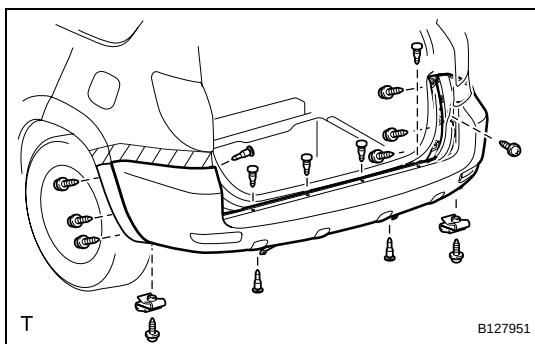


RADIATOR GRILLE

COMPONENTS

for Separate Type

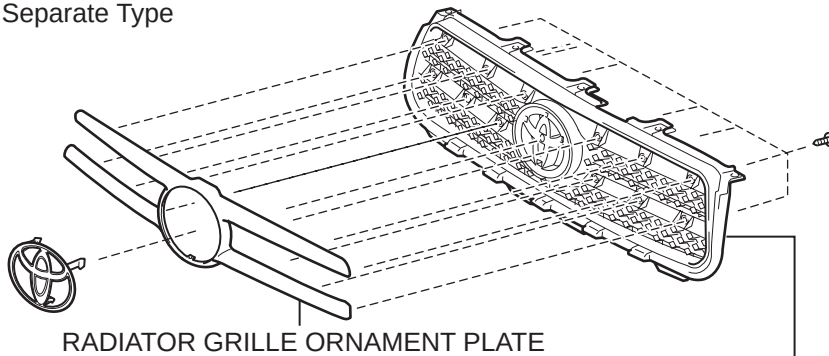

RADIATOR GRILLE

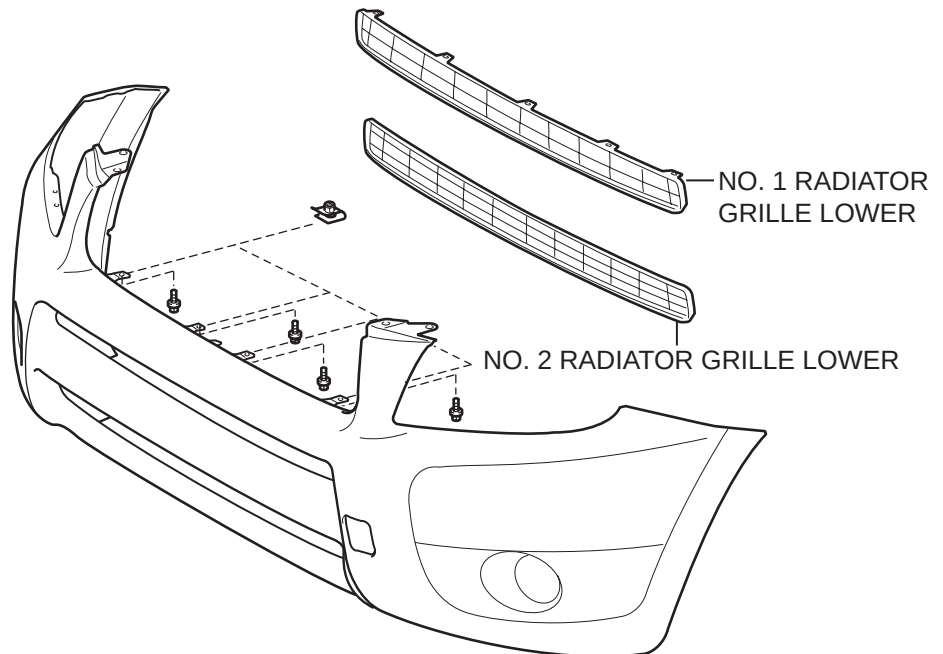

ET

REMOVAL

1. REMOVE RADIATOR GRILLE (See page [ET-6](#))
2. REMOVE NO. 1 RADIATOR GRILLE LOWER (See page [ET-7](#))
3. REMOVE NO. 2 RADIATOR GRILLE LOWER (See page [ET-7](#))

DISASSEMBLY

HINT:

When removing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.

Standard heating temperature


Item	Specified Condition
Radiator grille, ornament plate, emblem	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the emblem base and emblem excessively.


1. REMOVE HOOD TO RADIATOR GRILLE SEAL

- Remove the double-side tape.
- Detach the 7 clips and remove the hood to radiator grille seal.

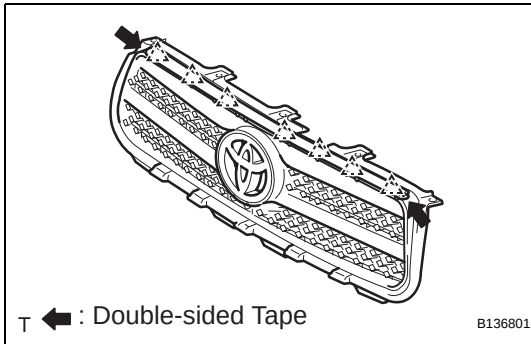

2. REMOVE RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)

- Remove the 12 screws and ornament plate.

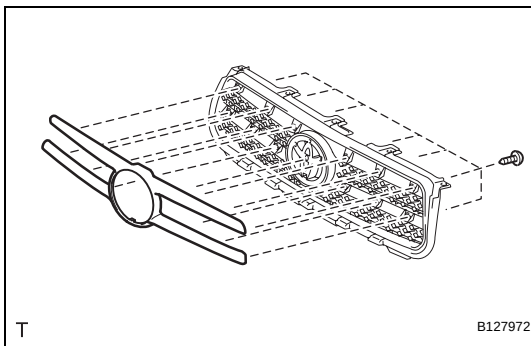

3. REMOVE RADIATOR GRILLE EMBLEM


- Using a screwdriver, detach the 4 claws and remove the emblem from the radiator grille.

HINT:

Tape the screwdriver tip before use.



NOTICE:

- If reusing the emblem, take care not to damage the emblem.
- Be careful not to damage the emblem base.

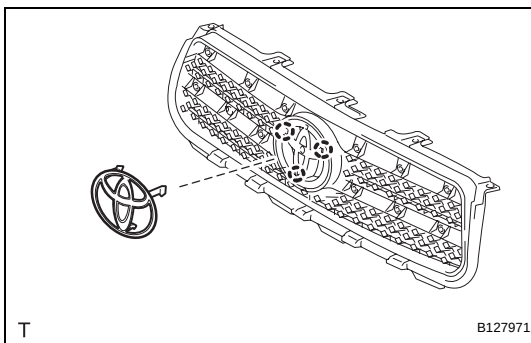

RADIATOR GRILLE (for 2GR-FE)


COMPONENTS

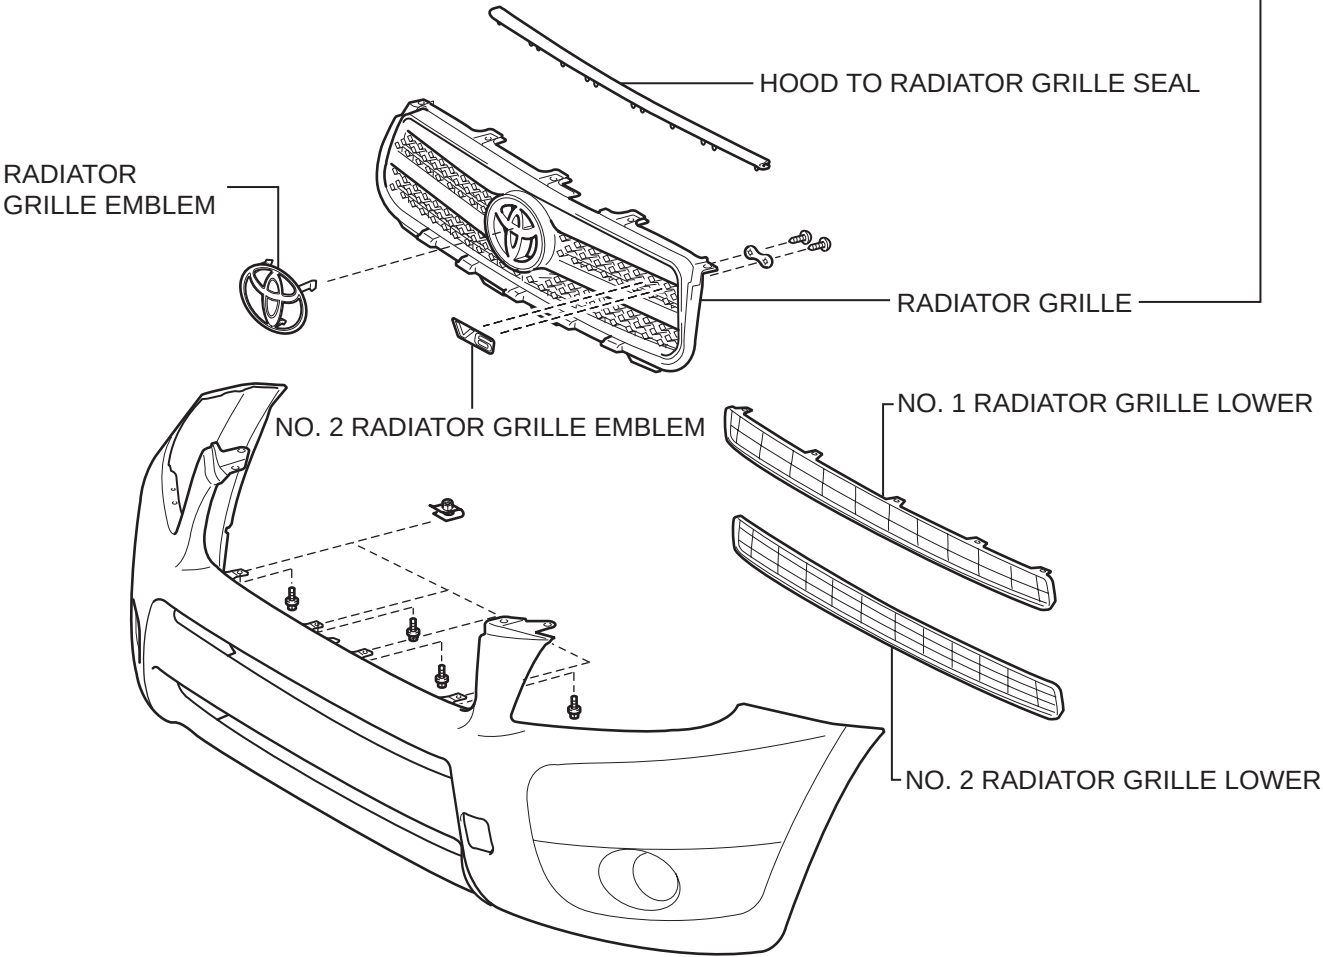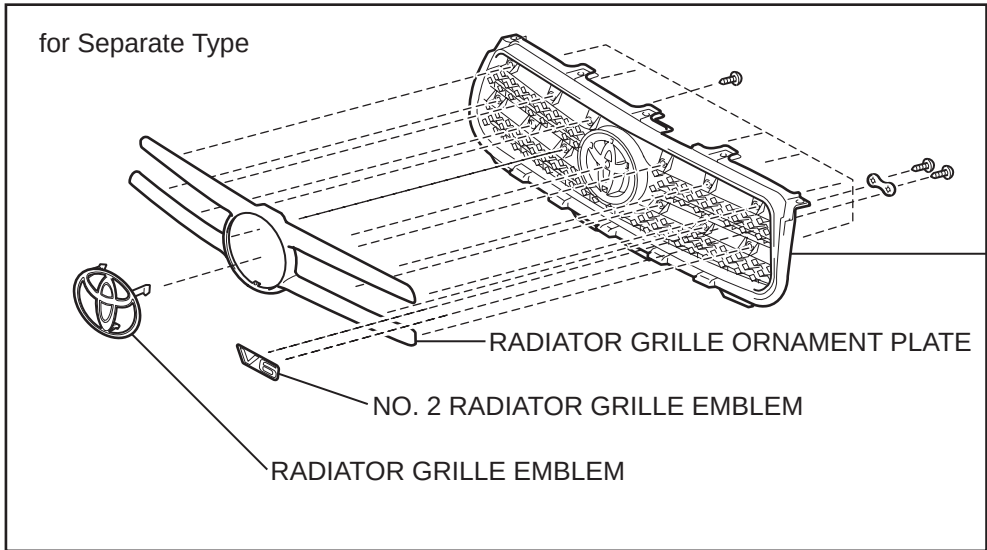


REMOVAL

1. REMOVE RADIATOR GRILLE SUB-ASSEMBLY

(a) Remove the 4 bolts and 4 nuts.

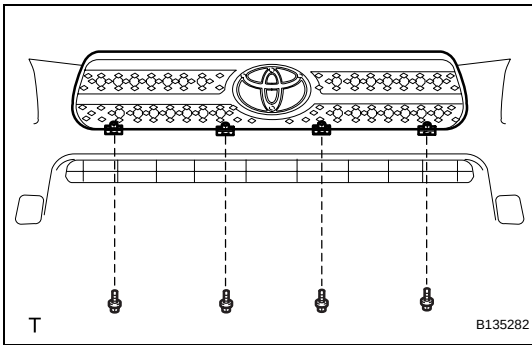


(b) Detach the 6 claws and remove the radiator grille.

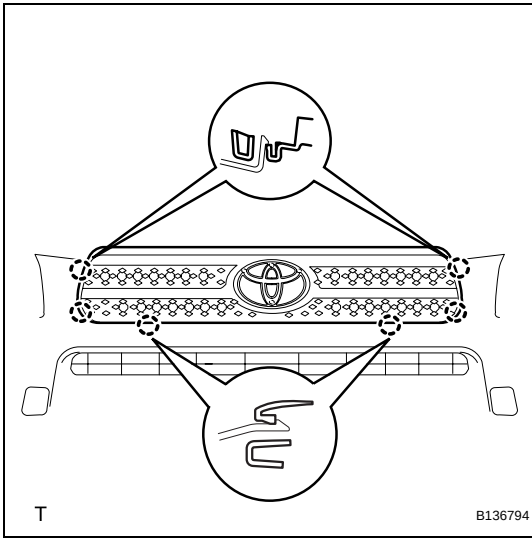


2. REMOVE NO. 1 RADIATOR GRILLE LOWER

(a) Detach the 16 claws and remove the radiator grille.

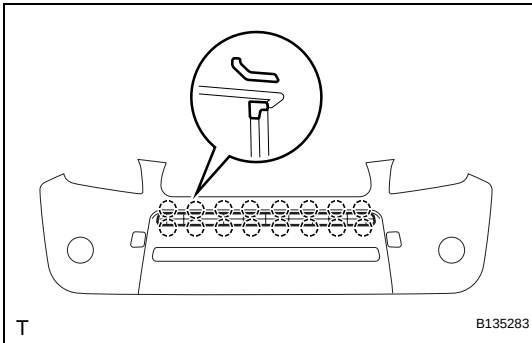



3. REMOVE NO. 2 RADIATOR GRILLE LOWER

(a) Detach the 16 claws and remove the radiator grille.

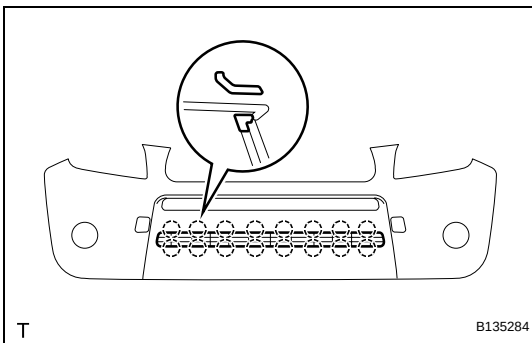

RADIATOR GRILLE (for 2GR-FE)


COMPONENTS

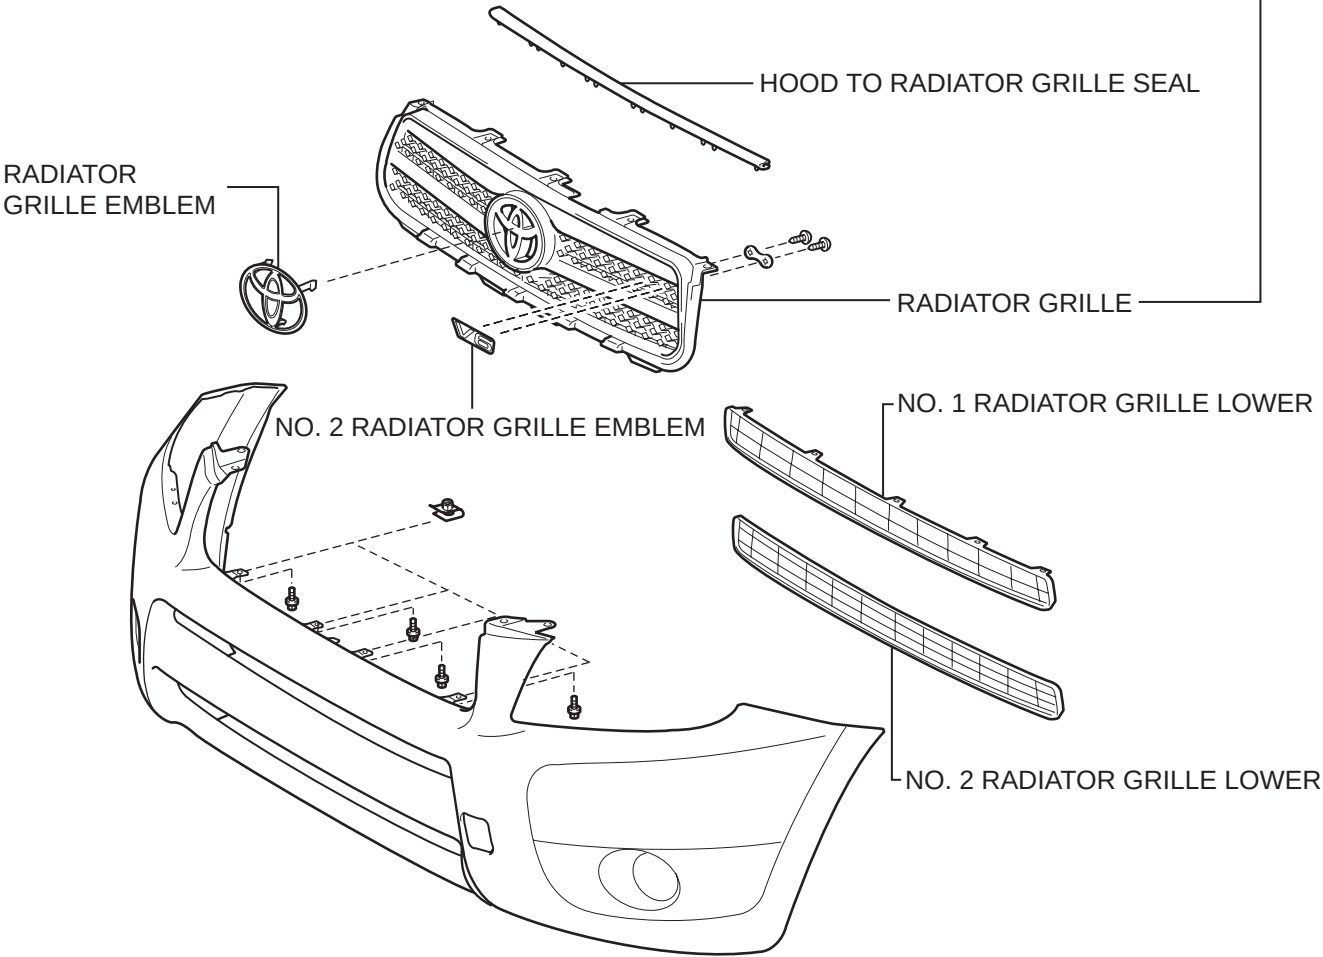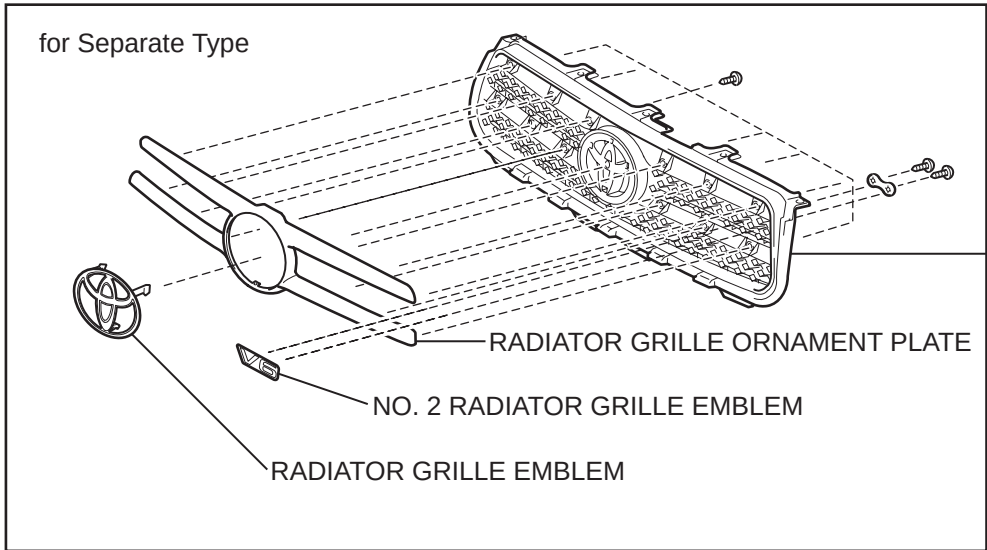


REMOVAL

1. REMOVE RADIATOR GRILLE SUB-ASSEMBLY

(a) Remove the 4 bolts and 4 nuts.

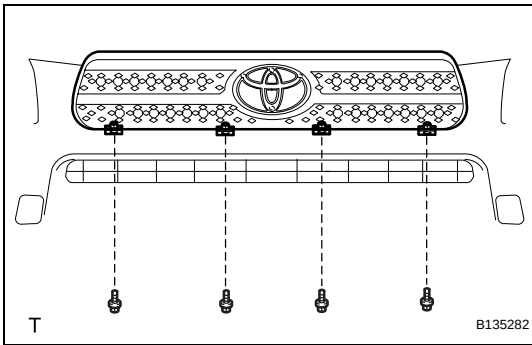


(b) Detach the 6 claws and remove the radiator grille.

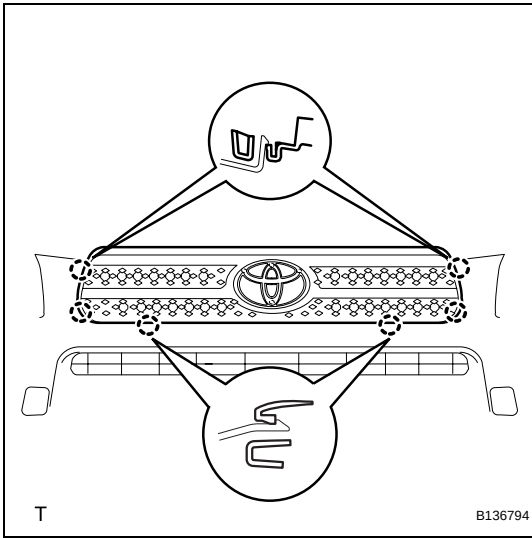


2. REMOVE NO. 1 RADIATOR GRILLE LOWER

(a) Detach the 16 claws and remove the radiator grille.

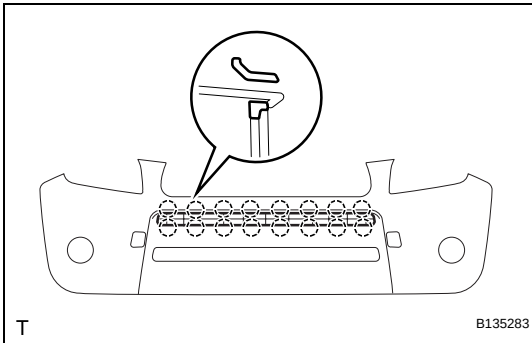


3. REMOVE NO. 2 RADIATOR GRILLE LOWER

(a) Detach the 16 claws and remove the radiator grille.


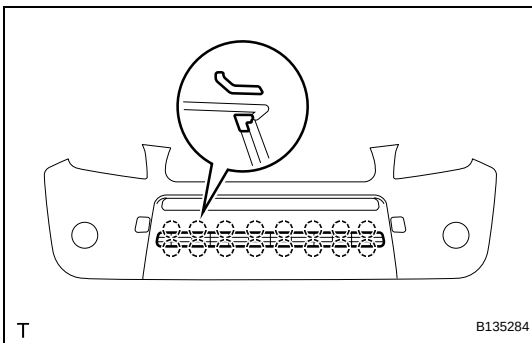


NAME PLATE COMPONENTS

ET

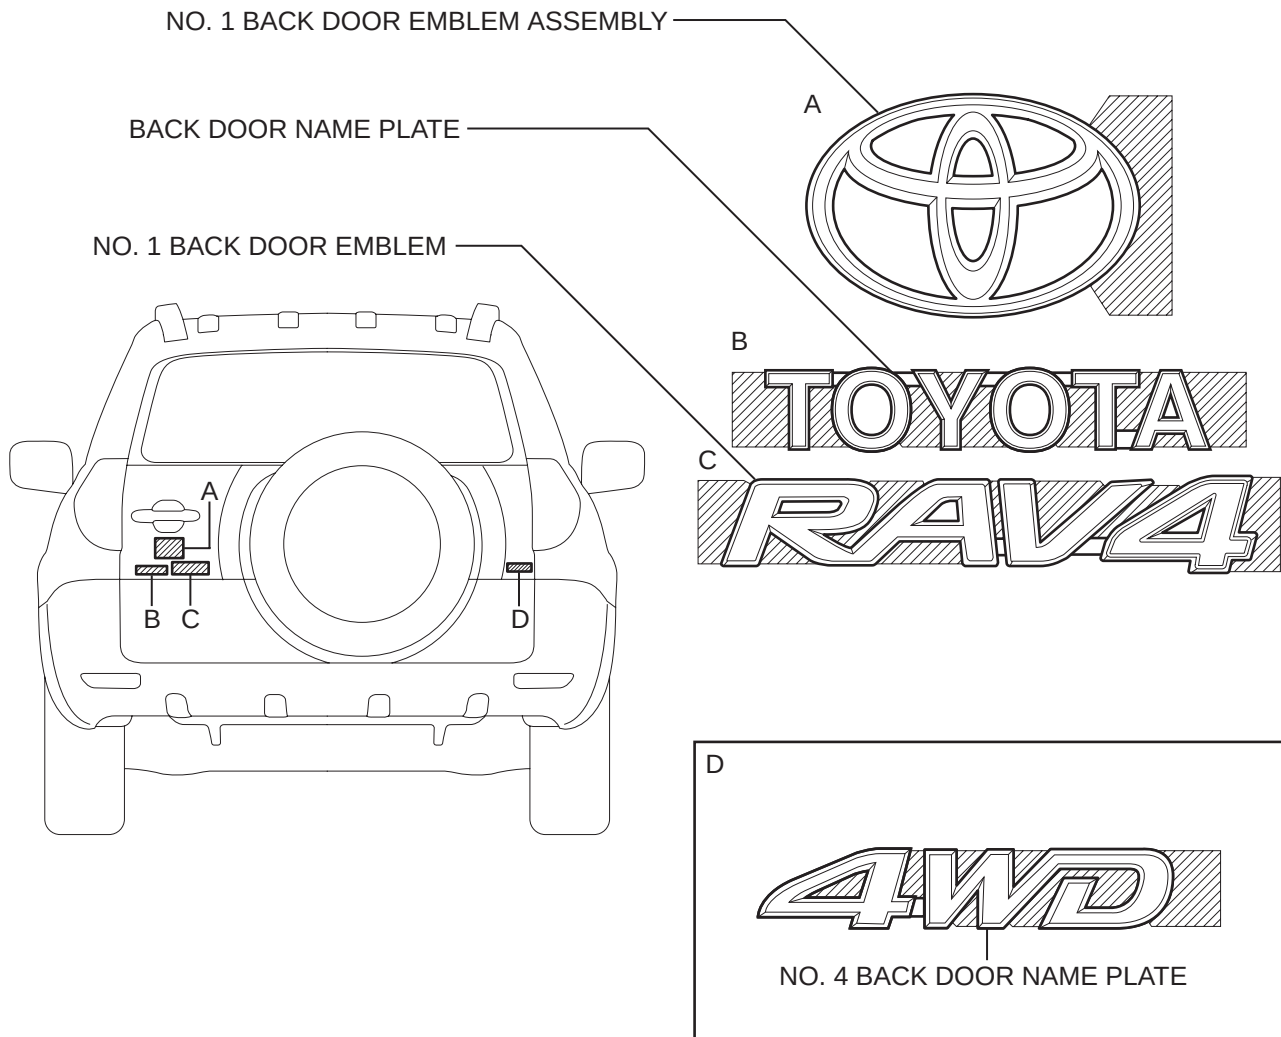


ET

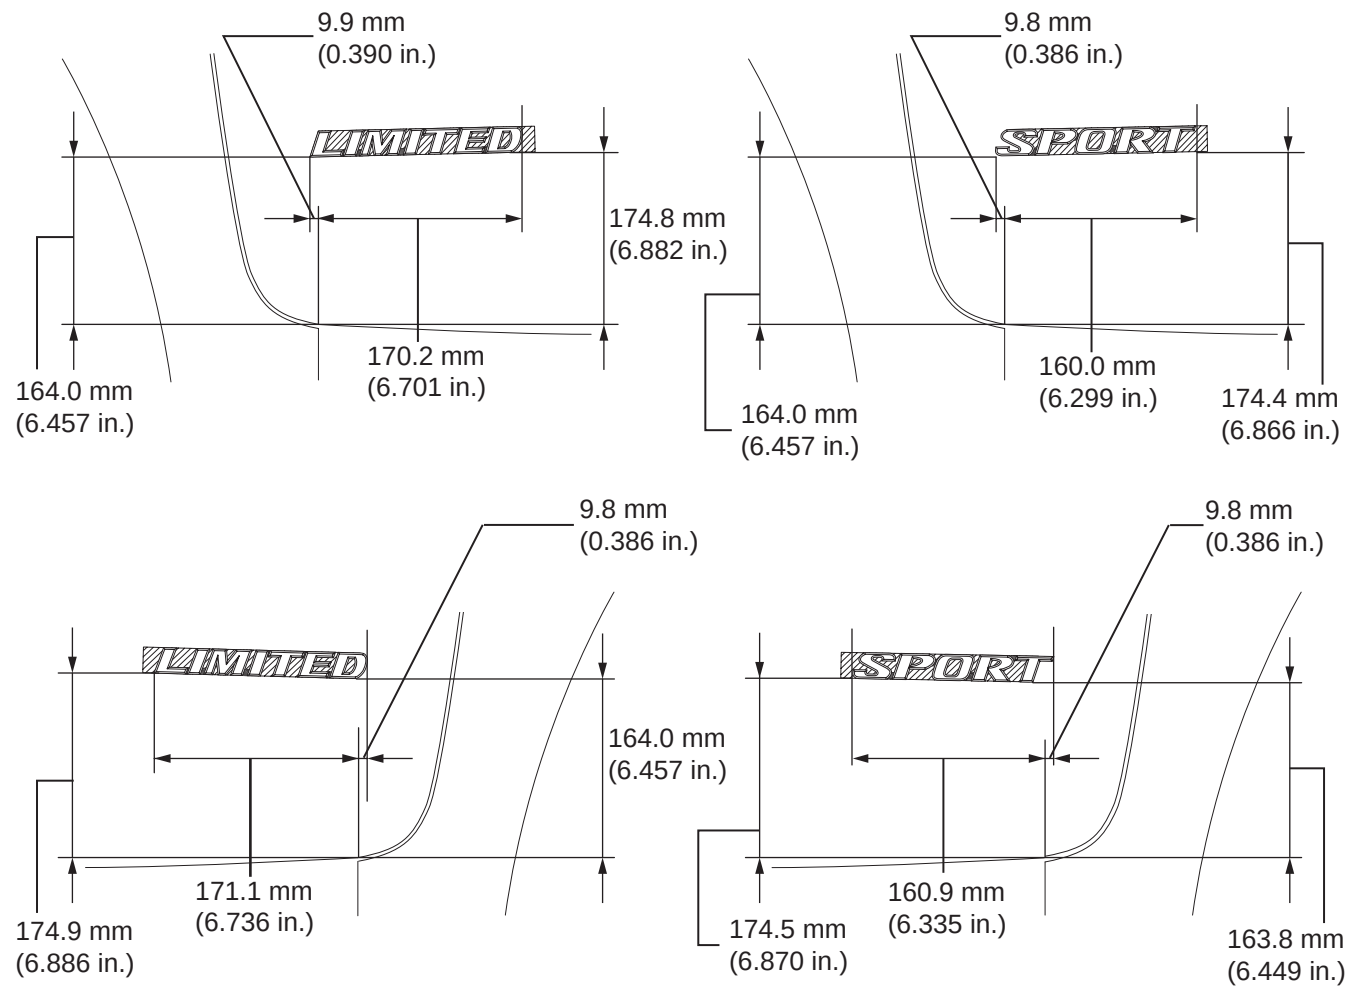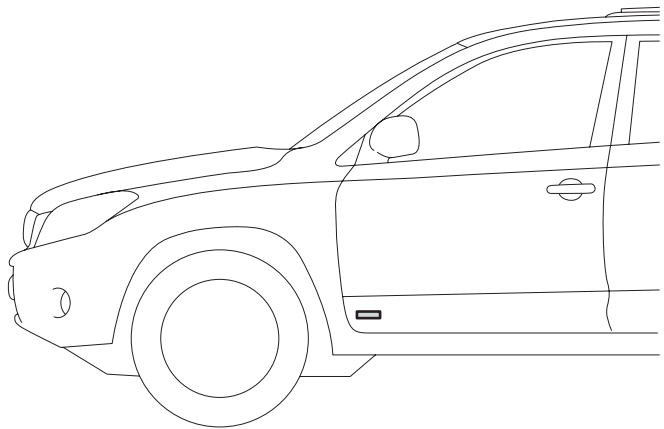

REAR SPOILER

COMPONENTS

ET

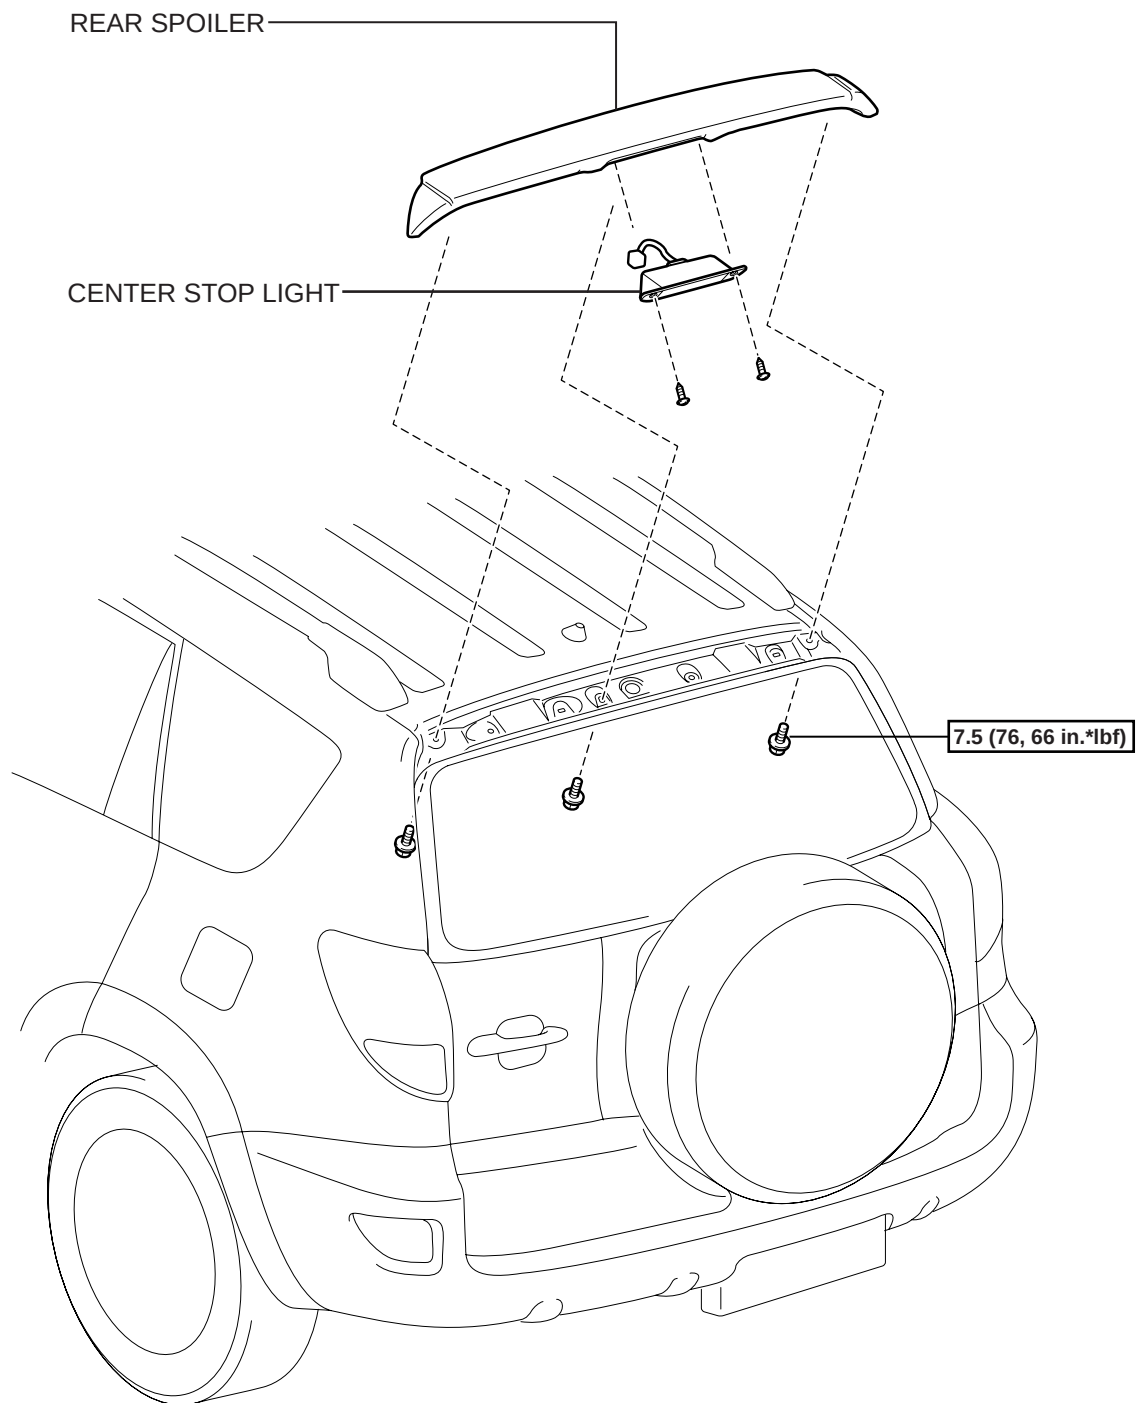

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

HINT:
When removing the spoiler, heat the vehicle body and spoiler using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)



NOTICE:
Do not heat the vehicle body and spoiler excessively.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE BACK DOOR CENTER GARNISH (See page [ED-59](#))

3. REMOVE REAR SPOILER
(a) Remove the 3 bolts.

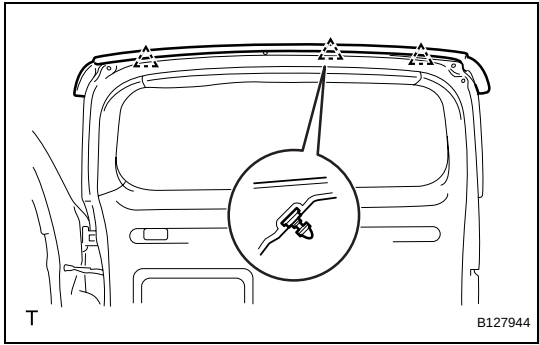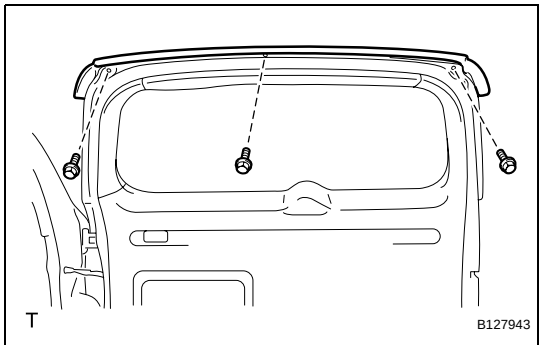


- (b) Remove the 3 clips and spoiler.
(c) Disconnect the center stop light connector and remove the rear spoiler.

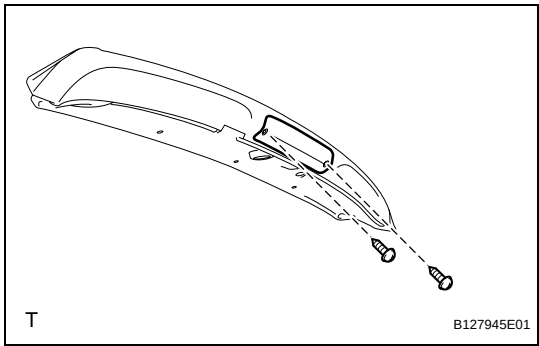


4. REMOVE CENTER STOP LIGHT
(a) Remove the 2 screws and center stop light.

ROOF RACK COMPONENTS

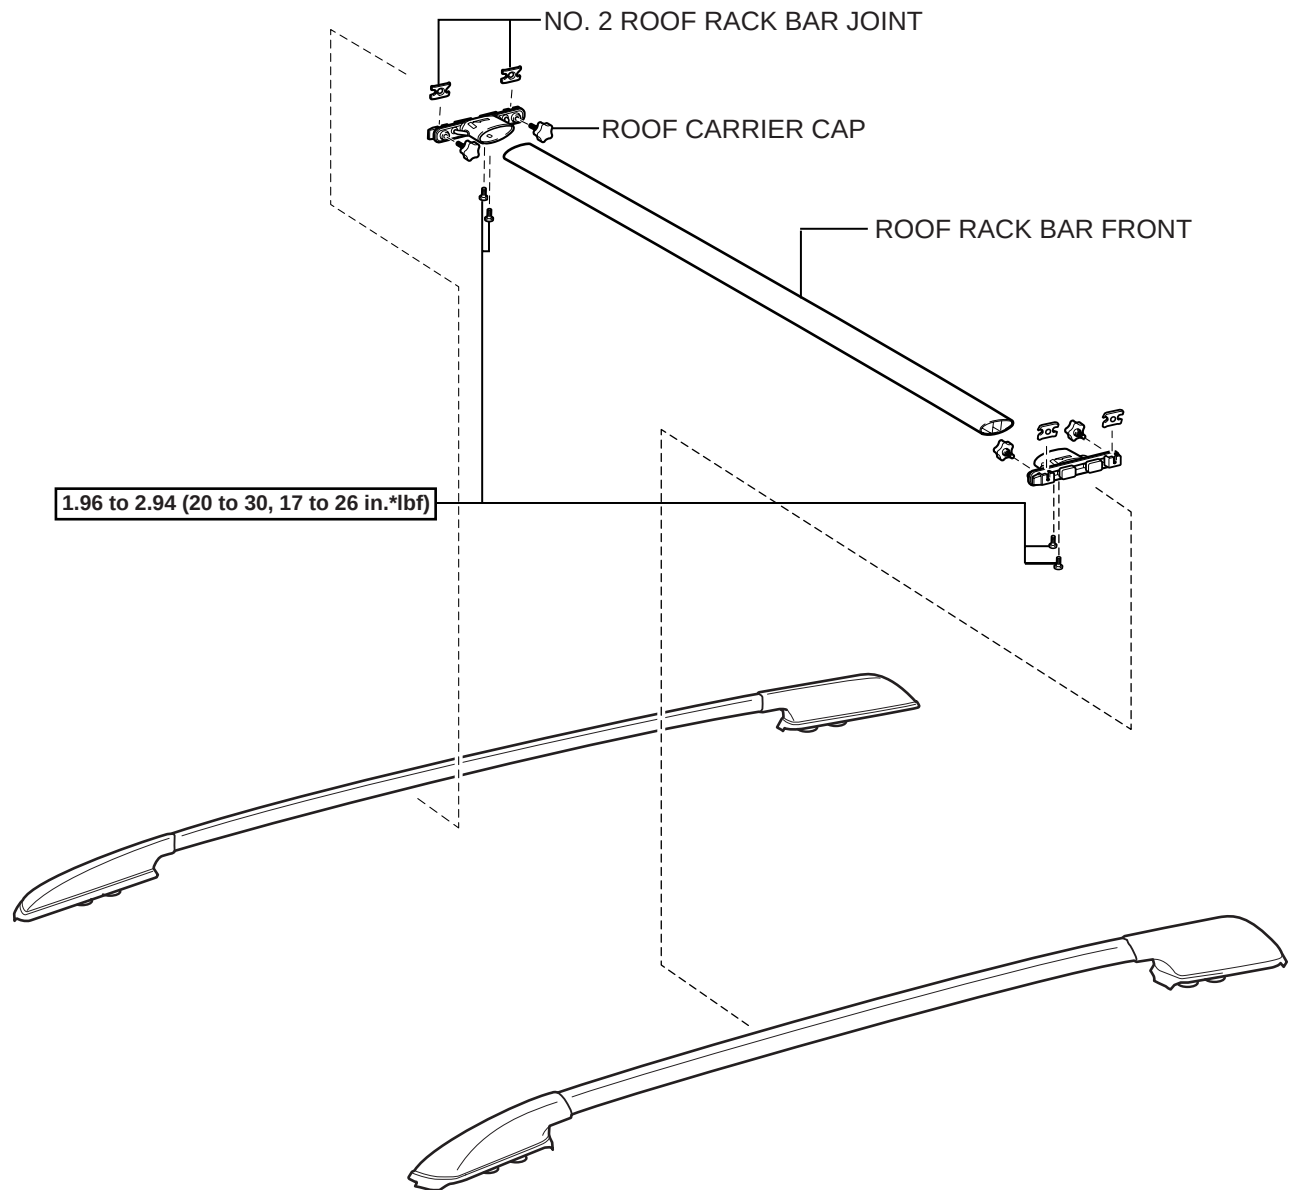


N*m (kgf*cm, ft.*lbf) : Specified torque

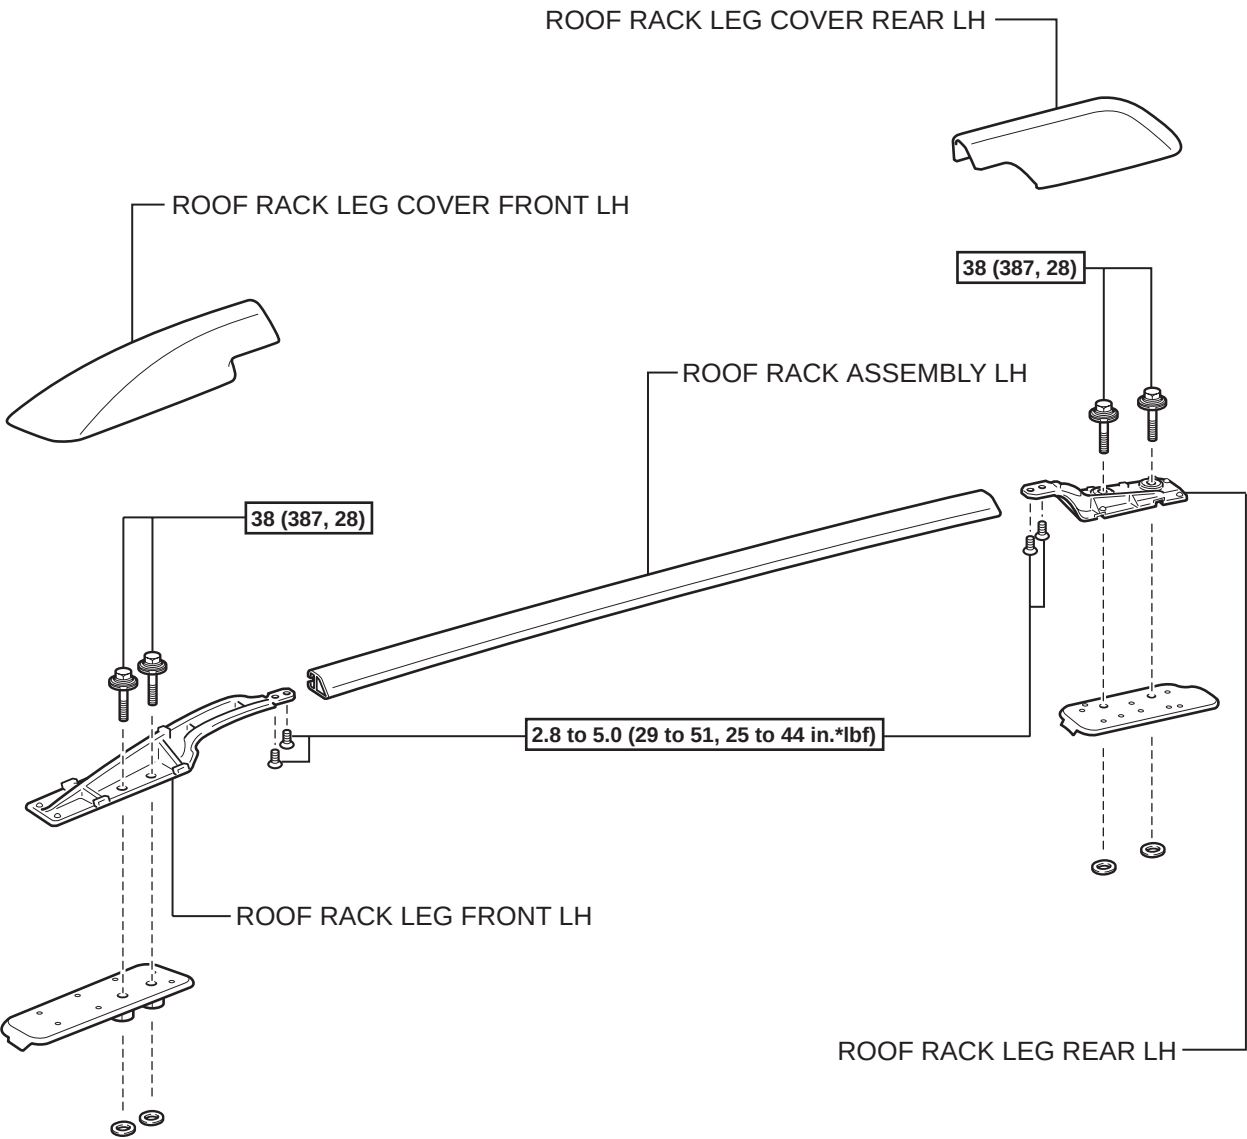

N*m (kgf*cm, ft.*lbf) : Specified torque

FRONT DOOR BELT MOULDING

COMPONENTS

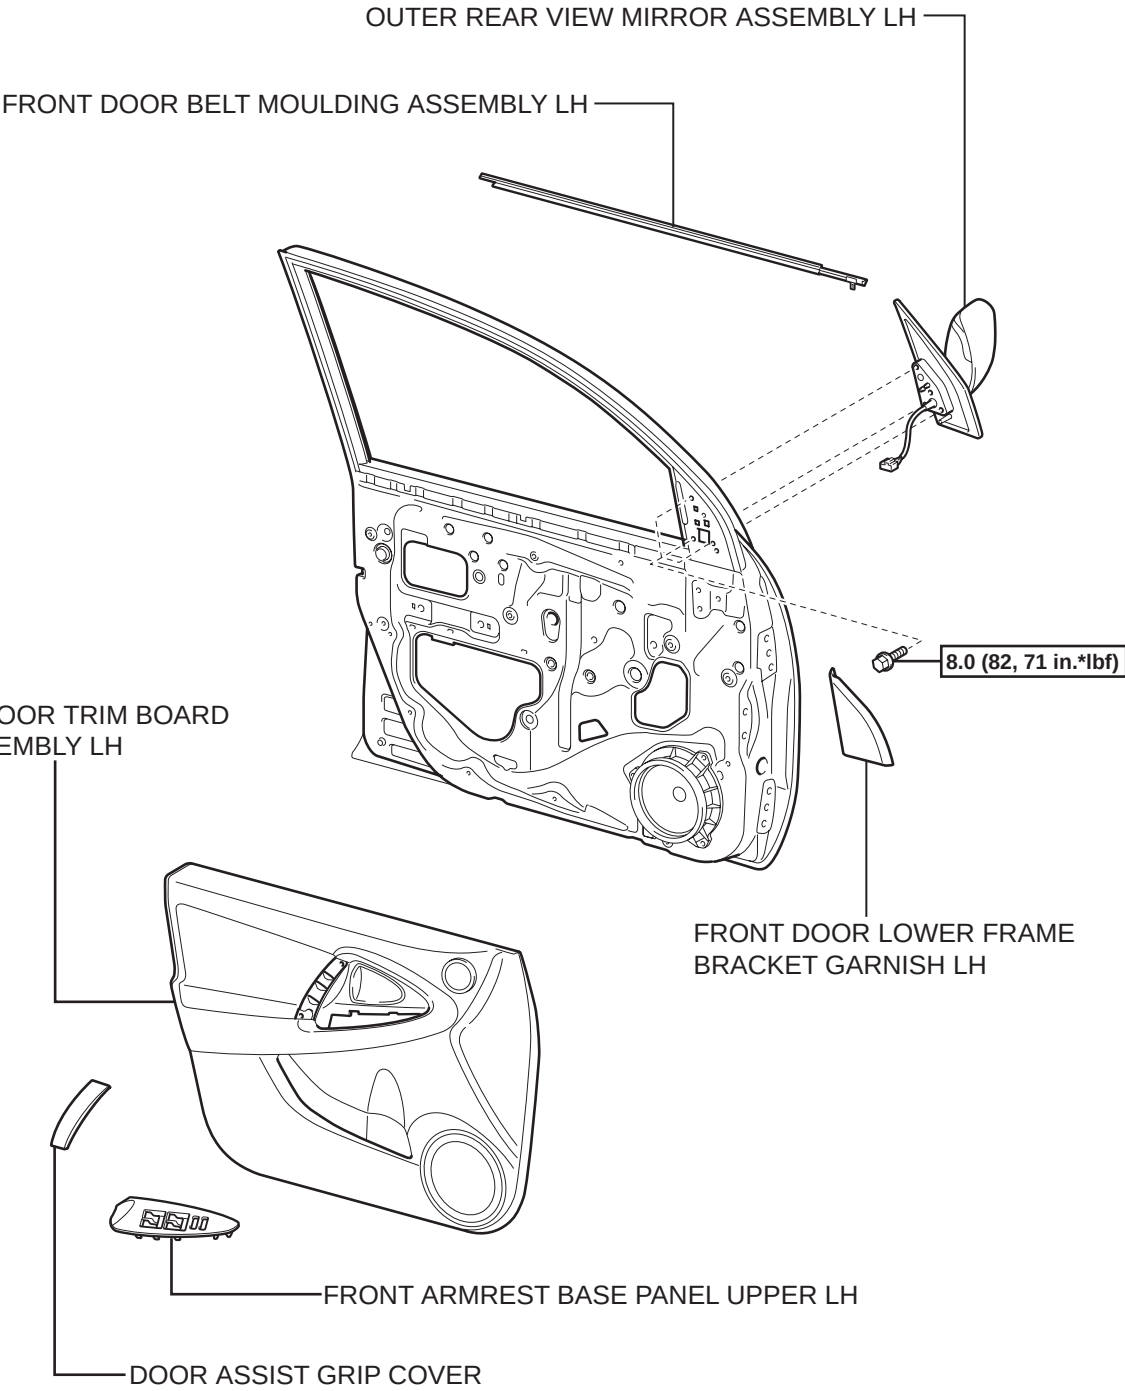

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-19](#))

3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page [ED-19](#))

4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-20](#))

5. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-8](#))

6. REMOVE FRONT DOOR BELT MOULDING ASSEMBLY LH


- (a) Put protective tape under the belt moulding.
- (b) Using a moulding remover, detach the claws to remove the belt moulding as shown in the illustration.

HINT:

Tape the remover tip before use.

NOTICE:

Be careful when removing the belt moulding as there are claws attached to the front and rear ends of the belt moulding.

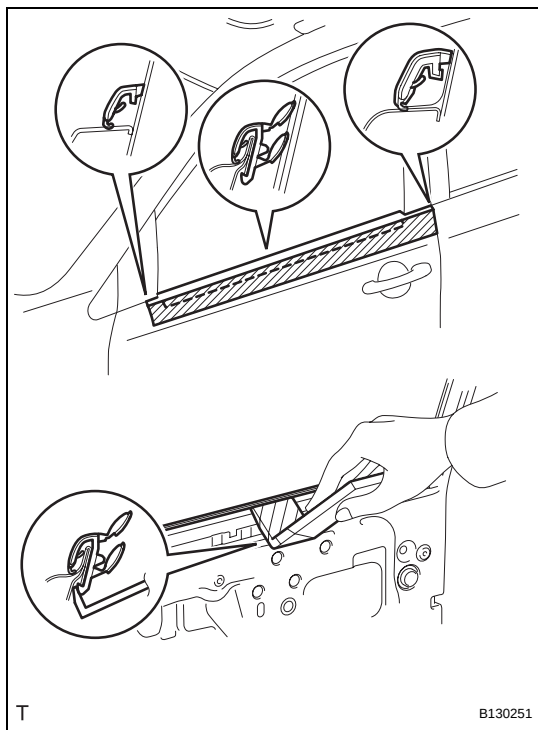


T

B130251

ET

REAR DOOR BELT MOULDING

COMPONENTS

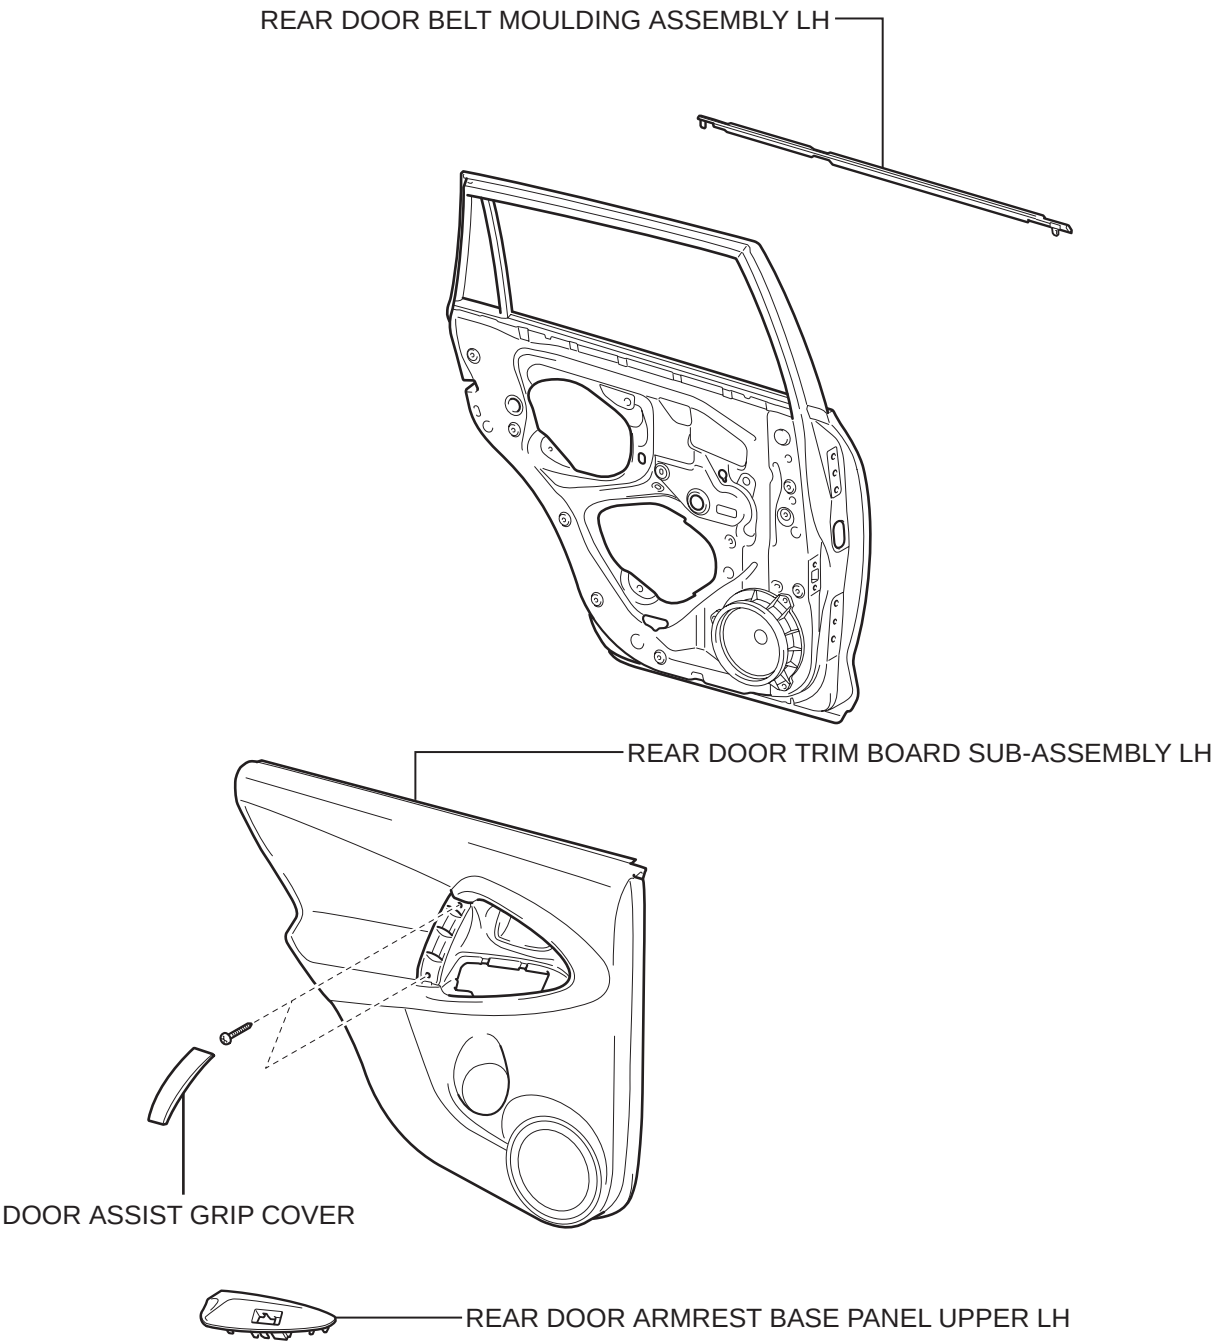

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH (See page [ED-40](#))

3. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-40](#))

4. REMOVE REAR DOOR BELT MOULDING ASSEMBLY LH


- (a) Put protective tape under the belt moulding.
- (b) Using a moulding remover, detach the claws to remove the belt moulding as shown in the illustration.

HINT:

Tape the remover tip before use.


NOTICE:

Be careful when removing the belt moulding as there are claws attached to the front and rear ends of the belt moulding.

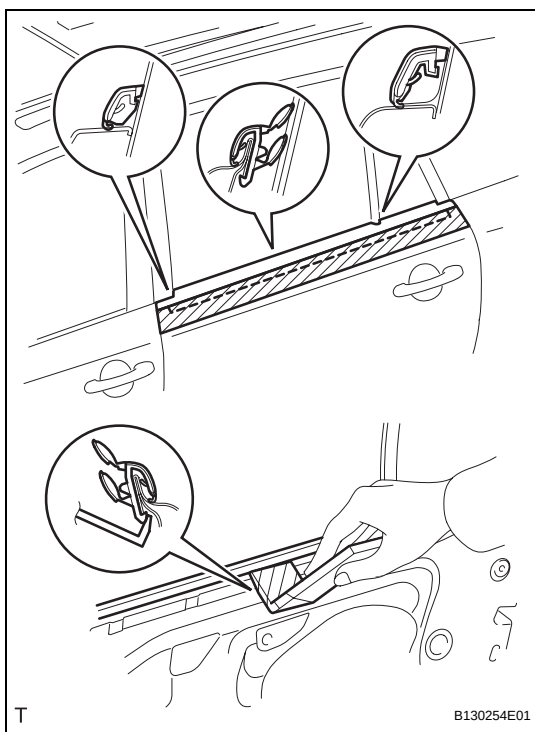

FRONT PILLAR UPPER COVER

COMPONENTS

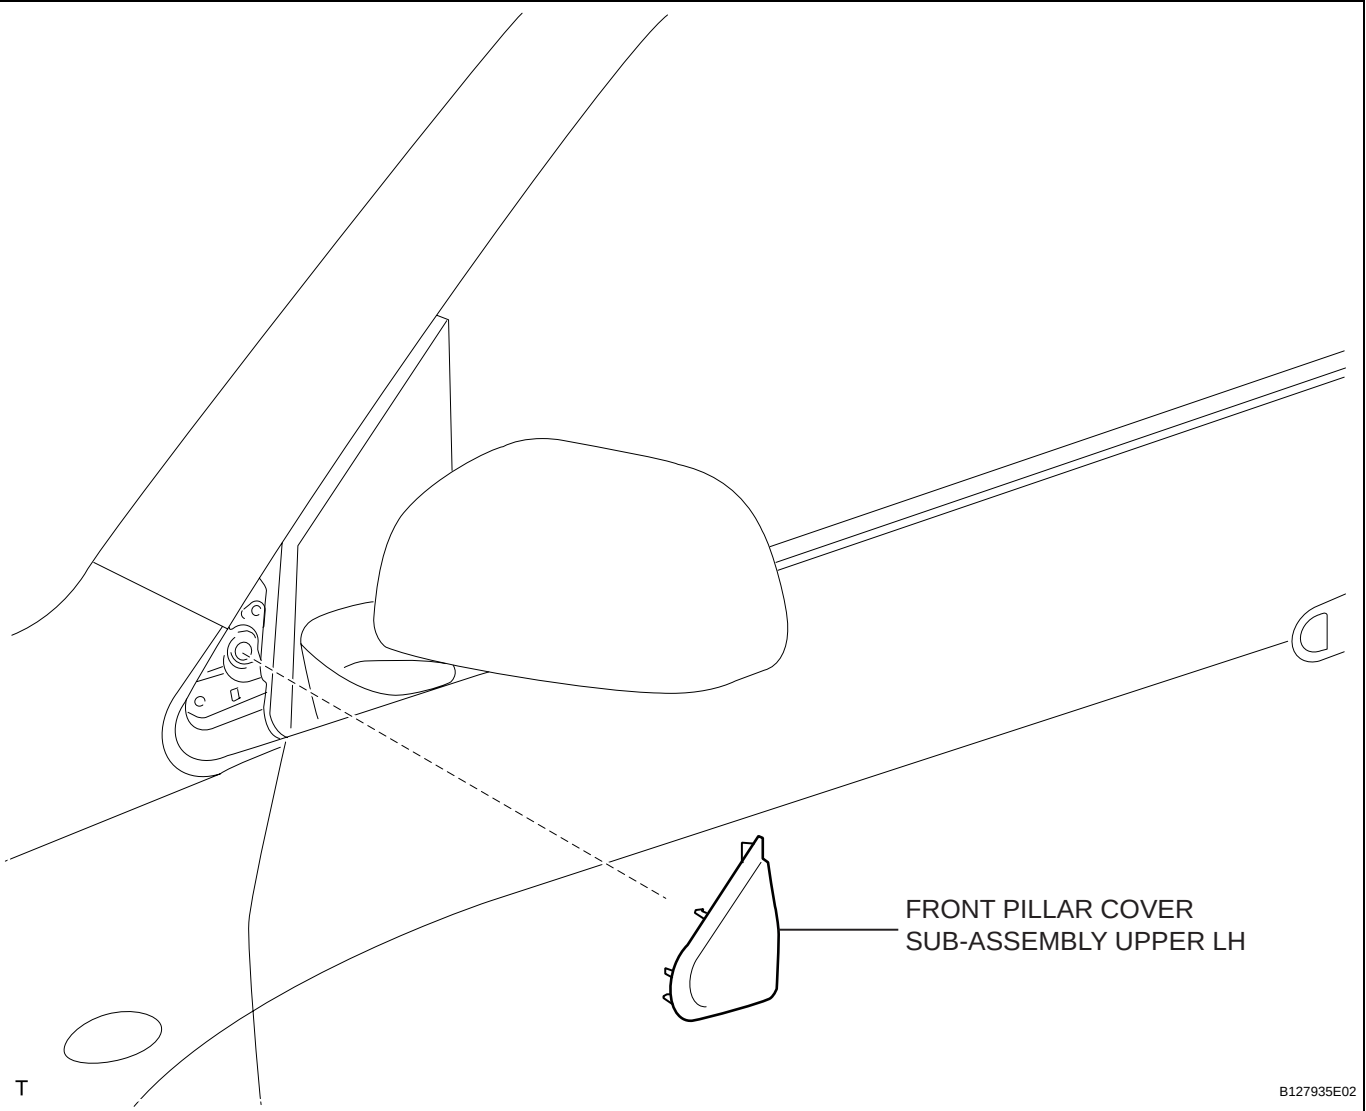


REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. REMOVE FRONT PILLAR COVER SUB-ASSEMBLY UPPER LH

- (a) Using a moulding remover, detach the 3 clips and remove the pillar cover.

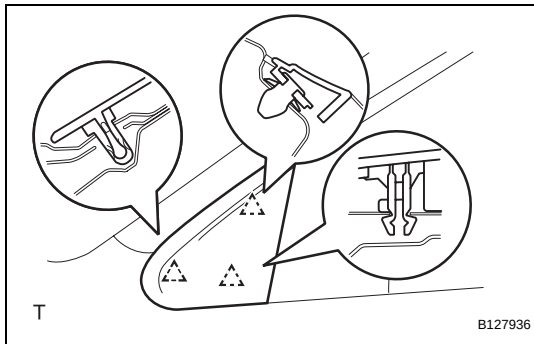

ROOF DRIP SIDE FINISH MOULDING

COMPONENTS

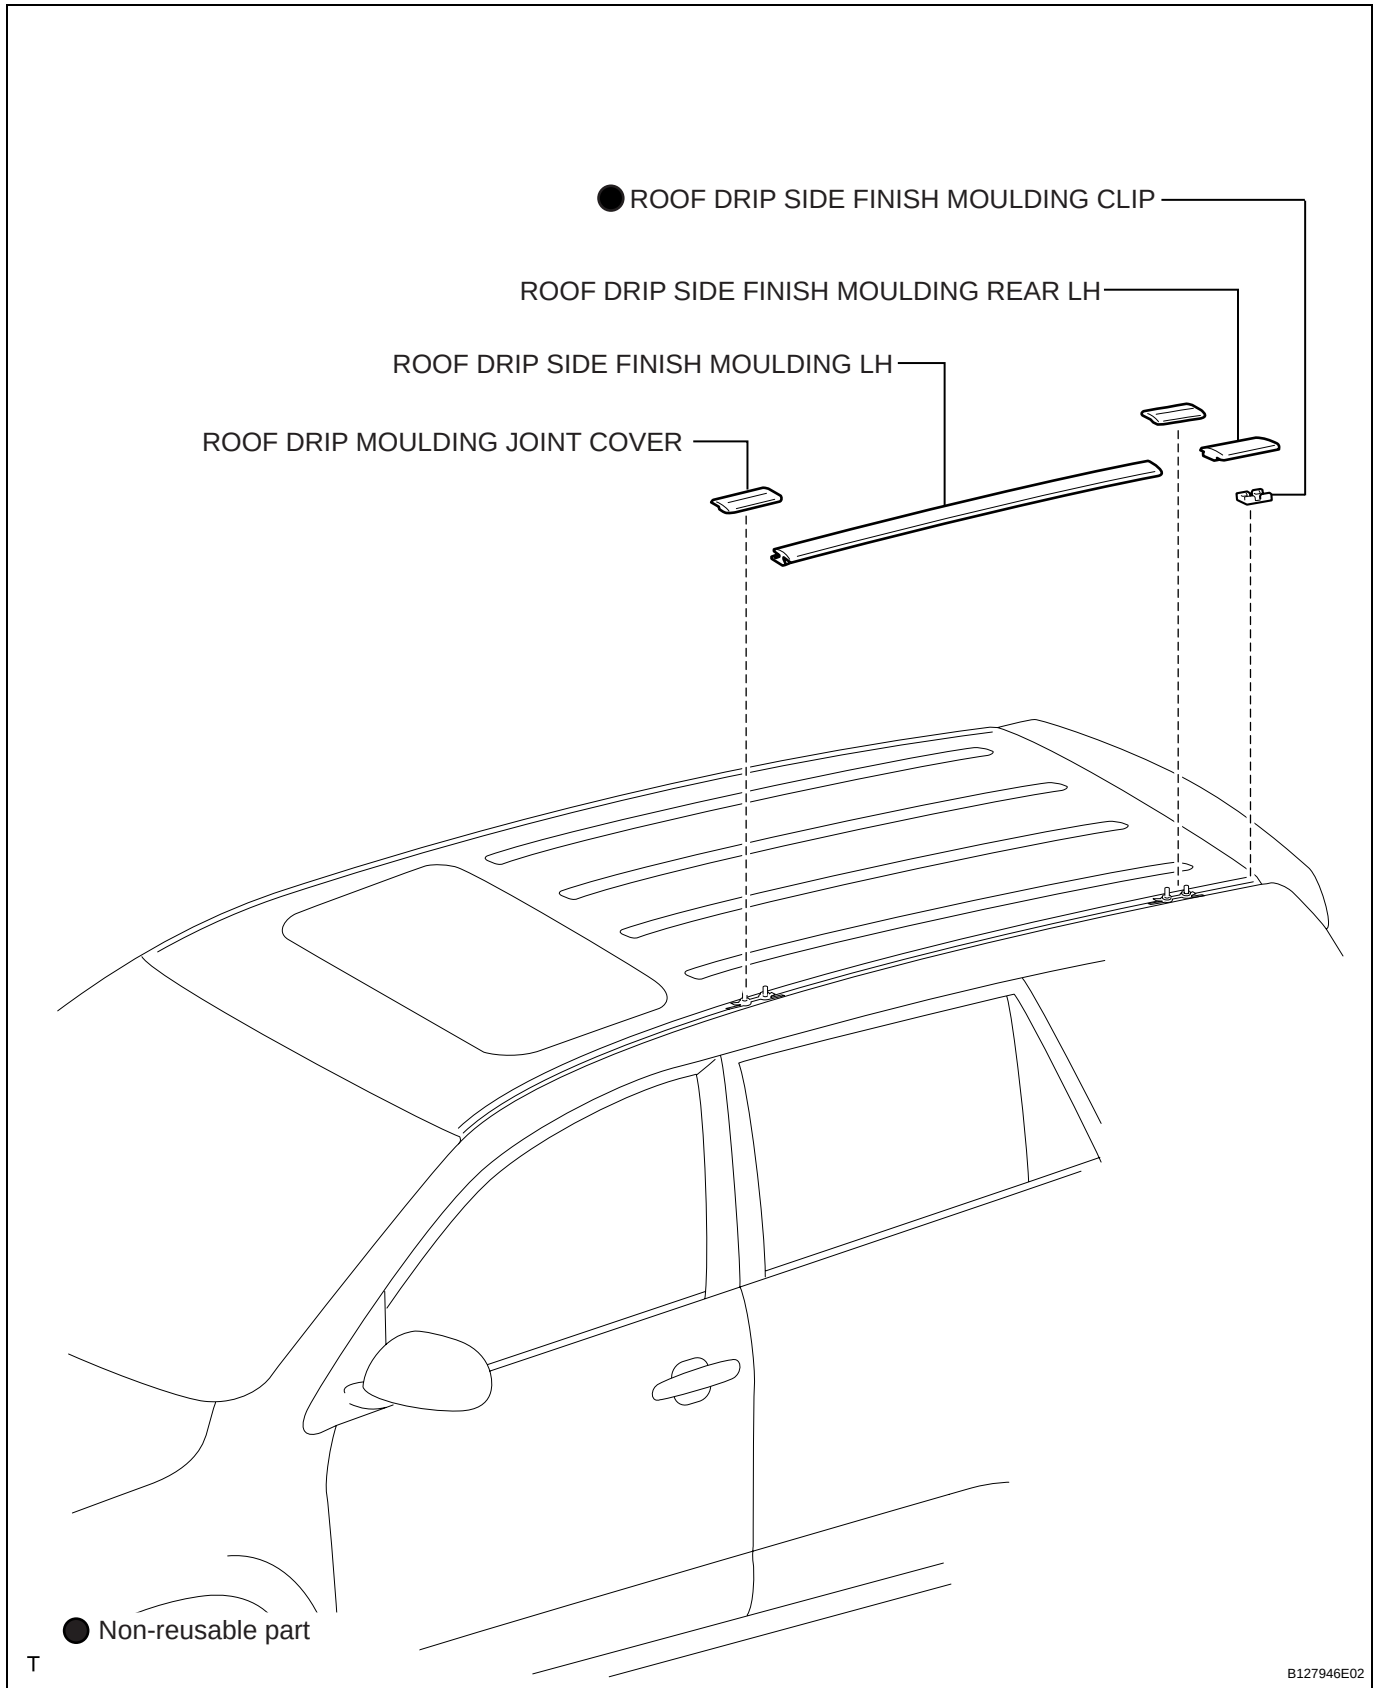

REMOVAL

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE ROOF DRIP SIDE FINISH MOULDING LH

- (a) Remove the 2 roof drip moulding joint covers from the vehicle body.
- (b) Remove the roof drip side finish moulding and No. 2 center roof drip side finish moulding.


NOTICE:

- **Do not remove the clips from the vehicle body.**
- **If the clips are damaged or removed accidentally, replace them.**

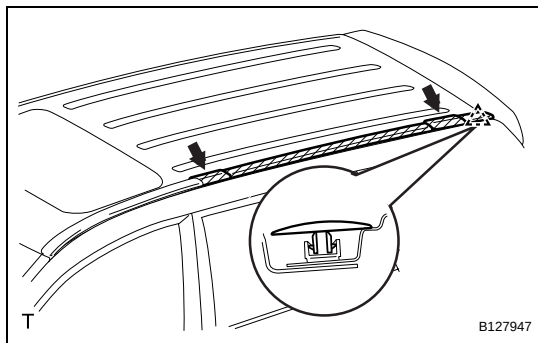

OUTSIDE MOULDING

COMPONENTS

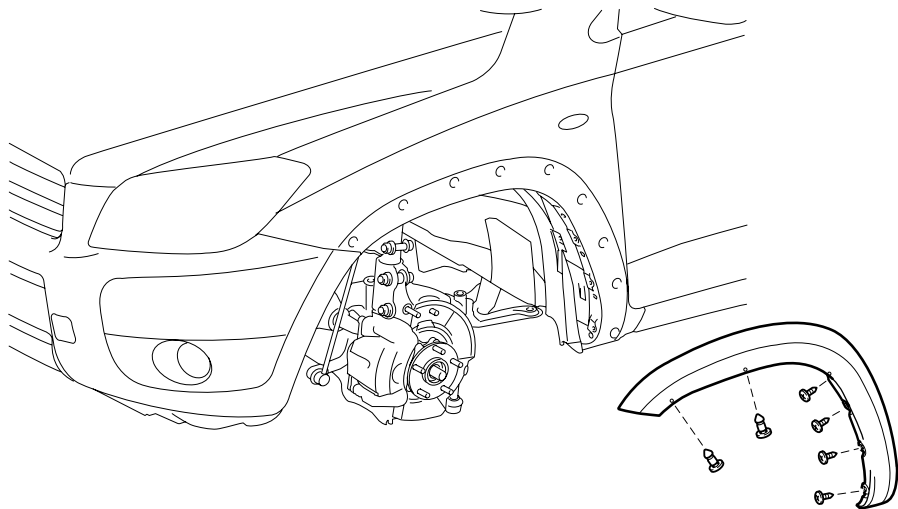

FRONT FENDER MOULDING SUB-ASSEMBLY LH

QUARTER OPENING RETAINER LH

NO. 1 ROCKER PANEL MOULDING RETAINER LH

REAR QUARTER
OUTSIDE
MOULDING LH

NO. 2 ROCKER PANEL MOULDING RETAINER LH

NO. 1 REAR WHEEL
OPENING EXTENSION LH

NO. 2 REAR WHEEL OPENING EXTENSION LH

ET

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When removing the moulding, heat the vehicle body and moulding using a heat light.


Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Clip	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the vehicle body and moulding excessively.

ET

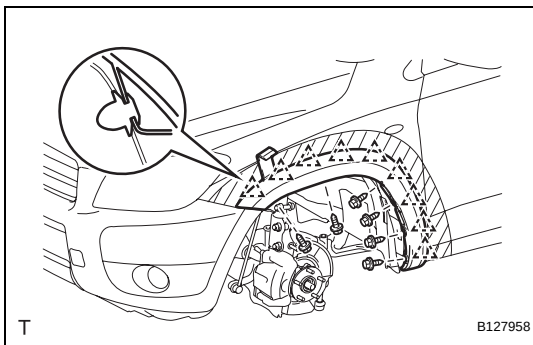


1. REMOVE FRONT FENDER MOULDING SUB-ASSEMBLY LH

- Put protective tape around the moulding.
- Remove the 4 screws and detach the 2 clips.
- Using a moulding remover, detach the 9 clips and remove the moulding.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Be careful not to damage the vehicle body.

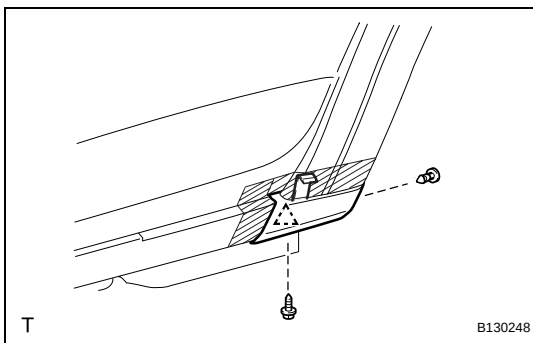


2. REMOVE NO. 2 REAR WHEEL OPENING EXTENSION LH

- Put protective tape around the moulding.
- Remove the screw.
- Using a clip remover, detach the 2 clips and remove the extension.

NOTICE:

- If reusing the extension, take care not to damage the extension.
- Be careful not to damage the vehicle body.

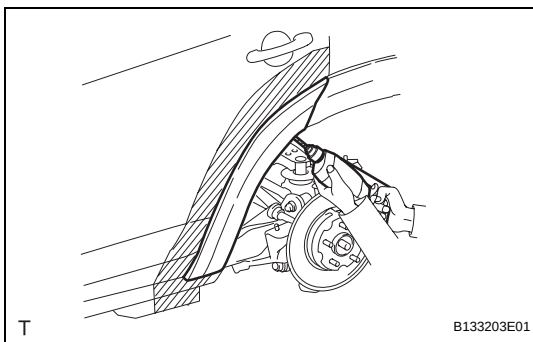

3. REMOVE NO. 1 REAR WHEEL OPENING EXTENSION LH

- Put protective tape around the extension.
- Using a drill bit of less than ϕ 4 mm (0.16 in.), drill out the 3 rivet flanges.

HINT:

Wind tape around the drill bit approximately 5 mm (0.20 in.) from the tip of the drill.

NOTICE:



- Do not drill the rivet at an angle as this will cause damage to the drill and drill hole. Line up the drill and rivet, and carefully drill out the rivet head.
 - Be careful as the cut rivet will be very hot.
- Continue drilling and push out the remaining rivet fragments using the drill.
 - Using a vacuum cleaner, remove the rivet fragments and shavings from the drilled areas.

- (e) Using a heat light, heat the extension and vehicle body.
- (f) Cut the double-sided tape that holds the moulding to the vehicle body with a knife.

NOTICE:

- If reusing the extension, take care not to damage the extension.
- Be careful not to damage the vehicle body.

- (g) Using a moulding remover, detach the 5 clips and remove the extension.

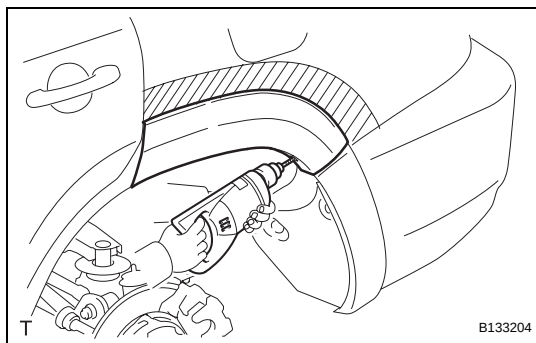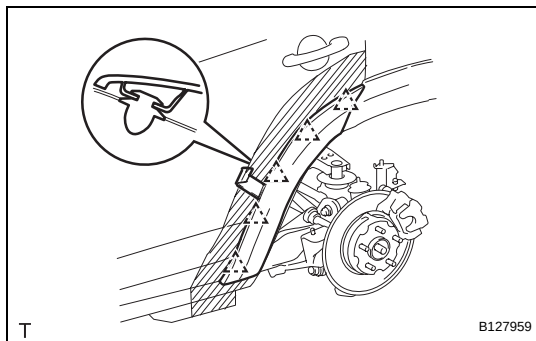**4. REMOVE REAR QUARTER OUTSIDE MOULDING LH**

- (a) Put protective tape around the moulding.
- (b) Using a drill bit of less than ϕ 4 mm (0.16 in.), drill out the 3 rivet flanges.

HINT:


Wind tape around the drill bit approximately 5 mm (0.20 in.) from the tip of the drill.


NOTICE:

- Do not drill the rivet at an angle as this will cause damage to the drill and drill hole. Line up the drill and rivet, and carefully drill out the rivet head.
- Be careful as the cut rivet will be very hot.
- (c) Continue drilling and push out the remaining rivet fragments using the drill.
- (d) Using a vacuum cleaner, remove the rivet fragments and shavings from the drilled areas.
- (e) Using a heat light, heat the moulding and vehicle body.
- (f) Using a moulding remover, detach the 5 clips and remove the moulding.

NOTICE:


- If reusing the moulding, take care not to damage the moulding.
- Be careful not to damage the vehicle body.

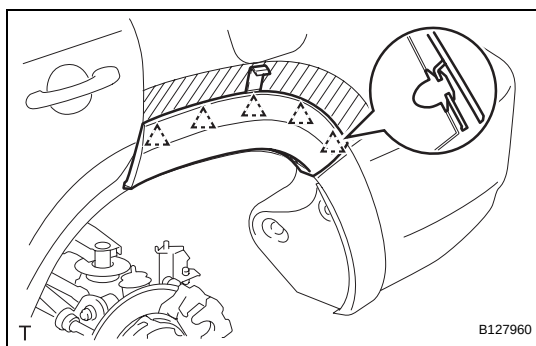

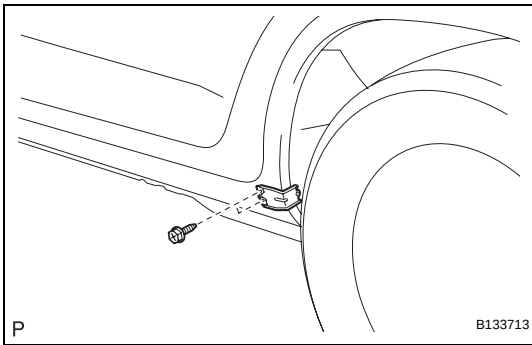


5. REMOVE NO. 2 ROCKER PANEL MOULDING RETAINER LH

- (a) Remove the 2 screws and retainer.

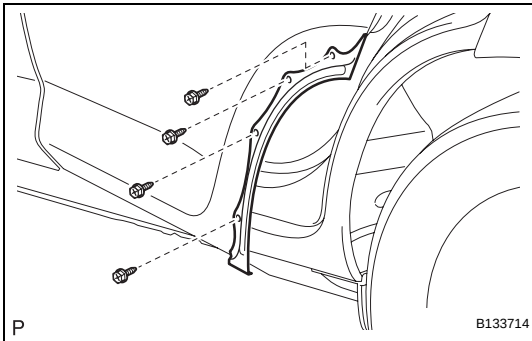

6. REMOVE QUARTER OPENING RETAINER LH

- (a) Remove the 4 screws and retainer.

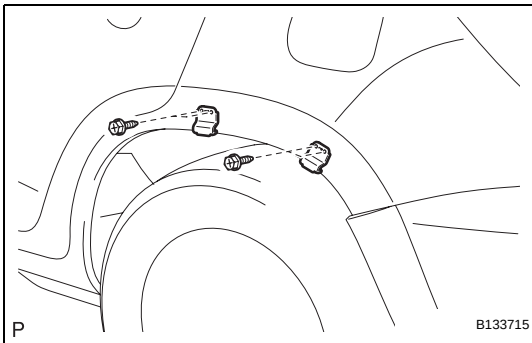


7. REMOVE NO. 1 ROCKER PANEL MOULDING RETAINER LH

- (a) Remove the 4 screws and 2 retainers.

BACK DOOR OUTSIDE GARNISH

COMPONENTS

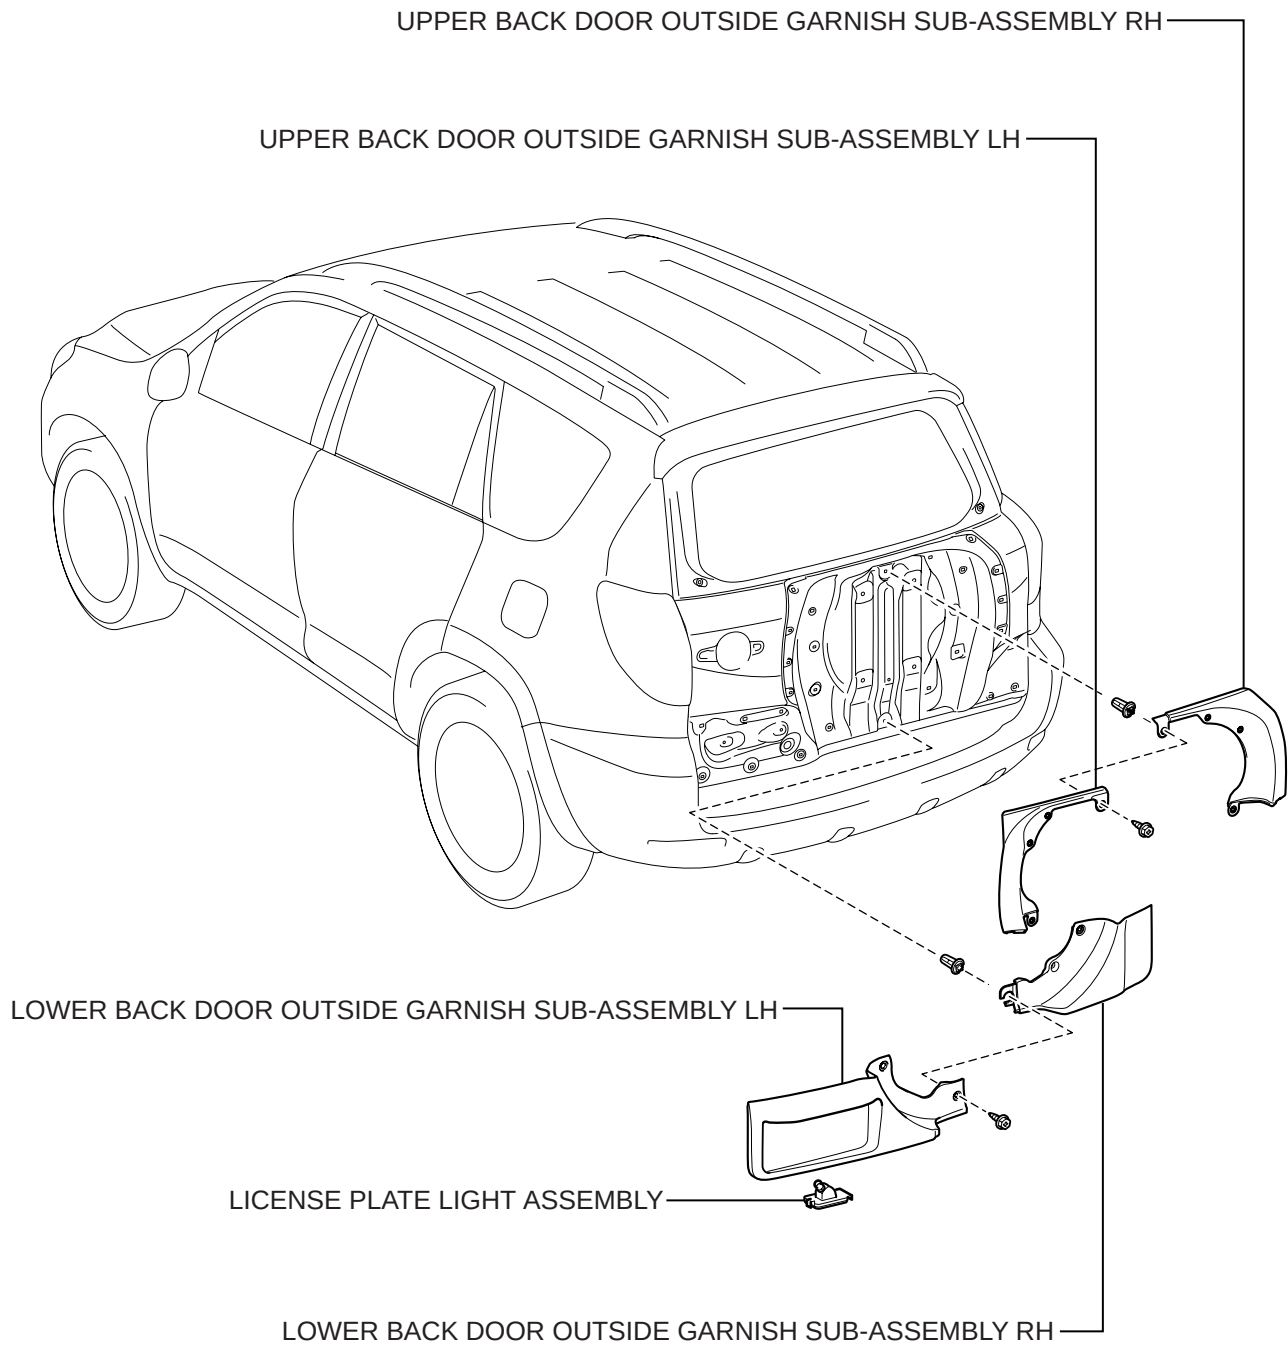

ET


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE BACK DOOR CENTER GARNISH (See page [ED-59](#))
3. REMOVE BACK DOOR SIDE GARNISH LH (See page [ED-59](#))
4. REMOVE BACK DOOR SIDE GARNISH RH (See page [ED-59](#))
5. REMOVE BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY (See page [LI-122](#))
6. REMOVE BACK DOOR TRIM BOARD (See page [ED-59](#))
7. REMOVE LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH
 - (a) Remove the screw and the 7 clips.
 - (b) Remove the back door outside garnish and disconnect the connector.
 - (c) Remove the license plate light (see page [LI-110](#)).

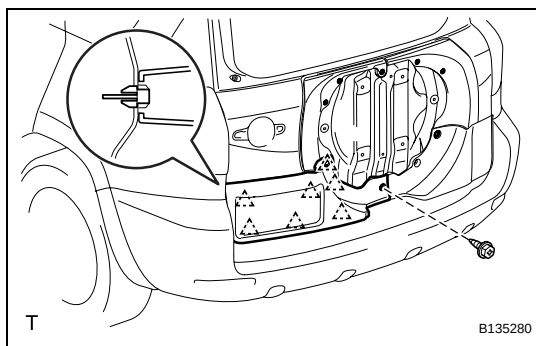


8. REMOVE UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH
 - (a) Remove the screw and the 6 clips.
 - (b) Remove the back door outside garnish.

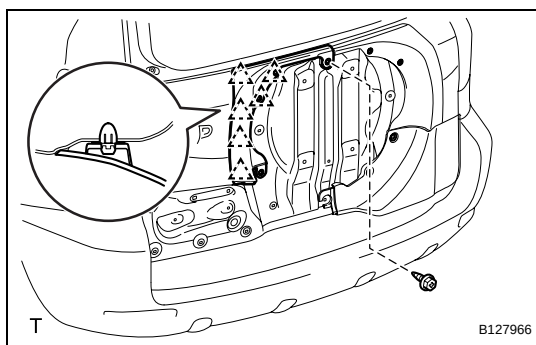


9. REMOVE LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH
 - (a) Remove the 5 clips and detach the claw.
 - (b) Remove the back door outside garnish.

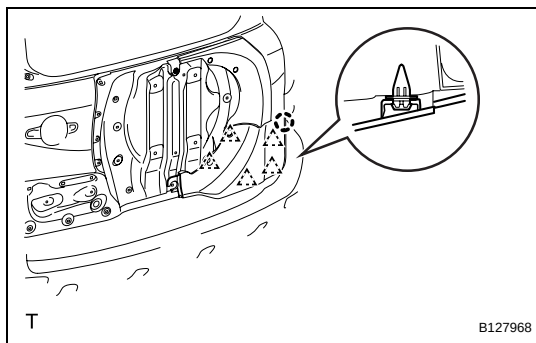

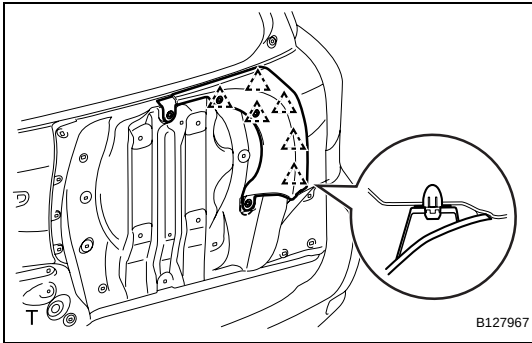

10. REMOVE UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH


- (a) Remove the 6 clips and back door outside garnish.

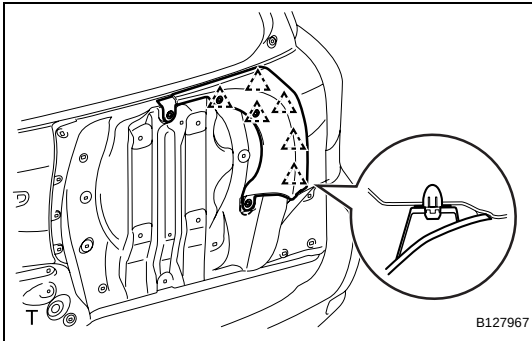

INSTALLATION


1. INSTALL UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH

- (a) Attach the 6 clips to install the back door outside garnish.

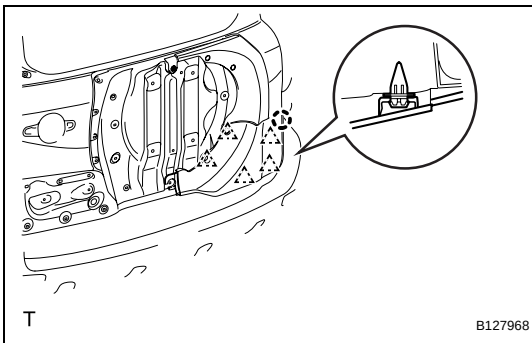


2. INSTALL LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY RH

- (a) Install the back door outside garnish.
(b) Attach the claw and 5 clips.

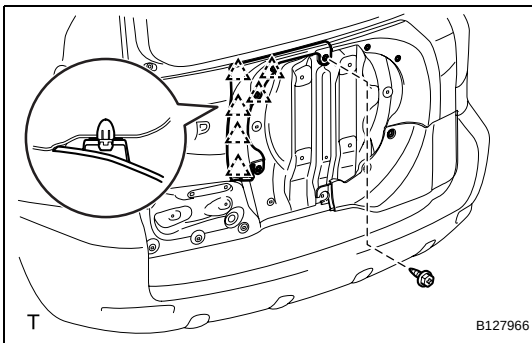

3. INSTALL UPPER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH

- (a) Attach the 6 clips to install the back door outside garnish.
(b) Install the screw.

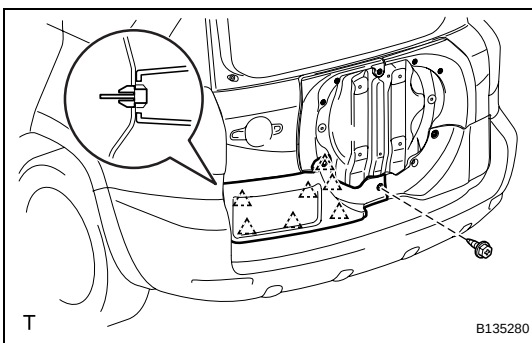

4. INSTALL LOWER BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY LH

- (a) Install the license plate light (see page [LI-111](#)).
(b) Connect the connector.
(c) Attach the 7 clips to install the back door outside garnish.
(d) Install the screw.

5. INSTALL BACK DOOR TRIM BOARD (See page [ED-66](#))

6. INSTALL BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY (See page [LI-123](#))
7. INSTALL BACK DOOR SIDE GARNISH LH (See page [ED-67](#))
8. INSTALL BACK DOOR SIDE GARNISH RH (See page [ED-67](#))
9. INSTALL BACK DOOR GARNISH CENTER (See page [ED-67](#))
10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL