


Mercury Grand Marquis 1979 – 1982 fuse box diagram

Fuse box diagram

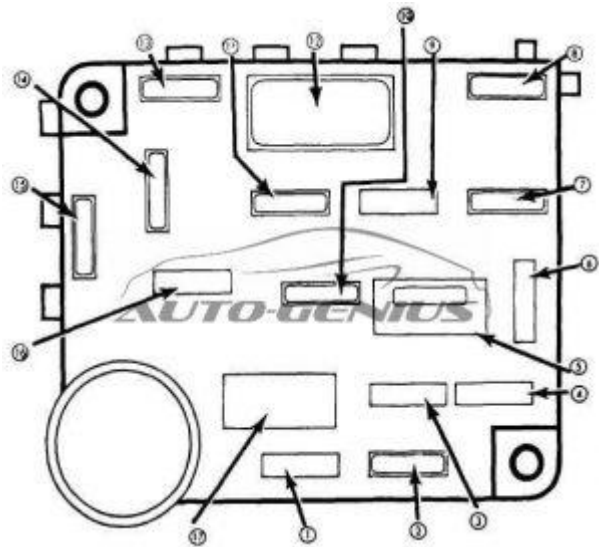

Mercury Grand Marquis – fuse box diagram

Nº	A	Protected Component
1	5	Instrument illumination
2	10	Automatic light warning indicators and carburetor circuits

3	—	—
4	20	Horn and cigar lighter
5	25	Cigar lighters and tailgate window key switch
	30	Circuit Breaker: Door locks, tailgate window key switch, lighters and power seats
6	—	—
7	15	Courtesy lights, illuminated entry, clock and CB radio
8	15	License, tail, parking and coach lights
9	—	—
10	15	Radio, power antenna, CB radio and premium sound system

11	20	Air conditioning clutch, cornering lights, rear window de-icer, trunk release, speed control, police circuits, illuminated entry, power window safety relay (4-dr) and digital clock
12	8.25	Circuit Breaker: Windshield wipers/washers and intermittent wipers
13	15	Hazard and stop lights
14	15	Turn signal lights, back-up lights and trailer
15	30	Heater and air conditioning blower
16	—	—
17	25	Tailgate windows and instrument panel switch
	30	Circuit Breaker: Power windows

Circuit Breaker:

- Headlights – An 18 amp. C.B. is integral with headlight switch.
- Power Windows – A 20 amp. C.B. is located on the fuse panel on 2-door models, or at the starter relay on 4-door models.

Fusible Links:

A fusible link located at the wiring harness of the starter relay protects the following circuits, heated rear window, trailer towing brakes and lights, and the air bag feed.

In-Line Fuse:

A 2 amp. in-line fuse is located on the visor to protect the lighted vanity mirror