

Toyota T100 (1993-1998) fuses

*The pickup truck Toyota T100 was produced from 1992 to 1998. In this article, you will find fuse box diagrams of **Toyota T100 1995, 1996, 1997 and 1998**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

Fuse Layout Toyota T100 Pickup Truck (1993-1998)



Cigar lighter (power outlet) fuse in the Toyota T100 is the fuse #18 in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

The fuse box is located behind the lid under the driver's side of the instrument panel.



Fuse Box Diagram

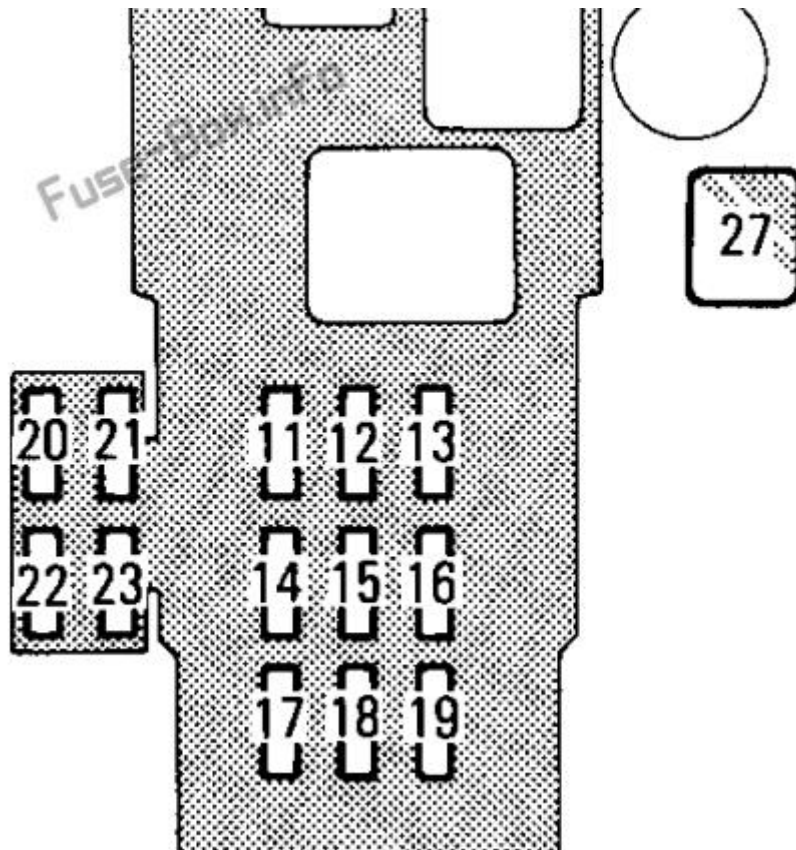

Assignment of the fuses in the instrument panel

No	Name	Amp	Description
11	ENGINE	10A	Charging system, cruise control system
12	IGN	7.5A	Charging system, discharge warning light, multiport fuel injection system/sequential multiport fuel injection system
13	TAIL	15A	Tail lights, parking lights, license plate lights, instrument panel lights, glovebox light
14	WIPER	20A	Windshield wiper and washer
15	GAUGES	10A	Automatic transmission overdrive control system, gauges and meters, service reminder indicators and warning buzzers (except discharge cruise warning light), A.D.D. control system, cruise control system, back-up lights, power door lock system
16	STOP	15A	Stop lights, High-mounted stoplight, cruise control system, electronically controlled automatic transmission system

No	Name	Amp	Description
17	RADIO	7.5A	Radio, cassette tape player, power antenna, power rear view mirrors
18	CIG	15A	Cigarette lighter, digital clock display, shift lock control system (automatic transmission)
19	TURN	10A	Turn signal lights, emergency flashers
20	ECU-B	15A	Anti-lock brake system, SRS airbag system, cruise control system, daytime running light system
21	DRL	7.5A	Canada: Daytime running light system
22	ECU-IG	20A	Anti-lock brake system, cruise control system
23	OBD	7.5A	On-board diagnosis system
27	PWR	30A	Power door lock system, power windows


Advertisements

Engine Compartment Fuse Box

Fuse Box Location



Fuse Box Diagram

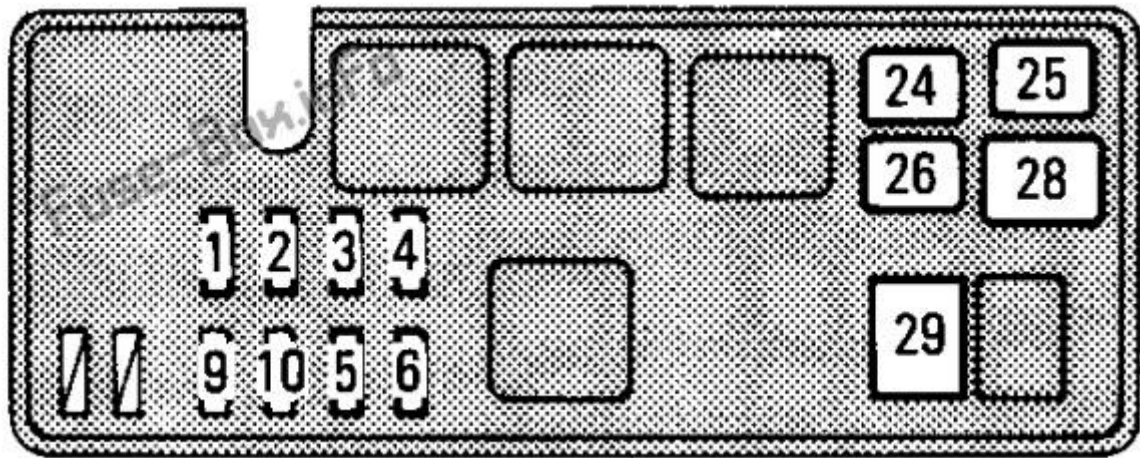

Assignment of the fuses in the engine compartment

№	Name	Amp	Description
1	HEAD_(LH)	10A	US: Left-hand headlight
1	HEAD_(LH-HI)	10A	Canada: Left-hand headlight (high beam)
2	HEAD_(RH)	10A	US: Right-hand headlight
2	HEAD_(RH-HI)	10A	Canada: Right-hand headlight (high beam)
3	A/C	10A	Air conditioning cooling system
4	EFI	15A	Multiport fuel injection system/sequential multiport fuel injection system, electronically controlled automatic transmission system
5	HAZ-HORN	15A	Emergency flashers, horns
6	DOME	15A	Interior light, personal lights, step lights, ignition switch light, radio, cassette tape player, power antenna, clock
9	HEAD_(LH-LO)	10A	Canada: Left-hand headlight (low beam)
10	HEAD_(RH-LO)	10A	Canada: Right-hand headlight (low beam)

No	Name	Amp	Description
24	AM1	40A	Starting system, all components in "ENGINE", "IGN.", "WIPER", "GAUGES". "RADIO", "CIG.", "TURN" and "PWR" fuses
25	AM2	30A	Starting system, all components in "ENGINE", "IGN.", "WIPER", "GAUGES", "RADIO", "CIG." and "TURN" fuses
26	HEATER	40A	Air conditioning heating system
28	ABS	60A	Anti-lock brake system
29	ALT	100A	All components in "A/C", "TAIL", "STOP", "ECU-B", "AM1" and "HEATER" fuses