 


Pontiac Vibe 2003 fuse box diagram

Instrument Panel Fuse Block

The fuse block is located underneath the instrument panel on the driver side of the vehicle.



Pontiac Vibe – fuse box – instrument panel

Fuses	Usage
TAIL	Front Parking Lamps, Taillamps, License Plate Lamps, Instrument Panel Lights, Engine Control System
OBD	On-Board Diagnostic System
WIPER	Windshield Wipers
AM2	Charging System, Air Bag System, Starter System, Engine Control
DOOR	Power Door Locks, Liftglass Lock
AM1	Cigarette Lighter, Gauge, ECU-IG, Wiper, Rear Wiper, Washer Fuses
ECU-IG	Cruise Control, Anti-lock Brakes, Theft Deterrent System, Automatic Transmission Control System, Electric Cooling Fan
RR WIPER	Rear Window Wiper, Rear Window Defogger

ALT-S	Charging System
EFI	Electronic Fuel Injection System
HAZARD	Turn Signal Lamps, Emergency Flasher
HORN	Horn
DOME	Interior Lights, Gauges and Meters, Audio System, Remote Keyless Entry System
MAIN	Starter System, AM2 Fuse
AMP	Audio System
MAYDAY	Not Used
DIMMER	Headlamp Dimmer (Relay)
SPARE	Spare Fuse
SPARE	Spare Fuse
SPARE	Spare Fuse
HORN	Horn
FAN NO. 2	Cooling Fan System (Relay)
FAN NO. 1	Cooling Fan System (Relay)

ABS NO. 2	Anti-lock Brake System
RDI FAN	Electronic Cooling Fan System
ABS NO. 1	Anti-lock Brake System
ALT	Charging System, DEFOG, HEATER, GAUGE, ECU-IG, WIPER, RR WIP, WASHER, ABS NO. 1, ABS NO. 2, RDI FAN, FOG, GAUGE, INV, AM1 Fuses
HEAD RH	Right-hand Headlamp
HEAD LH	Left-hand Headlamp
EFI	Electronic Fuel Injection System (Relay)
FOG	Front Fog Lamps