

SECTION BCS

BODY CONTROL SYSTEM

CONTENTS

BASIC INSPECTION	3	COMMON ITEM	16
INSPECTION AND ADJUSTMENT	3	COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	16
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)	3	DOOR LOCK	17
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description	3	DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)	17
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Requirement	3	REAR WINDOW DEFOGGER	18
CONFIGURATION (BCM)	3	REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)	18
CONFIGURATION (BCM) : Description	3	BUZZER	18
CONFIGURATION (BCM) : Special Repair Requirement	4	BUZZER : CONSULT-III Function (BCM - BUZZER)	19
CONFIGURATION (BCM) : Configuration list	5	INT LAMP	19
FUNCTION DIAGNOSIS	6	INT LAMP : CONSULT-III Function (BCM - INT LAMP)	19
BODY CONTROL SYSTEM	6	HEADLAMP	21
System Description	6	HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)	21
Component Parts Location	7	WIPER	23
COMBINATION SWITCH READING SYSTEM	8	WIPER : CONSULT-III Function (BCM - WIPER).....	23
System Diagram	8	FLASHER	24
System Description	8	FLASHER : CONSULT-III Function (BCM - FLASHER)	24
Component Parts Location	11	INTELLIGENT KEY	25
SIGNAL BUFFER SYSTEM	12	INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	25
System Diagram	12	COMB SW	28
System Description	12	COMB SW : CONSULT-III Function (BCM - COMB SW)	28
POWER CONSUMPTION CONTROL SYSTEM	13	BCM	28
System Diagram	13	BCM : CONSULT-III Function (BCM - BCM)	28
System Description	13	IMMU	29
Component Parts Location	15	IMMU : CONSULT-III Function (BCM - IMMU)	29
DIAGNOSIS SYSTEM (BCM)	16		

BATTERY SAVER	29	COMBINATION SWITCH INPUT CIRCUIT	38
BATTERY SAVER : CONSULT-III Function (BCM		Diagnosis Procedure	38
- BATTERY SAVER)	29	COMBINATION SWITCH OUTPUT CIRCUIT ...	40
TRUNK	30	Diagnosis Procedure	40
TRUNK : CONSULT-III Function (BCM - TRUNK)...	30	ECU DIAGNOSIS	42
THEFT ALM	31	BCM (BODY CONTROL MODULE)	42
THEFT ALM : CONSULT-III Function (BCM -		Reference Value	42
THEFT)	31	Wiring Diagram - BCM -	65
SIGNAL BUFFER	32	Fail-safe	71
SIGNAL BUFFER : CONSULT-III Function (BCM		DTC Inspection Priority Chart	73
- SIGNAL BUFFER)	32	DTC Index	74
COMPONENT DIAGNOSIS	33	SYMPTOM DIAGNOSIS	76
U1000 CAN COMM CIRCUIT	33	COMBINATION SWITCH SYSTEM SYMP-	
Description	33	TOMS	76
DTC Logic	33	Symptom Table	76
Diagnosis Procedure	33	PRECAUTION	77
U1010 CONTROL UNIT (CAN)	34	PRECAUTIONS	77
DTC Logic	34	Precaution for Supplemental Restraint System	
Diagnosis Procedure	34	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
U0415 VEHICLE SPEED SIG	35	SIONER"	77
Description	35	ON-VEHICLE REPAIR	78
DTC Logic	35	BCM (BODY CONTROL MODULE)	78
Diagnosis Procedure	35	Exploded View	78
B2562 LOW VOLTAGE	36	Removal and Installation	78
DTC Logic	36	COMBINATION SWITCH	79
Diagnosis Procedure	36	Exploded View	79
POWER SUPPLY AND GROUND CIRCUIT	37	Removal and Installation	79
Diagnosis Procedure	37		

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

BASIC INSPECTION

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description

INFOID:000000003809644

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT-III configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

- When replacing BCM, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- When replacing BCM, perform the system initialization (NATS).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Requirement

INFOID:000000003809645

1. SAVING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3, "CONFIGURATION \(BCM\) : Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-78, "Exploded View"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS)

Perform BCM initialization. (NATS)

>> WORK END

CONFIGURATION (BCM)

CONFIGURATION (BCM) : Description

INFOID:000000003809646

Vehicle specification needs to be written with CONSULT-III because it is not written after replacing BCM.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

Configuration has three functions as follows

Function	Description
READ CONFIGURATION	• Reads the vehicle configuration of current BCM. • Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

CAUTION:

- When replacing BCM, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.

CONFIGURATION (BCM) : Special Repair Requirement

INFOID:000000003809647

1. WRITING MODE SELECTION

CONSULT-III Configuration
Select "CONFIGURATION" of BCM.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

CONSULT-III Configuration
Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

- CONSULT-III Configuration
1. Select "WRITE CONFIGURATION - Manual selection".
 2. Identify the correct model and configuration list. Refer to [BCS-5, "CONFIGURATION \(BCM\) : Configuration list"](#).
 3. Confirm and/or change setting value for each item.
 4. Select "Setting change".

CAUTION:

Make sure to select "Setting change" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "COMMAND FINISHED", select "END".

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

CONFIGURATION (BCM) : Configuration list

INFOID:000000003809648

MANUAL SETTING ITEM		NOTE
Items	Setting value	
AUTO LIGHT	WITH	—
RR FOG LAMP	WITH	—
AV C/U	WITH ⇔ WITHOUT	• WITH: With BOSE audio system • WITHOUT: Without BOSE audio system
THEFT ALM AREA	MODE3	—
H/L WASHER TIME 1	WITH	—
H/L WASHER TIME 2	WITH	—
I-KEY	WITH	—
Key Fob Type	MODE10	—
HANDLE	LHD	—

⇔: Items which confirm vehicle specifications

AUTO SETTING ITEM		NOTE
Items	Setting value	
H/L BULB	DEFAULT	—
FR FOG LAMP	WITH	—
TRANSMISSION	AT with ABS	—
TR CANCL SW	WITHOUT	—
TPMS	WITHOUT	—
AUTO BACK DOOR	WITHOUT	—
FOG LAMP BULB	SINGLE BULB	—
DI LMP VARIAT	MODE4	—
LIGHT RECOG	MODE4	—
FR FOG LOGIC	MODE2	—
PANIC ALM TYPE	MODE2	—
HAZARD SW TYPE	MODE1	—
BCM AC CONTROL	MODE1	—
RAIN SENSOR	WITHOUT	—
FOG ON WITH AUTO LIGHT	WITHOUT	—
AUTO LOCK&UNLOCK FUNC	WITHOUT	—
DROP WIP FUNCTION	WITHOUT	—
SELECTIVE UNLOCK SETTING	WITHOUT	—
SEAT BLT WARN	WITHOUT	—
SPEED SNS WIP	WITH	—

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BODY CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

BODY CONTROL SYSTEM

System Description

INFOID:000000003809584

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT-III and various settings.

BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	BCS-8, "System Diagram"
Signal buffer system	BCS-12, "System Diagram"
Power consumption control system	BCS-13, "System Diagram"
Auto light system	• EXL-13, "System Diagram" (Xenon type headlamp) • EXL-202, "System Diagram" (Halogen type headlamp)
Turn signal and hazard warning lamp system	• EXL-19, "System Diagram" (Xenon type headlamp) • EXL-206, "System Diagram" (Halogen type headlamp)
Headlamp system	• EXL-11, "System Diagram" (Xenon type headlamp) • EXL-200, "System Diagram" (Halogen type headlamp)
Parking, license plate and tail lamps system	• EXL-21, "System Diagram" (Xenon type headlamp) • EXL-208, "System Diagram" (Halogen type headlamp)
Front fog lamp system	• EXL-17, "System Diagram" (Xenon type headlamp) • EXL-204, "System Diagram" (Halogen type headlamp)
Rear fog lamp system	• EXL-23, "System Diagram" (Xenon type headlamp) • EXL-210, "System Diagram" (Halogen type headlamp)
Exterior lamp battery saver system	• EXL-25, "System Diagram" (Xenon type headlamp) • EXL-212, "System Diagram" (Halogen type headlamp)
Interior room lamp control system	INL-5, "System Diagram"
Step lamp system	
Trunk room lamp system	
Interior room lamp battery saver system	INL-9, "System Diagram"
Front wiper and washer system	WW-5, "System Diagram"
Headlamp washer system	WW-10, "System Diagram"
Warning chime system	WCS-5, "WARNING CHIME SYSTEM : System Diagram"
Door lock system	DLK-11, "System Diagram"
Trunk open system	DLK-38, "System Diagram"
Automatic drive positioner system	ADP-12, "AUTOMATIC DRIVE POSITIONER SYSTEM : System Diagram"
Nissan Vehicle Immobilizer System (NVIS) - NATS	SEC-14, "System Diagram"
Vehicle security system	SEC-17, "System Diagram"
Rear window defogger system	• DEF-4, "WITH AV CONTROL UNIT : System Diagram" (With AV control unit) • DEF-6, "WITHOUT AV CONTROL UNIT : System Diagram" (Without AV control unit)

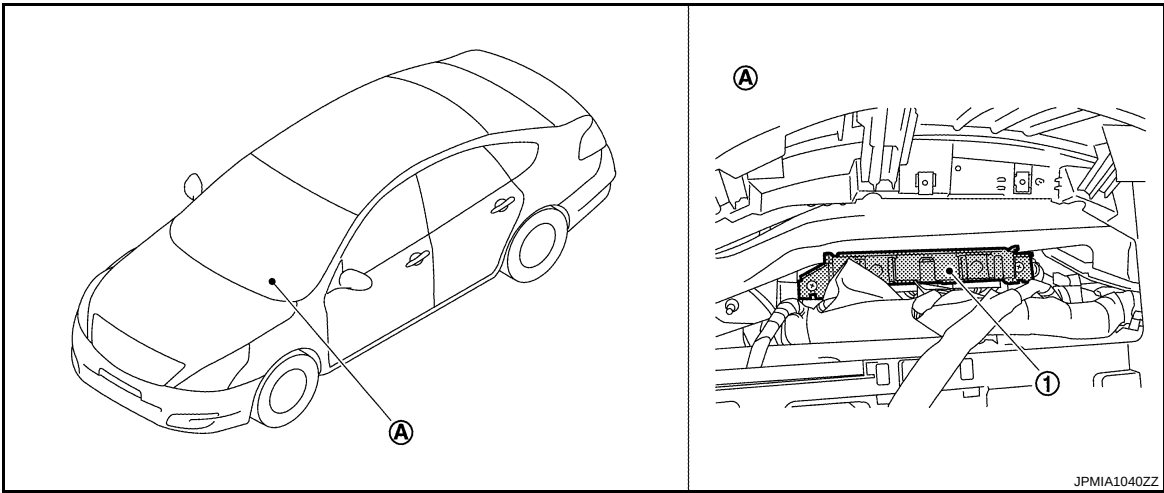
BODY CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

System		Reference
Intelligent Key system/engine start system	Door lock function	DLK-14, "INTELLIGENT KEY SYSTEM : System Diagram"
	Trunk open function	
	Remote keyless entry function	
	Key reminder function	
	Warning function	
	Engine start function	
Power window system		PWC-7, "System Diagram"

Component Parts Location

INFOID:000000003809585



- 1. BCM
- A. Behind of combination meter

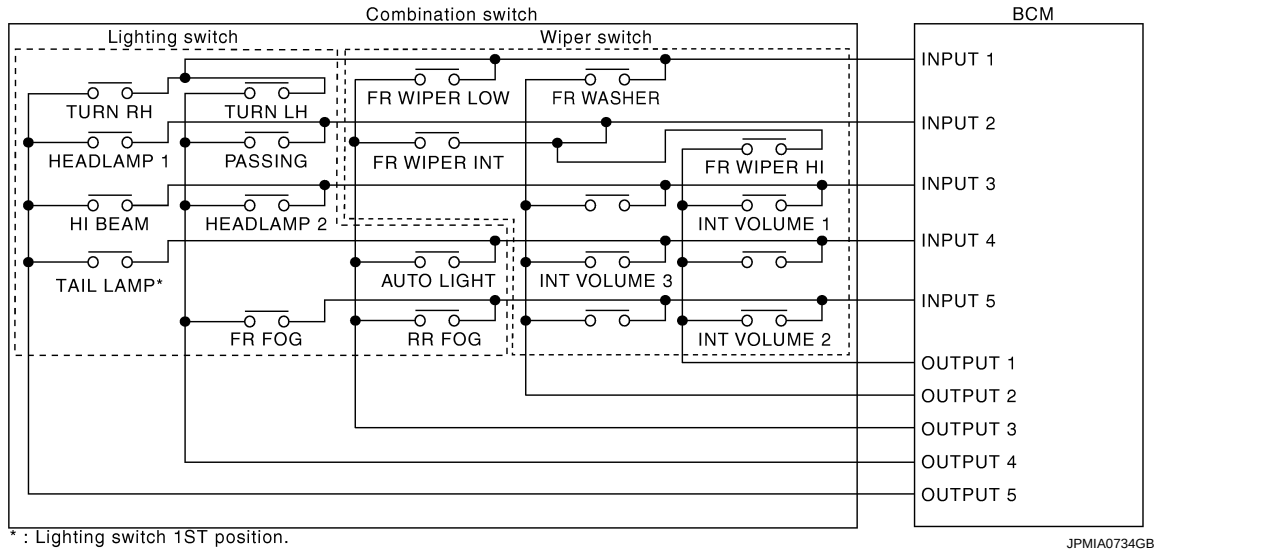
BCS

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

COMBINATION SWITCH READING SYSTEM

System Diagram




System Description

INFOID:000000003809587

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

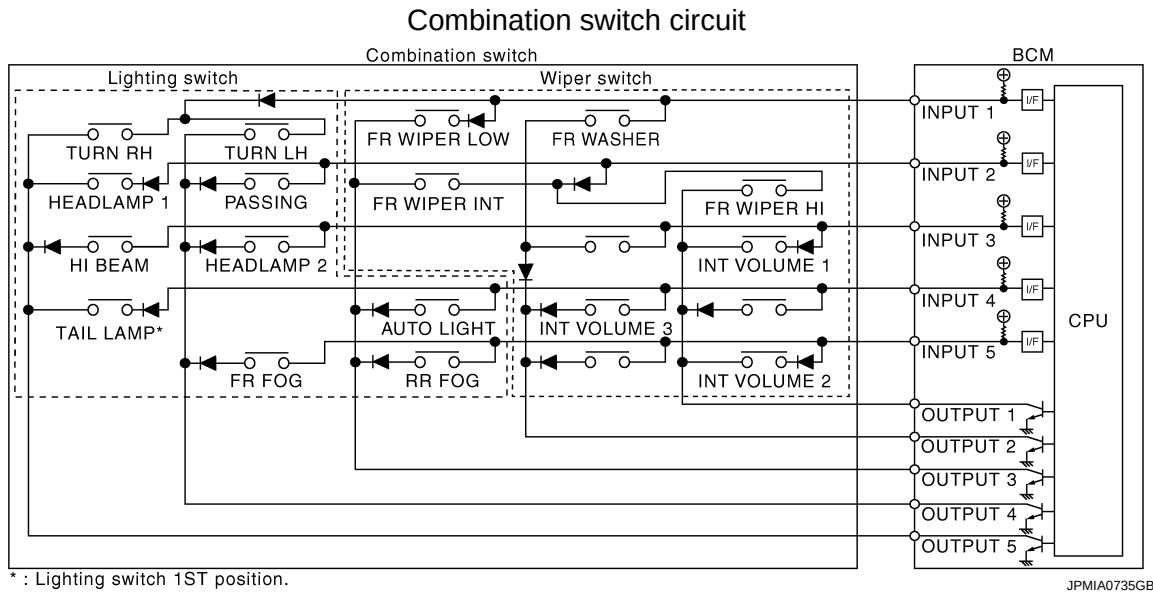COMBINATION SWITCH MATRIX



Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WIPER LOW	FR WIPER INT	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
INPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	INT VOLUME 2	—	RR FOG	FR FOG	—

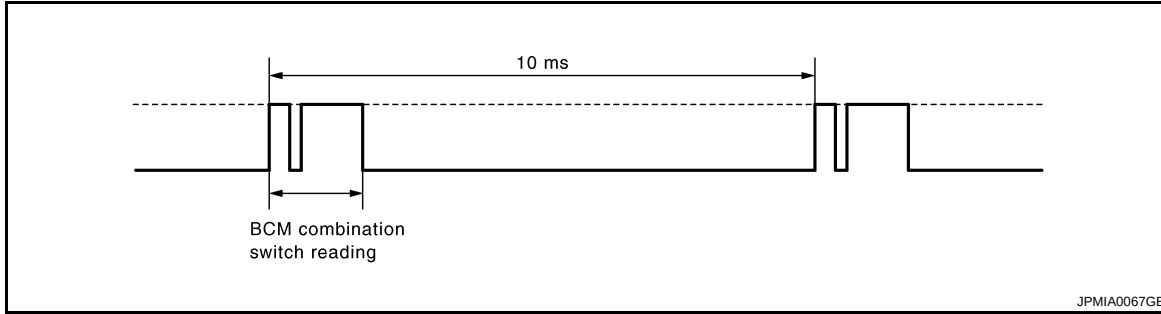
NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10 ms interval normally.



NOTE:

BCM reads the status of the combination switch at 60 ms interval when BCM is controlled at low power consumption mode.

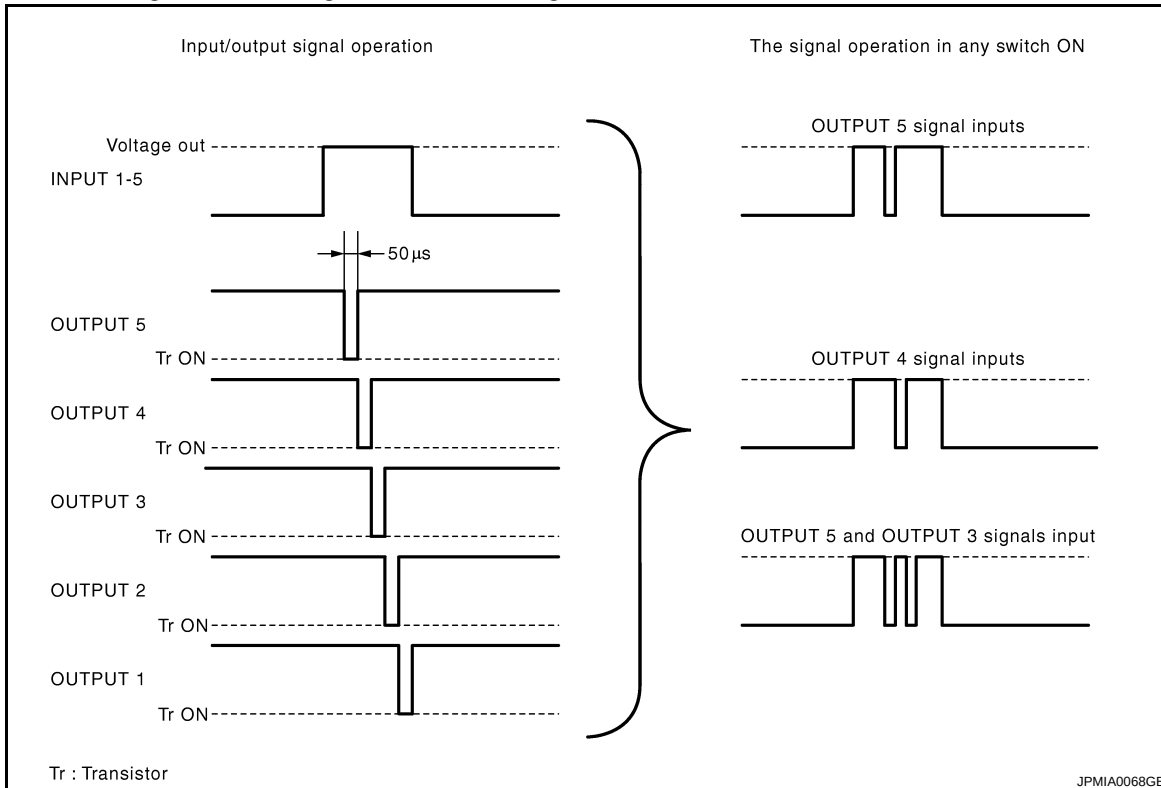- BCM operates as follows and judges the status of the combination switch.
- INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.



Operation Example


In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TURN RH switch) is turned ON

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

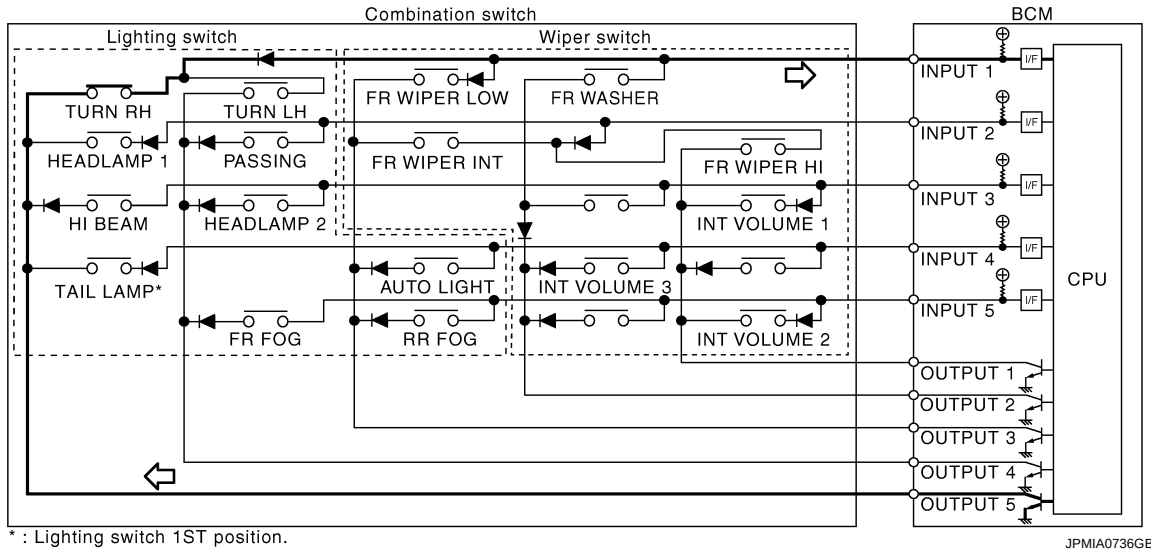
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

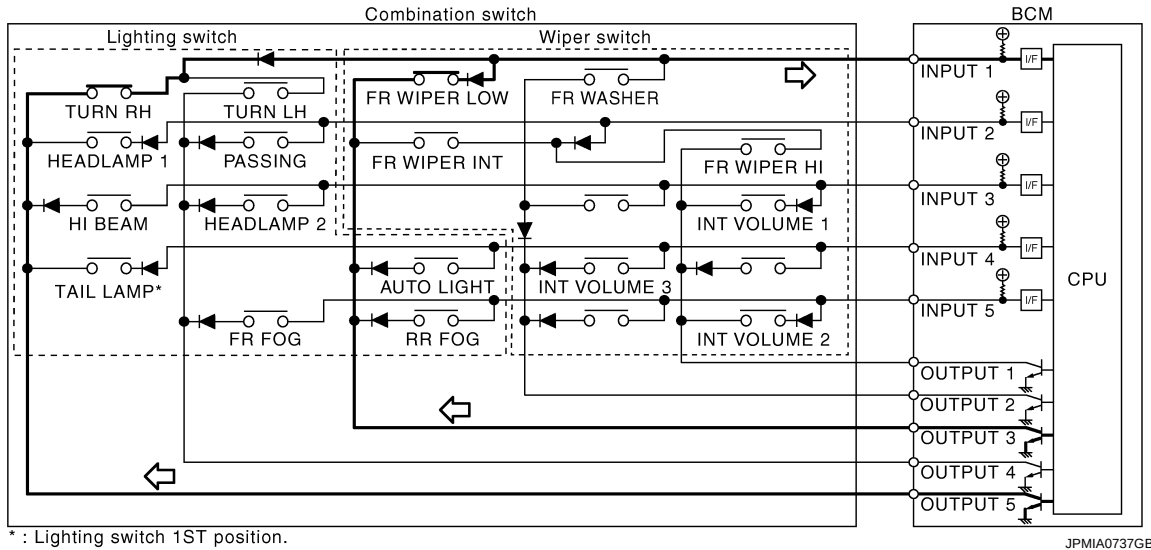- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.


COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1 switch	INT VOLUME 2 switch	INT VOLUME 3 switch
1	Short	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4	↑ ↓ Long	OFF	OFF	OFF
5		OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

Component Parts Location

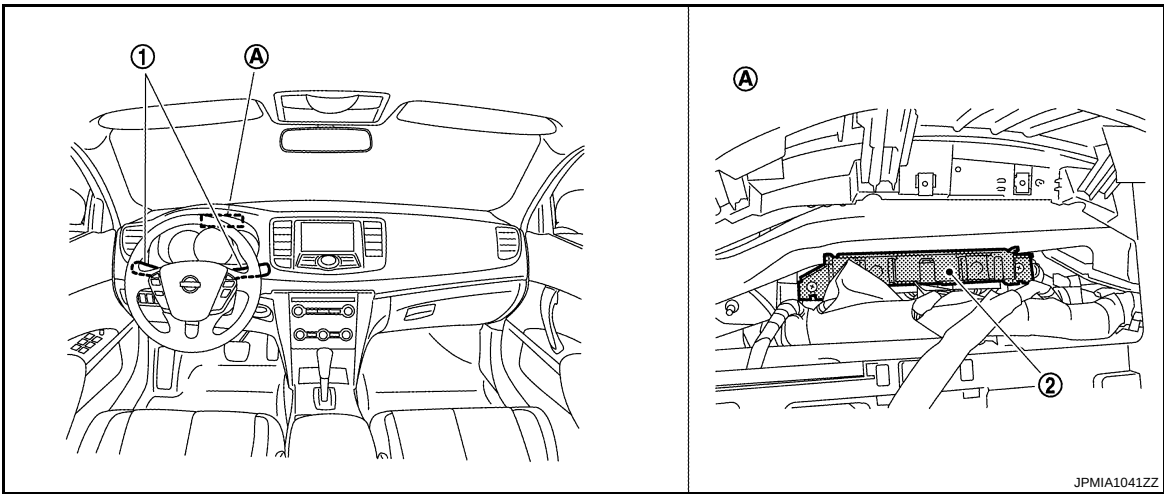INFOID:000000003809588



1. Combination switch
2. BCM
- A. Behind of combination meter

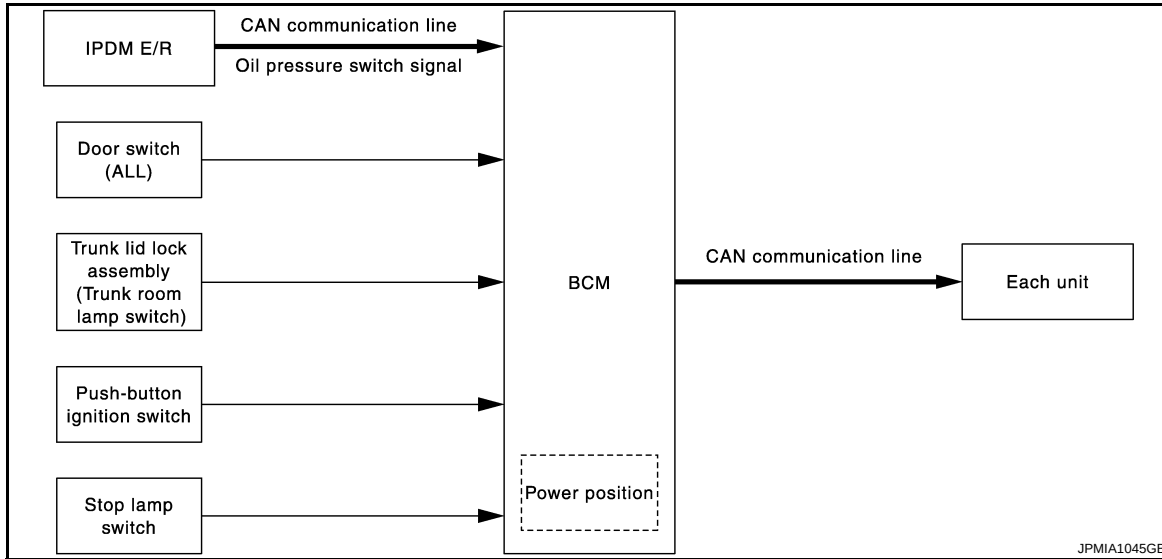
BCS

SIGNAL BUFFER SYSTEM

< FUNCTION DIAGNOSIS >

SIGNAL BUFFER SYSTEM

System Diagram



System Description

INFOID:000000003809590

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list


Signal name	Input	Output	Description
- Ignition switch ON signal - Ignition switch signal	Push-button ignition switch (push switch)	- IPDM E/R (CAN) - Driver seat control unit (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	- Combination meter (CAN) - IPDM E/R (CAN) - Driver seat control unit (CAN) - AV control unit (CAN)	Inputs the door switch signal and transmits it via CAN communication.
Trunk switch signal	Trunk room lamp switch	- Combination meter (CAN) - AV control unit (CAN)	Inputs the trunk room lamp switch signal and transmits the trunk switch signal via CAN communication.
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (CAN)	Transmits the received oil pressure switch signal via CAN communication.
Stop lamp switch signal	Stop lamp switch	TCM (CAN)	Inputs the stop lamp switch signal and transmits it via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

POWER CONSUMPTION CONTROL SYSTEM

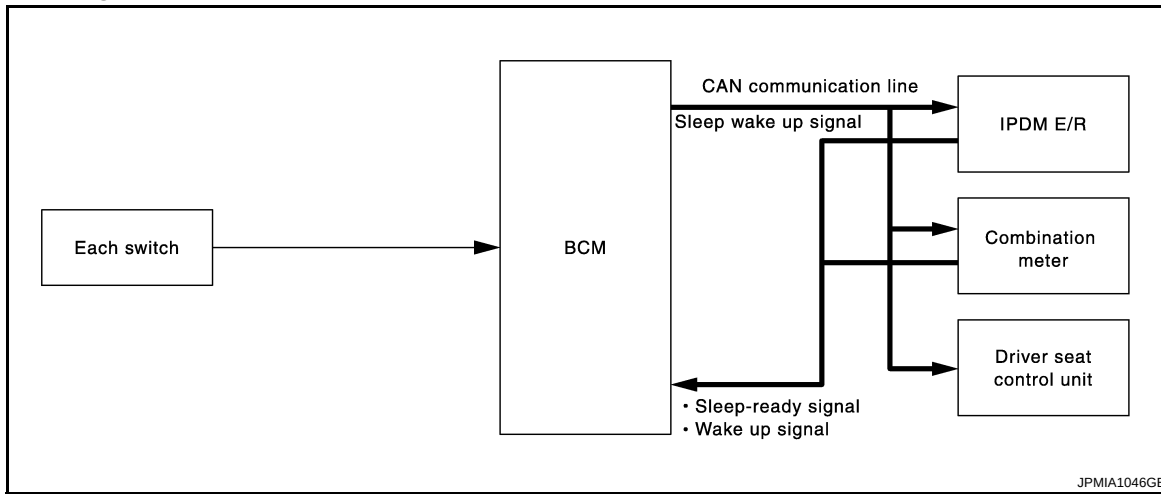System Diagram



System Description

INFOID:000000003809592

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R, combination meter, driver seat control unit and automatic back door control unit) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

POWER CONSUMPTION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

Sleep condition

CAN sleep condition	BCM sleep condition
- Receiving the sleep-ready signal (ready) from all units - Ignition switch: OFF - Vehicle security system: Not operation - Warning chime: Not operation - Intelligent Key system buzzer: Not operation - Trunk room lamp switch status: No change - Stop lamp switch: OFF - Key slot (card switch) status: No change - Turn signal indicator lamp: Not operation - Exterior lamp: OFF - Door lock status: No change - CONSULT-III communication status: Not communication - Meter display signal: Non-transmission - Door switch status: No change - Rear window defogger: OFF	- Interior room lamp battery saver: Time out - Push-button ignition switch illumination: OFF - Nissan Vehicle Immobilizer System (NVIS) - NATS: Not operation - Remote keyless entry receiver communication status: No communication - ACC indicator lamp: Not operation - ON indicator lamp: Not operation

Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when the any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

Wake-up condition


BCM wake-up condition	CAN wake-up condition
- Trunk lid opener switch: OFF → ON - Remote keyless entry receiver: Receiving - Door lock and unlock switch: NEUTRAL → LOCK, NEUTRAL → UNLOCK - Front door lock assembly driver side (unlock sensor): OFF → ON, ON → OFF	- Receiving the sleep-ready signal (Not-ready) from any units - Key slot (key switch): OFF → ON, ON → OFF - Push-button ignition switch (push switch): OFF → ON - Hazard switch: OFF → ON - PASSING switch: OFF → ON, ON → OFF - TAIL LAMP switch: OFF → ON - Driver door switch: OFF → ON, ON → OFF - Passenger door switch: OFF → ON, ON → OFF - Rear RH door switch: OFF → ON, ON → OFF - Rear LH door switch: OFF → ON, ON → OFF - Trunk room lamp switch: OFF → ON, ON → OFF - Driver door request switch: OFF → ON - Passenger door request switch: OFF → ON - Trunk lid request switch: OFF → ON - Stop lamp switch: ON

POWER CONSUMPTION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

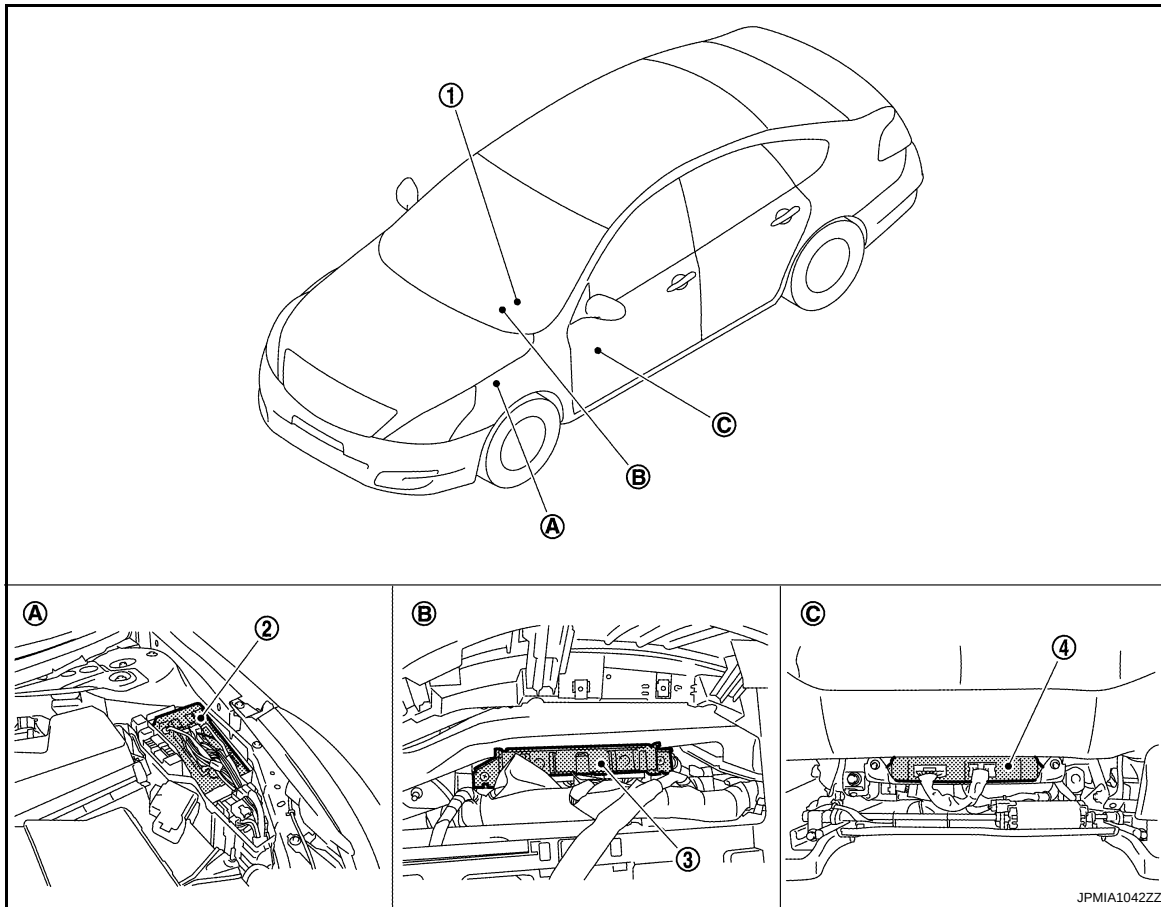INFOID:000000003809593



1. Combination meter

4. Driver seat control unit

A. Engine room (LH)

2. IPDM E/R

B. Behind of combination meter

3. BCM

C. Backside of the seat cushion (driver seat)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003809594

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	- Read and save the vehicle specification. - Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
- Intelligent Key system - Engine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
—	RETAINED PWR*		×	
Signal buffer system	SIGNAL BUFFER		×	×
—	TPMS (AIR PRESSURE MONITOR)*	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odo/Trip Meter
- Vehicle Condition (BCM detected condition)

CONSULT screen terms	Description
SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK".)
SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
LOCK>ACC	While turning power supply position from "LOCK" to "ACC"
ACC>ON	While turning power supply position from "ACC" to "IGN"
RUN>ACC	While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
ACC>OFF	While turning power supply position from "ACC" to "OFF"
OFF>LOCK	While turning power supply position from "OFF" to "LOCK"
OFF>ACC	While turning power supply position from "OFF" to "ACC"
ON>CRANK	While turning power supply position from "IGN" to "CRANKING"
OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
LOCK	Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
OFF	Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
ACC	Power supply position is "ACC" (Ignition switch ACC)
ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)

IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

DOOR LOCK

DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)

INFOID:000000003897052

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor item	Description
DOOR LOCK-UNLOCK SET	Selective unlock function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.

DATA MONITOR

Monitor Item	Contents
REQ SW-DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW-AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW-BD/TR	Indicates [ON/OFF] condition of trunk lid opener request switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	NOTE: This item is displayed, but cannot be monitored.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock unlock switch.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock unlock switch.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from door key cylinder.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from door key cylinder.

ACTIVE TEST

Test item	Description
DOOR LOCK	This test is able to check door lock/unlock operation. • The all door lock actuators are locked when "ALL LCK" on CONSULT-III screen is touched. • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched. • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT- III screen is touched. • The door lock actuator (rear LH and RH) is unlocked when "OTR ULK" on CONSULT-III screen is touched.

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000003897058

Data monitor

Monitor Item	Description
REAR DEF SW	• Without AV control unit: Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch • With AV control unit: This is displayed even when it is not equipped
PUSH SW	Indicates [ON/OFF] condition of push switch

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation. Rear window defogger operates when "ON" on CONSULT-III screen is touched

BUZZER

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

BUZZER : CONSULT-III Function (BCM - BUZZER)

INFOID:000000003897064

CONSULT-III APPLICATION ITEMS

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

DATA MONITOR

Display item [Unit]	Description
PUSH SW [On/Off]	Status of push button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
VEH SPEED 1 [km/h]	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.
KEY SW-SLOT [On/Off]	Status of key slot judged by BCM.
TAIL LAMP SW [On/Off]	Status of each switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.

ACTIVE TEST


Display item [Unit]	Description
IGN KEY WARN ALM	The key warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).
RUN FLAT/T WARN BUZZER	This item is displayed, but not function.

INT LAMP

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000003897059

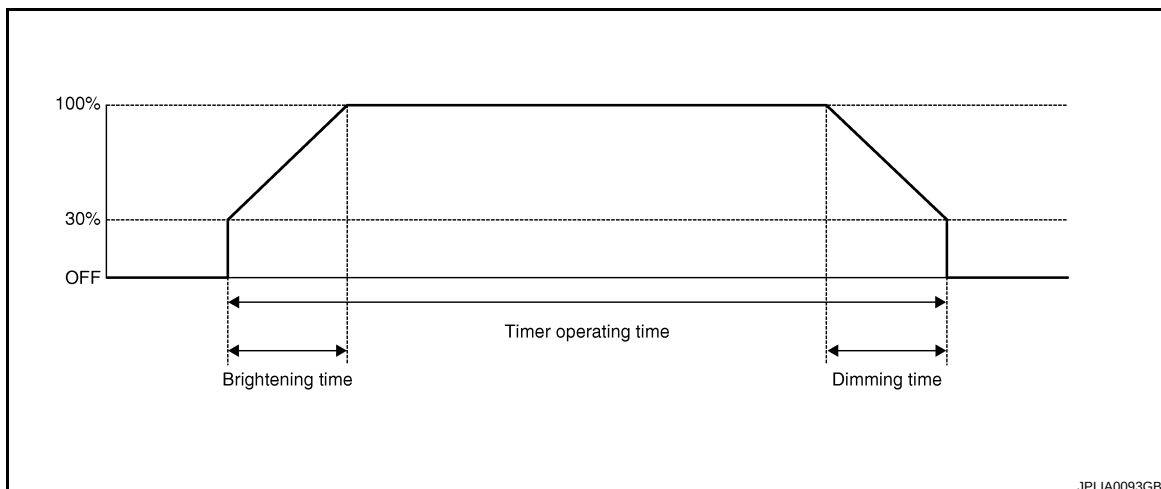WORK SUPPORT



DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Service item	Setting item	Setting	
SET I/L D-UNLCK INTCON	On*	With the interior room lamp timer function	
	Off	Without the interior room lamp timer function	
ROOM LAMP TIMER SET	MODE 2	7.5 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3*	15 sec.	
	MODE 4	30 sec.	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2	1 sec.	
	MODE 3	2 sec.	
	MODE 4*	3 sec.	
	MODE 5	0 sec.	
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.	
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.	

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch
KEY CYL LK-SW [On/Off]	NOTE: The item is indicated, but not monitored.
KEY CYL UN-SW [On/Off]	NOTE: The item is indicated, but not monitored.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
TRNK/HAT MNTR [On/Off]	The switch status input from trunk room lamp switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).
	Off	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.
STEP LAMP TEST	On	Outputs the step lamp control signal to turn step lamp ON.
	Off	Stops the step lamp control signal to turn step lamp OFF.
LUGGAGE LAMP TEST	On	Outputs the trunk room lamp control signal to turn trunk room lamp ON.
	Off	Stops the trunk room lamp control signal to turn trunk room lamp OFF.

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:000000003897061

WORK SUPPORT

Service item	Setting item	Setting
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
CUSTOM A/LIGHT SETTING	MODE 1*	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter with CAN communication
KEY SW-SLOT [On/Off]	Key switch status input from key slot
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	
RR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
OPTICAL SENSOR [V]	The value of exterior brightness voltage input from the optical sensor

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the position light request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Low	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog lights request signal transmission.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
RR FOG LAMP	On	- Outputs the voltage to turn the rear fog lamp ON. - Transmits the rear fog lamp status signal to the combination meter with CAN communication to turn the rear fog lamp indicator lamp ON.
	Off	- Stops the voltage to turn the rear fog lamp OFF. - Stops the rear fog lamp status signal transmission.
DAYTIME RUNNING LIGHT	On	NOTE: The item is indicated, but cannot be tested.
	Off	
CORNERING LAMP	RH	NOTE: The item is indicated, but cannot be tested.
	LH	
	Off	
ILL DIM SIGNAL	On	NOTE: The item is indicated, but cannot be tested.
	Off	

WIPER

WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:000000003897063

WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On*	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

*:Factory setting

NOTE:

When performed "RESET SETTING VALUE" on "Work Support (BCM - BCM)", set "WIPER SPEED SETTING" on "Work Support (BCM -WIPER)" to "On".

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [Off/On]	The switch status input from push-button ignition switch.
VEH SPEED 1 [km/h]	Displays the value of the vehicle speed signal received from combination meter with CAN communication.
FR WIPER HI [Off/On]	Status of each switch judged by BCM using the combination switch reading function
FR WIPER LOW [Off/On]	
FR WASHER SW [Off/On]	
FR WIPER INT [Off/On]	
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R with CAN communication.
INT VOLUME [1 - 7]	Status of each switch judged by BCM using the combination switch reading function
H/L WASH SW [Off/On]	Status of the switch input from headlamp washer switch

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
FRONT WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.
HEADLAMP WASHER	On	Transmits the headlamp washer request signal to IPDM E/R with CAN communication to operate the headlamp washer operation.

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:000000003897062

WORK SUPPORT

Service item	Setting item	Setting	
HAZARD ANSWER BACK	Lock Only*	With locking only	Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob.
	Unlk Only	With unlocking only	
	Lock/Unlk	With locking/unlocking	
	Off	Without the function	

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:000000003897053

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

WORK SUPPORT

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side and passenger side) mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk lid opener request switch can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
PANIC ALARM SET	NOTE: This item is displayed, but cannot be used.
PW DOWN SET	NOTE: This item is displayed, but cannot be used.
TRUNK OPEN DELAY	Trunk button pressing on Intelligent Key button can be selected as per the following in this mode. • MODE 1: Press and hold • MODE 2: Press twice • MODE 3: Press and hold, or press twice
LO-BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following in this mode. • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operational
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following in this mode. • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operational
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. • 70 msec • 100 msec • 200 msec

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor item	Description
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) in this mode.

SELF-DIAG RESULT

Refer to [BCS-74, "DTC Index"](#).

DATA MONITOR

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -BD/TR	Indicates [ON/OFF] condition of trunk lid opener request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.
CLUCH SW	NOTE: This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of the P position.
SFT PN/N SW	Indicates [ON/OFF] condition of the P or N position.
S/L -LOCK	Indicates [ON/OFF] condition of steering lock unit (LOCK).
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).
S/L RELAY -F/B	Indicates [ON/OFF] condition of steering lock relay.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of the P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of the P or N position.
SFT P -MET	Indicates [ON/OFF] condition of the P position.
SFT N -MET	Indicates [ON/OFF] condition of the N position.
ENGINE STATE	Indicates [STOP/STALL/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock unit (LOCK).
S/L UNLK-IPDM	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay.
VEH SPEED 1	Displays the vehicle speed signal received from combination meter by numerical value [Km/h].
VEH SPEED 2	Displays the vehicle speed signal received from ABS, VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	Indicates [ON/OFF] condition of trunk lid.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor Item	Condition
RKE-PANIC	NOTE: This item is displayed, but cannot be monitored.
RKE-P/W OPEN	NOTE: This item is displayed, but cannot be monitored.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical values start changing.
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated when "ON" on CONSULT-III screen is touched.
PW REMOTO DOWN SET	NOTE: This item is displayed, but cannot be used.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated when "ON" on CONSULT-III screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. - Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. - Key warning chime sounds when "KEY" on CONSULT-III screen is touched. - P position warning chime sounds when "KNOB" on CONSULT-III screen is touched.
INDICATOR	This test is able to check warning lamp operation. "KEY" Warning lamp illuminates when "RED ON" on CONSULT-III screen is touched. "KEY" Warning lamp blinks when "RED IND" on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated when "ON" on CONSULT-III screen is touched.
LCD	This test is able to check meter display information - Engine start information displays when "BP N" on CONSULT-III screen is touched. - Engine start information displays when "BP I" on CONSULT-III screen is touched. - Key ID warning displays when "ID NG" on CONSULT-III screen is touched. - Steering lock information displays when "ROTAT" on CONSULT-III screen is touched. - P position warning displays when "SFT P" on CONSULT-III screen is touched. - Intelligent Key insert information displays when "INSRT" on CONSULT-III screen is touched. - Intelligent Key low battery warning displays when "BATT" on CONSULT-III screen is touched. - Take away warning displays when "OUTKEY" on CONSULT-III screen is touched. - OFF position warning displays when "LK WN" on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT-III screen is touched.
FLASHER	This test is able to check security hazard lamp operation. The hazard lamps will be activated when "RH" or "LH" on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. The horn will be activated when "ON" on CONSULT-III screen is touched.
P RANGE	This test is able to check control device power supply Control device power is supplied when "ON" on CONSULT-III screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. ACC indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. ON indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Test item	Description
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination illuminates when "ON" on CONSULT-III screen is touched.
TRUNK/BACK DOOR	This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT-III screen is touched.

COMB SW

COMB SW : CONSULT-III Function (BCM - COMB SW)

INFOID:000000003809604

DATA MONITOR

Monitor item [UNIT]	Description
FR WIPER HI [Off/On]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER LOW [Off/On]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function.
FR WASHER SW [Off/On]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER INT [Off/On]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function.
TURN SIGNAL R [Off/On]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function.
TURN SIGNAL L [Off/On]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function.
TAIL LAMP SW [Off/On]	Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function.
HI BEAM SW [Off/On]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 1 [Off/On]	Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 2 [Off/On]	Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function.
PASSING SW [Off/On]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function.
AUTO LIGHT SW [Off/On]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function.
FR FOG SW [Off/On]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function.
RR FOG SW [Off/On]	Displays the status of the RR FOG switch in combination switch judged by BCM with the combination switch reading function.

BCM

BCM : CONSULT-III Function (BCM - BCM)

INFOID:000000003809605

WORK SUPPORT

Item	Description
RESET SETTING VALUE	Return a value set with Work Support of each system to a default value in factory shipment.

NOTE:

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

When performed "RESET SETTING VALUE" on "Work Support (BCM - BCM)", set "WIPER SPEED SETTING" on "Work Support (BCM - WIPER)" to "On".

IMMU

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000003897057

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

Monitor item	Content
CONFIRM ID ALL	Indicates [YET] at all time. Switches to [DONE] when a registered Intelligent Key is inserted into the key slot.
CONFIRM ID4	
CONFIRM ID3	
CONFIRM ID2	
CONFIRM ID1	
TP 4	Indicates the number of ID which has been registered.
TP 3	
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen touched.

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:000000003897060

WORK SUPPORT

BCS

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	On*	With the interior room lamp battery saver function	
	Off	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

*: Factory setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch
KEY CYL LK-SW [On/Off]	NOTE: The item is indicated, but not monitored.
KEY CYL UN-SW [On/Off]	NOTE: The item is indicated, but not monitored.
TRNK/HAT MNTR [On/Off]	The switch status input from trunk room lamp switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamp ON.*

*: Each lamp switch is in ON position.

TRUNK

TRUNK : CONSULT-III Function (BCM - TRUNK)

INFOID:000000003897054

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor Item	Contents
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
UNLK SEN -DR	NOTE: This item is displayed, but cannot be monitored.
VEH SPEED 1	Indicates [km/h] condition of vehicle speed signal from combination meter.
KEY CYL SW-TR	NOTE: This item is displayed, but cannot be monitored.
TR CANCEL SW	NOTE: This item is displayed, but cannot be monitored.
TR/BD OPEN SW	Indicates [ON/OFF] condition of trunk lid opener switch.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation.

THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT)

INFOID:000000003897056

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This is displayed even when it is not equipped.
REQ SW -RL	NOTE: This is displayed even when it is not equipped.
REQ SW -BD/TR	Indicates [ON/OFF] condition of trunk lid opener request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	NOTE: This is displayed even when it is not equipped.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitored Item	Description
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch.
KEY CYL LK-SW	NOTE: This is displayed even when it is not equipped.
KEY CYL UN-SW	NOTE: This is displayed even when it is not equipped.
KEY CYL SW-TR	NOTE: This is displayed even when it is not equipped.
TR/BD OPEN SW	Indicates [ON/OFF] condition of trunk lid opener switch.
TRNK/HAT MNTR	Indicates [ON/OFF] condition of trunk room lamp switch.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	Indicates [ON/OFF] condition of TRUNK LID OPEN signal from Intelligent Key.

WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
HEADLAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check vehicle security hazard lamp operation. The hazard lamps will be activated after "ON" on CONSULT-III screen is touched.

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)

INFOID:000000003809611

DATA MONITOR

Monitor item [UNIT]	Description
PUSH SW [Off/On]	Displays the status of the push-button ignition switch (push switch) judged by BCM.

ACTIVE TEST

Test item	Operation	Description
OIL PRESSURE SW	Off	OFF
	On	BCM transmits the oil pressure switch signal to the combination meter via CAN communication, which illuminates the oil pressure warning lamp in the combination meter.

U1000 CAN COMM CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000003809614

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-22, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000003809615

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:0000000003809616

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is "U1000: CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-35, "Intermittent Incident"](#).

BCS

U1010 CONTROL UNIT (CAN)

< COMPONENT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000003809617

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:0000000003809618

1.REPLACE BCM

When DTC "U1010: CONTROL UNIT (CAN)" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

U0415 VEHICLE SPEED SIG

< COMPONENT DIAGNOSIS >

U0415 VEHICLE SPEED SIG

Description

INFOID:000000003809619

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003809620

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Probable cause
U0415	VEHICLE SPEED SIG	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	• ABS actuator and electric unit (control unit) • BCM

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 2 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

- YES >> Refer to [BCS-35, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003809621

1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS

Perform "Self-Diagnostic Result" of ABS actuator and electric unit (control unit) with CONSULT-III. Refer to [BRC-13, "CONSULT-III Function"](#) (ABS) or [BRC-80, "CONSULT-III Function"](#) (VDC/TCS/ABS).

Is any DTC detected?

- YES >> Repair or replace the malfunctioning part.
NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

BCS

B2562 LOW VOLTAGE

< COMPONENT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000003809622

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
B2562	LOW VOLTAGE	When the power supply voltage to BCM remains less than 8.8 V for 1.5 seconds or more	Harness or connector (power supply circuit)

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 1.5 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

- YES >> Refer to [BCS-36, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003809623

1. CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [BCS-37, "Diagnosis Procedure"](#).

Is the circuit normal?

- YES >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).
NO >> Repair the malfunctioning part.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000003809624

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	I
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

COMBINATION SWITCH INPUT CIRCUIT

< COMPONENT DIAGNOSIS >

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:000000003809625

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M122	107	M103	11	Existed
INPUT 2		109		9	
INPUT 3		88		7	
INPUT 4		108		10	
INPUT 5		87		13	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM			Continuity
	Connector	Terminal		
INPUT 1	M122	107	Ground	Not existed
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK BCM OUTPUT VOLTAGE

1. Connect the BCM connector.
2. Check voltage between BCM harness connector and ground.

System	Terminals			Voltage (Approx.)
	(+)		(-)	
	BCM		Ground	
	Connector	Terminal		
INPUT 1	M122	107		Refer to BCS-42, "Reference Value" .
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Is the measurement value normal?

YES >> GO TO 4.

NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

COMBINATION SWITCH INPUT CIRCUIT

< COMPONENT DIAGNOSIS >

4.CHECK BCM INPUT SIGNAL

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

System	Terminals		Voltage (Approx.)	
	(+)	(-)		
	BCM			
	Connector	Terminal		
INPUT 1	M122	107	Ground	Refer to BCS-42, "Reference Value" .
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Is the measurement value normal when any of the switches is turned ON?

- YES >> Replace BCM. Refer to [BCS-78, "Exploded View"](#)
NO >> Replace the combination switch.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< COMPONENT DIAGNOSIS >

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:000000003809626

1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.

NOTE:

BCM connector disconnects M123 only.

3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M123	143	M103	12	Existed
OUTPUT 2		144		14	
OUTPUT 3		145		5	
OUTPUT 4		146		2	
OUTPUT 5		142		8	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM			Continuity
	Connector	Terminal		
OUTPUT 1	M123	143	Ground	Not existed
OUTPUT 2		144		
OUTPUT 3		145		
OUTPUT 4		146		
OUTPUT 5		142		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK COMBINATION SWITCH INTERNAL CIRCUIT

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.

NOTE:

Check that the combination switch outputs a signal from combination switch input system.

COMBINATION SWITCH OUTPUT CIRCUIT

< COMPONENT DIAGNOSIS >

System	Terminals		Value (Approx.)	
	(+)	(-)		
	Combination switch			
	Connector	Terminal		
OUTPUT 1	M103	12	Ground	
OUTPUT 2		14		
OUTPUT 3		5		
OUTPUT 4		2		
OUTPUT 5		8		

1.4 V

Is the measurement value normal when any of the switches is turned ON?

- YES >> Replace BCM. Refer to [BCS-78, "Exploded View"](#)
 NO >> Replace the combination switch.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000003809627

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	Rear LH door closed	Off	A
	Rear LH door opened	On	
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	NOTE: The item is indicated, but not monitored.	Off	E
KEY CYL UN-SW	NOTE: The item is indicated, but not monitored.	Off	F
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	G
HAZARD SW	Hazard switch is OFF	Off	H
	Hazard switch is ON	On	
REAR DEF SW NOTE: At model with BOSE audio system this item is indicated, but is not monitored.	Rear window defogger switch is OFF	Off	I
	Rear window defogger switch is ON	On	
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off	J
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	K
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	L
	Trunk lid opened	On	
RKE-LOCK	LOCK button of the key is not pressed	Off	M
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	N
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of the key is not pressed	Off	O
	TRUNK OPEN button of the key is pressed	On	
RKE-PANIC	NOTE: The item is indicated, but not monitored.	Off	BCS
RKE-P/W OPEN	NOTE: The item is indicated, but not monitored.	Off	P
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off	Q
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	R
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	S
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	T
	Passenger door request switch is pressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is not depressed	On
	The brake pedal is depressed	Off
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is locked	Off
	Steering is unlocked	On
S/L -UNLOCK	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is locked	Off
	Steering is unlocked	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Monitor Item	Condition	Value/Status	
S/L UNLK-IPDM	Steering is unlocked	Off	A
	Steering is locked	On	
S/L RELAY-REQ	Ignition switch in OFF or ACC position	Off	B
	Ignition switch in ON position	On	
VEH SPEED 1	While driving	Equivalent to speedometer reading	C
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	D
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	E
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Ignition switch in ACC or ON position	Reset	F
	Ignition switch in OFF position	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	G
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	H
KEY SW -SLOT	The key is not inserted into key slot	Off	
	The key is inserted into key slot	On	I
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	J
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done	K
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done	L
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done	BCS
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done	N
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done	O
TP 4	The ID of fourth key is not registered to BCM	Yet	
	The ID of fourth key is registered to BCM	Done	P
TP 3	The ID of third key is not registered to BCM	Yet	
	The ID of third key is registered to BCM	Done	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done

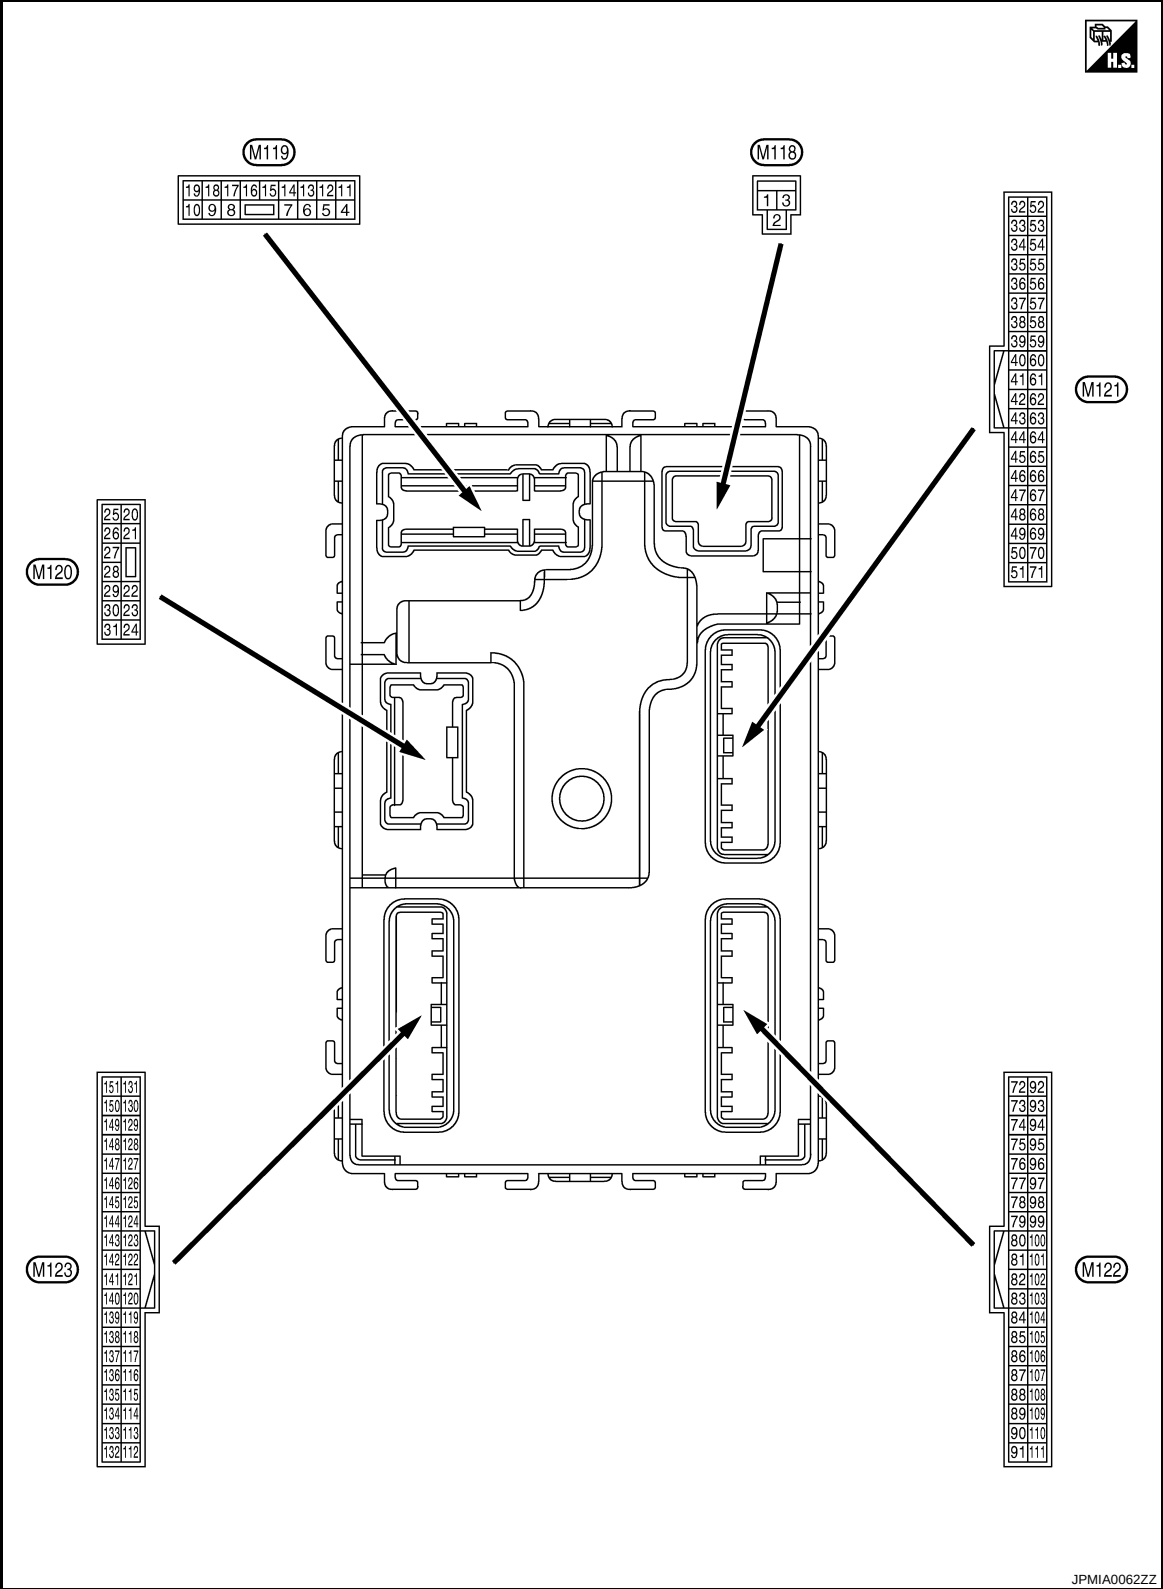
TERMINAL LAYOUT



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

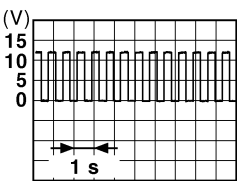PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (G/Y)	Ground	Passenger door UNLOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (G/Y)	Ground	Rear RH door and rear LH door UNLOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V
17 (G/B)	Ground	Turn signal RH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V

A

B

C

D

E

F

G

H

I

J

K

L

BCS

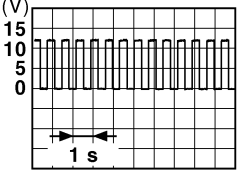
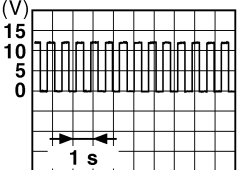
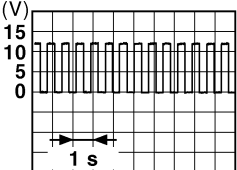
N

O

P







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
18 (G/Y)	Ground	Turn signal LH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 V
20 (G/B)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
23 (R)	Ground	Trunk lid opening	Output	Trunk lid	OPEN (Trunk lid opener actuator is activated)	Battery voltage
					Other than OPEN (Trunk lid opener actuator is not activated)	0 V
24 (G)	Ground	Rear fog lamp	Output	Rear fog lamp	OFF	0 V
					ON	Battery voltage
25 (G/Y)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
30 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	OFF	0 V
					ON	Battery voltage

BCM (BODY CONTROL MODULE)
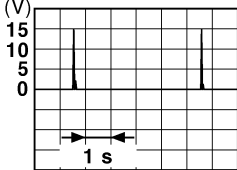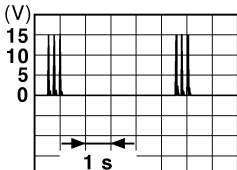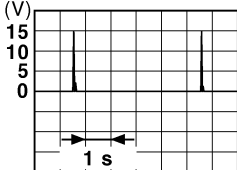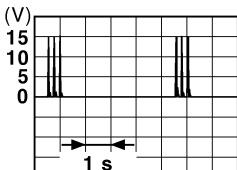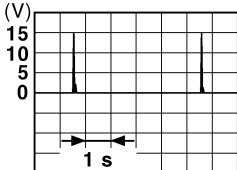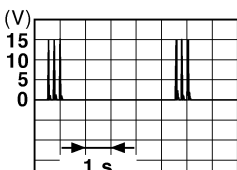
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
34 (B)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB
35 (W)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB
38 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid opener request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB

A

B

C

D

E

F

G

H

I

J

K

L

BCS

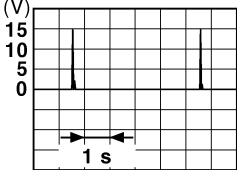
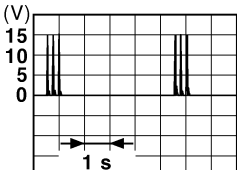
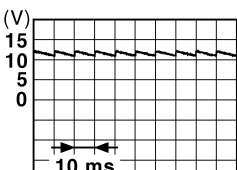
N

O

P






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
39 (BR/W)	Ground	Rear bumper antenna (+)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When Intelligent Key is not in the antenna detection area	When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
47 (BR/W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
50 (W)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (When trunk lid closes)	 JPMIA0011GB 11.8 V
					ON (When trunk lid opens)	0 V
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0.3 V
				Ignition switch OFF		0 V
61 (G/R)	Ground	Trunk lid request switch	Input	Trunk lid request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMIA0016GB 1.0 V
64 (GR)	Ground	Request switch buzzer	Output	Request switch buzzer	Sounding	0 V
					Not sounding	Battery voltage

BCM (BODY CONTROL MODULE)
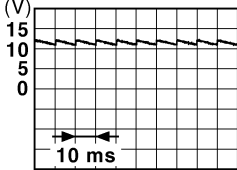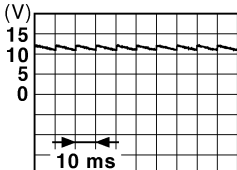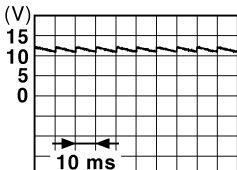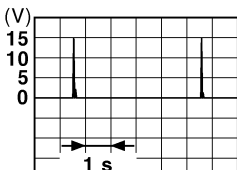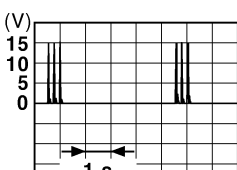
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
67 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
					Not pressed	 JPMIA0011GB 11.8 V
68 (R/W)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	 JPMIA0011GB 11.8 V
					ON (When rear RH door opens)	0 V
69 (R/B)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	 JPMIA0011GB 11.8 V
					ON (When rear LH door opens)	0 V
72 (B/R)	Ground	Room antenna 2 (-) (center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB

A

B

C

D

E

F

G

H

I

J

K

L

BCS

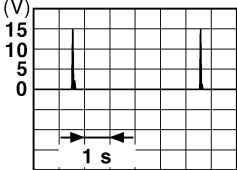
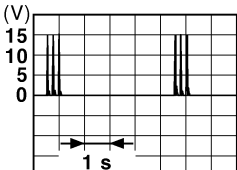
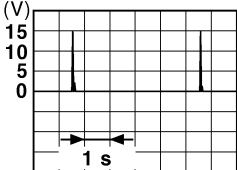
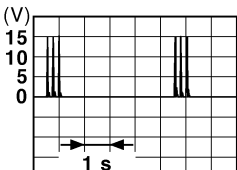
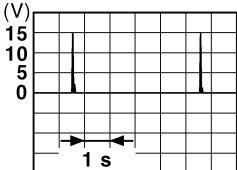
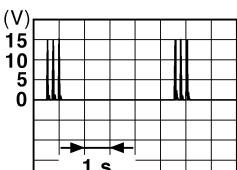
N

O

P







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
73 (W/R)	Ground	Room antenna 2 (+) (center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB
74 (B/Y)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB
75 (LG)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB

BCM (BODY CONTROL MODULE)
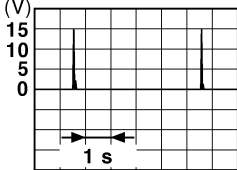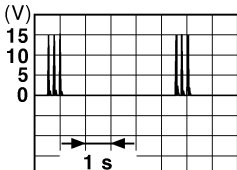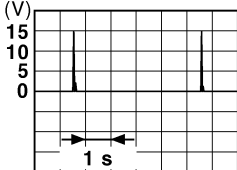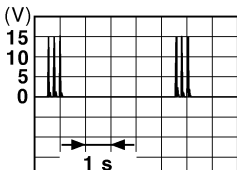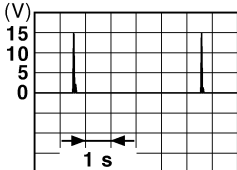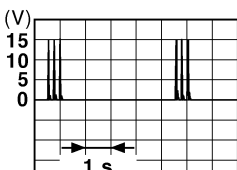
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB
77 (P)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detec- tion area	 JMKIA0063GB
78 (R)	Ground	Room antenna 1 (-) (instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB

A

B

C

D

E

F

G

H

I

J

K

L

BCS

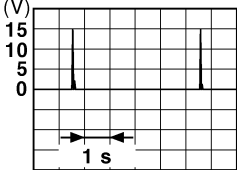
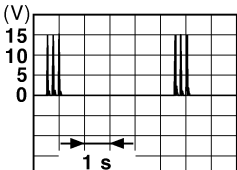
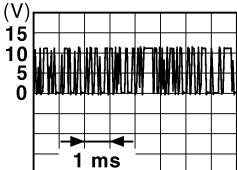
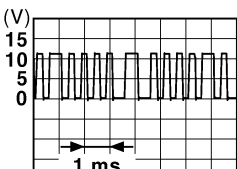
N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
79 (G)	Ground	Room antenna 1 (+) (instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB
80 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R/B)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
83 (L/O)	Ground	Remote keyless en- try receiver commu- nication	Input/ Output		During waiting	 JMKIA0064GB
					When operating either button on the key	 JMKIA0065GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
87 (R/Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4 V
					Front fog lamp switch ON (Wiper intermittent dial 4)	 1.3 V
					Rear fog lamp switch ON (Wiper intermittent dial 4)	 1.2 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 1.3 V

BCS

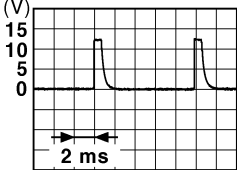
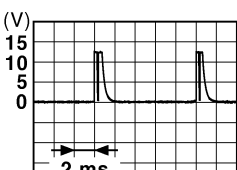
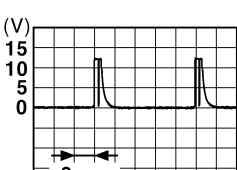
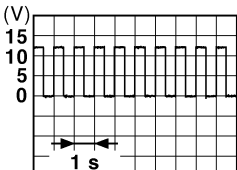
N

O

P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
88 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 JPMIA0041GB 1.4 V
					Lighting switch HI (Wiper intermittent dial 4)	 JPMIA0036GB 1.3 V
					Lighting switch 2ND (Wiper intermittent dial 4)	 JPMIA0037GB 1.3 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3	 JPMIA0040GB 1.3 V
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/ Output	—	—	—
91 (L)	Ground	CAN-H	Input/ Output	—	—	—
92 (R/L)	Ground	Key slot illumination	Output	Key slot illumination	OFF	Battery voltage
					Blinking	 JPMIA0015GB 6.5 V
					ON	0 V

BCM (BODY CONTROL MODULE)
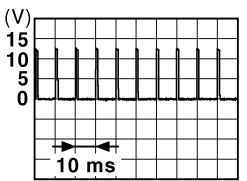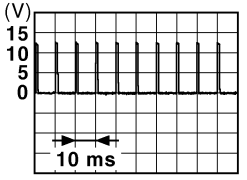
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
93 (Y)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y/R)	Ground	Control device (detection switch) power supply	Output	—		Battery voltage
97 (L/O)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (G/R)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (G/B)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (P/L)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMA0016GB 1.0 V
101 (B/W)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMA0016GB 1.0 V
102 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L/R)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (G/Y)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

A

B

C

D

E

F

G

H

I

J

K

L

BCS

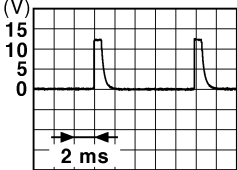
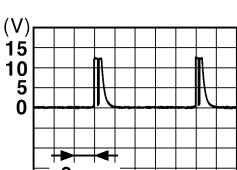
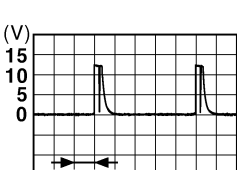
N

O

P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (R/W)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	 JPMIA0041GB 1.4 V
					 JPMIA0037GB 1.3 V
					 JPMIA0036GB 1.3 V
					 JPMIA0038GB 1.3 V
					 JPMIA0039GB 1.3 V

BCM (BODY CONTROL MODULE)
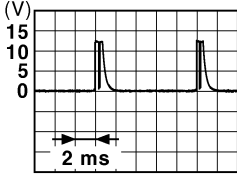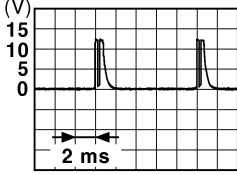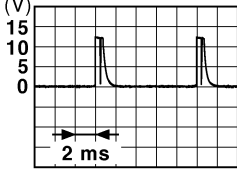
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
108 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	 1.3 V
					Any of the conditions be- low with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	 1.3 V

BCS

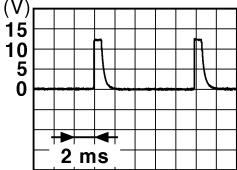
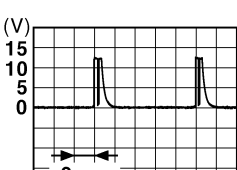
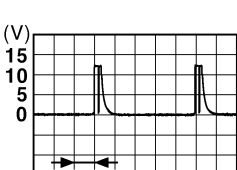
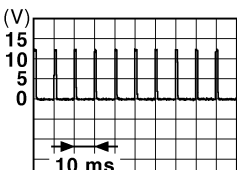
N

O

P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
109 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 JPMIA0041GB 1.4 V
					Lighting switch PASS	 JPMIA0037GB 1.3 V
					Lighting switch 2ND	 JPMIA0036GB 1.3 V
					Front wiper switch INT	 JPMIA0038GB 1.3 V
					Front wiper switch HI	 JPMIA0040GB 1.3 V
110 (G/O)	Ground	Hazard switch	Input	Hazard switch	ON	0 V
					OFF	 JPMIA0012GB 1.1 V

BCM (BODY CONTROL MODULE)
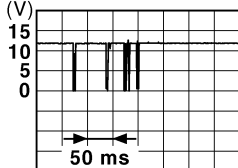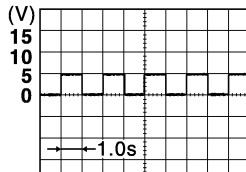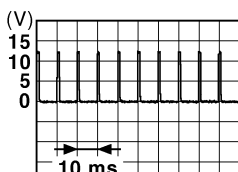
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
111 (L/Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	Battery voltage
					15 seconds or later after UNLOCK	0 V
113 (P/B)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
115 (L)	Ground	Shock sensor	Input	Ignition switch	OFF	0 V
					ACC	5.0 V
					ON	 JPMIA1034GB
						2.5 V
116 (R/W)	Ground	Fuse check (Stop lamp switch)	Input	—		Battery voltage
118 (O/L)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119 (G/W)	Ground	Front door lock as- sembly driver side (unlock sensor)	Input	Driver door	LOCK status (unlock sen- sor switch OFF)	 JPMIA0012GB
					UNLOCK status (unlock sensor switch ON)	0 V
						1.1 V
121 (Y)	Ground	Key slot switch	Input	When the key is inserted into key slot	Battery voltage	
				When the key is not inserted into key slot	0 V	
122 (V/R)	Ground	ACC feedback	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
123 (G/W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

BCS

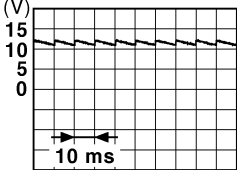
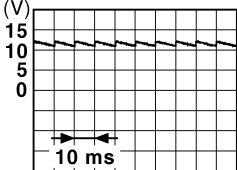
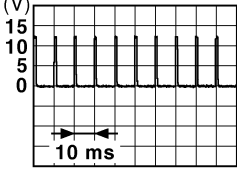
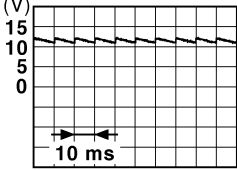
N

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
124 (R/B)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 JPMIA0011GB 11.8 V
					ON (When passenger door opens)	0 V
128 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	 JPMIA0011GB 11.8 V
					LOCK position	0 V
130* (GR/W)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 JPMIA0012GB 1.1 V
					Rear window defogger switch ON	0 V
131 (GR/R)	Ground	Door lock and unlock switch UN-LOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	 JPMIA0011GB 11.8 V
					UNLOCK position	0 V
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON	9.5 V
					OFF	0 V
134 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V/W)	Ground	Receiver and sensor power supply output	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
140 (R/G)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V

BCM (BODY CONTROL MODULE)

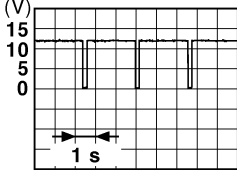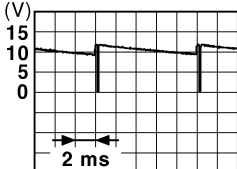
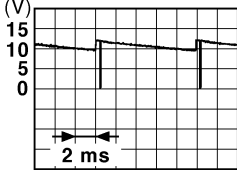
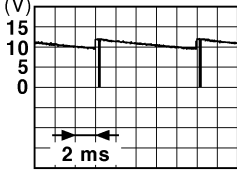
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
141 (L/O)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	 JPMIA0014GB 11.3 V
					OFF	Battery voltage
142 (LG/B)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V
					Lighting switch 1ST	 JPMIA0031GB 10.7 V
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	
143 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	 JPMIA0032GB 10.7 V
					Any of the conditions be- low with all switch OFF	
					• Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7	
144 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front washer switch ON (Wiper intermittent dial 4)	 JPMIA0033GB 10.7 V
					Any of the conditions be- low with all switch OFF	
					• Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	

A
B
C
D
E
F
G
H
I
J
K
L
BCS
N
O
P

BCM (BODY CONTROL MODULE)
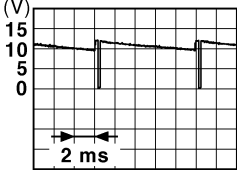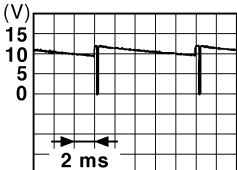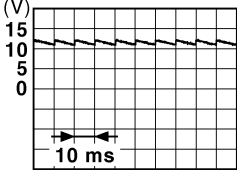
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
145 (LG/R)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V
					Front wiper switch INT	 10.7 V
					Front wiper switch LO	
					Lighting switch AUTO	
					Rear fog lamp switch ON	
146 (G/Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V
					Front fog lamp switch ON	 10.7 V
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (SB)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)	 11.8 V
					ON (When driver door opens)	0 V
151 (G/R)	Ground	Rear window defog- ger relay	Output	Rear window de- fogger	Active	0 V
					Not activated	Battery voltage

NOTE:

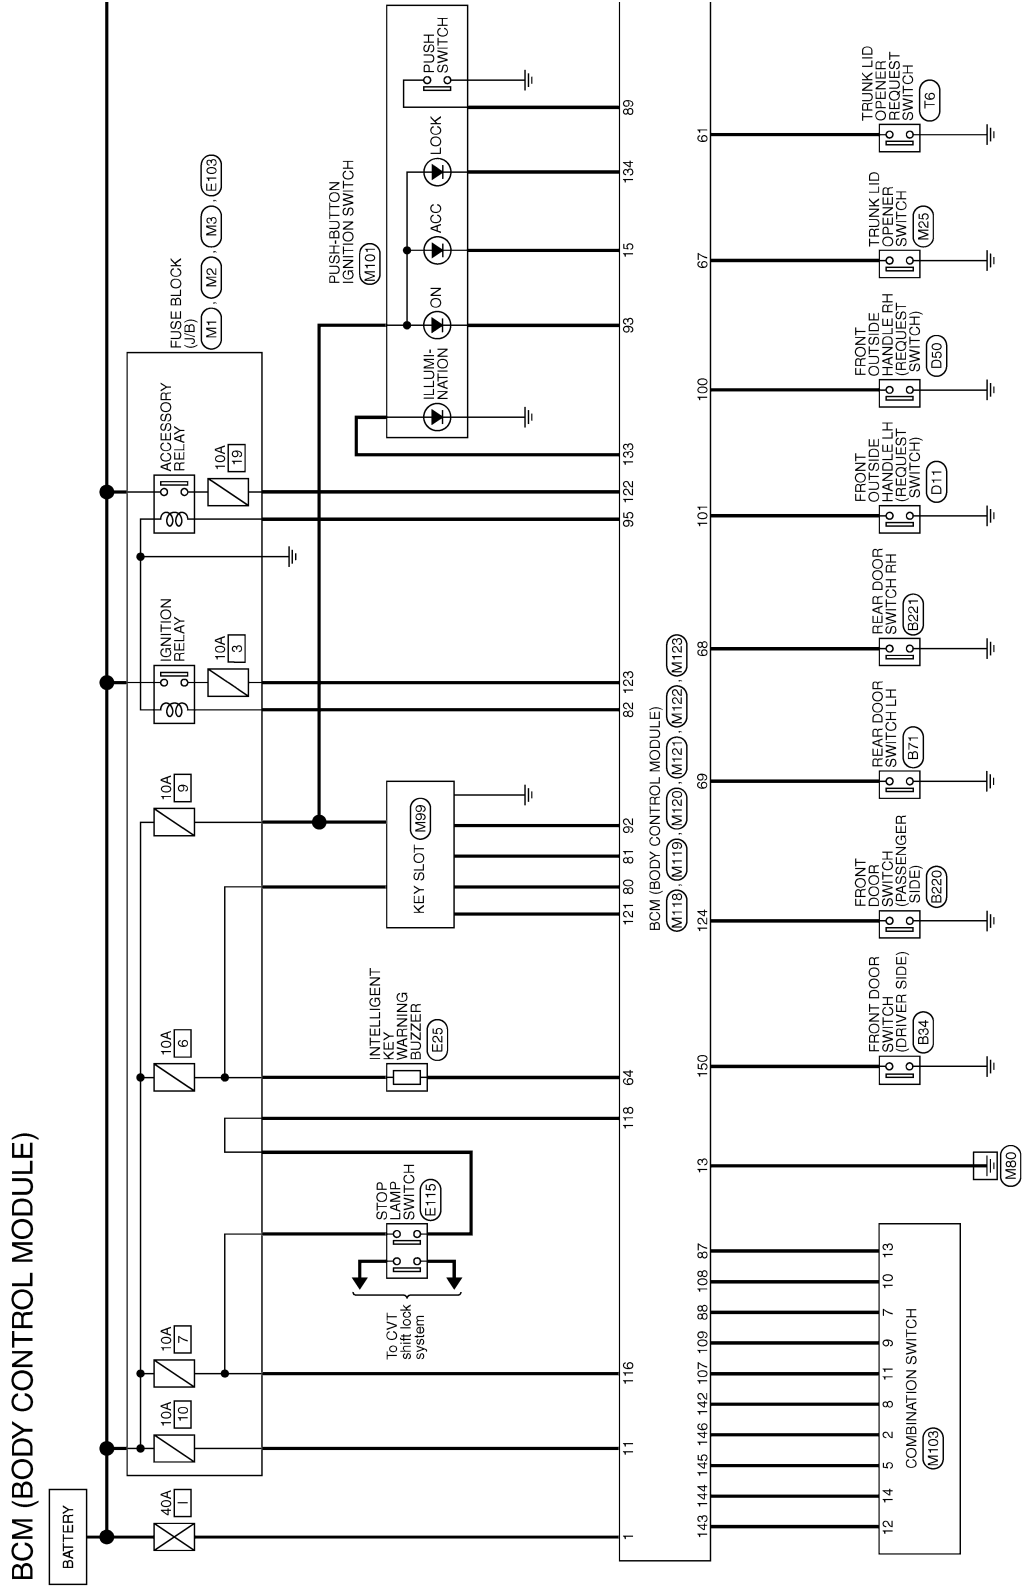
*: Without BOSE audio system

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram - BCM -

INFOID:000000003809628




2008/01/23

JCMWM1671G

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS
 
< ECU DIAGNOSIS >




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

- WV : With VDC
- OV : Without VDC
- PM : With automatic drive positioner
- SO : With power seat without automatic drive positioner
- BD : With BOSE system or base audio and display system
- SR : With sunroof
- FV : With front ventilation seat
- OF : Without front ventilation seat

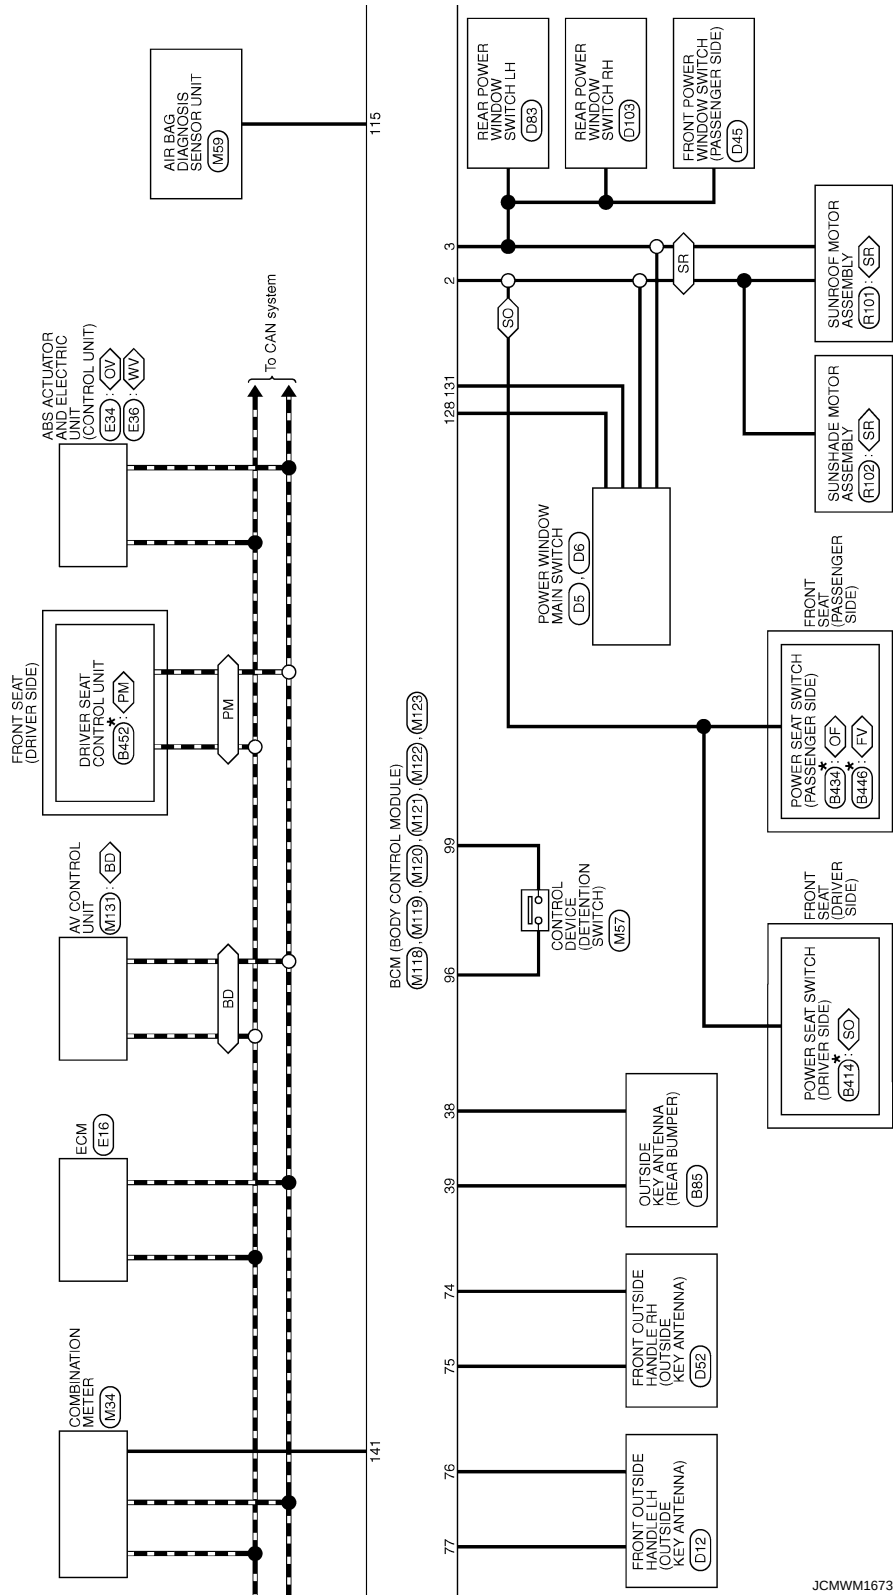★: This connector is not shown in "Harness Layout".




A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

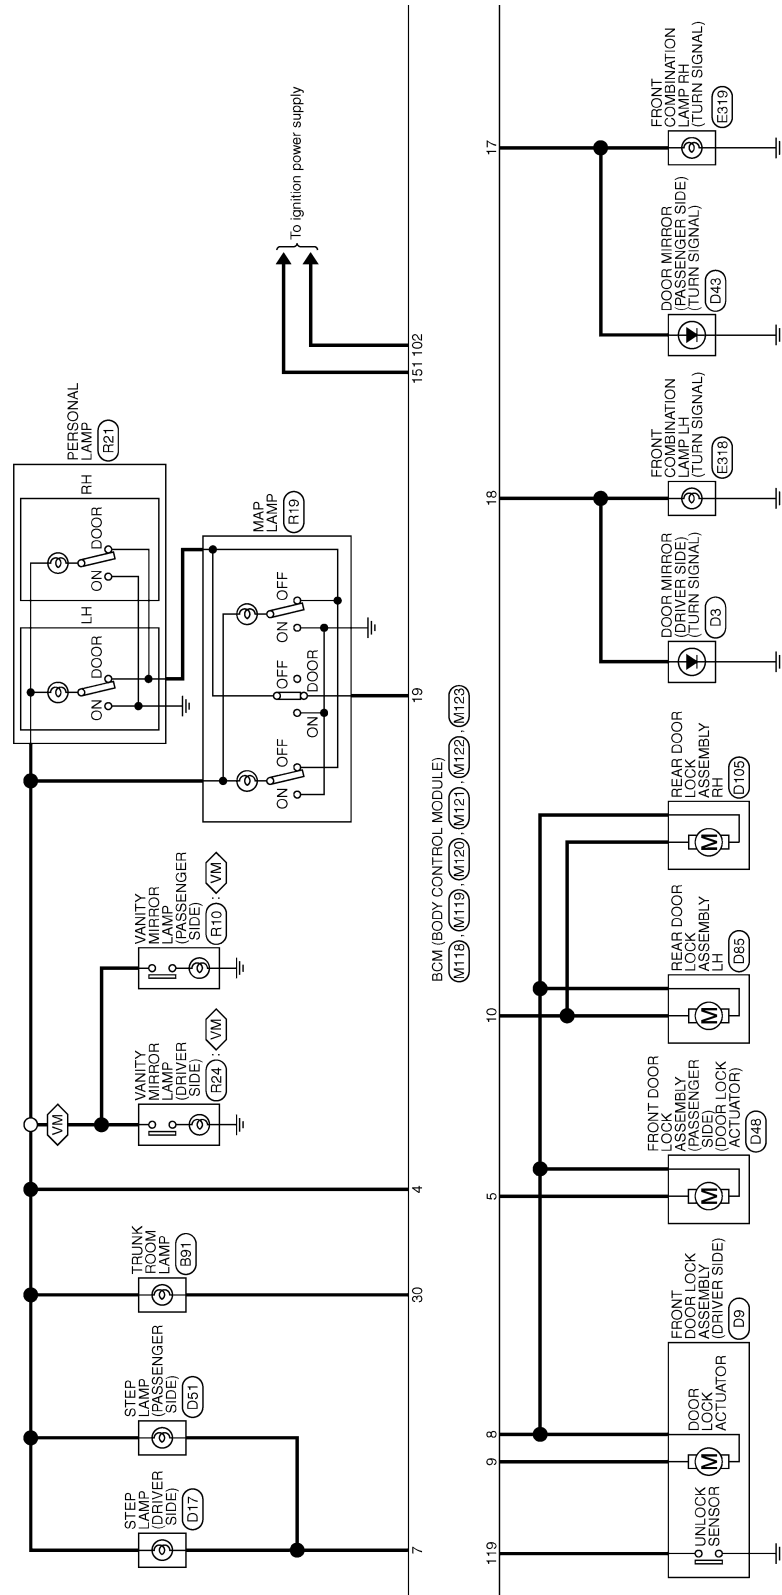◁ VM ▷ : With vanity mirror lamp




JCMWM1674G

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

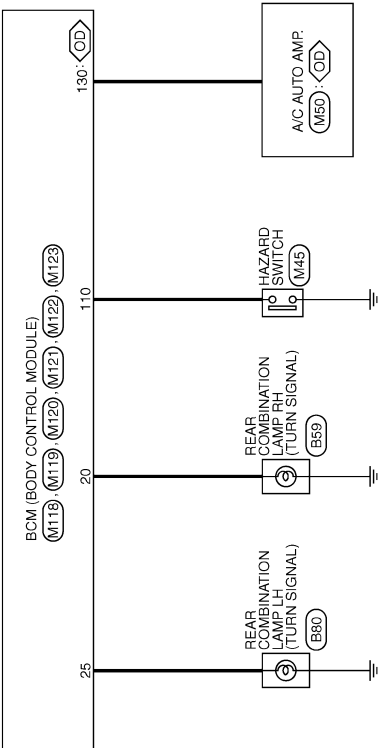⬡ : Without BOSE system or base audio and display system



JCMWWM1675G1


BCS

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

 


Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)
2	R/Y	POWER WINDOW POWER SUPPLY (BAT)
3	L/W	POWER WINDOW POWER SUPPLY (IGN)


Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
34	B	TRUNK ANT I B
35	W	TRUNK ANT I A
38	L/O	RR BUMPER ANT B
39	BR/W	RR BUMPER ANT A
47	BR/W	IGN RELAY IPDM E/R CONT
50	W	TRUNK SW
52	R	IGN RELAY IPDM E/R CONT
61	G/R	TRUNK REQUEST SW
64	GR	REQUEST SW BUZZER
67	L/R	INTERIOR TRUNK SW
68	R/W	REAR RH DOOR SW

Terminal No.	Color of Wire	Signal Name [Specification]
20	G/B	TURN SIGNAL RH (REAR)
23	R	TRUNK OPEN OUTPUT
24	G	REAR FOG LAMP OUTPUT
25	G/Y	TURN SIGNAL LH (REAR)
30	V/W	TRUNK LAMP OUTPUT

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
4	P/W	INTERIOR ROOM LAMP POWER SUPPLY
5	G/Y	PASSENGER DOOR UNLOCK OUTPUT
7	R/W	STEP LAMP OUTPUT
8	V	ALL DOOR LOCK OUTPUT
9	G	DRIVER DOOR UNLOCK OUTPUT
10	G/Y	REAR DOOR UNLOCK OUTPUT
11	Y/R	BAT (RUSE)
13	B	GND
15	Y	ACC IND
17	G/B	TURN SIGNAL RH (FRONT D/MIRROR)
18	G/Y	TURN SIGNAL LH (FRONT D/MIRROR)

Connector No.	M122
Connector Name	REAR LH DOOR SW

19	Y	ROOM LAMP TIMER CONTROL
----	---	-------------------------

JCMWM1676G

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
72	B/R	ROOM ANT2-
73	W/R	ROOM ANT2+
74	B/Y	PASSENGER DOOR ANT-
75	L/G	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	P	DRIVER DOOR ANT+
78	R	ROOM ANT1-
79	G	ROOM ANT1+
80	G/O	FOB READER CLOCK
81	O	FOB READER DATA
82	R/B	IGN RELAY (F/B) CONT

83	L/O	KEYLESS ENTRY RECEIVER SIGNAL
87	R/Y	COMBI SW INPUT 5
88	R/G	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	R/L	FOB SLOT ILLUMINATION
93	Y	ON IND
95	L	ACC RELAY CONT
96	Y/R	CONTROL DEVICE POWER SUPPLY
97	L/O	S/L CONDITION 1
98	G/R	S/L CONDITION 2
99	G/B	SHIFT P
100	P/L	PASSENGER DOOR REQUEST SW
101	B/W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L/R	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	G/Y	S/L POWER SUPPLY
107	R/W	COMBI SW INPUT 1
108	P/B	COMBI SW INPUT 4
109	R/B	COMBI SW INPUT 2
110	G/O	HAZARD SW
111	L/Y	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
113	P/B	OPTICAL SENSOR
115	L	SHOCK SENSOR SIGNAL
116	R/W	STOP L LOW SW
118	O/L	STOP L HIGH SW
119	G/W	DR DOOR UNLOCK SENSOR
121	Y	KEY SLOT SW
122	V/R	ACC P/B
123	G/W	IGN P/B
124	R/B	PASSENGER DOOR SW
128	GR	CENTRAL LOCK SW
130	GR/W	REAR DEFOGGER SW

131	GR/R	CENTRAL UNLOCK SW
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	R	LOCK LED
137	P	RECEIVER SENSOR GND
138	V/W	RECEIVER SENSOR POWER SUPPLY
140	R/G	SHIFT N/P
141	L/O	SECURITY INDICATOR OUTPUT
142	LG/B	COMBI SW OUTPUT 5
143	L/W	COMBI SW OUTPUT 1
144	G/B	COMBI SW OUTPUT 2
145	LG/R	COMBI SW OUTPUT 3
146	G/Y	COMBI SW OUTPUT 4
150	SB	DRIVER DOOR SW
151	G/R	REAR WINDOW DEFOGGER RELAY

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC is detected.

JCMWWM1677GI

INFOID:000000003809629

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled • Status 1 - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled • Ignition switch is in the ON position - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent - Starter motor relay control signal - Starter relay status signal (CAN)
B2609: S/L STATUS	- Inhibit engine cranking - Inhibit steering lock	When the following steering lock conditions agree - BCM steering lock control status - Steering lock condition No. 1 signal status - Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled - IGN relay (IPDM E/R) control signal: OFF (Battery voltage) - Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) - Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled - Power position changes to ACC - Receives engine status signal (CAN)
B2612: S/L STATUS	- Inhibit engine cranking - Inhibit steering lock	When any of the following conditions is fulfilled - Steering lock unit status signal (CAN) is received normally - The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RES	Inhibit engine cranking	When any of the following conditions is fulfilled - Power position changes to ACC - Receives engine status signal (CAN)
B26E9: S/L STATUS	- Inhibit engine cranking - Inhibit steering lock	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions is fulfilled - Steering condition No. 1 signal: LOCK (0 V) - Steering condition No. 2 signal: LOCK (Battery voltage)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

DTC Inspection Priority Chart

INFOID:000000003809630

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	- U1000: CAN COMM CIRCUIT - U1010: CONTROL UNIT (CAN)
3	- B2190: NATS ANTENNA AMP - B2191: DIFFERENCE OF KEY - B2192: ID DISCORD BCM-ECM - B2193: CHAIN OF BCM-ECM

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Priority	DTC
4	• B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RES • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • U0415: VEHICLE SPEED SIG
5	• B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:0000000003809631

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to [BCS-16, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warn- ing lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-33
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-34
U0415: VEHICLE SPEED SIG	—	—	—	BCS-35
B2013: ID DISCORD BCM-S/L	×	×	—	SEC-46
B2014: CHAIN OF S/L-BCM	×	×	—	SEC-47
B2190: NATS ANTENNA AMP	×	—	—	SEC-39
B2191: DIFFERENCE OF KEY	×	—	—	SEC-42

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warn- ing lamp ON	Reference page	
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-43	A
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-45	B
B2553: IGNITION RELAY	—	×	—	PCS-49	
B2555: STOP LAMP	—	×	—	SEC-50	
B2556: PUSH-BTN IGN SW	—	×	×	SEC-52	C
B2557: VEHICLE SPEED	×	×	×	SEC-54	
B2560: STARTER CONT RELAY	×	×	×	SEC-55	
B2562: LOW VOLTAGE	—	×	—	BCS-36	D
B2601: SHIFT POSITION	×	×	×	SEC-56	
B2602: SHIFT POSITION	×	×	×	SEC-59	E
B2603: SHIFT POSI STATUS	×	×	×	SEC-61	
B2604: PNP SW	×	×	×	SEC-64	
B2605: PNP SW	×	×	×	SEC-67	F
B2606: S/L RELAY	×	×	×	SEC-69	
B2607: S/L RELAY	×	×	×	SEC-70	G
B2608: STARTER RELAY	×	×	×	SEC-72	
B2609: S/L STATUS	×	×	×	SEC-74	
B260A: IGNITION RELAY	×	×	×	PCS-51	H
B260B: STEERING LOCK UNIT	—	×	×	SEC-78	
B260C: STEERING LOCK UNIT	—	×	×	SEC-79	I
B260D: STEERING LOCK UNIT	—	×	×	SEC-80	
B260F: ENG STATE SIG LOST	×	×	×	SEC-81	
B2612: S/L STATUS	×	×	×	SEC-85	J
B2614: ACC RELAY CIRC	—	×	×	PCS-53	
B2615: BLOWER RELAY CIRC	—	×	×	PCS-55	
B2616: IGN RELAY CIRC	—	×	×	PCS-57	K
B2617: STARTER RELAY CIRC	×	×	×	SEC-89	
B2618: BCM	×	×	×	PCS-59	L
B2619: BCM	×	×	×	SEC-91	
B261A: PUSH-BTN IGN SW	—	×	×	SEC-92	
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-95	BCS
B2621: INSIDE ANTENNA	—	×	—	DLK-50	
B2622: INSIDE ANTENNA	—	×	—	DLK-52	N
B2623: INSIDE ANTENNA	—	×	—	DLK-54	
B26E1: ENG STATE NO RES	×	×	×	SEC-82	O
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	SEC-83	
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	SEC-84	P

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000003809632

1. Perform "Data Monitor" of CONSULT-III to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: ×

Malfunction combination	Data monitor item														
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW	FR FOG SW	RR FOG SW
A		×	×			×	×								
B	×			×						×		×			
C					×				×		×				
D					×			×					×		
E					×									×	×
F	×				×										
G			×		×										
H		×		×									×		×
I							×				×	×		×	
J						×		×	×	×					
K	All Items														
L	If only one item is detected or the item is not applicable to the combinations A to K														

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-38, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-40, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-78, "Exploded View" .
L	Combination switch	Replace the combination switch.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003809633

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

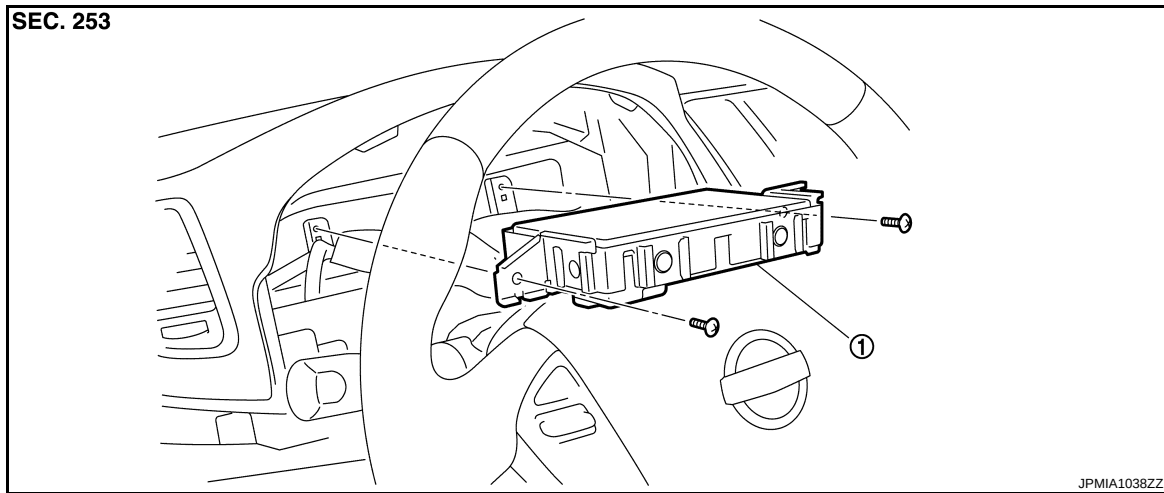
BCM (BODY CONTROL MODULE)

Exploded View

INFOID:000000003809634

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Description"](#).



1. BCM

Removal and Installation

INFOID:000000003809635

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Description"](#).

REMOVAL

1. Remove combination meter. Refer to [MWI-126, "Exploded View"](#).
2. Remove screws.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Be sure to perform "WRITE CONFIGURATION" when replacing BCM.
- Be sure to perform the system initialization (NATS) when replacing BCM. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Special Repair Requirement"](#).

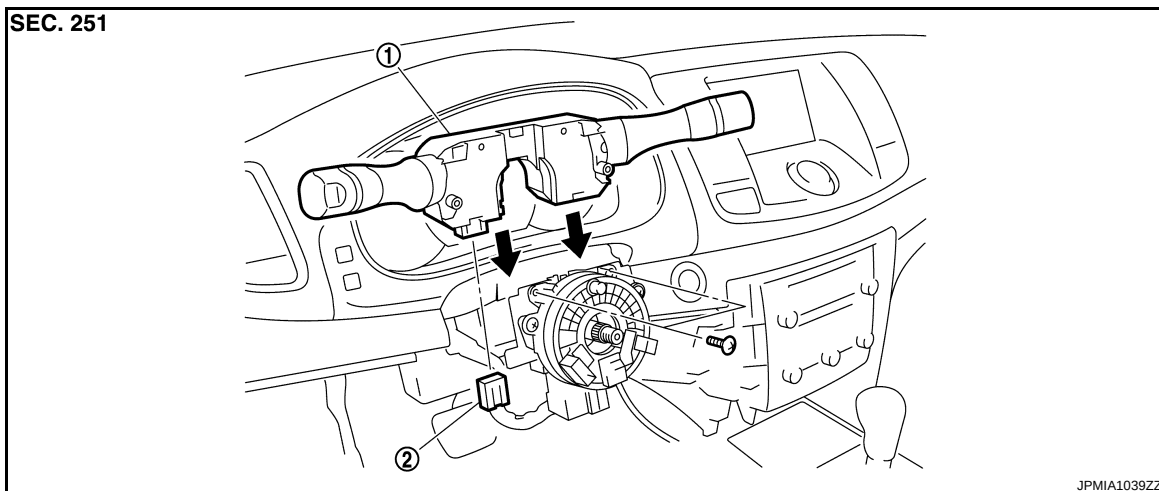
COMBINATION SWITCH

< ON-VEHICLE REPAIR >

COMBINATION SWITCH

Exploded View

INFOID:000000003809636



1. Combination switch

2. Combination switch connector

Removal and Installation

INFOID:000000003809637

REMOVAL

1. Remove steering column cover. Refer to [IP-11, "Exploded View"](#).
2. Remove screws.
3. Disconnect the connector.
4. Pull up the combination switch to remove it.

INSTALLATION

Install in the reverse order of removal.

BCS