

SECTION

BRC

BRAKE CONTROL SYSTEM

CONTENTS

ABS BASIC INSPECTION 6 DIAGNOSIS AND REPAIR WORK FLOW 6 Work Flow 6 Diagnostic Work Sheet 8 FUNCTION DIAGNOSIS 9 ABS 9 System Diagram 9 System Description 9 Component Parts Location 10 Component Description 10 EBD 11 System Diagram 11 System Description 11 Component Parts Location 12 Component Description 12 DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] 13 CONSULT-III Function 13 COMPONENT DIAGNOSIS 16 C1101, C1102, C1103, C1104 WHEEL SENSOR 16 Description 16 DTC Logic 16 Diagnosis Procedure 16 Component Inspection 18 C1105, C1106, C1107, C1108 WHEEL SENSOR 19 Description 19 DTC Logic 19 Diagnosis Procedure 19 Component Inspection 21	C1109 POWER AND GROUND SYSTEM 22 Description 22 DTC Logic 22 Diagnosis Procedure 22 C1110 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) 24 DTC Logic 24 Diagnosis Procedure 24 C1111 ABS MOTOR, MOTOR RELAY SYSTEM 25 Description 25 DTC Logic 25 Diagnosis Procedure 25 Component Inspection 26 C1115 WHEEL SENSOR 27 Description 27 DTC Logic 27 Diagnosis Procedure 27 Component Inspection 29 C1116 STOP LAMP SWITCH 30 Description 30 DTC Logic 30 Diagnosis Procedure 30 Component Inspection 30 C1120, C1122, C1124, C1126 IN ABS SOL 32 Description 32 DTC Logic 32 Diagnosis Procedure 32 Component Inspection 33 C1121, C1123, C1125, C1127 OUT ABS SOL 34 Description 34 DTC Logic 34 Diagnosis Procedure 34 Component Inspection 35 C1140 ACTUATOR RELAY SYSTEM 36
--	---

Description	36	Precaution for Brake System	55
DTC Logic	36	Precaution for Brake Control	56
Diagnosis Procedure	36	Precautions for Harness Repair	56
Component Inspection	37		
U1000, U1002 CAN COMM CIRCUIT	38	ON-VEHICLE REPAIR	57
Description	38	WHEEL SENSOR	57
DTC Logic	38	FRONT WHEEL SENSOR	57
Diagnosis Procedure	38	FRONT WHEEL SENSOR : Exploded View	57
POWER SUPPLY AND GROUND CIRCUIT	39	FRONT WHEEL SENSOR : Removal and Instal-	57
Description	39	lation	57
Diagnosis Procedure	39	REAR WHEEL SENSOR	58
ABS WARNING LAMP	40	REAR WHEEL SENSOR : Exploded View	58
Description	40	REAR WHEEL SENSOR : Removal and Installa-	58
Component Function Check	40	tion	58
Diagnosis Procedure	40	SENSOR ROTOR	59
BRAKE WARNING LAMP	41	FRONT SENSOR ROTOR	59
Description	41	FRONT SENSOR ROTOR : Exploded View	59
Component Function Check	41	FRONT SENSOR ROTOR : Removal and Instal-	59
Diagnosis Procedure	41	lation	59
ECU DIAGNOSIS	42	REAR SENSOR ROTOR	59
ABS ACTUATOR AND ELECTRIC UNIT		REAR SENSOR ROTOR : Exploded View	59
(CONTROL UNIT)	42	REAR SENSOR ROTOR : Removal and Installa-	59
Reference Value	42	tion	59
Wiring Diagram - BRAKE CONTROL SYSTEM - ...	44	ABS ACTUATOR AND ELECTRIC UNIT	
Fail-Safe	47	(CONTROL UNIT)	60
DTC No. Index	48	Exploded View	60
SYMPTOM DIAGNOSIS	49	Removal and Installation	60
EXCESSIVE ABS FUNCTION OPERATION		VDC/TCS/ABS	
FREQUENCY	49	BASIC INSPECTION	62
Diagnosis Procedure	49	DIAGNOSIS AND REPAIR WORK FLOW	62
UNEXPECTED PEDAL REACTION	50	Work Flow	62
Diagnosis Procedure	50	Diagnostic Work Sheet	65
THE BRAKING DISTANCE IS LONG	51	INSPECTION AND ADJUSTMENT	66
Diagnosis Procedure	51	ADDITIONAL SERVICE WHEN REPLACING	
ABS FUNCTION DOES NOT OPERATE	52	CONTROL UNIT	66
Diagnosis Procedure	52	ADDITIONAL SERVICE WHEN REPLACING	
PEDAL VIBRATION OR ABS OPERATION		CONTROL UNIT : Description	66
SOUND OCCURS	53	ADDITIONAL SERVICE WHEN REPLACING	
Diagnosis Procedure	53	CONTROL UNIT : Special Repair Requirement	66
NORMAL OPERATING CONDITION	54	ADJUSTMENT OF STEERING ANGLE SENSOR	
Description	54	NEUTRAL POSITION	66
PRECAUTION	55	ADJUSTMENT OF STEERING ANGLE SENSOR	
PRECAUTIONS	55	NEUTRAL POSITION : Description	66
Precaution for Supplemental Restraint System		ADJUSTMENT OF STEERING ANGLE SENSOR	
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		NEUTRAL POSITION : Special Repair Require-	
SIONER"	55	ment	66
Precaution for Procedure without Cowl Top Cover..	55	FUNCTION DIAGNOSIS	68
		VDC	68

System Diagram	68	Diagnosis Procedure	94	
System Description	68	Component Inspection	95	A
Component Parts Location	69	Special Repair Requirement	95	
Component Description	70			
TCS	71	C1115 WHEEL SENSOR	96	B
System Diagram	71	Description	96	
System Description	71	DTC Logic	96	
Component Parts Location	72	Diagnosis Procedure	96	C
Component Description	73	Component Inspection	98	
		Special Repair Requirement	98	
ABS	74	C1116 STOP LAMP SWITCH	99	D
System Diagram	74	Description	99	
System Description	74	DTC Logic	99	
Component Parts Location	75	Diagnosis Procedure	99	E
Component Description	76	Component Inspection	99	
		Special Repair Requirement	100	
EBD	77	C1120, C1122, C1124, C1126 IN ABS SOL ...	101	BRC
System Diagram	77	Description	101	
System Description	77	DTC Logic	101	G
Component Parts Location	78	Diagnosis Procedure	101	
Component Description	79	Component Inspection	102	
		Special Repair Requirement	102	
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	80	C1121, C1123, C1125, C1127 OUT ABS SOL.	103	H
CONSULT-III Function	80	Description	103	
		DTC Logic	103	
COMPONENT DIAGNOSIS	85	Diagnosis Procedure	103	I
		Component Inspection	104	
C1101, C1102, C1103, C1104 WHEEL SEN- SOR	85	Special Repair Requirement	104	
Description	85	C1130 ENGINE SIGNAL	105	J
DTC Logic	85	Description	105	
Diagnosis Procedure	85	DTC Logic	105	
Component Inspection	87	Diagnosis Procedure	105	K
Special Repair Requirement	87	Special Repair Requirement	105	
C1105, C1106, C1107, C1108 WHEEL SEN- SOR	88	C1140 ACTUATOR RELAY SYSTEM	106	L
Description	88	Description	106	
DTC Logic	88	DTC Logic	106	
Diagnosis Procedure	88	Diagnosis Procedure	106	M
Component Inspection	90	Component Inspection	107	
Special Repair Requirement	90	Special Repair Requirement	107	
C1109 POWER AND GROUND SYSTEM	91	C1142 PRESS SENSOR	108	N
Description	91	Description	108	
DTC Logic	91	DTC Logic	108	
Diagnosis Procedure	91	Diagnosis Procedure	108	O
Special Repair Requirement	92	Component Inspection	108	
		Special Repair Requirement	109	
C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	93	C1143 STEERING ANGLE SENSOR	110	P
DTC Logic	93	Description	110	
Diagnosis Procedure	93	DTC Logic	110	
Special Repair Requirement	93	Diagnosis Procedure	110	
		Component Inspection	111	
C1111 ABS MOTOR, MOTOR RELAY SYS- TEM	94	Special Repair Requirement	111	
Description	94	C1144 STEERING ANGLE SENSOR	112	
DTC Logic	94	DTC Logic	112	

Diagnosis Procedure	112	VDC OFF INDICATOR LAMP	130
Special Repair Requirement	112	Description	130
C1145, C1146 YAW RATE/SIDE G SENSOR. 113		Component Function Check	130
Description	113	Diagnosis Procedure	130
DTC Logic	113	SLIP INDICATOR LAMP	131
Diagnosis Procedure	113	Description	131
Component Inspection	114	Component Function Check	131
Special Repair Requirement	115	Diagnosis Procedure	131
C1155 BRAKE FLUID LEVEL SWITCH	116	ECU DIAGNOSIS	132
Description	116	ABS ACTUATOR AND ELECTRIC UNIT	
DTC Logic	116	(CONTROL UNIT)	132
Diagnosis Procedure	116	Reference Value	132
Component Inspection	117	Wiring Diagram - BRAKE CONTROL SYSTEM - .	136
Special Repair Requirement	117	Fail-Safe	139
C1164, C1165 CV SYSTEM	118	DTC No. Index	140
Description	118	SYMPTOM DIAGNOSIS	142
DTC Logic	118	EXCESSIVE ABS FUNCTION OPERATION	
Diagnosis Procedure	118	FREQUENCY	142
Component Inspection	119	Diagnosis Procedure	142
Special Repair Requirement	119	UNEXPECTED PEDAL REACTION	143
C1166, C1167 SV SYSTEM	120	Diagnosis Procedure	143
Description	120	THE BRAKING DISTANCE IS LONG	144
DTC Logic	120	Diagnosis Procedure	144
Diagnosis Procedure	120	ABS FUNCTION DOES NOT OPERATE	145
Component Inspection	121	Diagnosis Procedure	145
Special Repair Requirement	121	PEDAL VIBRATION OR ABS OPERATION	
U1000, U1002 CAN COMM CIRCUIT	122	SOUND OCCURS	146
Description	122	Diagnosis Procedure	146
DTC Logic	122	VEHICLE JERKS DURING VDC/TCS/ABS	
Diagnosis Procedure	122	CONTROL	147
Special Repair Requirement	122	Diagnosis Procedure	147
POWER SUPPLY AND GROUND CIRCUIT ..	123	NORMAL OPERATING CONDITION	148
Description	123	Description	148
Diagnosis Procedure	123	PRECAUTION	149
PARKING BRAKE SWITCH	124	PRECAUTIONS	149
Component Function Check	124	Precaution for Supplemental Restraint System	
Diagnosis Procedure	124	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
Component Inspection	124	SIONER"	149
VDC OFF SWITCH	126	Precaution for Procedure without Cowl Top Cover.	149
Description	126	Precaution for Brake System	149
Component Function Check	126	Precaution for Brake Control	150
Diagnosis Procedure	126	Precautions for Harness Repair	150
Component Inspection	127	ON-VEHICLE REPAIR	151
ABS WARNING LAMP	128	WHEEL SENSOR	151
Description	128	FRONT WHEEL SENSOR	151
Component Function Check	128	FRONT WHEEL SENSOR : Exploded View	151
Diagnosis Procedure	128		
BRAKE WARNING LAMP	129		
Description	129		
Component Function Check	129		
Diagnosis Procedure	129		

FRONT WHEEL SENSOR : Removal and Installation	151	
REAR WHEEL SENSOR	152	
REAR WHEEL SENSOR : Exploded View	152	
REAR WHEEL SENSOR : Removal and Installation	152	
SENSOR ROTOR	153	
FRONT SENSOR ROTOR	153	
FRONT SENSOR ROTOR : Exploded View	153	
FRONT SENSOR ROTOR : Removal and Installation	153	
REAR SENSOR ROTOR	153	
REAR SENSOR ROTOR : Exploded View	153	
REAR SENSOR ROTOR : Removal and Installation	153	A
ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	154	B
Exploded View	154	
Removal and Installation	154	
YAW RATE/SIDE G SENSOR	156	C
Exploded View	156	
Removal and Installation	156	
STEERING ANGLE SENSOR	157	D
Exploded View	157	
Removal and Installation	157	
		E

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[ABS]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000003766708

OVERALL SEQUENCE

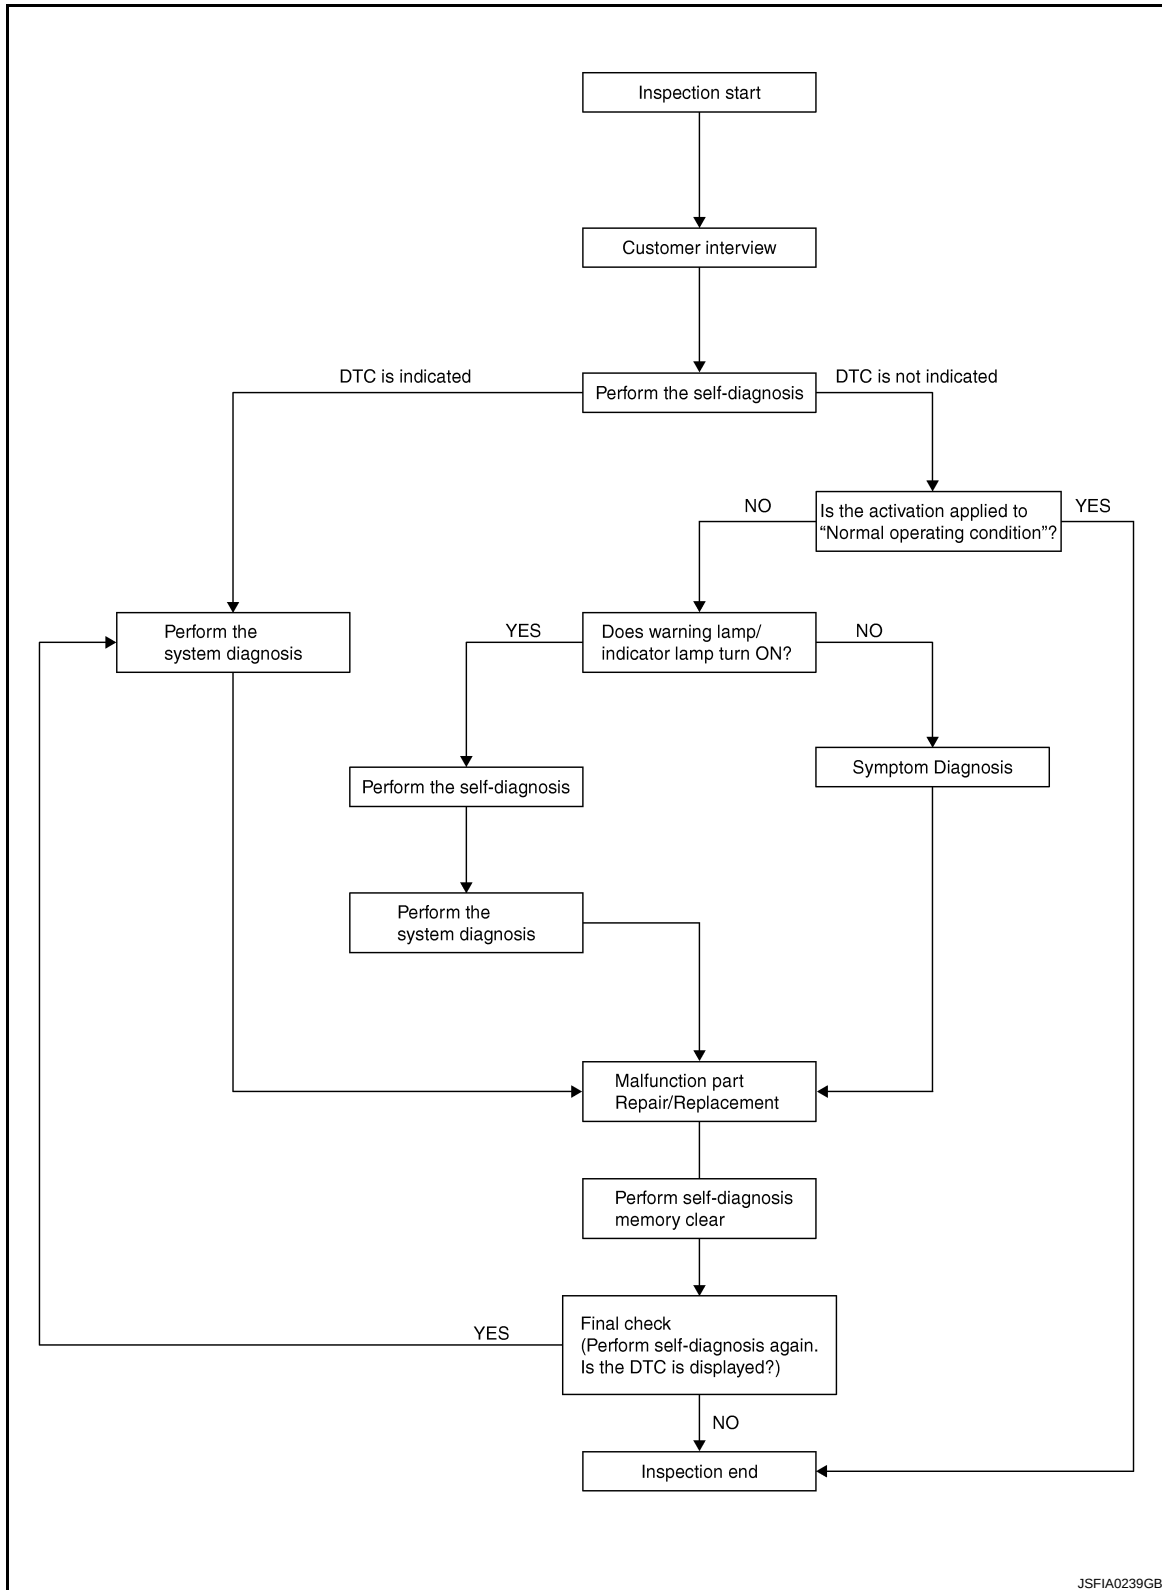

JSFIA0239GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

[ABS]

< BASIC INSPECTION >

1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-8, "Diagnostic Work Sheet"](#).

>> GO TO 2.

2. PERFORM THE SELF-DIAGNOSIS

Check the DTC display with the self-diagnosis function.

Is there any DTC displayed?

YES >> GO TO 3.

NO >> GO TO 4.

3. PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC. Refer to [BRC-48, "DTC No. Index"](#).

>> GO TO 7.

4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-54, "Description"](#).

Is the symptom a normal operation?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK THE WARNING LAMP FOR ILLUMINATION

Check that the warning lamp illuminate.

- ABS warning lamp: Refer to [BRC-40, "Description"](#).
- Brake warning lamp: Refer to [BRC-41, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6.

NO >> GO TO 2.

6. PERFORM THE DIAGNOSIS BY SYMPTOM

Perform the diagnosis applicable to the symptom.

>> GO TO 7.

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 8.

8. MEMORY CLEAR

Perform self-diagnosis memory clear.

>> GO TO 9.

9. FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely.

Is no other DTC present and the repair completed?

YES >> INSPECTION END

NO >> GO TO 3.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[ABS]

Diagnostic Work Sheet

INFOID:000000003766709

Customer name MR/MS	Model & Year		VIN
Engine #	Trans.		Mileage
Incident Date	Manuf. Date		In Service Date
Symptoms	☐ Noise and vibration (from engine compartment) ☐ Noise and vibration (from axle)	☐ Warning / Indicator activate ☐ Lack of sense of acceleration	☐ Firm pedal operation ☐ Large stroke pedal operation
	☐ ABS does not work (Wheels lock when braking)		
Engine conditions	☐ When starting ☐ After starting		
Road conditions	☐ Low friction road (☐ Snow ☐ Gravel ☐ Other) ☐ Bumps / potholes		
Driving conditions	☐ Full-acceleration ☐ High speed cornering ☐ Vehicle speed: Greater than 10 km/h (6 MPH) ☐ Vehicle speed: 10 km/h (6 MPH) or less ☐ Vehicle is stopped		
Applying brake conditions	☐ Suddenly ☐ Gradually		
Other conditions	☐ Operation of electrical equipment ☐ Shift change ☐ Other descriptions		


SFIA3264E

FUNCTION DIAGNOSIS

ABS

System Diagram

INFOID:000000003766722

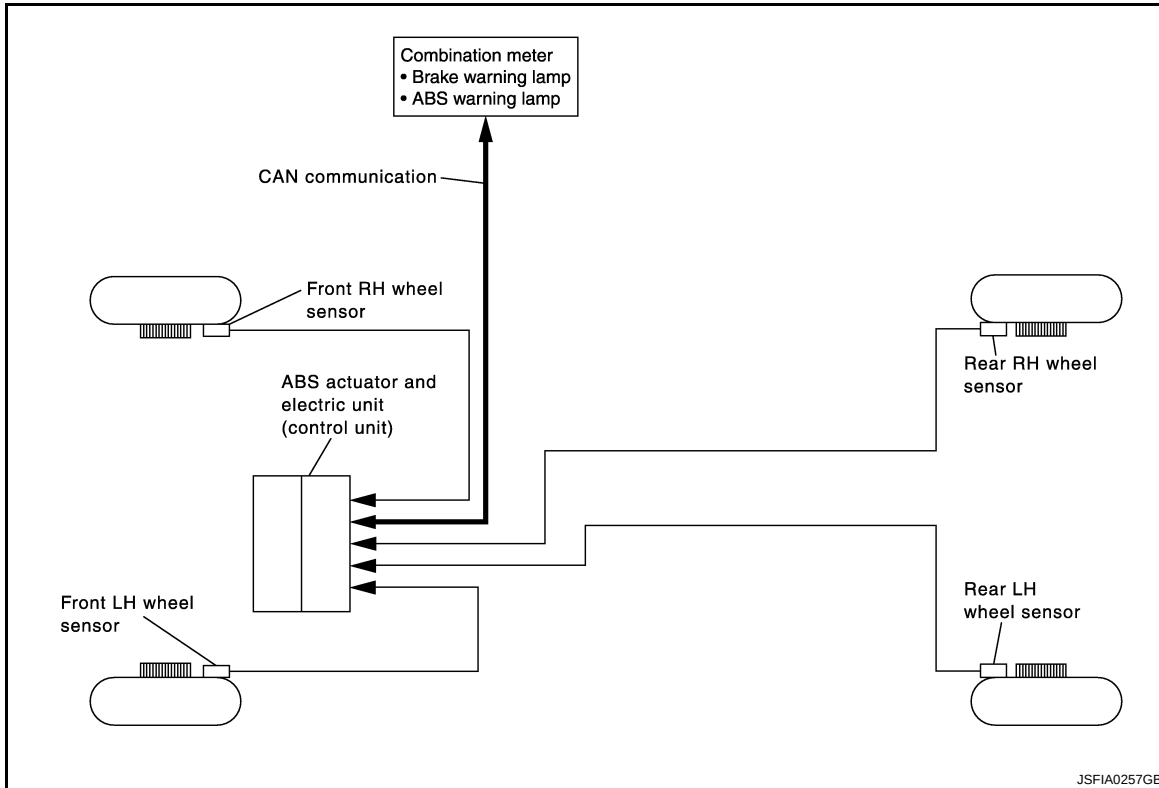


System Description

INFOID:000000003766723

- Anti-Lock Braking System detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT-III is available.

Component Parts Location

INFOID:000000003766724

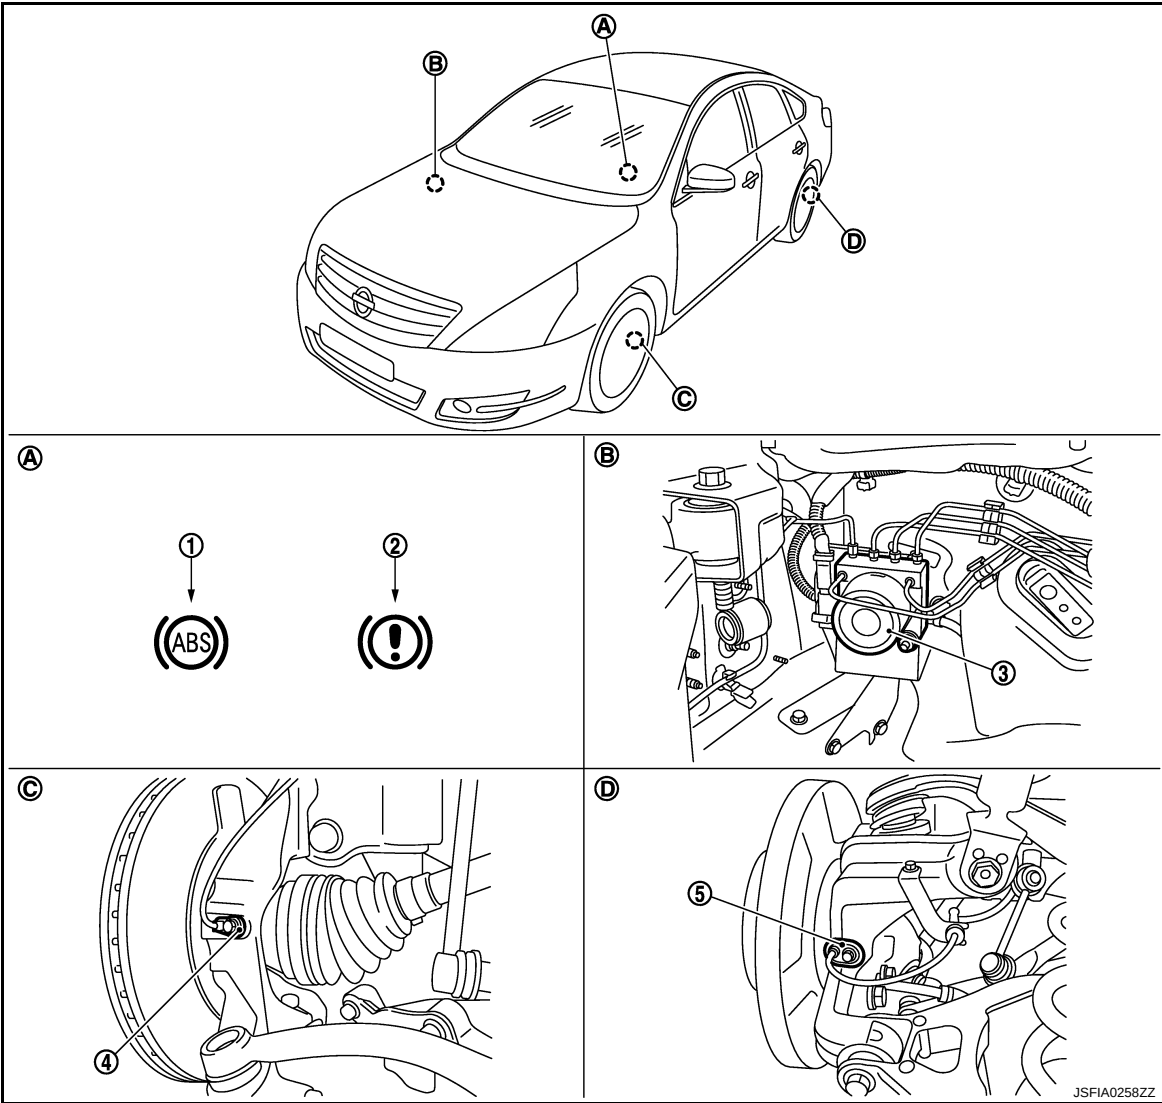

- | | | |
|-----------------------|---------------------------|--|
| 1. ABS warning lamp | 2. Brake warning lamp | 3. ABS actuator and electric unit (control unit) |
| 4. Front wheel sensor | 5. Rear wheel sensor | |
| A. Combination meter | B. Engine room right side | C. Steering knuckle |
| D. Rear axle | | |

Component Description


INFOID:000000003766725

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-25, "Description"
	Motor	
	Actuator relay (main relay)	BRC-36, "Description"
	Solenoid valve	BRC-32, "Description"
Wheel sensor		BRC-16, "Description"
ABS warning lamp		BRC-40, "Description"
Brake warning lamp		BRC-41, "Description"

EBD

System Diagram

INFOID:000000003767309

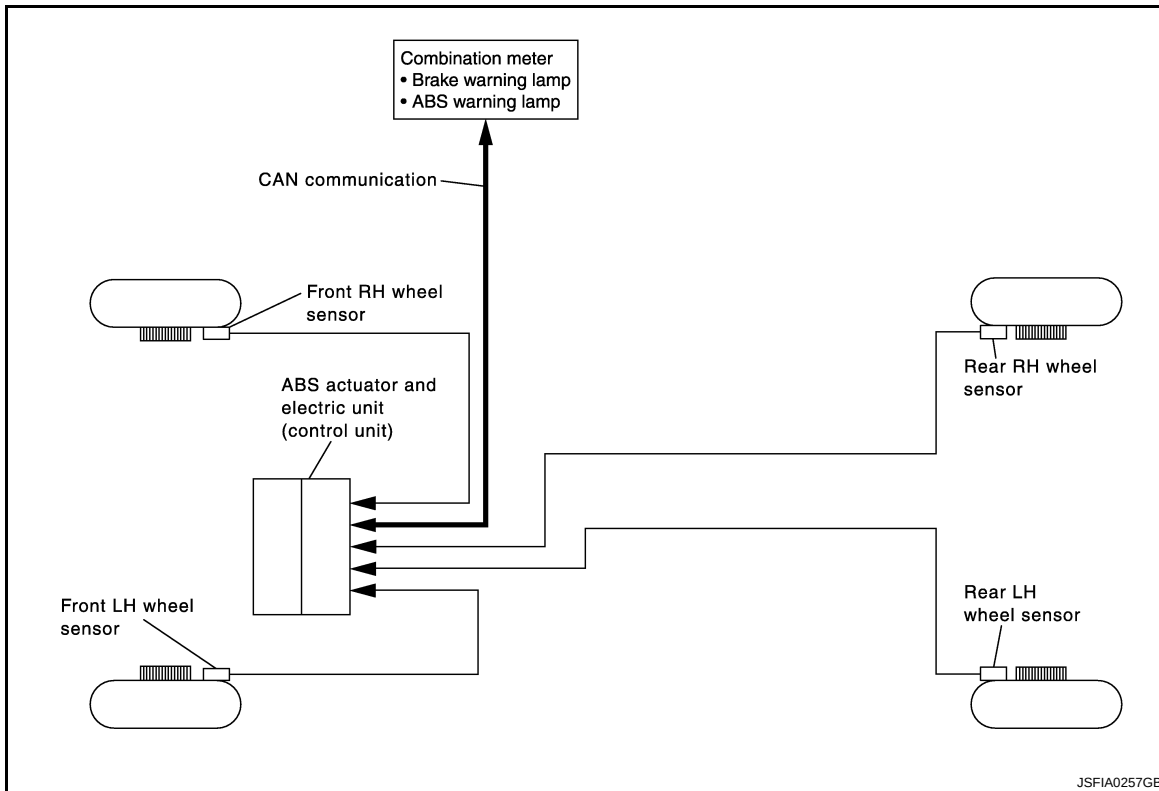


System Description

INFOID:000000003766727

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT-III is available.

Component Parts Location

INFOID:000000003767310

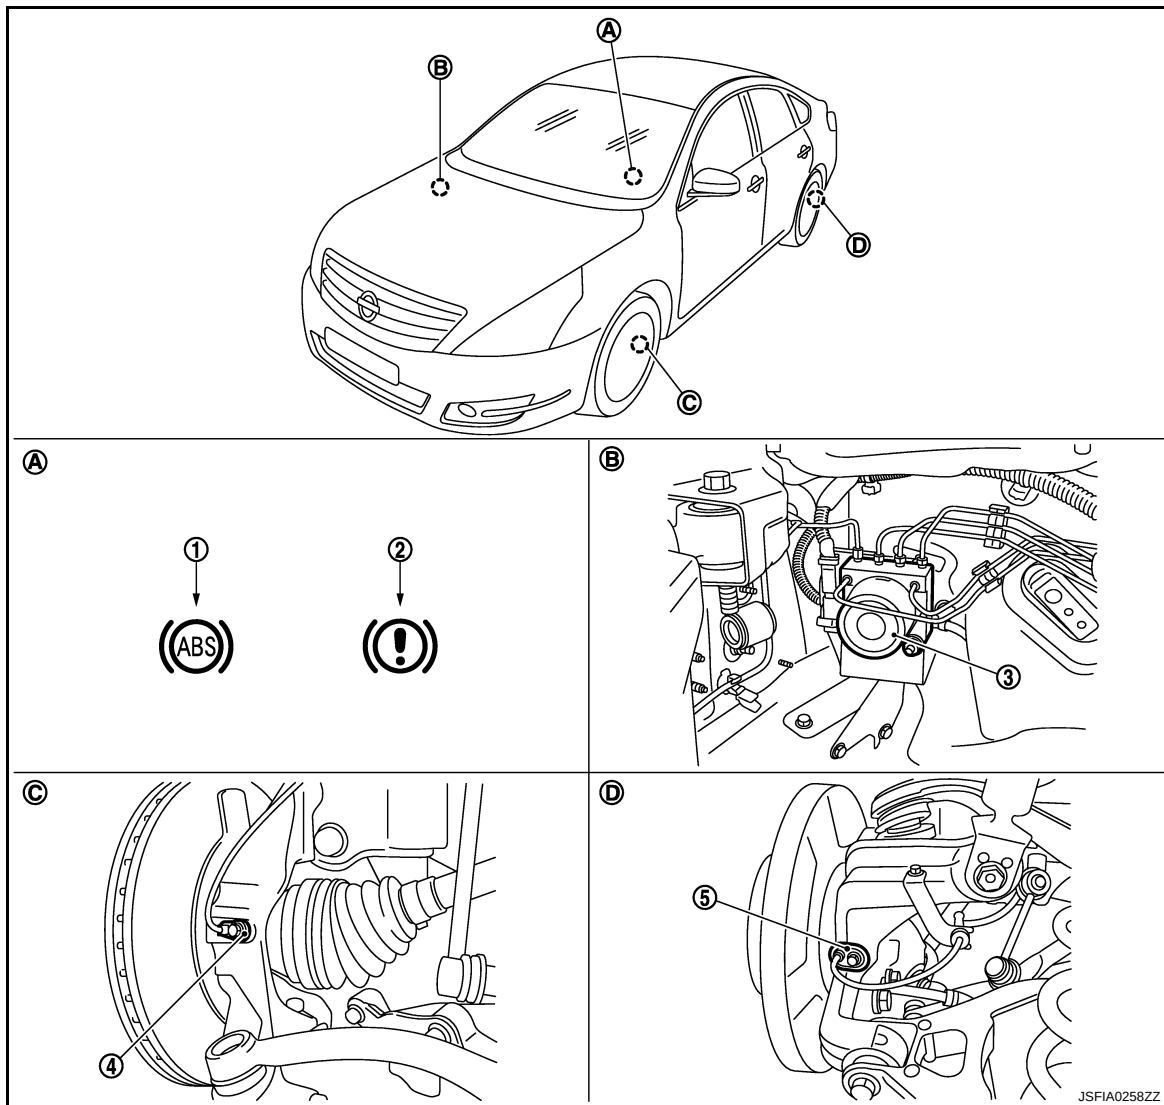

- | | | |
|-----------------------|---------------------------|--|
| 1. ABS warning lamp | 2. Brake warning lamp | 3. ABS actuator and electric unit (control unit) |
| 4. Front wheel sensor | 5. Rear wheel sensor | |
| A. Combination meter | B. Engine room right side | C. Steering knuckle |
| D. Rear axle | | |

Component Description

INFOID:000000003767311

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-25, "Description"
	Motor	
	Actuator relay (main relay)	BRC-36, "Description"
	Solenoid valve	BRC-32, "Description"
Wheel sensor		BRC-16, "Description"
ABS warning lamp		BRC-40, "Description"
Brake warning lamp		BRC-41, "Description"

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT-III Function

INFOID:000000003766730

FUNCTION

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Self diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	CONSULT-III drives some actuators apart from ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.

SELF DIAGNOSTIC RESULT

Operation Procedure

Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

Display Item List

Refer to [BRC-48, "DTC No. Index"](#).

How to Erase Self-diagnosis Results

After erasing DTC memory, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driven at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).

DATA MONITOR

Display Item List

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front LH wheel sensor signal
FR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front RH wheel sensor signal
RR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear LH wheel sensor signal
RR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear RH wheel sensor signal
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR RH IN SOL (On/Off) (Note 1)	▼	×	Operation status of each solenoid valve
FR RH OUT SOL (On/Off) (Note 1)	▼	×	
FR LH IN SOL (On/Off) (Note 1)	▼	×	
FR LH OUT SOL (On/Off) (Note 1)	▼	×	
RR RH IN SOL (On/Off) (Note 1)	▼	×	
RR RH OUT SOL (On/Off) (Note 1)	▼	×	
RR LH IN SOL (On/Off) (Note 1)	▼	×	
RR LH OUT SOL (On/Off) (Note 1)	▼	×	
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation
ACTUATOR RLY (On/Off) (Note 1)	▼	×	Actuator relay operation
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp
EBD WARN LAMP (On/Off)	▼	▼	Brake warning lamp
EBD SIGNAL (On/Off)	▼	▼	EBD operation
ABS SIGNAL (On/Off)	▼	▼	ABS operation
EBD FAIL SIG (On/Off)	▼	▼	EBD fail-safe signal
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal

NOTE:

1: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ACTIVE TEST

CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be started when ABS warning lamp and brake warning lamp are ON.
- ABS warning lamp and brake warning lamp are ON during active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" is displayed, to perform test again.

Test Item

ABS SOLENOID VALVE

- Touch "Up", "Keep" and "Down". Then use screen monitor to check that solenoid valve operates as shown in the table below.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[ABS]

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Touch “On” and “Off” on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

Description

INFOID:0000000003766731

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000003766732

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1101	RR RH SENSOR-1	Circuit of rear RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)
C1102	RR LH SENSOR-1	Circuit of rear LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1103	FR RH SENSOR-1	Circuit of front RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1104	FR LH SENSOR-1	Circuit of front LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-16, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003766733

CAUTION:

Do not check between wheel sensor terminals.

1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2. CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[ABS]

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E34	9, 10	E34	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.
2. Turn the ignition switch ON.
CAUTION:
Never start the engine.
3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.
2. Connect each wheel sensor connector.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

3. Check wheel sensor signal. Refer to [BRC-18, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766734

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-16, "Diagnosis Procedure"](#).

C1105, C1106, C1107, C1108 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

Description

INFOID:000000003767288

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766737

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1105	RR RH SENSOR-2	When the circuit in the rear RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)
C1106	RR LH SENSOR-2	When the circuit in the rear LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1107	FR RH SENSOR-2	When the circuit in the front RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1108	FR LH SENSOR-2	When the circuit in the front LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-19, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767289

CAUTION:

Do not check between wheel sensor terminals.

1.CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.

C1105, C1106, C1107, C1108 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E34	9, 10	E34	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.
2. Turn the ignition switch ON.
CAUTION:
Never start the engine.
3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

C1105, C1106, C1107, C1108 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.
2. Connect each wheel sensor connector.
3. Check wheel sensor signal. Refer to [BRC-21. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767290

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-19. "Diagnosis Procedure"](#).

C1109 POWER AND GROUND SYSTEM

[ABS]

< COMPONENT DIAGNOSIS >

C1109 POWER AND GROUND SYSTEM

Description

INFOID:000000003766741

Supplies electric power to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766742

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1109	BATTERY VOLTAGE [ABNORMAL]	When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal.	• Harness or connector • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1109" detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-22, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766743

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	3	Ground	Battery voltage

2. Check 30A fusible link (G).
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and battery positive terminal.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	3	Battery positive terminal	Existed

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace damaged parts. (Check ABS earth bolt for tightness and corrosion.)

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1109 POWER AND GROUND SYSTEM

< COMPONENT DIAGNOSIS >

[ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts. (Check ABS earth bolt for tightness and corrosion.)

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

C1110 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< COMPONENT DIAGNOSIS >

[ABS]

C1110 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:000000003766745

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1110" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-24, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766746

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

CAUTION:

Replace ABS actuator and electric unit (control unit) when self-diagnostic result shows items other than those applicable.

- >> Replace ABS actuator and electric unit (control unit).

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:000000003766748

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766749

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	• Harness or connector • ABS actuator and electric unit (control unit)
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1111" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-25, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766750

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnect, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace damaged parts.

2.CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between the ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	2	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766751

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-25. "Diagnosis Procedure"](#).

C1115 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[ABS]

C1115 WHEEL SENSOR

Description

INFOID:000000003767292

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766759

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When wheel sensor input signal is malfunctioning.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1115" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-27. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767293

CAUTION:

Do not check between wheel sensor terminals.

1.CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5. "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

C1115 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

Measurement terminal for power supply circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E34	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E34	9, 10	E34	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.

2. Turn the ignition switch ON.

CAUTION:

Never start the engine.

3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.

2. Connect each wheel sensor connector.

3. Check wheel sensor signal. Refer to [BRC-29, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

C1115 WHEEL SENSOR

[ABS]

< COMPONENT DIAGNOSIS >

Component Inspection

INFOID:000000003767294

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-27, "Diagnosis Procedure"](#).

C1116 STOP LAMP SWITCH

[ABS]

< COMPONENT DIAGNOSIS >

C1116 STOP LAMP SWITCH

Description

INFOID:000000003766763

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766764

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When stop lamp switch circuit is open.	• Harness or connector • Stop lamp switch • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1116" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-30. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766765

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect stop lamp switch connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [BRC-30. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace stop lamp switch.

3.CHECK STOP LAMP SWITCH CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E34	20	Ground	Brake pedal is depressed	Battery voltage
			Brake pedal is released	Approx. 0 V

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766766

1.CHECK STOP LAMP SWITCH

C1116 STOP LAMP SWITCH

[ABS]

< COMPONENT DIAGNOSIS >

- 1. Turn the ignition switch OFF.
- 2. Disconnect stop lamp switch connector.
- 3. Check the continuity between stop lamp switch connector terminals.

Stop lamp switch	Condition	Continuity
Terminal		
1 – 2	Release stop lamp switch (When brake pedal is depressed.)	Existed
	Push stop lamp switch (When brake pedal is released.)	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace stop lamp switch. Refer to [BR-17, "Exploded View"](#).

BRC

C1120, C1122, C1124, C1126 IN ABS SOL

< COMPONENT DIAGNOSIS >

[ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:000000003766768

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766769

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-32, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766770

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1120, C1122, C1124, C1126 IN ABS SOL

< COMPONENT DIAGNOSIS >

[ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
 NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766771

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "Keep" and "Down", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Proceed to diagnosis procedure. Refer to [BRC-32, "Diagnosis Procedure"](#).

C1121, C1123, C1125, C1127 OUT ABS SOL

< COMPONENT DIAGNOSIS >

[ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:000000003767295

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766774

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-34, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767296

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1121, C1123, C1125, C1127 OUT ABS SOL

< COMPONENT DIAGNOSIS >

[ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767297

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "Keep" and "Down", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-34, "Diagnosis Procedure"](#).

C1140 ACTUATOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[ABS]

C1140 ACTUATOR RELAY SYSTEM

Description

INFOID:0000000003766753

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000003766754

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1140	ACTUATOR RLY	During the actuator relay operating with OFF, when the actuator relay turns ON, or when the control line for the relay is shorted to the ground.	• Harness or connector • ABS actuator and electric unit (control unit)
		During the actuator relay operating with ON, when the actuator relay turns ON, or when the control line for the relay is open.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1140" detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-36, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003766755

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

C1140 ACTUATOR RELAY SYSTEM

[ABS]

< COMPONENT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:0000000003767291

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-36, "Diagnosis Procedure"](#).

U1000, U1002 CAN COMM CIRCUIT

Description

INFOID:000000003766819

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000003766820

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	- CAN communication line - ABS actuator and electric unit (control unit)
U1002	SYSTEM COMM (CAN)	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

- Turn the ignition switch ON.
- Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-38, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766821

1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
 NO >> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[ABS]

POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:000000003766827

Supplies power to ABS actuator and electric unit (control unit).

Diagnosis Procedure

INFOID:000000003766828

1.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	18	Ground	Approx. 0 V

4. Turn the ignition switch ON.
CAUTION:
Never start the engine.
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	18	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform the trouble diagnosis for power supply circuit.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E34	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Perform the trouble diagnosis for power supply circuit.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E34	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair or replace damaged parts.

ABS WARNING LAMP

< COMPONENT DIAGNOSIS >

[ABS]

ABS WARNING LAMP

Description

INFOID:000000003766836

×: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 1 second after turning ignition switch ON	×
1 second later after turning ignition switch ON	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:000000003766837

1.CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-40, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003766838

1.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

BRAKE WARNING LAMP

[ABS]

< COMPONENT DIAGNOSIS >

BRAKE WARNING LAMP

Description

INFOID:000000003766839

×: ON —: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	—
For 1 second after turning ignition switch ON	× (Note 2)
1 second later after turning ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting the engine, brake warning lamp is turned off.

Component Function Check

INFOID:000000003766840

BRC

1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-41, "Diagnosis Procedure"](#).

2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check parking brake switch.

Diagnosis Procedure

INFOID:000000003766841

1. CHECK PARKING BRAKE SWITCH

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check parking brake switch.

2. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check items displayed by self-diagnosis.

3. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[ABS]

ECU DIAGNOSIS

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000003766848

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel sensor calculated by front LH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	Wheel sensor calculated by front RH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR LH SENSOR	Wheel sensor calculated by rear LH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR RH SENSOR	Wheel sensor calculated by rear RH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY (Note 2)	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 3)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
EBD WARN LAMP	Brake warning lamp (Note 3)	When brake warning lamp is ON	On
		When brake warning lamp is OFF	Off
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off


NOTE:

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
 - ABS warning lamp: Refer to [BRC-40, "Description"](#).
 - Brake warning lamp: Refer to [BRC-41, "Description"](#).

[ABS]

Wiring Diagram - BRAKE CONTROL SYSTEM -

INFOID:0000000003766849

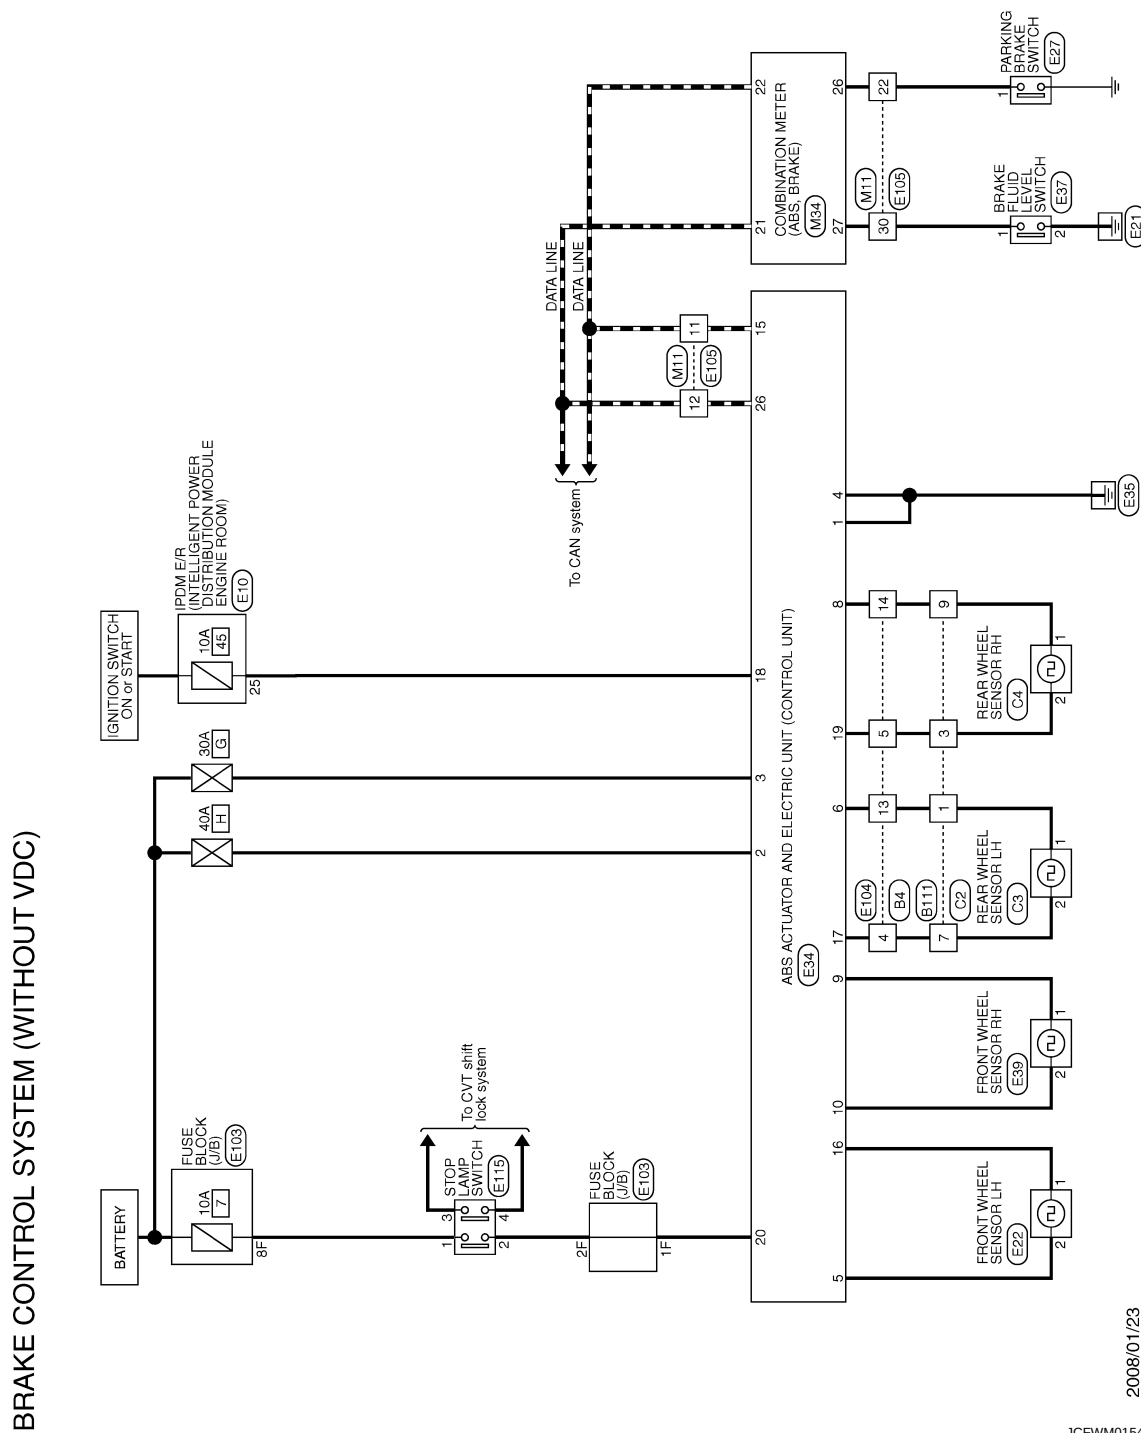

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[ABS]

BRAKE CONTROL SYSTEM (WITHOUT VDC)

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



6	5	4	3	2	1
12	11	10	9	8	7

Connector No.	C2
Connector Name	WIRE TO WIRE
Connector Type	RH12MB



1	2	3	4	5	6
7	8	9	10	11	12

Connector No.	C3
Connector Name	REAR WHEEL SENSOR LH
Connector Type	RH02FGY



1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
4	O	-
5	BR	-
13	G	-
14	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
3	BR	-
7	O	-
9	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
3	L	-
7	B	-
9	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	B	-

Connector No.	C4
Connector Name	REAR WHEEL SENSOR RH
Connector Type	RH02FGY



1	2
---	---

Connector No.	E10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Connector No.	E22
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	RH02MGY



1	2
---	---

Connector No.	E27
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A



1

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Terminal No.	Color of Wire	Signal Name [Specification]
25	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-

JCFWM0155Gt


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[ABS]

BRAKE CONTROL SYSTEM (WITHOUT VDC)

Connector No.	E34
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) (WITHOUT VDC)
Connector Type	BAA22FB-AH24-RH

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND(MTR)
2	G	+B(MTR)
3	R	+B(SOL)
4	B	SOL GND
5	LG	DS FL
6	L	DP RL
8	P	DP RR
9	B	DP FR
10	W	DS FR
13	P	CANC(-)
16	L	DP FL

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1F	L	-
2F	LG	-
8F	R	-

17	Y	DS RL
18	GR	IGN
19	V	DS RR
20	SB	STOP L SIG
26	L	CANC(+)




Connector No.	E37
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	Y102FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	B/Y	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3

 

Terminal No.	Color of Wire	Signal Name [Specification]
11	P	-
12	L	-
22	P	-
30	V	-

Connector No.	E39
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	RK02MGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	W	-


Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	MD0FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	Y	-

JCFWM0156Gt

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

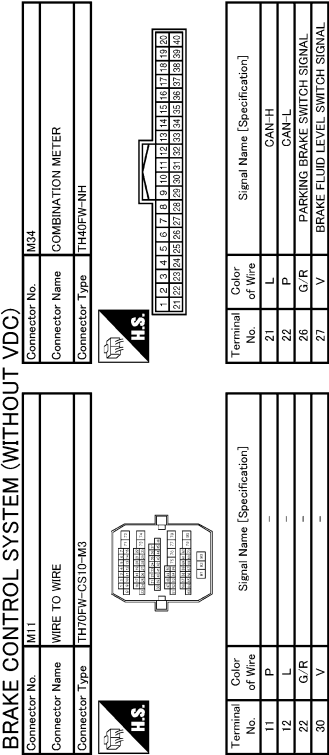

Fail-Safe

ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp will turn on. If EBD malfunction electrically, brake warning lamp and ABS warning lamp will turn on. Simultaneously, the ABS become one of the following conditions of the fail-safe function.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

[ABS]

< ECU DIAGNOSIS >

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without ABS system.

NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without ABS, EBD system.

DTC No. Index

INFOID:000000003766851

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-16, "DTC Logic"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-19, "DTC Logic"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-22, "DTC Logic"
C1110	CONTROLLER FAILURE	BRC-24, "DTC Logic"
C1111	PUMP MOTOR	BRC-25, "DTC Logic"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-27, "DTC Logic"
C1116	STOP LAMP SW	BRC-30, "DTC Logic"
C1120	FR LH IN ABS SOL	BRC-32, "DTC Logic"
C1121	FR LH OUT ABS SOL	BRC-34, "DTC Logic"
C1122	FR RH IN ABS SOL	BRC-32, "DTC Logic"
C1123	FR RH OUT ABS SOL	BRC-34, "DTC Logic"
C1124	RR LH IN ABS SOL	BRC-32, "DTC Logic"
C1125	RR LH OUT ABS SOL	BRC-34, "DTC Logic"
C1126	RR RH IN ABS SOL	BRC-32, "DTC Logic"
C1127	RR RH OUT ABS SOL	BRC-34, "DTC Logic"
C1140	ACTUATOR RLY	BRC-36, "DTC Logic"
U1000	CAN COMM CIRCUIT	BRC-38, "DTC Logic"
U1002	SYSTEM COMM (CAN)	

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[ABS]

SYMPTOM DIAGNOSIS

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000003766852

1.CHECK START

Check front and rear brake force distribution using a brake tester. Refer to [BR-45. "General Specifications"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check brake system.

2.CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

• Front: Refer to [FAX-6. "Inspection"](#).

• Rear: Refer to [RAX-3. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

3.CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> • Replace wheel sensor or sensor rotor.
• Repair harness.

4.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

YES >> Perform self-diagnosis.

NO >> Normal

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000003766853

1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-6, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >> • Bleed air from brake tube and hose. Refer to [BR-10, "Bleeding Brake System"](#).
• Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
- Brake pedal: Refer to [BR-6, "Inspection and Adjustment"](#).
- Brake booster: Refer to [BR-12, "Inspection"](#).
- Brake master cylinder: Refer to [BR-11, "Inspection"](#).

NO >> GO TO 2.

2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. Check if braking force is normal in this condition. Connect connector after inspection.

Is the inspection result normal?

- YES >> Normal
NO >> Check brake system.

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:000000003766854

CAUTION:

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

1.CHECK FUNCTION

Turn the ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect connector.

Is the inspection result normal?

YES >> Normal

NO >> Check brake system.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000003766855

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis.

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000003766856

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis.

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Normal

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[ABS]

NORMAL OPERATING CONDITION

Description

INFOID:0000000003766858

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when ABS is activated.	This is a normal condition due to the ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is a normal, and it is caused by the ABS operation check.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003893848

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Procedure without Cowl Top Cover

INFOID:000000003928740

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

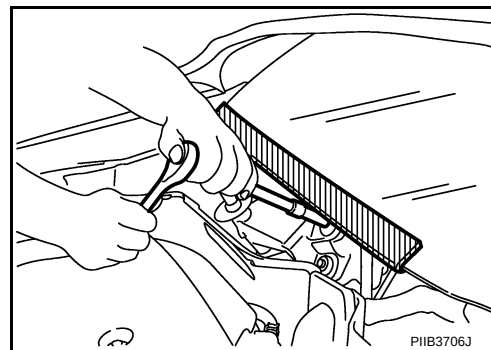


Precaution for Brake System

INFOID:000000003766860

WARNING:

Clean brake pads and shoes with a waste cloth, then wipe with a dust collector.

- Only use "DOT 3" or "DOT 4" brake fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a flare nut torque wrench (A).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.

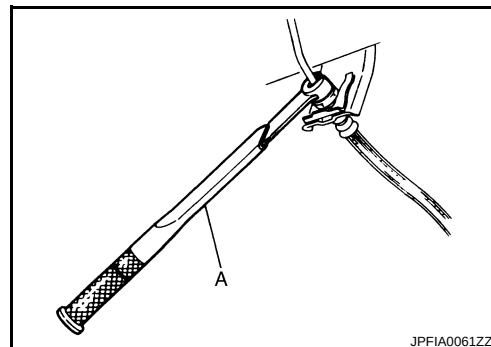

PRECAUTIONS

< PRECAUTION >

[ABS]

Precaution for Brake Control

INFOID:000000003766861

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- If aftermarket parts (car stereo, CD player, etc.) have been installed, check for incidents such as harness pinches, open circuits, and improper wiring.

Precautions for Harness Repair


INFOID:000000003859437

COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

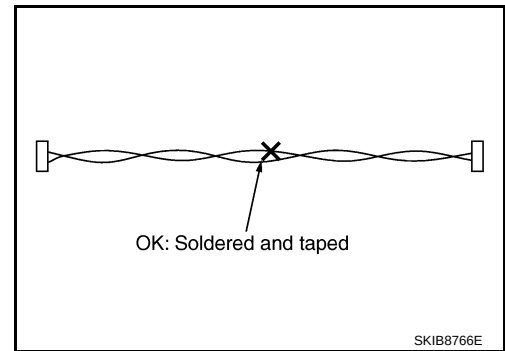


- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

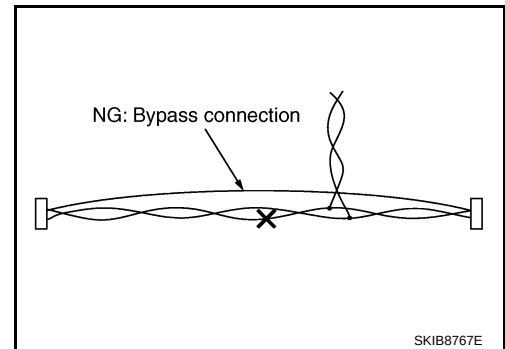


ON-VEHICLE REPAIR

WHEEL SENSOR

FRONT WHEEL SENSOR

FRONT WHEEL SENSOR : Exploded View

INFOID:000000003766865

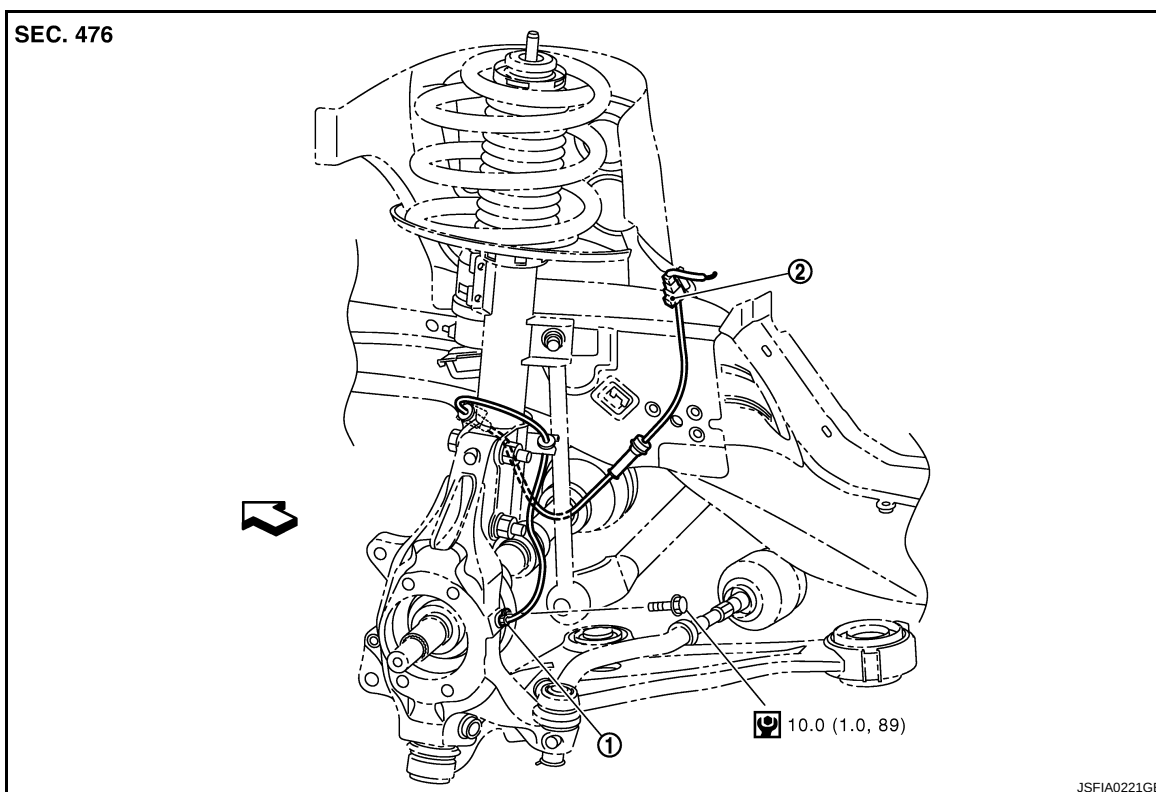

1. Front LH wheel sensor

2. Front LH wheel sensor connector

Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.**NOTE:**

The above figure shows left side. Right side is the mirror image.

FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000003766866

REMOVAL

Be careful with the following when removing sensor.

CAUTION:

- Do not twist sensor harness as much as possible, when removing it. Pull sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front or rear wheel hub. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Be careful with the following when installing wheel sensor. Tighten installation bolts to the specified torques.

Refer to [BRC-57, "FRONT WHEEL SENSOR : Exploded View"](#).**CAUTION:**

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

WHEEL SENSOR

< ON-VEHICLE REPAIR >


[ABS]

- Completely push in rubber grommets of strut bracket and body bracket until they lock when installing wheel sensor so that the wheel sensor harness will not be twisted. Install grommet groove onto bracket with orange line on the harness facing bracket opening (mounting hole). There should be no twists in the harness when installed.

REAR WHEEL SENSOR

REAR WHEEL SENSOR : Exploded View

INFOID:000000003766867

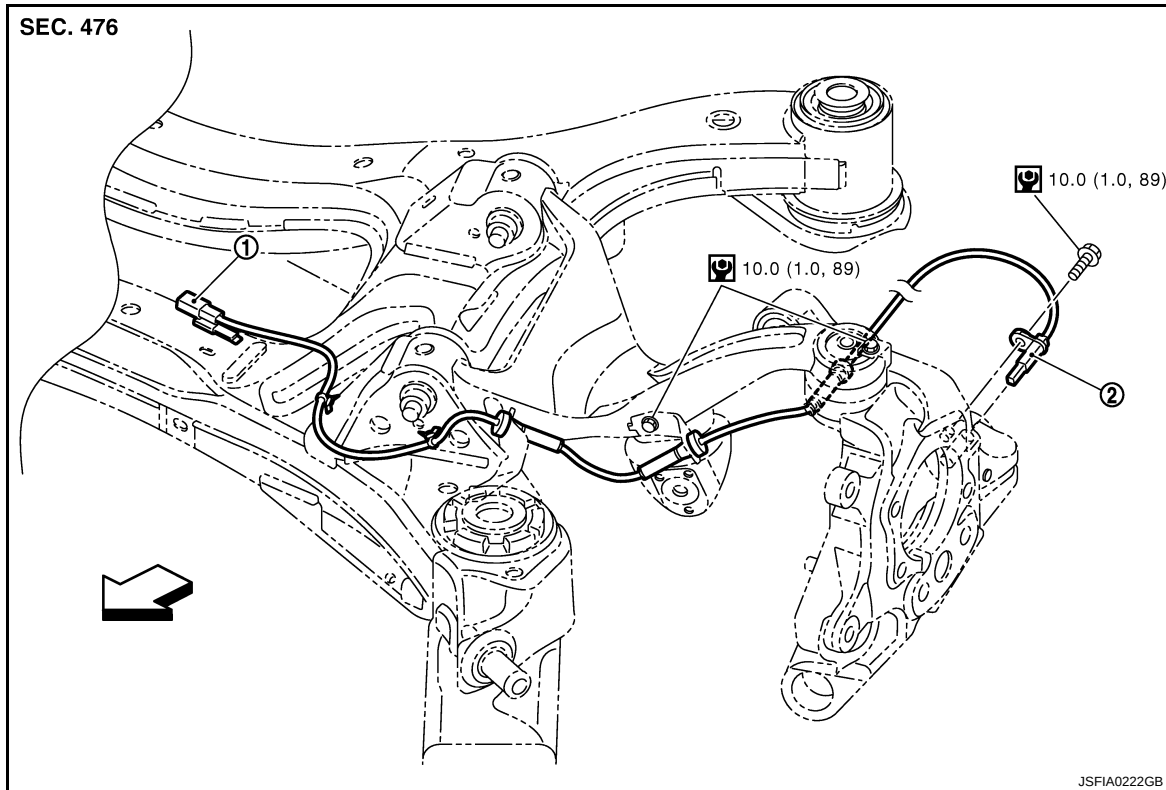

1. Rear LH wheel sensor connector 2. Rear LH wheel sensor

Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.

NOTE:

The above figure shows left side. Right side is the mirror image.

REAR WHEEL SENSOR : Removal and Installation

INFOID:000000003766868

REMOVAL

Be careful with the following when removing sensor.

CAUTION:

- Do not twist sensor harness as much as possible, when removing it. Pull sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front or rear wheel hub. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Be careful with the following when installing wheel sensor. Tighten installation bolts to the specified torques. Refer to [BRC-58, "REAR WHEEL SENSOR : Exploded View"](#).

CAUTION:

When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

< ON-VEHICLE REPAIR >

SENSOR ROTOR

FRONT SENSOR ROTOR

FRONT SENSOR ROTOR : Exploded View

INFOID:0000000003766869

Refer to [FAX-8, "Exploded View"](#).

FRONT SENSOR ROTOR : Removal and Installation

INFOID:0000000003766870

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-8, "Exploded View"](#).

INSTALLATION

Sensor rotor cannot be disassembled. Install the sensor rotor together with hub bearing assembly. Refer to [FAX-8, "Exploded View"](#).

REAR SENSOR ROTOR

REAR SENSOR ROTOR : Exploded View

INFOID:0000000003766871

Refer to [RAX-4, "Exploded View"](#).

REAR SENSOR ROTOR : Removal and Installation

INFOID:0000000003766872

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [RAX-4, "Exploded View"](#).

INSTALLATION

Sensor rotor cannot be disassembled. Install the sensor rotor together with hub bearing assembly. Refer to [RAX-4, "Exploded View"](#).

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ON-VEHICLE REPAIR >

[ABS]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000003766873

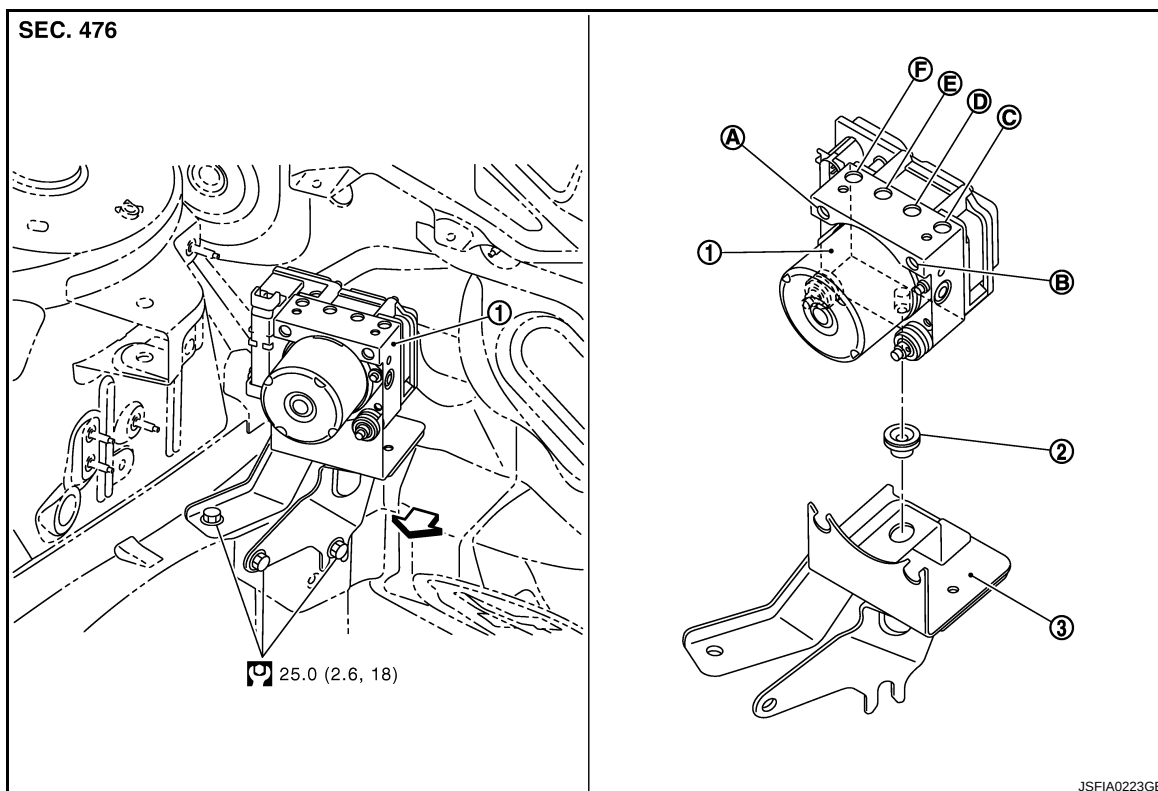

- | | | |
|--|--------------------------------------|------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Bushing | 3. Bracket |
| A. From master cylinder secondary side | B. From master cylinder primary side | C. To front LH brake caliper |
| D. To rear RH brake caliper | E. To rear LH brake caliper | F. To front RH brake caliper |

↩: Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.

Removal and Installation

INFOID:000000003766874

REMOVAL

CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.
- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-10, "Bleeding Brake System"](#).

1. Remove cowl top cover. Refer to [EXT-20, "Exploded View"](#).
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Loosen brake tube flare nuts, then remove brake tubes from ABS actuator and electric unit (control unit).
4. Remove ABS actuator and electric unit (control unit) bracket mounting nuts.
5. Remove ABS actuator and electric unit (control unit) from vehicle.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ON-VEHICLE REPAIR >

[ABS]

- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-10, "Bleeding Brake System"](#).
- After installing harness connector in the ABS actuator and electric unit (control unit), make sure connector is securely locked.

Install ABS actuator and electric unit (control unit) as per the following steps.

1. Temporarily tighten mounting bolt (1) because the bracket (2) is temporarily being hold.
2. Tighten mounting bolt (3) while holding the bracket.
3. Tighten mounting bolts to the specified torque in the order of (4), (1).

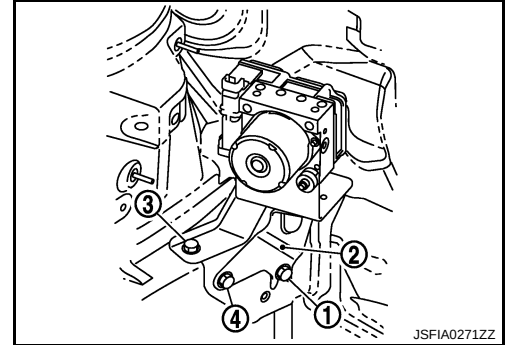

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000003766879

PRECAUTIONS FOR DIAGNOSIS


If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) or tires have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

OVERALL SEQUENCE

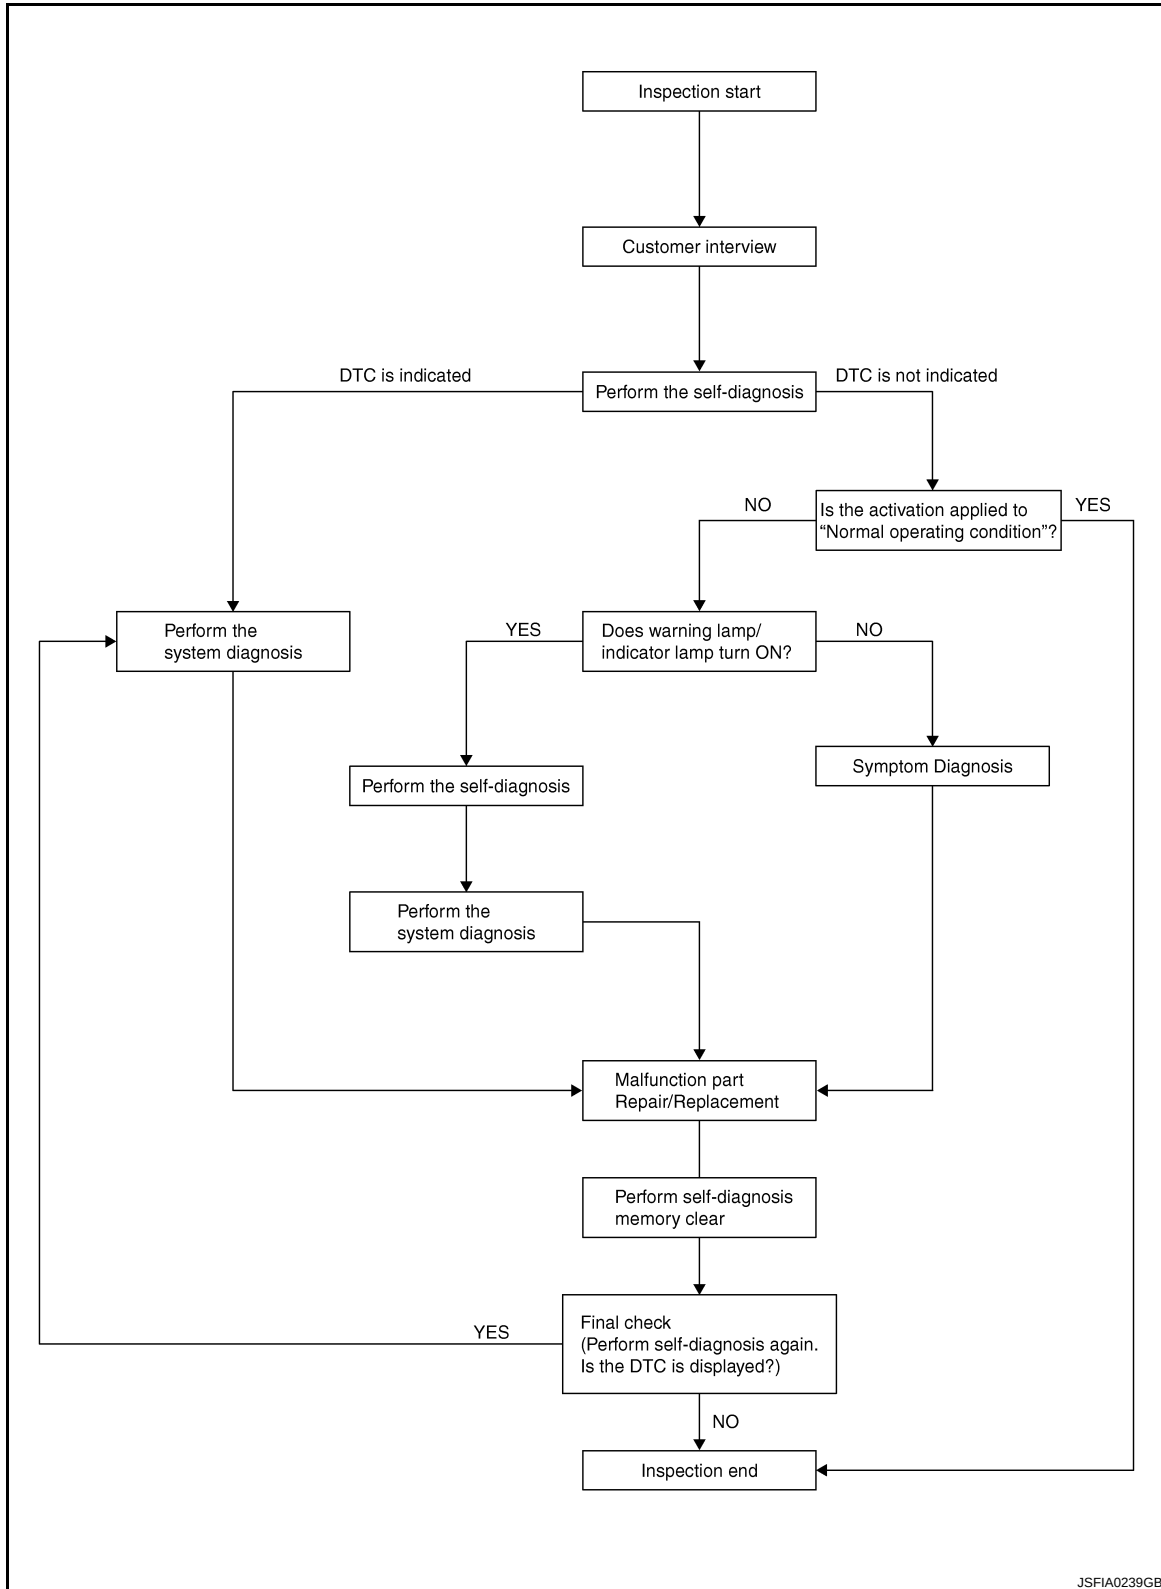

DETAILED FLOW

1.COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-65, "Diagnostic Work Sheet"](#).

>> GO TO 2.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

2.PERFORM THE SELF-DIAGNOSIS

Check the DTC display with the self-diagnosis function.

Is there any DTC displayed?

YES >> GO TO 3.

NO >> GO TO 4.

3.PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC. Refer to [BRC-140, "DTC No. Index"](#).

>> GO TO 7.

4.CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-148, "Description"](#).

Is the symptom a normal operation?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: Refer to [BRC-128, "Description"](#).
- Brake warning lamp: Refer to [BRC-129, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-130, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-131, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6.

NO >> GO TO 2.

6.PERFORM THE DIAGNOSIS BY SYMPTOM

Perform the diagnosis applicable to the symptom.

>> GO TO 7.

7.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 8.

8.MEMORY CLEAR

Perform self-diagnosis memory clear.

>> GO TO 9.

9.FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely.

Is no other DTC present and the repair completed?

YES >> INSPECTION END

NO >> GO TO 3.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Diagnostic Work Sheet

INFOID:000000003766880

Customer name MR/MS	Model & Year		VIN
Engine #	Trans.		Mileage
Incident Date	Manuf. Date		In Service Date
Symptoms	☐ Noise and vibration (from engine compartment) ☐ Noise and vibration (from axle)	☐ Warning / Indicator activate	☐ Firm pedal operation ☐ Large stroke pedal operation
	☐ TCS does not work (Rear wheels slip when accelerating)	☐ ABS does not work (Wheels lock when braking)	☐ Lack of sense of acceleration
Engine conditions	☐ When starting ☐ After starting		
Road conditions	☐ Low friction road (☐ Snow ☐ Gravel ☐ Other) ☐ Bumps / potholes		
Driving conditions	☐ Full-acceleration ☐ High speed cornering ☐ Vehicle speed: Greater than 10 km/h (6 MPH) ☐ Vehicle speed: 10 km/h (6 MPH) or less ☐ Vehicle is stopped		
Applying brake conditions	☐ Suddenly ☐ Gradually		
Other conditions	☐ Operation of electrical equipment ☐ Shift change ☐ Other descriptions		

SFIA3265E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000003766881

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000003766882

1.PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:000000003766883

When doing work that applies to the list below, make sure to adjust neutral position of steering angle sensor before running vehicle.

×: Required —: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/Installing steering angle sensor	×
Replacing steering angle sensor	×
Removing/Installing steering components	×
Replacing steering components	×
Removing/Installing suspension components	×
Replacing suspension components	×
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	×

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:000000003766884

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT-III.
(Adjustment cannot be done without CONSULT-III.)

1.ALIGN THE VEHICLE STATUS

Stop the vehicle with front wheels in straight-ahead position.

>> GO TO 2.

2.PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. On the CONSULT-III screen, touch "WORK SUPPORT" and "ST ANG SEN ADJUSTMENT" in order.
2. Touch "START".

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

CAUTION:

Do not touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, touch "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3.

3. CHECK DATA MONITOR

1. Run the vehicle with front wheels in straight-ahead position, then stop.
2. Select "STR ANGLE SIG" in "DATA MONITOR" and check steering angle sensor signal.

STR ANGLE SIG : $0 \pm 2.5^\circ$

Is the steering angle within the specified range?

YES >> GO TO 4.

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1.

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memories of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-80, "CONSULT-III Function"](#).
- ECM: Refer to [EC-113, "CONSULT-III Function"](#).

Are the memories erased?

YES >> INSPECTION END

NO >> Check the items indicated by the self-diagnosis.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O


P

FUNCTION DIAGNOSIS

VDC

System Diagram


INFOID:000000003766885

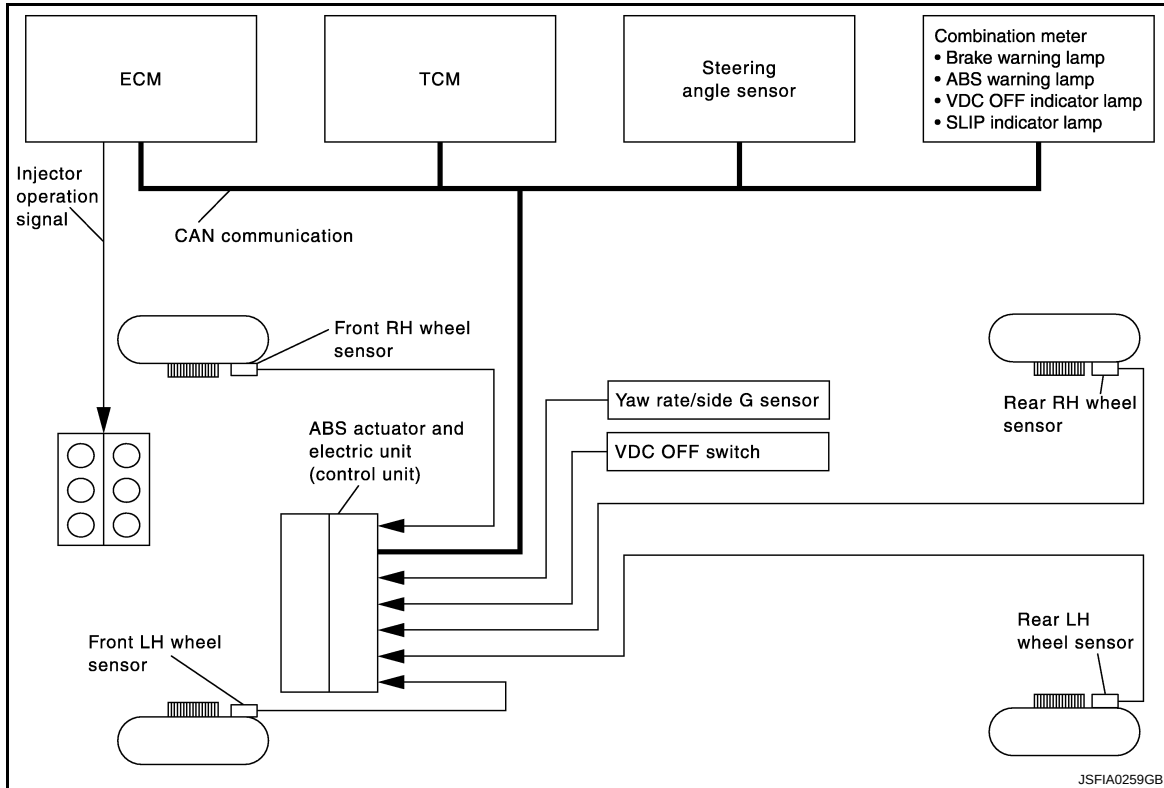

System Description

INFOID:000000003766886

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensor. Using information from yaw rate/side G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

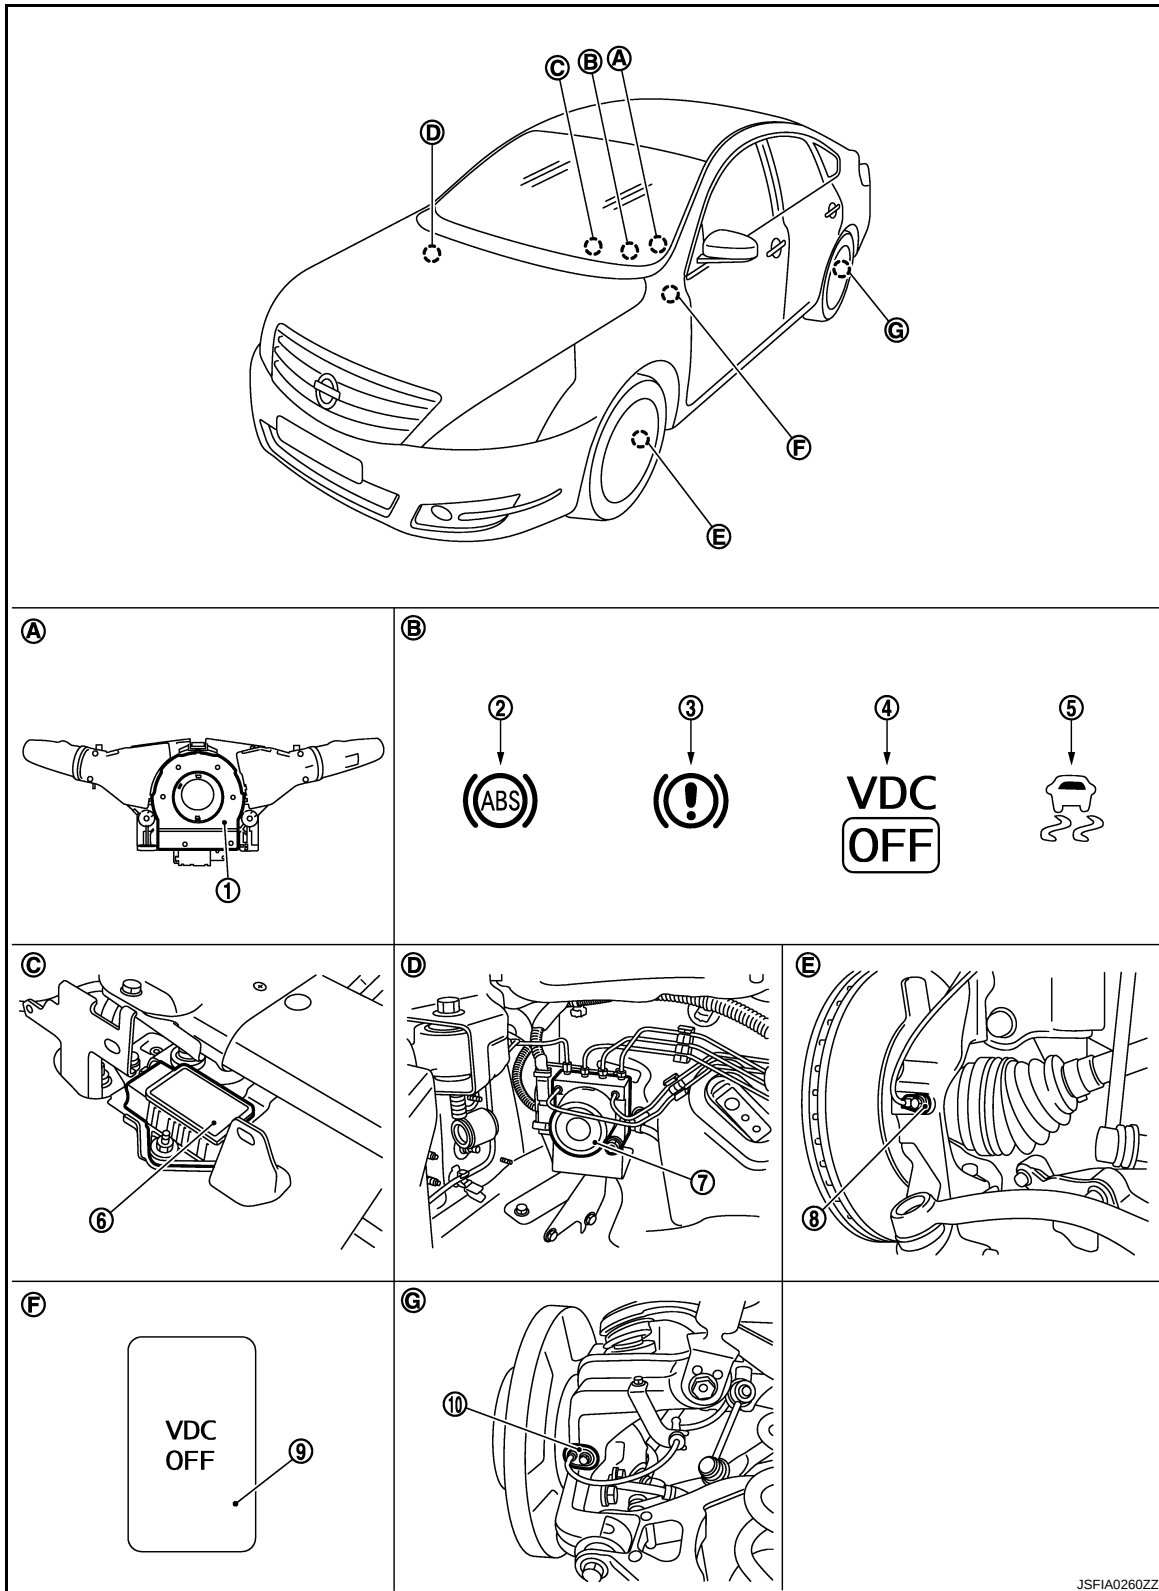

- | | | |
|--|------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. Yaw rate/side G sensor |
| 7. ABS actuator and electric unit (control unit) | 8. Front wheel sensor | 9. VDC OFF switch |
| 10. Rear wheel sensor | | |

- | | | |
|----------------------------------|----------------------|----------------------------------|
| A. Back of spiral cable assembly | B. Combination meter | C. Under center console |
| D. Engine room right side | E. Steering knuckle | F. Instrument driver lower panel |
| G. Rear axle | | |

Component Description


INFOID:000000003766888

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-94, "Description"
	Motor	
	Actuator relay (main relay)	BRC-106, "Description"
	Solenoid valve	BRC-101, "Description"
	Pressure sensor	BRC-108, "Description"
	VDC switch-over valve (USV1, USV2)	BRC-118, "Description"
	VDC switch-over valve (HSV1, HSV2)	BRC-120, "Description"
Wheel sensor		BRC-85, "Description"
Yaw rate/side G sensor		BRC-113, "Description"
Steering angle sensor		BRC-110, "Description"
VDC OFF switch		BRC-126, "Description"
ABS warning lamp		BRC-128, "Description"
Brake warning lamp		BRC-129, "Description"
VDC OFF indicator lamp		BRC-130, "Description"
SLIP indicator lamp		BRC-131, "Description"

TCS

System Diagram

INFOID:000000003767312

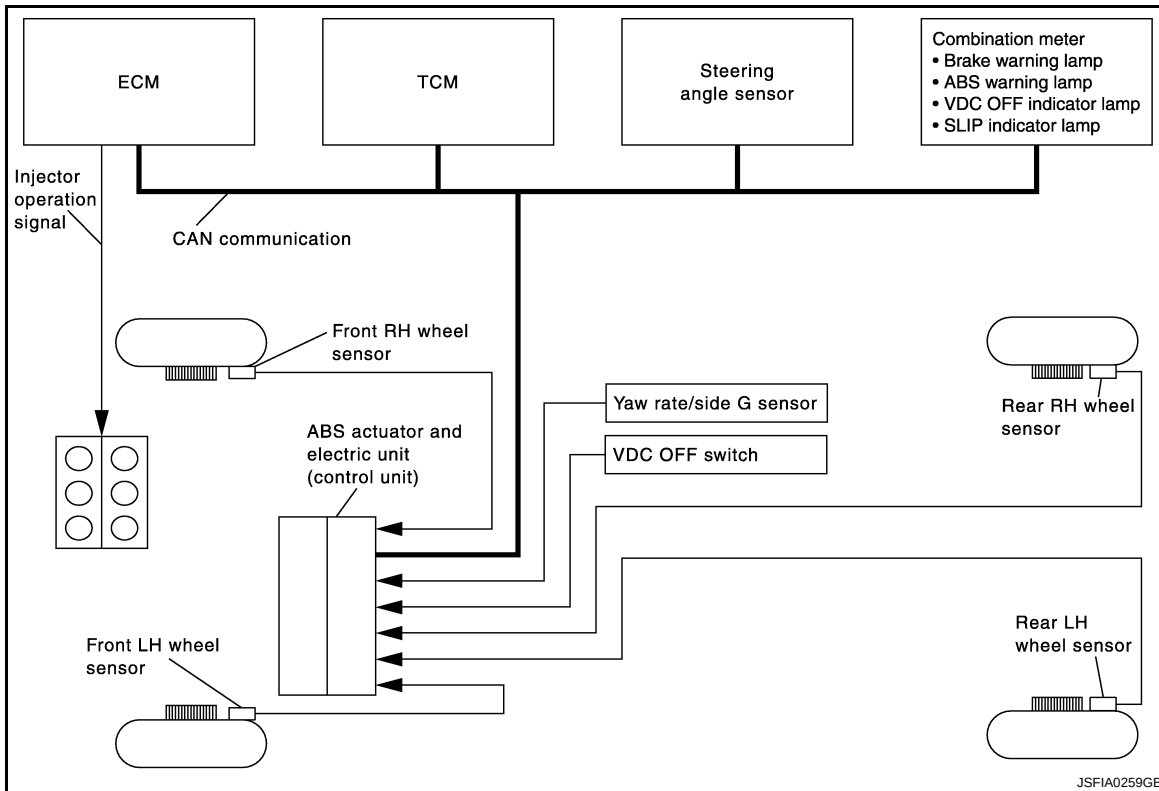


System Description

INFOID:000000003766890

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and CVT shift position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, TCS informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

Component Parts Location

INFOID:000000003767313

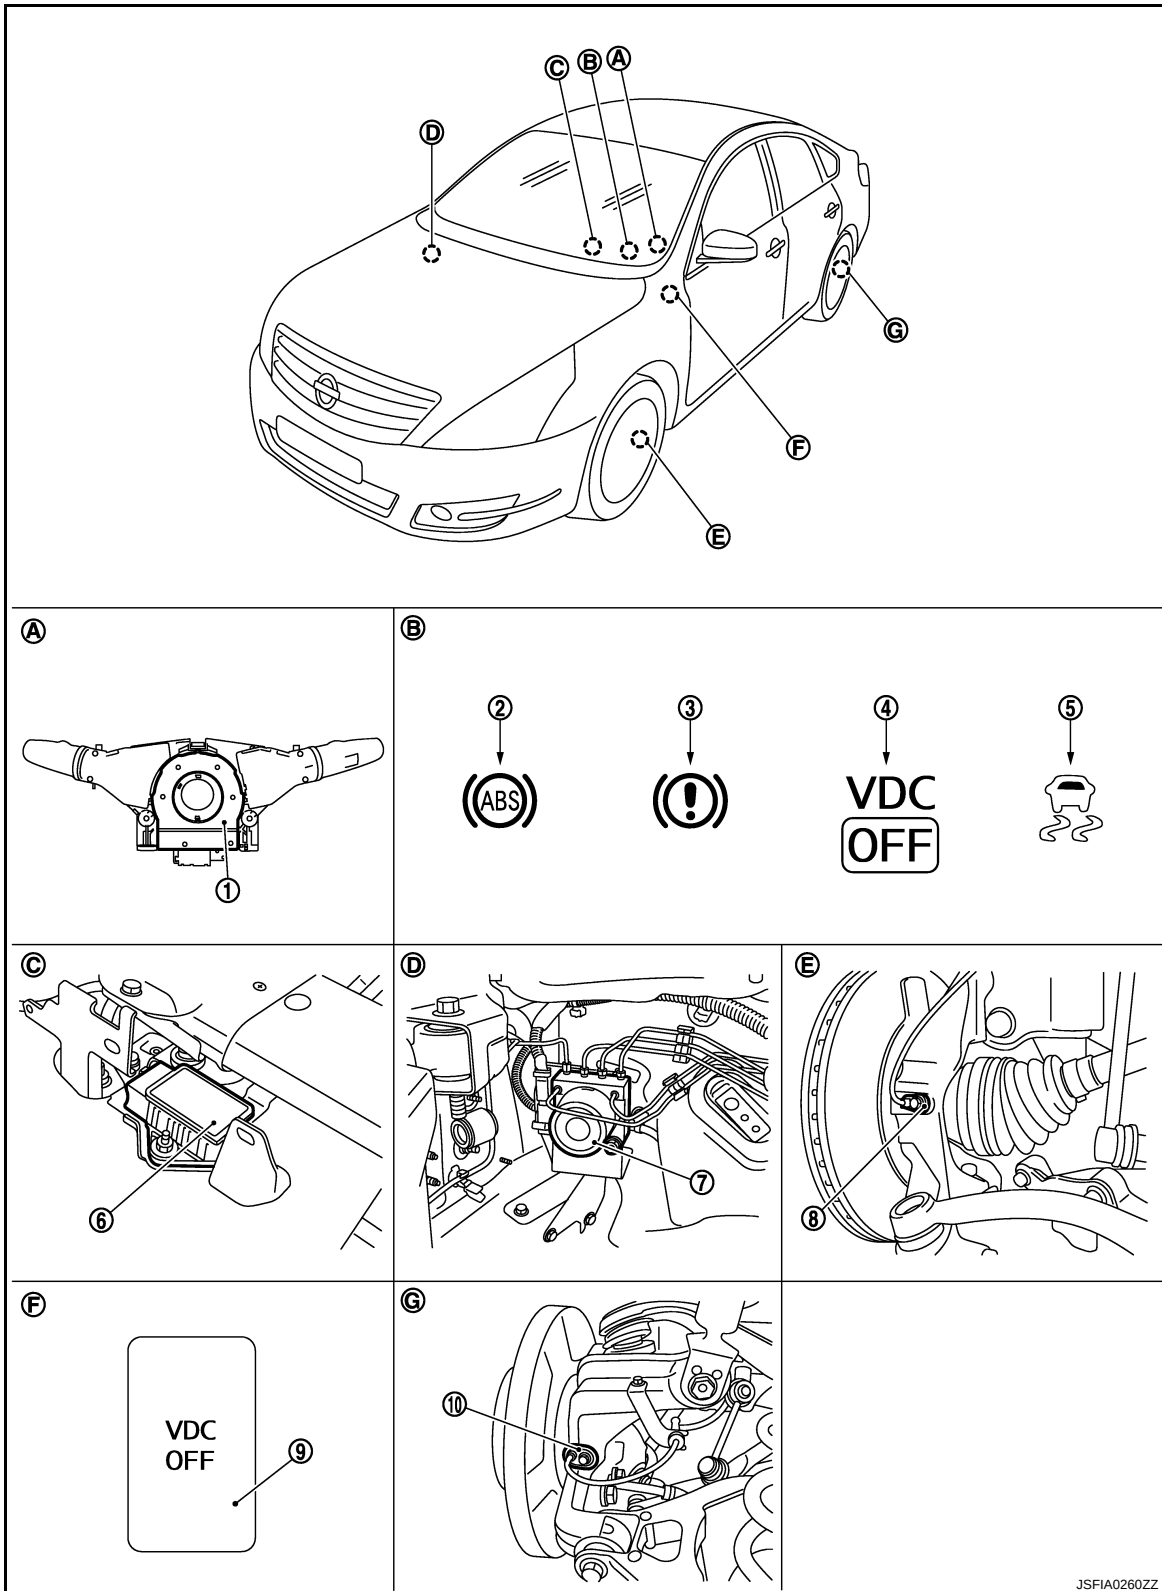

- | | | |
|--|------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. Yaw rate/side G sensor |
| 7. ABS actuator and electric unit (control unit) | 8. Front wheel sensor | 9. VDC OFF switch |
| 10. Rear wheel sensor | | |

- A. Back of spiral cable assembly B. Combination meter C. Under center console
 D. Engine room right side E. Steering knuckle F. Instrument driver lower panel
 G. Rear axle

Component Description

INFOID:000000003767314

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-94, "Description"
	Motor	
	Actuator relay (main relay)	BRC-106, "Description"
	Solenoid valve	BRC-103, "Description"
	Pressure sensor	BRC-108, "Description"
	VDC switch-over valve (USV1, USV2)	BRC-118, "Description"
	VDC switch-over valve (HSV1, HSV2)	BRC-120, "Description"
Wheel sensor		BRC-96, "Description"
Yaw rate/side G sensor		BRC-113, "Description"
Steering angle sensor		BRC-110, "Description"
VDC OFF switch		BRC-126, "Description"
ABS warning lamp		BRC-128, "Description"
Brake warning lamp		BRC-129, "Description"
VDC OFF indicator lamp		BRC-130, "Description"
SLIP indicator lamp		BRC-131, "Description"


The diagram illustrates the electrical and data connections for the ABS system. At the top, four main control units are shown: ECM (Engine Control Module), TCM (Transmission Control Module), Steering angle sensor, and a Combination meter. The Combination meter includes the Brake warning lamp, ABS warning lamp, VDC OFF indicator lamp, and SLIP indicator lamp. A CAN communication bus connects the ECM, TCM, and Steering angle sensor. The ECM sends an injector operation signal to the fuel injectors. The TCM sends signals to the Front RH wheel sensor, Front LH wheel sensor, and the Rear RH wheel sensor. The Steering angle sensor sends signals to the Yaw rate/side G sensor and the VDC OFF switch. The Combination meter sends signals to the Yaw rate/side G sensor and the VDC OFF switch. The Yaw rate/side G sensor and VDC OFF switch send signals to the ABS actuator and electric unit (control unit). The Front RH wheel sensor, Front LH wheel sensor, and Rear RH wheel sensor send signals to the ABS actuator and electric unit (control unit). The Rear LH wheel sensor sends a signal to the Rear RH wheel sensor. The ABS actuator and electric unit (control unit) sends signals to the Front RH wheel sensor, Front LH wheel sensor, and Rear RH wheel sensor.

INFOID:0000000003766894

- BRC-74**

Component Parts Location

INFOID:000000003767316

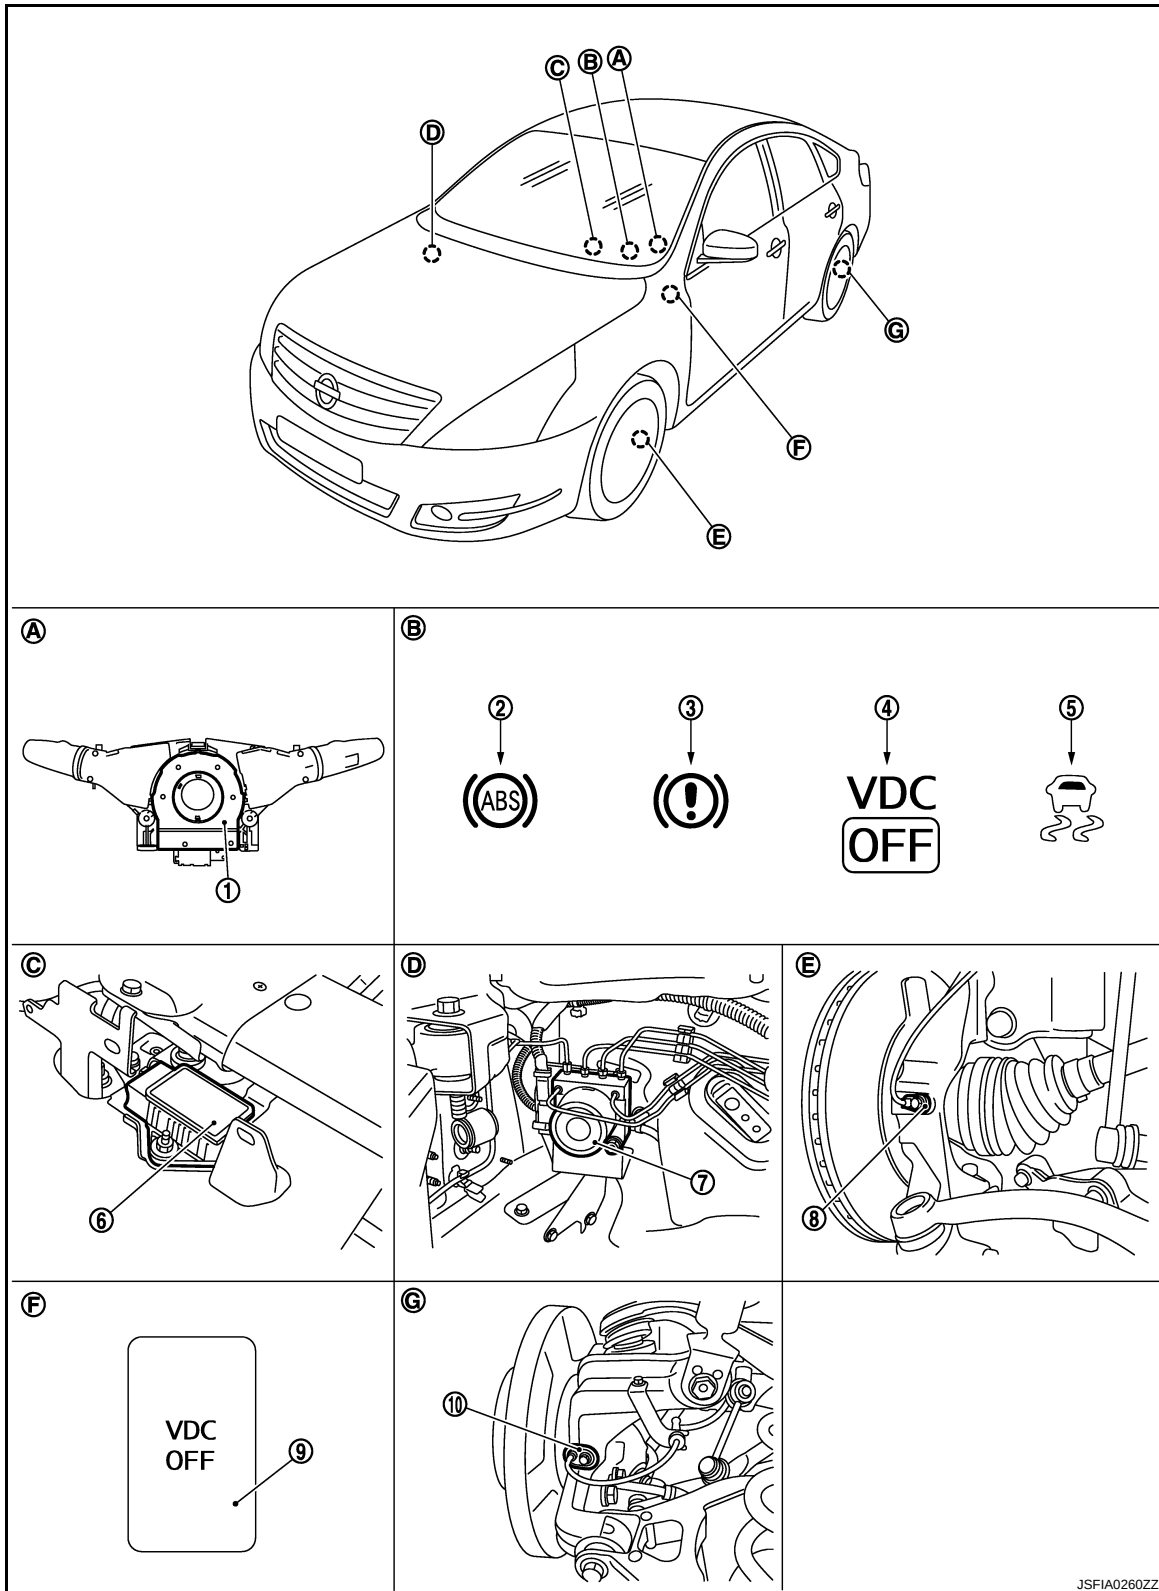

- | | | |
|--|------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. Yaw rate/side G sensor |
| 7. ABS actuator and electric unit (control unit) | 8. Front wheel sensor | 9. VDC OFF switch |
| 10. Rear wheel sensor | | |

ABS

[VDC/TCS/ABS]

< FUNCTION DIAGNOSIS >

- | | | |
|----------------------------------|----------------------|----------------------------------|
| A. Back of spiral cable assembly | B. Combination meter | C. Under center console |
| D. Engine room right side | E. Steering knuckle | F. Instrument driver lower panel |
| G. Rear axle | | |

Component Description


INFOID:000000003767317

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-94, "Description"
	Motor	
	Actuator relay (main relay)	BRC-106, "Description"
	Solenoid valve	BRC-103, "Description"
	Pressure sensor	BRC-108, "Description"
	VDC switch-over valve (USV1, USV2)	BRC-118, "Description"
	VDC switch-over valve (HSV1, HSV2)	BRC-120, "Description"
Wheel sensor		BRC-96, "Description"
Yaw rate/side G sensor		BRC-113, "Description"
Steering angle sensor		BRC-110, "Description"
VDC OFF switch		BRC-126, "Description"
ABS warning lamp		BRC-128, "Description"
Brake warning lamp		BRC-129, "Description"
VDC OFF indicator lamp		BRC-130, "Description"
SLIP indicator lamp		BRC-131, "Description"

EBD

System Diagram

INFOID:000000003767318

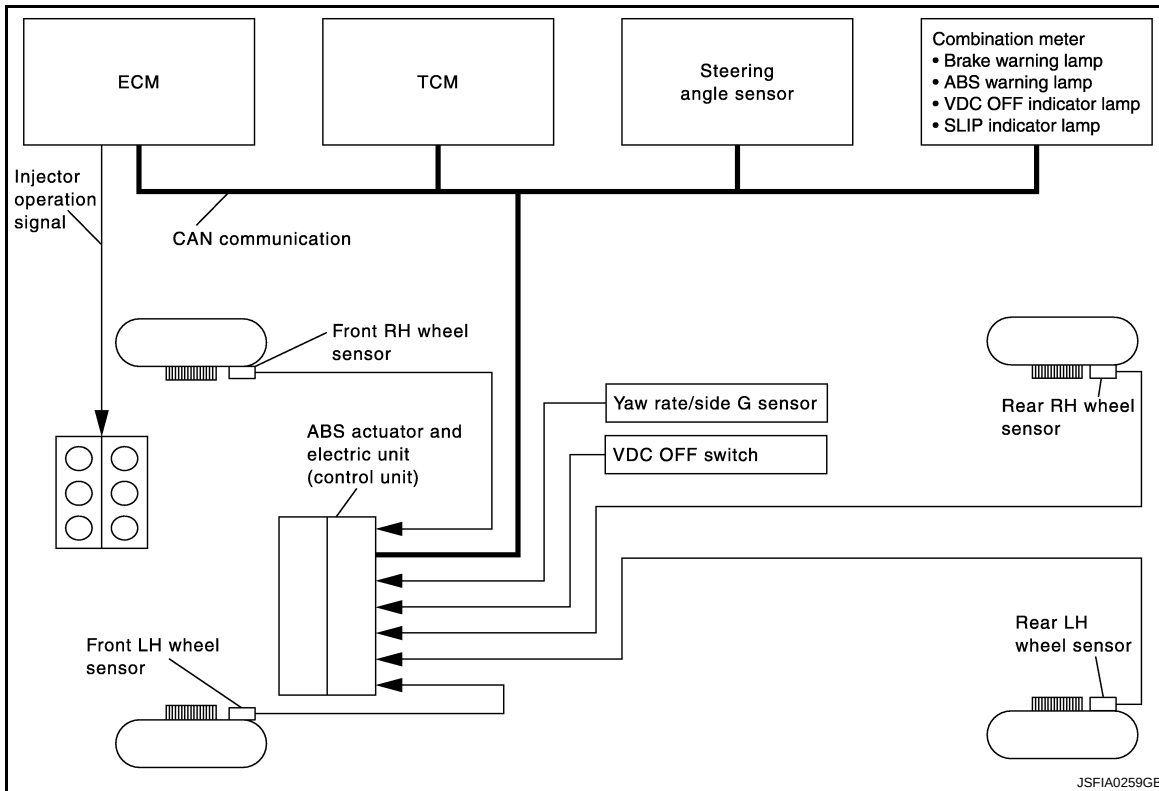


System Description

INFOID:000000003766898

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT-III is available.

Component Parts Location

INFOID:000000003767319

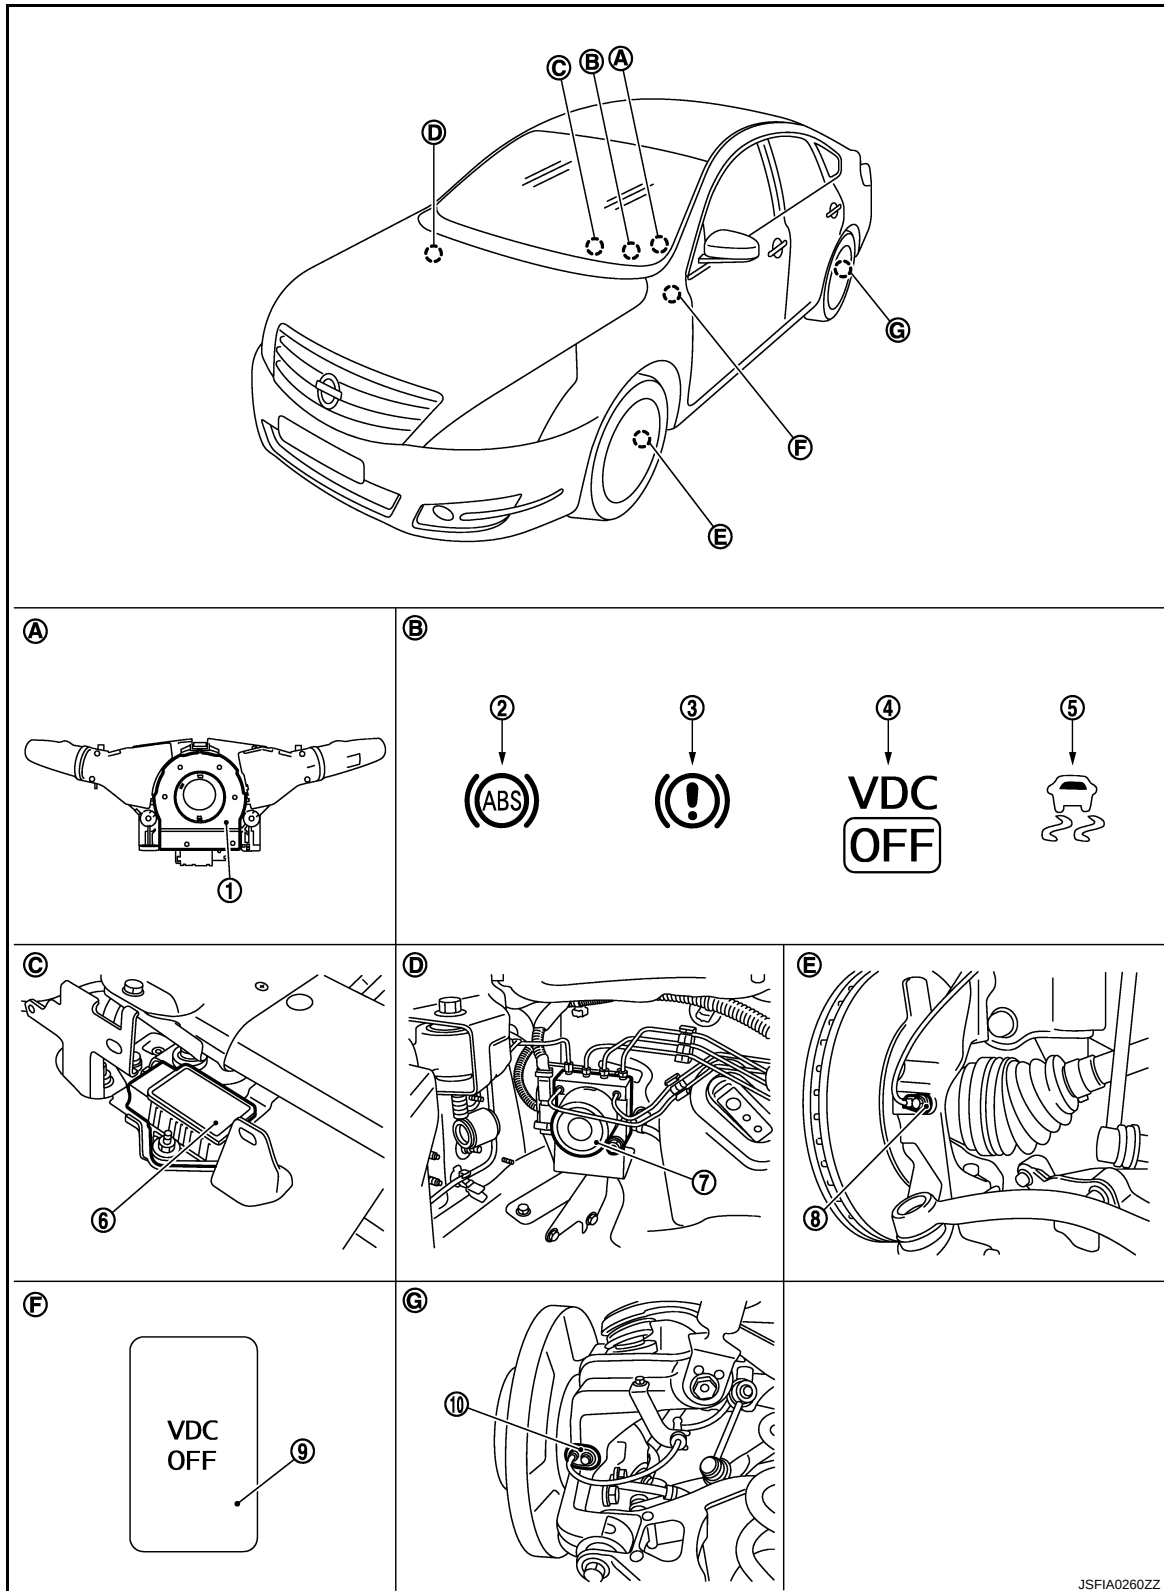

- | | | |
|--|------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. Yaw rate/side G sensor |
| 7. ABS actuator and electric unit (control unit) | 8. Front wheel sensor | 9. VDC OFF switch |
| 10. Rear wheel sensor | | |

< FUNCTION DIAGNOSIS >

- | | | |
|----------------------------------|----------------------|----------------------------------|
| A. Back of spiral cable assembly | B. Combination meter | C. Under center console |
| D. Engine room right side | E. Steering knuckle | F. Instrument driver lower panel |
| G. Rear axle | | |

Component Description

INFOID:000000003767320

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-94, "Description"
	Motor	
	Actuator relay (main relay)	BRC-106, "Description"
	Solenoid valve	BRC-103, "Description"
	Pressure sensor	BRC-108, "Description"
	VDC switch-over valve (USV1, USV2)	BRC-118, "Description"
	VDC switch-over valve (HSV1, HSV2)	BRC-120, "Description"
Wheel sensor		BRC-96, "Description"
Yaw rate/side G sensor		BRC-113, "Description"
Steering angle sensor		BRC-110, "Description"
VDC OFF switch		BRC-126, "Description"
ABS warning lamp		BRC-128, "Description"
Brake warning lamp		BRC-129, "Description"
VDC OFF indicator lamp		BRC-130, "Description"
SLIP indicator lamp		BRC-131, "Description"

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT-III Function

INFOID:000000003766901

FUNCTION

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-III.
Self diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	CONSULT-III drives some actuators apart from ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.

WORK SUPPORT

Item	Description
ST ANG SEN ADJUSTMENT	Adjusts the neutral position of the steering angle sensor.

SELF DIAGNOSTIC RESULT

Operation Procedure

Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

Display Item List

Refer to [BRC-140. "DTC No. Index"](#).

How to Erase Self-diagnosis Results

After erasing DTC memory, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driven at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay in "ON" position.

DATA MONITOR

Display Item List

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front LH wheel sensor signal
FR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front RH wheel sensor signal
RR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear LH wheel sensor signal

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[VDC/TCS/ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS		
RR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear RH wheel sensor signal	A
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status	B
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)	C
GEAR	×	×	Gear position determined by TCM	D
OFF SW (On/Off)	×	×	VDC OFF switch	
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate/side G sensor	E
ACCEL POS SIG (%)	×	▼	Throttle actuator opening/closing is displayed (Linked with accelerator pedal)	
SIDE G-SENSOR (m/s ²)	×	▼	Transverse G detected by yaw rate/side G sensor	BRC
STR ANGLE SIG (°)	×	▼	Steering angle detected by steering angle sensor	G
PRESS SENSOR (bar)	×	▼	Brake fluid pressure detected by pressure sensor	
ENGINE RPM [tr/min (rpm)]	×	▼	Engine speed	H
FLUID LEV SW (On/Off)	×	▼	Brake fluid level switch signal status	I
PARK BRAKE SW (On/Off)	×	▼	Parking brake switch signal status	
FR RH IN SOL (On/Off) (Note 1)	▼	×	Operation status of each solenoid valve	J
FR RH OUT SOL (On/Off) (Note 1)	▼	×		K
FR LH IN SOL (On/Off) (Note 1)	▼	×		
FR LH OUT SOL (On/Off) (Note 1)	▼	×		L
RR RH IN SOL (On/Off) (Note 1)	▼	×		M
RR RH OUT SOL (On/Off) (Note 1)	▼	×		
RR LH IN SOL (On/Off) (Note 1)	▼	×		N
RR LH OUT SOL (On/Off) (Note 1)	▼	×		O
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation	
ACTUATOR RLY (On/Off) (Note 1)	▼	×	Actuator relay operation	P
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp	
OFF LAMP (On/Off)	▼	×	VDC OFF indicator lamp	
SLIP LAMP (On/Off)	▼	×	SLIP indicator lamp	

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[VDC/TCS/ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
EBD WARN LAMP (On/Off)	▼	▼	Brake warning lamp
EBD SIGNAL (On/Off)	▼	▼	EBD operation
ABS SIGNAL (On/Off)	▼	▼	ABS operation
TCS SIGNAL (On/Off)	▼	▼	TCS operation
VDC SIGNAL (On/Off)	▼	▼	VDC operation
EBD FAIL SIG (On/Off)	▼	▼	EBD fail-safe signal
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal
TCS FAIL SIG (On/Off)	▼	▼	TCS fail-safe signal
VDC FAIL SIG (On/Off)	▼	▼	VDC fail-safe signal
CRANKING SIG (On/Off)	▼	▼	Crank operation
USV[FR-RL] (On/Off) (Note 1)	▼	▼	VDC switch-over valve
USV[FL-RR] (On/Off) (Note 1)	▼	▼	
HSV[FR-RL] (On/Off) (Note 1)	▼	▼	
HSV[FL-RR] (On/Off) (Note 1)	▼	▼	
V/R OUTPUT (On/Off)	▼	▼	Solenoid valve relay activated
M/R OUTPUT (On/Off)	▼	▼	Actuator motor and motor relay activated

NOTE:

1: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ACTIVE TEST

CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be started when ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON during active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" is displayed, to perform test again.

Test Item

ABS SOLENOID VALVE

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[VDC/TCS/ABS]

- Touch “Up”, “Keep” and “Down”. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS SOLENOID VALVE (ACT)

- Touch “Up”, “ACT UP” and “ACT KEEP”. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< FUNCTION DIAGNOSIS >

[VDC/TCS/ABS]

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Touch “On” and “Off” on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

COMPONENT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

Description

INFOID:0000000003766902

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000003766903

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1101	RR RH SENSOR-1	Circuit of rear RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)
C1102	RR LH SENSOR-1	Circuit of rear LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1103	FR RH SENSOR-1	Circuit of front RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1104	FR LH SENSOR-1	Circuit of front LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-85, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003766904

CAUTION:

Do not check between wheel sensor terminals.

1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2. CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.
2. Turn the ignition switch ON.
CAUTION:
Never start the engine.
3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.
2. Connect each wheel sensor connector.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

3. Check wheel sensor signal. Refer to [BRC-87. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:0000000003766905

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-85. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003766906

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1105, C1106, C1107, C1108 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

Description

INFOID:000000003767326

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766908

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1105	RR RH SENSOR-2	When the circuit in the rear RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)
C1106	RR LH SENSOR-2	When the circuit in the rear LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1107	FR RH SENSOR-2	When the circuit in the front RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1108	FR LH SENSOR-2	When the circuit in the front LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-88, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767327

CAUTION:

Do not check between wheel sensor terminals.

1.CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.

2. Turn the ignition switch ON.

CAUTION:

Never start the engine.

3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< COMPONENT DIAGNOSIS >

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.
2. Connect each wheel sensor connector.
3. Check wheel sensor signal. Refer to [BRC-90. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:0000000003767328

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display (± 10% or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-88. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003767329

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1109 POWER AND GROUND SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

Description

INFOID:000000003766912

Supplies electric power to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766913

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1109	BATTERY VOLTAGE [ABNORMAL]	When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal.	• Harness or connector • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1109" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-91, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766914

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

2. Check 30A fusible link (G).
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and battery positive terminal.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	3	Battery positive terminal	Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts. (Check ABS earth bolt for tightness and corrosion.)

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1109 POWER AND GROUND SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts. (Check ABS earth bolt for tightness and corrosion.)

Special Repair Requirement

INFOID:0000000003767330

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< COMPONENT DIAGNOSIS > [VDC/TCS/ABS]

C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:000000003766916

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	ABS actuator and electric unit (control unit)
C1153	EMERGENCY BRAKE	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little)	
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1110", "C1153" or "C1170" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-93, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766917

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

CAUTION:

Replace ABS actuator and electric unit (control unit) when self-diagnostic result shows items other than those applicable.

>> Replace ABS actuator and electric unit (control unit).

Special Repair Requirement

INFOID:000000003767331

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:000000003766919

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766920

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	• Harness or connector • ABS actuator and electric unit (control unit)
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1111" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-94, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766921

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnect, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between the ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	2	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:0000000003766922

1.CHECK ACTIVE TEST

- On "ACTIVE TEST", select "ABS MOTOR".
- Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-94, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003767332

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1115 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1115 WHEEL SENSOR

Description

INFOID:000000003767333

When the sensor rotor rotates, the magnetic field changes. Wheel sensor converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766930

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When wheel sensor input signal is malfunctioning.	• Harness or connector • Wheel sensor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1115" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-96, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767334

CAUTION:

Do not check between wheel sensor terminals.

1.CHECK TIRES

Check air pressure, wear and size. Refer to [WT-5, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform the self-diagnosis.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

C1115 WHEEL SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Measurement terminal for power supply circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	C4 (Rear RH)		
	6	C3 (Rear LH)		

Measurement terminal for signal circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	C4 (Rear RH)		
	17	C3 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK WHEEL SENSOR POWER SUPPLY CIRCUIT

1. Connect ABS actuator and electric unit (control unit) connector.
2. Turn the ignition switch ON.
CAUTION:
Never start the engine.
3. Check the voltage between wheel sensor harness connector and ground.

Wheel sensor		—	Voltage
Connector	Terminal		
E39 (Front RH)	1	Ground	8 V or more
E22 (Front LH)			
C4 (Rear RH)			
C3 (Rear LH)			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

6.CHECK DATA MONITOR

1. Turn the ignition switch OFF.
2. Connect each wheel sensor connector.
3. Check wheel sensor signal. Refer to [BRC-98, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767335

1.CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

Wheel sensor	Condition	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR LH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR RH SENSOR	Vehicle stopped	0 [km/h (MPH)]
	Vehicle running (Note)	Nearly matches the speedometer display ($\pm 10\%$ or less)

NOTE:

Confirm tire pressure is normal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-96, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000003767336

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1116 STOP LAMP SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

Description

INFOID:000000003766934

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766935

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When stop lamp switch circuit is open.	• Harness or connector • Stop lamp switch • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1116" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-99. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766936

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect stop lamp switch connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [BRC-99. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace stop lamp switch.

3.CHECK STOP LAMP SWITCH CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E36	20	Ground	Brake pedal is depressed	Battery voltage
			Brake pedal is released	Approx. 0 V

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766937

1.CHECK STOP LAMP SWITCH

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check the continuity between stop lamp switch connector terminals.

Stop lamp switch Terminal	Condition	Continuity
1 – 2	Release stop lamp switch (When brake pedal is depressed.)	Existed
	Push stop lamp switch (When brake pedal is released.)	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-17, "Exploded View"](#).

Special Repair Requirement

INFOID:000000003767337

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1120, C1122, C1124, C1126 IN ABS SOL

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:000000003766939

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766940

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-101, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766941

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
 NO >> Repair or replace damaged parts.

Component Inspection

INFOID:00000000376942

1.CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "Keep" and "Down", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Proceed to diagnosis procedure. Refer to [BRC-101, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000003767341

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1121, C1123, C1125, C1127 OUT ABS SOL

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:000000003767338

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766945

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-103, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767339

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1121, C1123, C1125, C1127 OUT ABS SOL

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767340

1.CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "Keep" and "Down", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-103, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000003767342

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1130 ENGINE SIGNAL

Description

INFOID:000000003766949

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

DTC Logic

INFOID:000000003766950

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1130	ENGINE SIGNAL 1	Major engine components are malfunctioning.	• Harness or connector • ABS actuator and electric unit (control unit) • ECM • CAN communication line

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1130" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-105, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766951

1.ECM SELF-DIAGNOSIS

Perform ECM self-diagnosis.

Is any item indicated on the self-diagnosis display?

- YES >> Check the malfunctioning system.
 NO >> GO TO 2.

2.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

1. Erase ABS actuator and electric unit (control unit) self-diagnosis results.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Make sure that malfunction indicator lamp (MIL) turns OFF.
5. Stop the engine. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is any item indicated on the self-diagnosis display?

- YES >> Replace ABS actuator and electric unit (control unit).
 NO >> Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

Special Repair Requirement

INFOID:000000003767343

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1140 ACTUATOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RELAY SYSTEM

Description

INFOID:0000000003766924

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000003766925

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1140	ACTUATOR RLY	During the actuator relay operating with OFF, when the actuator relay turns ON, or when the control line for the relay is shorted to the ground.	• Harness or connector • ABS actuator and electric unit (control unit)
		During the actuator relay operating with ON, when the actuator relay turns ON, or when the control line for the relay is open.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1140" detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-106, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003766926

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

C1140 ACTUATOR RELAY SYSTEM

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:0000000003767346

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-106, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003767344

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1142 PRESS SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1142 PRESS SENSOR

Description

INFOID:000000003766953

The pressure sensor converts the brake fluid pressure to an electric signal and transmits it to the ABS actuator and electric unit (control unit). [The pressure sensor is integrated in the ABS actuator and electric unit (control unit).]

DTC Logic

INFOID:000000003766954

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1142	PRESS SEN CIRCUIT	Pressure sensor signal line is open or shorted, or pressure sensor is malfunctioning.	• Harness or connector • Stop lamp switch • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1142" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-108. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766955

1.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [BRC-99. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunction component.

2.CHECK DATA MONITOR

Check pressure sensor signal. Refer to [BRC-108. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >>
 - Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
 - Brake pedal: Refer to [BR-6. "Inspection and Adjustment"](#).
 - Brake booster: Refer to [BR-12. "Inspection"](#).
 - Brake master cylinder: Refer to [BR-11. "Inspection"](#).

3.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is any item indicated on the self-diagnosis display?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

Component Inspection

INFOID:000000003766956

1.CHECK DATA MONITOR

On "DATA MONITOR", select "PRESS SENSOR" and check the brake fluid pressure.

C1142 PRESS SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Condition	PRESS SENSOR (DATA MONITOR)
With ignition switch turned ON and brake pedal released.	Approx. 0 bar
With ignition switch turned ON and brake pedal depressed.	– 40 to 300 bar

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-108, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003767345

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1143 STEERING ANGLE SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1143 STEERING ANGLE SENSOR

Description

INFOID:000000003766958

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:000000003766959

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1143	ST ANG SEN CIRCUIT	Steering angle sensor is malfunctioning.	• Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1143" detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-110. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766960

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect steering angle sensor connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK STEERING ANGLE SENSOR HARNESS

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Check the voltage between steering angle sensor harness connector and ground.

Steering angle sensor		—	Voltage
Connector	Terminal		
M30	4	Ground	Battery voltage

3. Turn the ignition switch OFF.
4. Check the continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M30	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace damaged parts.

C1143 STEERING ANGLE SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

3.CHECK DATA MONITOR

1. Connect steering angle sensor connector and ABS actuator and electric unit (control unit) connector.
2. Check steering angle sensor signal. Refer to [BRC-111, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Replace steering angle sensor and adjust neutral position of steering angle sensor.

Component Inspection

INFOID:0000000003766961

1.CHECK DATA MONITOR

Select "STR ANGLE SIG" in "DATA MONITOR" and check steering angle sensor signal.

Steering condition	STR ANGLE SIG (DATA MONITOR)
Driving straight	±2.5°
Turn 90° to right	Approx. +90°
Turn 90° to left	Approx. -90°

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Proceed to diagnosis procedure. Refer to [BRC-110, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003766962

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering angle sensor or the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1144 STEERING ANGLE SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1144 STEERING ANGLE SENSOR

DTC Logic

INFOID:000000003766963

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1144	ST ANG SEN SIGNAL	Neutral position of steering angle sensor is not finished.	• Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Select "ST ANG SEN ADJUSTMENT" in "WORK SUPPORT", and perform adjust the neutral position of steering angle sensor.
3. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1144" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-112. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766964

1.CHECK STEERING ANGLE SENSOR

Check steering angle sensor. Refer to [BRC-110. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).
NO >> Repair or replace damaged parts.

Special Repair Requirement

INFOID:000000003767347

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering angle sensor or the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1145, C1146 YAW RATE/SIDE G SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1145, C1146 YAW RATE/SIDE G SENSOR

Description

INFOID:000000003766966

The yaw rate/side G sensor detects the yaw rate/side G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000003766967

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1145	YAW RATE SENSOR	Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted.	• Harness or connector • ABS actuator and electric unit (control unit) • Yaw rate/side G sensor
C1146	SIDE G-SEN CIRCUIT	Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1145" or "C1146" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-113, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766968

CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc., when VDC function is off (VDC OFF switch "ON") may cause yaw rate/side G sensor system to indicate a malfunction. However, this is not a malfunction, if normal operation can be resumed after restarting engine. Then erase memory of self-diagnosis.
- If vehicle is on turn-table at entrance to parking garage, or on other moving surface, VDC OFF indicator lamp may illuminate and CONSULT-III self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn-table or other moving surface, and start the engine. Results will return to normal.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect yaw rate/side G sensor connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Check the voltage between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Voltage
Connector	Terminal		
M72	4	Ground	Battery voltage

3. Turn the ignition switch OFF.
4. Check the voltage between yaw rate/side G sensor harness connector and ground.

C1145, C1146 YAW RATE/SIDE G SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Yaw rate/side G sensor		—	Voltage
Connector	Terminal		
M72	4	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

3.CHECK YAW RATE/SIDE G SENSOR GROUND CIRCUIT

Check the continuity between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Continuity
Connector	Terminal		
M72	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4.CHECK YAW RATE/SIDE G SENSOR HARNESS

Check the continuity between yaw rate/side G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		Yaw rate/side G sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	14	M72	2	Existed
	25		3	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts. Refer to [BRC-150, "Precautions for Harness Repair"](#).

5.CHECK DATA MONITOR

1. Connect yaw rate/side G sensor connector and ABS actuator and electric unit (control unit) connector.
2. Check yaw rate/side G sensor signal. Refer to [BRC-114, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Replace yaw rate/side G sensor.

Component Inspection

INFOID:000000003766969

1.CHECK DATA MONITOR

Select "YAW RATE SEN", "SIDE G-SENSOR" in "DATA MONITOR" and check yaw rate/side G sensor signal.

Yaw rate sensor

Vehicle condition	YAW RATE SEN (DATA MONITOR)
Vehicle stopped	Approx. 0 d/s
Vehicle turning right	Negative value
Vehicle turning left	Positive value

C1145, C1146 YAW RATE/SIDE G SENSOR

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Side G sensor

Vehicle condition	SIDE G-SENSOR (DATA MONITOR)
Vehicle stopped	Approx. 0 m/s ²
Vehicle turning right	Negative value
Vehicle turning left	Positive value

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-113. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000003767348

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

C1155 BRAKE FLUID LEVEL SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BRAKE FLUID LEVEL SWITCH

Description

INFOID:000000003766981

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000003766982

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	• Harness or connector • Brake fluid level switch • Combination meter

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1155" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-116. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003766983

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Disconnect combination meter connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.CHECK BRAKE FLUID LEVEL SWITCH

Check brake fluid level switch. Refer to [BRC-117. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Brake fluid level switch is malfunction. Replace reservoir tank.

3.CHECK BRAKE FLUID LEVEL SWITCH CIRCUIT

1. Check the continuity between brake fluid level switch harness connector and combination meter harness connector.

Combination meter		Brake fluid level switch		Continuity
Connector	Terminal	Connector	Terminal	
M34	27	E37	1	Existed

2. Check the continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E37	2	Ground	Existed

3. Check the continuity between combination meter harness connector and ground.

C1155 BRAKE FLUID LEVEL SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Combination meter		—	Continuity
Connector	Terminal		
M34	27	Ground	Not existed

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003766984

1.CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Check the continuity between brake fluid level switch connector terminals.

Brake fluid level switch	Condition	Continuity
Terminal		
1 – 2	When brake fluid is full in the reservoir tank.	Not existed
	When brake fluid is empty in the reservoir tank.	Existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace reservoir tank. Refer to [BR-25, "Exploded View"](#).

Special Repair Requirement

INFOID:000000003767349

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1164, C1165 CV SYSTEM

Description

INFOID:000000003767321

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

DTC Logic

INFOID:000000003767322

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1164	CV 1	VDC switch-over solenoid valve (CV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	• Harness or connector • ABS actuator and electric unit (control unit)
C1165	CV 2	VDC switch-over solenoid valve (CV2) on the secondary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1164" or "C1165" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-118, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767323

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace damaged parts.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace damaged parts.

3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

< COMPONENT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit).
 NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767324

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "ACT UP", and "ACT KEEP", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Proceed to diagnosis procedure. Refer to [BRC-118, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000003767360

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

C1166, C1167 SV SYSTEM

Description

INFOID:000000003766971

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

DTC Logic

INFOID:000000003766972

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1166	SV 1	VDC switch-over solenoid valve (SV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	• Harness or connector • ABS actuator and electric unit (control unit)
C1167	SV 2	VDC switch-over solenoid valve (SV2) on the secondary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "C1166" or "C1167" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-120, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000003767358

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace damaged parts.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace damaged parts.

3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

< COMPONENT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit).
 NO >> Repair or replace damaged parts.

Component Inspection

INFOID:000000003767359

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "ACT UP", and "ACT KEEP", and check that the system operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Proceed to diagnosis procedure. Refer to [BRC-120. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000003767361

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

U1000, U1002 CAN COMM CIRCUIT

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

U1000, U1002 CAN COMM CIRCUIT

Description

INFOID:0000000003766990

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000003766991

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	- CAN communication line - ABS actuator and electric unit (control unit)
U1002	SYSTEM COMM (CAN)	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	

DTC CONFIRMATION PROCEDURE

1.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-122, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003766992

1.PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:0000000003767351

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:000000003766998

Supplies power to ABS actuator and electric unit (control unit).

Diagnosis Procedure

INFOID:000000003766999

1.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Approx. 0 V

4. Turn the ignition switch ON.
CAUTION:
Never start the engine.
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform the trouble diagnosis for power supply circuit.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Perform the trouble diagnosis for power supply circuit.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair or replace damaged parts.

PARKING BRAKE SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

PARKING BRAKE SWITCH

Component Function Check

INFOID:000000003767000

1.CHECK PARKING BRAKE SWITCH OPERATION

Operate the parking brake pedal. Then check that the brake warning lamp in the combination meter turns ON/OFF correctly.

Condition	Brake warning lamp illumination status
When the parking brake pedal is operation.	ON
When the parking brake pedal is not operation.	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-124, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003767001

1.CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-124, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace parking brake switch.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace combination meter.

3.CHECK DATA MONITOR

On "DATA MONITOR", select "PARK BRAKE SW" and perform the parking brake switch inspection.

Condition	PARK BRAKE SW (DATA MONITOR)
Parking brake switch is active	On
Parking brake switch is inactive	Off

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check combination meter. Refer to [MWI-33, "CONSULT-III Function \(METER/M&A\)"](#).

Component Inspection

INFOID:000000003767002

1.CHECK PARKING BRAKE SWITCH

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Check the continuity between parking brake switch connector and ground.

Parking brake switch		—	Condition	Continuity
Connector	Terminal			
E27	1	Ground	When the parking brake switch is operated.	Existed
			When the parking brake switch is not operated.	Not existed

PARKING BRAKE SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace parking brake switch.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

VDC OFF SWITCH

Description

INFOID:000000003767003

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

Component Function Check

INFOID:000000003767004

1.CHECK VDC OFF SWITCH OPERATION

Turn ON/OFF the VDC OFF switch and check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly.

Condition	VDC OFF indicator lamp illumination status
Press the VDC OFF switch when VDC OFF indicator lamp is OFF.	ON
Press the VDC OFF switch when VDC OFF indicator lamp is ON.	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-126, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003767005

1.CHECK VDC OFF SWITCH

Check VDC OFF switch. Refer to [BRC-127, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> VDC OFF switch is malfunctioning. Replace VDC OFF switch.

2.CHECK VDC OFF SWITCH HARNESS

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Disconnect VDC OFF switch connector.
3. Check the continuity between VDC OFF switch harness connector and ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E36	21	M5	1	Existed

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	21	Ground	Not existed

5. Check the continuity between VDC OFF switch harness connector and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M5	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> If the open or short in harness, repair or replace harness.

VDC OFF SWITCH

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

3.CHECK COMBINATION METER

1. Connect ABS actuator and electric unit (control unit) connector.
2. Connect VDC OFF switch connector.
3. Check the indication and operation of combination meter are normal. Refer to [MWI-32. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace combination meter.

Component Inspection

INFOID:0000000003767006

1.CHECK VDC OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect VDC OFF switch connector.
3. Check the continuity between VDC OFF switch connector terminals.

VDC OFF switch	Condition	Continuity
Terminal		
1 – 2	When VDC OFF switch is hold pressed.	Existed
	When releasing VDC OFF switch.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace VDC OFF switch.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

ABS WARNING LAMP

Description

INFOID:000000003767007

×: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 1 second after turning ignition switch ON	×
1 second later after turning ignition switch ON	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:000000003767008

1.CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-128, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003767009

1.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

BRAKE WARNING LAMP

Description

INFOID:000000003767010

x: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
For 1 second after turning ignition switch ON	× (Note 2)
1 second later after turning ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting the engine, brake warning lamp is turned off.

Component Function Check

INFOID:000000003767011

BRC

1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-129, "Diagnosis Procedure"](#).

2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check parking brake switch. Refer to [BRC-124, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003767012

1. CHECK PARKING BRAKE SWITCH

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check parking brake switch. Refer to [BRC-124, "Diagnosis Procedure"](#).

2. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check items displayed by self-diagnosis.

3. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

VDC OFF INDICATOR LAMP

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Description

INFOID:0000000003767013

×: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 1 second after turning ignition switch ON	×
1 second later after turning ignition switch ON	–
VDC OFF switch turned ON. (VDC function is OFF.)	×
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:0000000003767014

1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-130, "Diagnosis Procedure"](#).

2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check VDC OFF switch. Refer to [BRC-126, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000003767015

1.CHECK VDC OFF SWITCH

Perform the trouble diagnosis for VDC OFF switch. Refer to [BRC-126, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check VDC OFF switch. Refer to [BRC-126, "Diagnosis Procedure"](#).

2.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check items displayed by self-diagnosis.

3.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

SLIP INDICATOR LAMP

< COMPONENT DIAGNOSIS >

[VDC/TCS/ABS]

SLIP INDICATOR LAMP

Description

INFOID:000000003767016

×: ON Δ: Blink —: OFF

Condition	SLIP indicator lamp
Ignition switch OFF	—
For 1 second after turning ignition switch ON	×
1 second later after turning ignition switch ON	—
VDC/TCS is activated while driving	Δ
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:000000003767017

1.CHECK SLIP INDICATOR LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-131, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003767018

1.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-32, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

ECU DIAGNOSIS

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000003767019

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed calculated by front LH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	Wheel speed calculated by front RH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR LH SENSOR	Wheel speed calculated by rear LH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR RH SENSOR	Wheel speed calculated by rear RH wheel sensor signal is displayed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
GEAR	Gear position determined by TCM	1st gear	0
		2nd gear	1
		3rd gear	2
		4th gear	3
		5th gear	4
		6th gear	5
		7th gear	6
		8th gear	7
		other	0
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	On
		VDC OFF switch OFF (When VDC OFF indicator lamp is OFF)	Off
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	Vehicle stopped	Approx. 0 d/s
		Vehicle turning right	Negative value
		Vehicle turning left	Positive value
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Vehicle turning right	Negative value
		Vehicle turning left	Positive value
STR ANGLE SIG	Steering angle detected by steering angle sensor	Driving straight	±2.5°
		Turn 90° to right	Approx. +90°
		Turn 90° to left	Approx. -90°
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
ENGINE RPM	With engine running	With engine stopped	0 rpm
		Engine running	Almost in accordance with tachometer display
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off
PARK BRAKE SW	Parking brake switch signal status	Parking brake switch is active	On
		Parking brake switch is inactive	Off
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY (Note 2)	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 3)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
EBD WARN LAMP	Brake warning lamp (Note 3)	When brake warning lamp is ON	On
		When brake warning lamp is OFF	Off
OFF LAMP	VDC OFF indicator lamp (Note 3)	When VDC OFF indicator lamp is ON	On
		When VDC OFF indicator lamp is OFF	Off
SLIP LAMP	SLIP indicator lamp (Note 3)	When SLIP indicator lamp is ON	On
		When SLIP indicator lamp is OFF	Off
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
USV [FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
USV [FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV [FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV [FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
V/R OUTPUT (Note 2)	Solenoid valve relay activated	When the solenoid valve relay is active (When ignition switch OFF)	On
		When the solenoid valve relay is not active (in the fail-safe mode)	Off
M/R OUTPUT	Actuator motor and motor relay activated	When the actuator motor and motor relay are active ("ACTIVE TEST" with CONSULT-III)	On
		When the actuator motor and motor relay are inactive	Off

NOTE:

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
 - ABS warning lamp: Refer to [BRC-128, "Description"](#).
 - Brake warning lamp: Refer to [BRC-129, "Description"](#).
 - VDC OFF indicator lamp: Refer to [BRC-130, "Description"](#).
 - SLIP indicator lamp: Refer to [BRC-131, "Description"](#).

[VDC/TCS/ABS]

Wiring Diagram - BRAKE CONTROL SYSTEM -

2008/01/23

JCFWM0150GE




ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]


BRAKE CONTROL SYSTEM (WITH VDC)

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
4	O	-
5	BR	-
13	G	-
14	P	-

Connector No.	B111
Connector Name	WIRE TO WIRE
Connector Type	RH12FB

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
3	BR	-
7	O	-
9	P	-

Connector No.	C2
Connector Name	WIRE TO WIRE
Connector Type	RH12MB

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
3	L	-
7	B	-
9	P	-

Connector No.	C3
Connector Name	REAR WHEEL SENSOR LH
Connector Type	RH02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	B	-

Connector No.	C4
Connector Name	REAR WHEEL SENSOR RH
Connector Type	RH02FGY



Connector No.	E22
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	RH02MGY



Connector No.	E27
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Terminal No.	Color of Wire	Signal Name [Specification]
25	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-

JCFWM0151Gf


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

BRAKE CONTROL SYSTEM (WITH VDC)

Connector No.	E35
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) (WITH VDC)
Connector Type	BAA22FB-AH24-RH

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	CAN(-)
2	W	GND(MTR)
3	R	+B(MTR)
4	B	+B(SOL)
5	LG	GND(SOL)
6	L	DS FL
8	P	DP RL
9	B	DP RR
10	W	DP FR
14	LG	DS FR
15	P	CAN-(LYRS)

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1F	L	-
2F	LG	-
8F	R	-

16	L	CAN-L
17	Y	DP FL
18	GR	DS RL
19	V	IGN
20	SB	DS RR
21	V	STOP L SIG
25	Y	VDC OFF SW
26	L	CAN-H(YRS)



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	B/Y	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3



Terminal No.	Color of Wire	Signal Name [Specification]
11	P	-
12	L	-
22	P	-
30	V	-
66	GR	-
68	V	-
69	Y	-
70	LG	-

Connector No.	E39
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	RK02MGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	W	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	MD4FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	Y	-

JCFWM0152G1

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

BRAKE CONTROL SYSTEM (WITH VDC)

Connector No.	M11
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS0FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
2A	G/O	-

Connector No.	M5
Connector Name	VDC OFF SWITCH
Connector Type	TK08GY



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	B	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH0FW-CSI0-M3



Terminal No.	Color of Wire	Signal Name [Specification]
11	P	-
12	L	-
22	G/R	-
30	V	-
66	GR	-
68	SB	-
69	Y	-
70	Y/B	-

Connector No.	M30
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	P	-
4	G	-
5	L	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
26	G/R	PARKING BRAKE SWITCH SIGNAL
27	V	BRAKE FLUID LEVEL SWITCH SIGNAL

Connector No.	M72
Connector Name	YAW RATE SENSOR
Connector Type	AA204FE

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B/Y	-
2	Y/B	-
3	Y	-
4	GR	-

Fail-Safe

ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp will turn on. Simultaneously, the VDC/TCS/ABS become one of the following conditions of the fail-safe function.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without TCS/ABS system.

NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without TCS/ABS, EBD system.

VDC/TCS

If VDC/TCS/ABS system malfunction electrically, VDC OFF indicator lamp, SLIP indicator lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC/TCS control.

CAUTION:

If the Fail-Safe function is activated, then perform self-diagnosis for VDC/TCS/ABS control system.

DTC No. Index

INFOID:000000003767022

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-85, "DTC Logic"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-88, "DTC Logic"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-91, "DTC Logic"
C1110	CONTROLLER FAILURE	BRC-93, "DTC Logic"
C1111	PUMP MOTOR	BRC-94, "DTC Logic"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-96, "DTC Logic"
C1116	STOP LAMP SW	BRC-99, "DTC Logic"
C1120	FR LH IN ABS SOL	BRC-101, "DTC Logic"
C1121	FR LH OUT ABS SOL	BRC-103, "DTC Logic"
C1122	FR RH IN ABS SOL	BRC-101, "DTC Logic"
C1123	FR RH OUT ABS SOL	BRC-103, "DTC Logic"
C1124	RR LH IN ABS SOL	BRC-101, "DTC Logic"
C1125	RR LH OUT ABS SOL	BRC-103, "DTC Logic"
C1126	RR RH IN ABS SOL	BRC-101, "DTC Logic"
C1127	RR RH OUT ABS SOL	BRC-103, "DTC Logic"
C1130	ENGINE SIGNAL 1	BRC-105, "DTC Logic"
C1140	ACTUATOR RLY	BRC-106, "DTC Logic"
C1142	PRESS SEN CIRCUIT	BRC-108, "DTC Logic"
C1143	ST ANG SEN CIRCUIT	BRC-110, "DTC Logic"
C1144	ST ANG SEN SIGNAL	BRC-112, "DTC Logic"
C1145	YAW RATE SENSOR	BRC-113, "DTC Logic"
C1146	SIDE G-SEN CIRCUIT	
C1153	EMERGENCY BRAKE	BRC-93, "DTC Logic"
C1155	BR FLUID LEVEL LOW	BRC-116, "DTC Logic"
C1164	CV 1	BRC-118, "DTC Logic"
C1165	CV 2	

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS >

[VDC/TCS/ABS]

DTC	Items (CONSULT screen terms)	Reference
C1166	SV 1	BRC-120. "DTC Logic"
C1167	SV 2	
C1170	VARIANT CORDING	BRC-93. "DTC Logic"
U1000	CAN COMM CIRCUIT	BRC-122. "DTC Logic"
U1002	SYSTEM COMM (CAN)	

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

BRC

SYMPTOM DIAGNOSIS

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000003767023

1.CHECK START

Check front and rear brake force distribution using a brake tester. Refer to [BR-45. "General Specifications"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check brake system.

2.CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

• Front: Refer to [FAX-6. "Inspection"](#).

• Rear: Refer to [RAX-3. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

3.CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> • Replace wheel sensor or sensor rotor.
• Repair harness.

4.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

YES >> Perform self-diagnosis.

NO >> Normal

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000003767024

1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-6, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >> • Bleed air from brake tube and hose. Refer to [BR-10, "Bleeding Brake System"](#).
• Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
- Brake pedal: Refer to [BR-6, "Inspection and Adjustment"](#).
- Brake booster: Refer to [BR-12, "Inspection"](#).
- Brake master cylinder: Refer to [BR-11, "Inspection"](#).
- NO >> GO TO 2.

2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. Check if braking force is normal in this condition. Connect connector after inspection.

Is the inspection result normal?

- YES >> Normal
NO >> Check brake system.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:0000000003767025

CAUTION:

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

1.CHECK FUNCTION

Turn the ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect connector.

Is the inspection result normal?

YES >> Normal

NO >> Check brake system.

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000003767026

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000003767027

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis.

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Normal

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000003767028

1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

YES >> Normal.
NO >> GO TO 2.

2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis of ABS actuator and electric unit (control unit).

Are self-diagnosis results indicated?

YES >> Check corresponding items, make repairs, and perform ABS actuator and electric unit (control unit) self-diagnosis.
NO >> GO TO 3.

3.CHECK CONNECTOR

- Turn the ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector and check terminal for deformation, disconnection, looseness, etc.
- Securely connect connectors and perform ABS actuator and electric unit (control unit) self-diagnosis.

Are self-diagnosis results indicated?

YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.
NO >> GO TO 4.

4.CHECK ECM AND A/T SELF-DIAGNOSIS RESULTS

Perform ECM self-diagnosis and TCM self-diagnosis.

Are self-diagnosis results indicated?

YES >> Check the corresponding items.
NO >> Replace ABS actuator and electric unit (control unit).

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:000000003767029

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is a normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp, VDC OFF indicator lamp, and SLIP indicator lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
VDC OFF indicator lamp and SLIP indicator lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003893849

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Procedure without Cowl Top Cover

INFOID:000000003928809

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

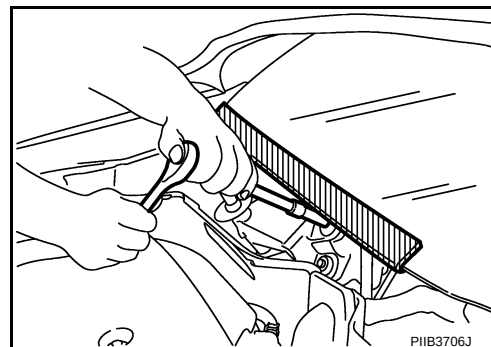


Precaution for Brake System

INFOID:000000003767031

WARNING:

Clean brake pads and shoes with a waste cloth, then wipe with a dust collector.

- Only use "DOT 3" or "DOT 4" brake fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a flare nut torque wrench (A).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.

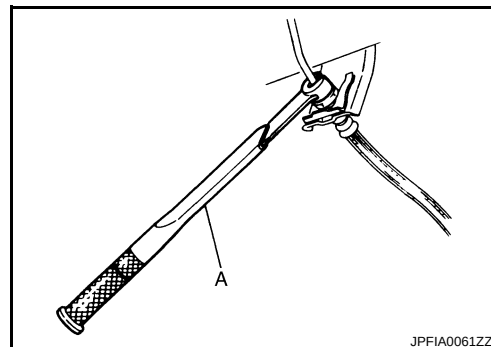

Precaution for Brake Control

INFOID:000000003767032

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- If aftermarket parts (car stereo, CD player, etc.) have been installed, check for incidents such as harness pinches, open circuits, and improper wiring.
- VDC system may not operate normally or a VDC OFF indicator lamp or SLIP indicator lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

Precautions for Harness Repair


INFOID:000000003843440

COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

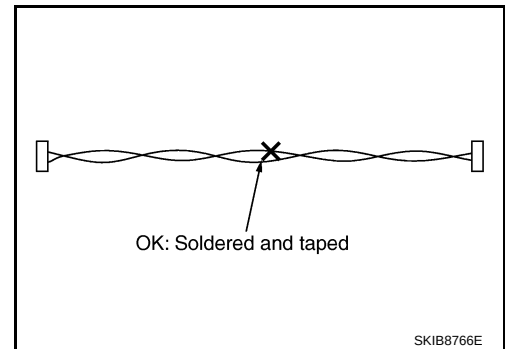


- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

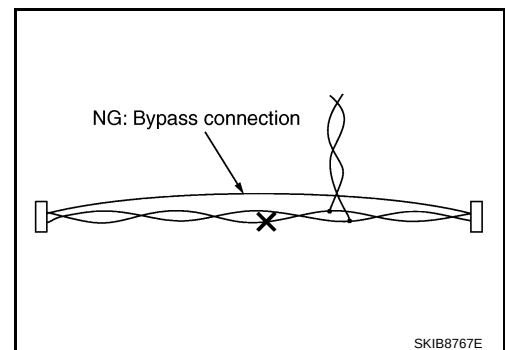


ON-VEHICLE REPAIR

WHEEL SENSOR

FRONT WHEEL SENSOR

FRONT WHEEL SENSOR : Exploded View

INFOID:000000003767300

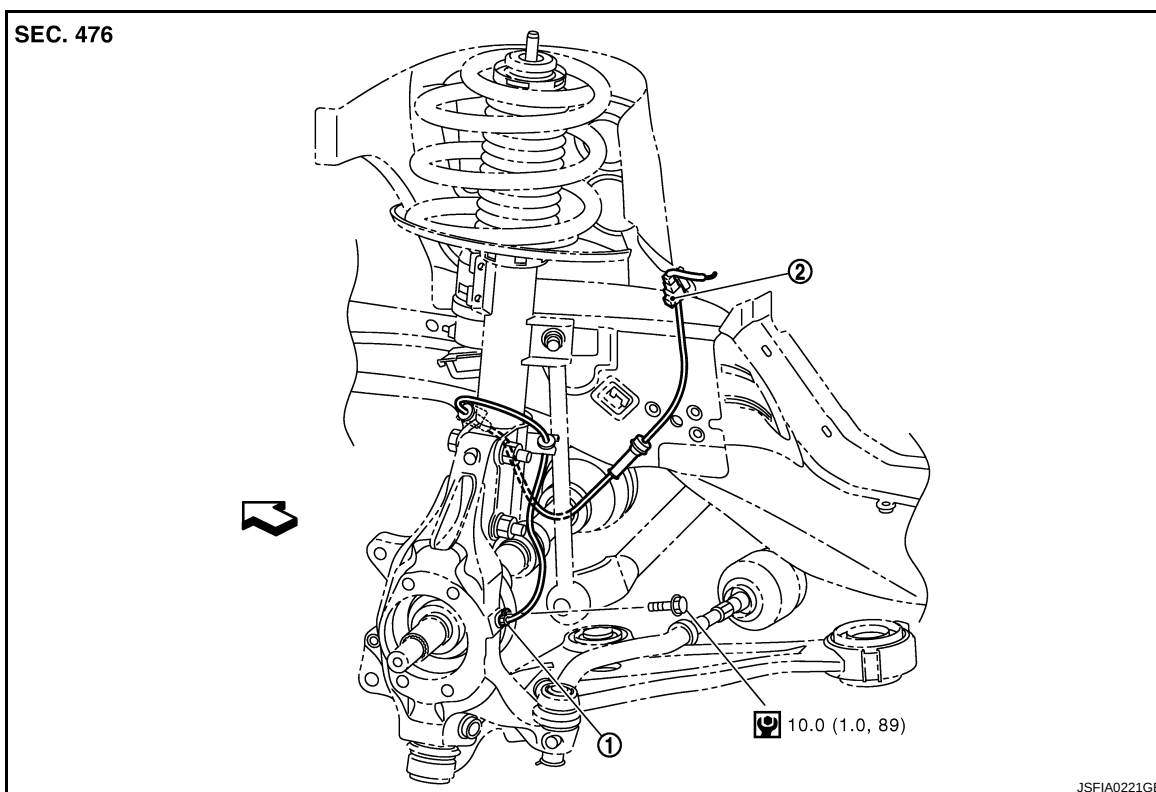

1. Front LH wheel sensor

2. Front LH wheel sensor connector

Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.**NOTE:**

The above figure shows left side. Right side is the mirror image.

FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000003767301

REMOVAL

Be careful with the following when removing sensor.

CAUTION:

- Do not twist sensor harness as much as possible, when removing it. Pull sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front or rear wheel hub. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Be careful with the following when installing wheel sensor. Tighten installation bolts to the specified torques.

Refer to [BRC-151, "FRONT WHEEL SENSOR : Exploded View"](#).**CAUTION:**

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

WHEEL SENSOR

< ON-VEHICLE REPAIR >


[VDC/TCS/ABS]

- Completely push in rubber grommets of strut bracket and body bracket until they lock when installing wheel sensor so that the wheel sensor harness will not be twisted. Install grommet groove onto bracket with orange line on the harness facing bracket opening (mounting hole). There should be no twists in the harness when installed.

REAR WHEEL SENSOR

REAR WHEEL SENSOR : Exploded View

INFOID:000000003767302

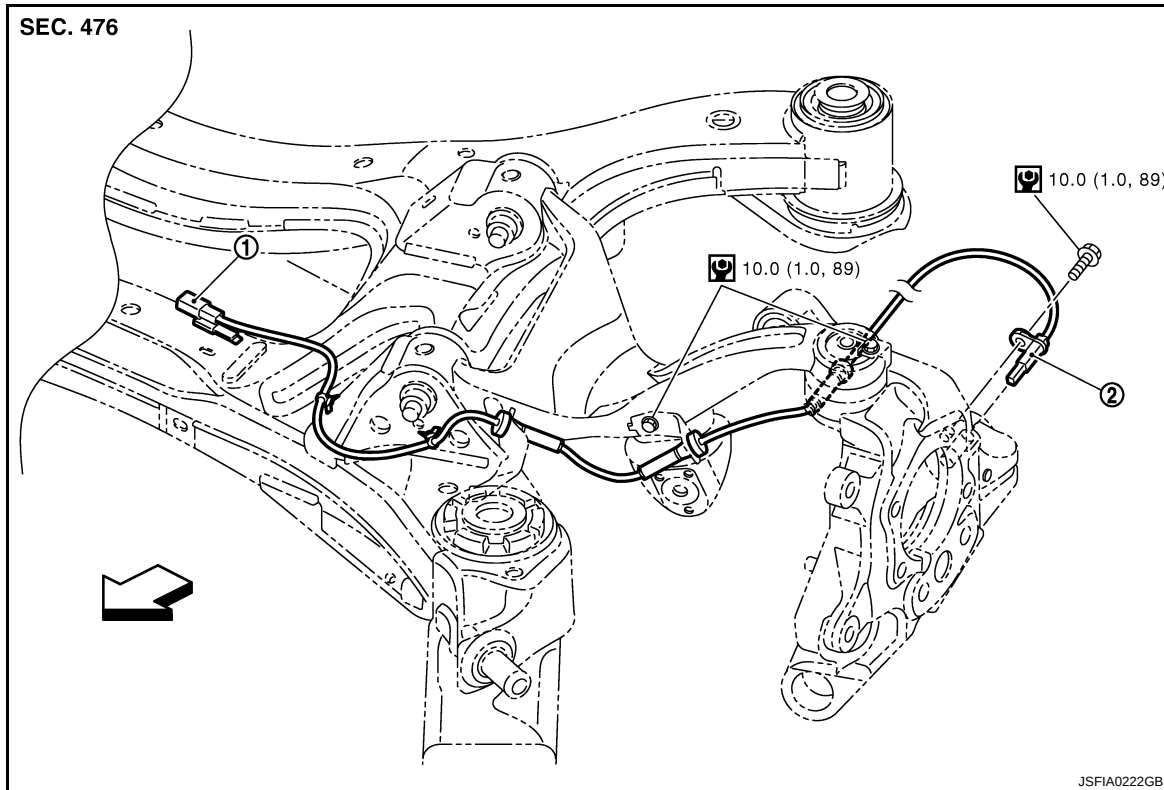

1. Rear LH wheel sensor connector 2. Rear LH wheel sensor

Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.

NOTE:

The above figure shows left side. Right side is the mirror image.

REAR WHEEL SENSOR : Removal and Installation

INFOID:000000003767303

REMOVAL

Be careful with the following when removing sensor.

CAUTION:

- Do not twist sensor harness as much as possible, when removing it. Pull sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front or rear wheel hub. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Be careful with the following when installing wheel sensor. Tighten installation bolts to the specified torques. Refer to [BRC-152, "REAR WHEEL SENSOR : Exploded View"](#).

CAUTION:

When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

SENSOR ROTOR

FRONT SENSOR ROTOR

FRONT SENSOR ROTOR : Exploded View

INFOID:0000000003767304

Refer to [FAX-8, "Exploded View"](#).

FRONT SENSOR ROTOR : Removal and Installation

INFOID:0000000003767305

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-8, "Exploded View"](#).

INSTALLATION

Sensor rotor cannot be disassembled. Install the sensor rotor together with hub bearing assembly. Refer to [FAX-8, "Exploded View"](#).

REAR SENSOR ROTOR

REAR SENSOR ROTOR : Exploded View

INFOID:0000000003767306

Refer to [RAX-4, "Exploded View"](#).

REAR SENSOR ROTOR : Removal and Installation

INFOID:0000000003767307

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [RAX-4, "Exploded View"](#).

INSTALLATION

Sensor rotor cannot be disassembled. Install the sensor rotor together with hub bearing assembly. Refer to [RAX-4, "Exploded View"](#).

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ON-VEHICLE REPAIR >

[VDC/TCS/ABS]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000003767308

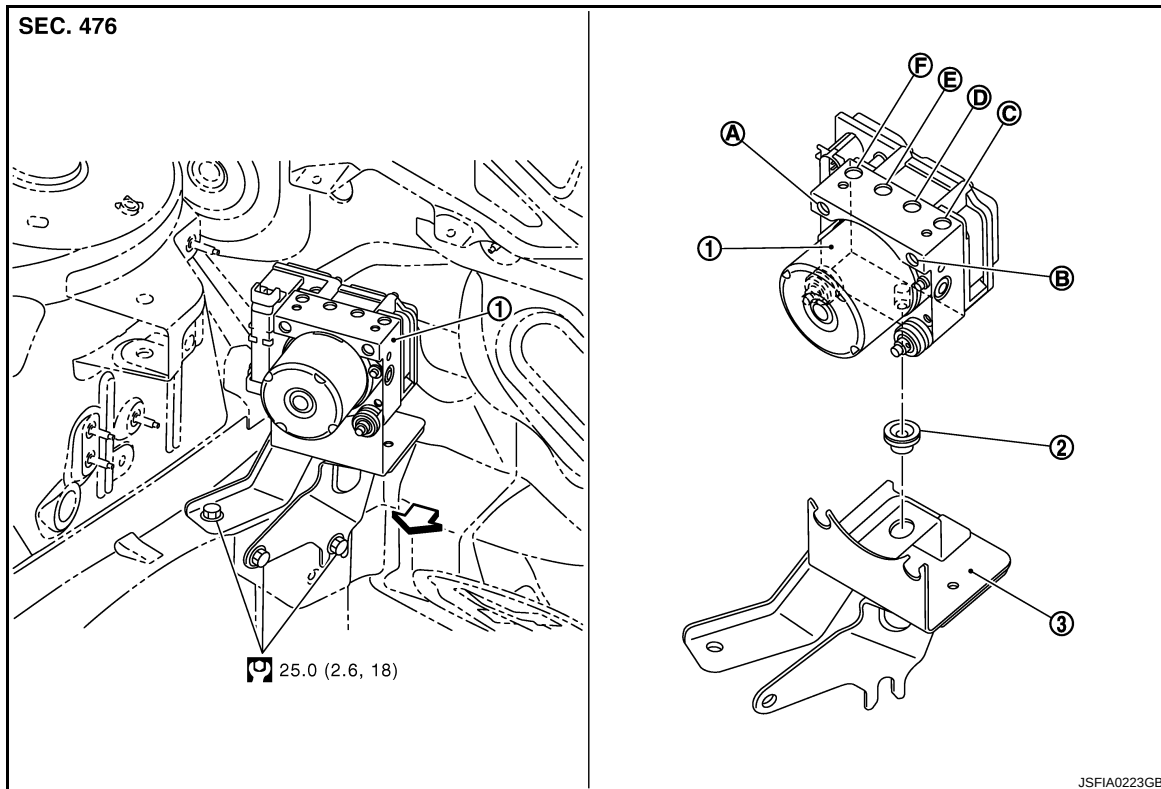

- | | | |
|--|--------------------------------------|------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Bushing | 3. Bracket |
| A. From master cylinder secondary side | B. From master cylinder primary side | C. To front LH brake caliper |
| D. To rear RH brake caliper | E. To rear LH brake caliper | F. To front RH brake caliper |

↔: Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.

Removal and Installation

INFOID:000000003767299

REMOVAL

CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.
- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut crowfoot and torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-10, "Bleeding Brake System"](#).

1. Remove cowl top cover. Refer to [EXT-20, "Exploded View"](#).
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Loosen brake tube flare nuts, then remove brake tubes from ABS actuator and electric unit (control unit).
4. Remove ABS actuator and electric unit (control unit) bracket mounting nuts.
5. Remove ABS actuator and electric unit (control unit) from vehicle.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ON-VEHICLE REPAIR >

[VDC/TCS/ABS]

- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut crowfoot and torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-10, "Bleeding Brake System"](#).
- After installing harness connector in the ABS actuator and electric unit (control unit), make sure connector is securely locked.
- When replacing ABS actuator and electric unit (control unit), make sure to adjust neutral position of steering angle sensor. Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

Install ABS actuator and electric unit (control unit) as per the following steps.

1. Temporarily tighten mounting bolt (1) because the bracket (2) is temporarily being hold.
2. Tighten mounting bolt (3) while holding the bracket.
3. Tighten mounting bolts to the specified torque in the order of (4), (1).

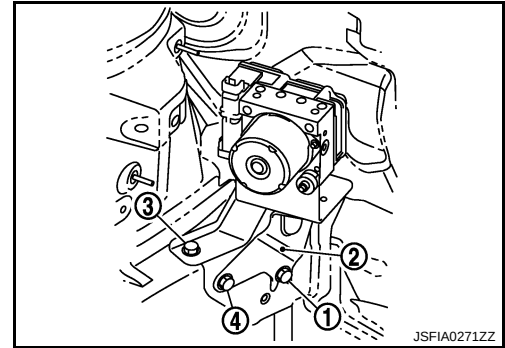


A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

YAW RATE/SIDE G SENSOR

Exploded View

INFOID:000000003767352

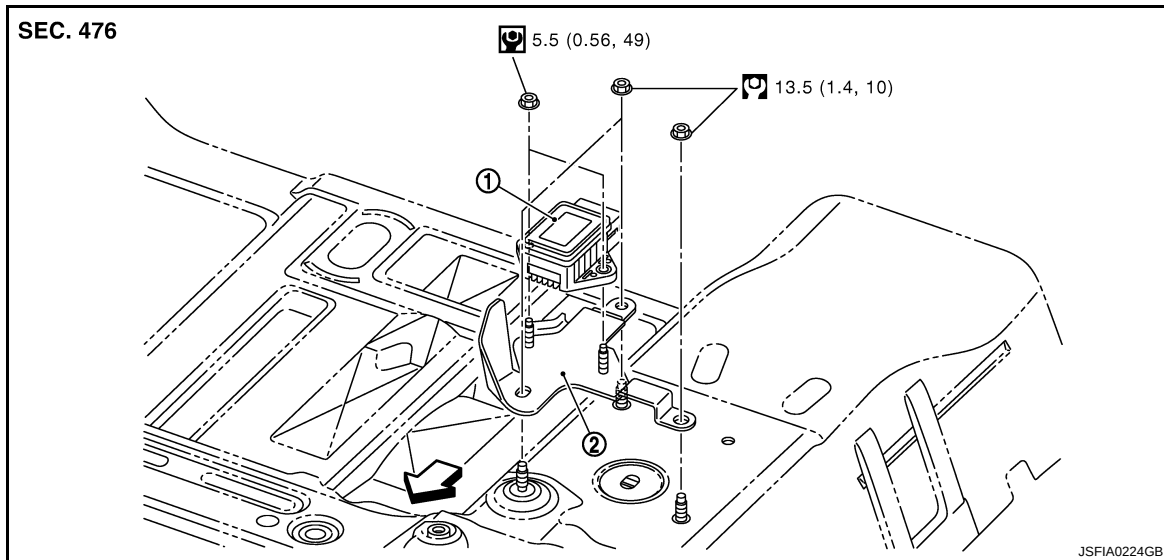

1. Yaw rate/side G sensor 2. Bracket

← Vehicle front

Refer to GI-4, "[Components](#)" for symbol makes in the figure.

Removal and Installation

INFOID:000000003767353

REMOVAL

CAUTION:

Do not drop or strike yaw rate/side G sensor, or do not use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

1. Remove center console. Refer to [IP-22, "Exploded View"](#).
2. Remove rear ventilator duct. Refer to [VTL-54, "REAR VENTILATOR DUCT 2 : Exploded View"](#).
3. Disconnect yaw rate/side G sensor harness connector.
4. Remove mounting nuts. Remove yaw rate/side G sensor.

INSTALLATION

Note the following, and install in the reverse order of removal.


CAUTION:

Do not drop or strike yaw rate/side G sensor, or do not use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

STEERING ANGLE SENSOR

Exploded View

INFOID:000000003767354

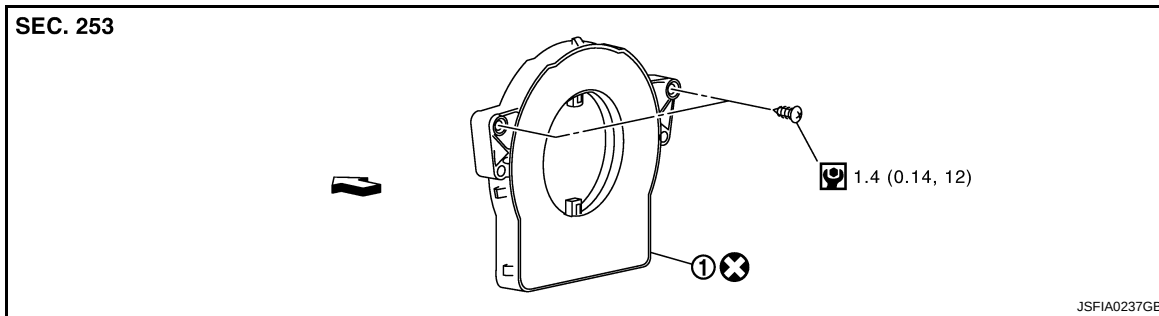

1. Steering angle sensor

↔: Vehicle front

Refer to GI section [GI-4, "Components"](#) for symbol marks in the figure.

Removal and Installation

INFOID:000000003767355

REMOVAL

1. Remove spiral cable assembly. Refer to [SR-9, "Exploded View"](#).
2. Remove steering angle sensor from spiral cable assembly.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Never reuse steering angle sensor.
- When installing steering angle sensor, tighten it to the specified torque with an electric screwdriver. Be sure to tighten it completely with no floating and tilting.
- After work, make sure to adjust neutral position of steering angle sensor. Refer to [BRC-66, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).