



F RELAY LOCATIONS

[Engine Compartment]


- * 1:2KD-FTV, 5L-E
- * 2:2TR-FE

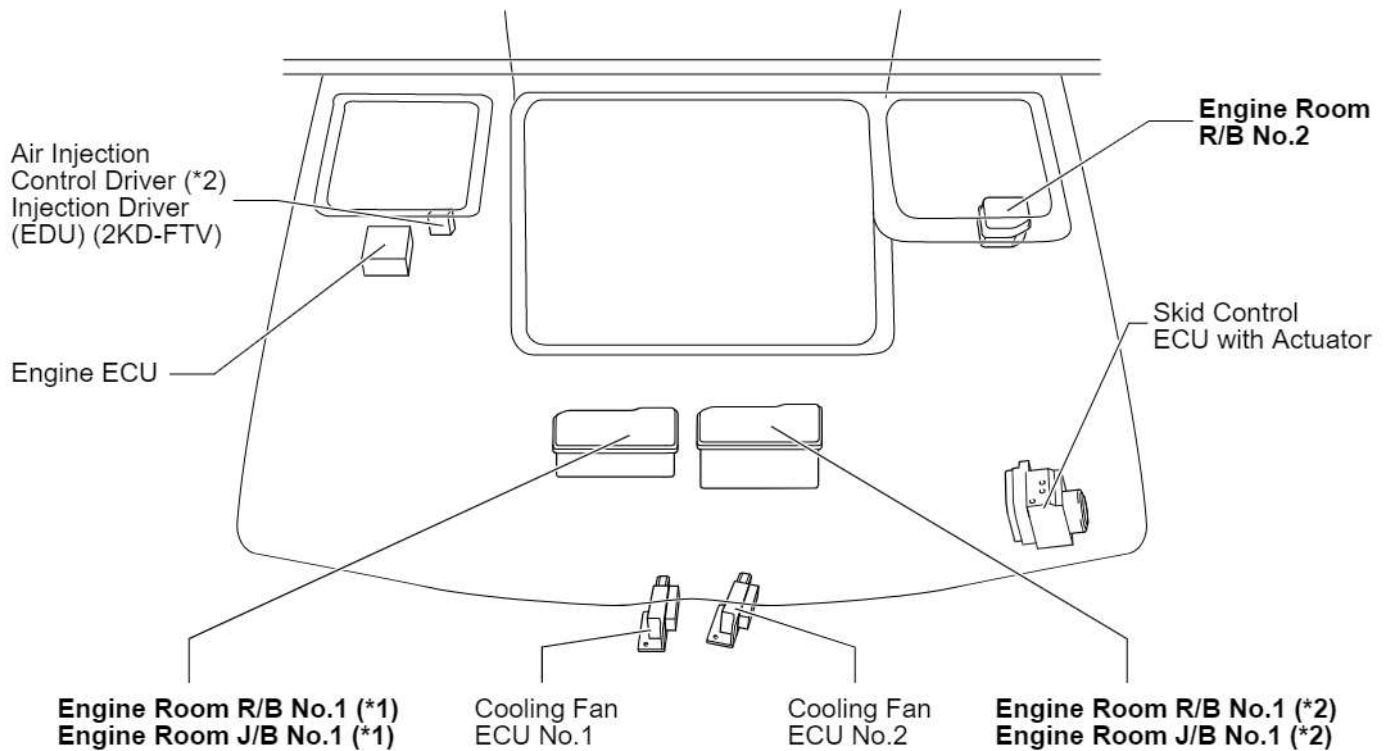


[Body]

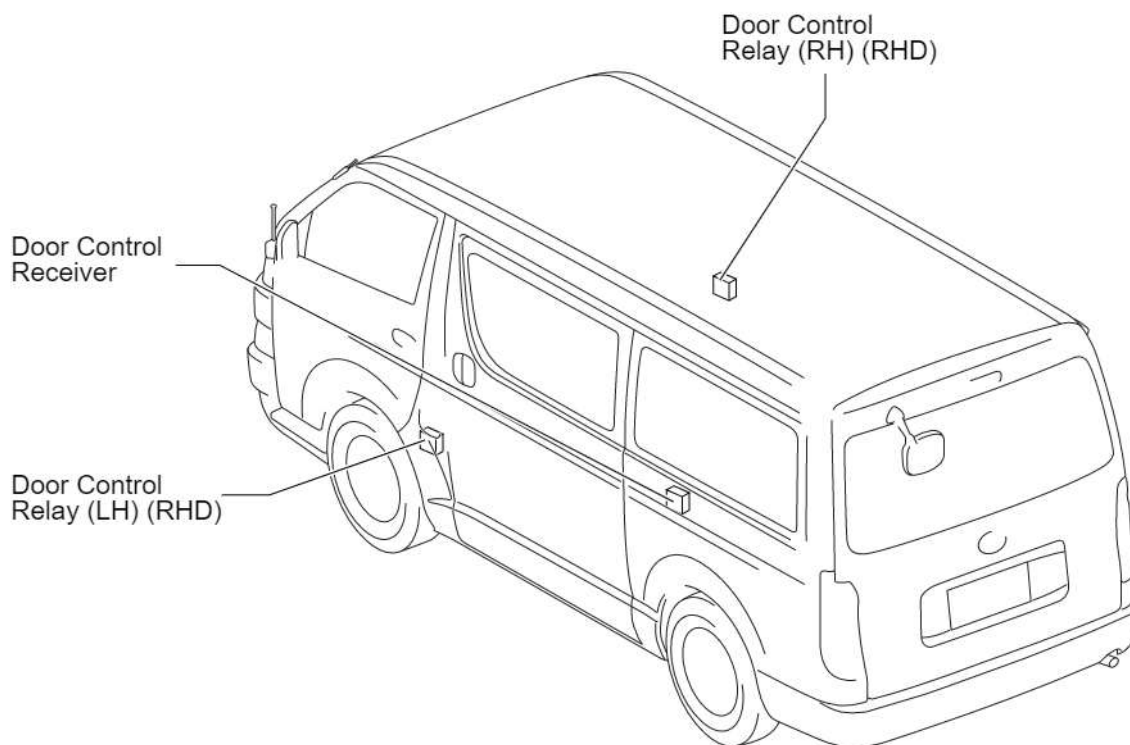

[Instrument Panel] (LHD)

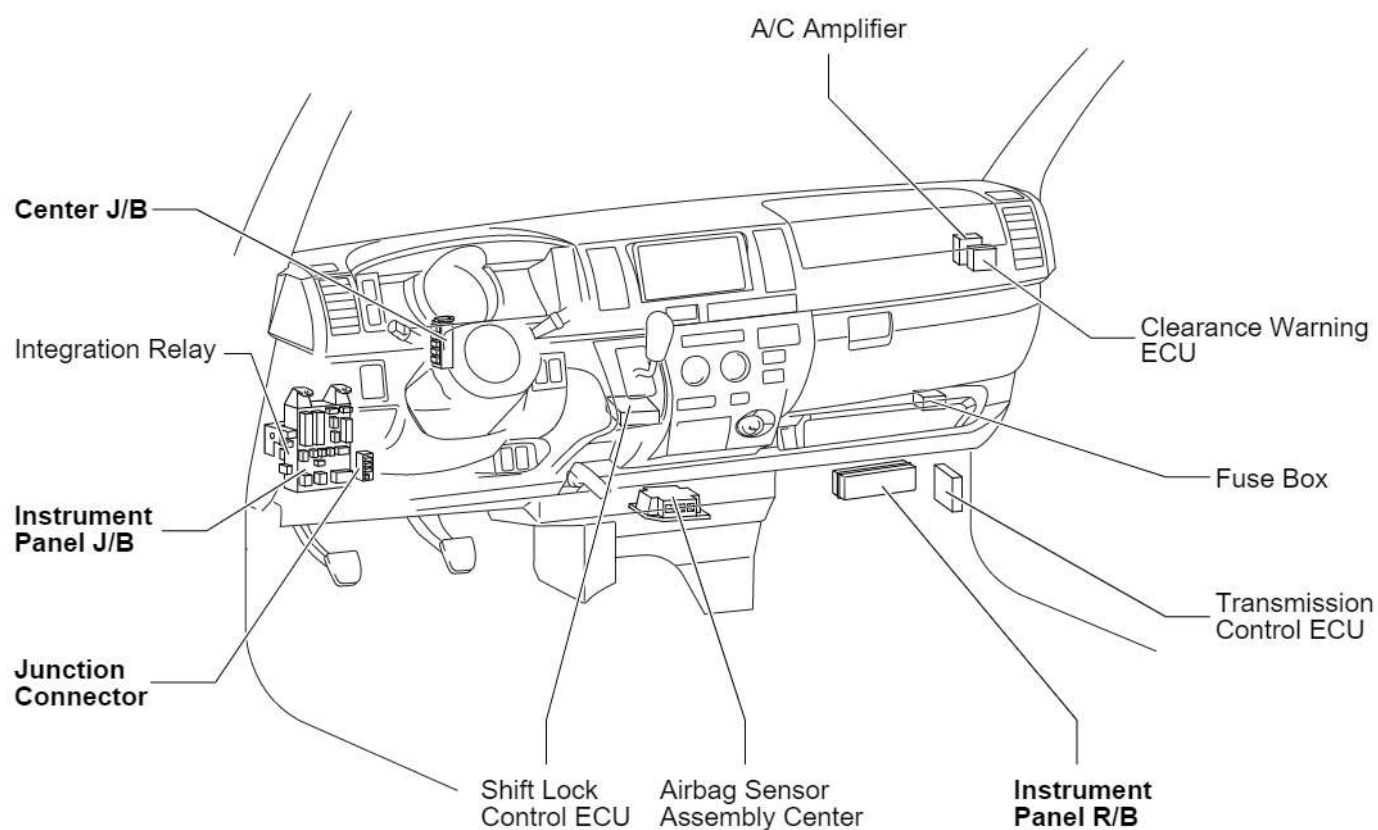


(RHD)

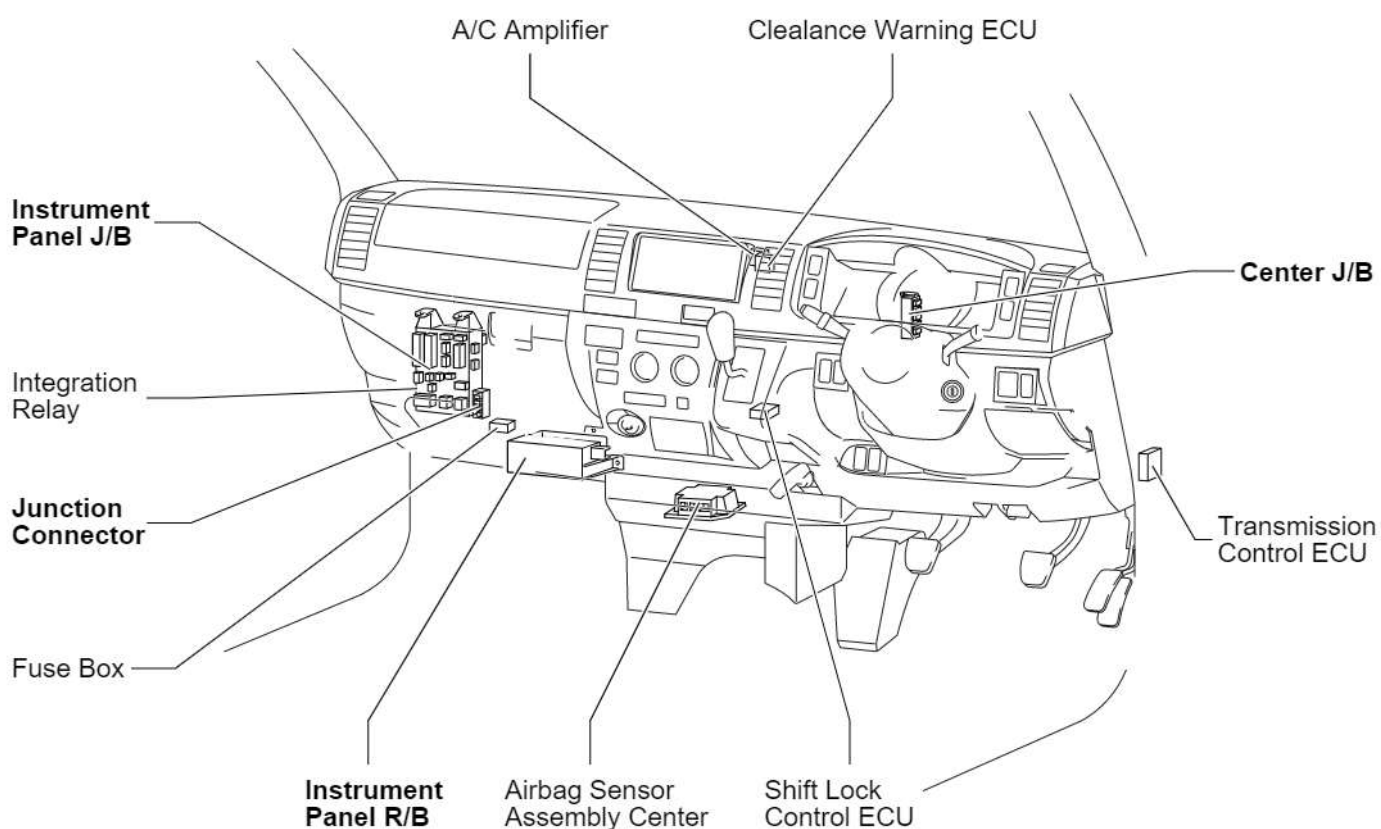

F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
○ : Engine Room J/B No.1	

[2TR-FE]

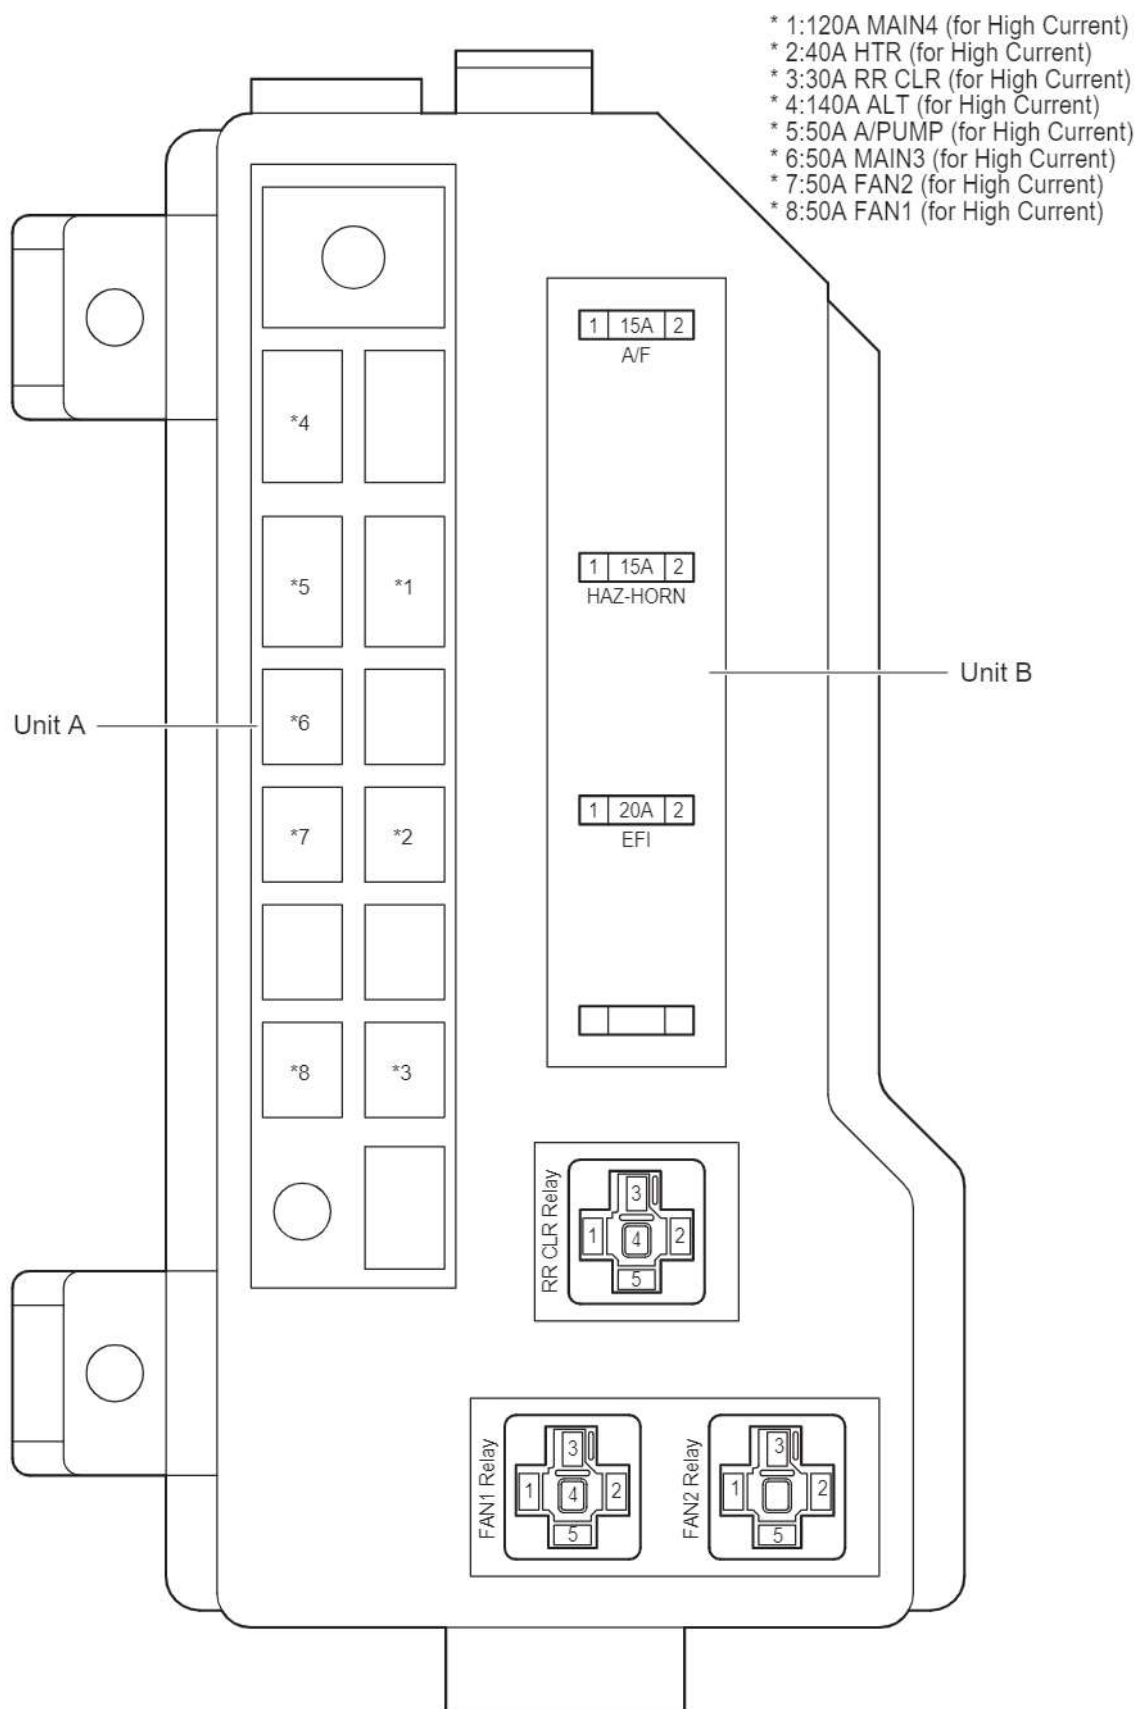


① : Engine Room R/B No.1

○ : Engine Room J/B No.1

Engine Compartment Front (See Page 20)


[2KD-FTV, 5L-E]

- * 1:50A PTC1 (for High Current)
- * 2:120A MAIN4 (for High Current)
- * 3:40A HTR (for High Current)
- * 4:30A RR CLR (for High Current)
- * 5:50A PTC2 (for High Current)
- * 6:140A ALT (for High Current)
- * 7:80A GLOW (for High Current)
- * 8:50A MAIN3 (for High Current)
- * 9:50A FAN2 (for High Current)
- * 10:30A FAN3 (for High Current)
- * 11:50A FAN1 (for High Current)

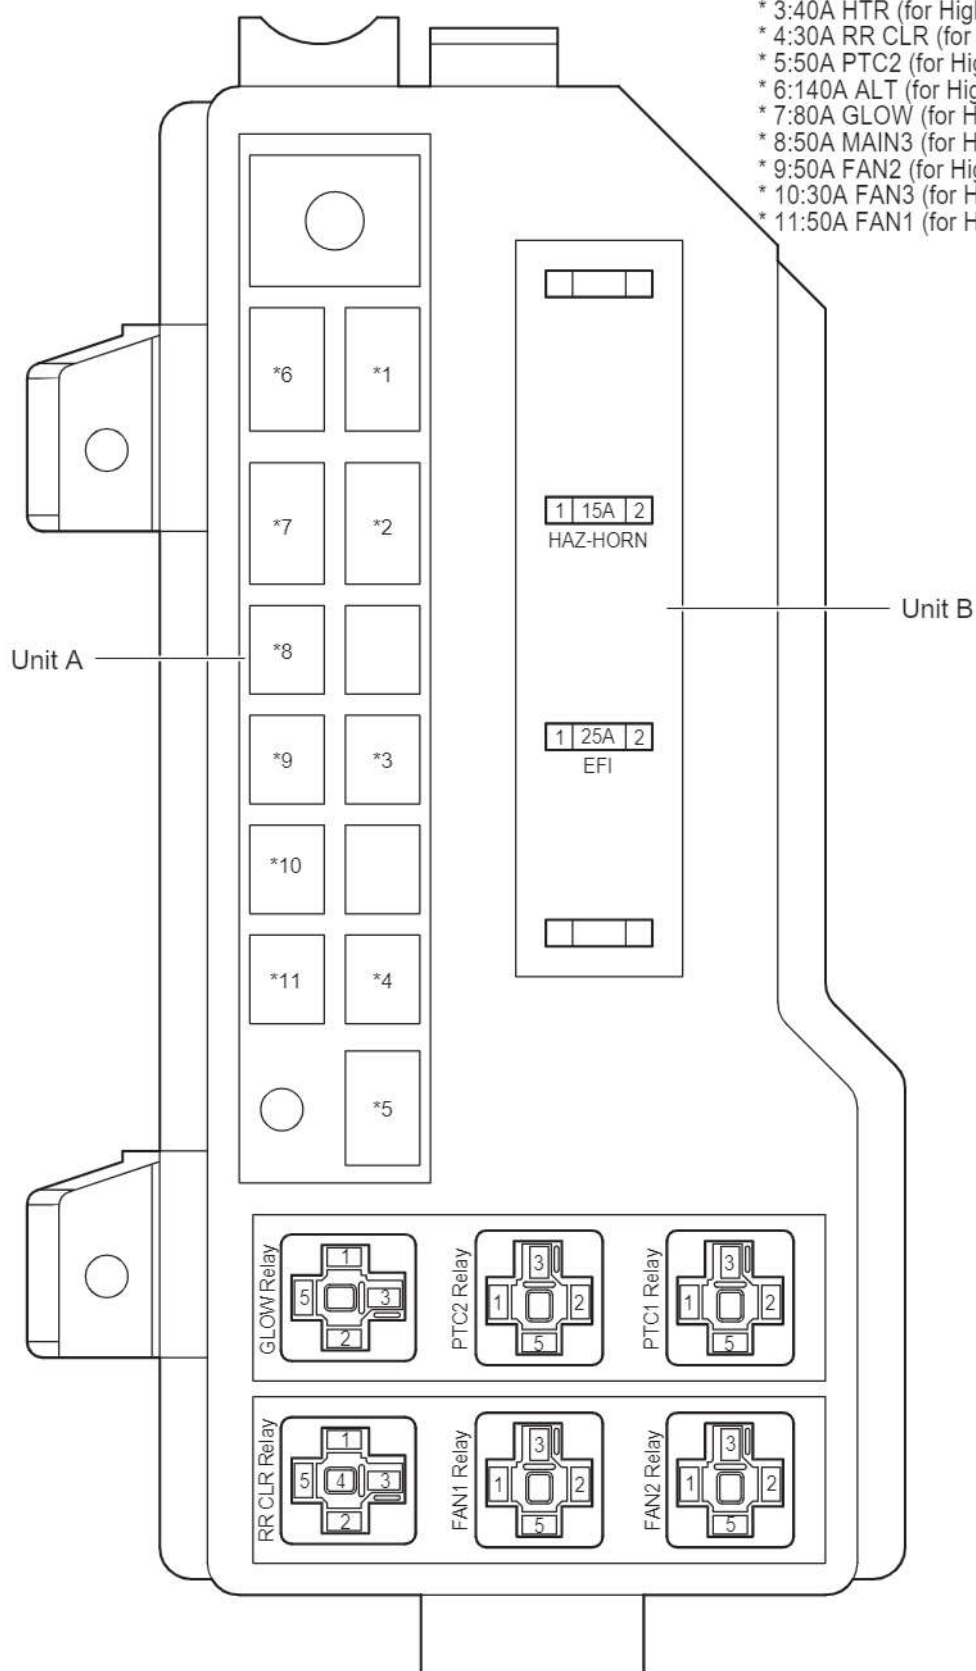


F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
○ : Engine Room J/B No.1	

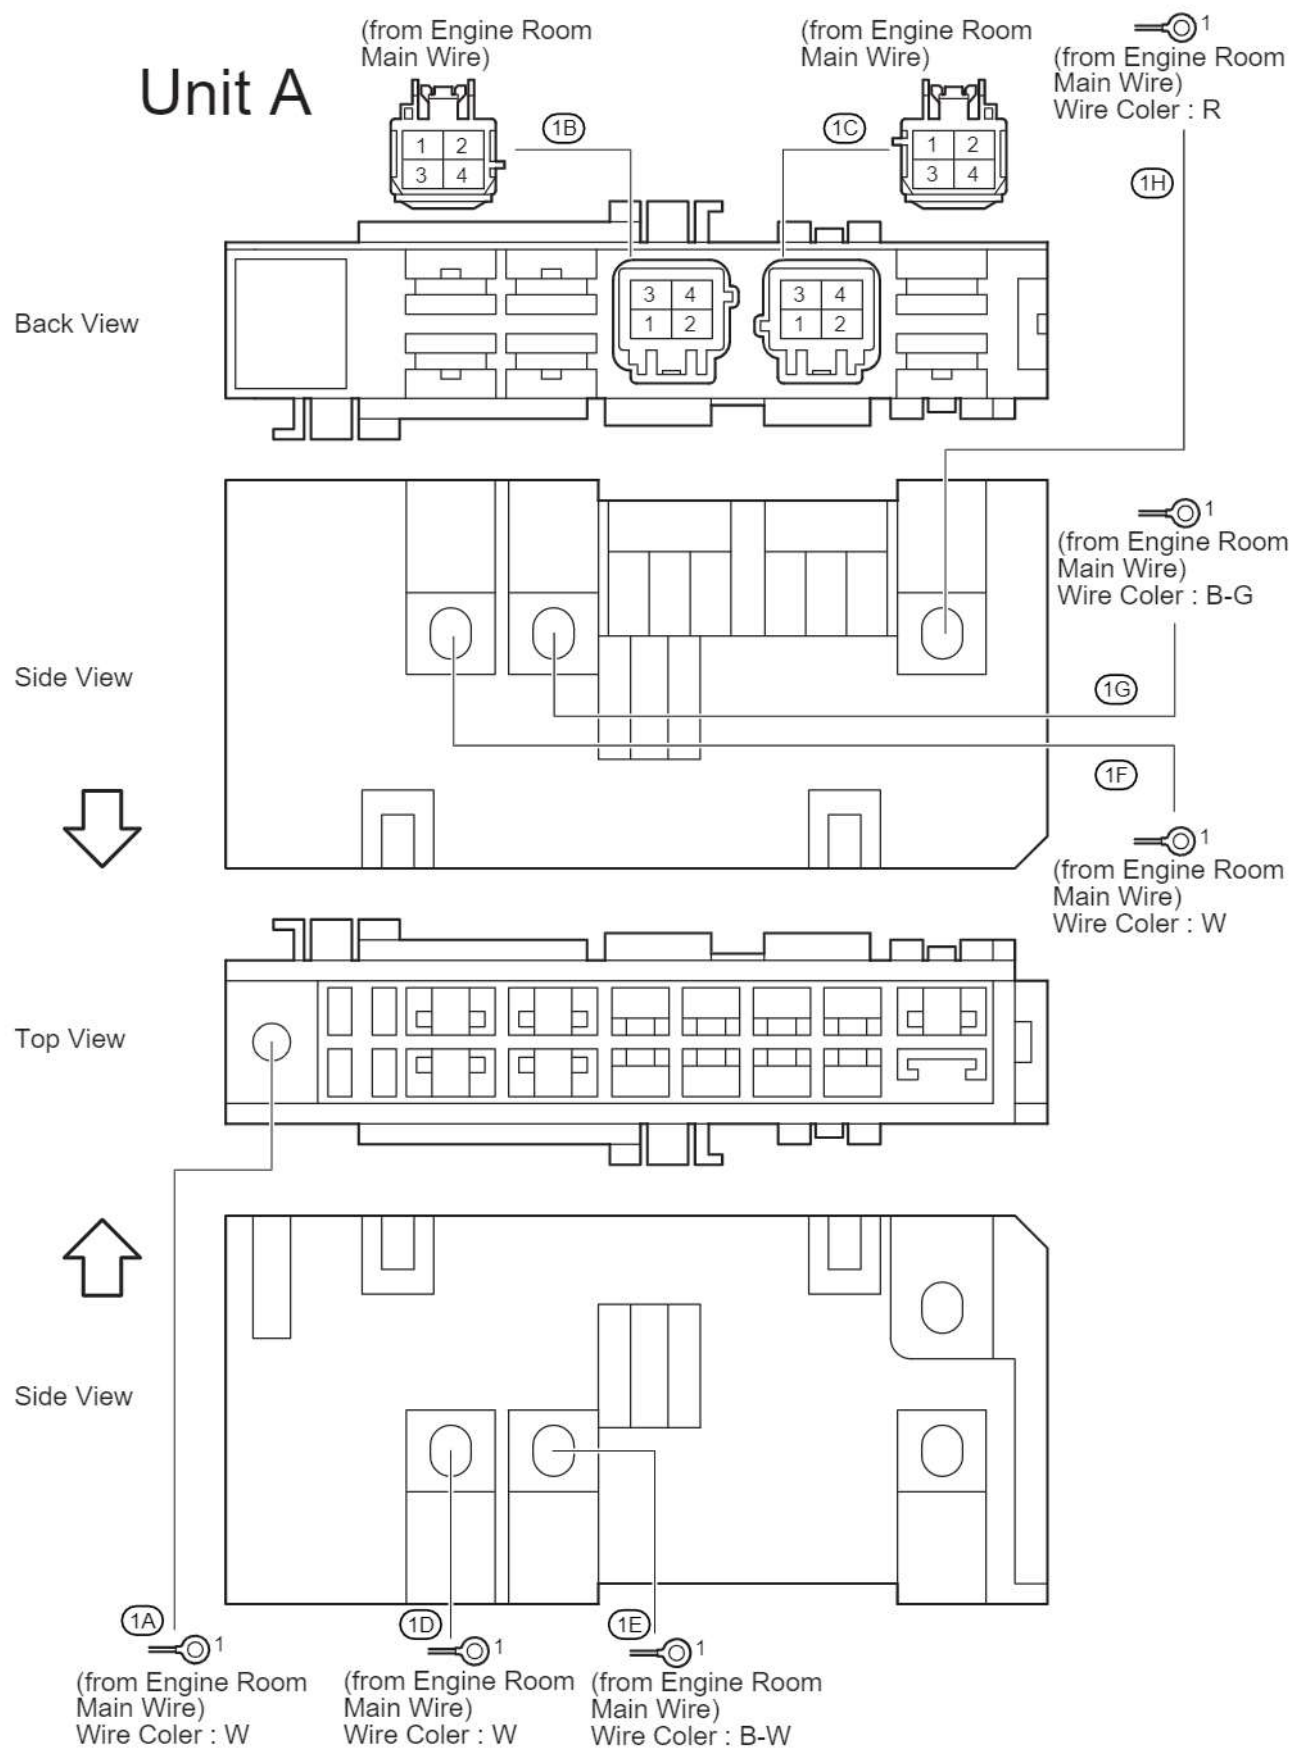


Unit B

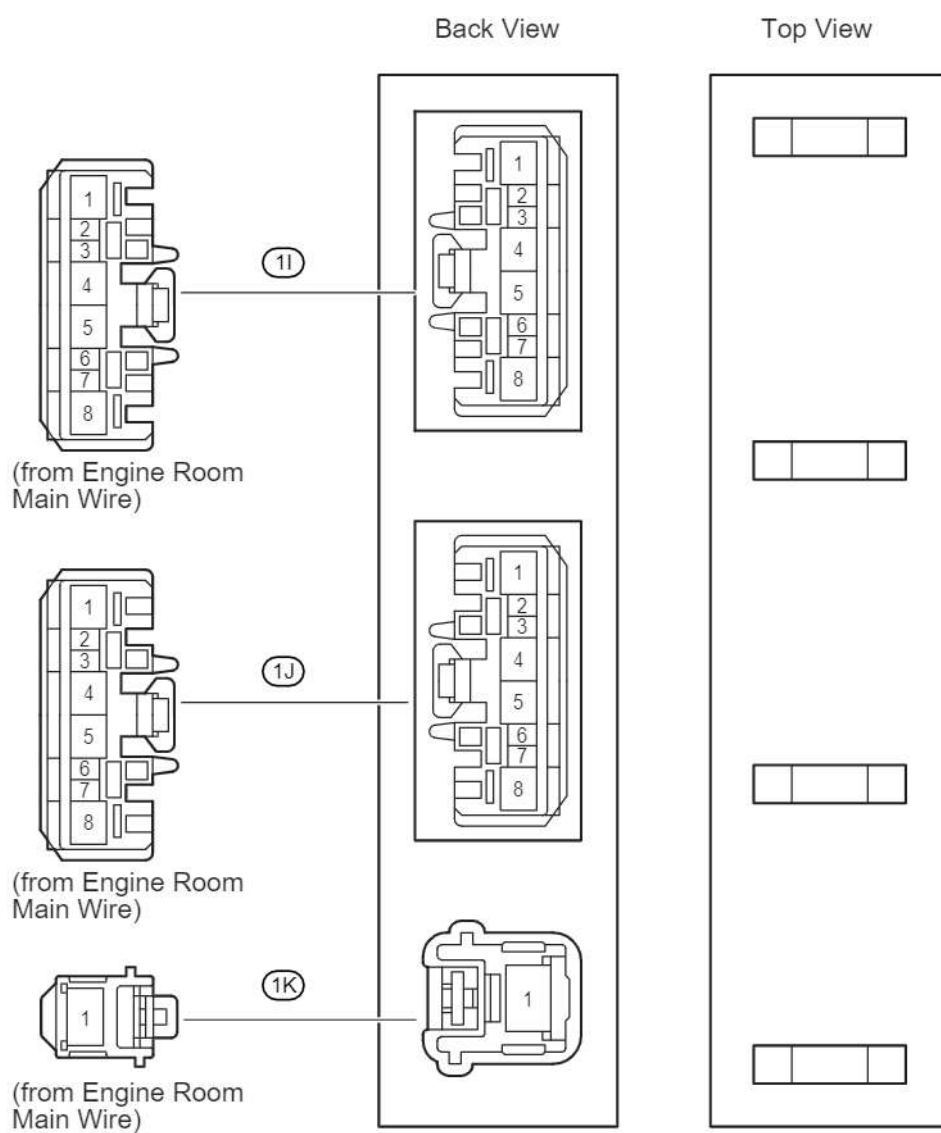


F RELAY LOCATIONS

[Engine Room R/B No.1 and Engine Room J/B No.1 Inner Circuit]

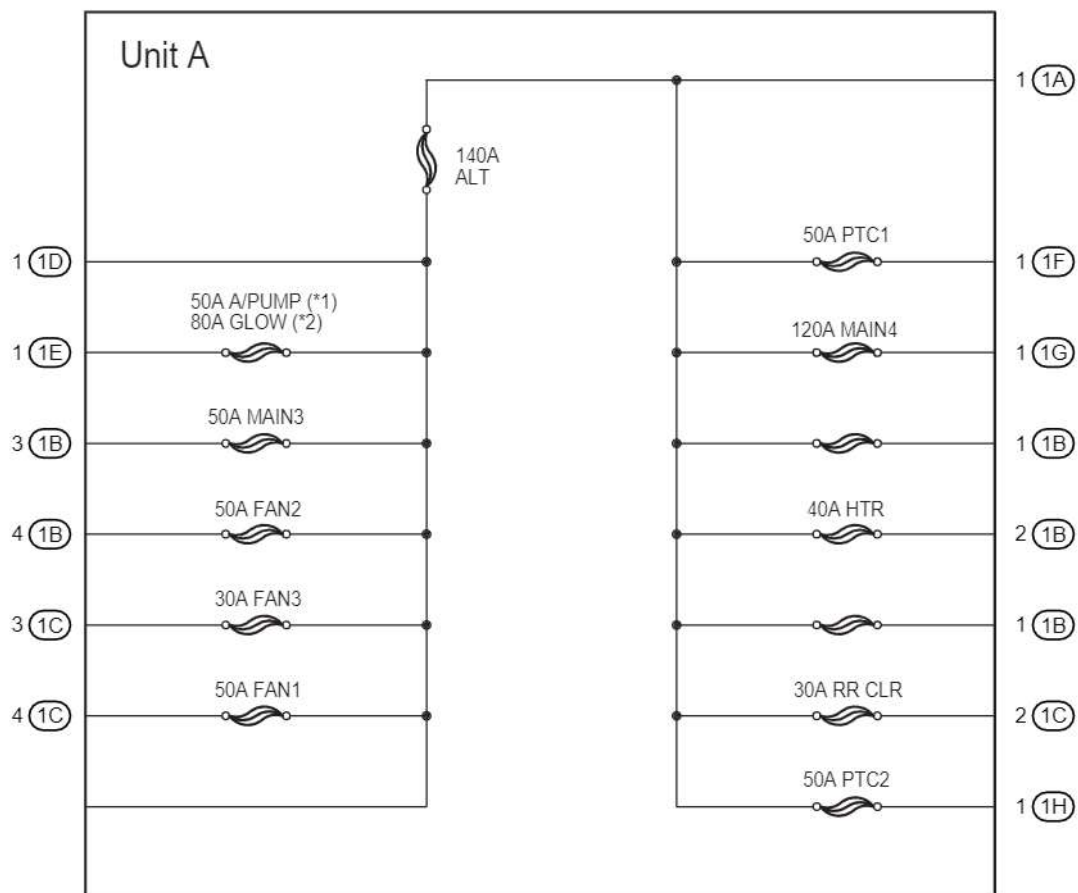

* 1:2TR-FE
* 2:2KD-FTV, 5L-E

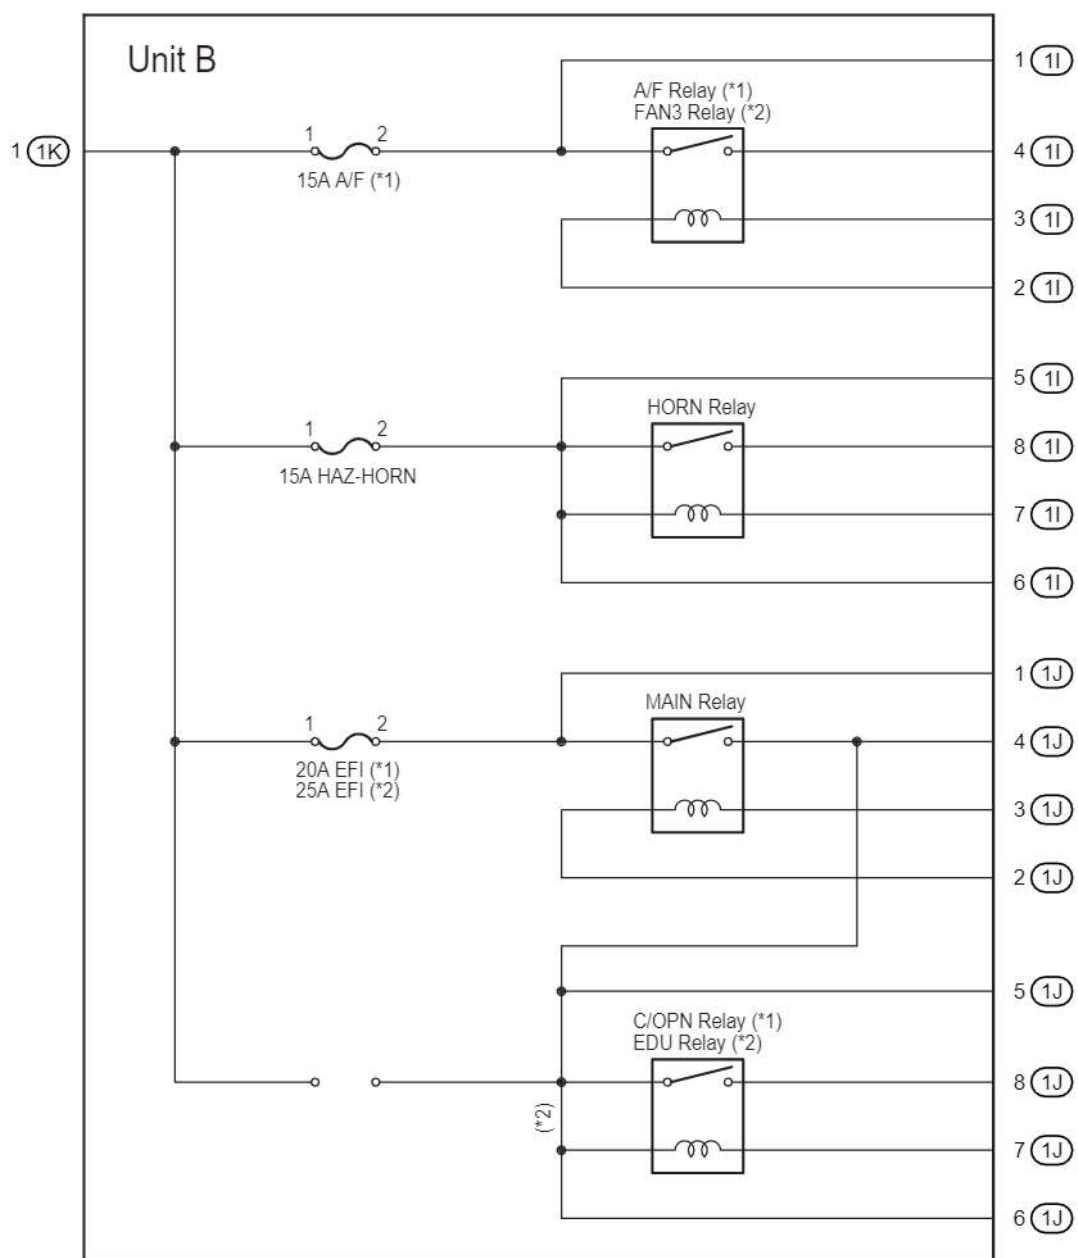


* 1:2TR-FE


* 2:2KD-FTV, 5L-E

F RELAY LOCATIONS

② : Engine Room R/B No.2 Inside of Battery Room (See Page 20)

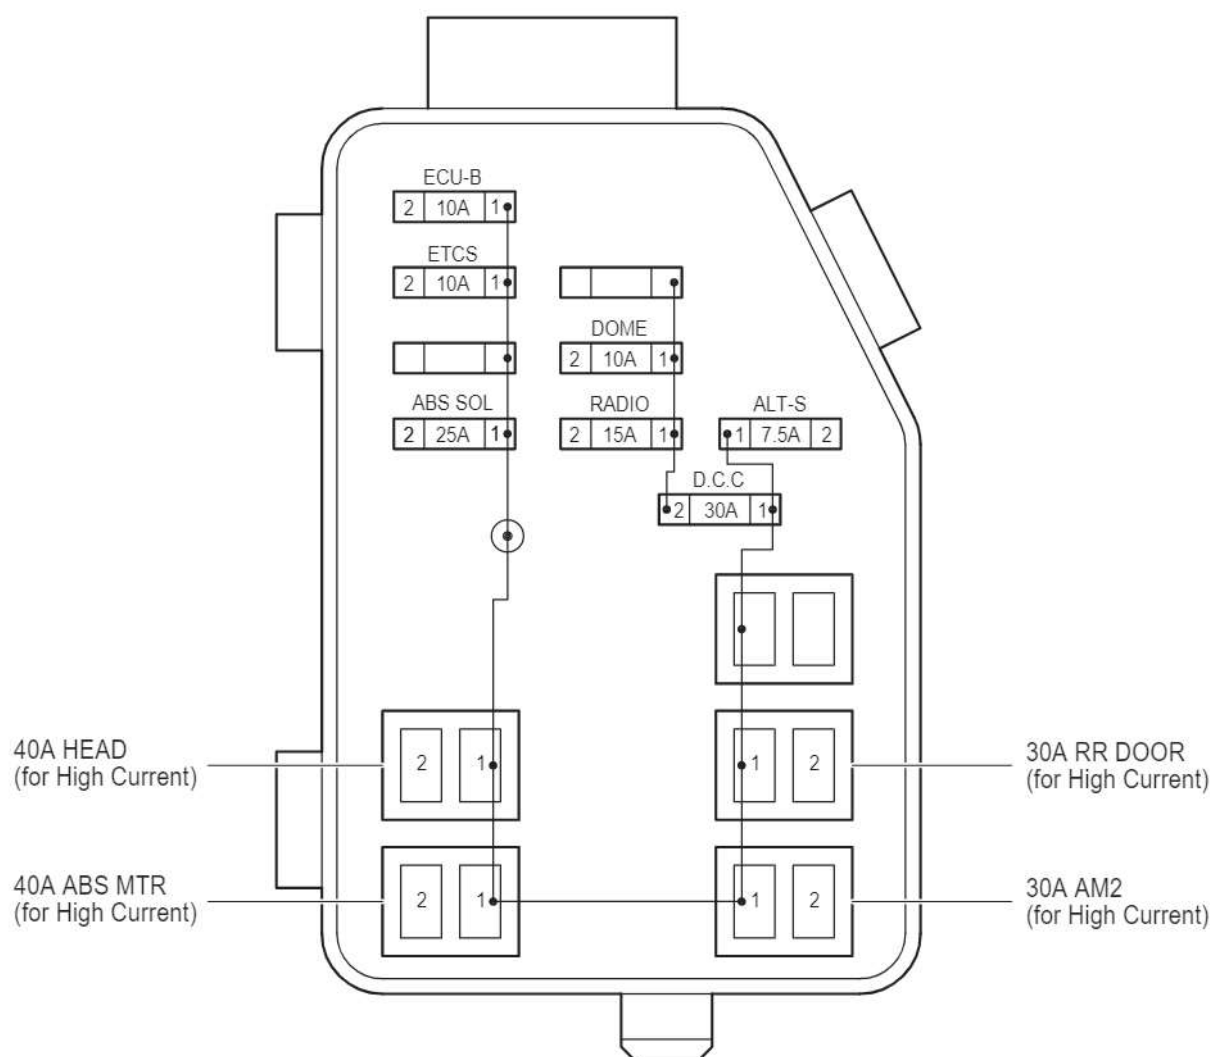



④ : Instrument Panel R/B Under the Glove Box (See Page 21)

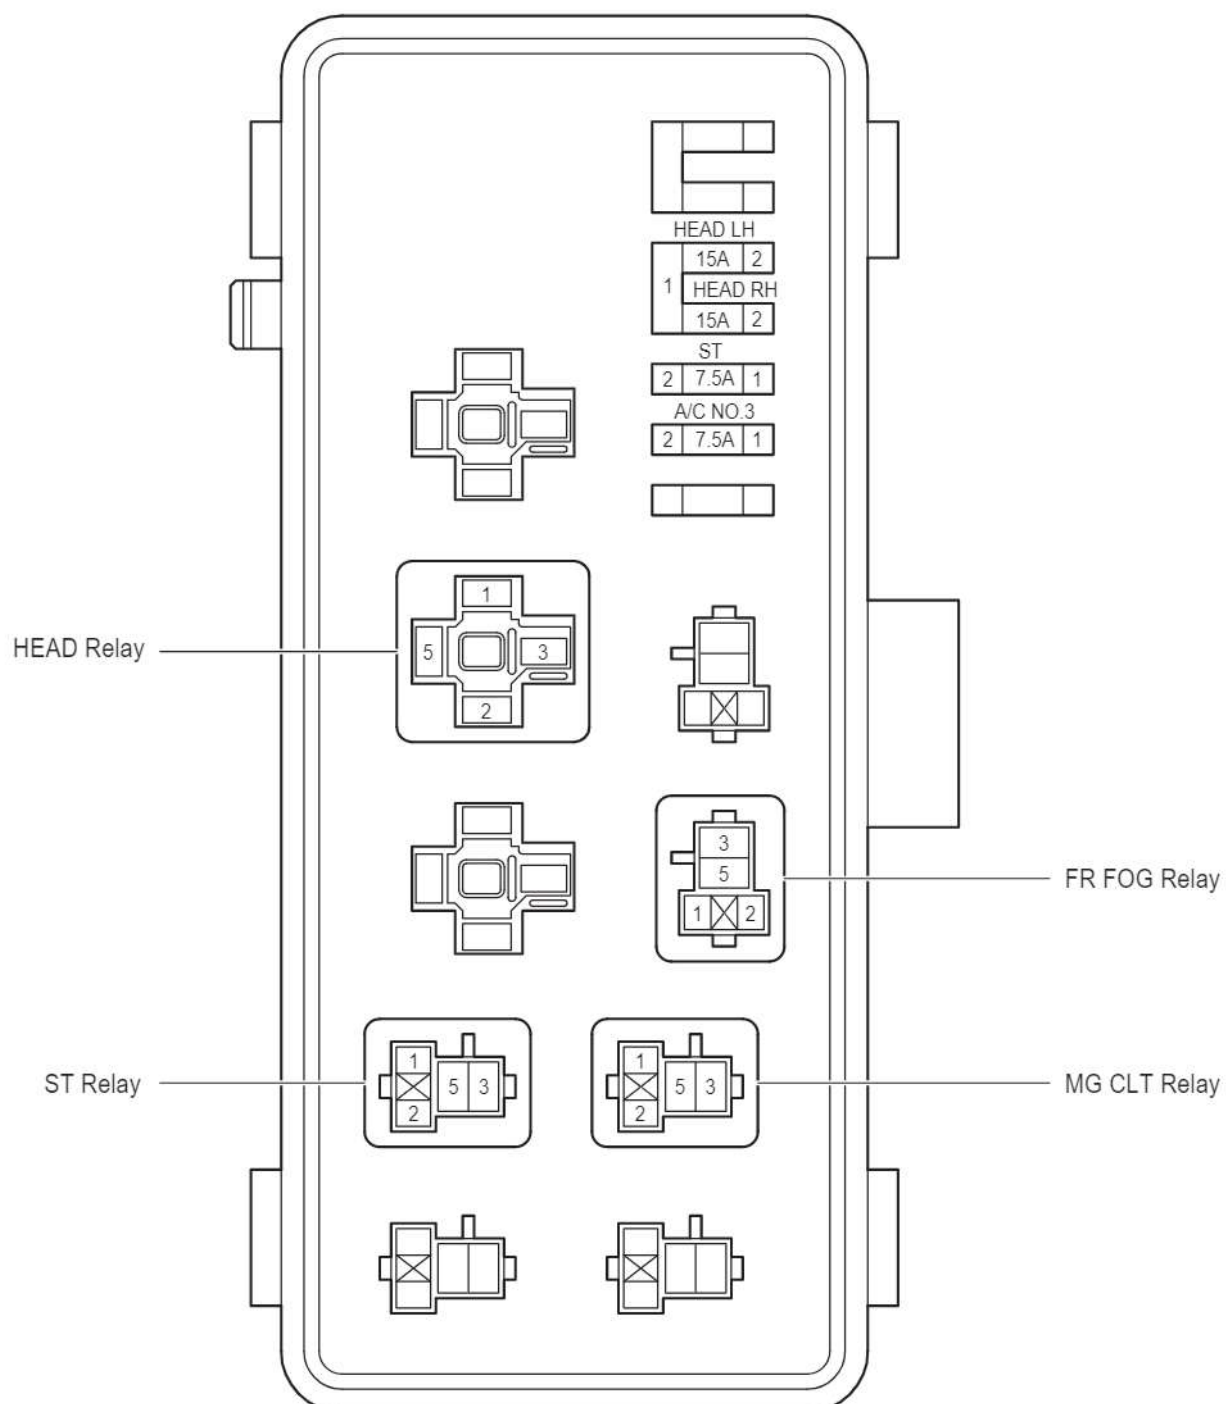

F RELAY LOCATIONS


○ : Instrument Panel J/B Left Side of Instrument Panel (See Page 21)

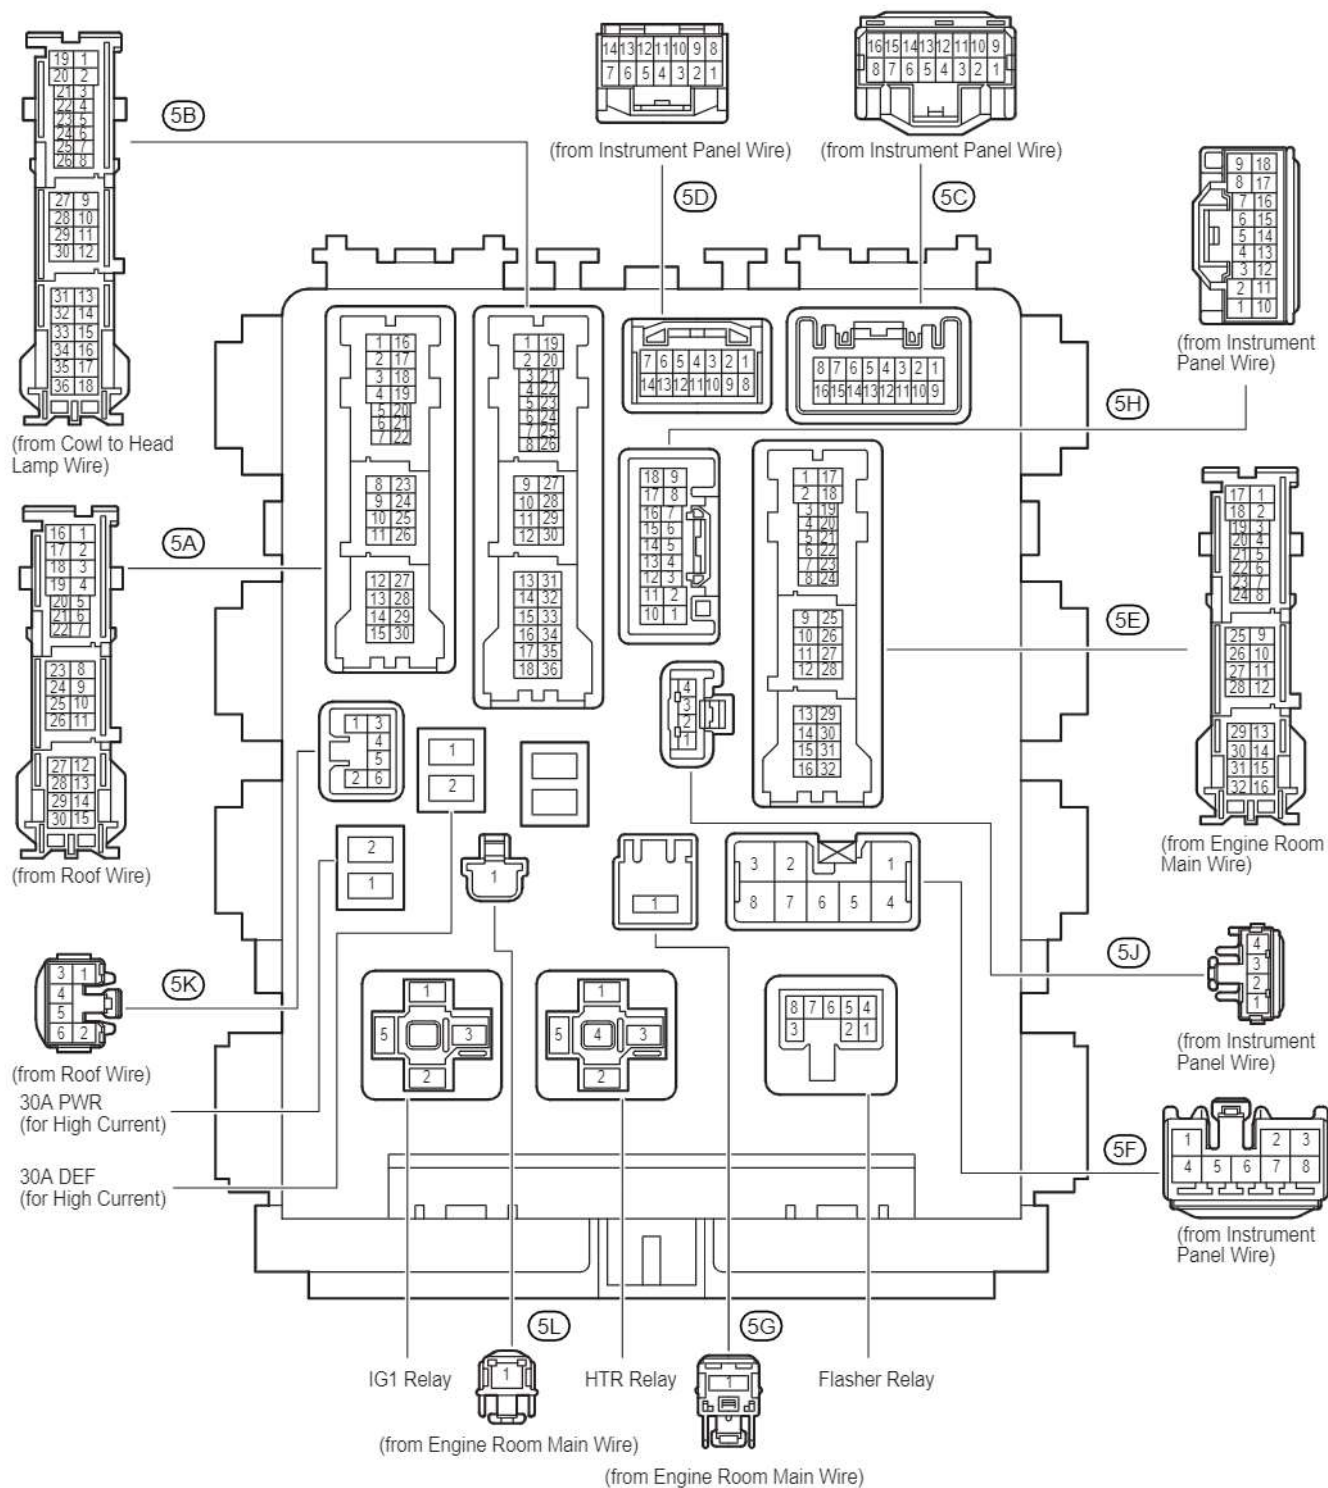

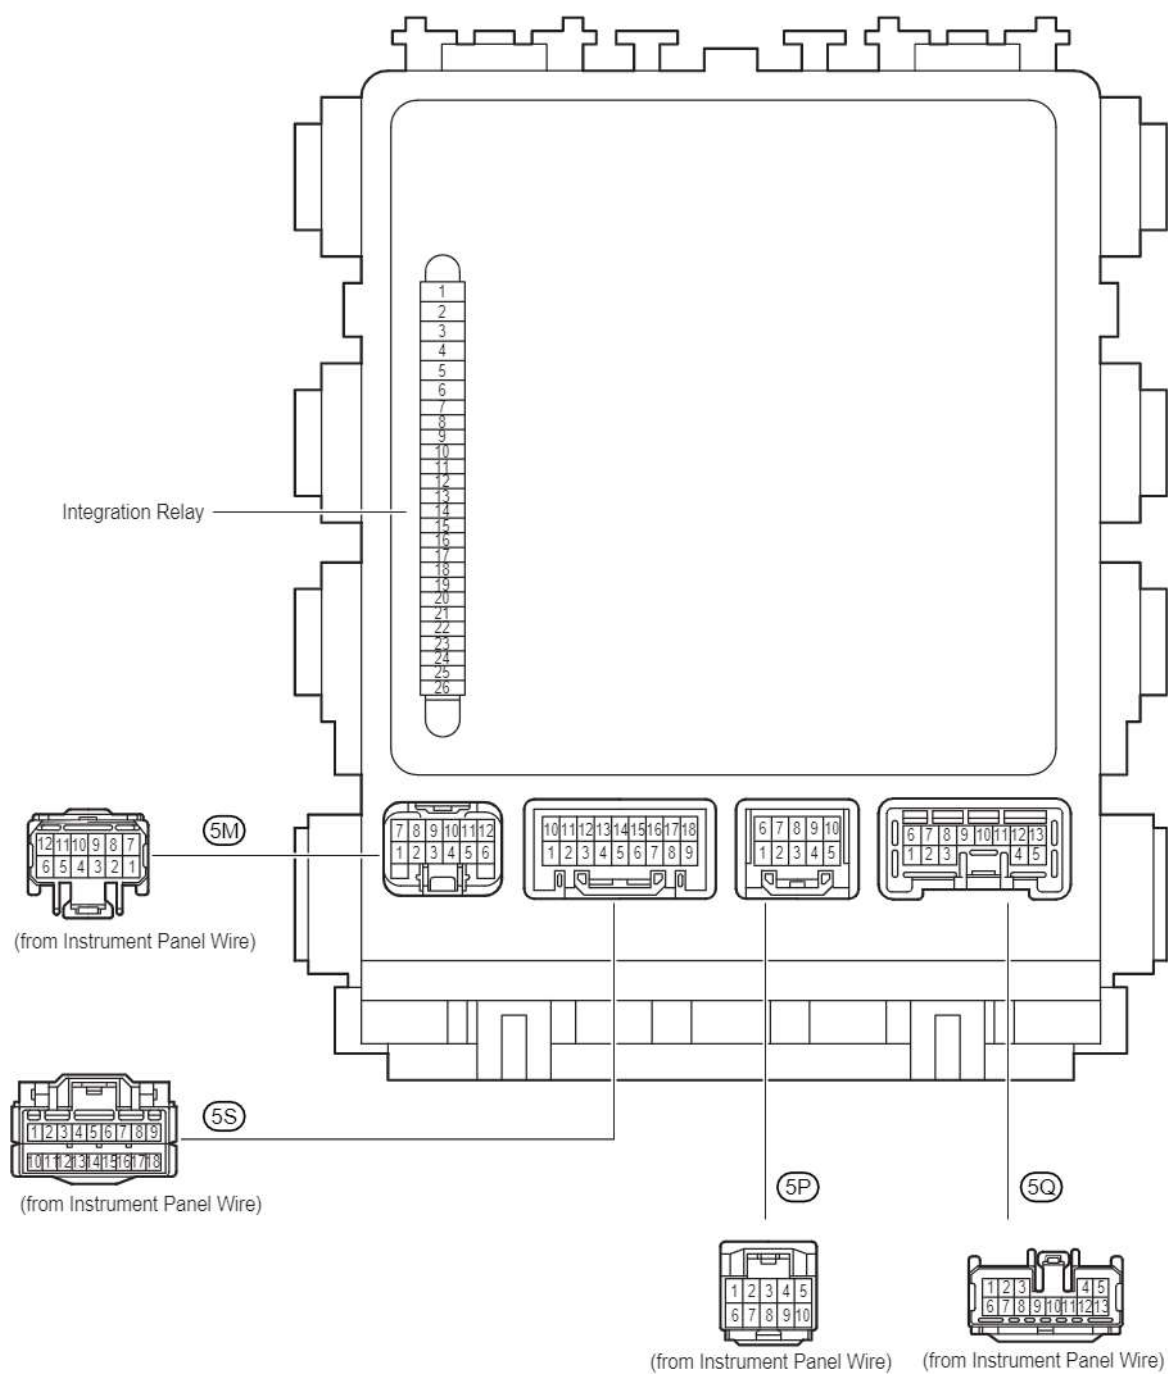


F RELAY LOCATIONS

○ : Instrument Panel J/B Left Side of Instrument Panel (See Page 21)

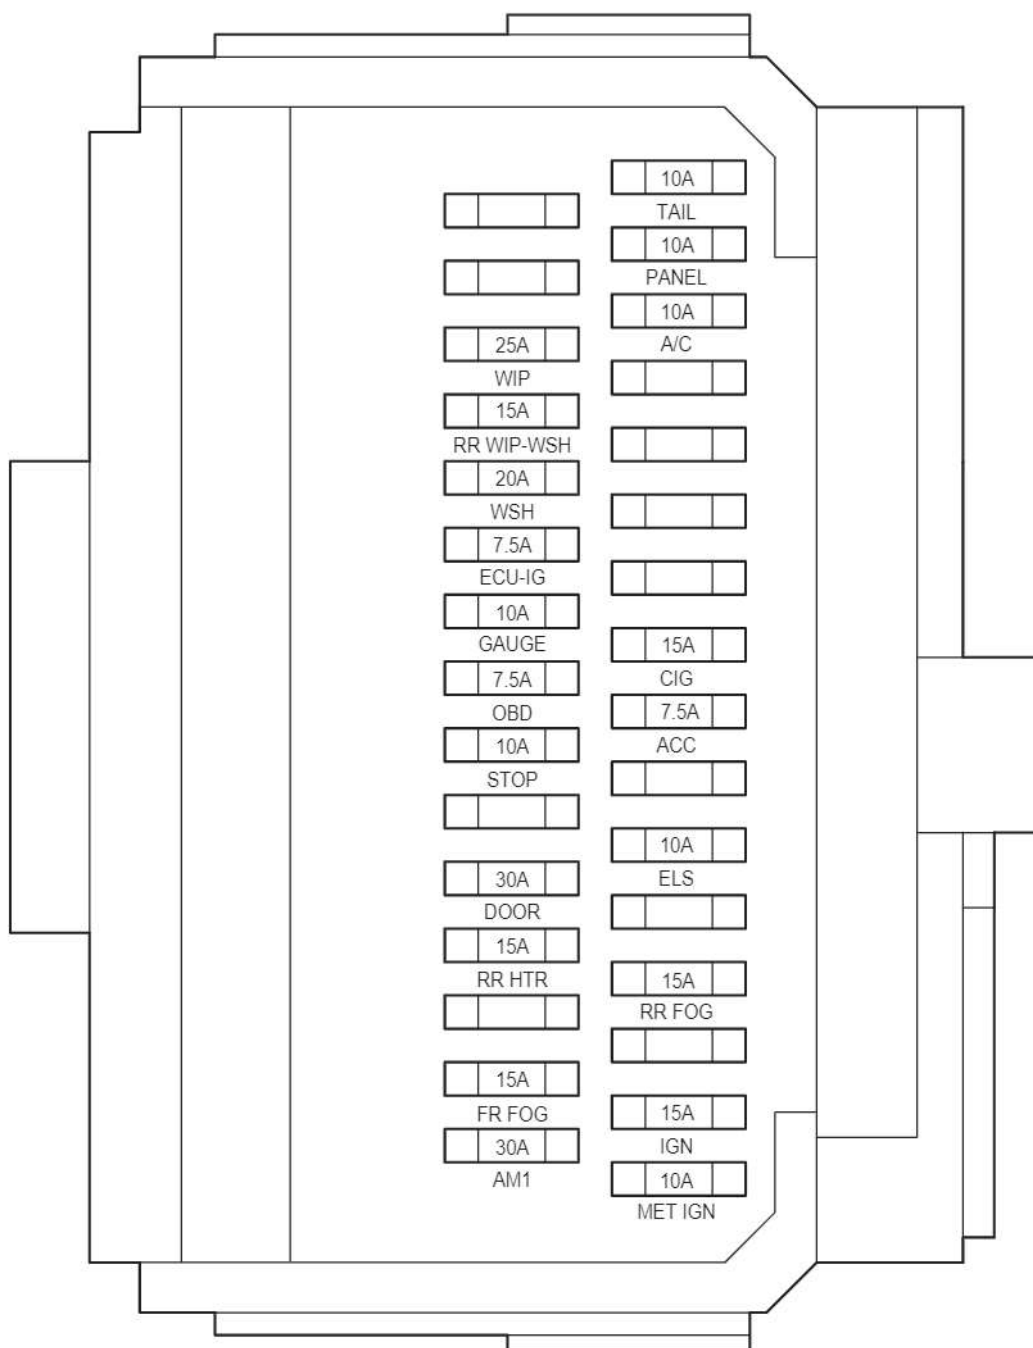


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

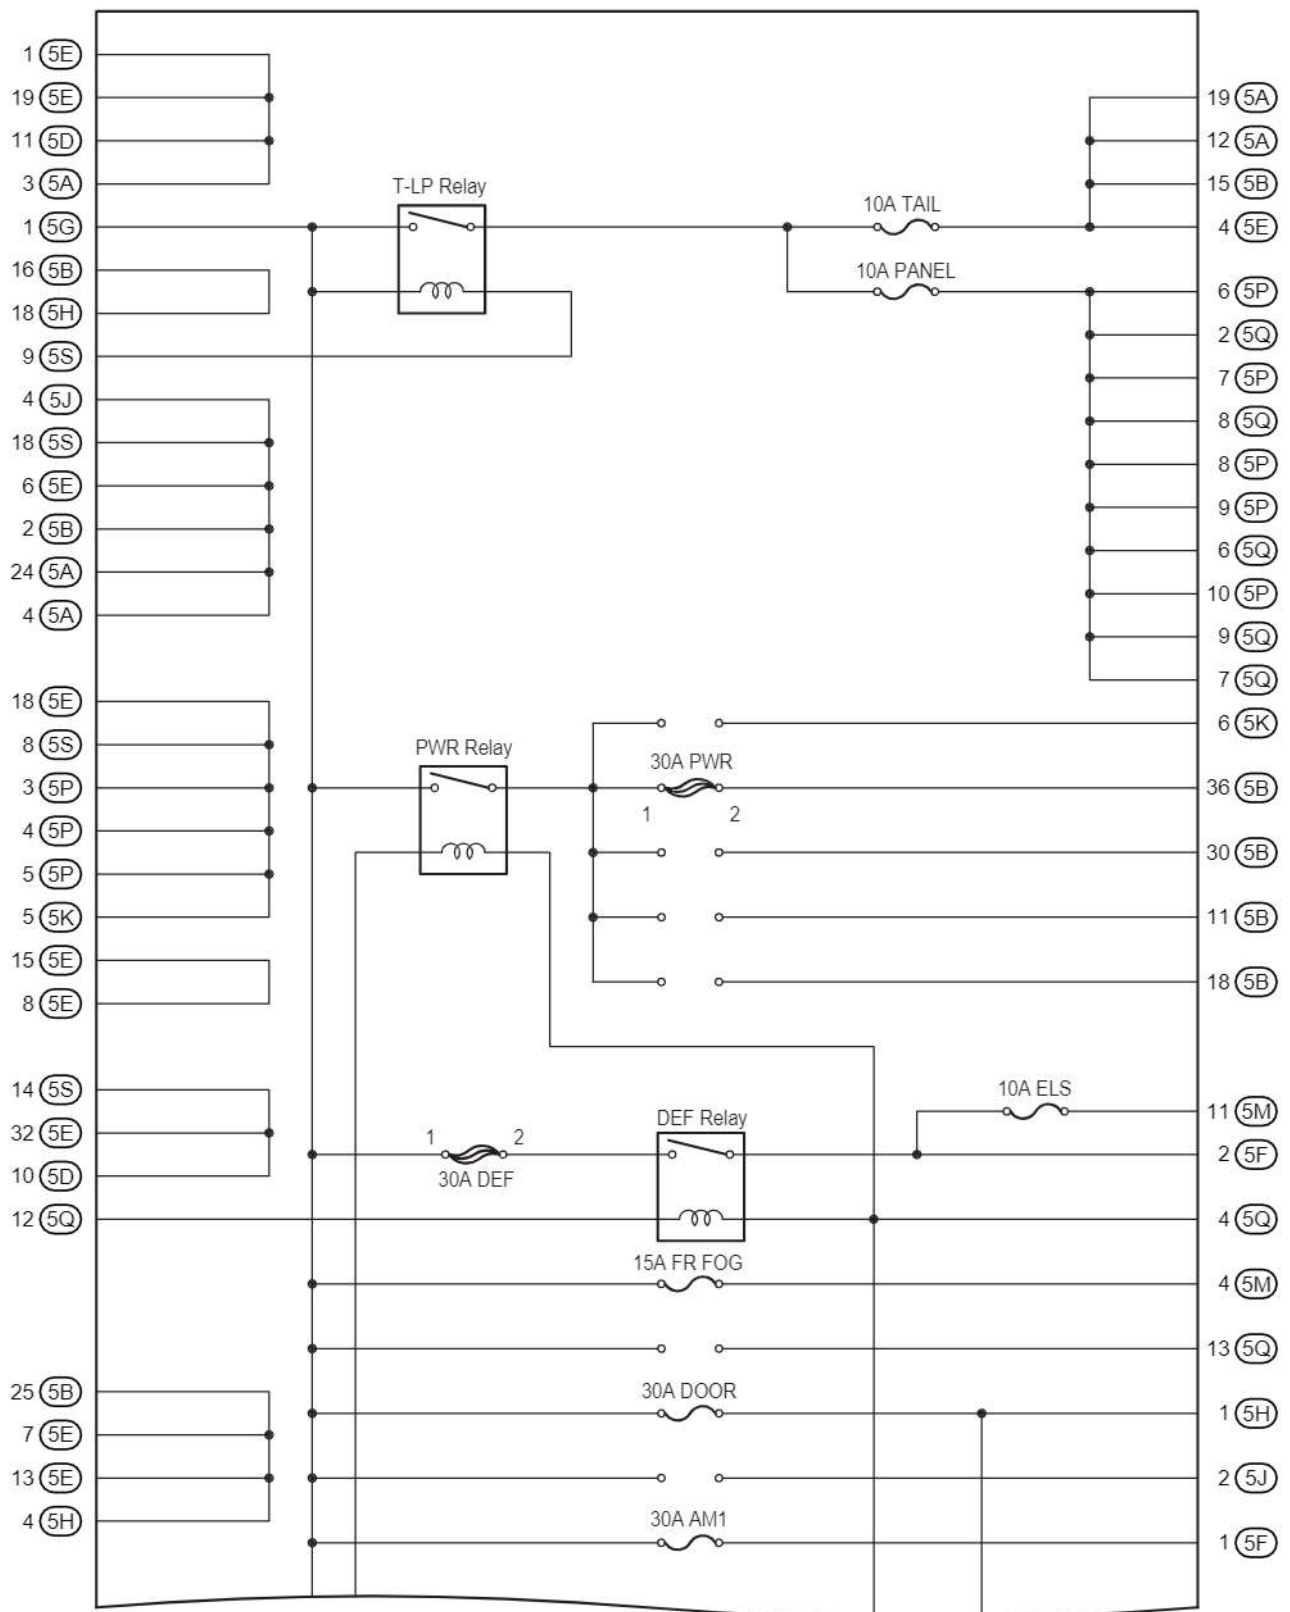

(Cont. Next Page)

(Cont'd)

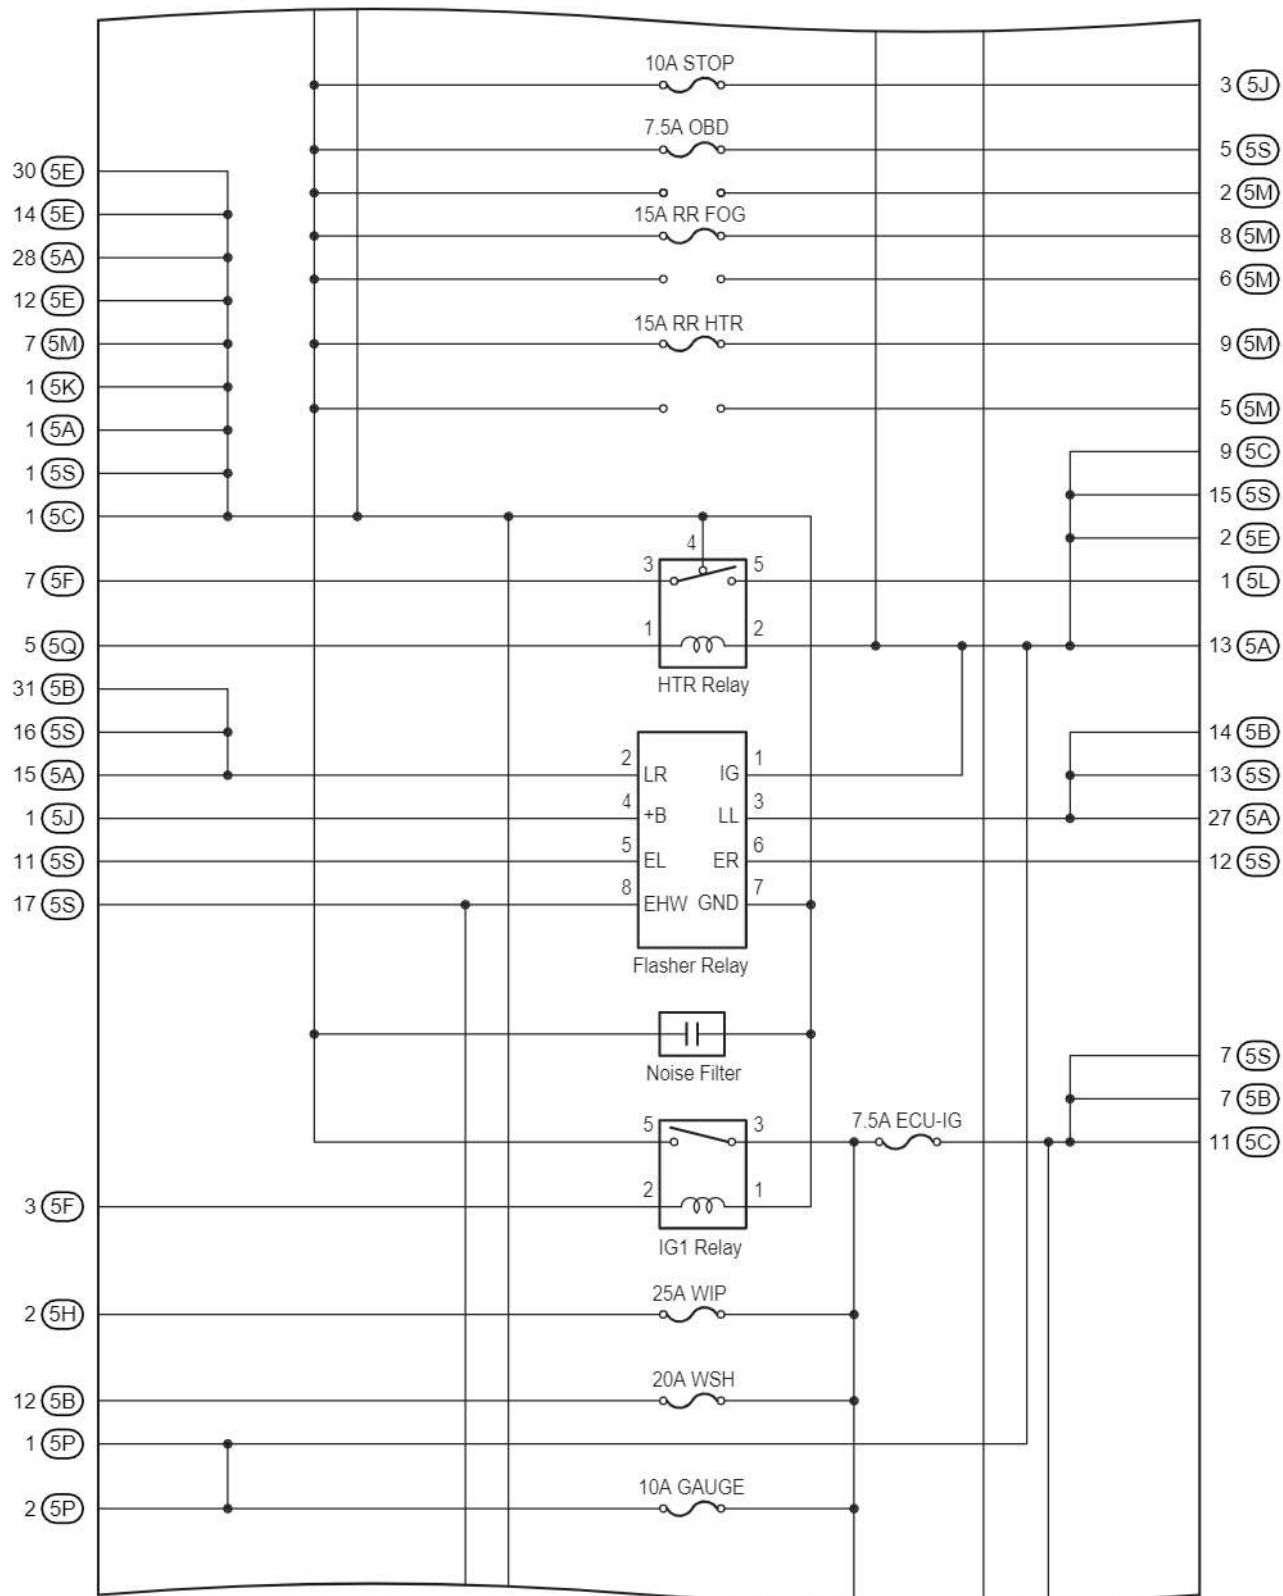


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

(Cont'd)

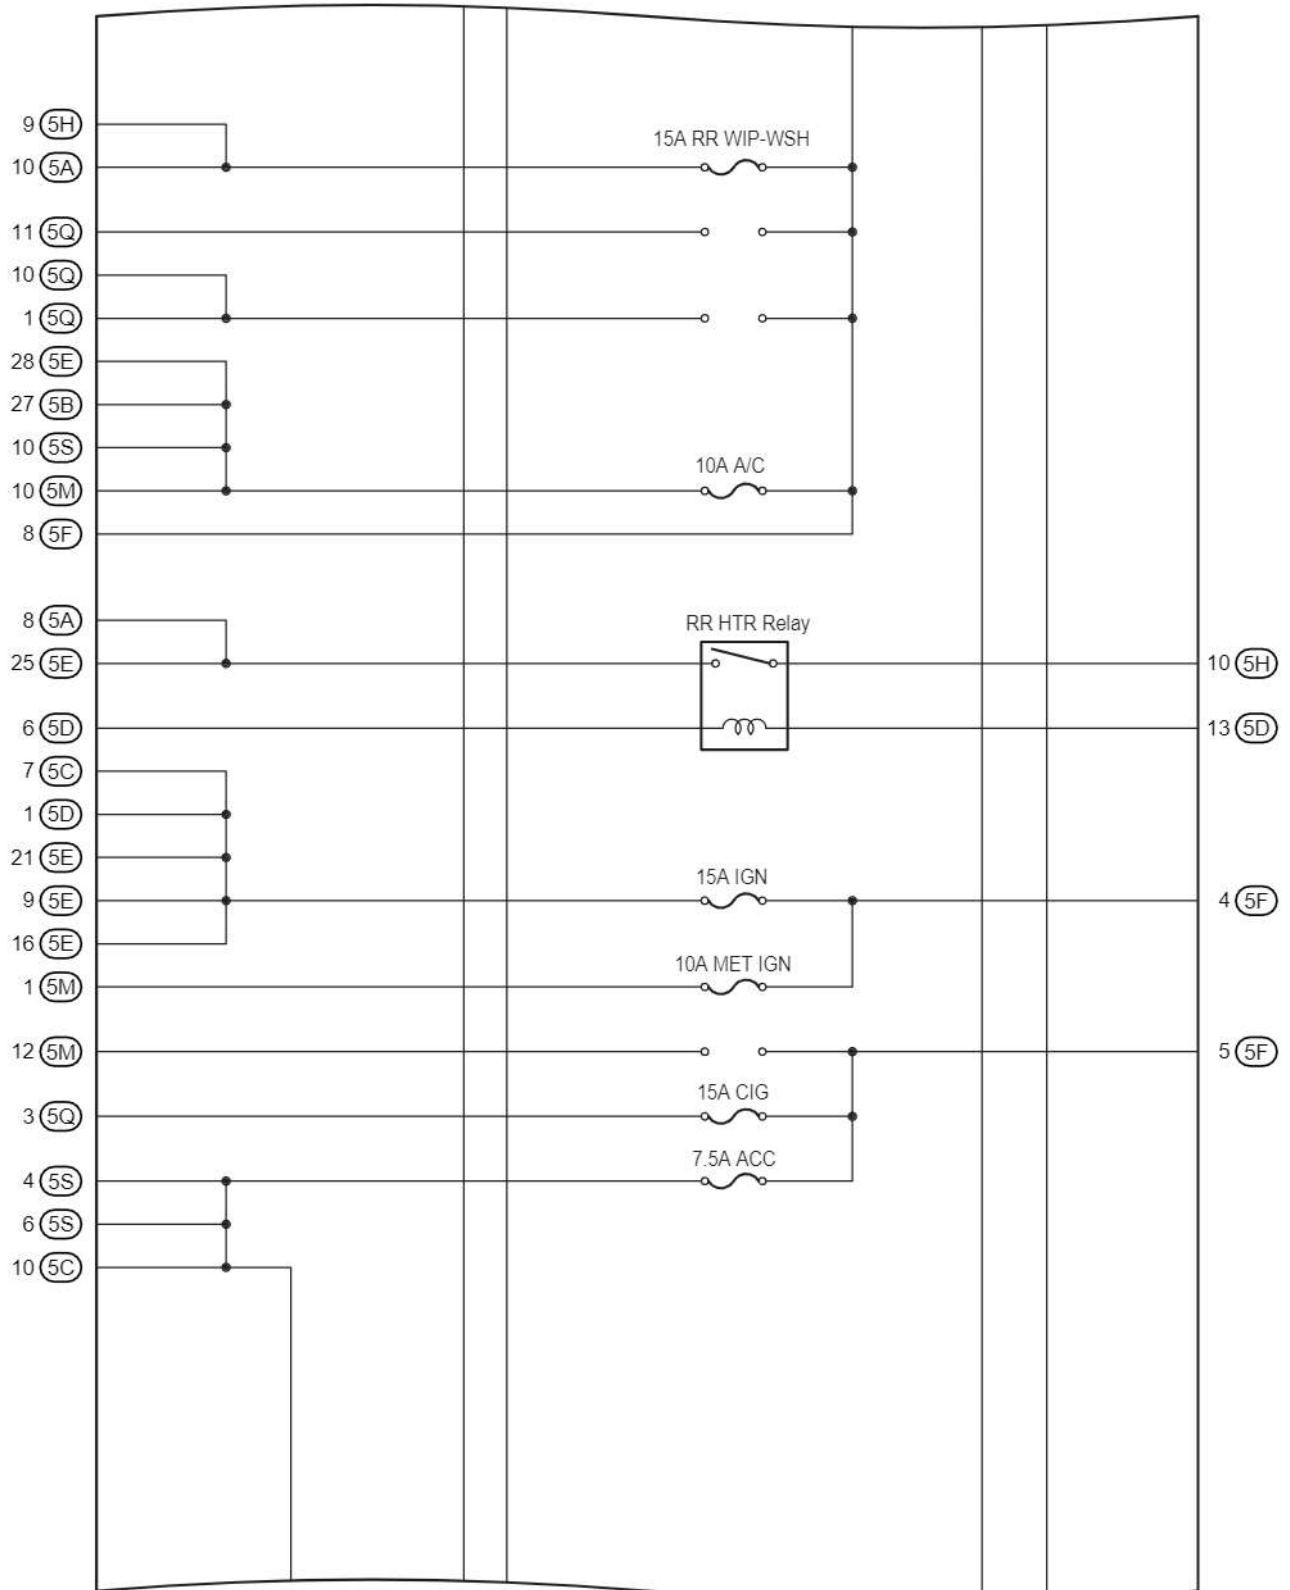


(Cont. Next Page)

(Cont'd)

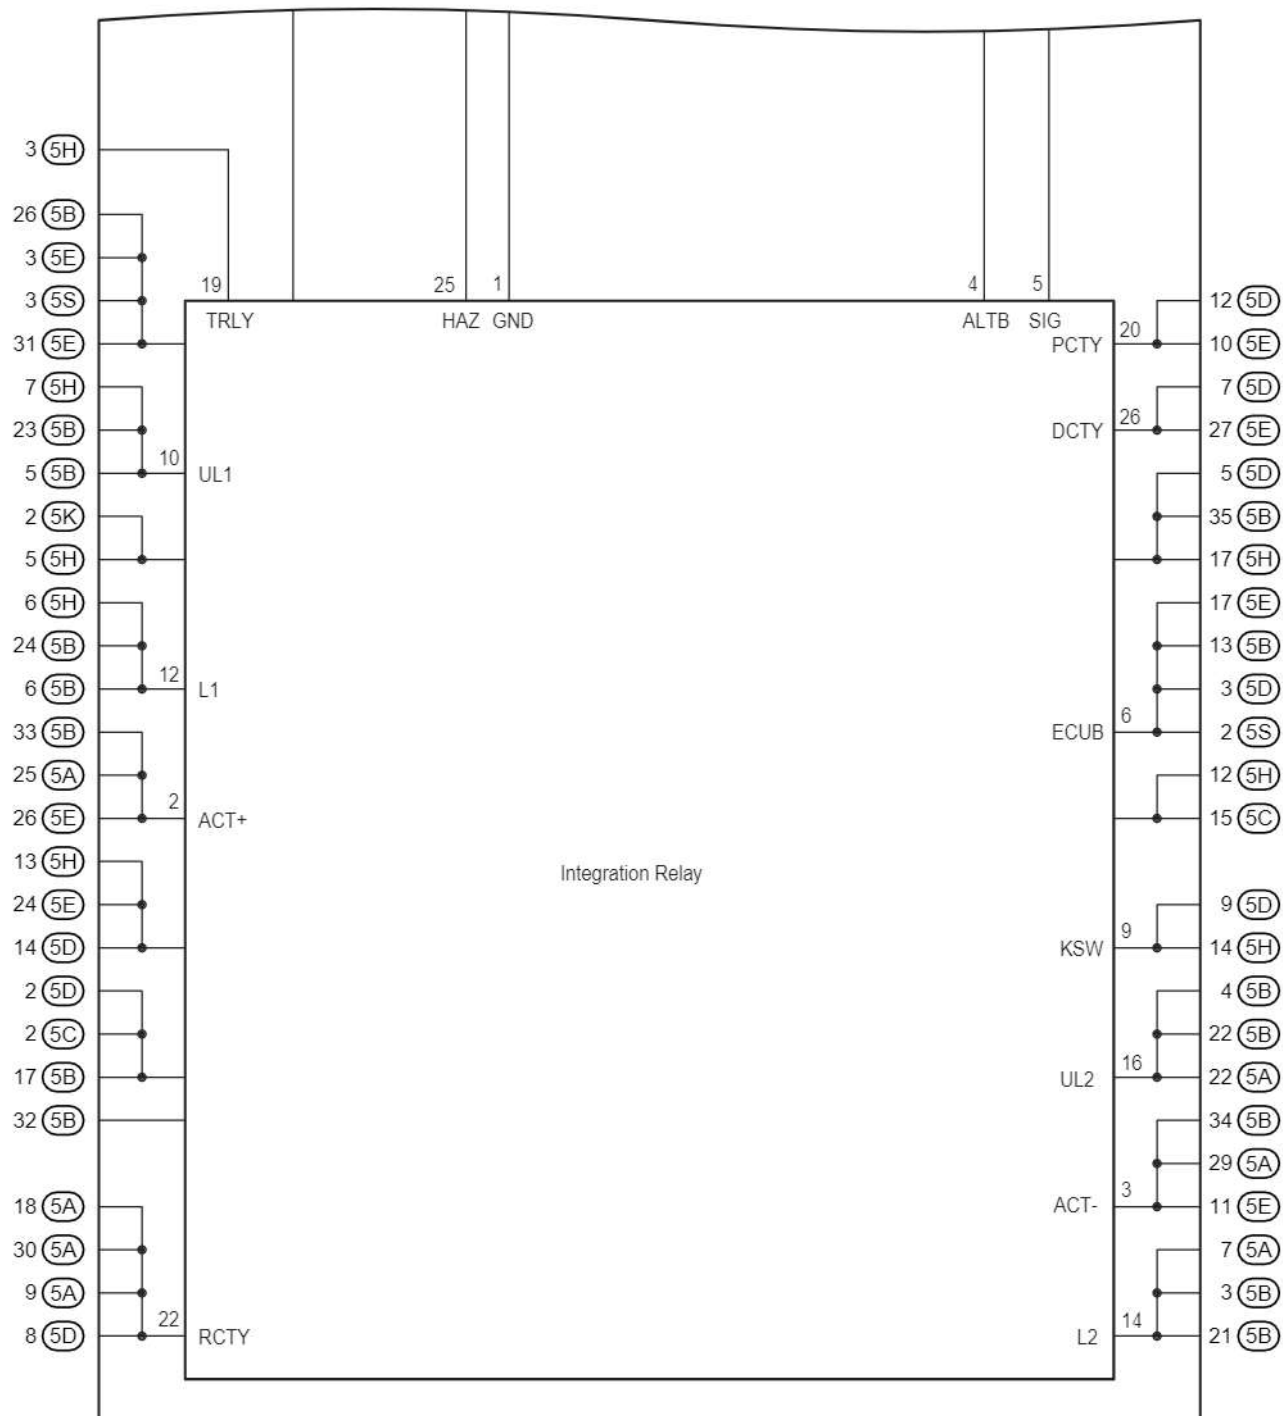


F RELAY LOCATIONS

 : Center J/B	LHD : Instrument Panel Reinforcement LH (See Page 21)
	RHD : Instrument Panel Reinforcement RH (See Page 21)

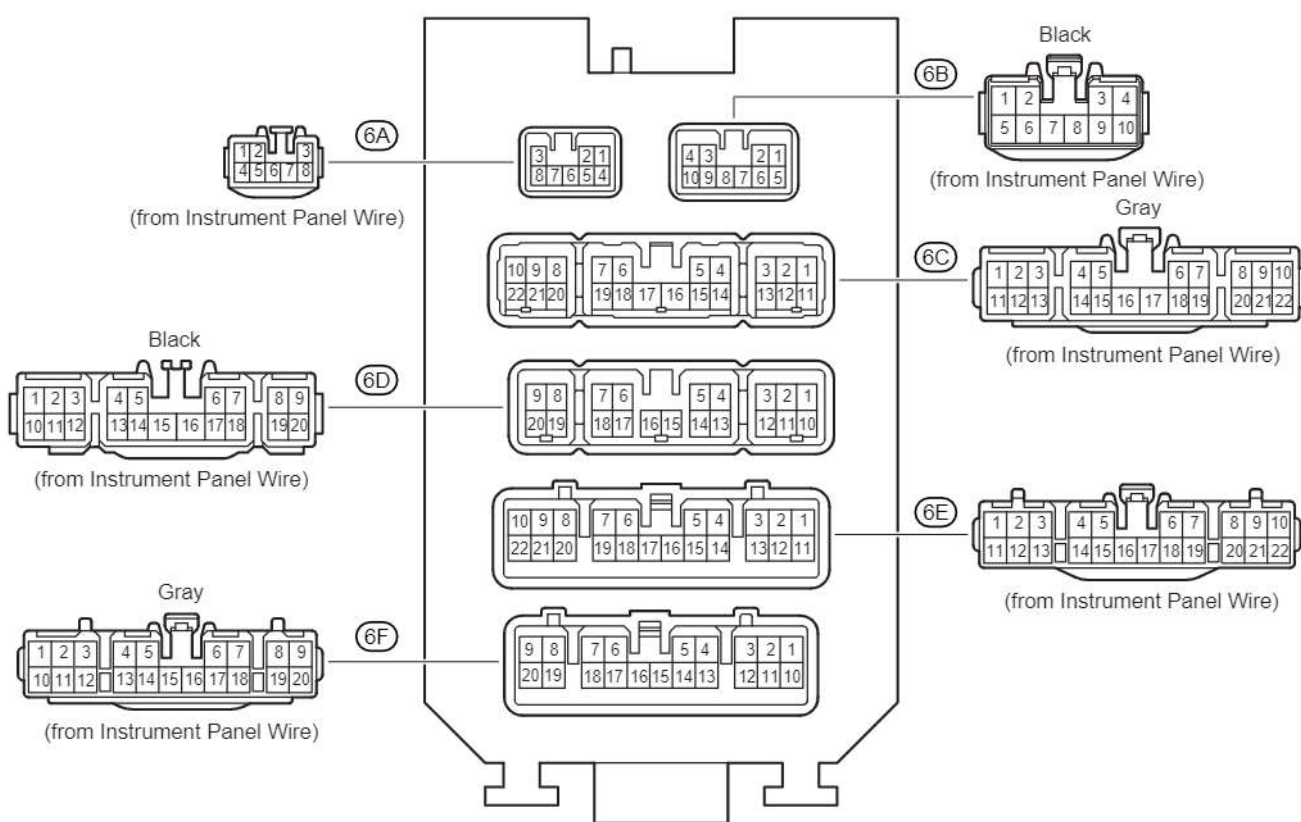


F RELAY LOCATIONS

[Center J/B Inner Circuit]

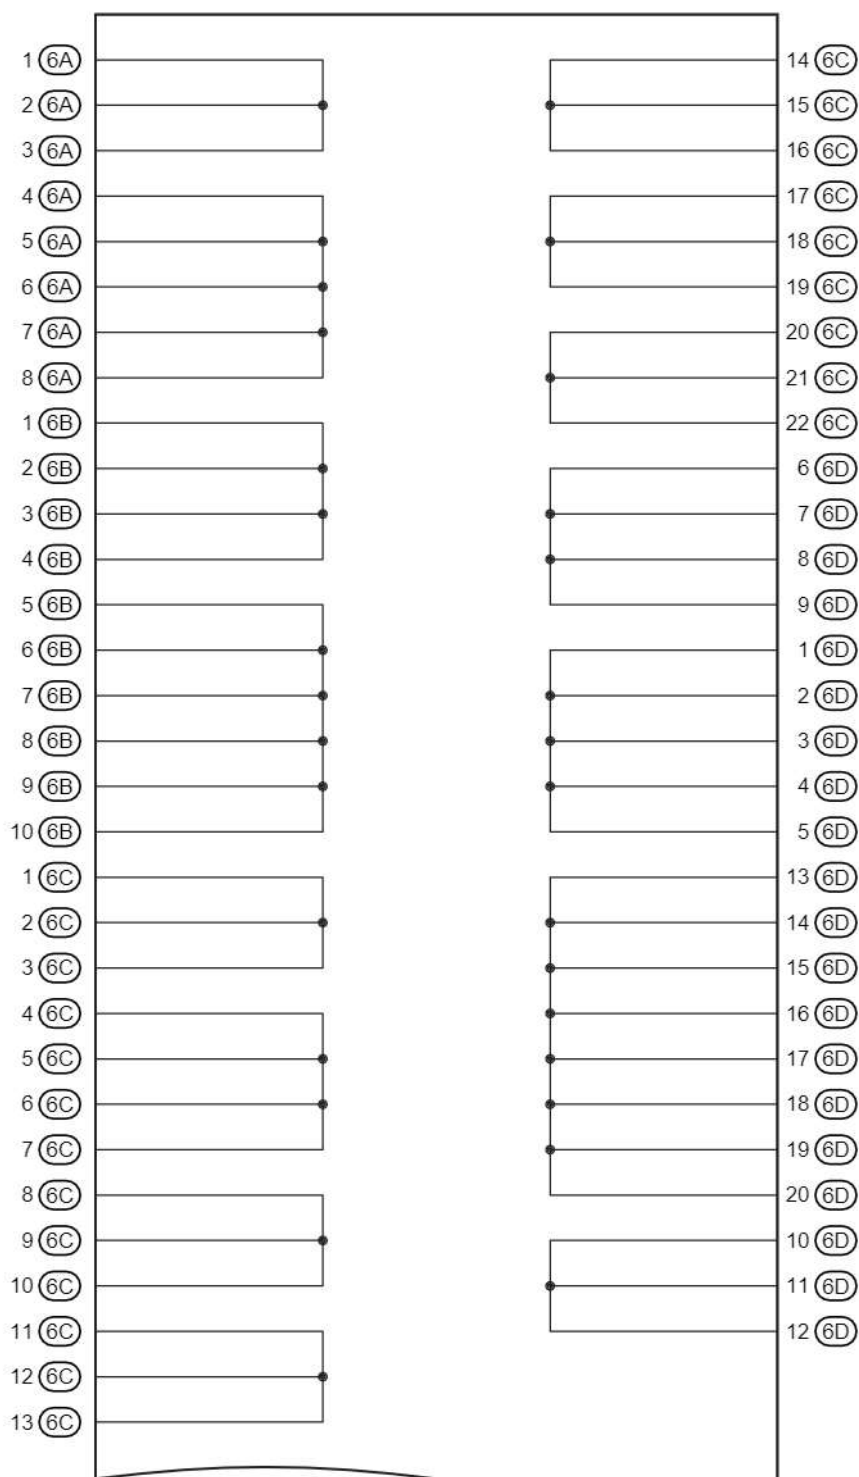


(Cont. Next Page)

(Cont'd)

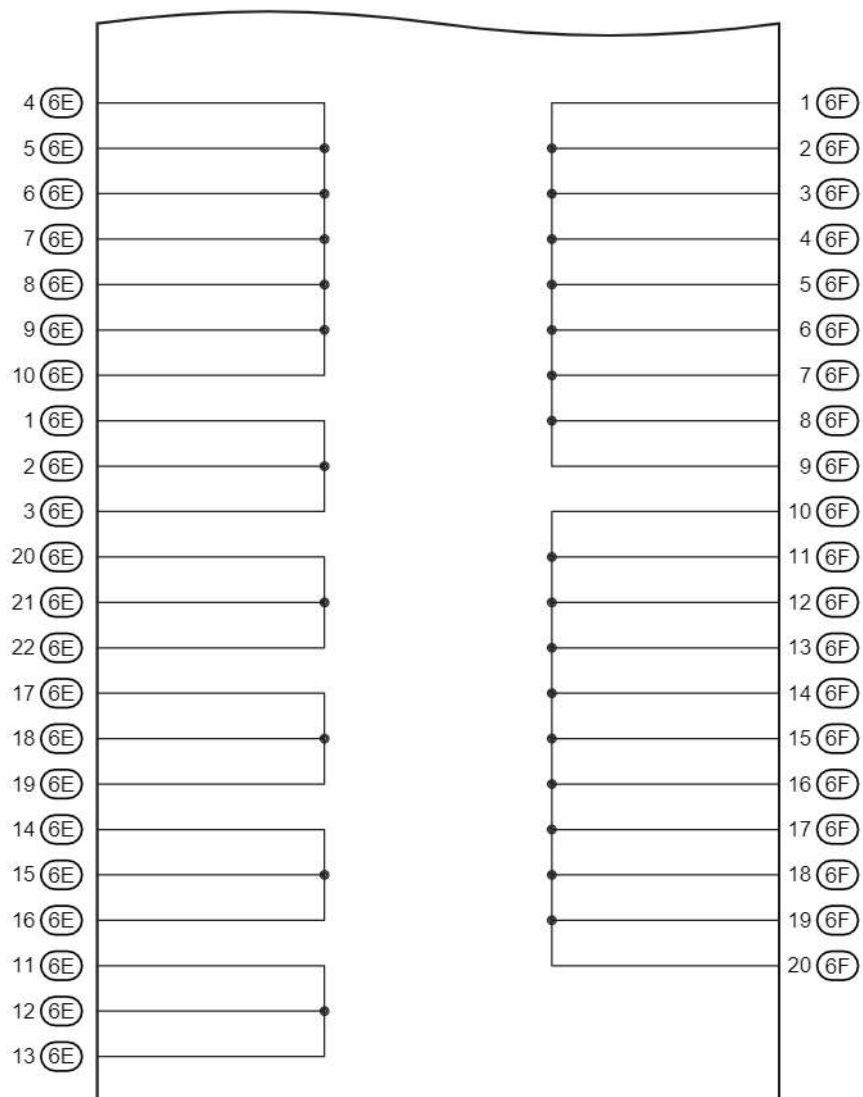

F RELAY LOCATIONS

Junction Connector	Instrument Panel J/B RH Side (See Page 21)
--------------------	--

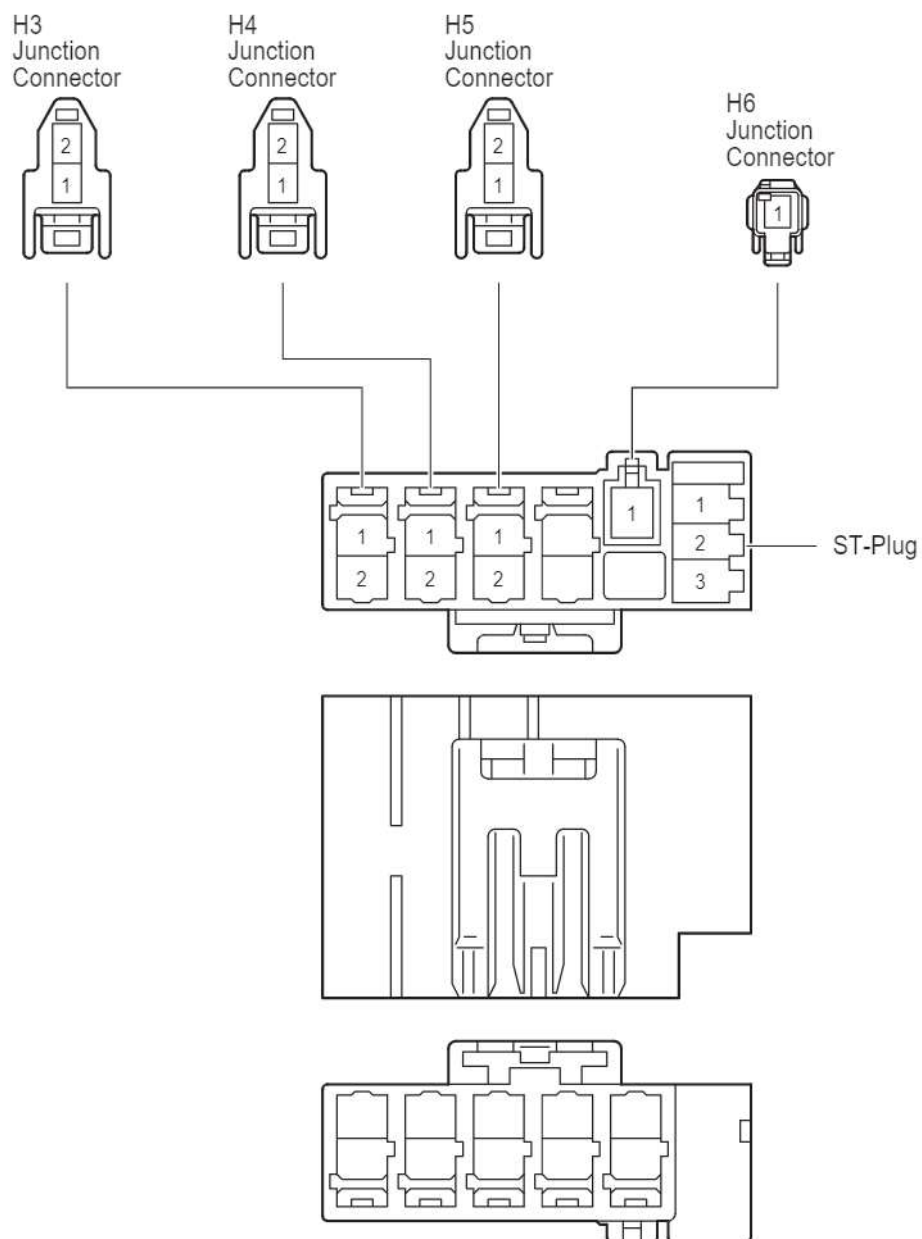

[Junction Connector Inner Circuit]