


Chevrolet Corvette 1999 fuse box diagram

Instrument panel fuse block

The interior fuse center is on the right side of your instrument panel. Turn the knob and pull the door to access the fuses.

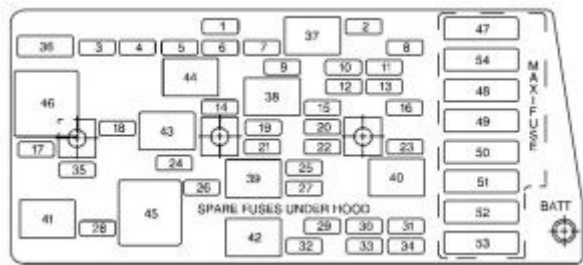


Chevrolet Corvette – fuse box – instrument panel

Fuses	Usage
1	Console Cigarette Lighter
2	Monitored (Inadvertent) Load Control
3	Lumbar Seat
4	Driver Seat Control Module
5	Radio
6	Parking Lamps, Taillamps
7	Cigar Lighter
8	Stop Hazard Flashers
9	Body Control Module
10	Windshield Wiper/Washer
11	Accessory Power
12	Blank
13	Body Control Module
14	Crank
15	Hazard/Turn Signal
16	Air Bag
17	Tonneau Release
18	HVAC Controls
19	Instrument Panel Control
20	Cruise Control
21	Brake Transmission Shift Interlock
22	Body Control Module – Ignition 3
23	Body Control Module – Ignition 2
24	Radio Antenna
25	Body Control Module – Ignition I, Instrument Panel Control
26	Hatch/Trunk Release

27	HVAC Controls
28	Bose Speakers
29	Diagnostic
30	Right Door Control Module
31	Power Feed Door Right
32	Fuel Tank Door
33	Door Control Module Left
34	Power Feed Door Left
35	Driver Power Seat (Circuit Breaker)
36	Passenger Power Seat (Circuit Breaker)
37	Micro Relay – Monitored (Inadvertent) Load Control
38	Micro Relay – Right Daytime Running Lamp
39	Micro Relay – Hatch Release
40	Micro Relay -Left Daytime Running Lamp
41	Micro Relay – Tonneau Release
42	Micro Relay – Courtesy Lamps
43	Micro Relay – Automatic Lamp Control Parking Lamps
44	Micro Relay – Automatic Lamp Control Headlamps
45	Bose Mini Relay – Speakers
46	Mini Relay – Rear Defogger
47	Maxifuse – Ignition 1
48	Maxifuse – Rear Defogger
49	Blank
50	Maxifuse – Ignition 2
51	Maxifuse – Blower Motor
52	Starter
53	Blank
54	Maxi Circuit Breaker – Headlamps

Engine compartment fuse block

There is one fuse block in the engine compartment located on the passenger’s side of the vehicle in front of the battery.

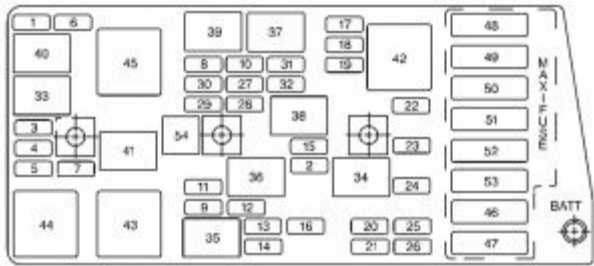

Chevrolet Corvette – fuse box – engine

compartment

Fuse	Usage
------	-------

1	Rear Fog Lamp
2	Approach
3	Right Headlamp Motor
4	Left Headlamp Motor
5	ABS TRANS
6	Fog Lamp
7	Selective Real Time Damping
8	Headlamp Low Beam Right
9	Headlamp High Beam Right
10	Headlamp Low Beam Left
11	Horn
12	Headlamp High Beam Left
13	Fuel Pump
14	Cooling Fan – Ignition 3
15	Oxygen Sensor
16	Powertrain Control Module
17	Throttle Control
18	Injector 2
19	Engine Ignition
20	Blank
21	Blank
22	Injector 1
23	Powertrain Control Module
24	Air Conditioning
25	Blank
26	Blank
27	Spare
28	Spare
29	Spare
30	Spare
31	Spare
32	Spare
33	Micro Relay – Air Pump
34	Micro Relay – Air Conditioner and Clutch
35	Micro Relay – Fuel Pump
36	Micro Relay – Horn
37	Micro Relay – Rear Fog Lamp
38	Micro Relay – Back-up Lamps
39	Micro Relay – Fog Lamp

40	Micro Relay – AIR Solenoid
41	Micro Relay – Selective Real Time Damping
42	Mini Relay – Ignition
43	Mini Relay – Cooling Fan 2
44	Mini Relay – Cooling Fan 3
45	Mini Relay – Cooling Fan 1
46	Maxi Fuse – Cooling Fan 2
47	Blank
48	Blank
49	Maxi Fuse – Cooling Fan 1
50	Maxi Fuse – Air Pump
51	Maxi-Fuse – Selective Real Time Damping Electronics
52	Maxi Fuse – Anti-Lock Brakes
53	Anti-Lock Brakes
54	Fuse Puller