

11.Drain Filter

A: SPECIFICATION

Drain valve is a non-disassembled part, so do not remove the drain filter from drain valve. Refer to “Canister” for removal and installation procedures.

<Ref. to EC(H6DO)-6, REMOVAL, Canister.>

<Ref. to EC(H6DO)-7, INSTALLATION, Canister.>