

xB

2011

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.



what moves you

2011 Scion xB

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Scion xB.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Scion xB operations. Every Scion xB owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	7
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	6

FEATURES/OPERATIONS

Air Conditioning/Heating	12
Auto lock functions²	8
Automatic Transmission	8
Bottle holders	13
Cruise control	11
Lights & turn signals	10
Multi-information display	14
Parking brake	8
Power outlet	14
Seat adjustments-Front	9
Seat-Folding down rear seat	9
Seats-Head restraints	9
Steering wheel switches	13
Tilt steering wheel	12
USB/AUX audio jack	13
Windows	11
Windshield wipers & washers	10

SAFETY AND

EMERGENCY FEATURES

Door locks	15
Doors-Child safety locks	15
Seat belts	16
Seat belts-Shoulder belt anchor	15
Spare tire & tools	17
Tire Pressure Monitoring (warning) System	16



¹ Visit your Scion dealer for information on customizing this feature.

² Programmable by customer. Refer to the Owner's Manual for instructions and more information.


OVERVIEW

Instrument panel

Steering wheel

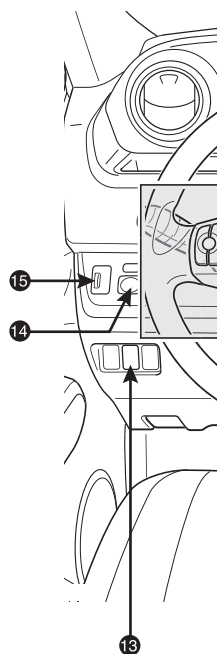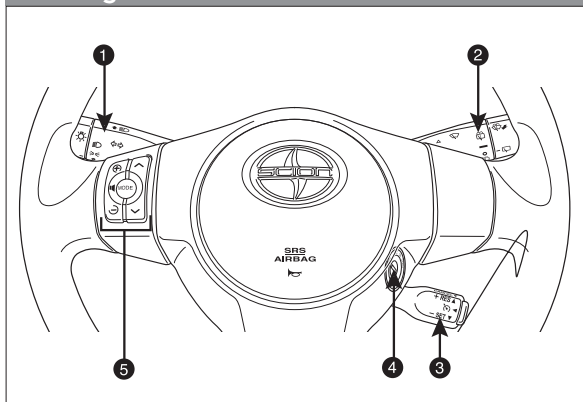


- ① Headlight and turn signal controls
- ② Wiper and washer controls
- ③ Cruise control
- ④ Ignition switch
- ⑤ Steering wheel audio controls*
- ⑥ Rear window defogger button
- ⑦ Front passenger occupant classification indicator / Front passenger seat belt reminder light
- ⑧ Air Conditioning controls

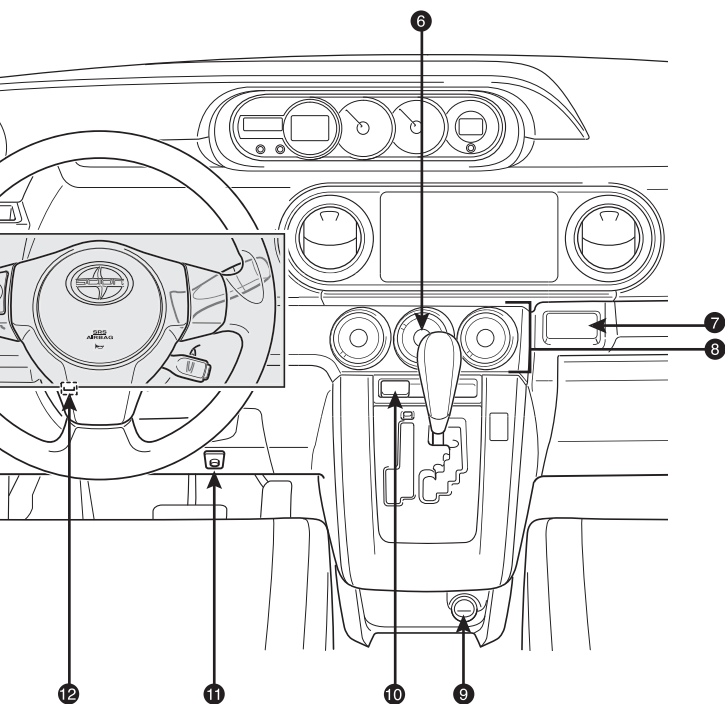

- 9 Power outlet
- 10 Emergency flasher button
- 11 Tire Pressure Monitoring (warning) System reset
- 12 Tilt steering lock release
- 13 "VSC OFF" (Vehicle Stability Control "OFF")
- 14 Power outside rearview mirror controls
- 15 Instrument panel light control dial

* For details, refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual*.

Instrument cluster

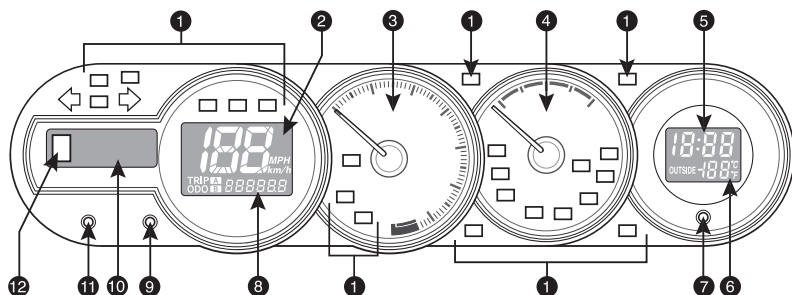

- ❶ Service indicator and reminder
- ❷ Speedometer
- ❸ Tachometer
- ❹ Fuel gauge
- ❺ Clock
- ❻ Outside temperature
- ❼ Clock button
- ❽ Odometer and two trip meters
- ❾ Odometer/trip meter and trip meter reset button
- ❿ Multi-information display
- ⓫ Multi-information display control switch
- ⓬ Automatic Transmission shift position indicator

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2011 Owner's Manual.

BRAKE	Brake system warning ¹
	Driver seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
PASSENGER 	Front passenger seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Malfunction/Check Engine indicator ¹

¹ For details, refer to "If warning light turns on or warning buzzer sounds" Section 5-2, 2011 Owner's Manual.



Low engine oil pressure warning¹



Open door warning¹



Airbag SRS warning¹



Low Tire Pressure Warning¹



Engine oil replacement reminder¹



Front passenger occupant classification indicator/
Front passenger airbag ON/OFF indicator



Headlight low beam indicator



Headlight high beam indicator



Turn signal indicator



Low fuel level warning¹



Slip indicator



Vehicle Stability Control OFF indicator¹



Cruise control indicator²



Cruise control SET indicator²



Electric power steering system warning¹



Anti-lock Brake System warning¹



Traction Control OFF indicator



Low engine coolant temperature indicator




High engine coolant temperature warning light¹

² If this light flashes, refer to "Cruise control," Section 2-4, 2011 Owner's Manual.


Keyless entry

Locking operation

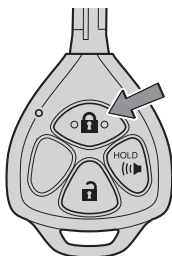

Push 

Unlocking operation

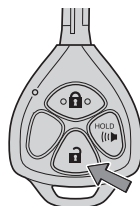

Push ONCE: Driver door
TWICE: ALL doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.



Panic button



Push and hold




Hood release

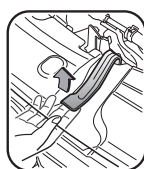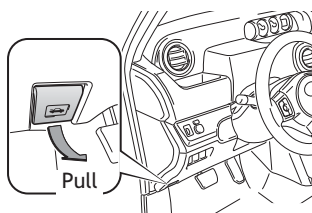


Pull up latch
and raise hood


Light control-Instrument panel

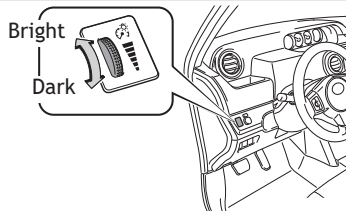

Fuel tank door release and cap

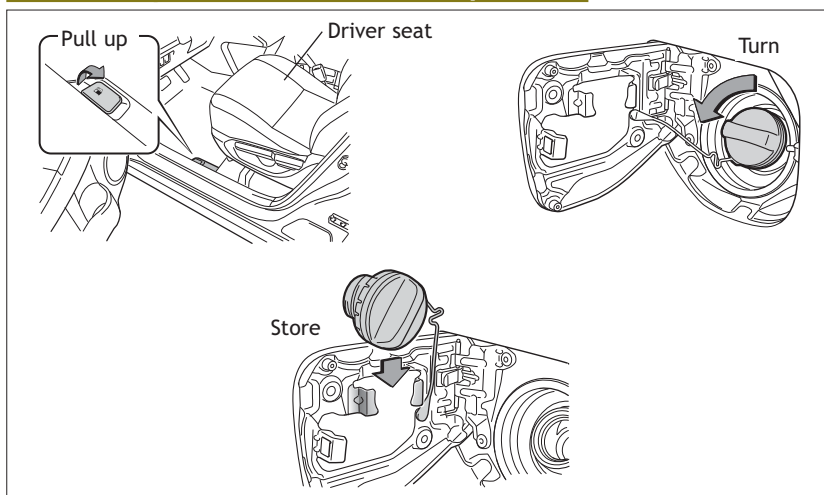

Engine maintenance

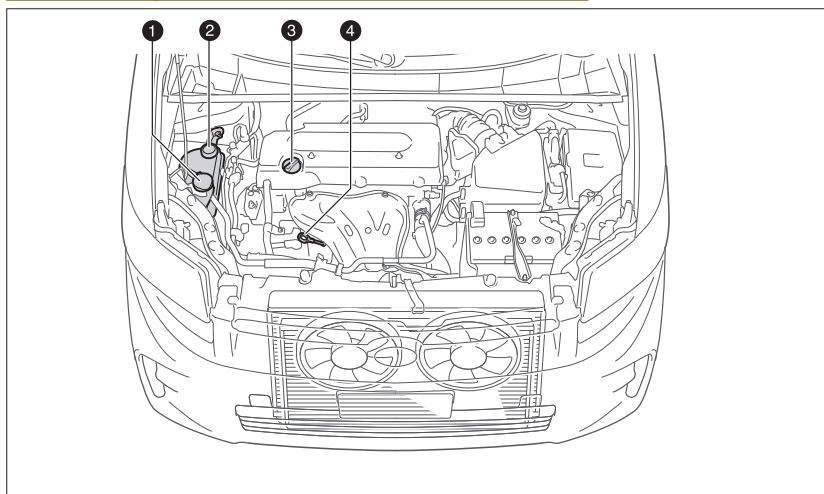

- ① Windshield washer fluid tank
- ② Engine coolant reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS

Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.


- Doors lock when shifting from Park.*¹
- Doors lock when the vehicle speed goes above approximately 12 mph.*²
- Doors unlock when ignition key is turned to "ACC" or "LOCK" position and driver's door is opened.*²
- Doors unlock when shifting into Park.*¹

*¹ Automatic Transmission only

*² Default setting is off

Refer to the *Owner's Manual* for more details.

Automatic Transmission (if equipped)

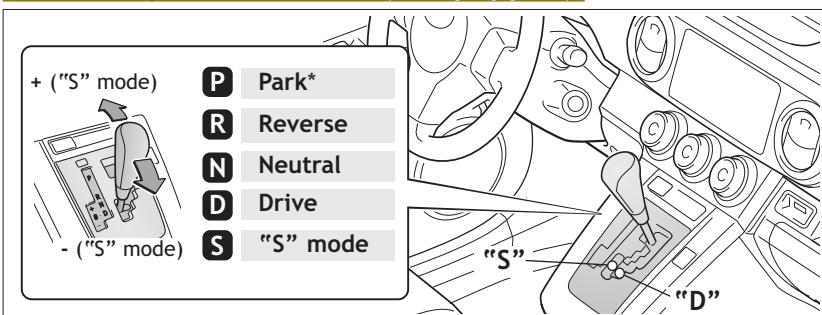

* The engine switch must be "ON" and the brake pedal depressed to shift from Park.


"S" (Sequential) mode

Push shift lever to the left from "D" position.


- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Parking brake

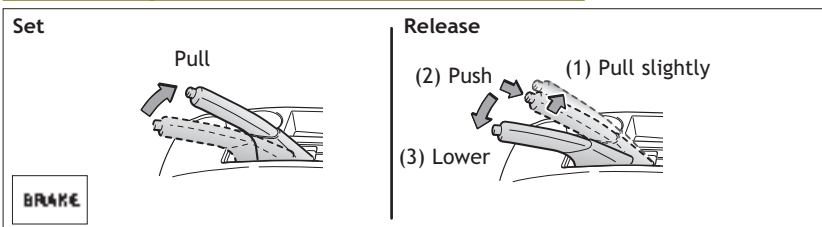

Seats-Head restraints

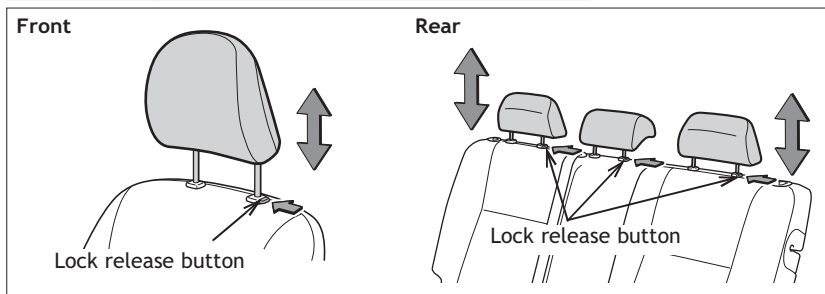


Seat adjustments-Front

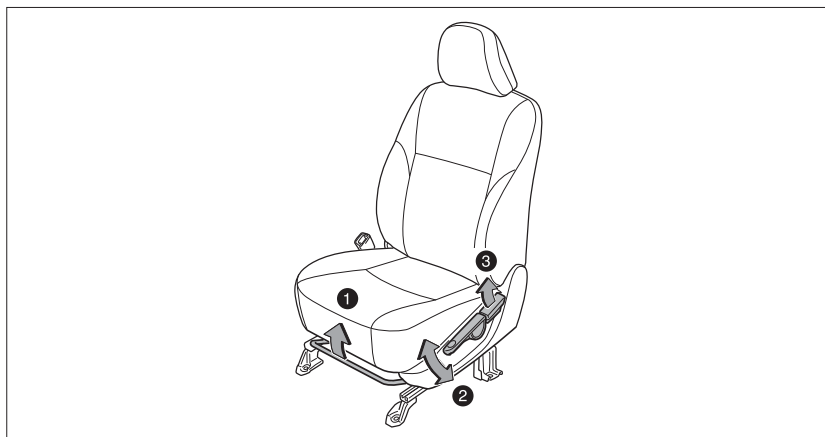


- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle

Seat-Folding down rear seat

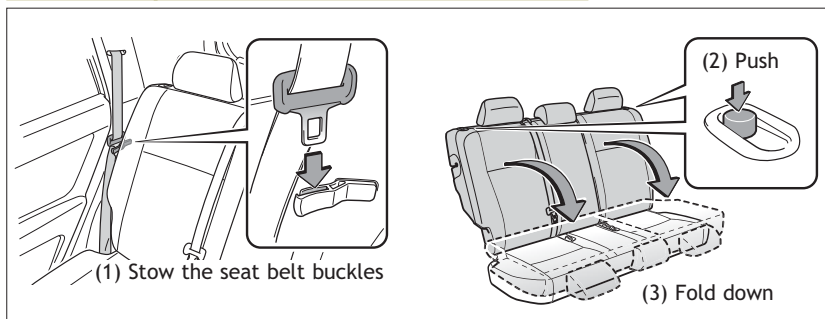


Lights & turn signals

Headlights

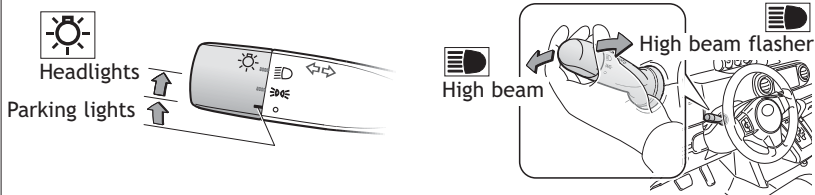


Turn signals

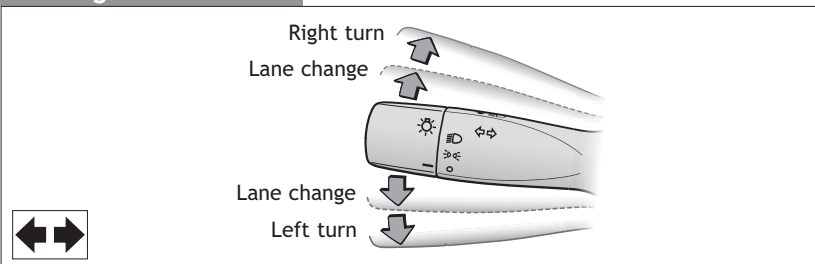


Windshield wipers & washers

Front


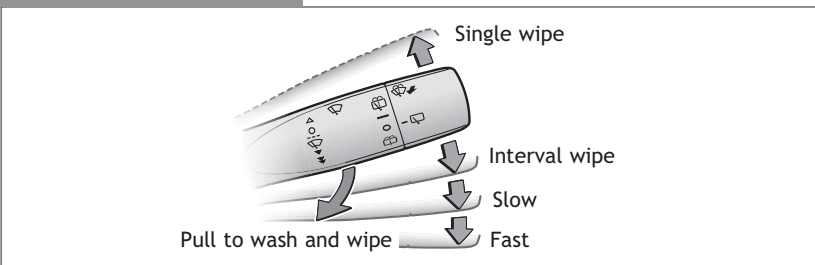


Rear

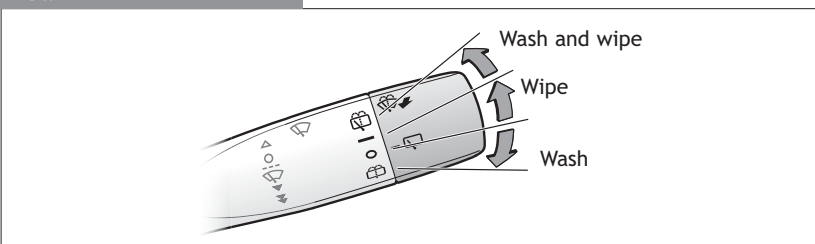

Windows

Driver side

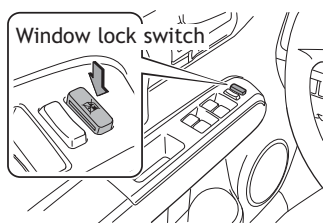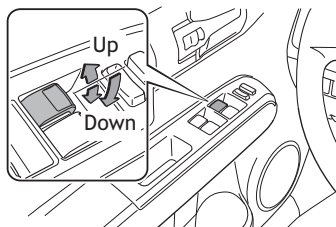


Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Cruise control

System ON/OFF

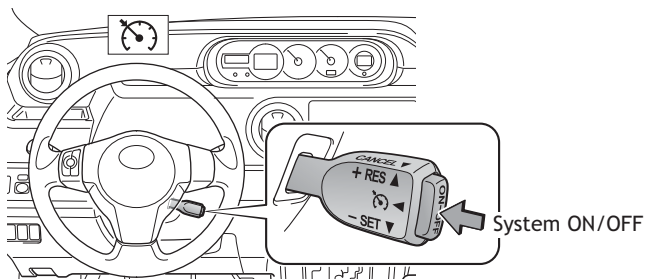


Functions

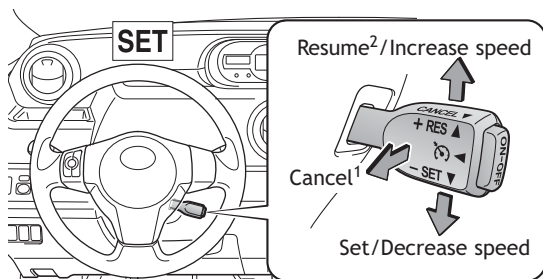

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.


Tilt steering wheel

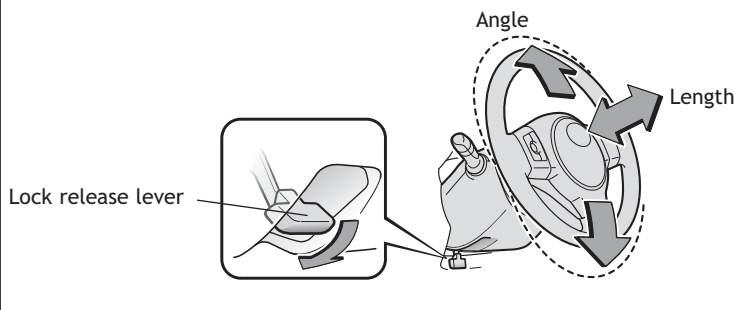

Hold wheel, push lever down, set angle and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Air Conditioning/Heating

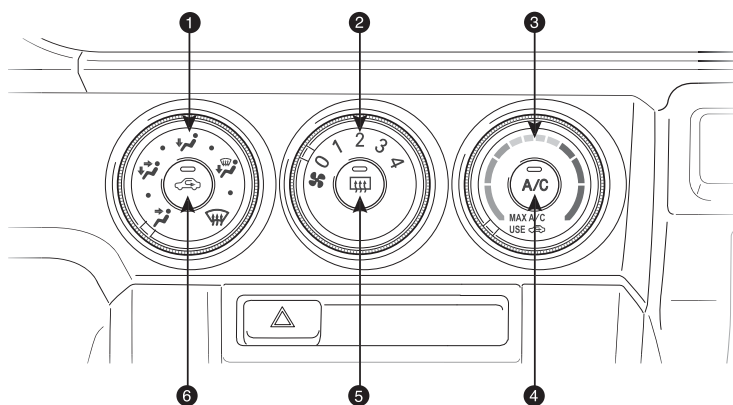

- ❶ Airflow vent
"🌀" and "🌬️" mode use fresh air ("🚗" indicator "OFF") to reduce window fogging.
- ❷ Fan speed
- ❸ Temperature selector
- ❹ Air Conditioning ON/OFF
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ❺ Rear window defogger
- ❻ Fresh or recirculated cabin air

Steering wheel switches

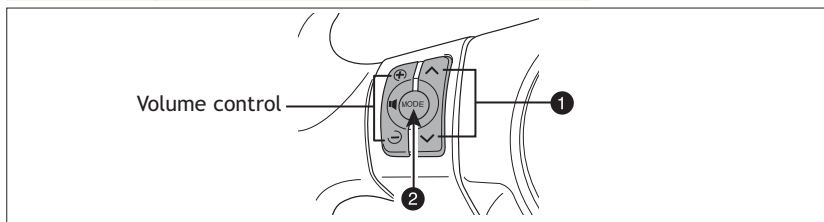

1 "▲ ▼"


Use to search within the selected audio medium (radio, CD, iPod, etc.).

2 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual* for more details.

USB/AUX audio jack

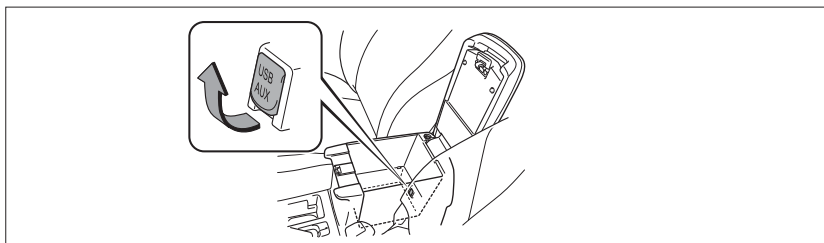


By inserting a mini plug into the AUX or USB/AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX or USB/AUX mode.


If you do not have a SCION genuine audio system, you will not be able to use the USB adapter or AUX jack.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual* for more details.

Bottle holders

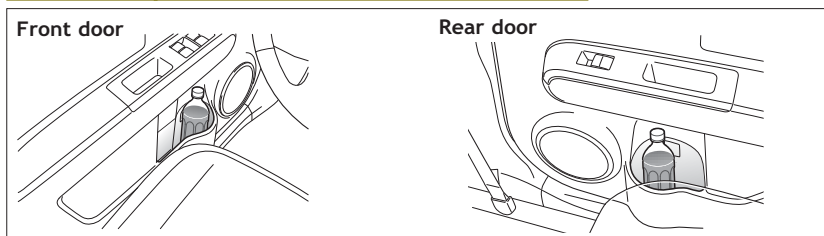

Multi-information display

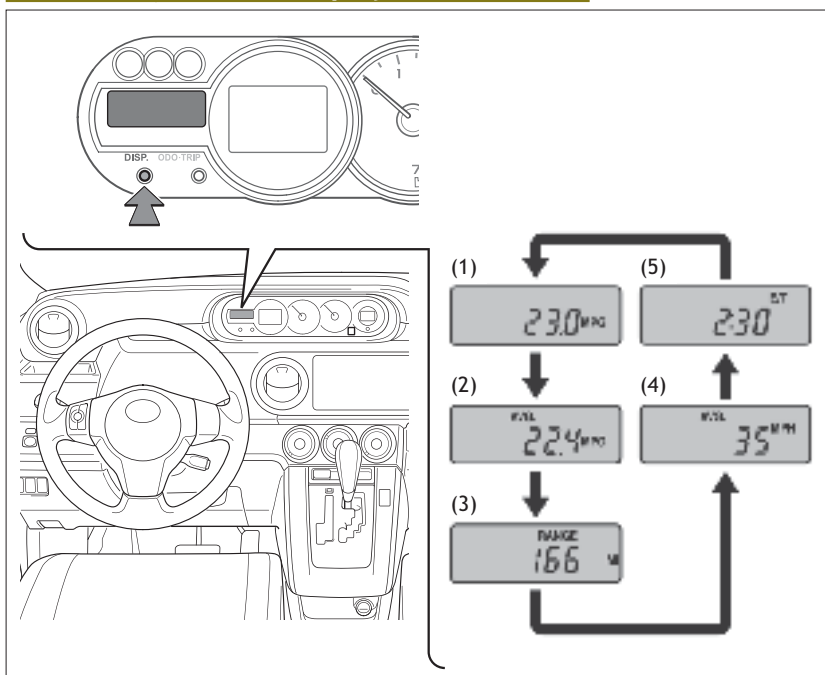


Push "DISP" to change information in the following succession:

- (1) Current gas mileage (MPG)
- (2) Average gas mileage (AVG/MPG)
- (3) Miles left on remaining fuel (RANGE/MI)
- (4) Average vehicle speed from engine start (AVG/MPH)
- (5) Running time from engine start (E/T)

Power outlet

Instrument panel

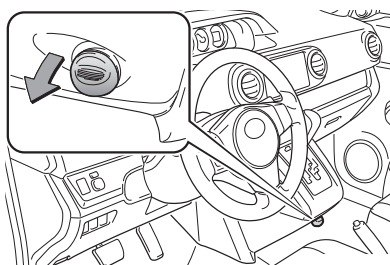

Designed for car accessories. Key must be in the "ACC" or "ON" position to use.


SAFETY AND EMERGENCY FEATURES

OVERVIEW


FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES

Door locks

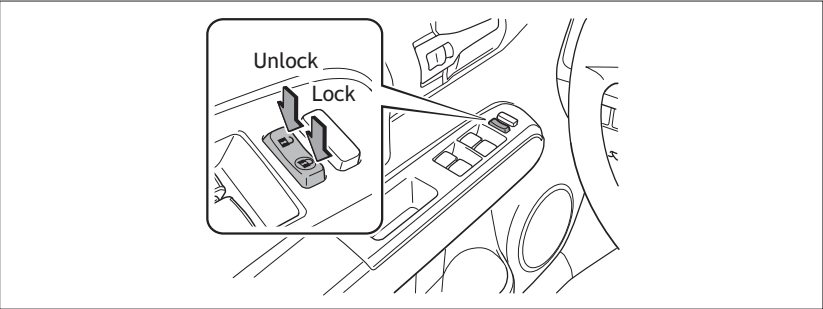


Doors-Child safety locks

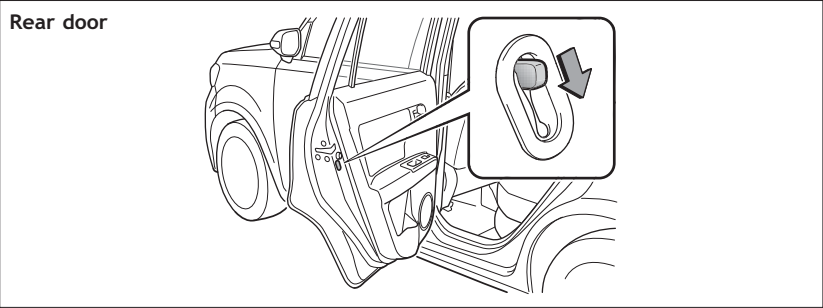


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

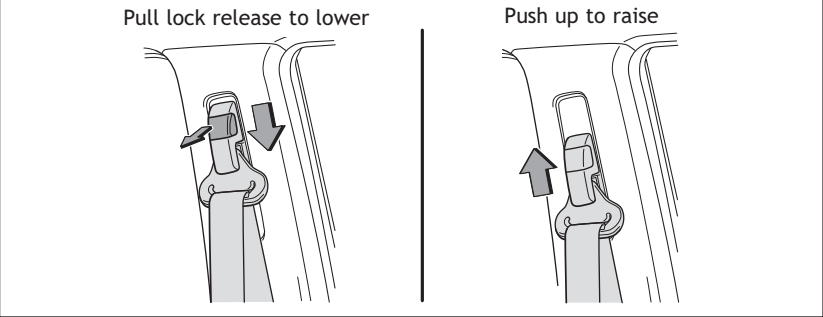

SAFETY AND EMERGENCY FEATURES


Seat belts

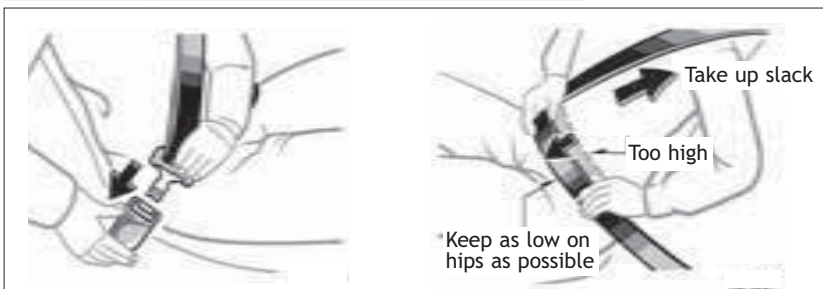

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

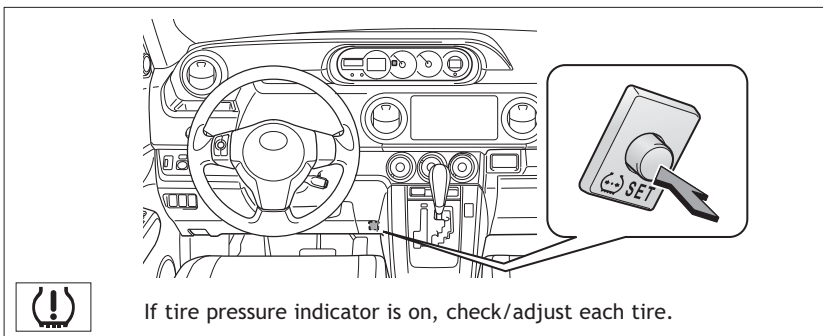

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "(TIRE ICON) SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools

Tool and spare tire location

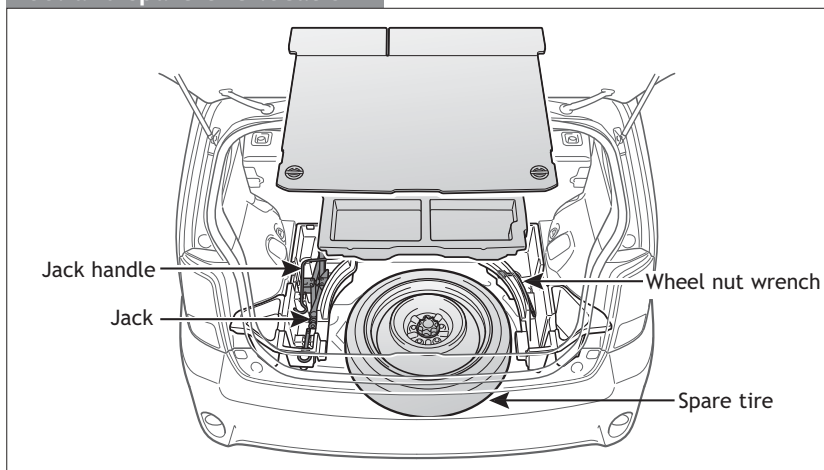

Removing the spare tire

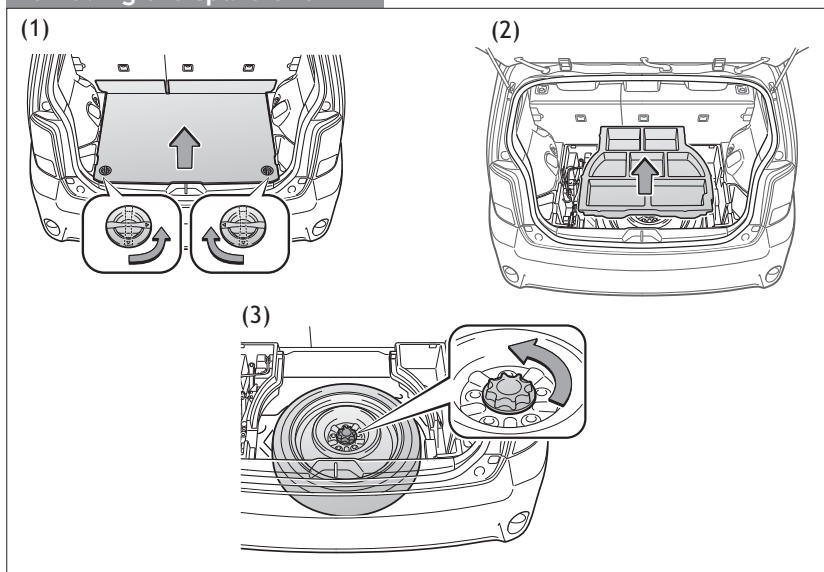

- (1) Remove the luggage mat.
- (2) Remove the center auxiliary boxes.
- (3) Loosen the center fastener that secures the spare tire.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

EMAIL

www.scion.com

→ Contact

-

CHAT

www.scion.com

→ Have a Question?

→ Contact

-

PHONE

1.866.70.SCION

-

MAIL

SCION

19001 S. Western Ave.

D102, P.O. Box 2742

Torrance, CA 90509-2742

USA

-

WEB

www.scion.com

-



Mixed Sources

Product group from well-managed
forests, controlled sources and
recycled wood or fiber

www.fsc.org Cert no. SGS-COC-005612
© 1996 Forest Stewardship Council



© 2010 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.

Printed in U.S.A. 03/10

10-TCS-03975

00505-QR611-XB