

Land Rover Range Rover Evoque 2018 fuse box diagram

Engine compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	30	Engine management system
2	5	Electrical power management (diesel only). Engine management system (petrol only)
3	80	Power steering
4	—	—
5	100	Engine cooling
6	15	Engine management system
7	—	—
8	15	Engine management system
9	10	Engine management system
10	—	—
11	10	Engine management system
12	10	Engine management system

13	—	—
14	10	Engine management system (diesel only)
		Engine cooling (petrol only)
15	40	Engine management system
16	100	Auxiliary heater
17	60	Passenger compartment fuse box
18	60	Passenger compartment fuse box
19	60	Loadspace fuse box
20	60	Loadspace fuse box
21	60	Electrical power management
22	30	Front windscreen wipers
23	40	Passenger compartment fuse box
24	40	Starter motor (diesel automatic and petrol only)
25	40	Anti-lock Braking System (ABS)
26	40	Anti-lock Braking System (ABS)

27	40	Passenger compartment fuse box
28	40	Heater blower motor
29	—	—
30	15	Headlamp washers
31	15	Horns
32	10	Air Conditioning (A/C)
33	5	Horn. Heated front screen. Fuel system
34	40	Left-side heated windscreen
35	40	Right-side heated windscreen
36	5	Engine management system. A/C
37	25	Fuel system
38	20	LED headlights
39	20	LED headlights
40	5	Right-side headlight bend lighting
41	5	Left-side headlight bend lighting

42	5	Headlight levelling
43	—	—
44	10	Heated steering wheel
45	5	Steering wheel

Passenger compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	5	Smart key receiver. Alarm sensor. Tire Pressure Monitoring System (TPMS)
2	—	—
3	10	Front fog lamps
4	—	—
5	5	Anti-lock Braking System (ABS)
6	5	Adaptive dynamics. Electric differential
7	—	—
8	25	Passenger door module
9	—	—

10	5	Heated washer jets
11	10	Reverse light trailer
12	5	Reverse lights
13	—	—
14	5	Brake pedal switch
15	30	Heated rear screen
16	5	Power steering
17	5	Passive entry
18	5	Engine cooling
19	5	Engine management system
20	5	Adaptive Cruise Control
21	5	Center console switches. Outboard dashboard switches
22	5	Automatic transmission
23	—	—
24	—	—

25	—	—
26	—	—
27	10	Trailer fog lights
28	—	—
29	—	—
30	—	—
31	5	Rain sensor. Lamp switch. Electrical power management. Humidity sensor
32	25	Driver door module
33	—	—
34	10	Fuel flap
35	—	—
36	5	Battery back-up sounder
37	20	Keyless entry
38	15	Windshield washer
39	25	Left-side rear door module

40	5	Driver door window switch
41	5	Gateway module
42	30	Driver's seat
43	15	Rear screen washer
44	25	Right-side rear door module
45	30	Front passenger seat
46	—	—
47	20	Sunblind
48	15	Trailer connector power supply
49	—	—
50	—	—
51	5	Steering wheel switches
52	20	Cigar lighter
53	20	Cubby box accessory power socket
54	—	—

55	20	Rear console accessory power socket
56	10	Supplementary Restraint System (SRS)
57	10	Interior lamps
58	—	—
59	—	—
60	5	Occupancy sensor. Air bag status indicator lamp
61	5	Engine starting
62	—	—
63	20	Loadspace accessory power socket
64	—	—
65	—	—
66	5	Diagnostics
67	15	Trailer
68	—	—
69	15	Automatic transmissio

Loadspace fuse box – Convertible

Upper fuse box

Fuse number	Ampere rating [A]	Circuit protected
FA1	5	Dynamic Stability Control (DSC)
FA2	30	DSC
FA3	—	—
FA4	15	Convertible roof – lock
FA5	—	—
FA6	15	Convertible roof – front latch
FA7	10	Telematics
FA8	—	—
FA9	30	4 Wheel Drive (4WD) systems
FA10	—	—
FA11	25	Driver's heated/climate seat
FA12	5	Wade sensing
FA13	25	Front passenger heated/climate seat

FA14	—	—
FA15	25	Fuel system
Fa16	10	Blind spot monitor. Auto High Beam Assist (AHBA). Rear view camera
FA17	2	Road toll reader
FA18	5	Interior mirror. AHBA. Rear view camera
FA19	—	—
FA20	15	Electric seats
FA21	—	—
FA22	—	—
FA23	5	Adaptive cruise control
FA24	—	—
FA25	—	—
FA26	10	Gateway module
FA27	10	Instrument panel
FA28	10	Head-Up Display (HUD)

FA29	—	—
FA30	5	Convertible roof – side window drop

Lower fuse box

Fuse number	Ampere rating [A]	Circuit protected
FB1	15	Touch screen. Front integrated control panel
FB2	10	Audio amplifier
FB3	10	Entertainment systems
FB4	10	Navigation. Audio video input and output panel
FB5	15	Audio head unit
FB6	15	Audio video input and output panel
FB7	—	—
FB8	—	—
FB9	—	—
FB10	—	—
FB11	—	—

FB12	—	—
FB13	—	—
FB14	—	—
FB15	15	Heating and ventilation
FB16	20	Auxiliary heater

Loadspace fuse box

Upper fuse box

Fuse number	Ampere rating [A]	Circuit protected
FA1	30	4 Wheel Drive (4WD) systems
FA2	15	Rear wiper
FA3	5	4WD systems
FA4	10	Telematics
FA5	20	Driver's heated or climate seat
FA6	20	Front passenger heated or climate seat
FA7	—	—

FA8	5	Rear view mirror. Auto High Beam Assist (AHBA)
FA9	20	Left-side heated rear seat
FA10	20	Right-side heated rear seat
FA11	—	—
FA12	25	Powered tailgate

Lower fuse box

Fuse number	Ampere rating [A]	Circuit protected
FB1	—	—
FB2	5	Adaptive cruise contro
FB3	10	Instrument panel
FB4	5	Gateway module
FB5	30	Adaptive suspension
FB6	—	—
FB7	5	Auxiliary heater
FB8	15	Driver's and passenger seat switches

FB9	10	Head-Up Display (HUD)
FB10	10	Blind spot monitor
FB11	40	Audio amplifier
FB12	20	Audio amplifier

Underfloor fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	15	Touch screen. Front integrated control panel
2	10	Audio amplifier
3	10	Gesture tailgate
4	10	Navigation. Phone
5	15	Audio head unit
6	15	Audio video input and output panel
7	—	—
8	—	—
9	—	—

10	—	—
11	—	—
12	—	—
13	—	—
14	—	—
15	15	Front and rear integrated control panels – heating and ventilation
16	20	Auxiliary heater