






















Position of Parts in Engine Compartment <LHD 1KR-FE>

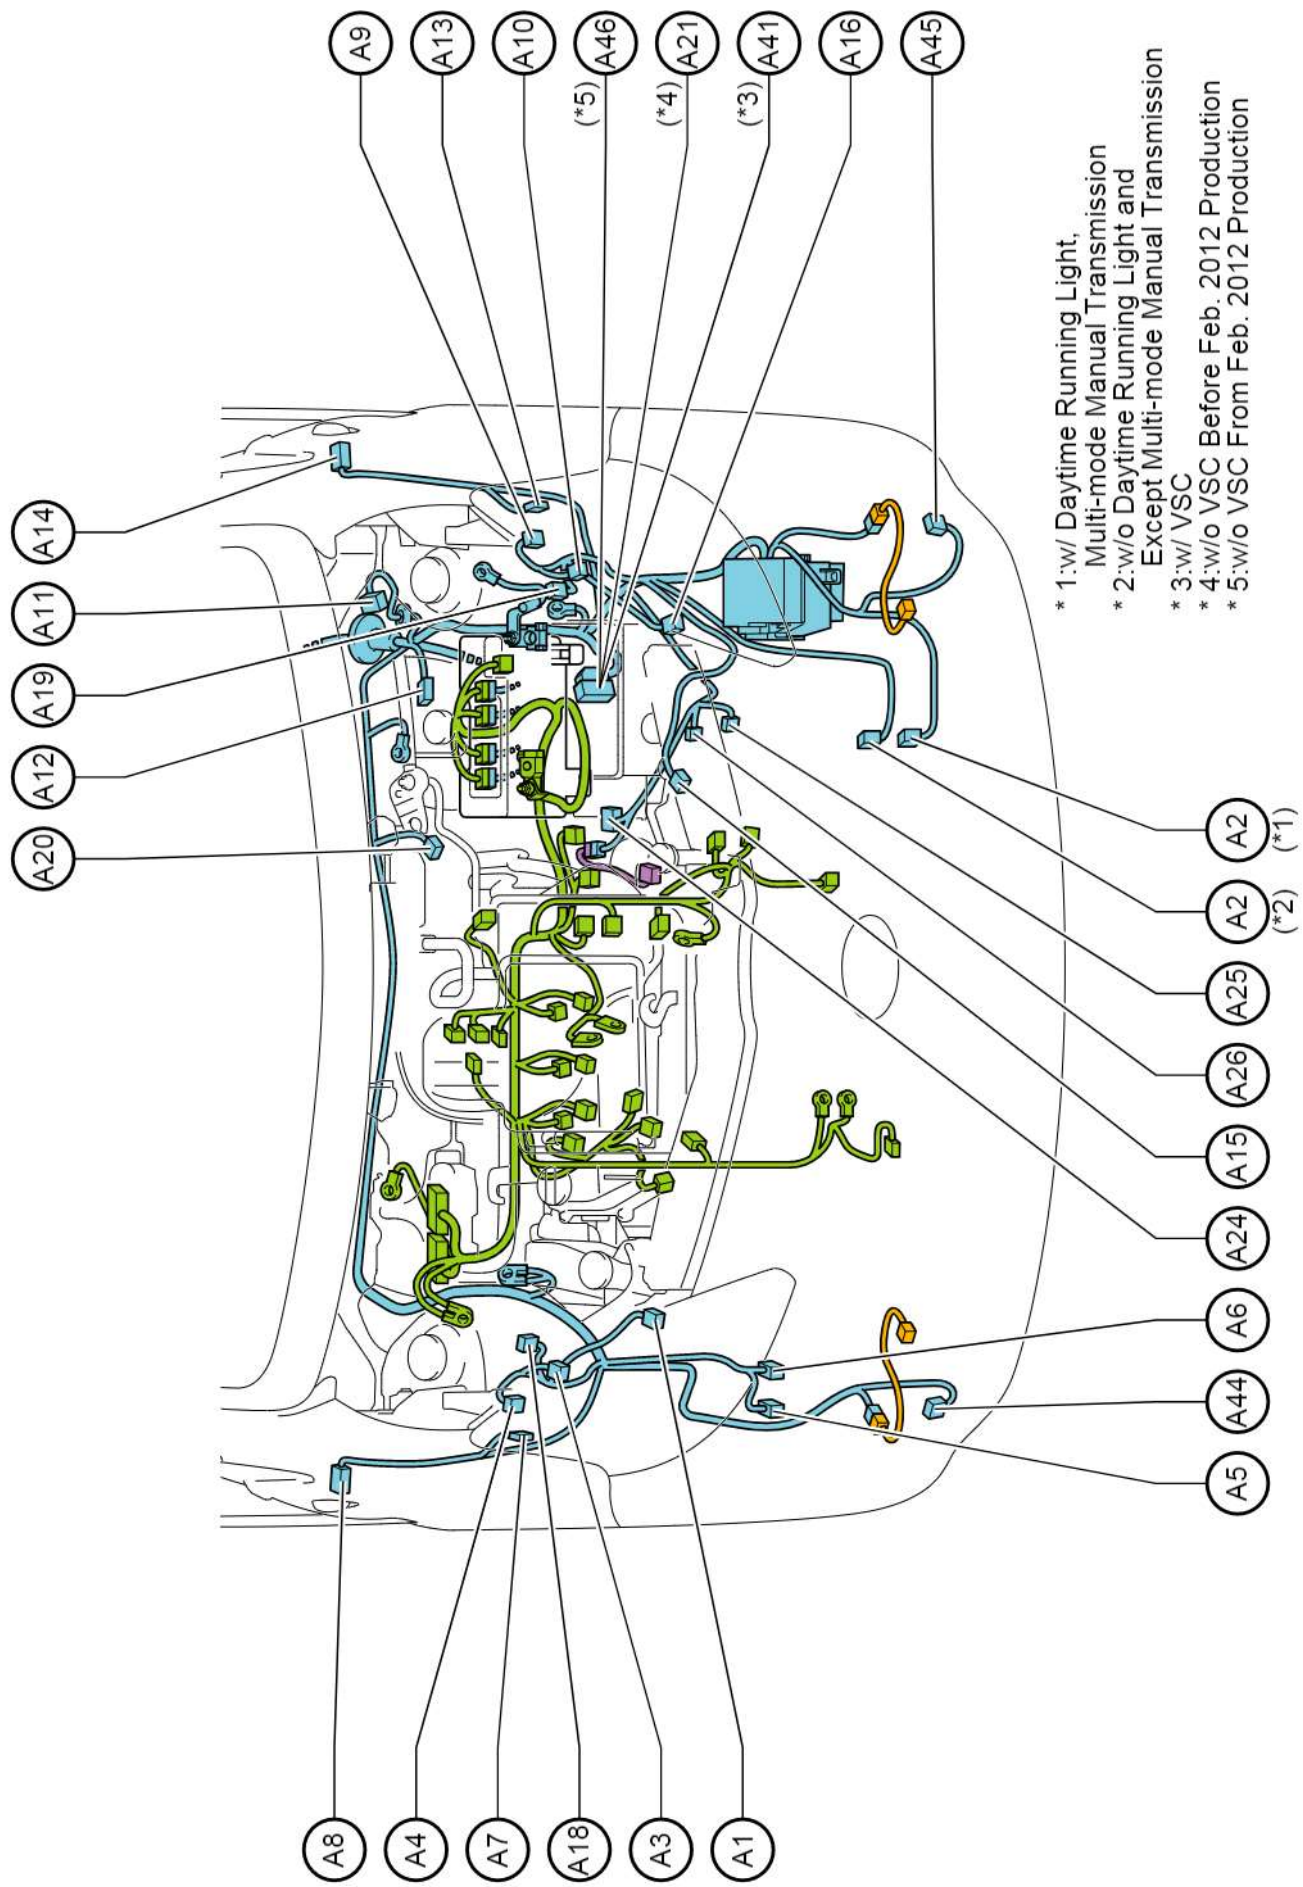

- * 1:w/ Daytime Running Light, Multi-mode Manual Transmission
- * 2:w/o Daytime Running Light and Except Multi-mode Manual Transmission
- * 3:w/ VSC
- * 4:w/o VSC Before Feb. 2012 Production
- * 5:w/o VSC From Feb. 2012 Production


A 1	Turn Signal Lamp (Front RH)
A 2	Horn
A 3	Clearance Lamp (Front RH)
A 4	Headlamp (RH)
A 5	Windshield Washer Motor
A 6	Rear Washer Motor
A 7	Speed Sensor (Front RH)
A 8	Turn Signal Lamp (Front Side RH)
A 9	Headlamp (LH)
A 10	Clearance Lamp (Front LH)
A 11	Windshield Wiper Motor
A 12	Brake Fluid Level Warning SW
A 13	Speed Sensor (Front LH)
A 14	Turn Signal Lamp (Front Side LH)
A 15	Cooling Fan Motor
A 16	Turn Signal Lamp (Front LH)
A 18	Headlamp Leveling Motor (RH)
A 19	Headlamp Leveling Motor (LH)
A 20	Pressure SW
A 21	Skid Control ECU with Actuator
A 24	Clutch Stroke Sensor
A 25	Select Stroke Sensor
A 26	Neutral Start SW
A 41	Skid Control ECU with Actuator
A 44	Front Combination Lamp (RH)
A 45	Front Combination Lamp (LH)
A 46	Skid Control ECU with Actuator

     Position of Parts in Engine Compartment <LHD 1KR-FE>

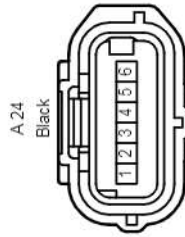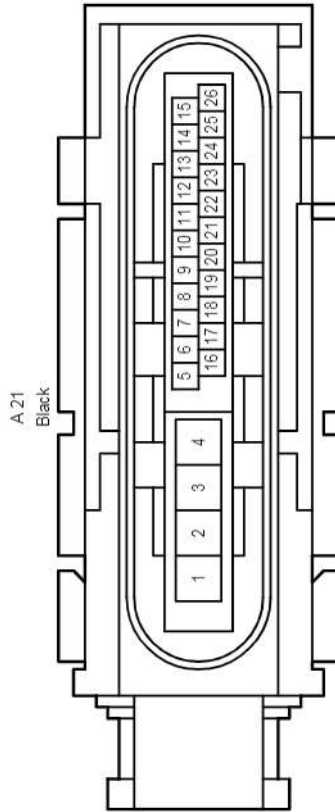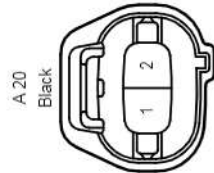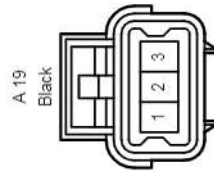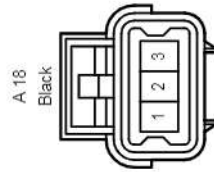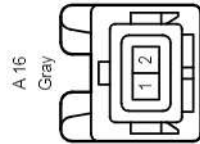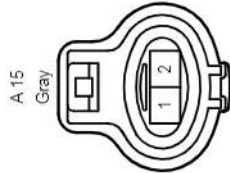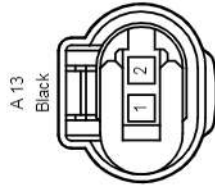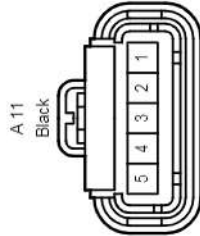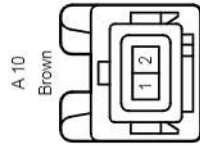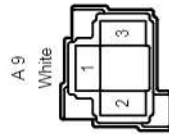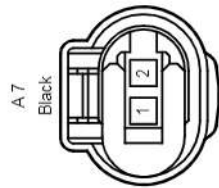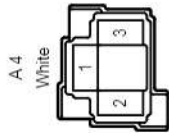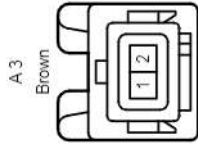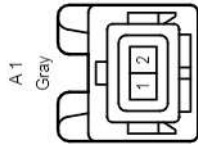


Position of Parts in Engine Compartment <LHD 1KR-FE>


A 41
Black

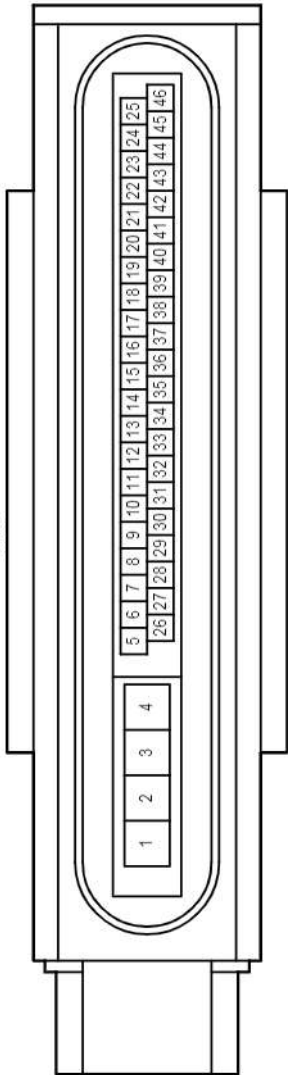


A 44
Black

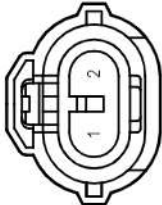


A 45
Black

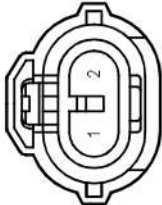

A 46
Black














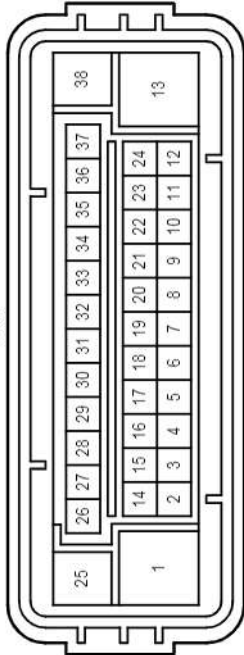


Position of Parts in Engine Compartment <LHD 1KR-FE>

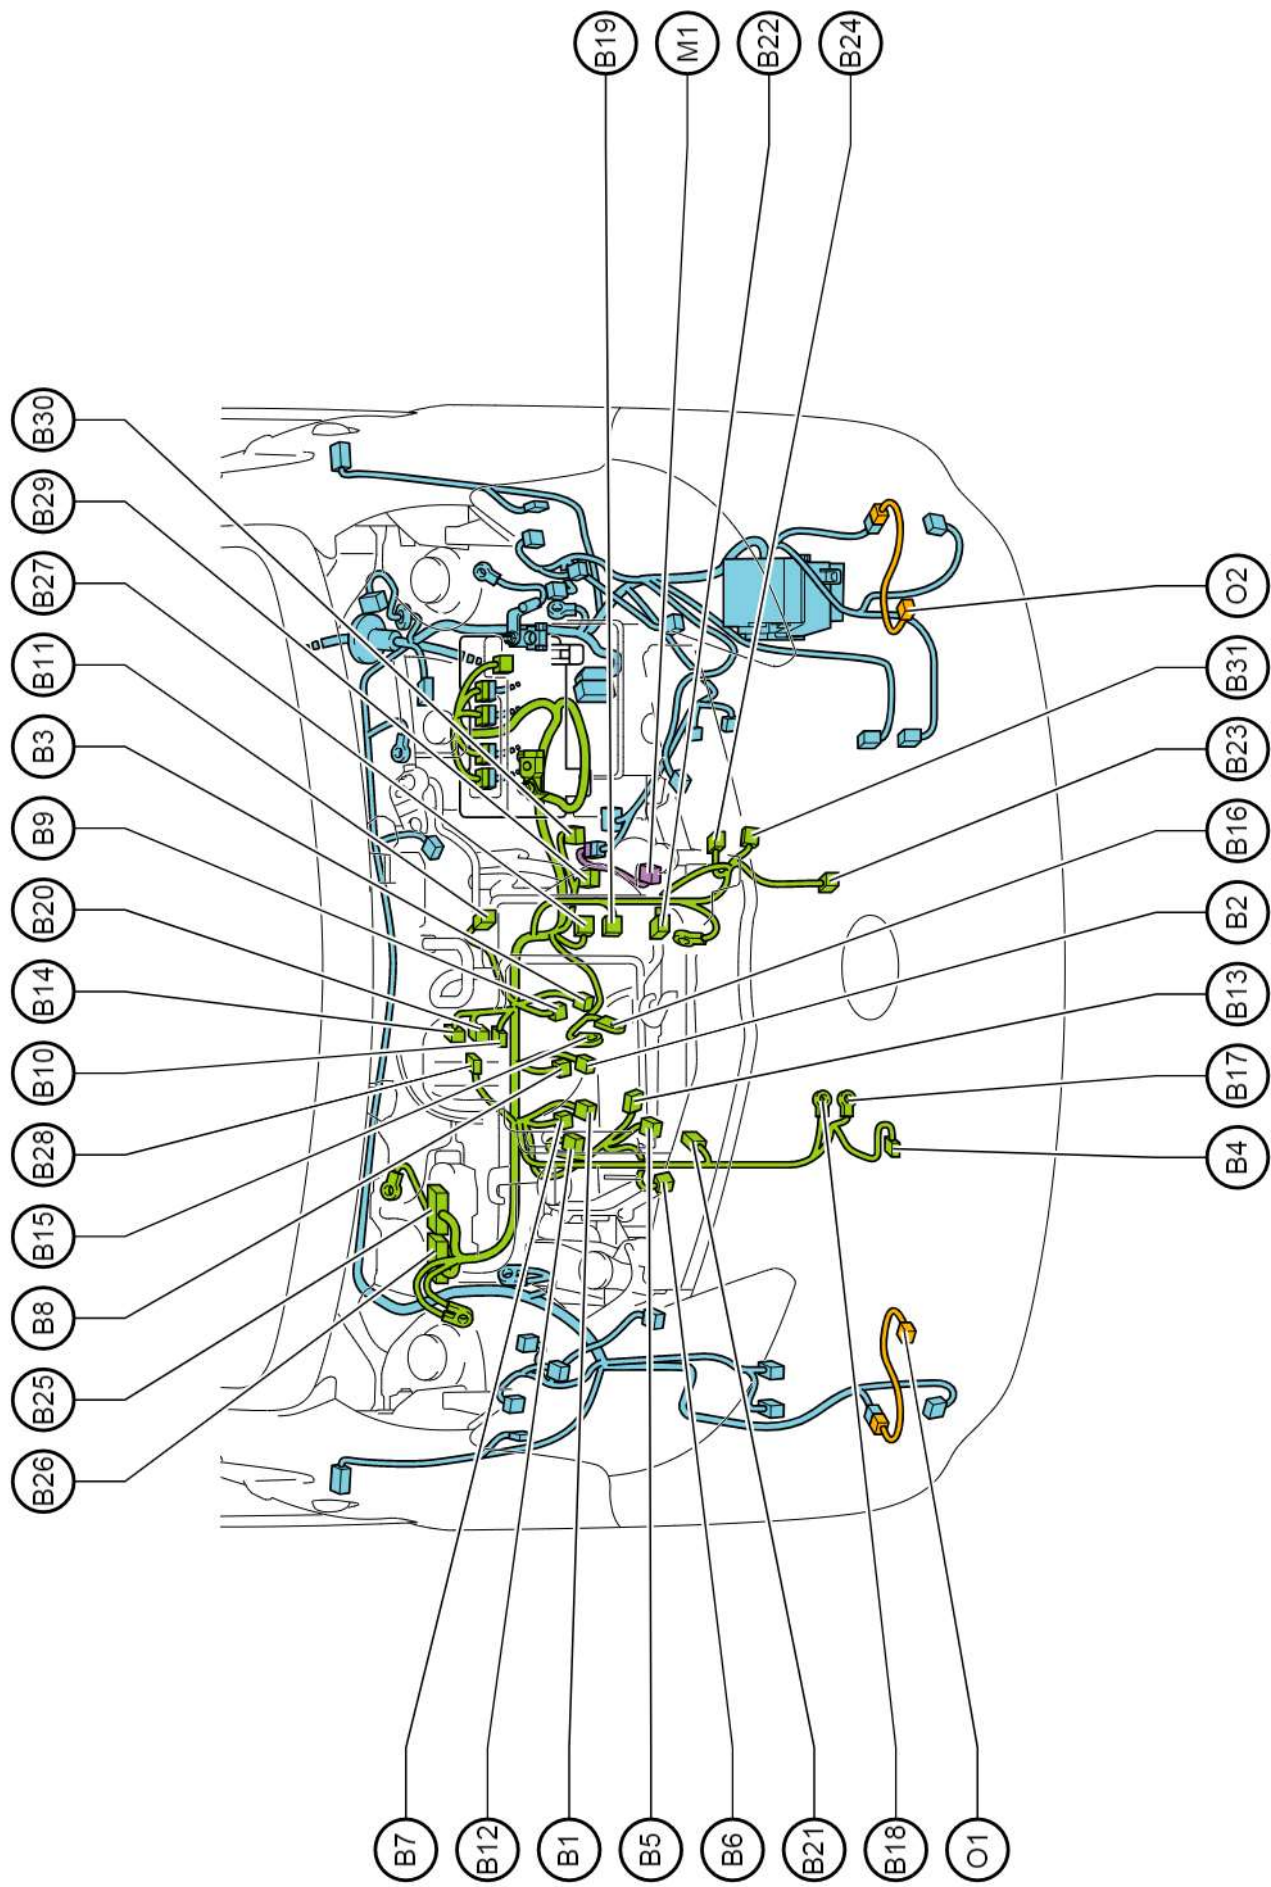



B	1	Ignition Coil (No.1)
B	2	Ignition Coil (No.2)
B	3	Ignition Coil (No.3)
B	4	A/C Compressor
B	5	Engine Oil Pressure SW
B	6	Crankshaft Position Sensor
B	7	Fuel Injector (No.1)
B	8	Fuel Injector (No.2)
B	9	Fuel Injector (No.3)
B	10	Throttle Body Assembly
B	11	VSV (Purge)
B	12	Camshaft Timing Oil Control Valve
B	13	Knock Control Sensor (Bank 1)
B	14	Vacuum Sensor Assembly
B	15	Starter
B	16	Starter
B	17	Alternator
B	18	Alternator
B	19	Camshaft Position Sensor
B	20	Throttle Body Assembly
B	21	Heated Oxygen Sensor (Bank 1 Sensor 1)
B	22	Water Temp. Sensor
B	23	Heated Oxygen Sensor (Bank 1 Sensor 2)
B	24	Back-Up Lamp SW
B	25	Engine ECU
B	26	Engine ECU
B	27	Clutch Actuator
B	28	Throttle Body Assembly
B	29	Select Actuator
B	30	Shift Actuator
B	31	Transmission Revolution Sensor
M	1	Shift Stroke Sensor
O	1	Daytime Running Lamp Assembly RH
O	2	Daytime Running Lamp Assembly LH

  
Position of Parts in Engine Compartment <LHD 1KR-FE>

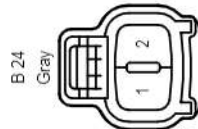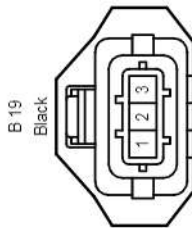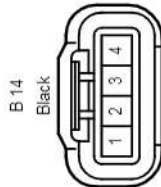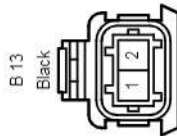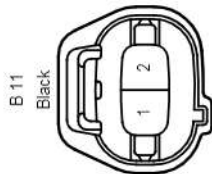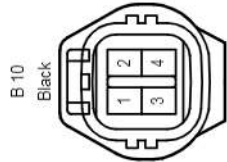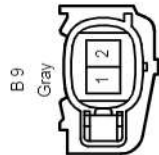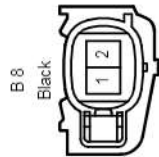
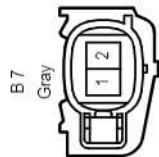
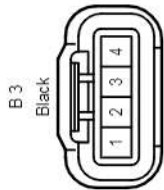
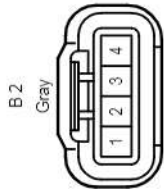
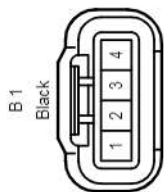


B 25
Black

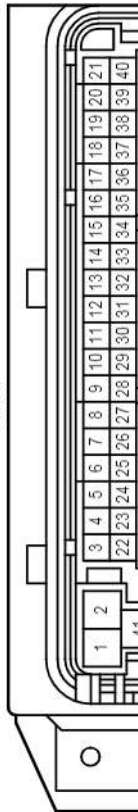


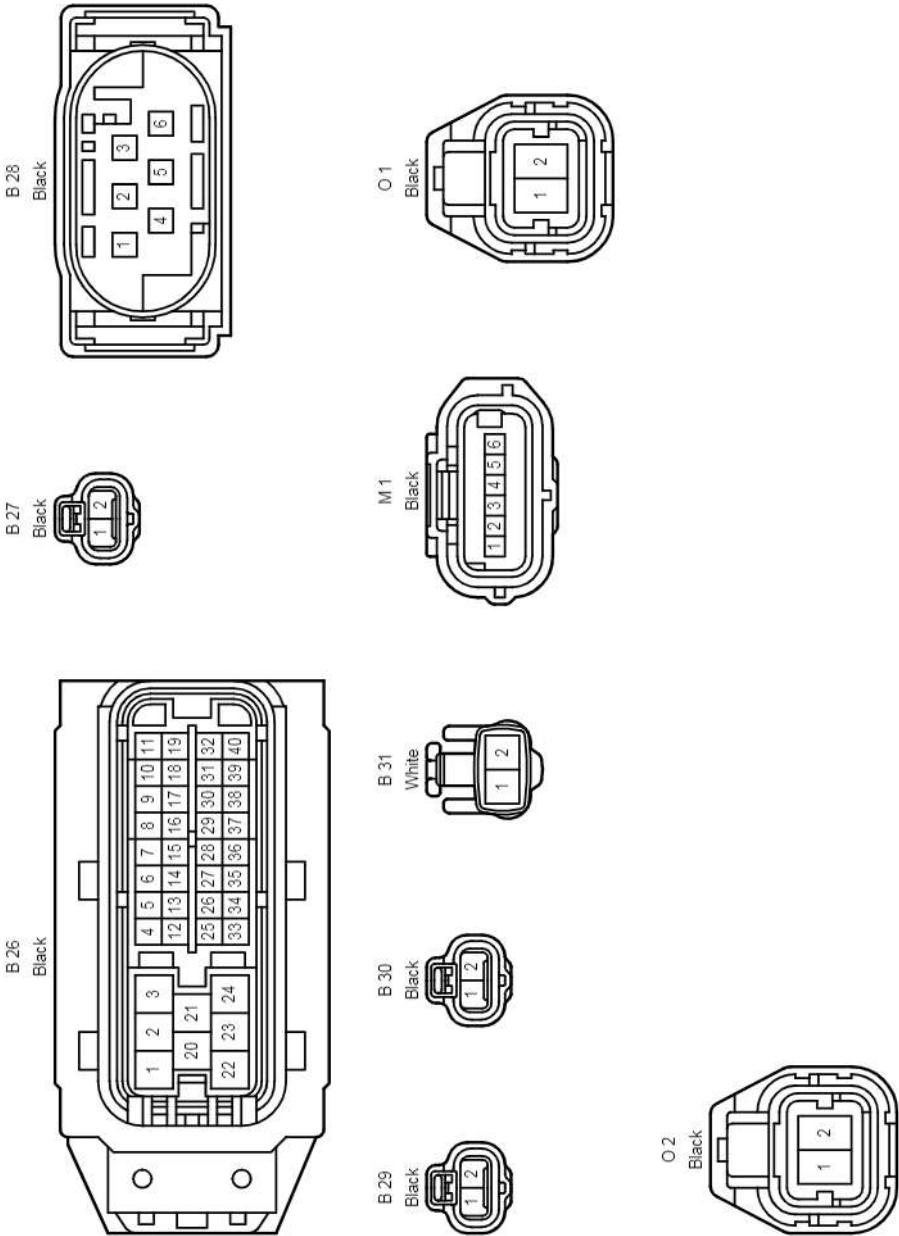

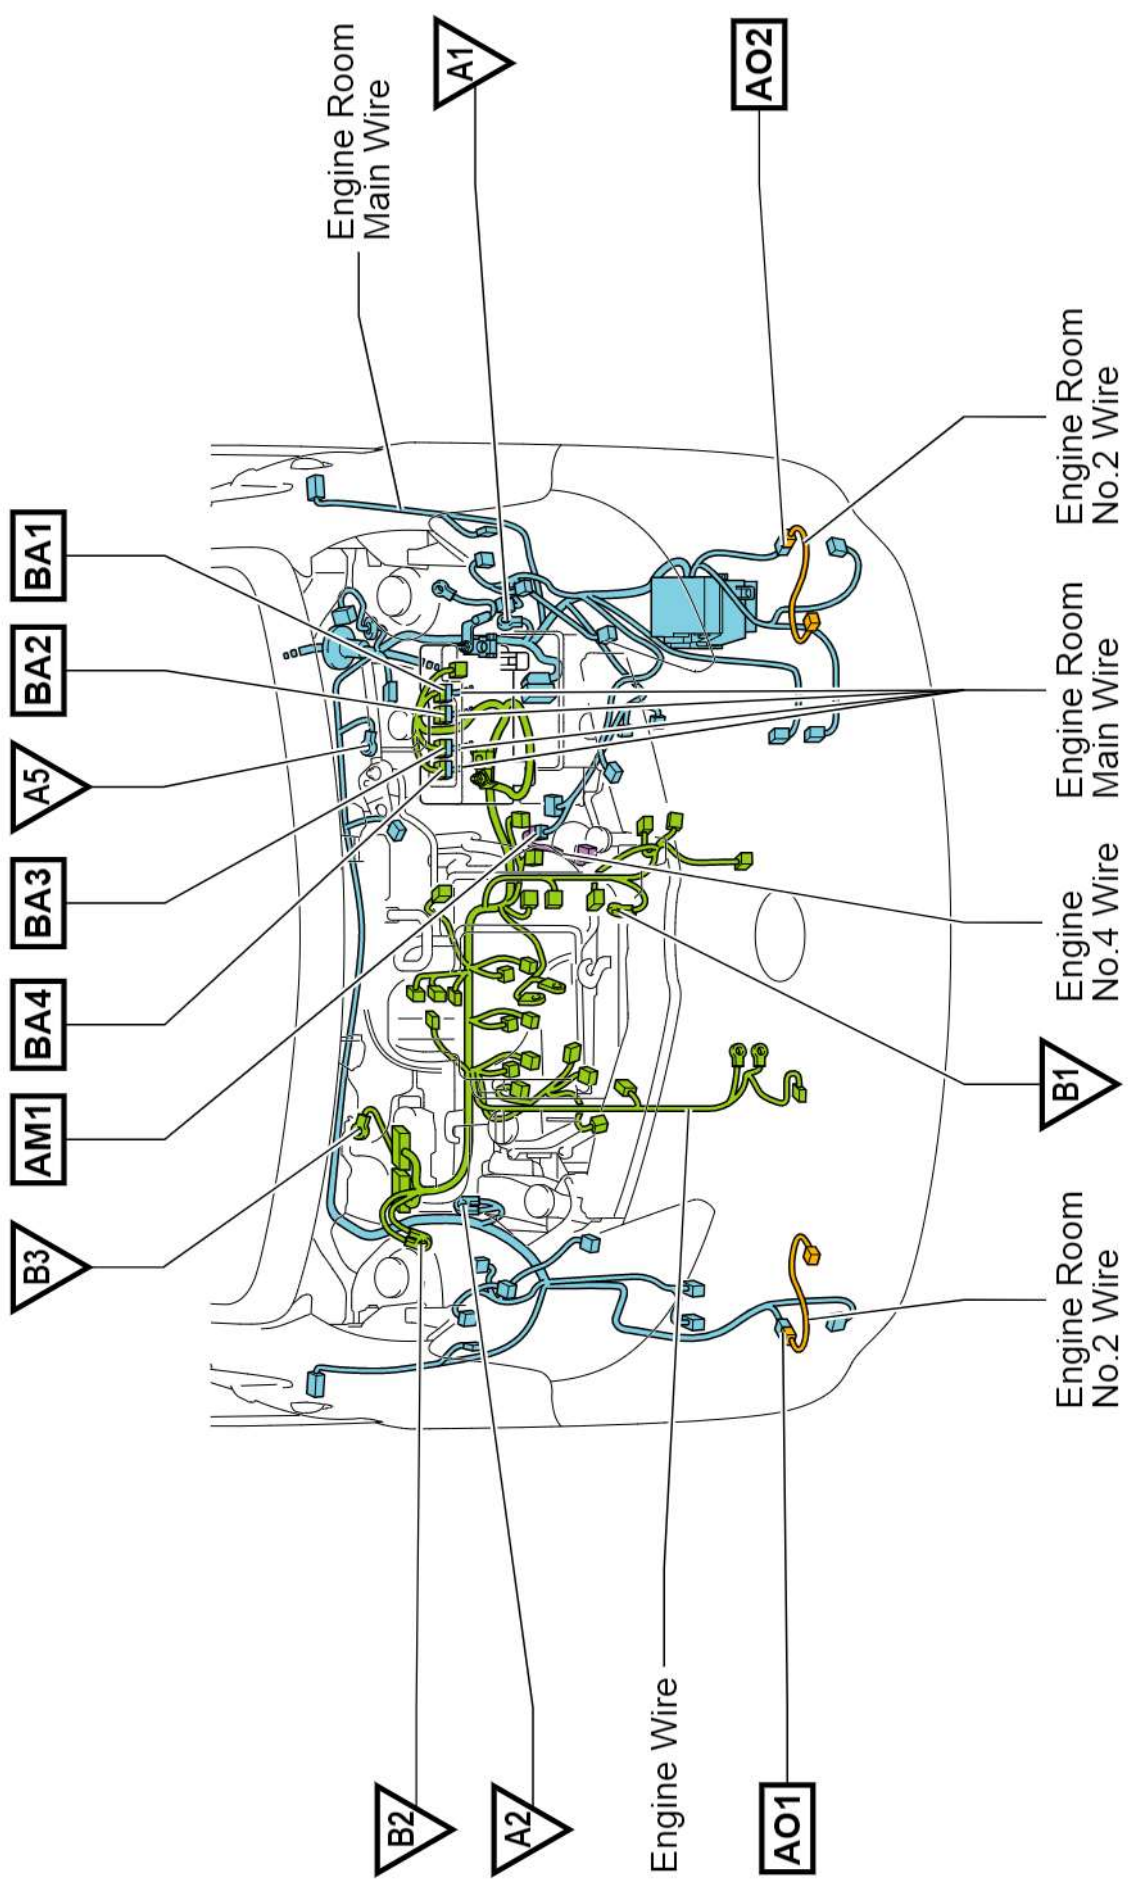

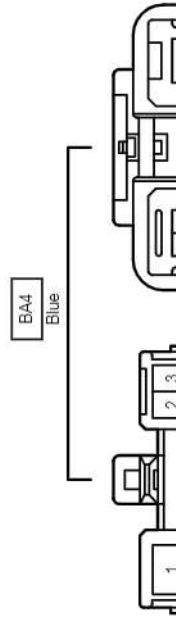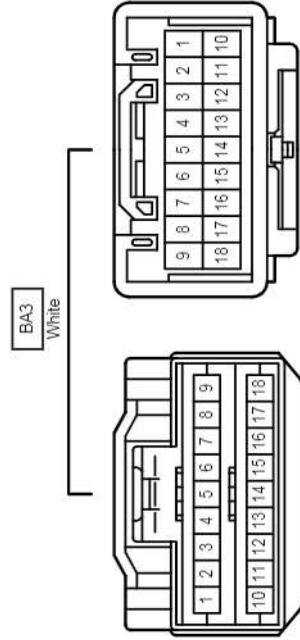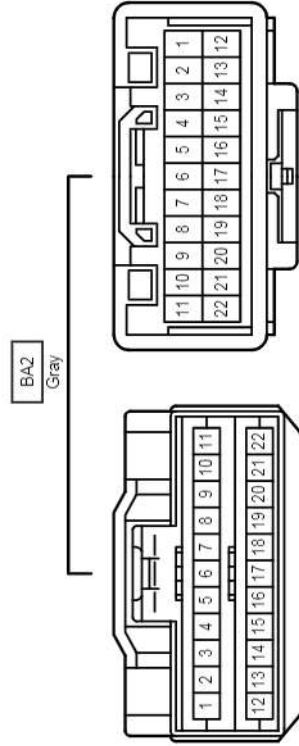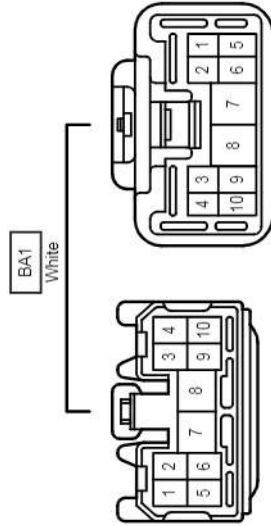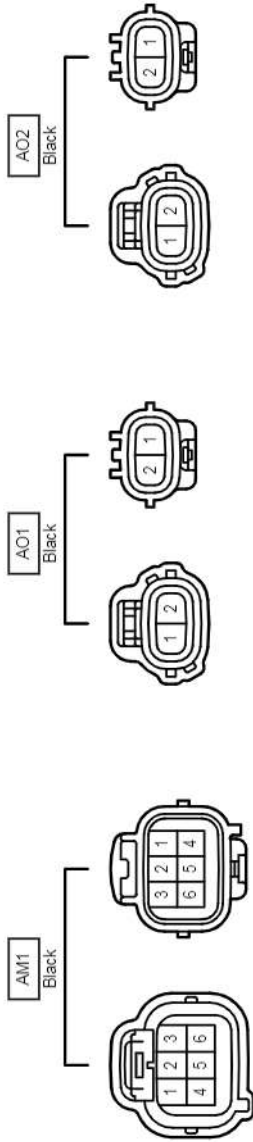





















Position of Parts in Engine Compartment <RHD 1KR-FE>

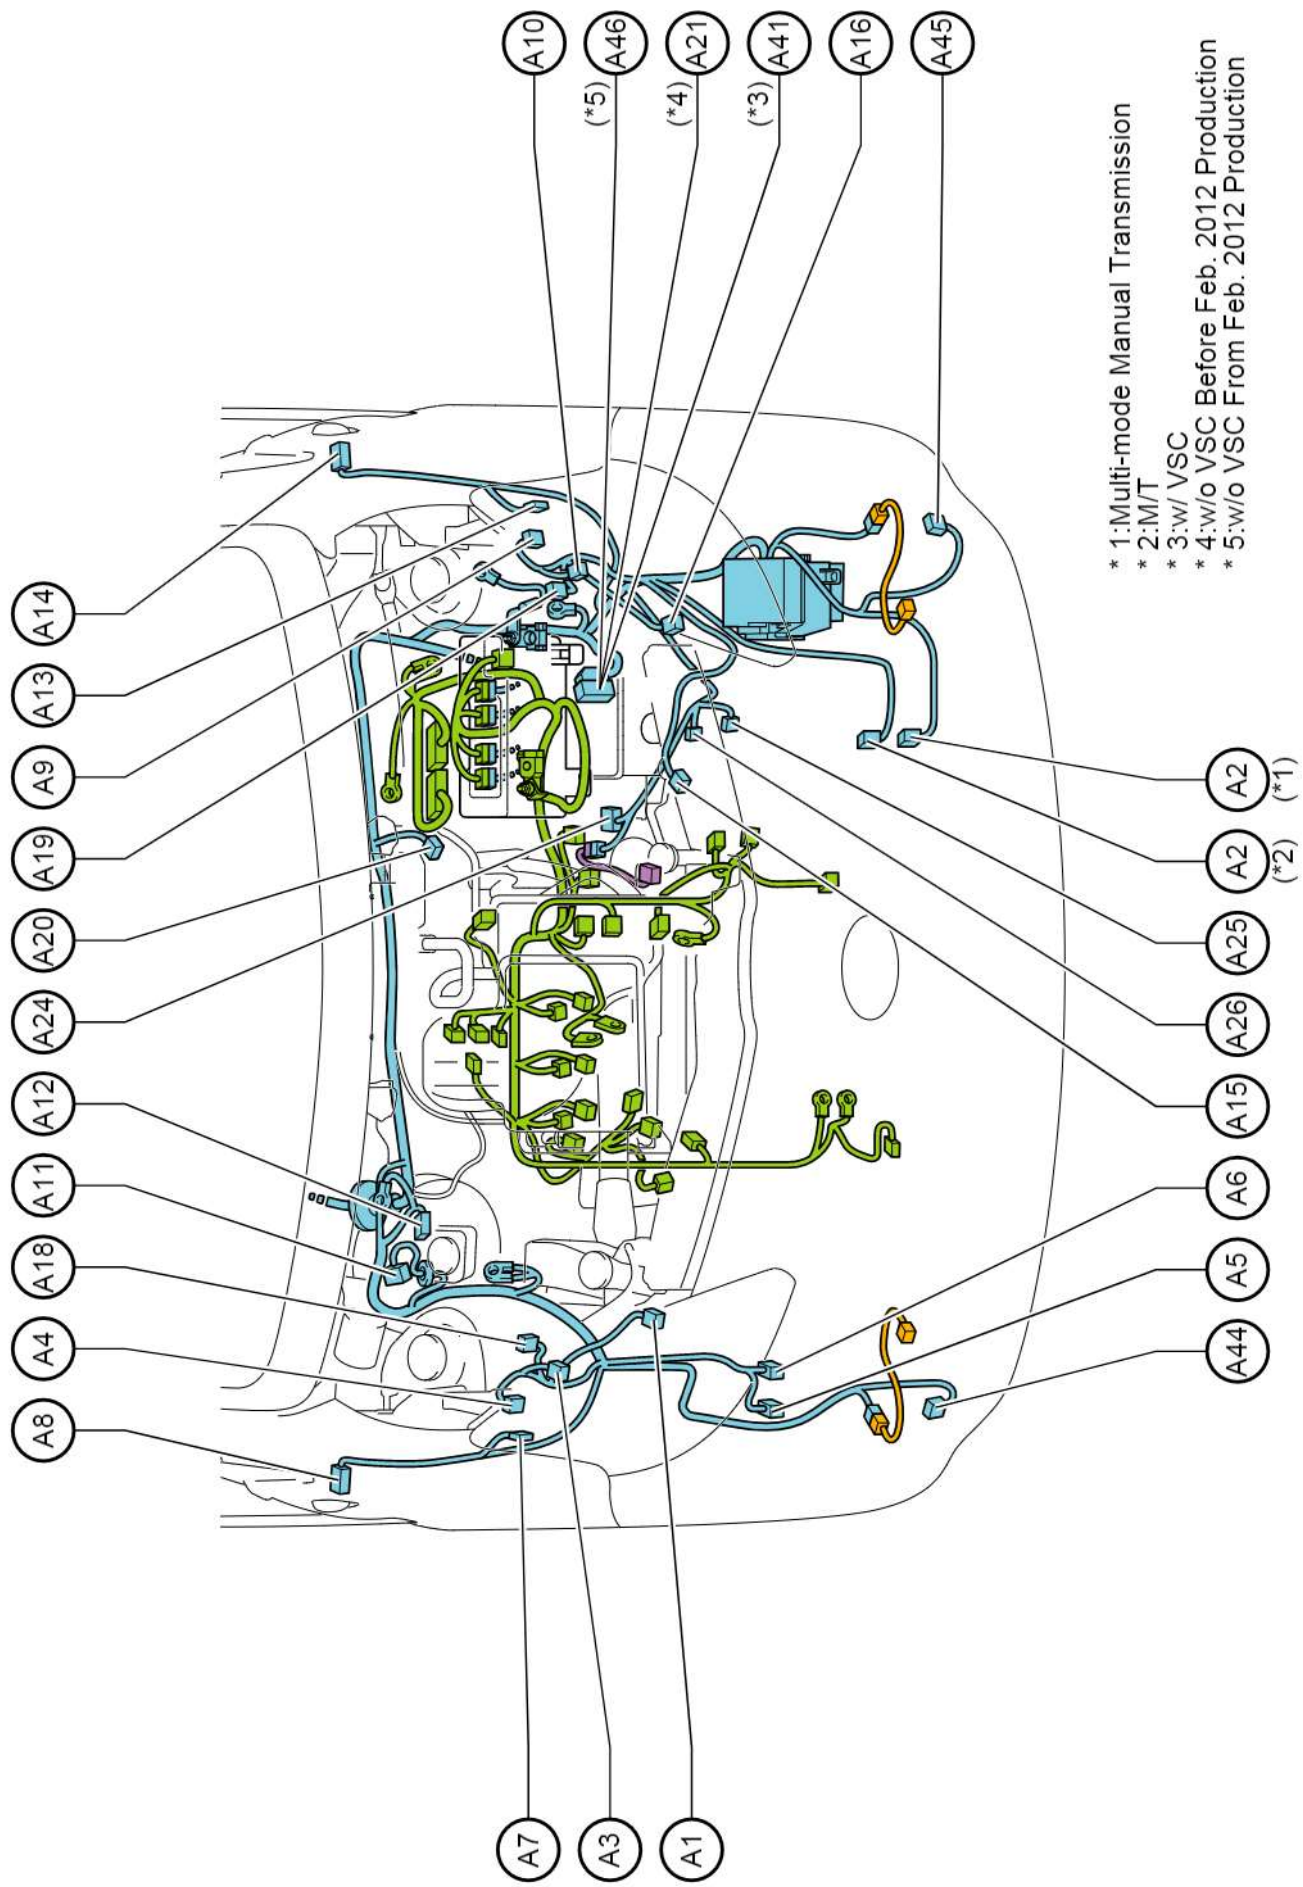

- * 1: Multi-mode Manual Transmission
- * 2: M/T
- * 3: w/ VSC
- * 4: w/o VSC Before Feb. 2012 Production
- * 5: w/o VSC From Feb. 2012 Production


A 1	Turn Signal Lamp (Front RH)
A 2	Horn
A 3	Clearance Lamp (Front RH)
A 4	Headlamp (RH)
A 5	Windshield Washer Motor
A 6	Rear Washer Motor
A 7	Speed Sensor (Front RH)
A 8	Turn Signal Lamp (Front Side RH)
A 9	Headlamp (LH)
A 10	Clearance Lamp (Front LH)
A 11	Windshield Wiper Motor
A 12	Brake Fluid Level Warning SW
A 13	Speed Sensor (Front LH)
A 14	Turn Signal Lamp (Front Side LH)
A 15	Cooling Fan Motor
A 16	Turn Signal Lamp (Front LH)
A 18	Headlamp Leveling Motor (RH)
A 19	Headlamp Leveling Motor (LH)
A 20	Pressure SW
A 21	Skid Control ECU with Actuator
A 24	Clutch Stroke Sensor
A 25	Select Stroke Sensor
A 26	Neutral Start SW
A 41	Skid Control ECU with Actuator
A 44	Front Combination Lamp (RH)
A 45	Front Combination Lamp (LH)
A 46	Skid Control ECU with Actuator

     Position of Parts in Engine Compartment <RHD 1KR-FE>

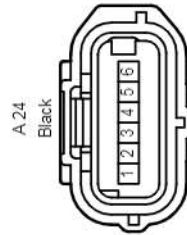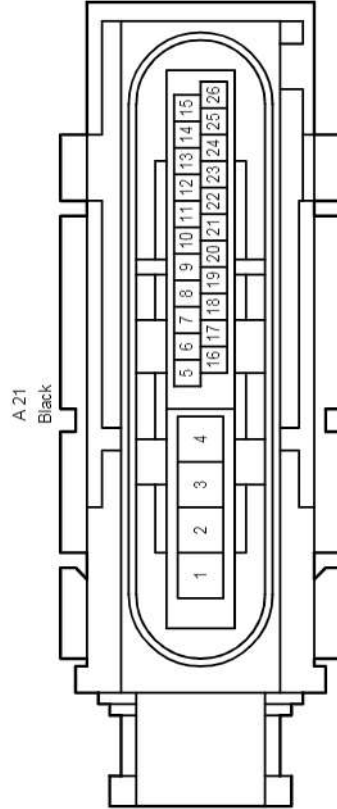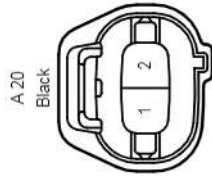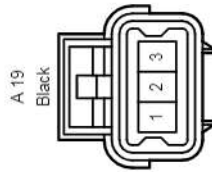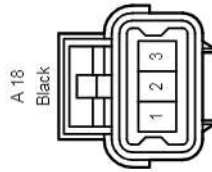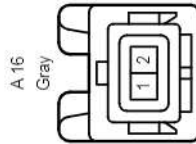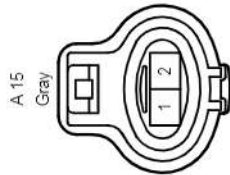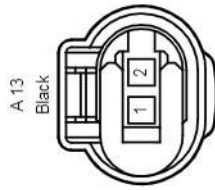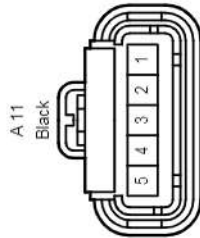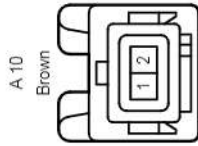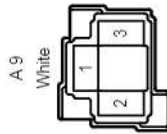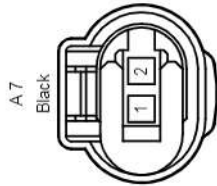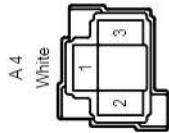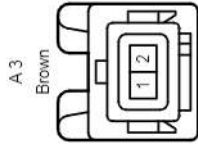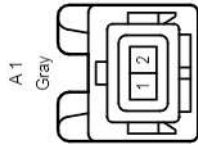


Position of Parts in Engine Compartment <RHD 1KR-FE>


A 41
Black

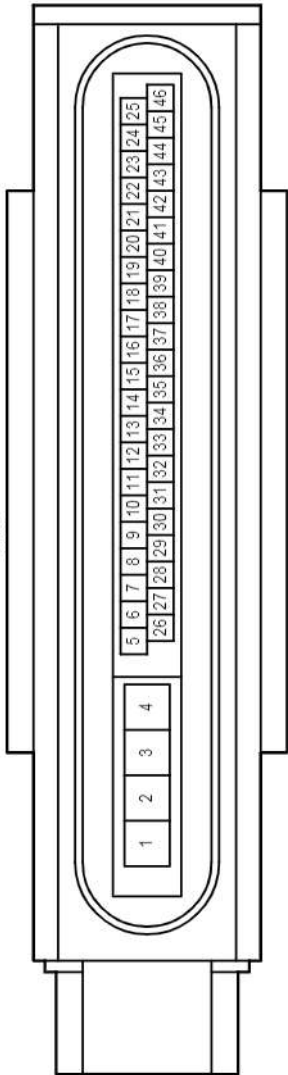


A 44
Black

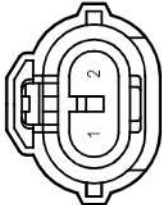


A 45
Black

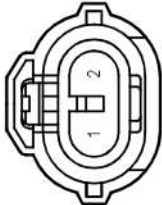

A 46
Black














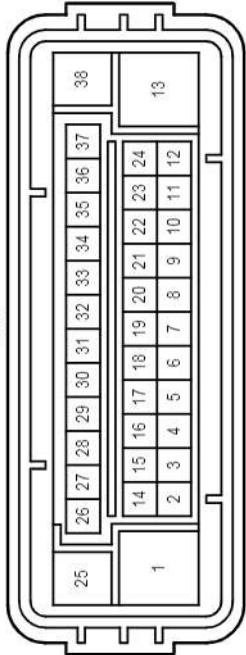


Position of Parts in Engine Compartment <RHD 1KR-FE>

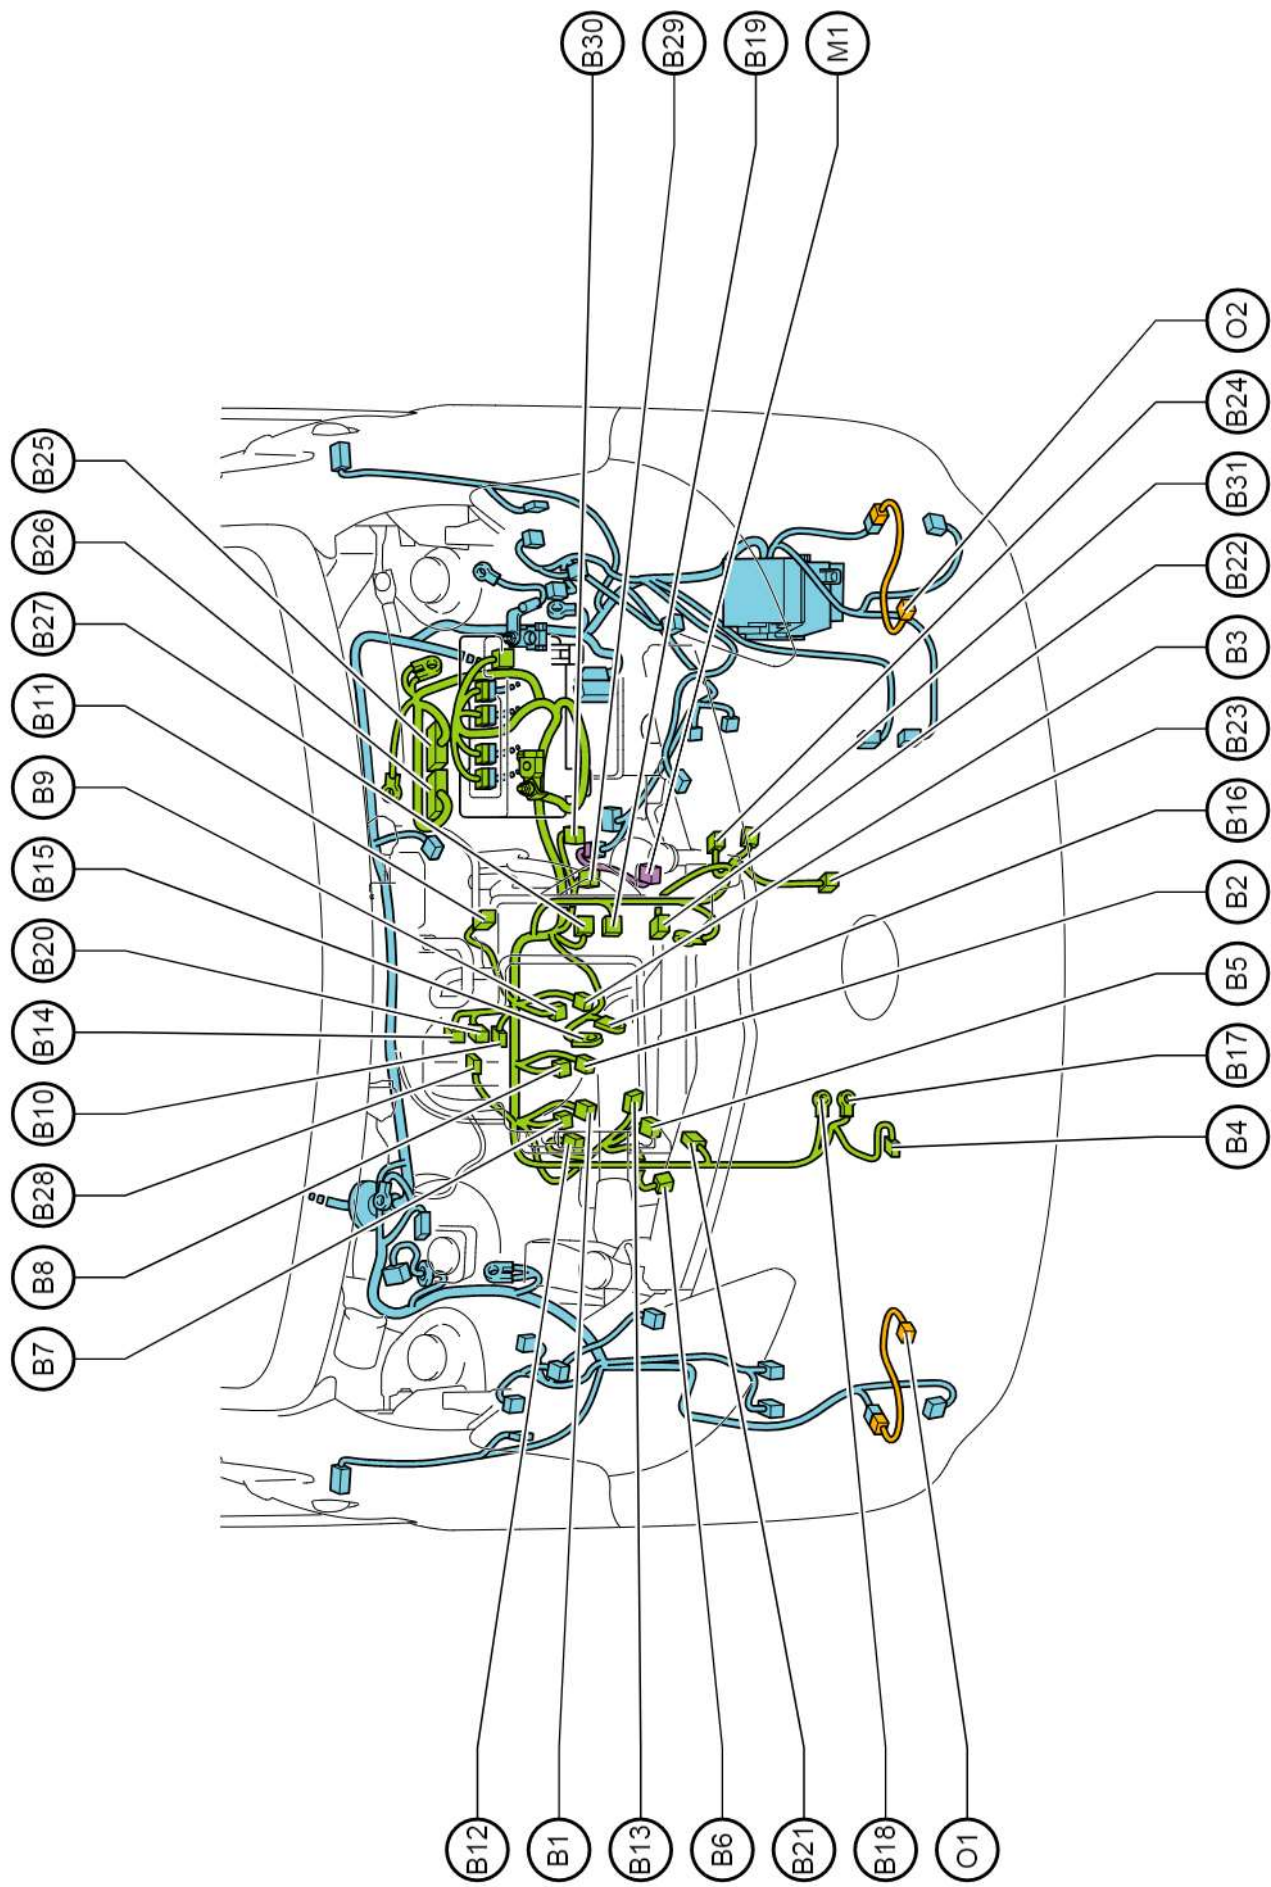



B	1	Ignition Coil (No.1)
B	2	Ignition Coil (No.2)
B	3	Ignition Coil (No.3)
B	4	A/C Compressor
B	5	Engine Oil Pressure SW
B	6	Crankshaft Position Sensor
B	7	Fuel Injector (No.1)
B	8	Fuel Injector (No.2)
B	9	Fuel Injector (No.3)
B	10	Throttle Body Assembly
B	11	VSV (Purge)
B	12	Camshaft Timing Oil Control Valve
B	13	Knock Control Sensor (Bank 1)
B	14	Vacuum Sensor Assembly
B	15	Starter
B	16	Starter
B	17	Alternator
B	18	Alternator
B	19	Camshaft Position Sensor
B	20	Throttle Body Assembly
B	21	Heated Oxygen Sensor (Bank 1 Sensor 1)
B	22	Water Temp. Sensor
B	23	Heated Oxygen Sensor (Bank 1 Sensor 2)
B	24	Back-Up Lamp SW
B	25	Engine ECU
B	26	Engine ECU
B	27	Clutch Actuator
B	28	Throttle Body Assembly
B	29	Select Actuator
B	30	Shift Actuator
B	31	Transmission Revolution Sensor
M	1	Shift Stroke Sensor
O	1	Daytime Running Lamp Assembly RH
O	2	Daytime Running Lamp Assembly LH

 
Position of Parts in Engine Compartment <RHD 1KR-FE>

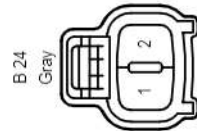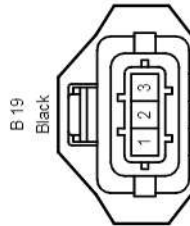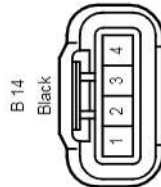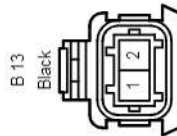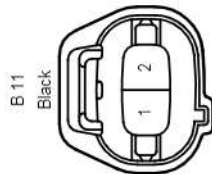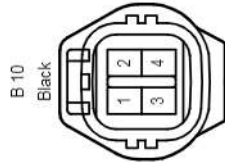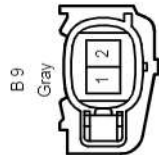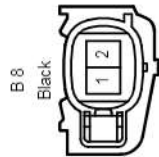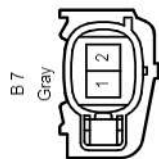
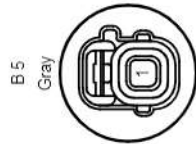
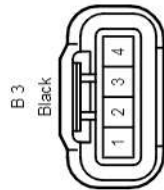
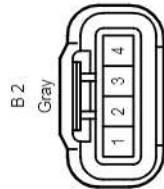
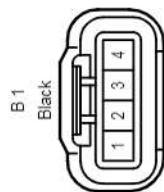


B 25
Black

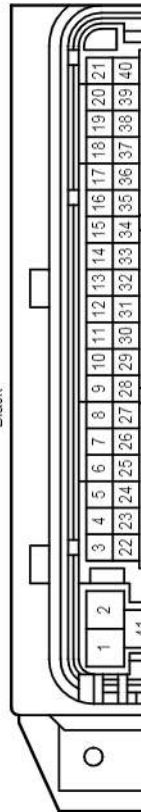


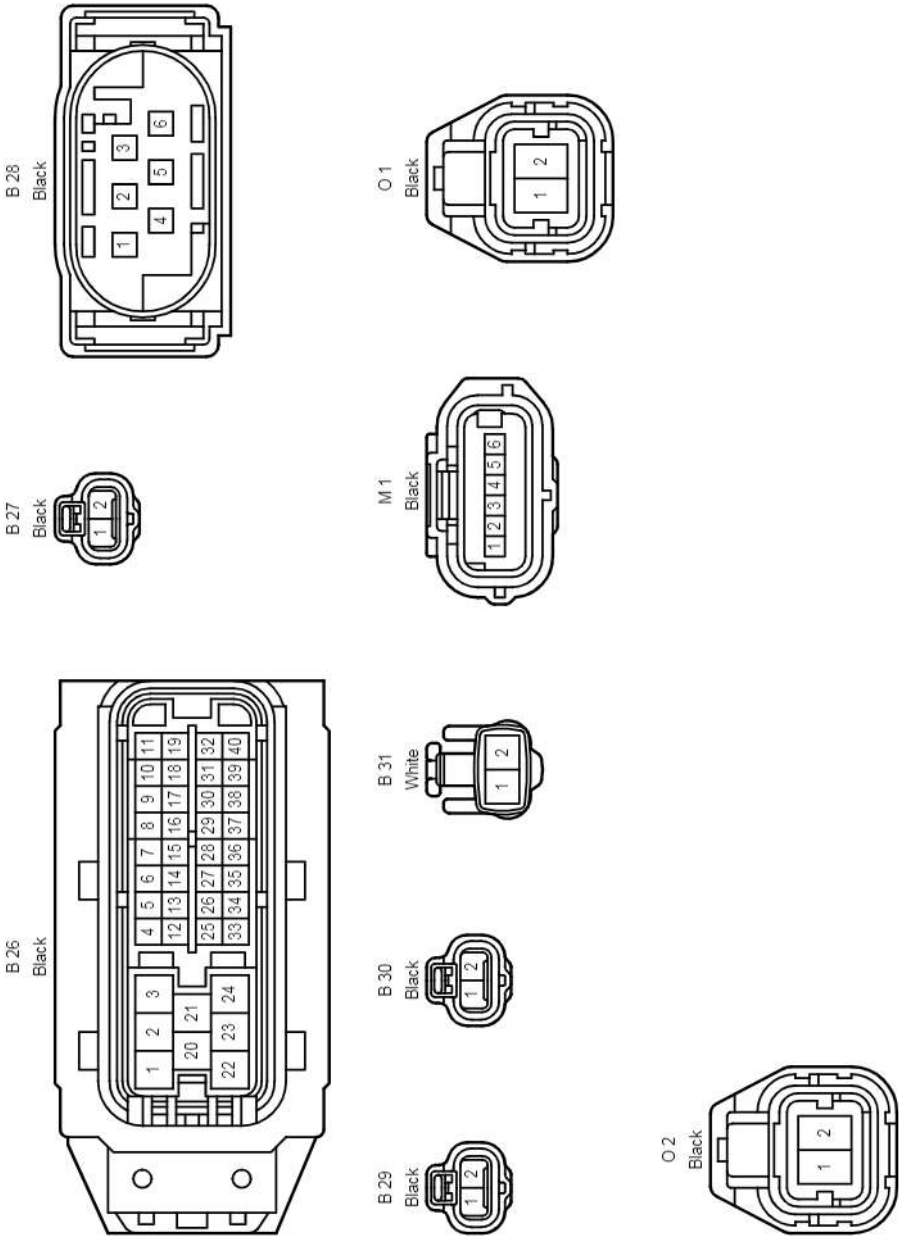

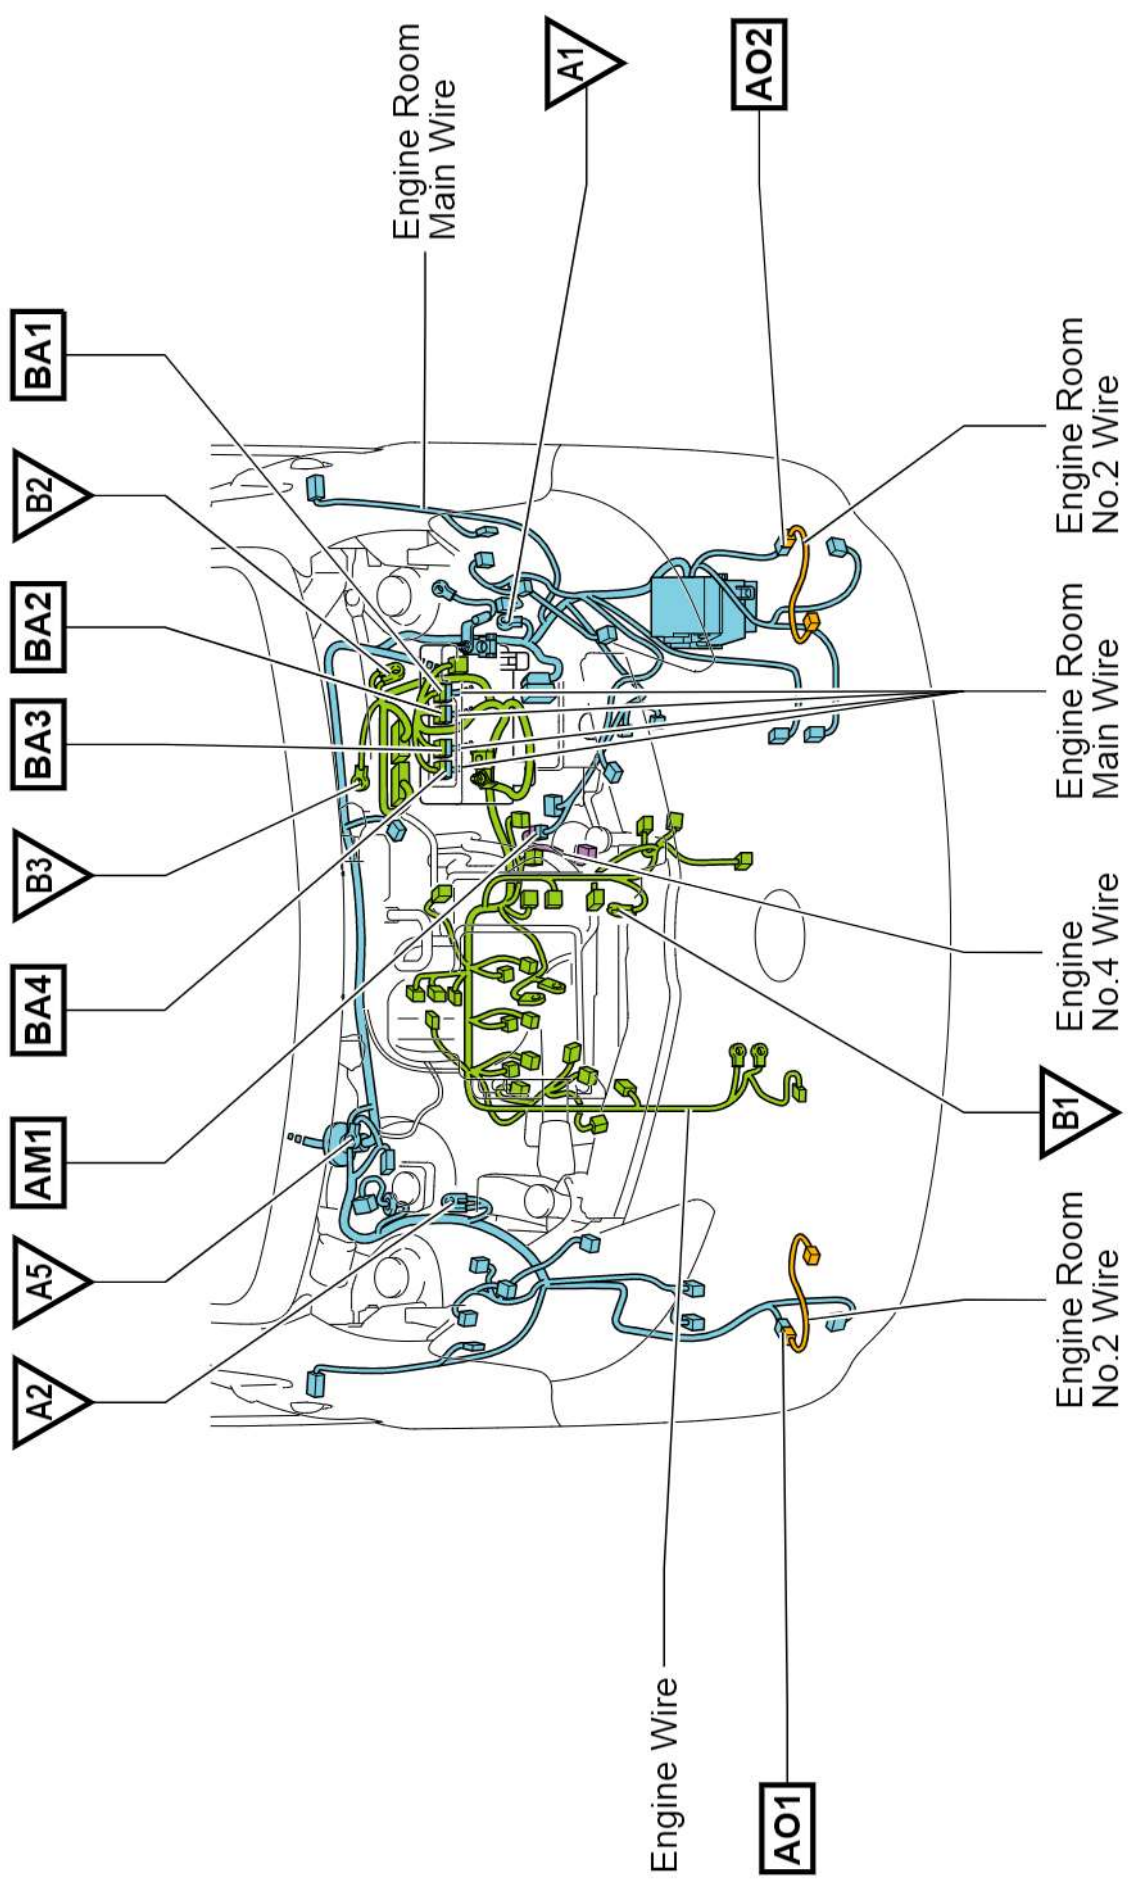

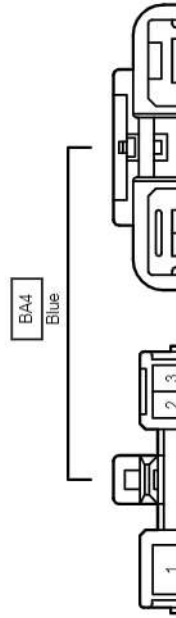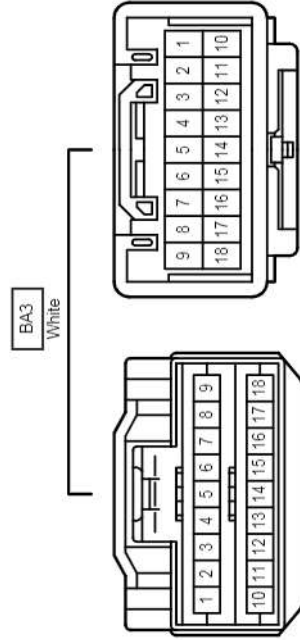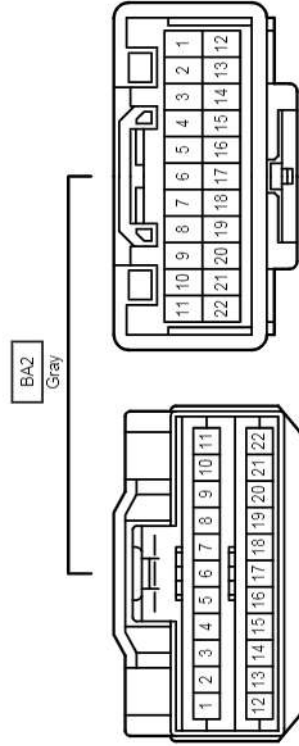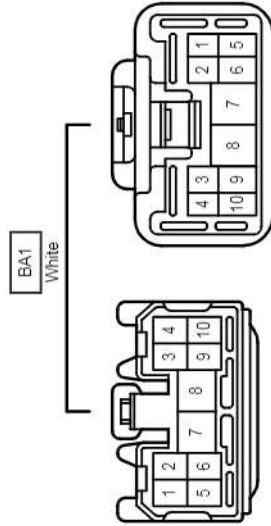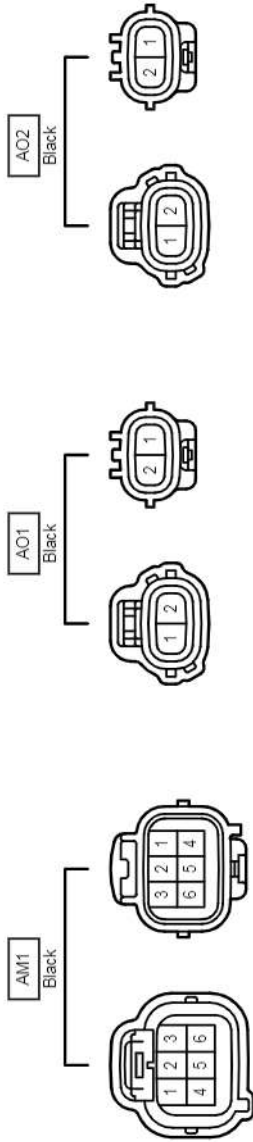


Position of Parts in Engine Compartment <LHD 2WZ-TV>


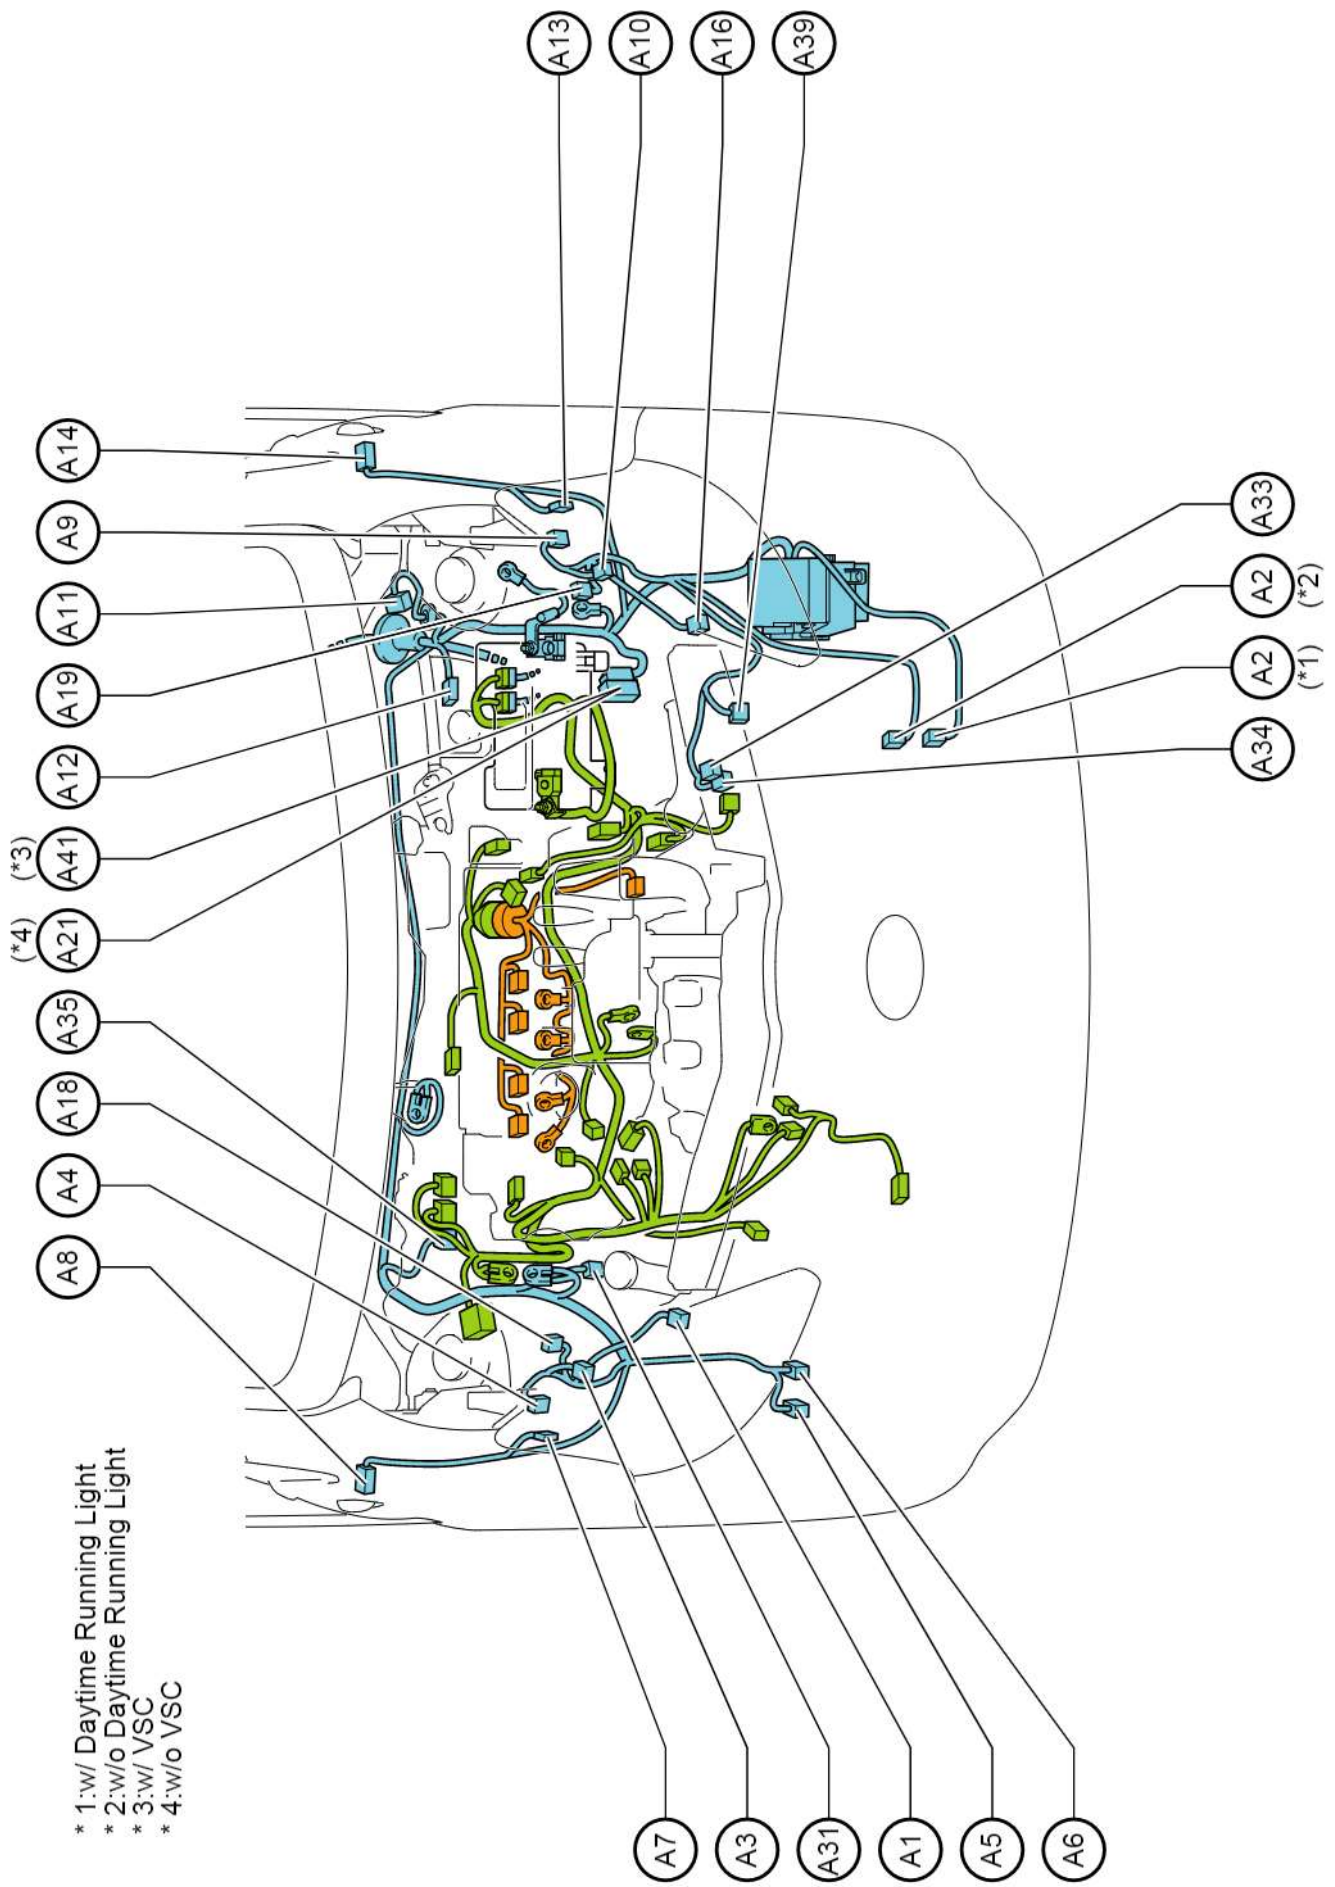


- * 1:w/ Daytime Running Light
- * 2:w/o Daytime Running Light
- * 3:w/ VSC
- * 4:w/o VSC



A 1	Turn Signal Lamp (Front RH)
A 2	Horn
A 3	Clearance Lamp (Front RH)
A 4	Headlamp (RH)
A 5	Windshield Washer Motor
A 6	Rear Washer Motor
A 7	Speed Sensor (Front RH)
A 8	Turn Signal Lamp (Front Side RH)
A 9	Headlamp (LH)
A 10	Clearance Lamp (Front LH)
A 11	Windshield Wiper Motor
A 12	Brake Fluid Level Warning SW
A 13	Speed Sensor (Front LH)
A 14	Turn Signal Lamp (Front Side LH)
A 16	Turn Signal Lamp (Front LH)
A 18	Headlamp Leveling Motor (RH)
A 19	Headlamp Leveling Motor (LH)
A 21	Skid Control ECU with Actuator
A 31	A/C Pressure Sensor
A 33	Cooling Fan Resistor
A 34	Cooling Fan Resistor
A 35	Engine ECU
A 39	Cooling Fan Motor
A 41	Skid Control ECU with Actuator

Position of Parts in Engine Compartment <LHD 2WZ-TV>

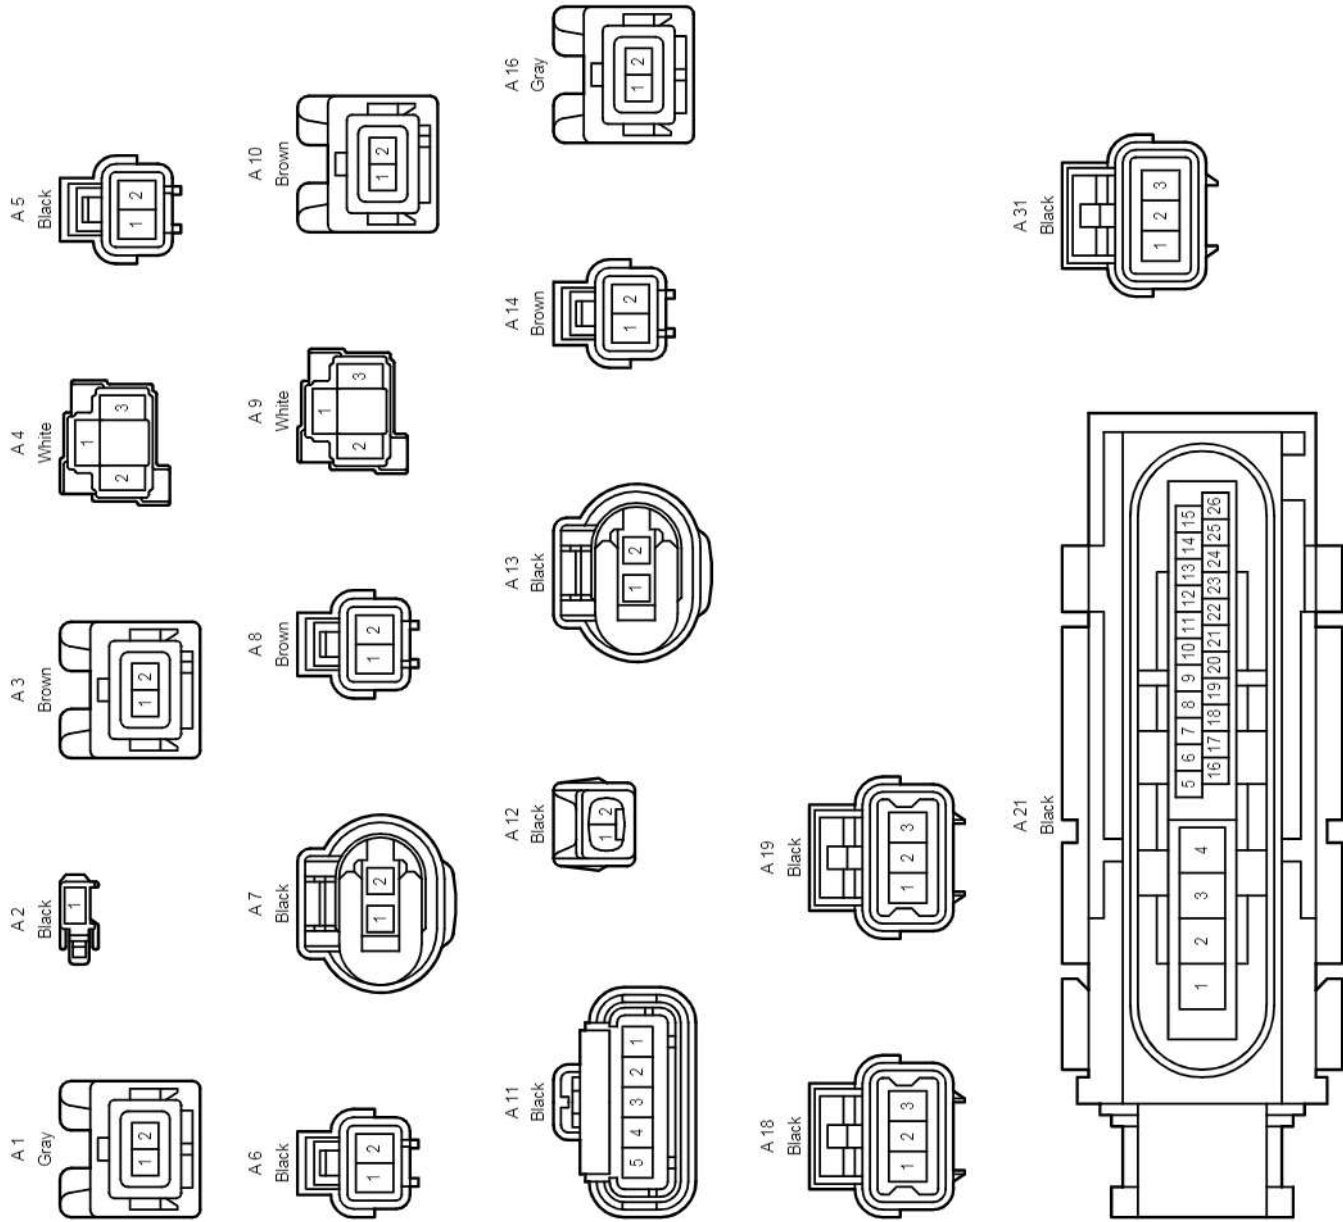


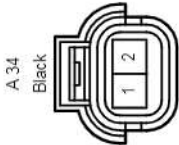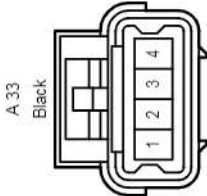


A 35
Black

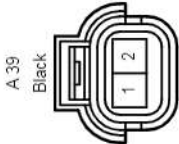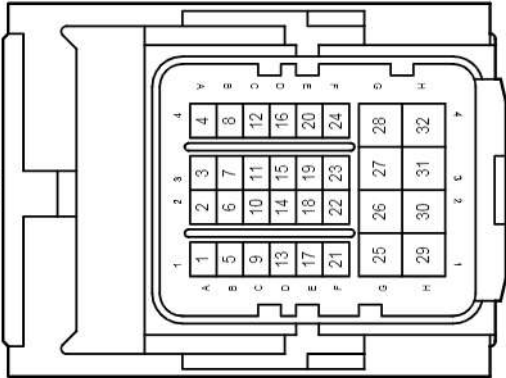

A 41
Black

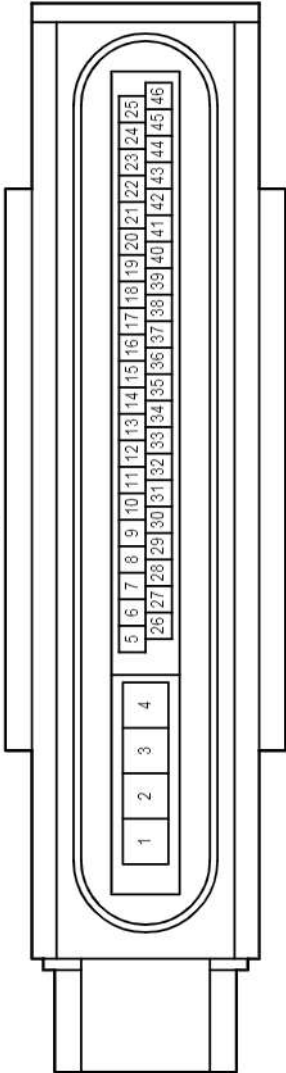
















Position of Parts in Engine Compartment <LHD 2WZ-TV>

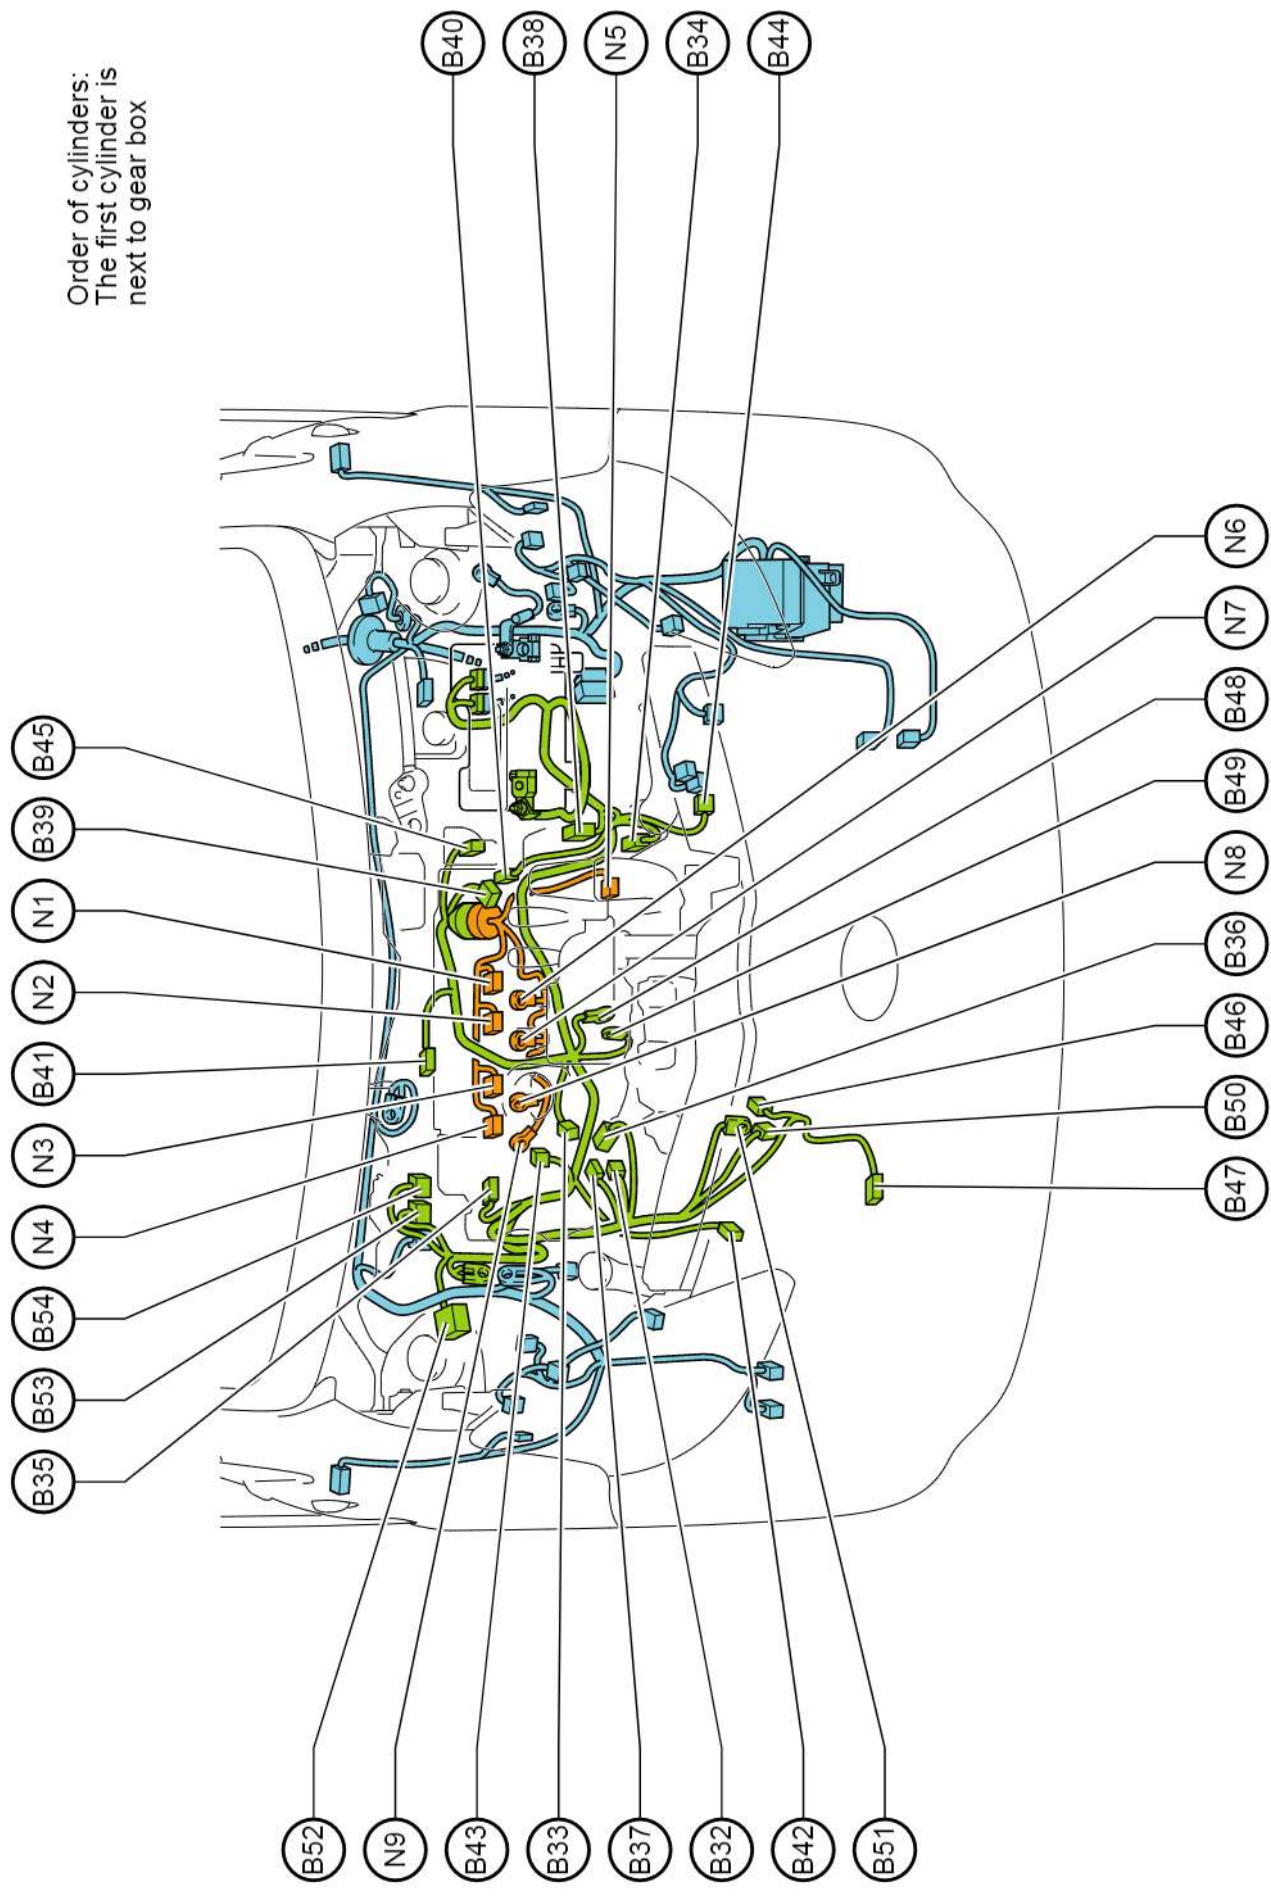

Order of cylinders:
The first cylinder is
next to gear box





B	32	Camshaft Position Sensor
B	33	Fuel Flow Regulator Valve
B	34	Water Temp. Sensor
B	35	Fuel Temp. Sensor
B	36	Inlet Air Temp. Sensor
B	37	Throttle Valve
B	38	Fuel Heater
B	39	EGR Valve
B	40	Air Flow Meter
B	41	Turbo Pressure Sensor
B	42	Crankshaft Position Sensor
B	42	Crankshaft Position Sensor
B	43	Pressure Control Valve
B	44	Back-Up Lamp SW
B	45	Fuel Filter Warning SW
B	46	Engine Oil Pressure SW
B	47	A/C Compressor
B	48	Starter
B	49	Starter
B	50	Alternator
B	51	Alternator
B	52	Glow Plug Relay
B	53	Engine ECU
B	54	Engine ECU
N	1	Fuel Injector (No.1)
N	2	Fuel Injector (No.2)
N	3	Fuel Injector (No.3)
N	4	Fuel Injector (No.4)
N	5	Fuel Pressure Sensor
N	6	Glow Plug (No.1)
N	7	Glow Plug (No.2)
N	8	Glow Plug (No.3)
N	9	Glow Plug (No.4)

  Position of Parts in Engine Compartment <LHD 2WZ-TV>

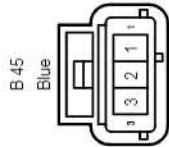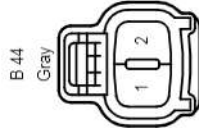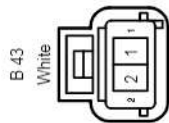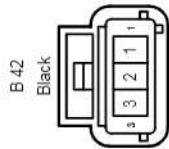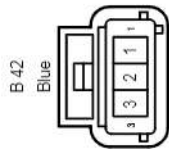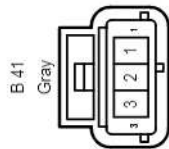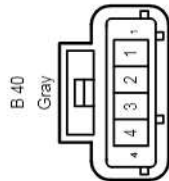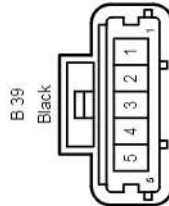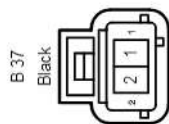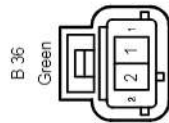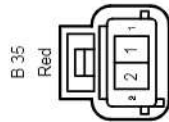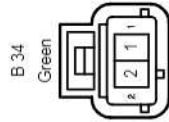
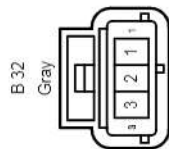



(From Jan. 2008 Production)


(Before Jan. 2008 Production)

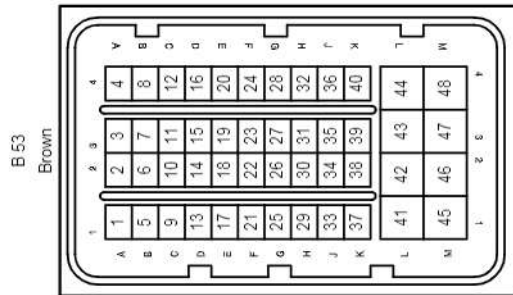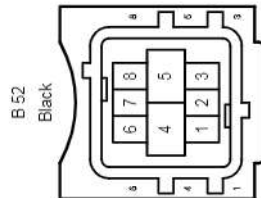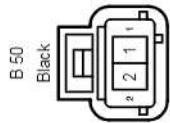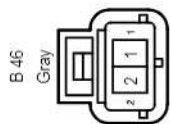


Position of Parts in Engine Compartment <LHD 2WZ-TV>

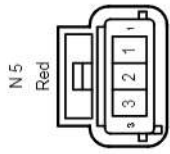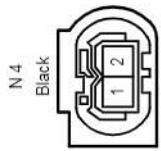

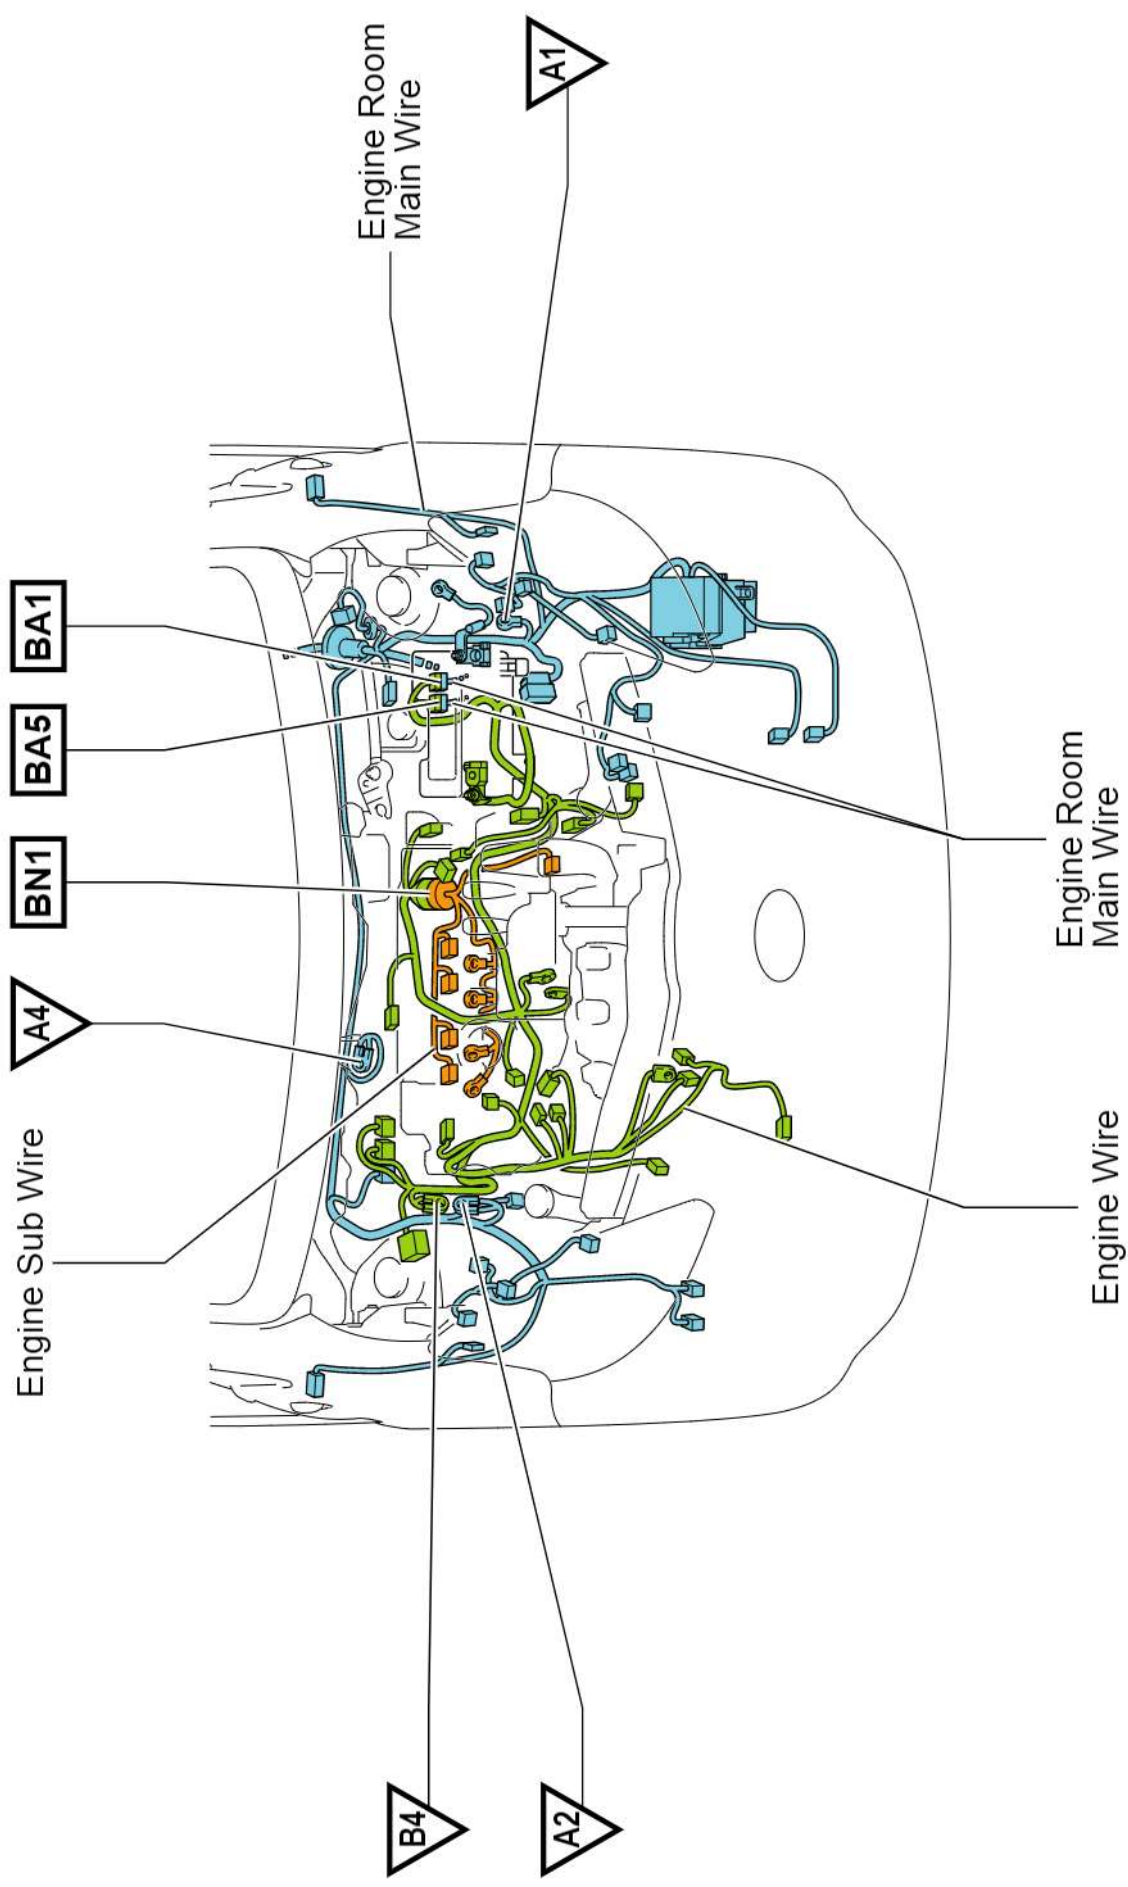

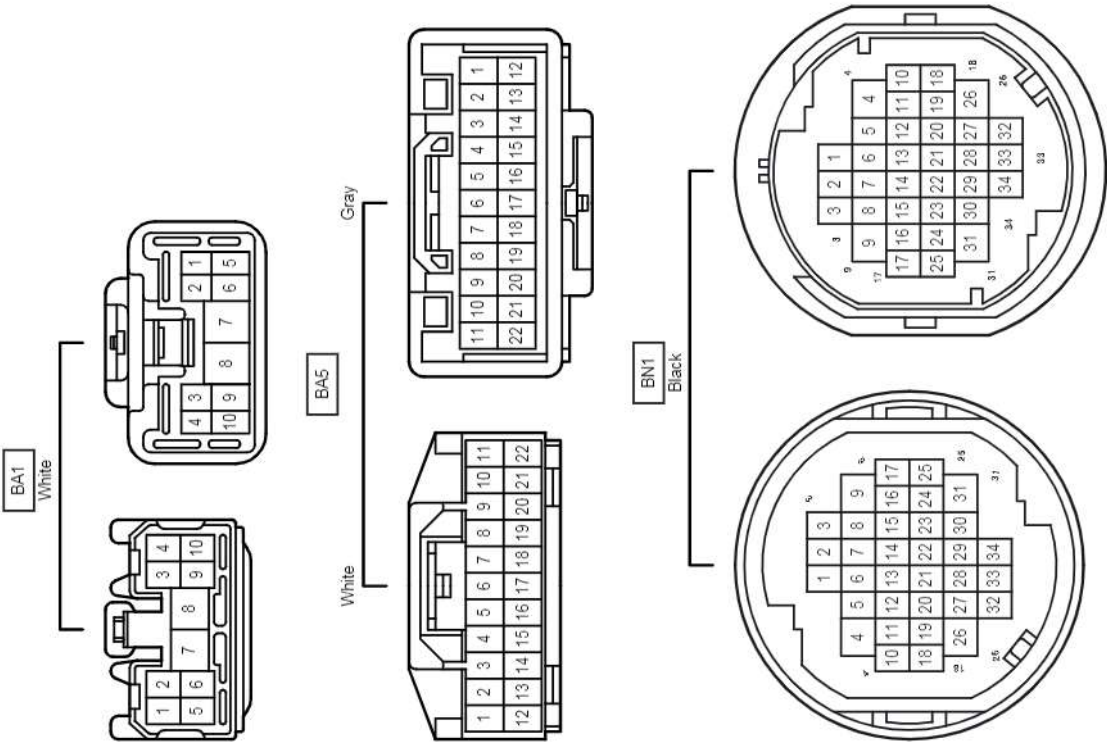







Position of Parts in Engine Compartment <RHD 2WZ-TV>

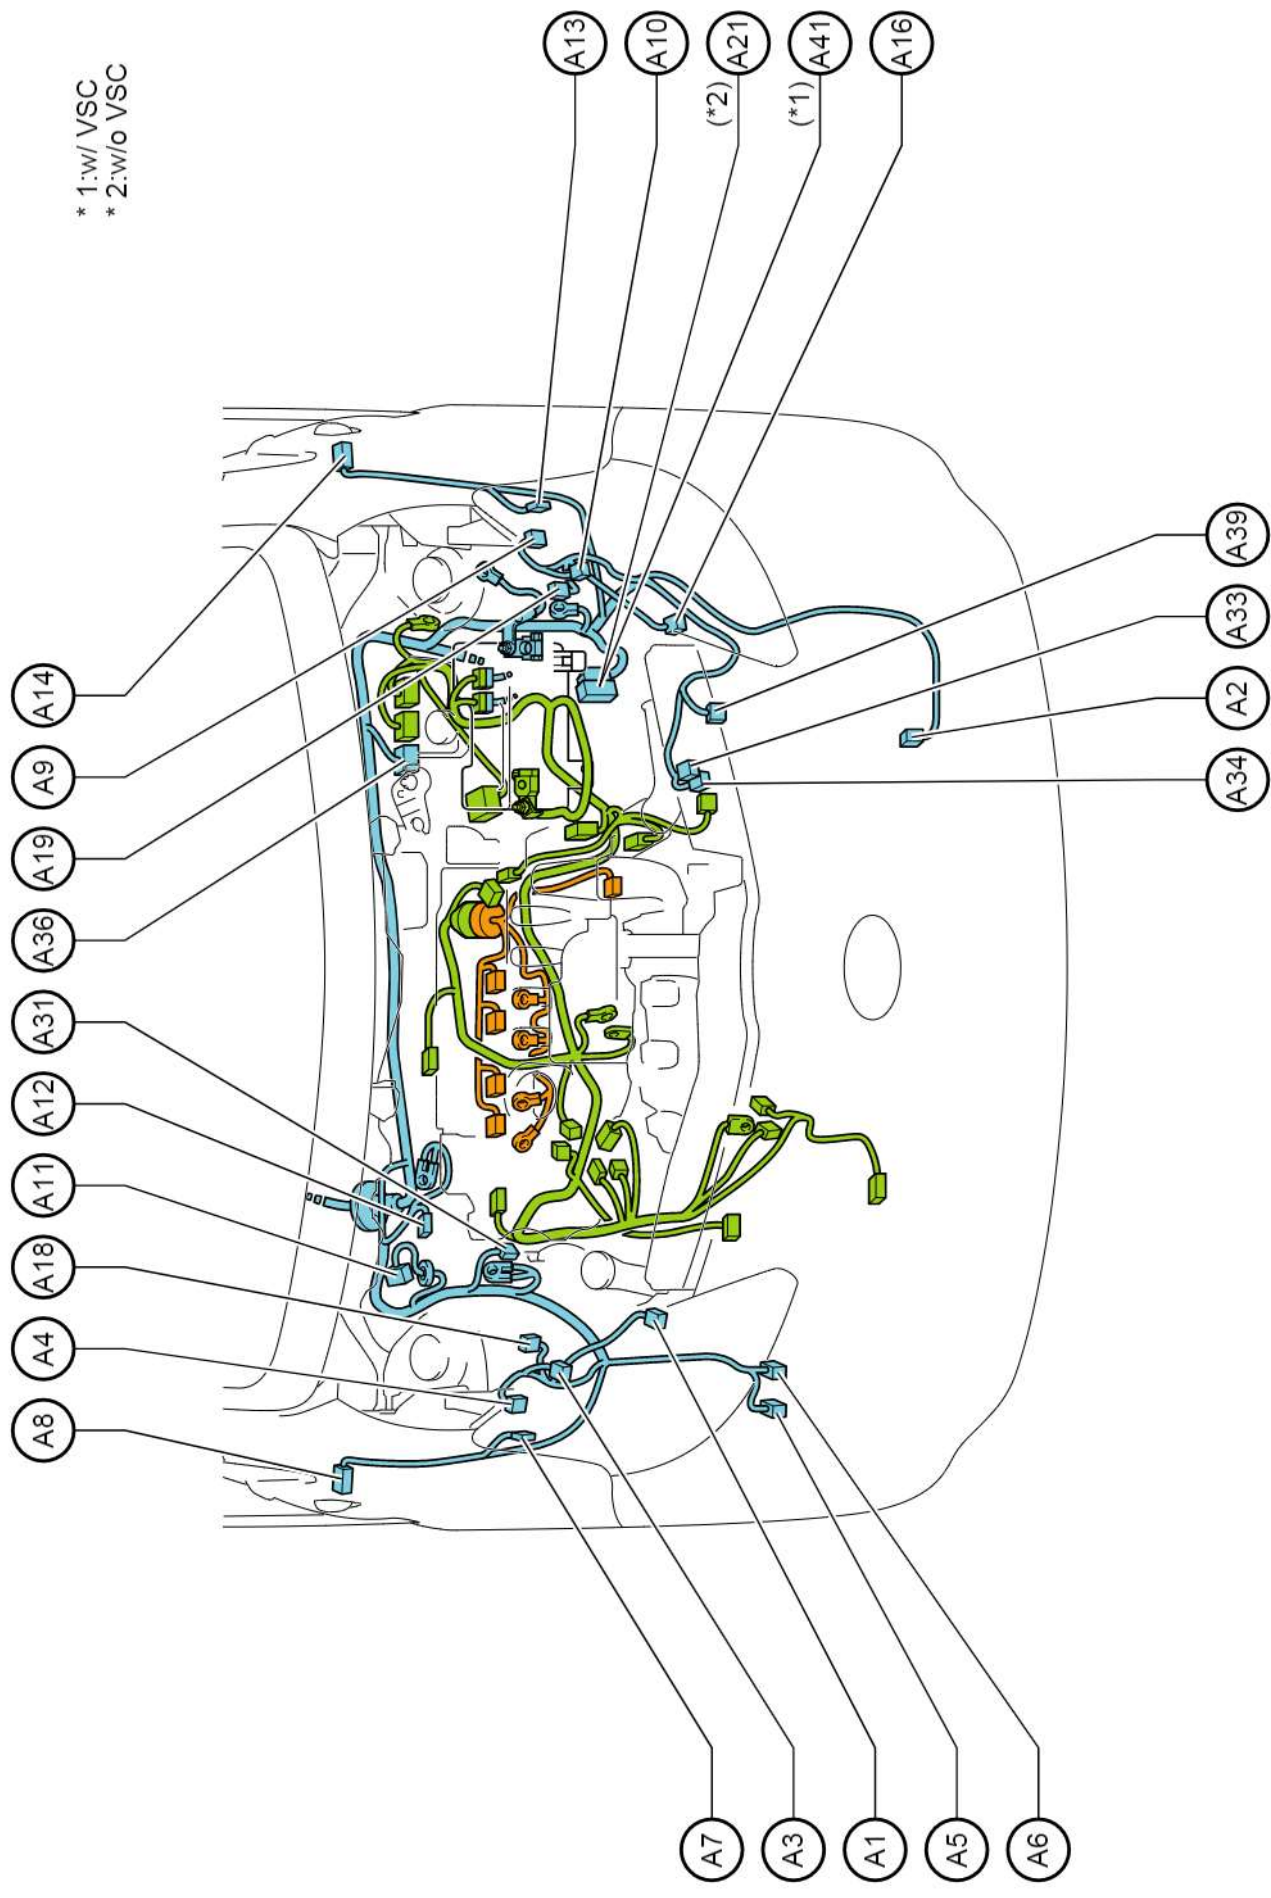


- A 1 Turn Signal Lamp (Front RH)
- A 2 Horn
- A 3 Clearance Lamp (Front RH)
- A 4 Headlamp (RH)
- A 5 Windshield Washer Motor
- A 6 Rear Washer Motor
- A 7 Speed Sensor (Front RH)
- A 8 Turn Signal Lamp (Front Side RH)
- A 9 Headlamp (LH)
- A 10 Clearance Lamp (Front LH)
- A 11 Windshield Wiper Motor
- A 12 Brake Fluid Level Warning SW
- A 13 Speed Sensor (Front LH)
- A 14 Turn Signal Lamp (Front Side LH)
- A 16 Turn Signal Lamp (Front LH)
- A 18 Headlamp Leveling Motor (RH)
- A 19 Headlamp Leveling Motor (LH)
- A 21 Skid Control ECU with Actuator
- A 31 A/C Pressure Sensor
- A 33 Cooling Fan Resistor
- A 34 Cooling Fan Resistor
- A 36 Engine ECU
- A 39 Cooling Fan Motor
- A 41 Skid Control ECU with Actuator

Position of Parts in Engine Compartment <RHD 2WZ-TV>

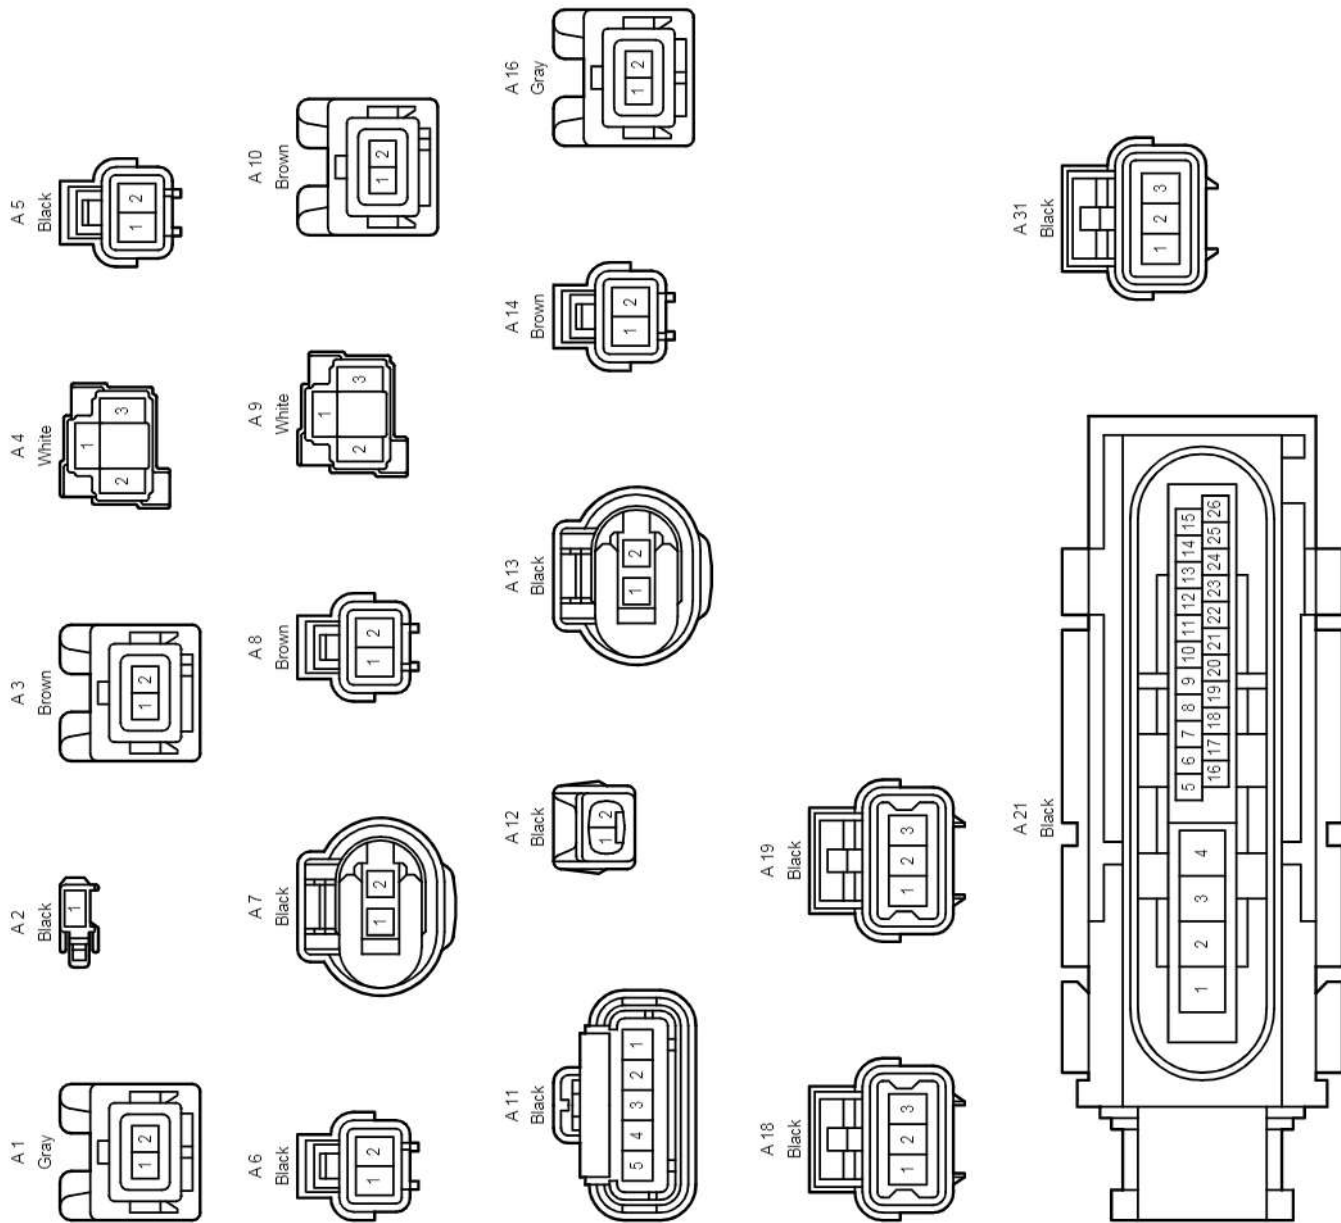











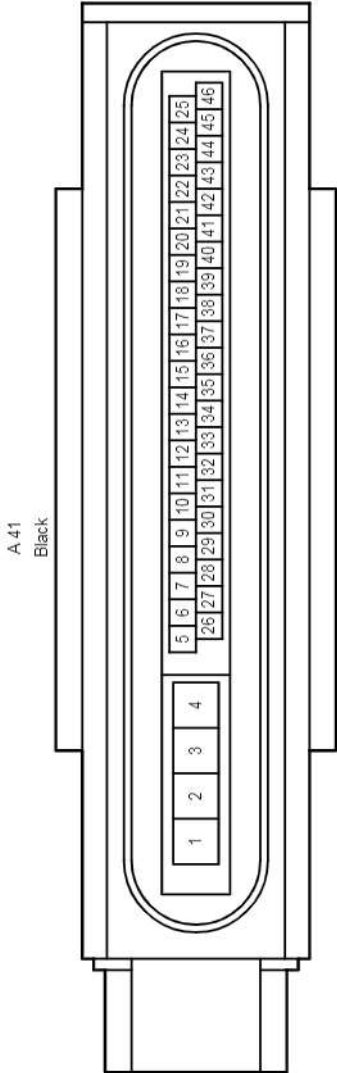
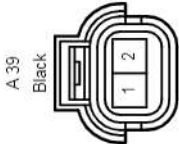
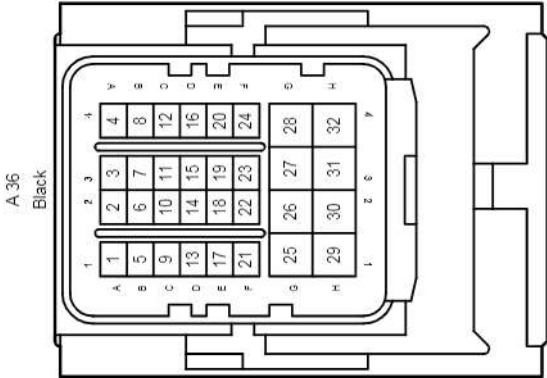
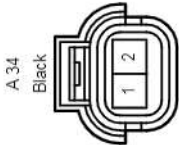
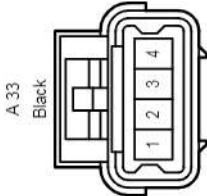


Position of Parts in Engine Compartment <RHD 2WZ-TV>

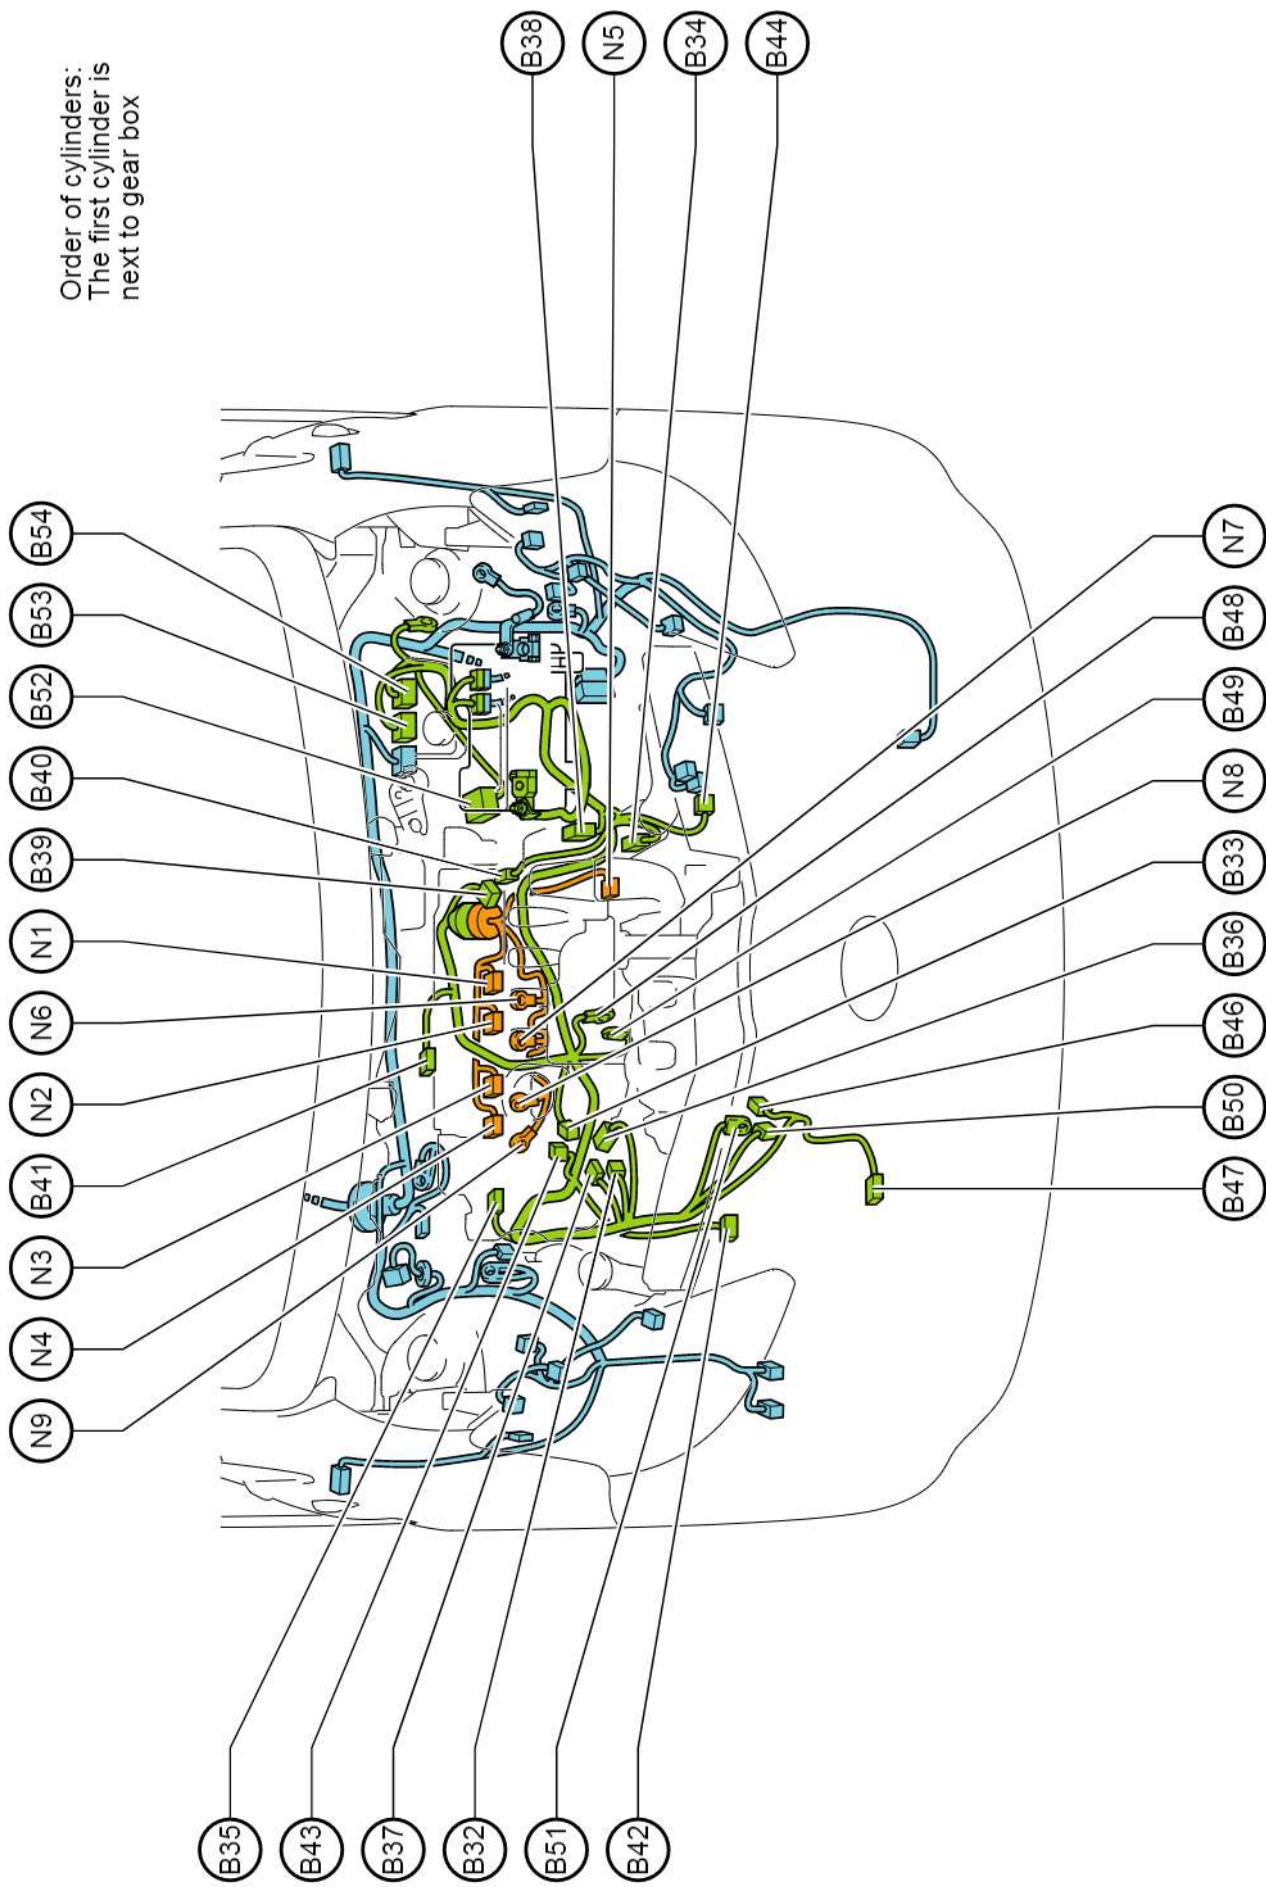






B	32	Camshaft Position Sensor
B	33	Fuel Flow Regulator Valve
B	34	Water Temp. Sensor
B	35	Fuel Temp. Sensor
B	36	Inlet Air Temp. Sensor
B	37	Throttle Valve
B	38	Fuel Heater
B	39	EGR Valve
B	40	Air Flow Meter
B	41	Turbo Pressure Sensor
B	42	Crankshaft Position Sensor
B	42	Crankshaft Position Sensor
B	43	Pressure Control Valve
B	44	Back-Up Lamp SW
B	46	Engine Oil Pressure SW
B	47	A/C Compressor
B	48	Starter
B	49	Starter
B	50	Alternator
B	51	Alternator
B	52	Glow Plug Relay
B	53	Engine ECU
B	54	Engine ECU
N	1	Fuel Injector (No.1)
N	2	Fuel Injector (No.2)
N	3	Fuel Injector (No.3)
N	4	Fuel Injector (No.4)
N	5	Fuel Pressure Sensor
N	6	Glow Plug (No.1)
N	7	Glow Plug (No.2)
N	8	Glow Plug (No.3)
N	9	Glow Plug (No.4)

   
Position of Parts in Engine Compartment <RHD 2WZ-TV>

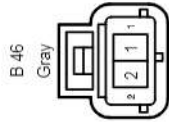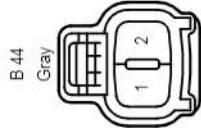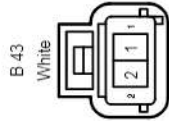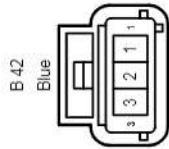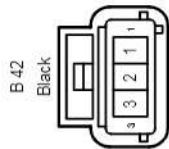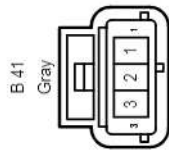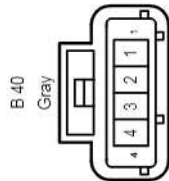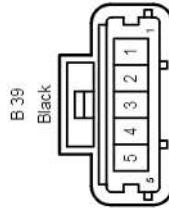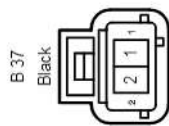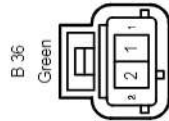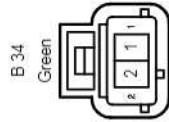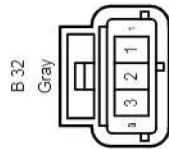


(Before Jan. 2008 Production)

 
(From Jan. 2008 Production)

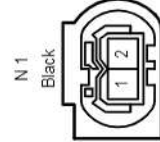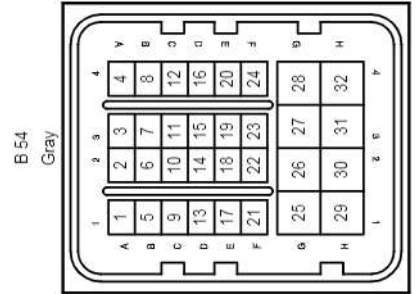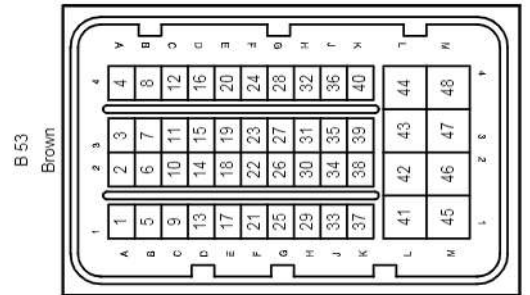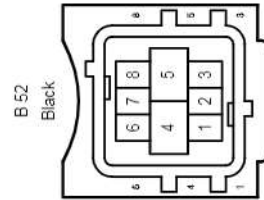

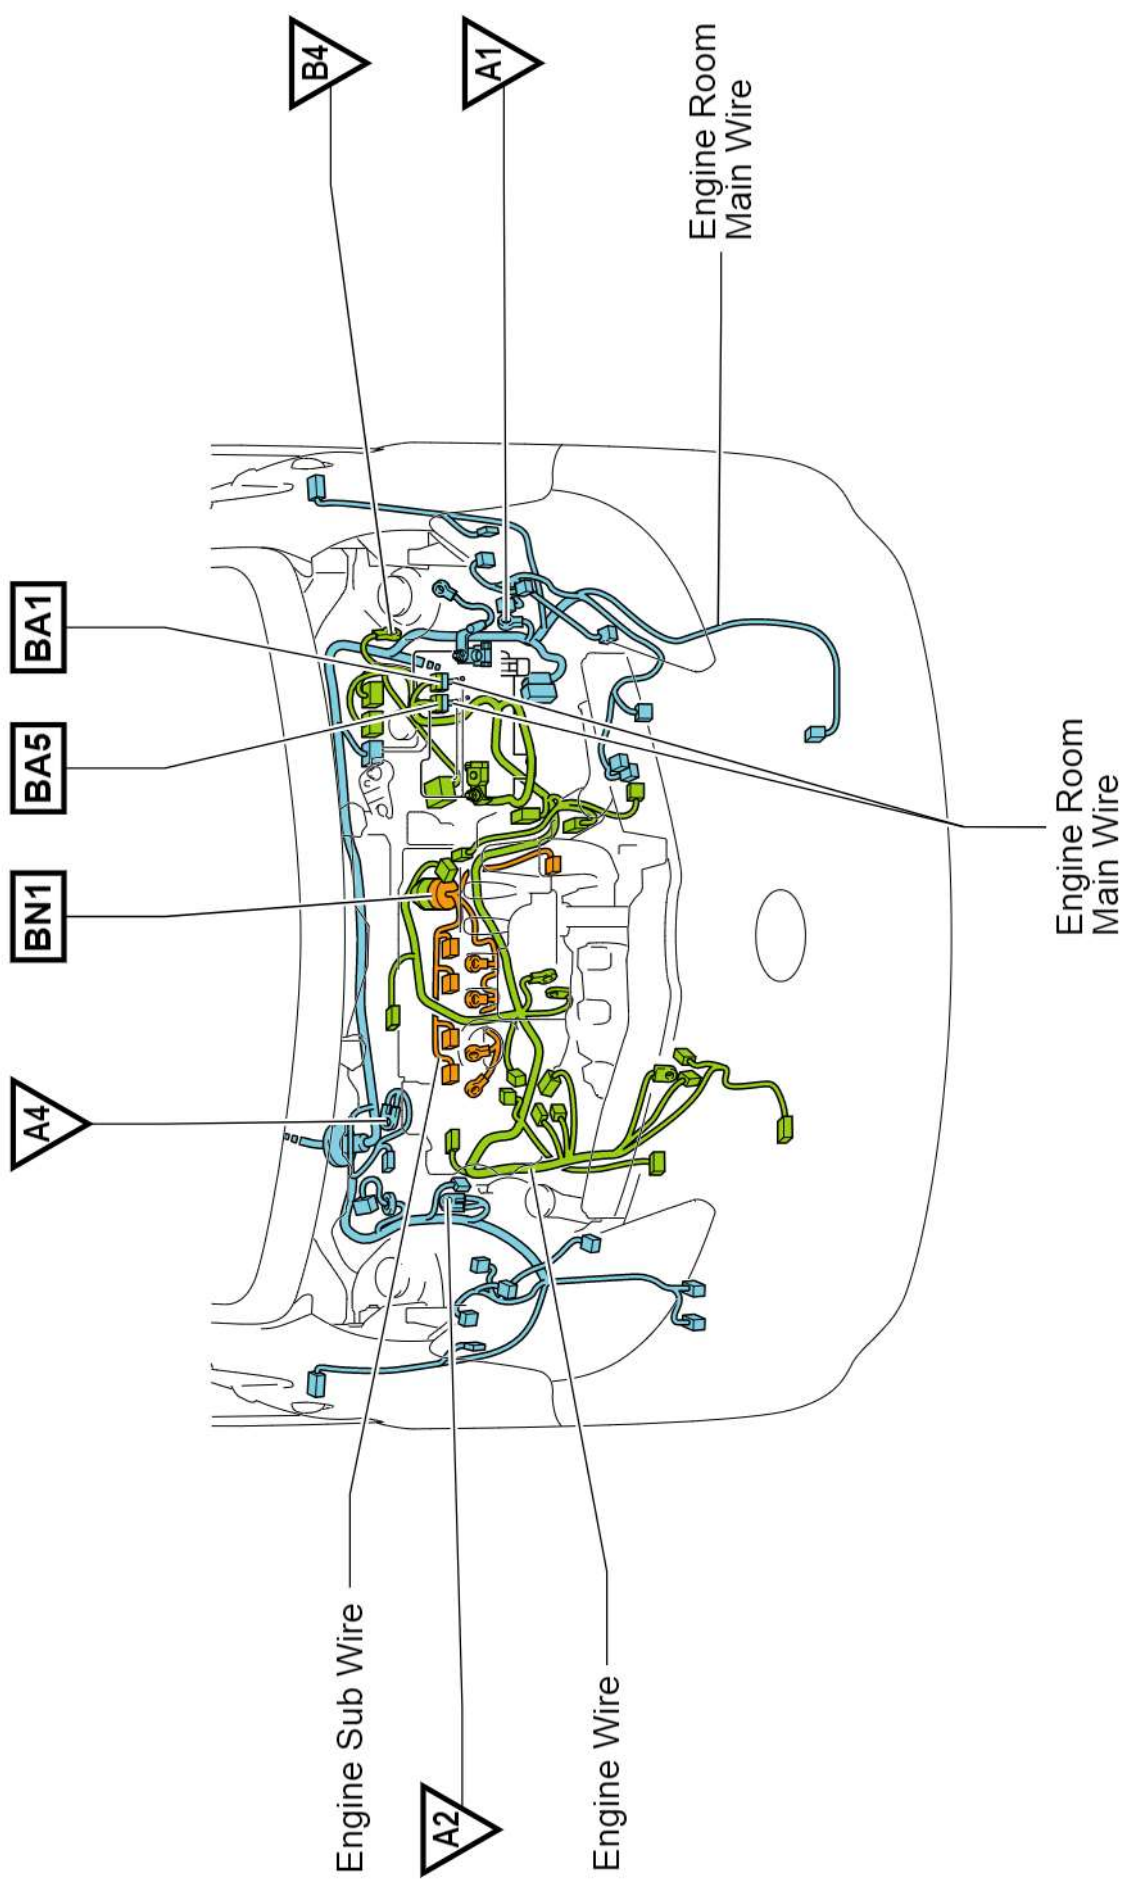

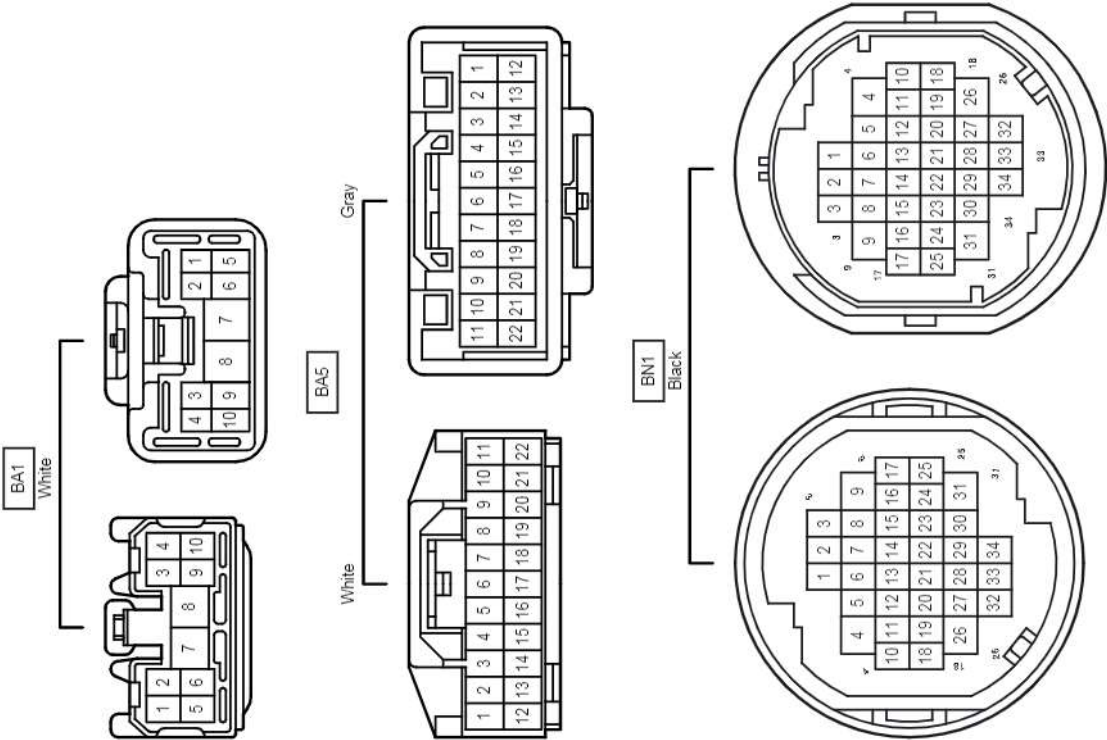







Position of Parts in Body <LHD 3-Door>

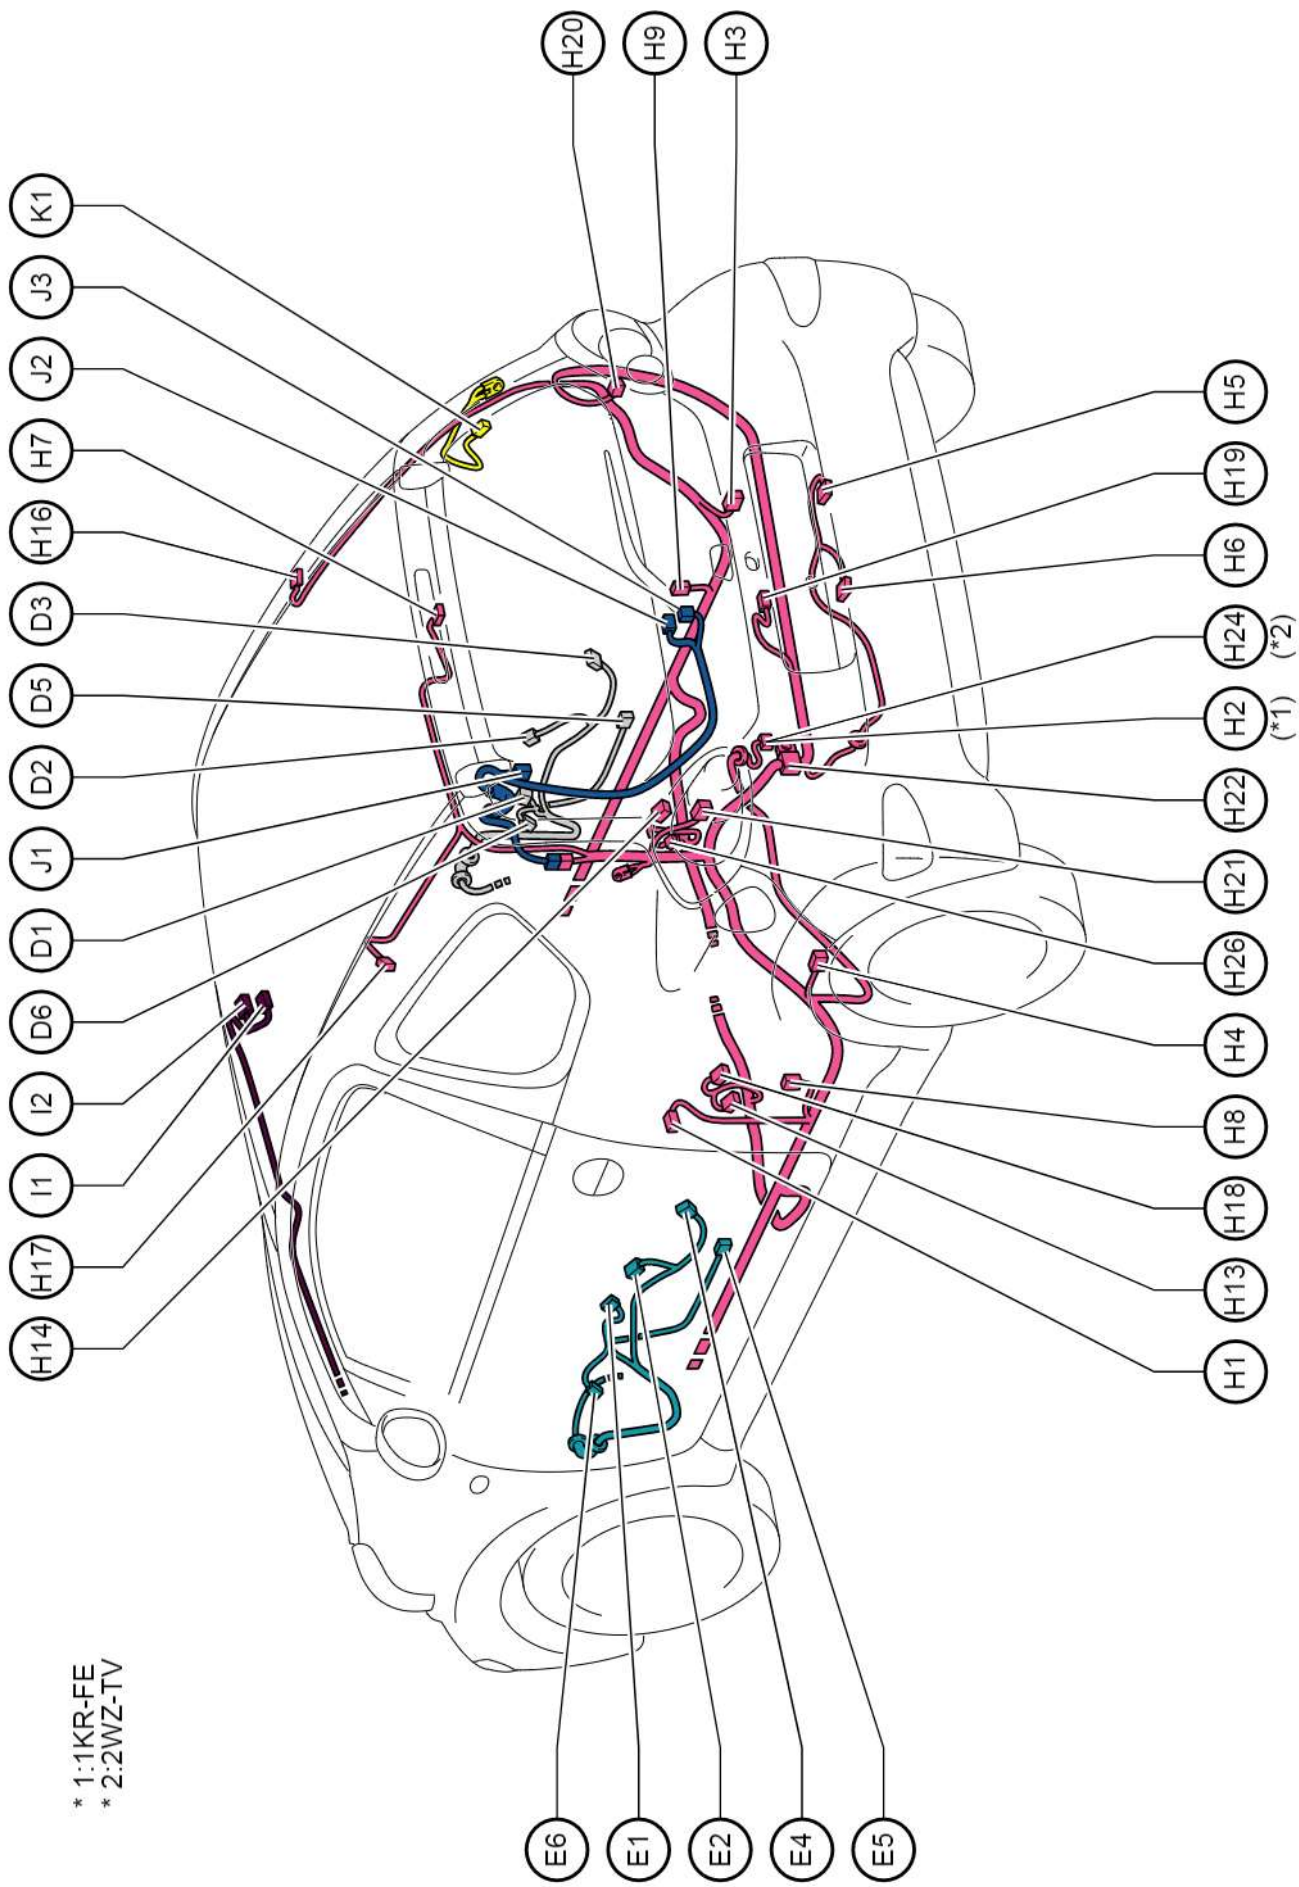



D	1	Power Window SW (Front RH)
D	2	Power Window Regulator Motor (Front RH)
D	3	Door Lock Assembly (Front Passenger's Side)
D	5	Side Airbag Sensor (RH)
D	6	No.3 Rear Speaker Assembly RH
E	1	Power Window SW (Front LH)
E	2	Power Window Regulator Motor (Front LH)
E	4	Door Lock Assembly (Driver's Side)
E	5	Side Airbag Sensor (LH)
E	6	No.3 Rear Speaker Assembly LH
H	1	Door Courtesy SW
H	2	Fuel Suction Pump and Gage Assembly
H	3	Speed Sensor (Rear RH)
H	4	Speed Sensor (Rear LH)
H	5	License Plate Lamp (RH)
H	6	License Plate Lamp (LH)
H	7	Center Stop Lamp
H	8	Front Seat Outer Belt (LH)
H	9	Front Seat Outer Belt (RH)
H	13	Side Airbag Squib (LH)
H	14	Side Airbag Squib (RH)
H	16	Curtain Shield Airbag Squib (RH)
H	17	Curtain Shield Airbag Squib (LH)
H	18	Front Seat Inner Belt
H	19	Back Door Lock Assembly
H	20	Rear Combination Lamp (RH)
H	21	Rear Combination Lamp (LH)
H	22	Junction Connector
H	24	Fuel Sender Gage
H	26	Front Seat Inner Belt Assembly
I	1	Room Lamp
I	2	Telephone Microphone Assembly
J	1	Rear Window Defogger
J	2	Rear Wiper Motor
J	3	Rear Window Defogger
K	1	Rear Window Defogger


Position of Parts in Body <LHD 3-Door>

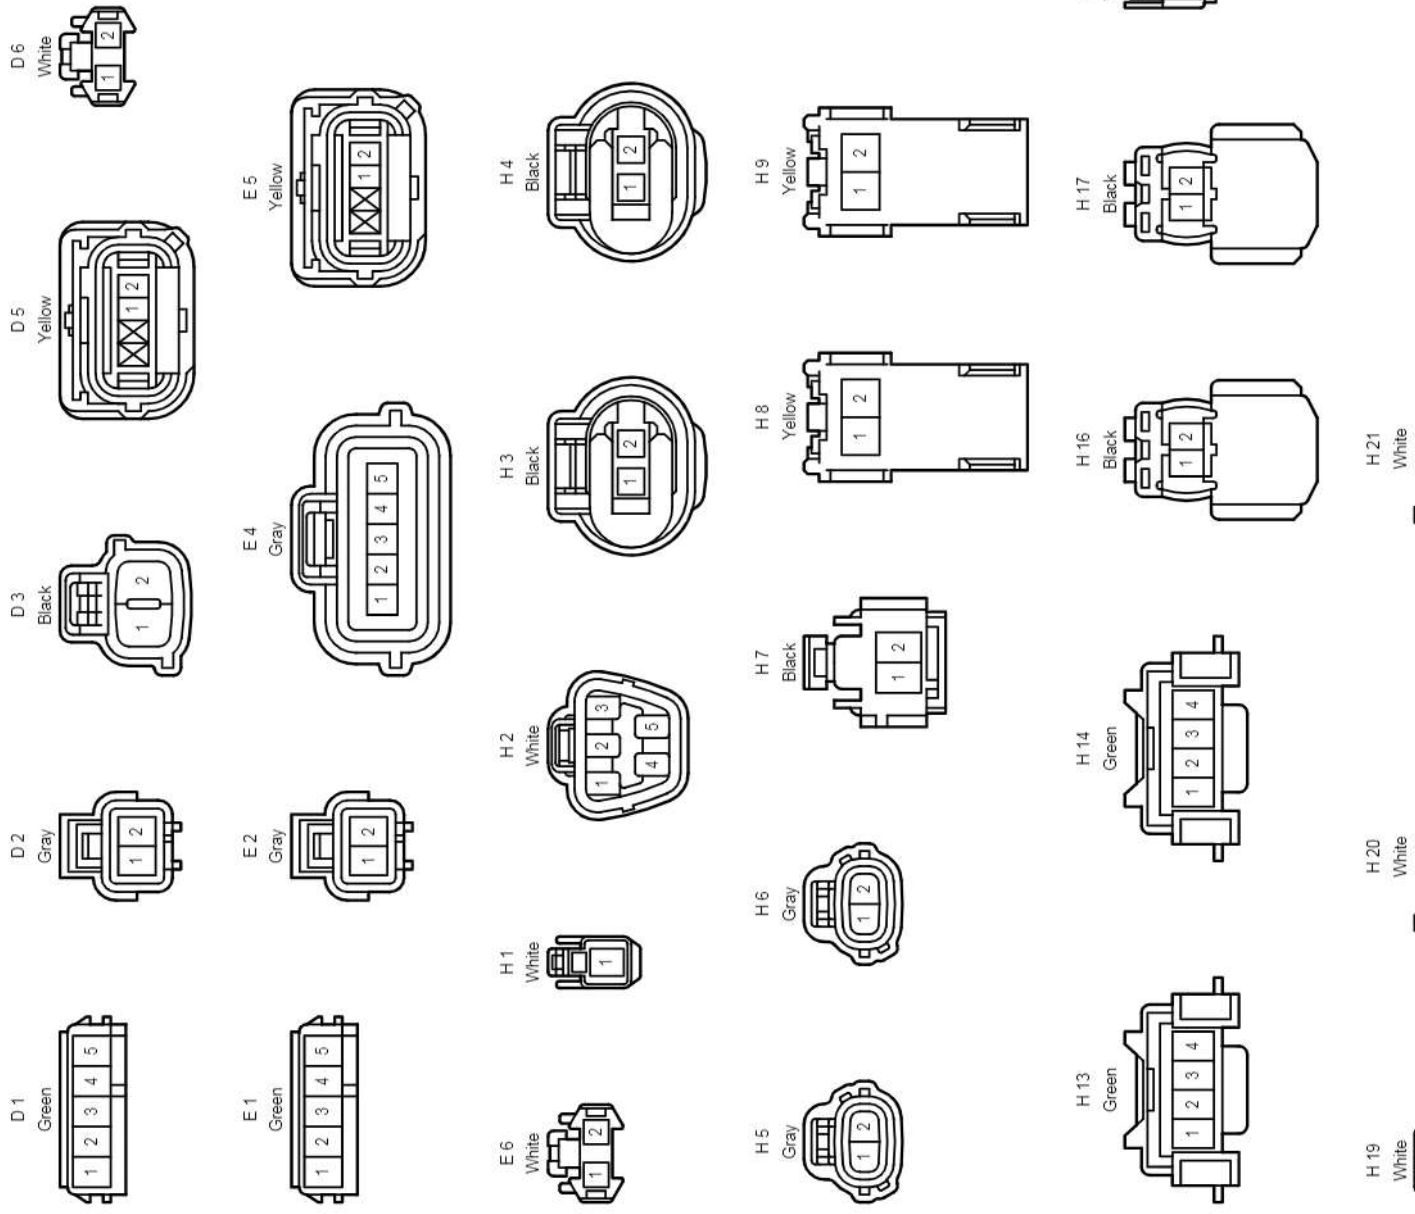

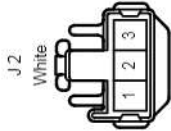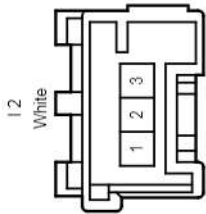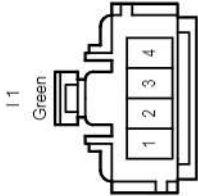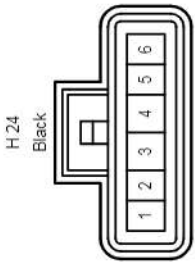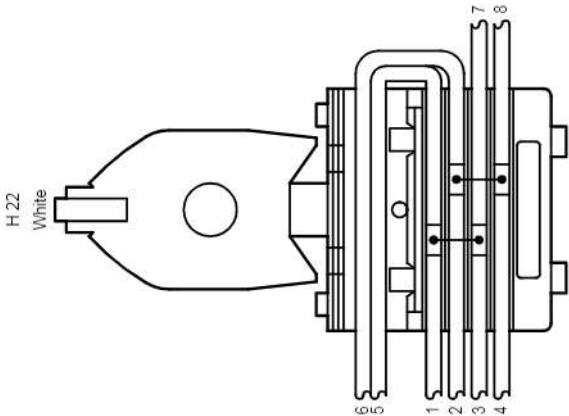

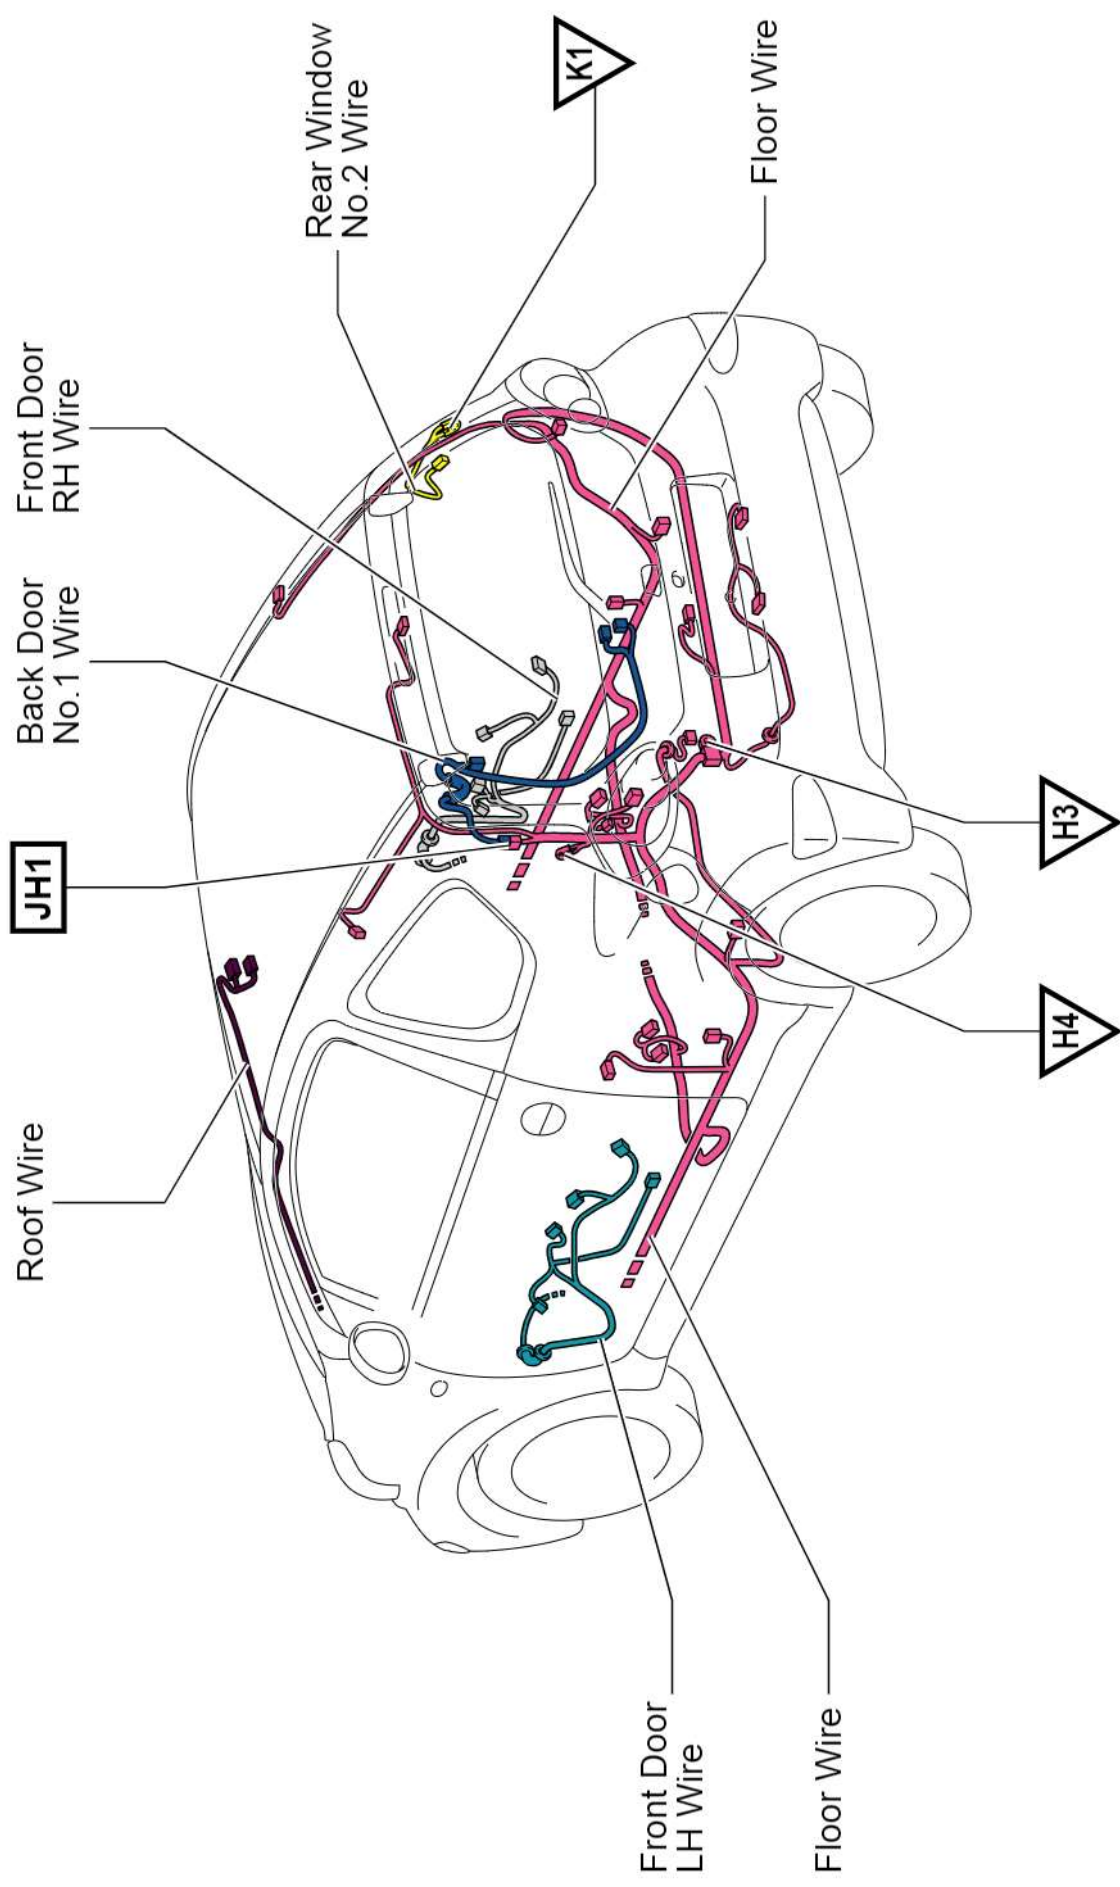






















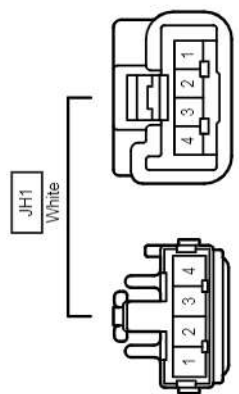


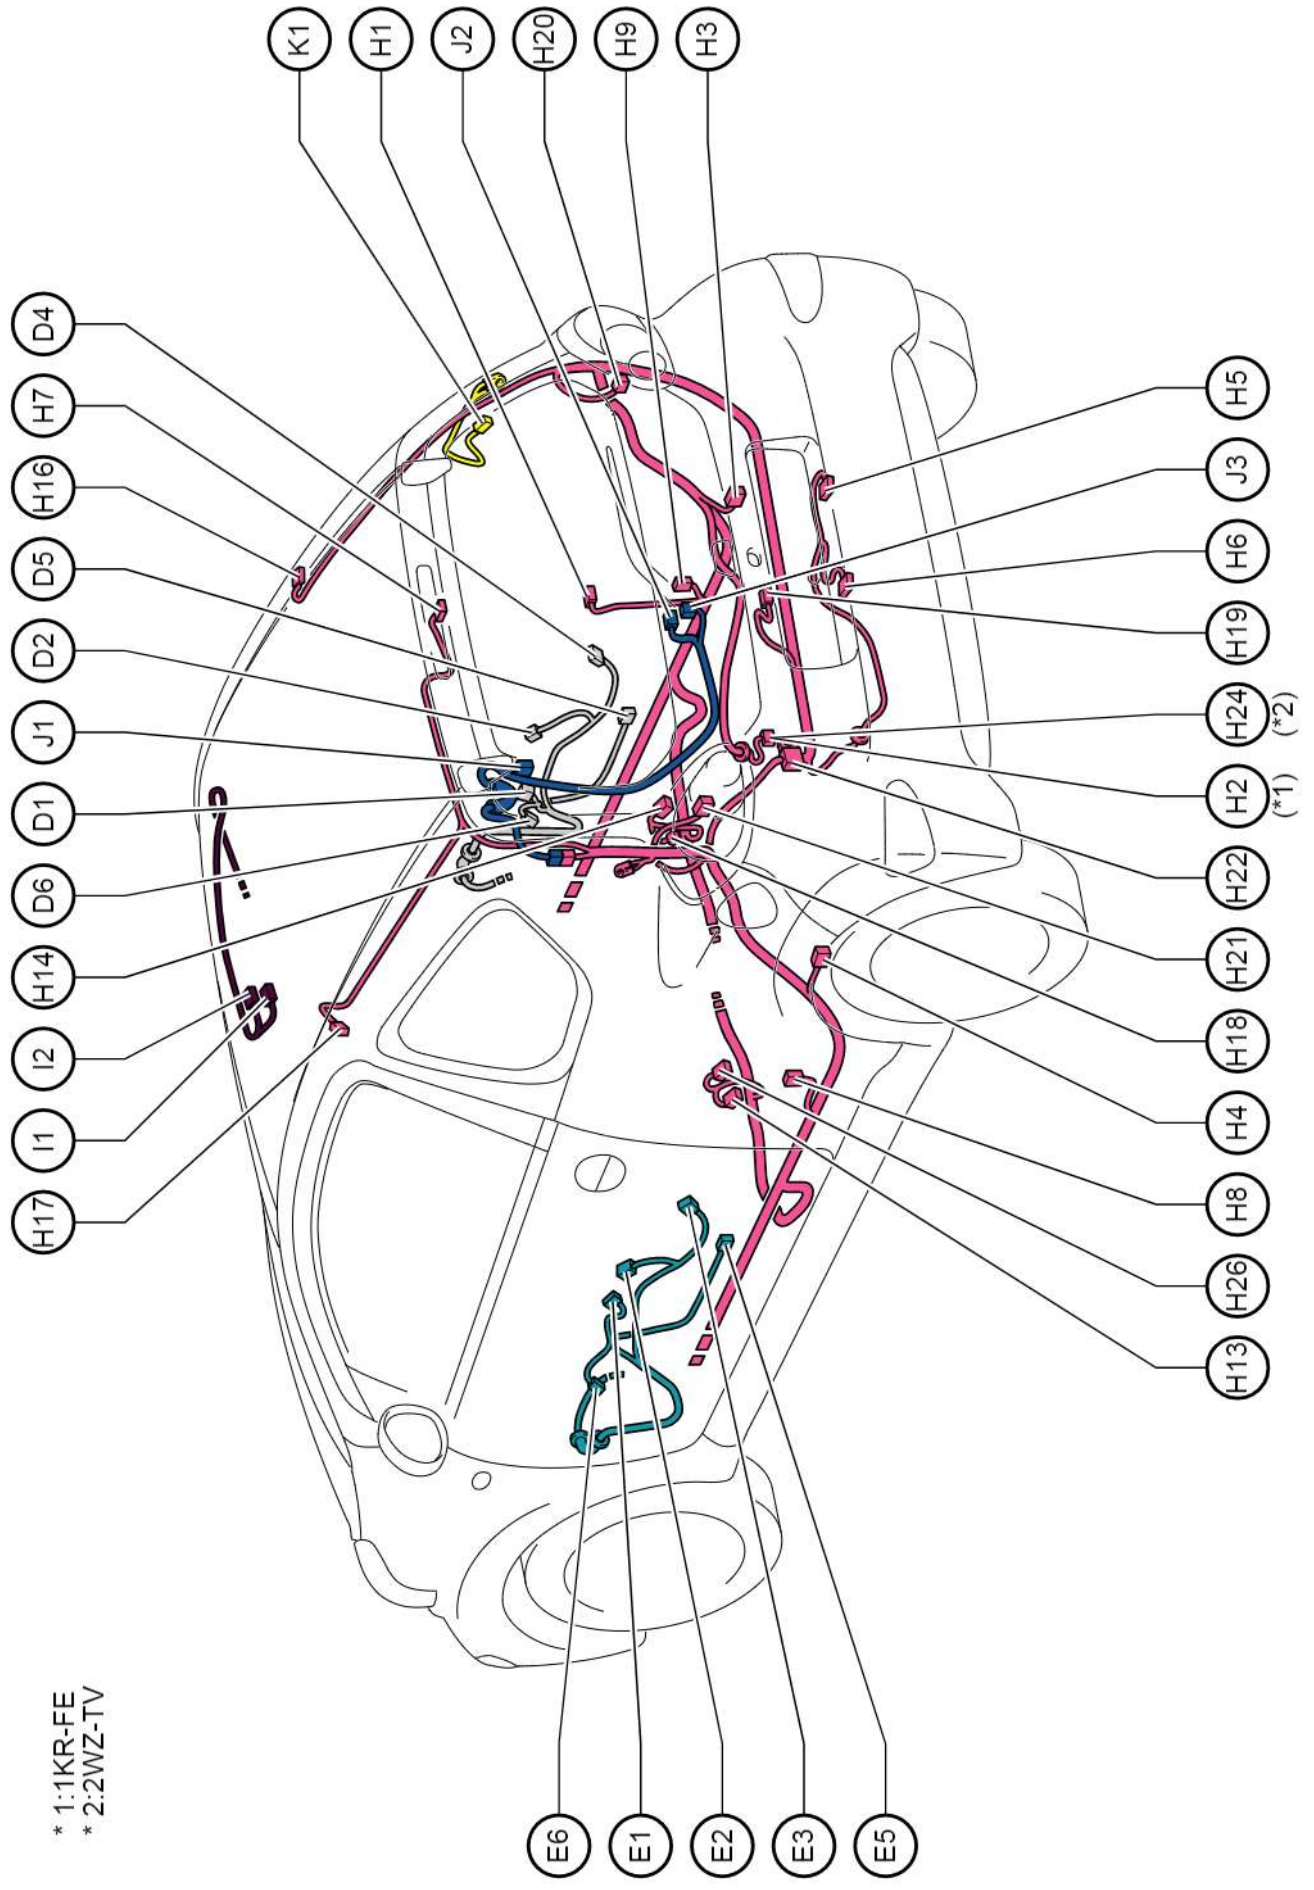

* 1:1KR-FE
* 2:2WZ-TV

D	1	Power Window SW (Front RH)
D	2	Power Window Regulator Motor (Front RH)
D	4	Door Lock Assembly (Driver's Side)
D	5	Side Airbag Sensor (RH)
D	6	No.3 Rear Speaker Assembly RH
E	1	Power Window SW (Front LH)
E	2	Power Window Regulator Motor (Front LH)
E	3	Door Lock Assembly (Front Passenger's Side)
E	5	Side Airbag Sensor (LH)
E	6	No.3 Rear Speaker Assembly LH
H	1	Door Courtesy SW
H	2	Fuel Suction Pump and Gage Assembly
H	3	Speed Sensor (Rear RH)
H	4	Speed Sensor (Rear LH)
H	5	License Plate Lamp (RH)
H	6	License Plate Lamp (LH)
H	7	Center Stop Lamp
H	8	Front Seat Outer Belt (LH)
H	9	Front Seat Outer Belt (RH)
H	13	Side Airbag Squib (LH)
H	14	Side Airbag Squib (RH)
H	16	Curtain Shield Airbag Squib (RH)
H	17	Curtain Shield Airbag Squib (LH)
H	18	Front Seat Inner Belt
H	19	Back Door Lock Assembly
H	20	Rear Combination Lamp (RH)
H	21	Rear Combination Lamp (LH)
H	22	Junction Connector
H	24	Fuel Sender Gage
H	26	Front Seat Inner Belt Assembly
I	1	Room Lamp
I	2	Telephone Microphone Assembly
J	1	Rear Window Defogger
J	2	Rear Wiper Motor
J	3	Rear Window Defogger
K	1	Rear Window Defogger

    Position of Parts in Body <RHD 3-Door>

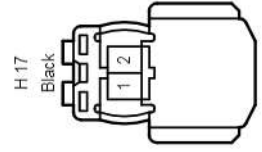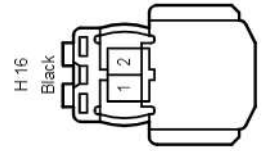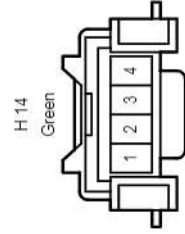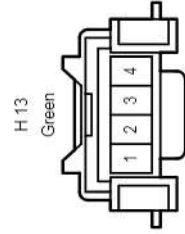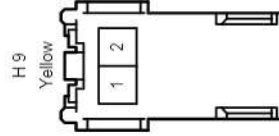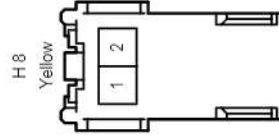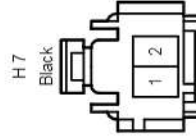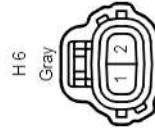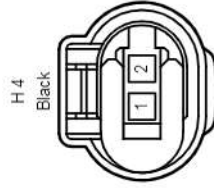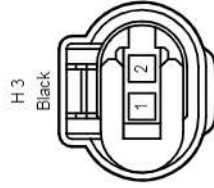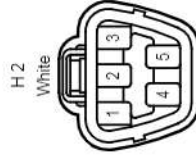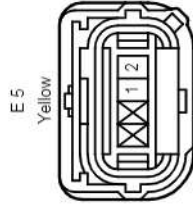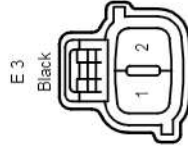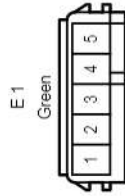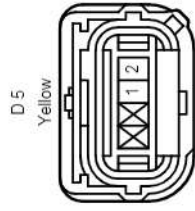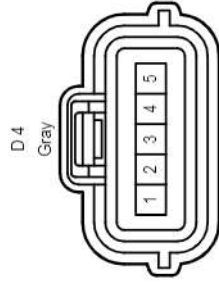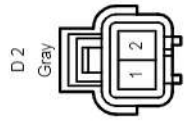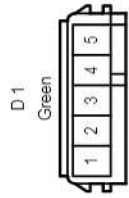


H 19
White

H 20
White

H 21
White

Position of Parts in Body <RHD 3-Door>



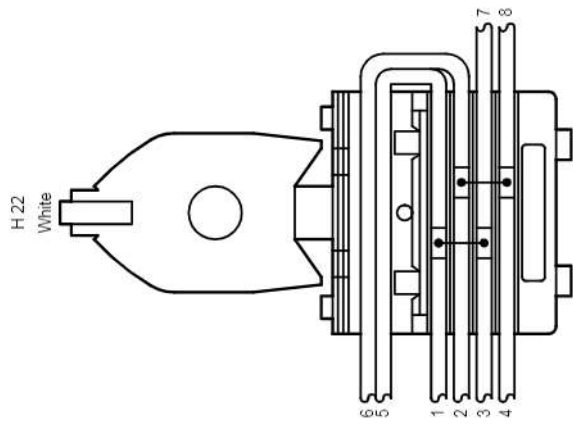


H 22
White

H 24
Black

H 26
White

 I 1
Green

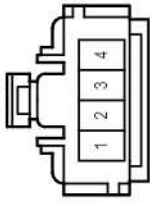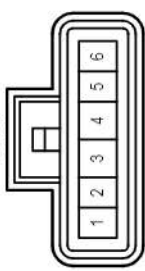


I 2
White


J 1
Black


J 2
White

J 3
Black


K 1
Black

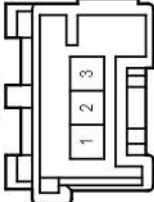

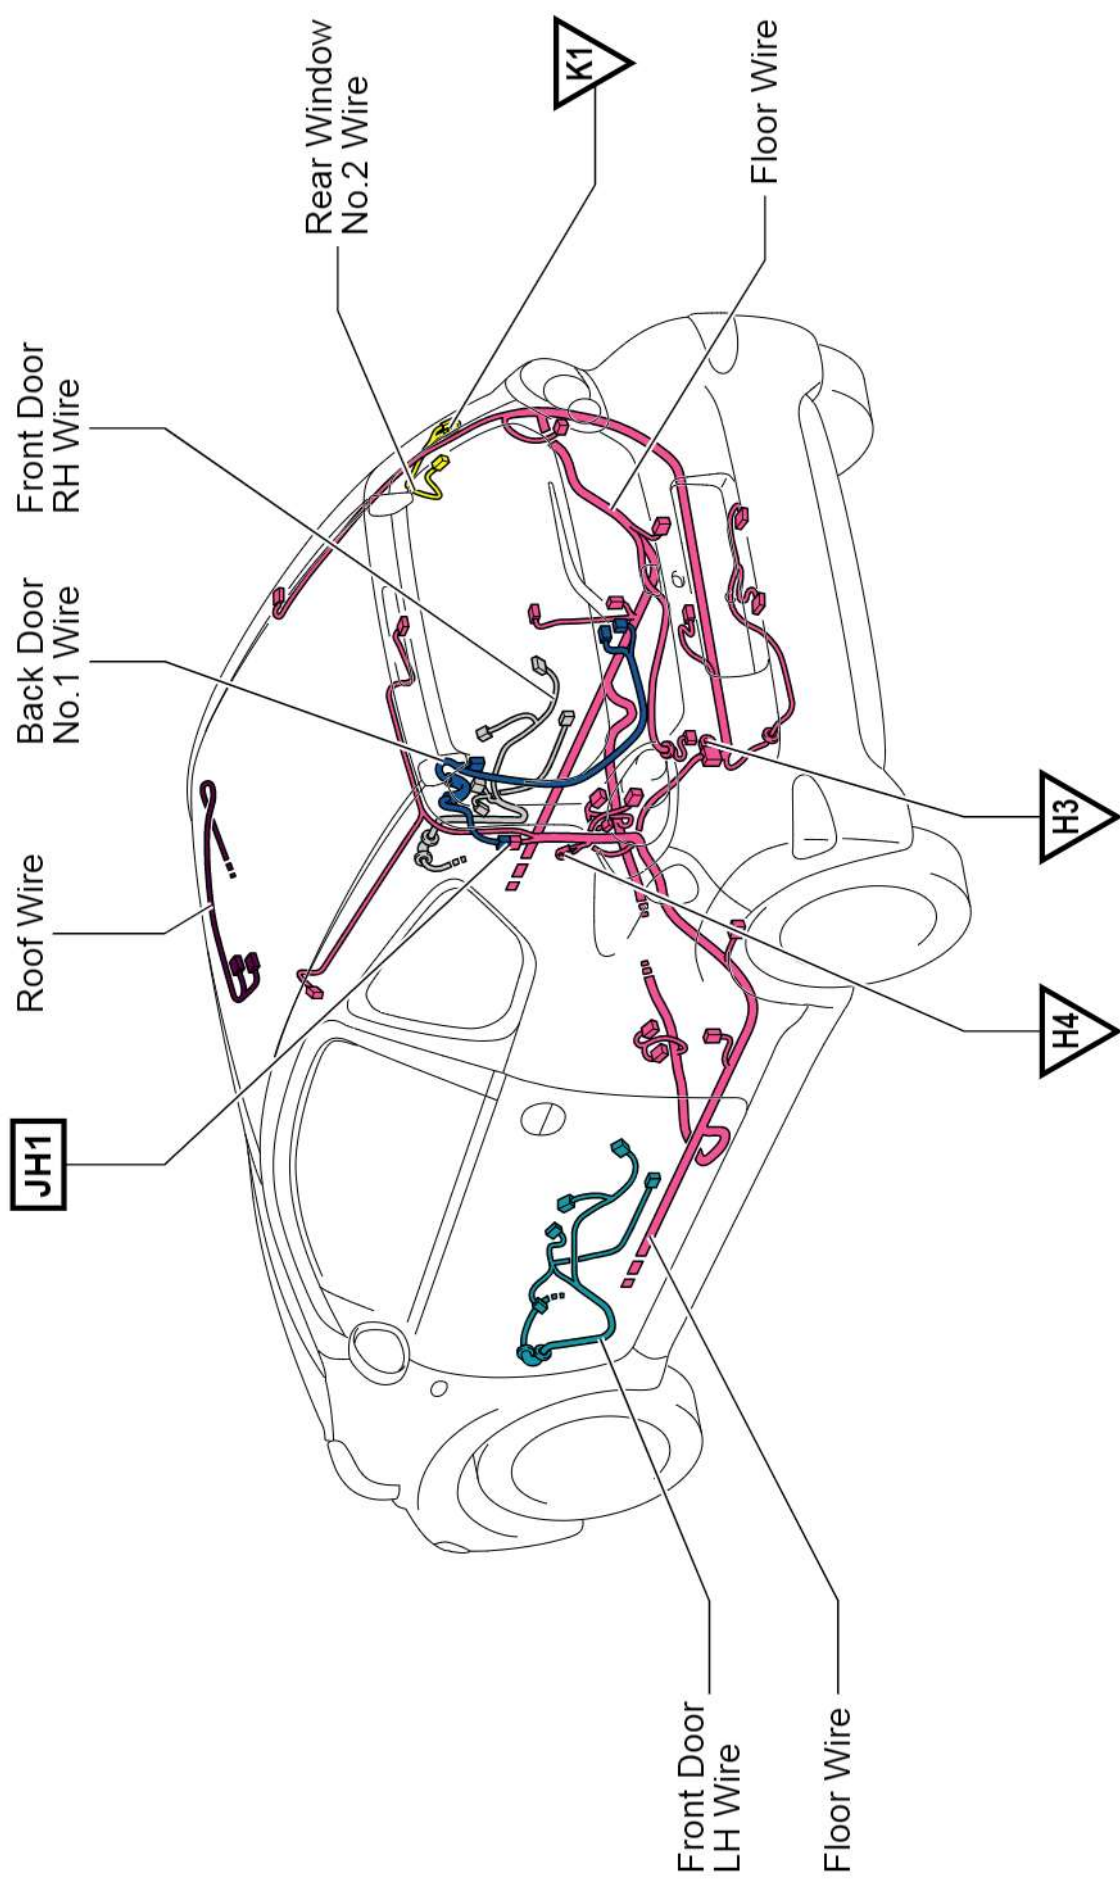

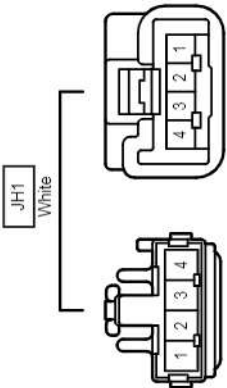

Position of Parts in Body <LHD 5-Door>

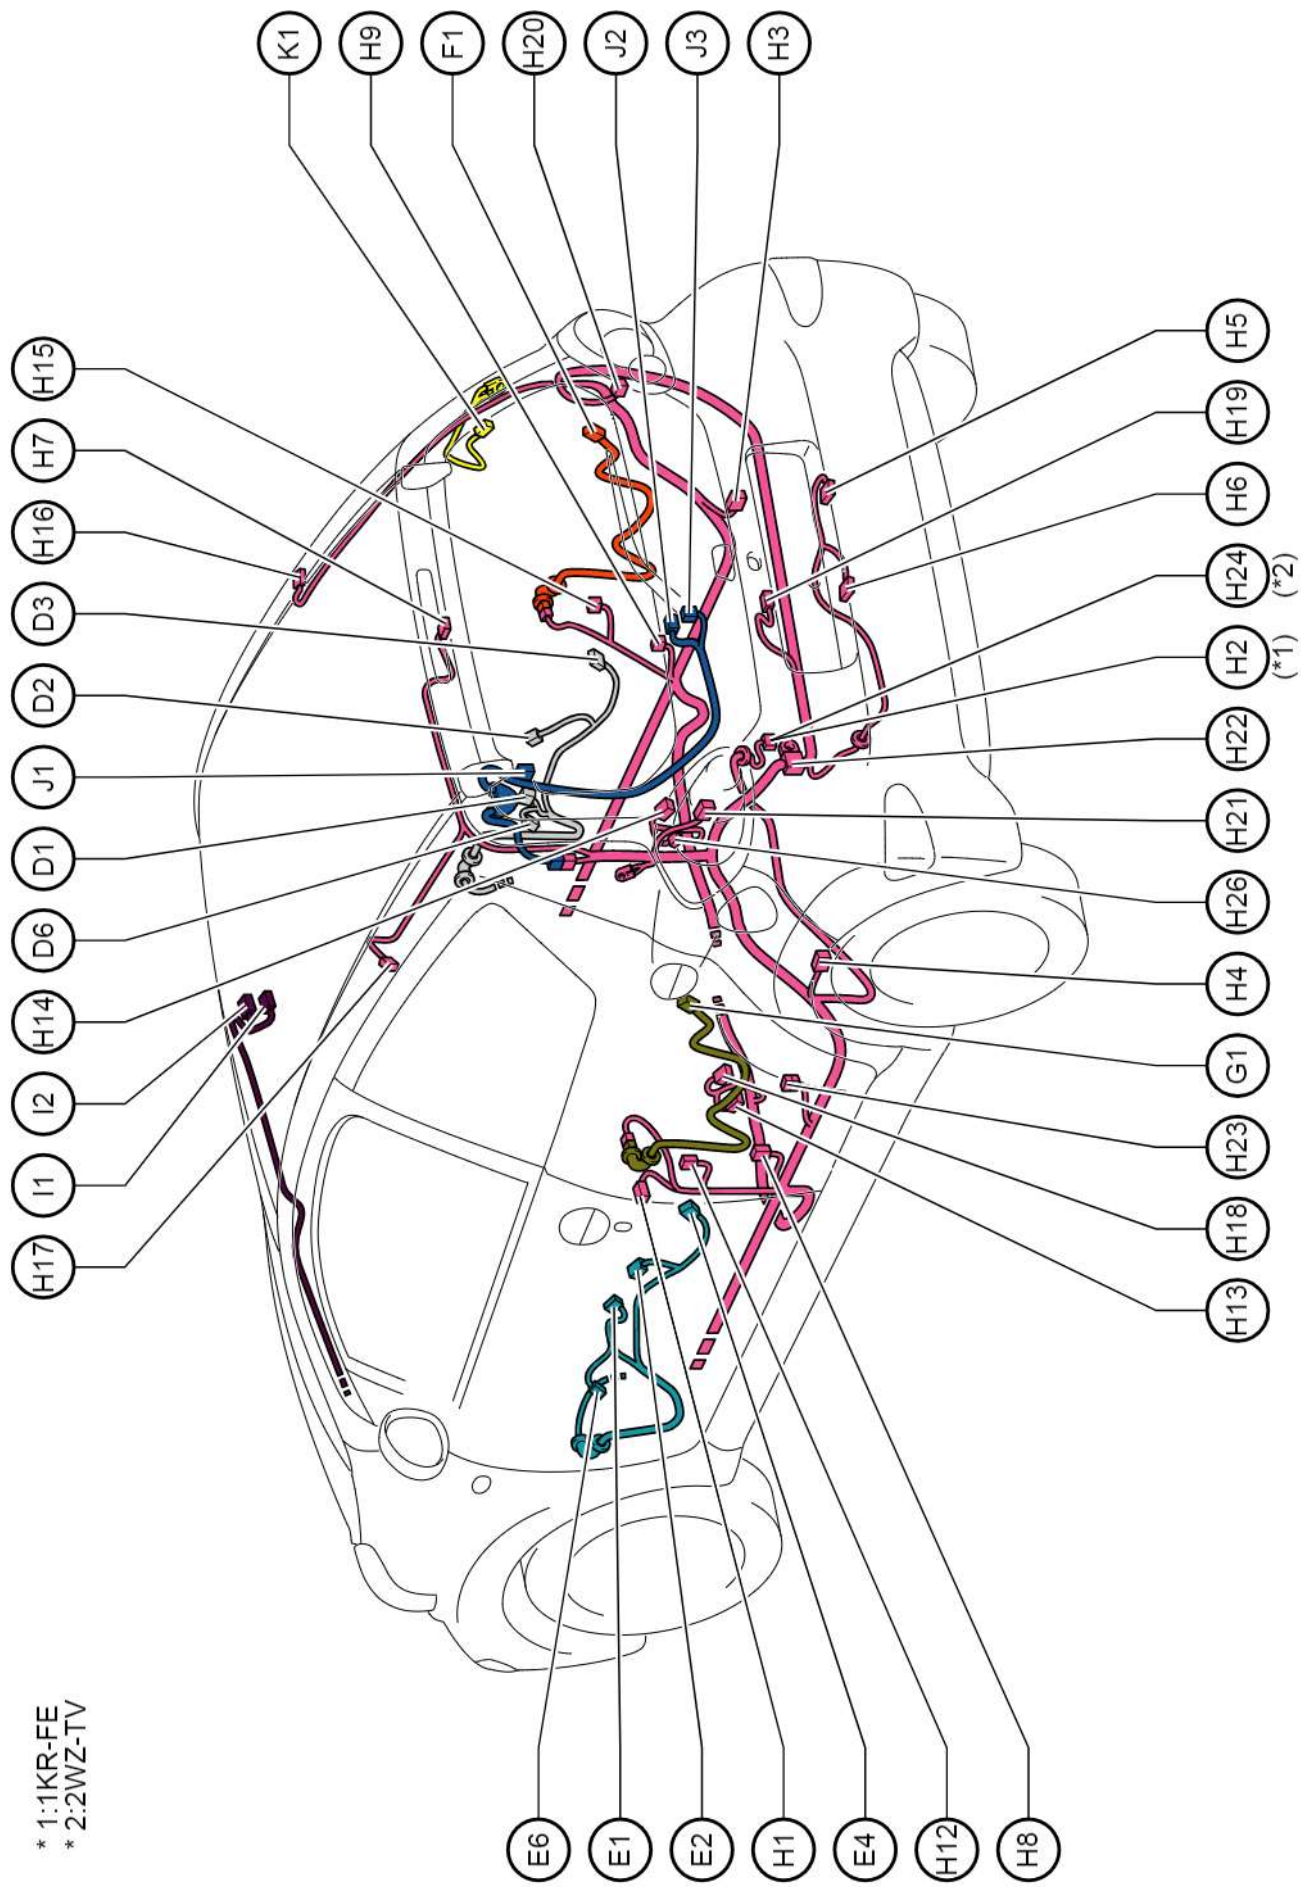


D	1	Power Window SW (Front RH)
D	2	Power Window Regulator Motor (Front RH)
D	3	Door Lock Assembly (Front Passenger's Side)
D	6	No.3 Rear Speaker Assembly RH
E	1	Power Window SW (Front LH)
E	2	Power Window Regulator Motor (Front LH)
E	4	Door Lock Assembly (Driver's Side)
E	6	No.3 Rear Speaker Assembly LH
F	1	Door Lock Assembly (Rear RH)
G	1	Door Lock Assembly (Rear LH)
H	1	Door Courtesy SW
H	2	Fuel Suction Pump and Gage Assembly
H	3	Speed Sensor (Rear RH)
H	4	Speed Sensor (Rear LH)
H	5	License Plate Lamp (RH)
H	6	License Plate Lamp (LH)
H	7	Center Stop Lamp
H	8	Front Seat Outer Belt (LH)
H	9	Front Seat Outer Belt (RH)
H	12	Side Airbag Sensor (LH)
H	13	Side Airbag Squib (LH)
H	14	Side Airbag Squib (RH)
H	15	Side Airbag Sensor (RH)
H	16	Curtain Shield Airbag Squib (RH)
H	17	Curtain Shield Airbag Squib (LH)
H	18	Front Seat Inner Belt
H	19	Back Door Lock Assembly
H	20	Rear Combination Lamp (RH)
H	21	Rear Combination Lamp (LH)
H	22	Junction Connector
H	23	Junction Connector
H	24	Fuel Sender Gage
H	26	Front Seat Inner Belt Assembly








I	1	Room Lamp
I	2	Telephone Microphone Assembly

J	1	Rear Window Defogger
J	2	Rear Wiper Motor
J	3	Rear Window Defogger


Position of Parts in Body <LHD 5-Door>

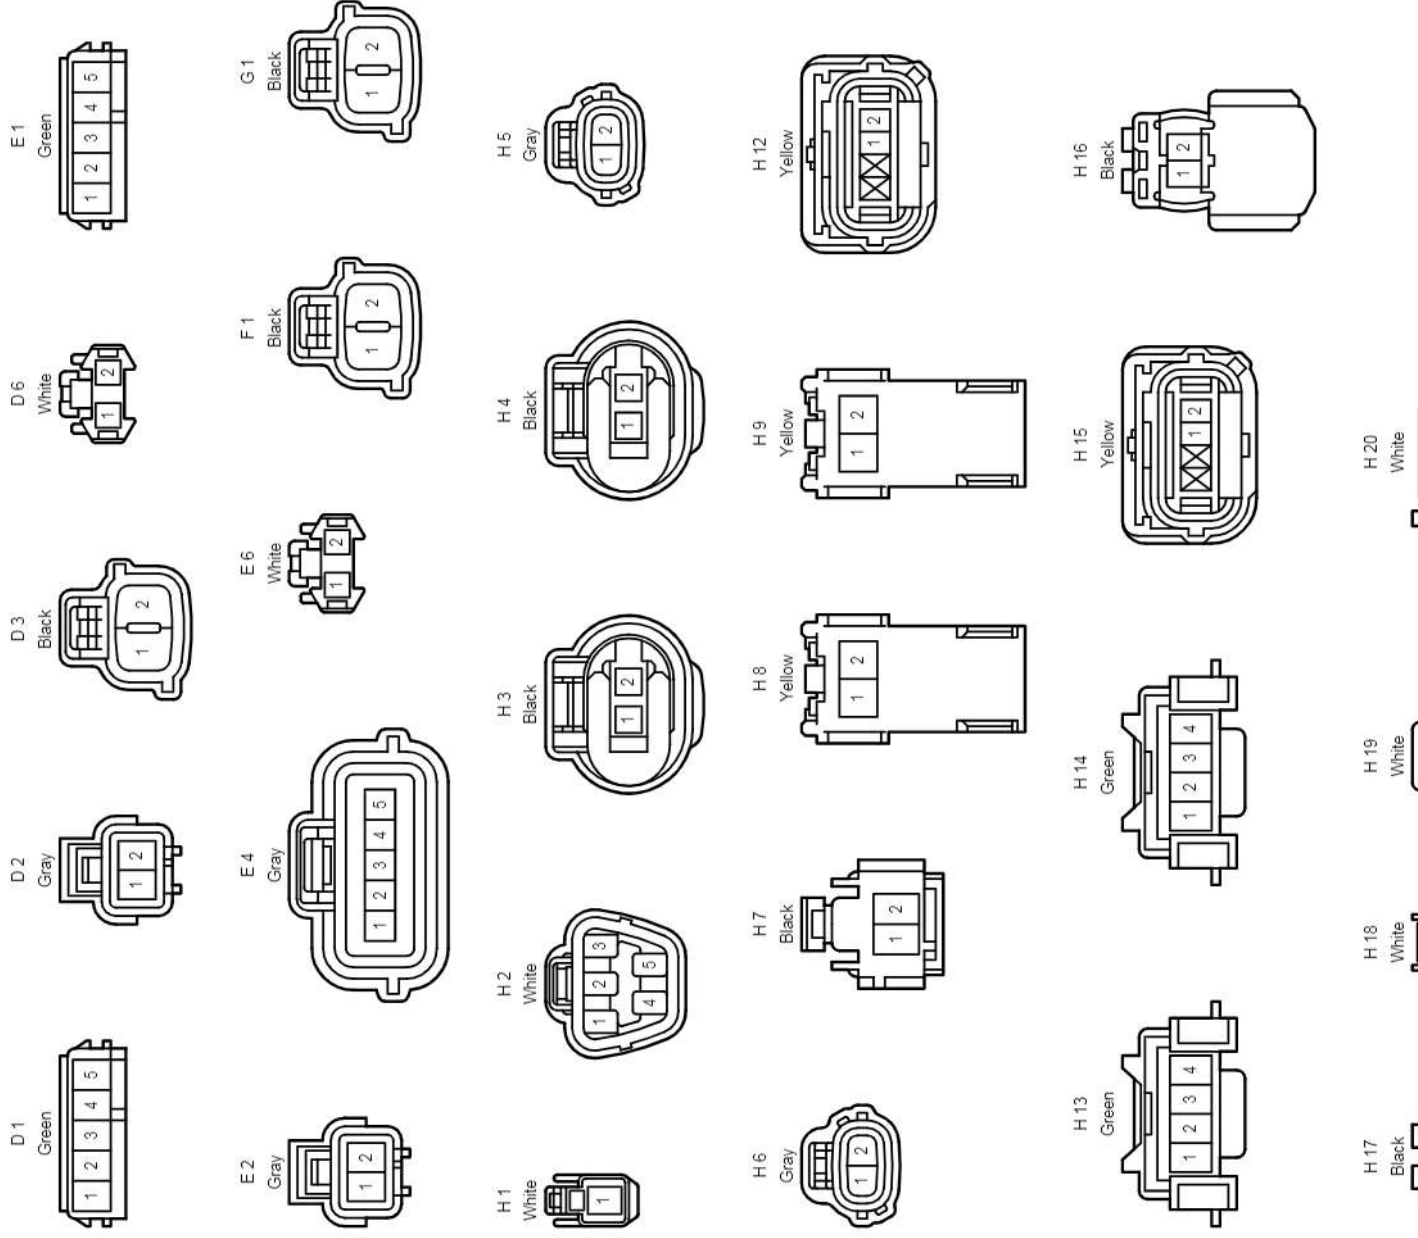


cardiagn.com

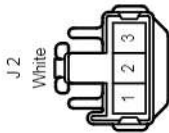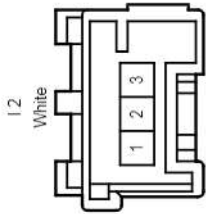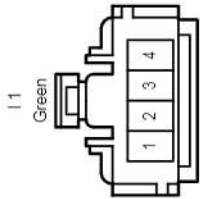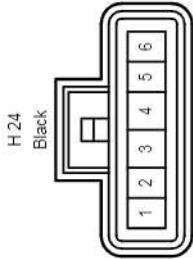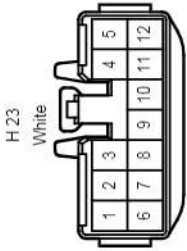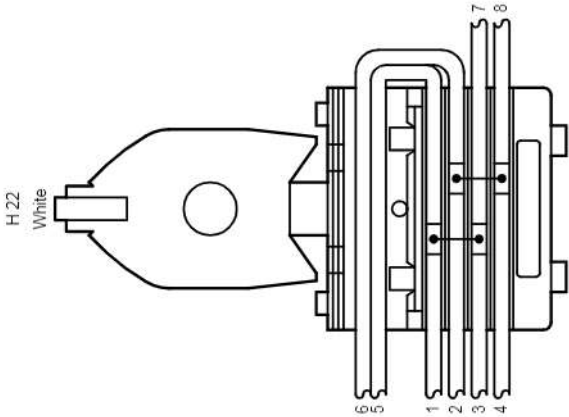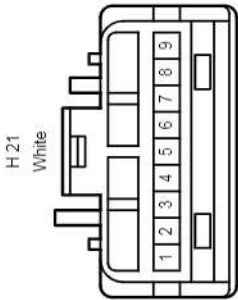


Wire and Wire , Ground Points in Body <LHD 5-Door>

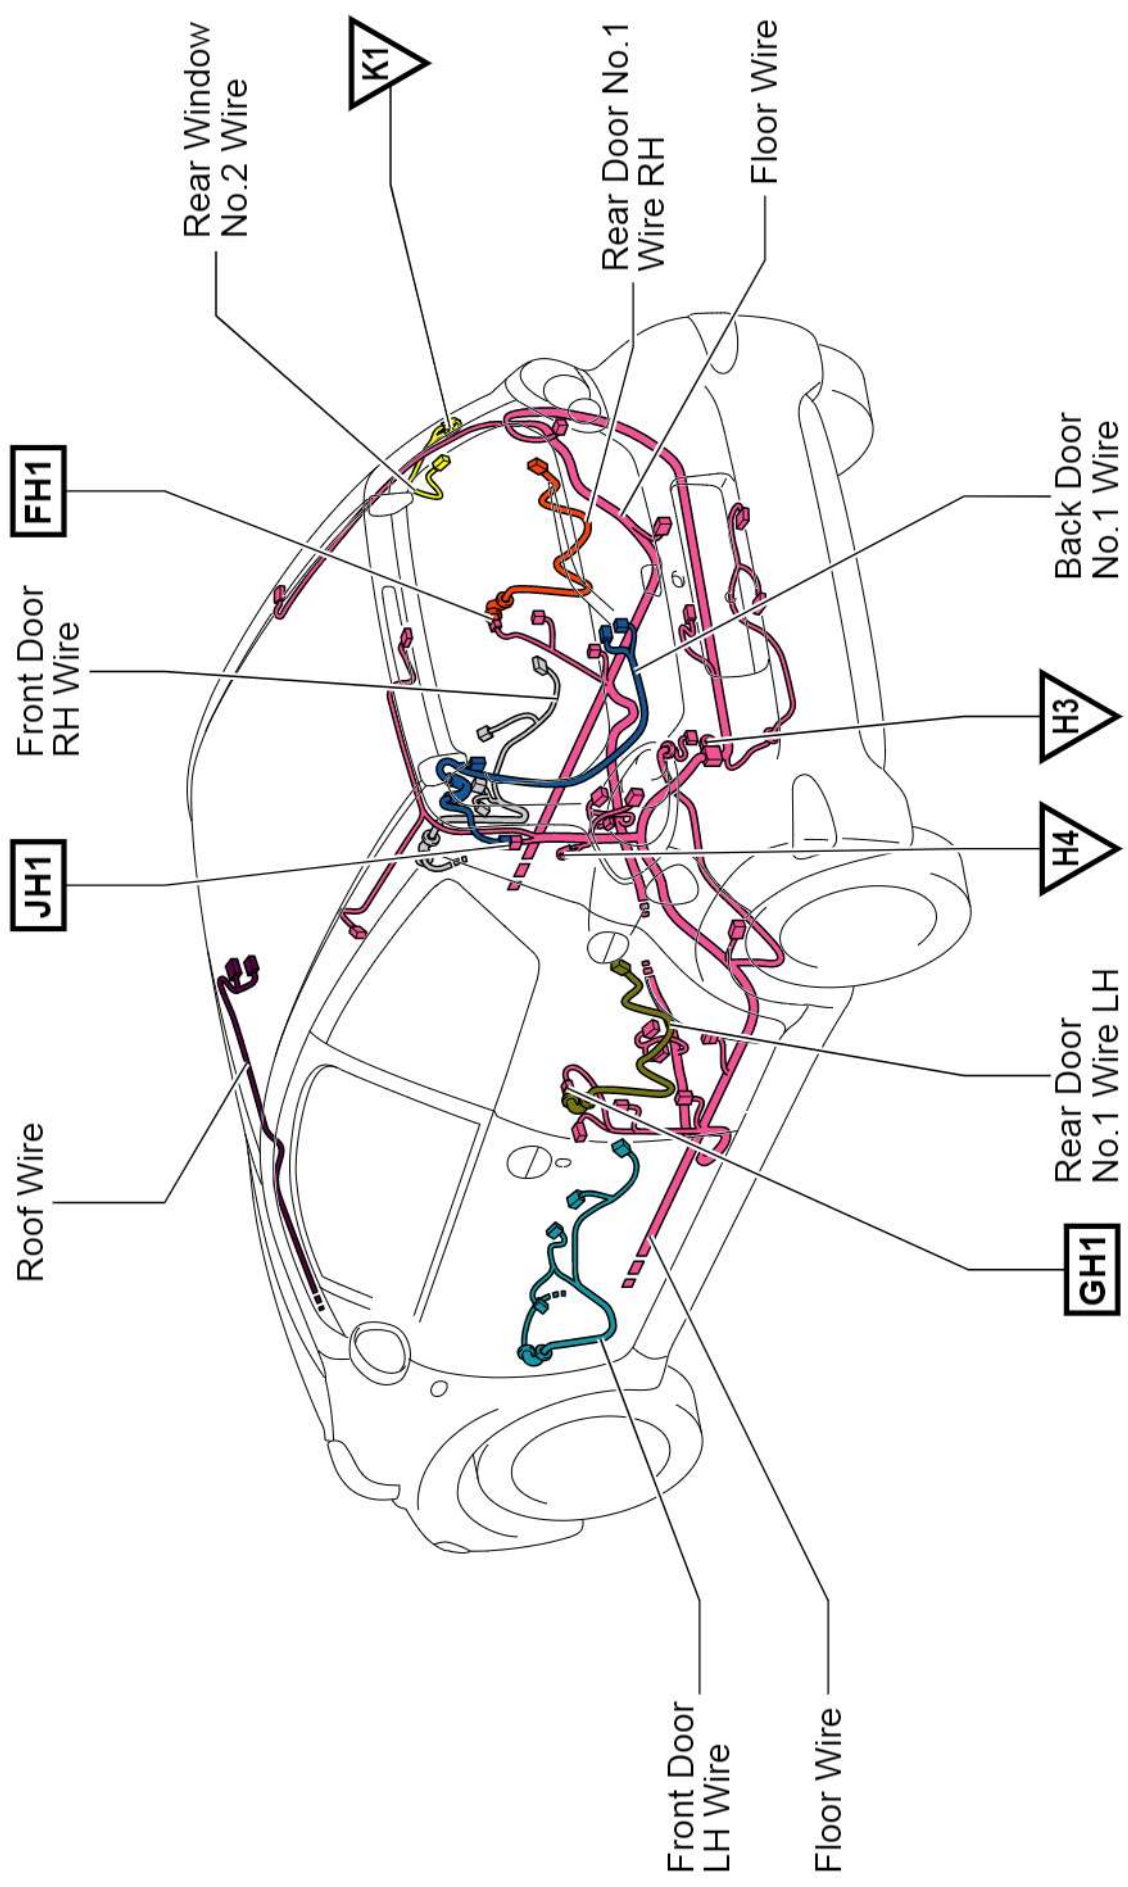

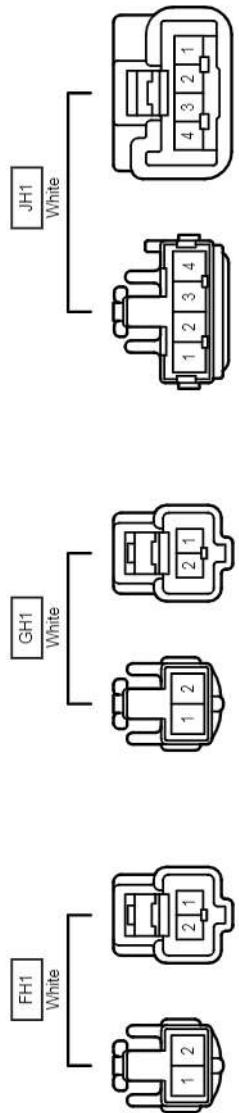

Position of Parts in Body <RHD 5-Door>

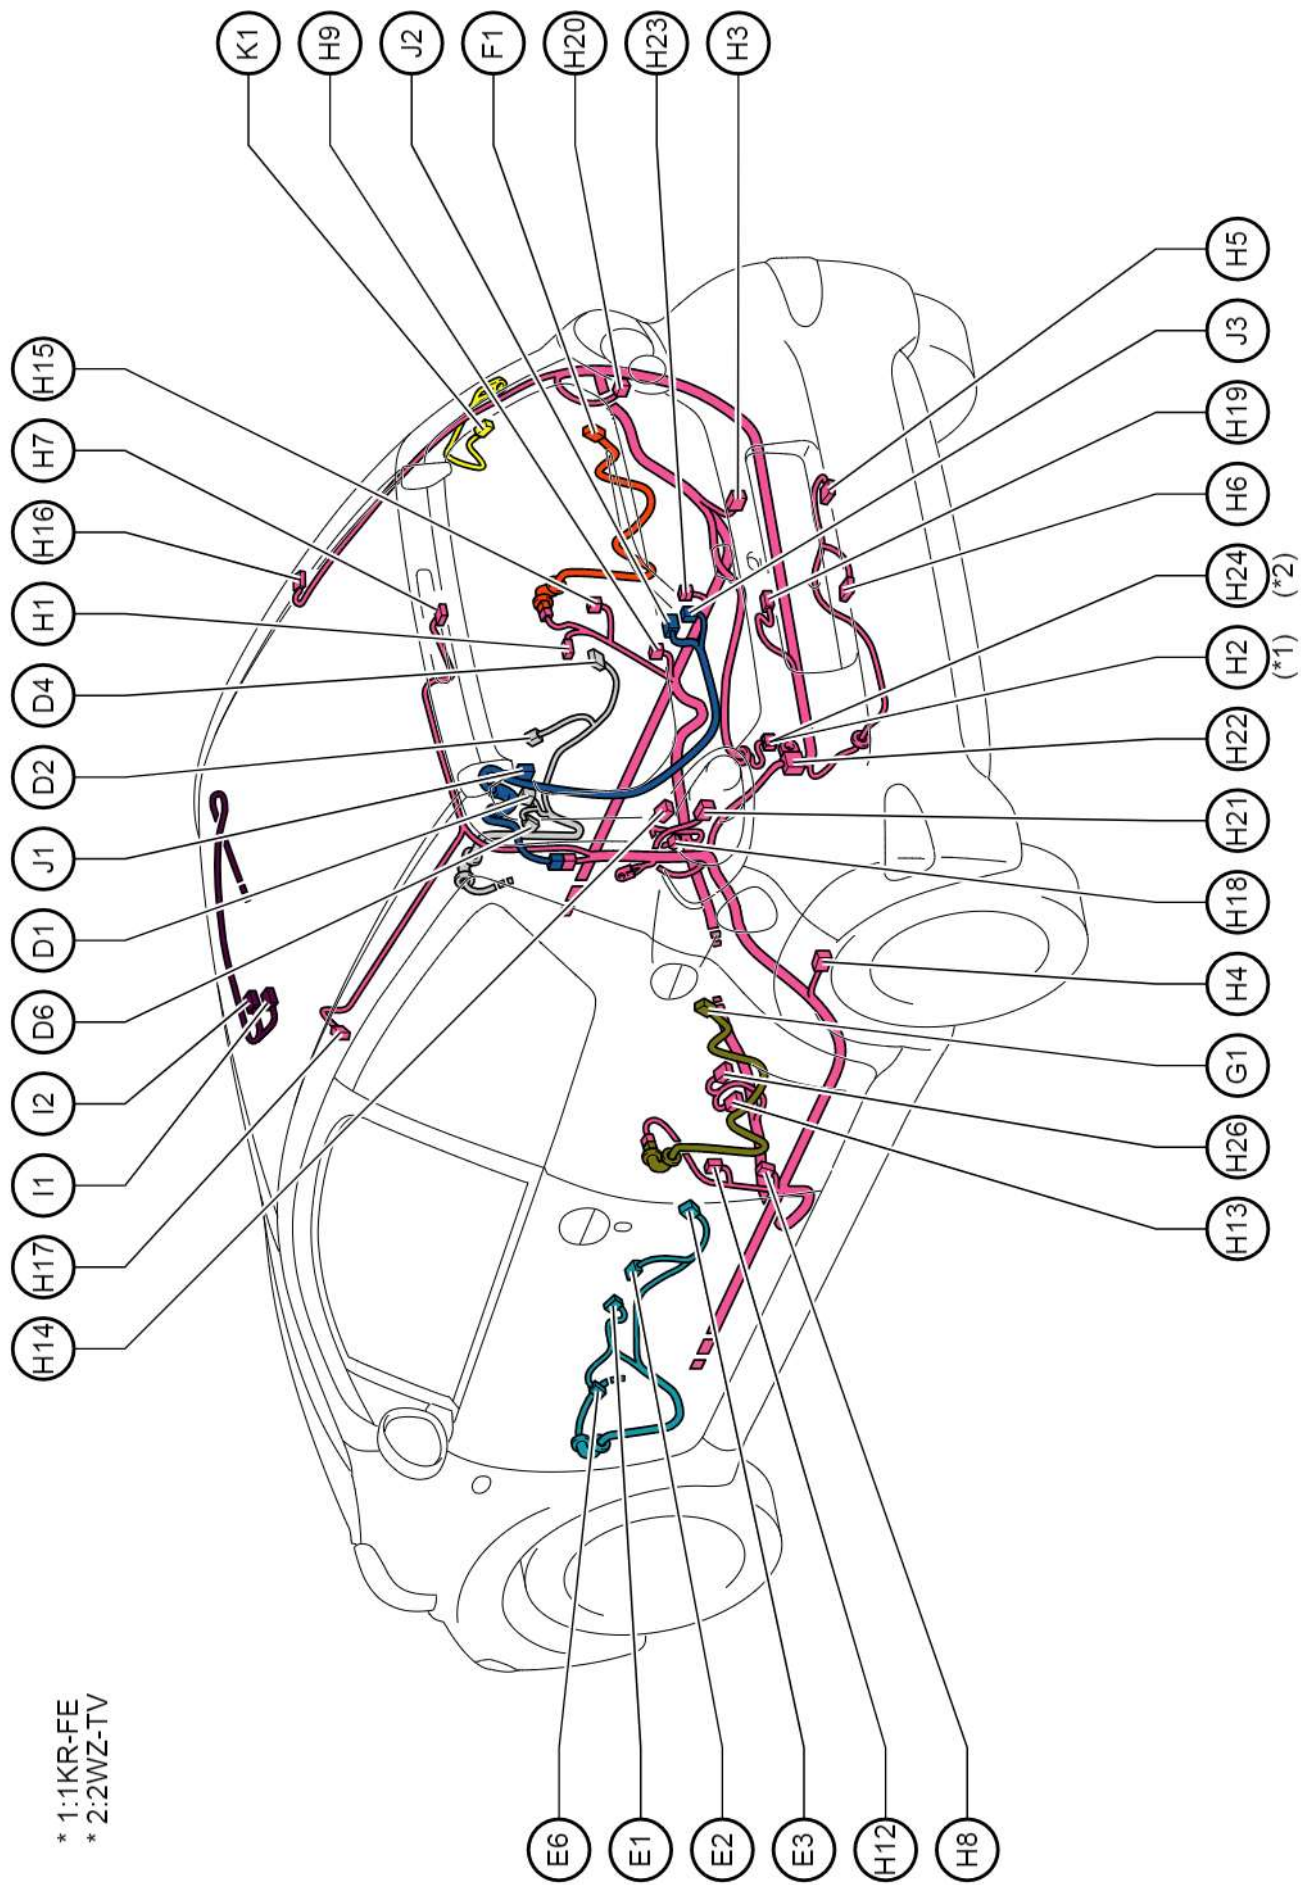
























* 1:1KR-FE
* 2:2WZ-TV








D	1	Power Window SW (Front RH)
D	2	Power Window Regulator Motor (Front RH)
D	4	Door Lock Assembly (Driver's Side)
D	6	No.3 Rear Speaker Assembly RH
E	1	Power Window SW (Front LH)
E	2	Power Window Regulator Motor (Front LH)
E	3	Door Lock Assembly (Front Passenger's Side)
E	6	No.3 Rear Speaker Assembly LH
F	1	Door Lock Assembly (Rear RH)
G	1	Door Lock Assembly (Rear LH)
H	1	Door Courtesy SW
H	2	Fuel Suction Pump and Gage Assembly
H	3	Speed Sensor (Rear RH)
H	4	Speed Sensor (Rear LH)
H	5	License Plate Lamp (RH)
H	6	License Plate Lamp (LH)
H	7	Center Stop Lamp
H	8	Front Seat Outer Belt (LH)
H	9	Front Seat Outer Belt (RH)
H	12	Side Airbag Sensor (LH)
H	13	Side Airbag Squib (LH)
H	14	Side Airbag Squib (RH)
H	15	Side Airbag Sensor (RH)
H	16	Curtain Shield Airbag Squib (RH)
H	17	Curtain Shield Airbag Squib (LH)
H	18	Front Seat Inner Belt
H	19	Back Door Lock Assembly
H	20	Rear Combination Lamp (RH)
H	21	Rear Combination Lamp (LH)
H	22	Junction Connector
H	23	Junction Connector
H	24	Fuel Sender Gage
H	26	Front Seat Inner Belt Assembly

I	1	Room Lamp
I	2	Telephone Microphone Assembly


J	1	Rear Window Defogger
J	2	Rear Wiper Motor
J	3	Rear Window Defogger

    
Position of Parts in Body <RHD 5-Door>

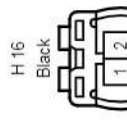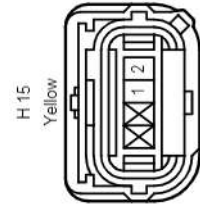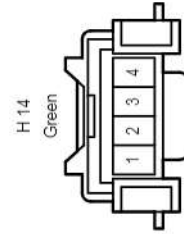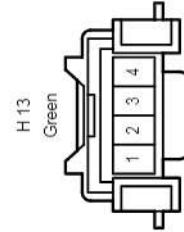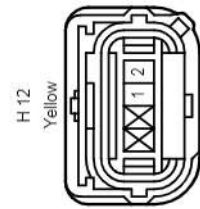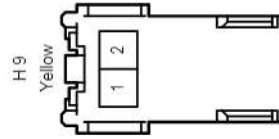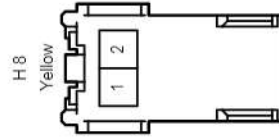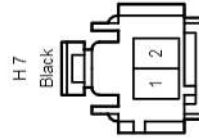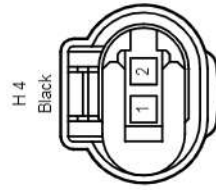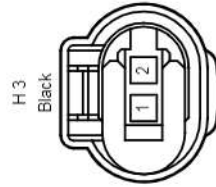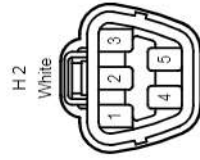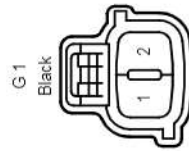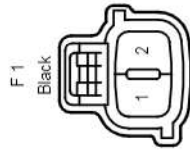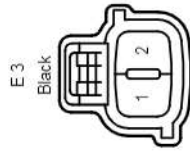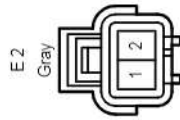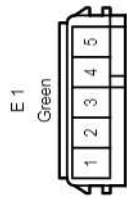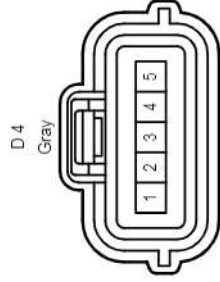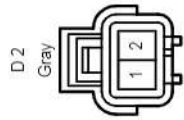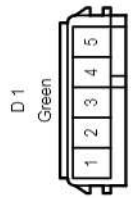

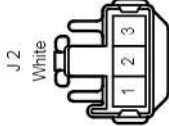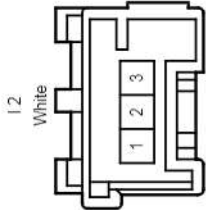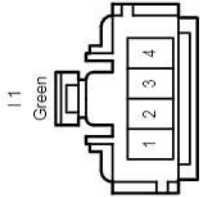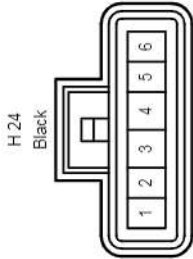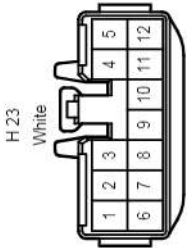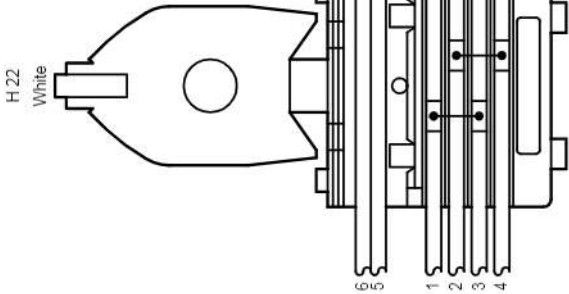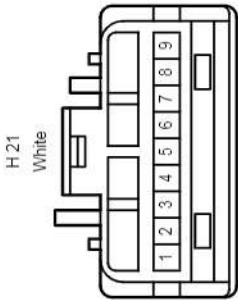


Wire and Wire , Ground Points in Body <RHD 5-Door>

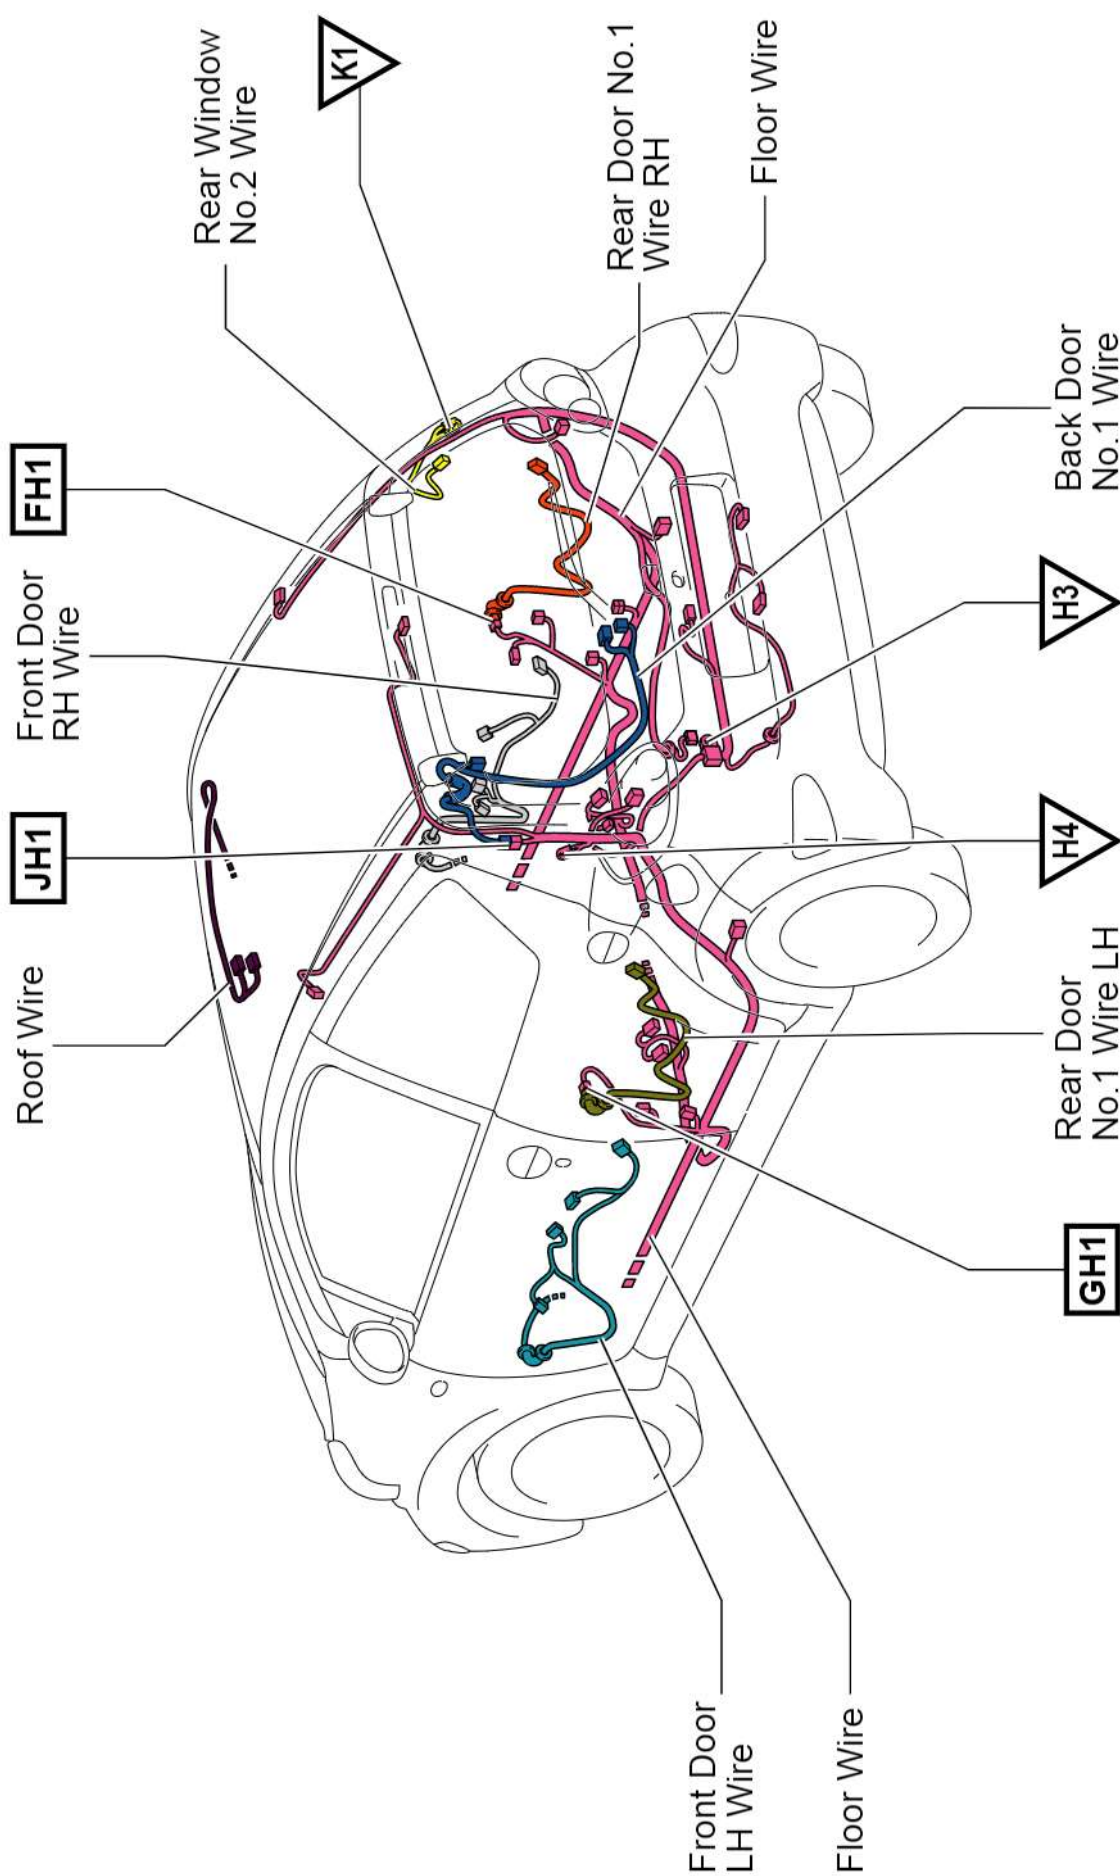


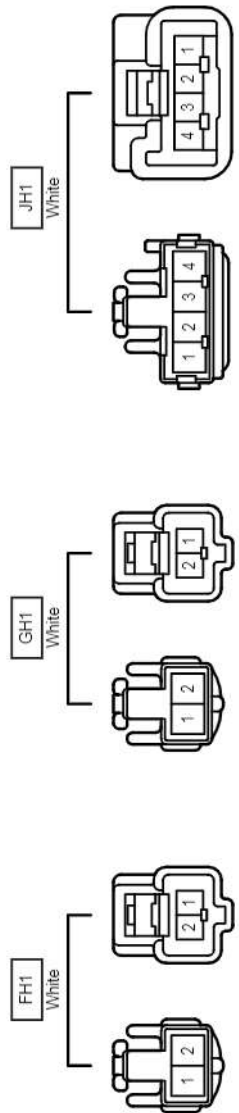

Ground Points in Instrument Panel <LHD>

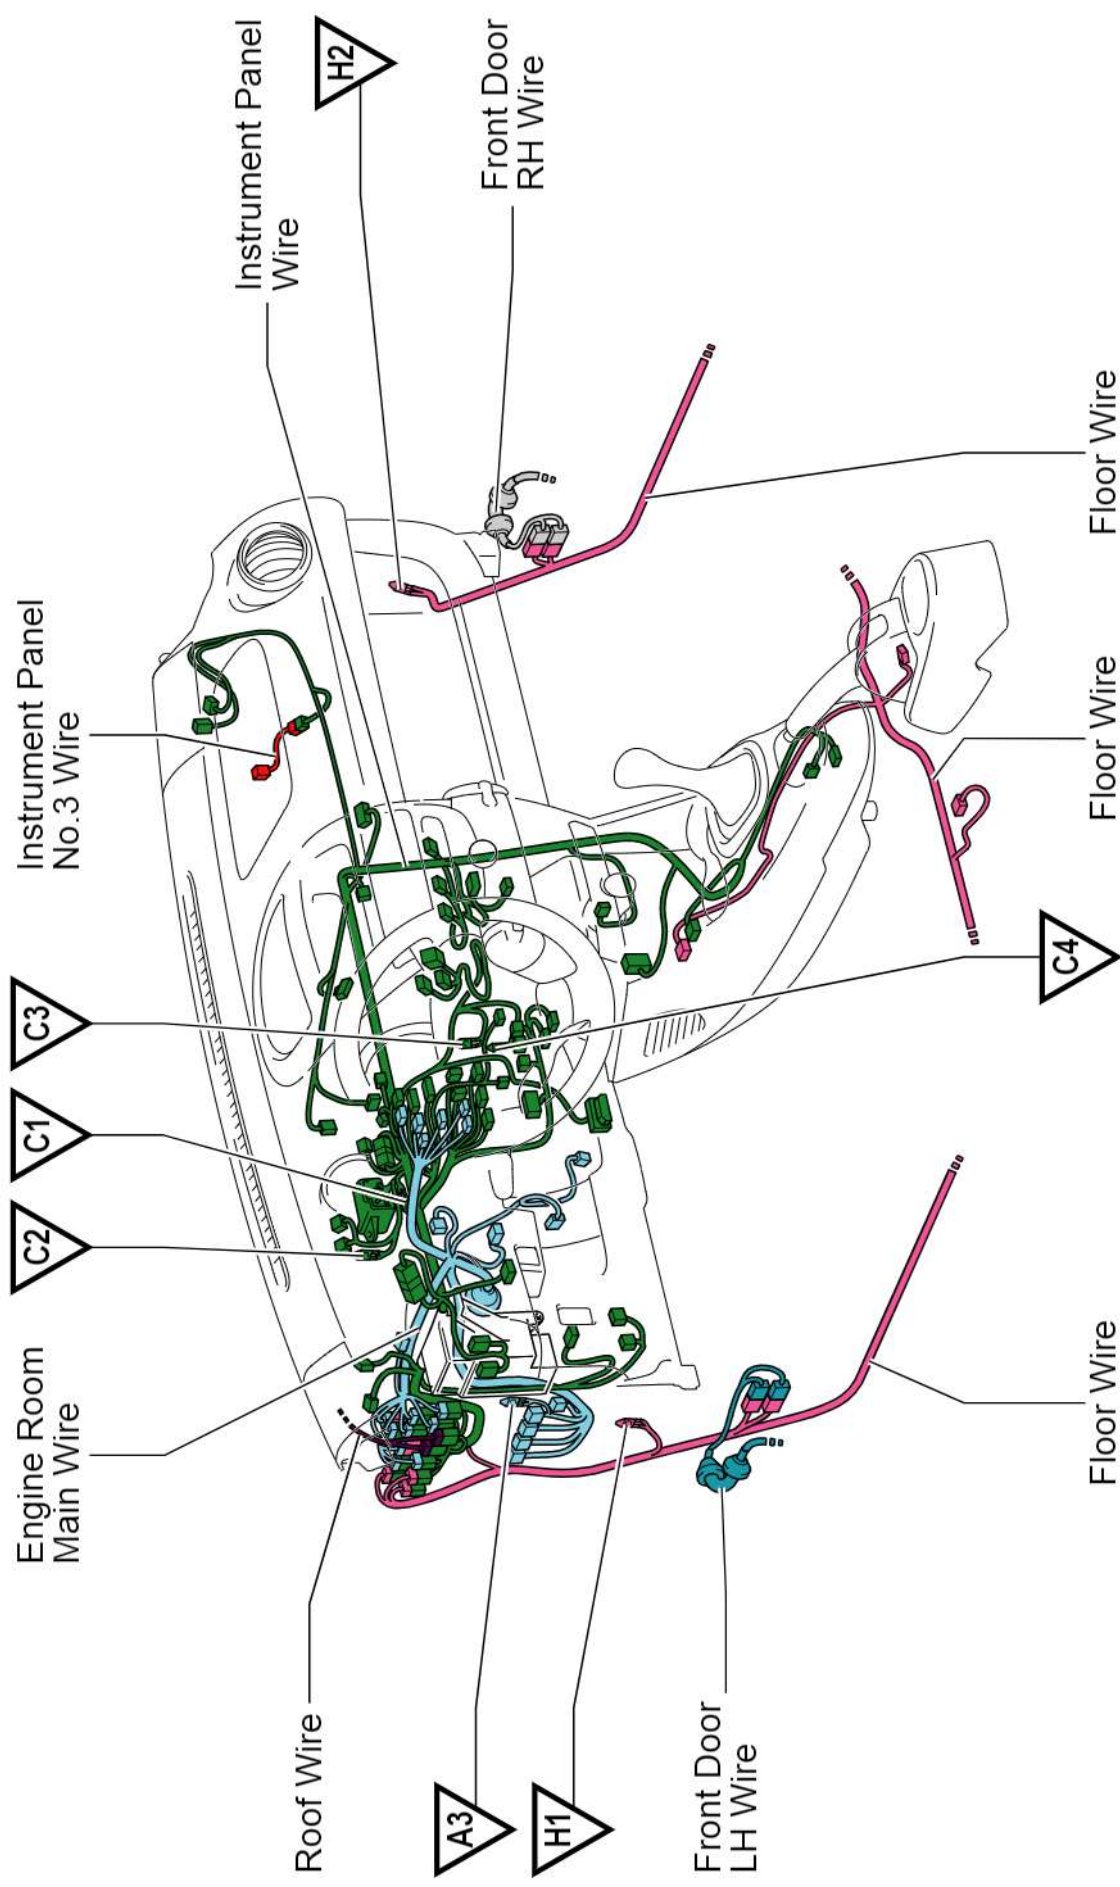


Position of Parts in Instrument Panel <LHD>

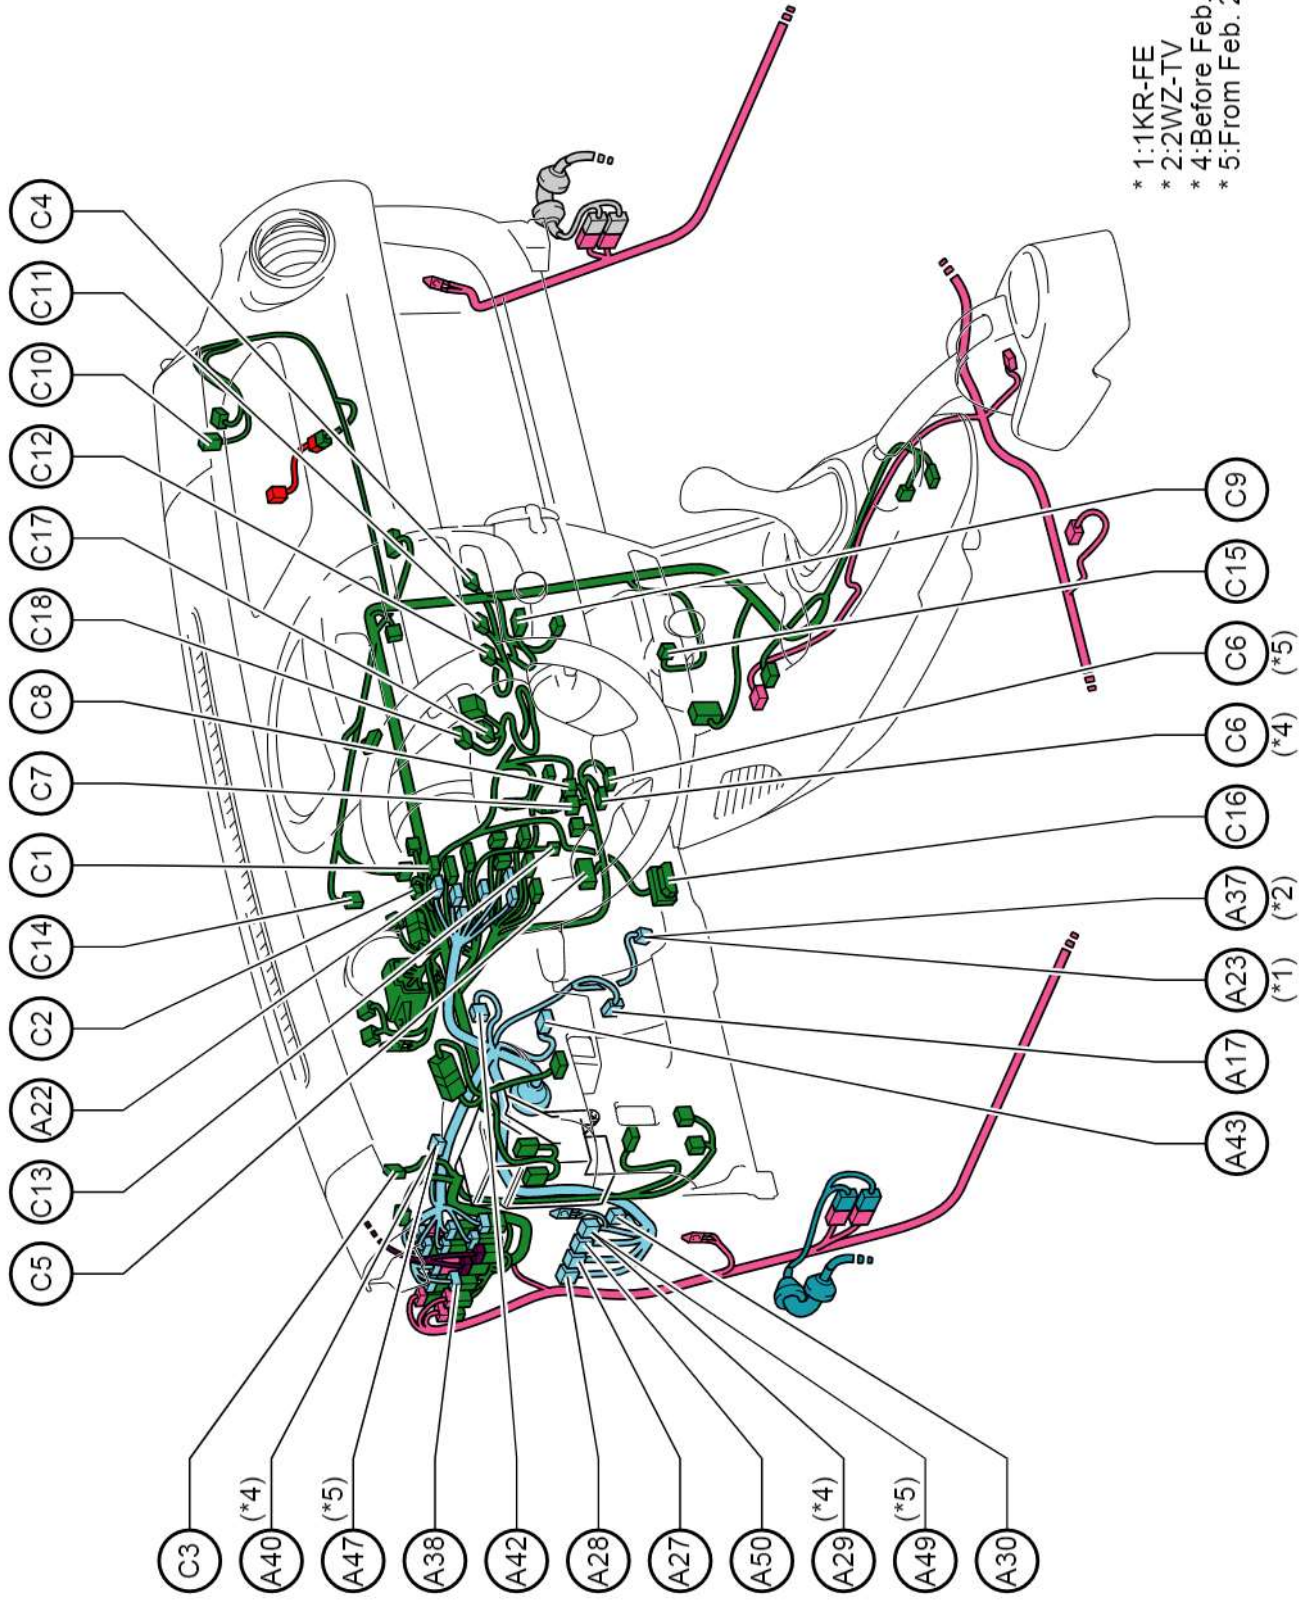


A 17	Stop Lamp SW
A 17	Stop Lamp SW
A 22	Combination Meter
A 23	Accelerator Position Sensor
A 27	Multi-mode Manual Transmission ECU
A 28	Multi-mode Manual Transmission ECU
A 29	Multi-mode Manual Transmission ECU
A 30	Junction Connector
A 37	Accelerator Position Sensor
A 38	Junction Connector
A 40	Skid Control Resistor
A 42	Junction Connector
A 43	Clutch Start Switch Assembly
A 47	Skid Control Resistor
A 49	Multi-mode Manual Transmission ECU
A 50	Multi-mode Manual Transmission ECU
C 1	Combination Meter
C 2	Tachometer
C 3	Speaker (Front LH)
C 4	A/C SW
C 5	Combination SW
C 6	Spiral Cable
C 7	Combination SW
C 8	Combination SW
C 9	Blower SW
C 10	Speaker (Front RH)
C 11	Hazard Warning Signal SW
C 12	Rear Window Defogger SW
C 13	Ignition SW
C 14	A/C Amplifier
C 15	Power Outlet Socket
C 16	DLC3
C 17	Radio Receiver Assembly
C 18	Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

A 17
Black

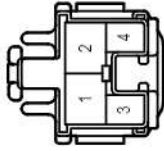


A 17
White

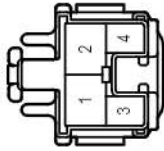


(1KR-FE M/T w/o VSC)

(Except 1KR-FE M/T w/o VSC)


A 22
White

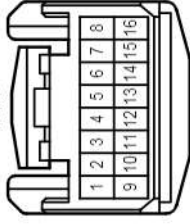


A 23
Black

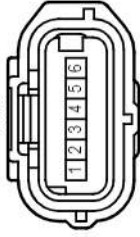


A 27
White

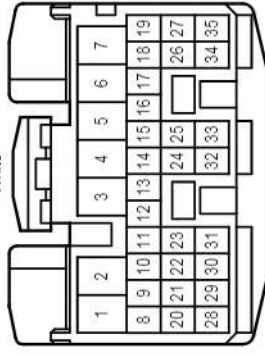


A 28
White

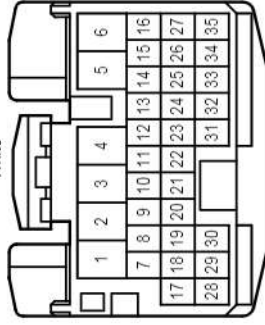


A 29
White

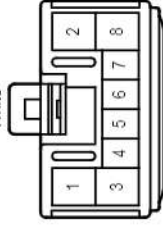


A 30
White

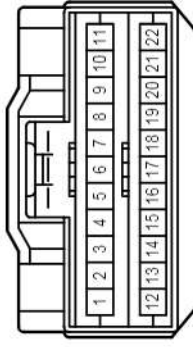

A 37
Black

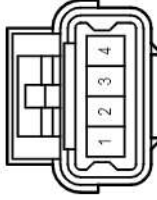


A 38
Blue

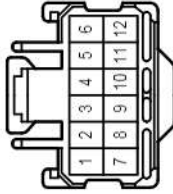

A 40
White



A 42
White

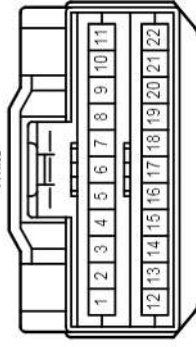


A 43
Black




A 47
White




A 49
White

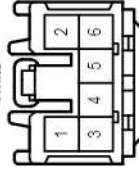


A 50
White

 


C 1
White

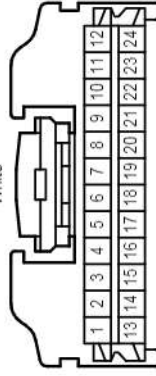


C 2
White










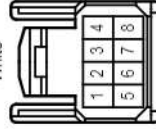


C 3
White

 


C 4
Black

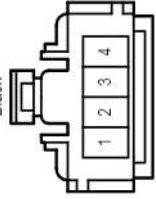







 
 
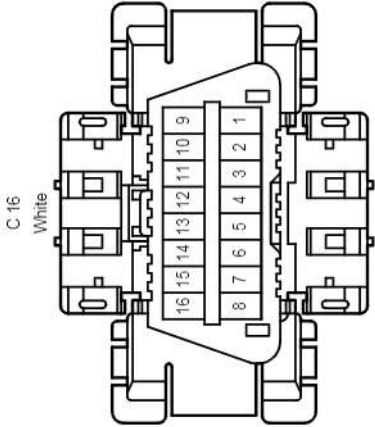
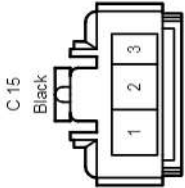
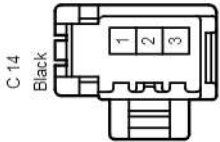
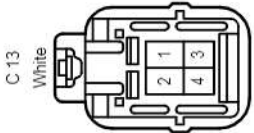
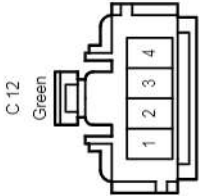
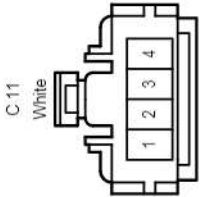
 
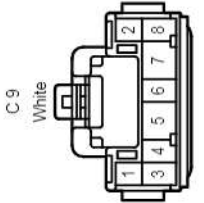


Position of Parts in Instrument Panel <LHD>

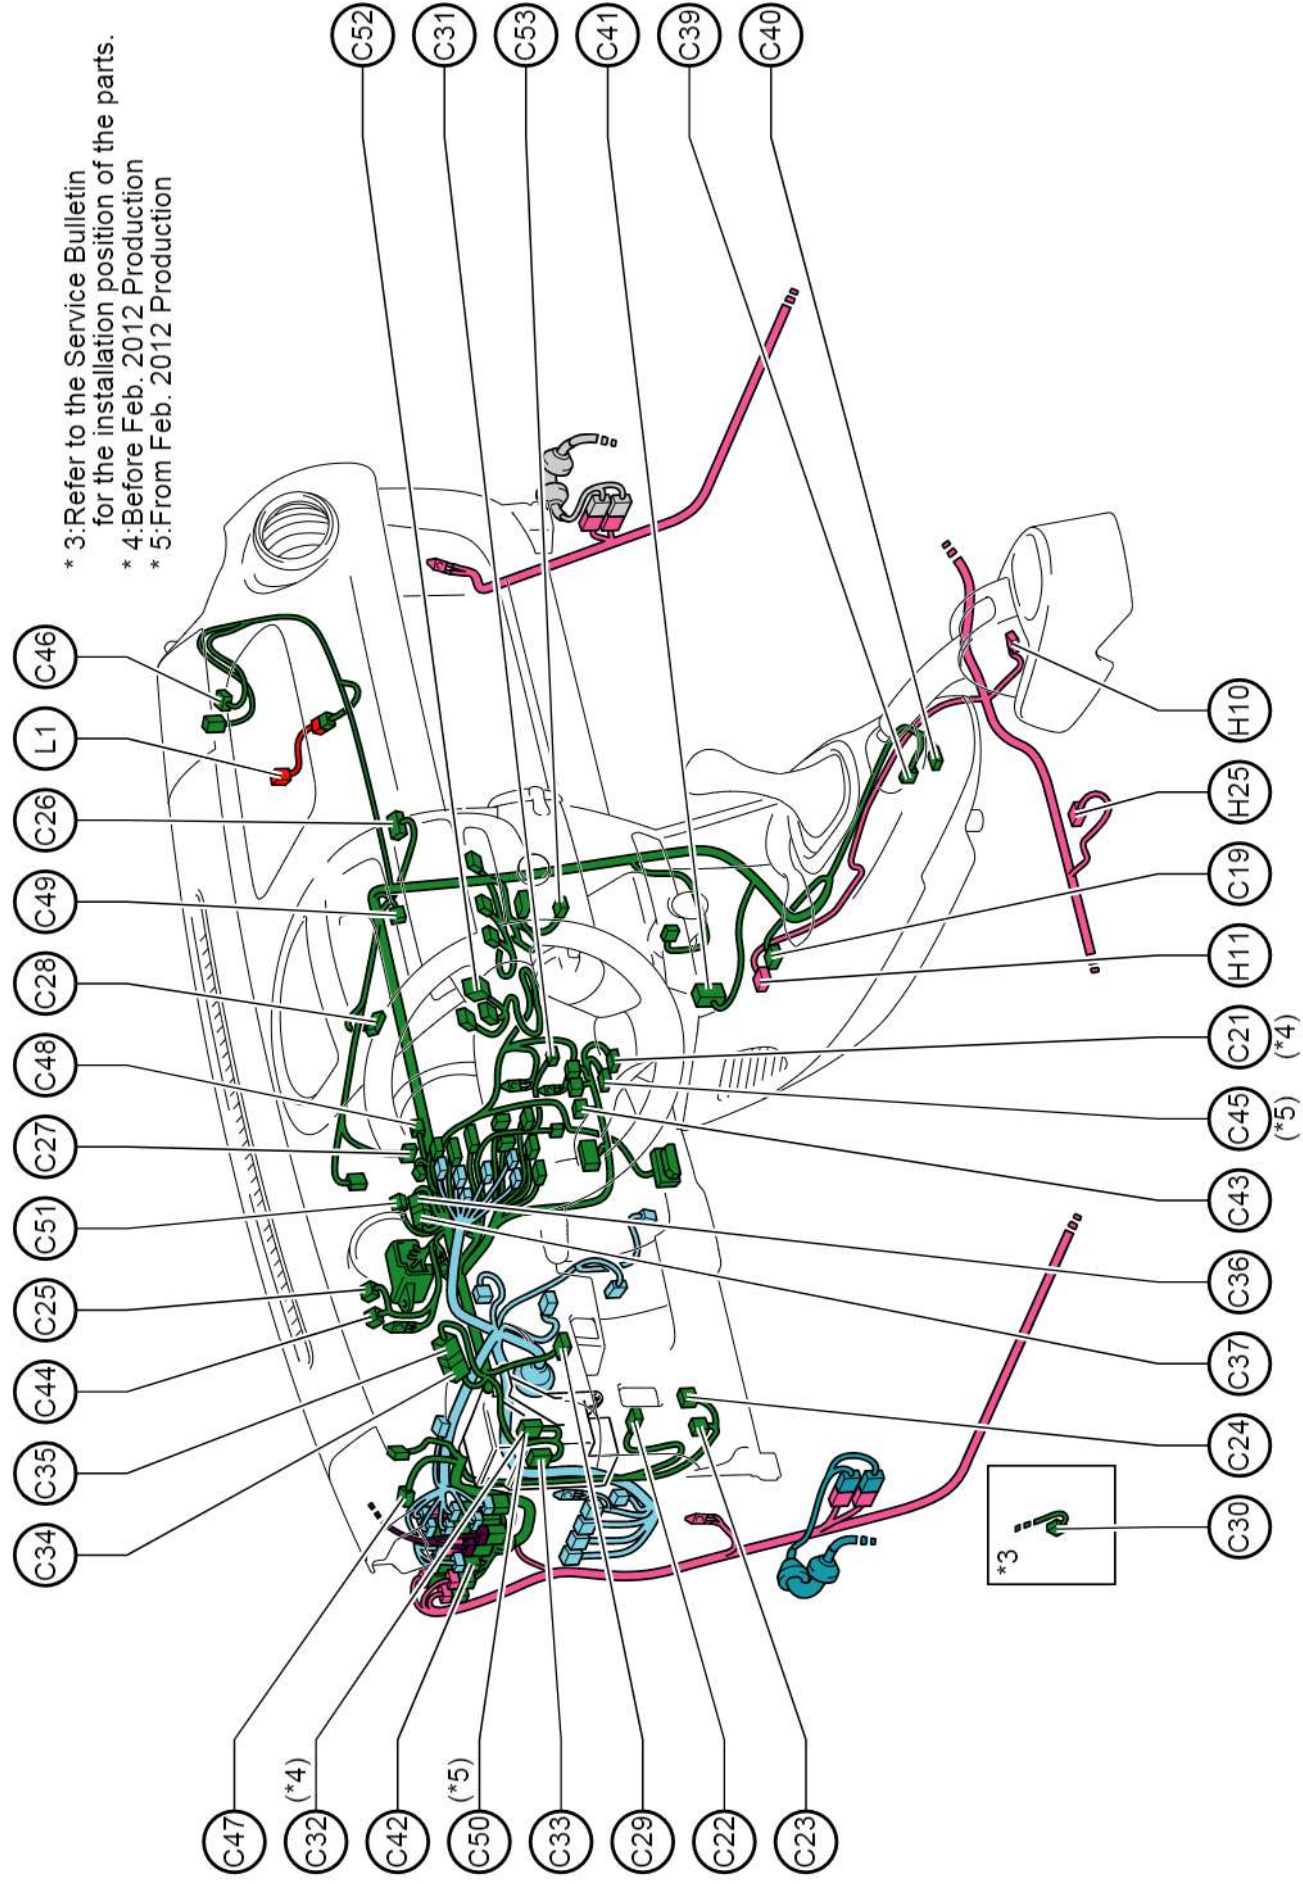












C 19	Airbag Sensor Assembly Center
C 21	Airbag Squib (Steering Wheel Pad)
C 22	Headlamp Leveling SW
C 23	Power Steering ECU
C 24	Power Steering ECU
C 25	Door Control ECU with Receiver
C 26	Running Light Relay
C 27	Blower Motor
C 28	Blower Resistor
C 29	Airbag Cut Off SW
C 30	Transponder Key ECU
C 31	Transponder Key Coil
C 32	Tail Lamp Relay
C 33	Power Window Relay
C 34	Junction Connector
C 35	Junction Connector
C 36	Junction Connector
C 37	Junction Connector
C 39	Shift Lever Position Sensor
C 40	Transmission Shift Main SW
C 41	PTC Heater
C 42	Junction Connector
C 43	Steering Sensor
C 44	VSC Warning Buzzer
C 45	Airbag Squib (Steering Wheel Pad)
C 46	No.1 Front Speaker Assembly RH
C 47	No.1 Front Speaker Assembly LH
C 48	Option Connector (Dock Connector)
C 49	Fog Lamp Relay
C 50	Rear Fog Lamp Relay
C 51	Junction Connector
C 52	Radio Receiver Assembly
C 53	No.1 Stereo Jack Adapter Assembly
H 10	Parking Brake SW
H 11	Airbag Sensor Assembly Center
H 25	Yaw Rate Sensor
H 25	Yaw Rate Sensor
L 1	Airbag Squib (Front Passenger's Airbag Assembly)

Position of Parts in Instrument Panel <LHD>

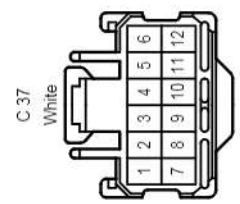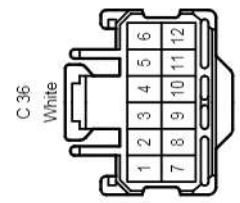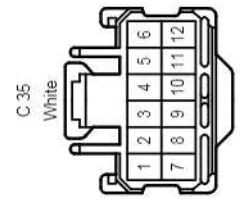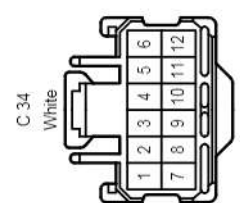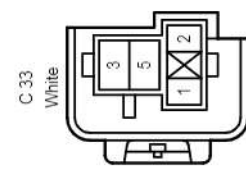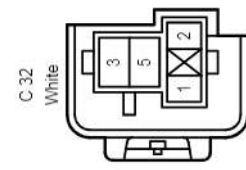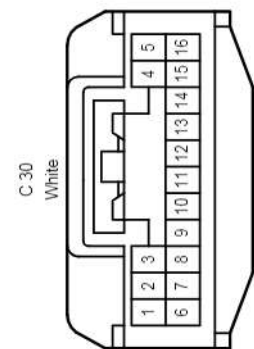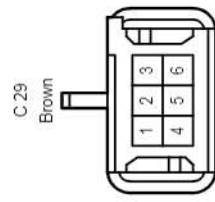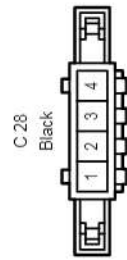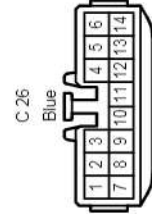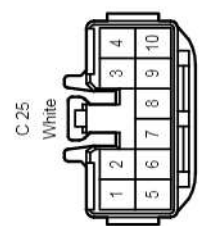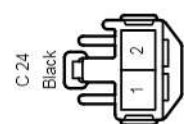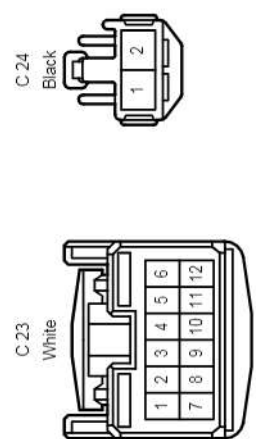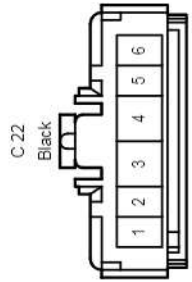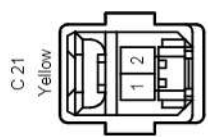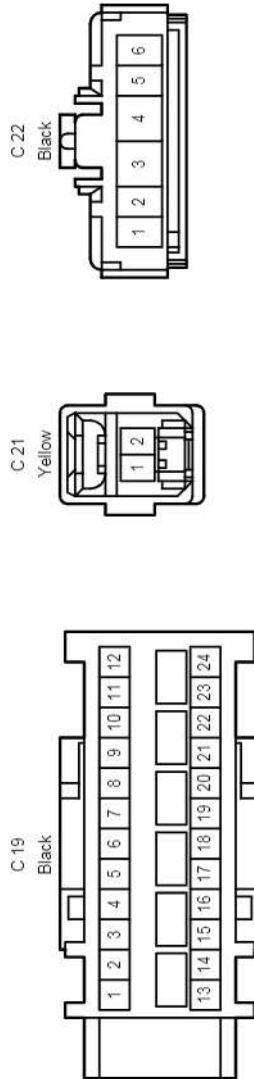

cardiagn.com

 
Position of Parts in Instrument Panel <LHD>

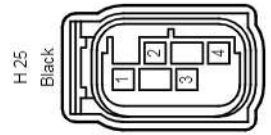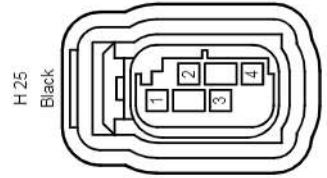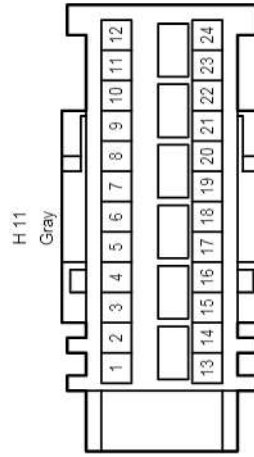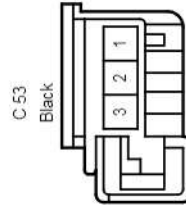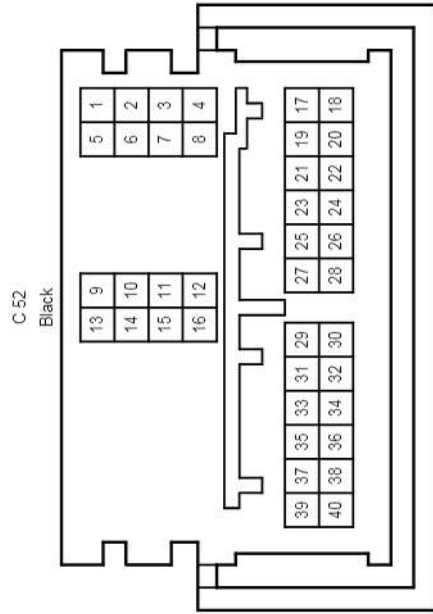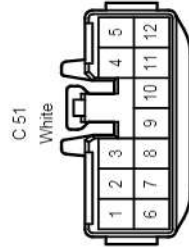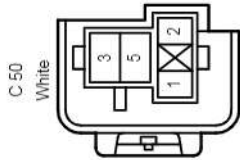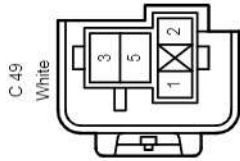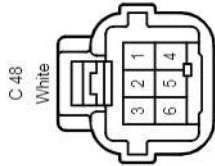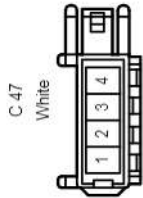

(For production through approximately Jul. 2007)


(For production from approximately Jul. 2007)


cardiagn.com

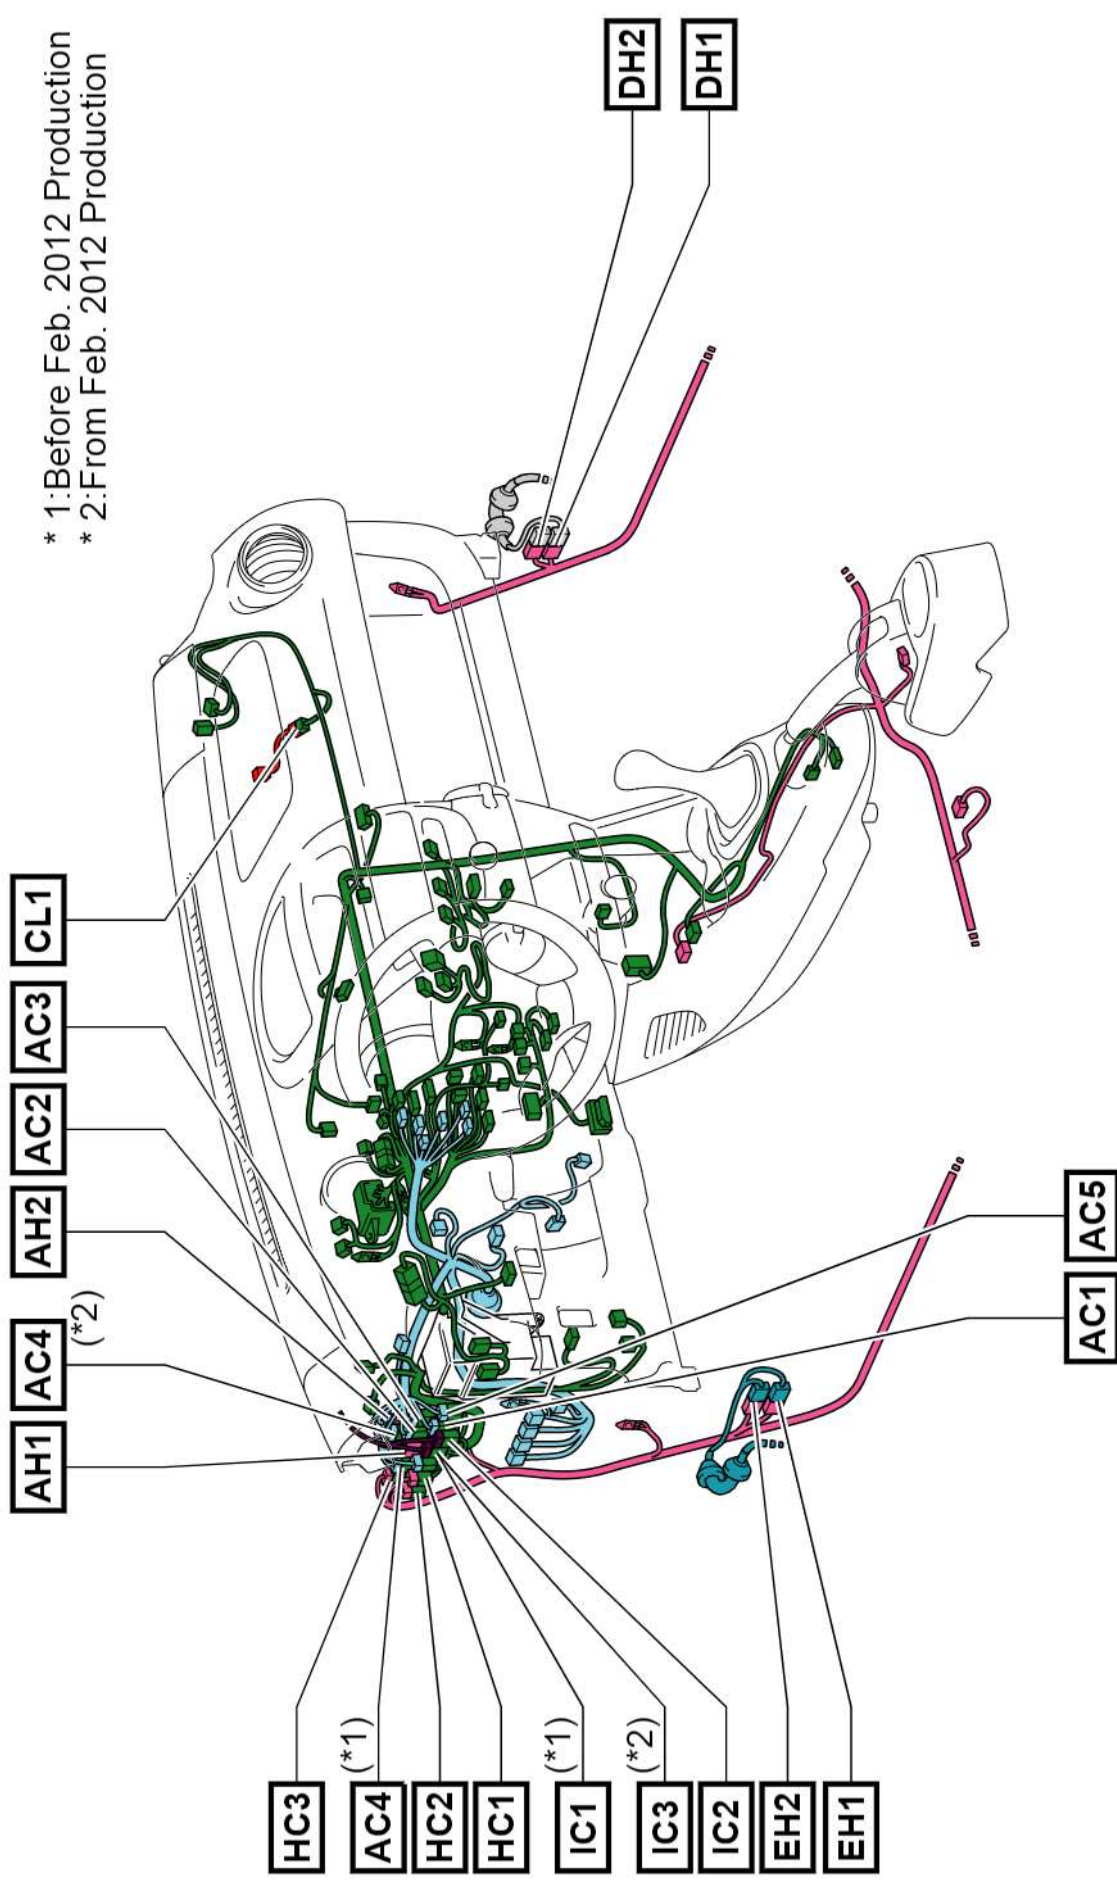


* 1: Before Feb. 2012 Production
 * 2: From Feb. 2012 Production

Wire and Wire in Instrument Panel <LHD>

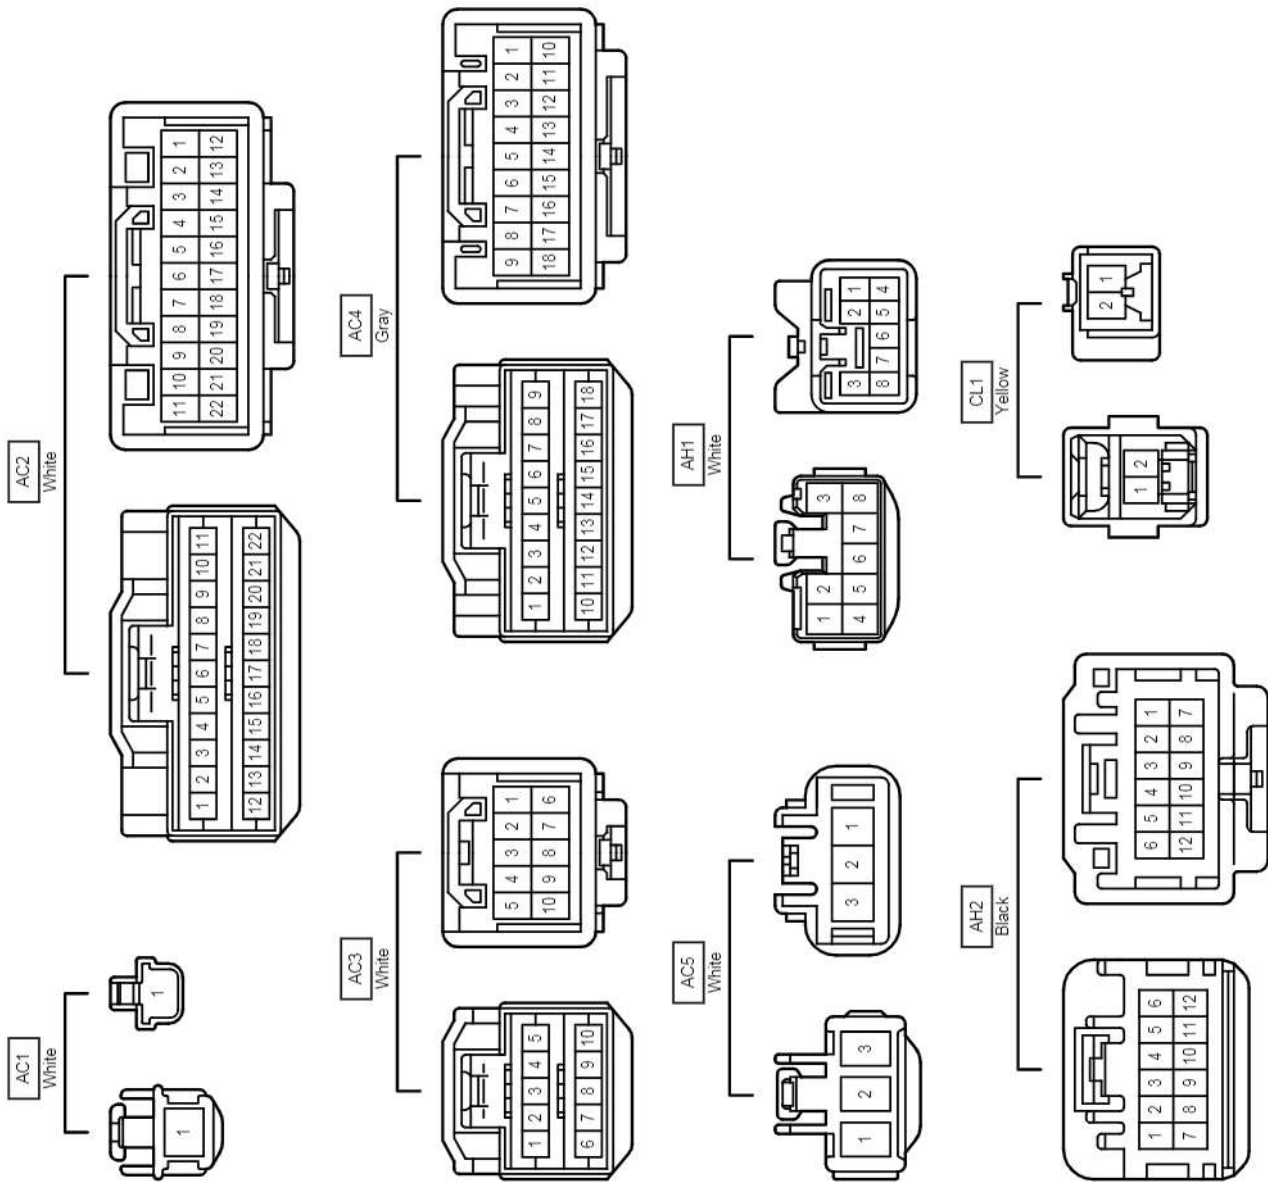


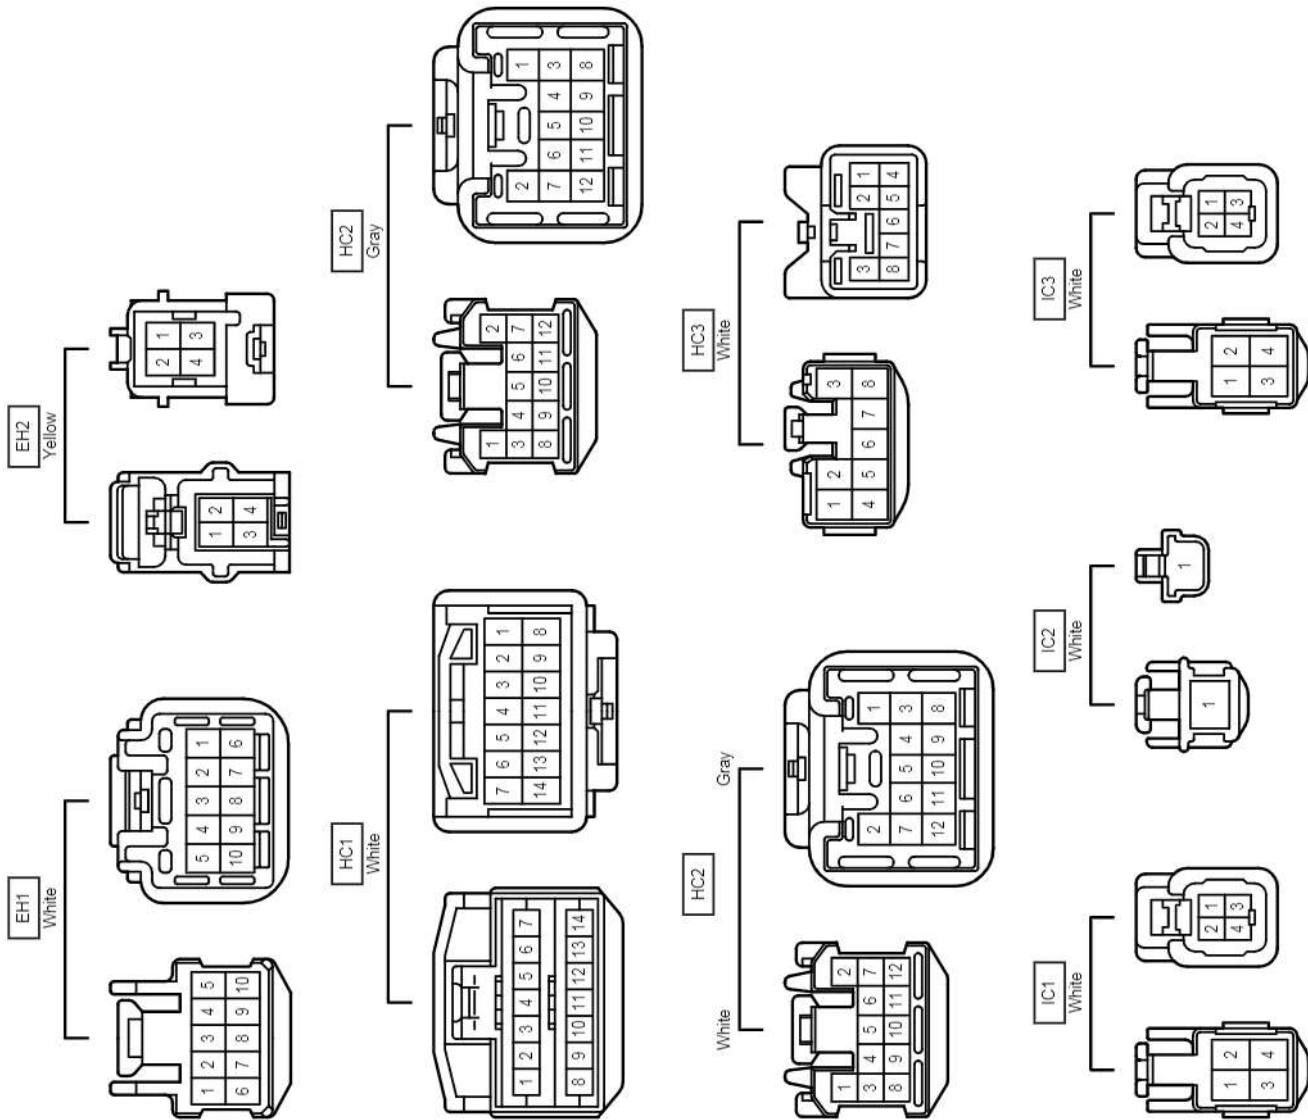

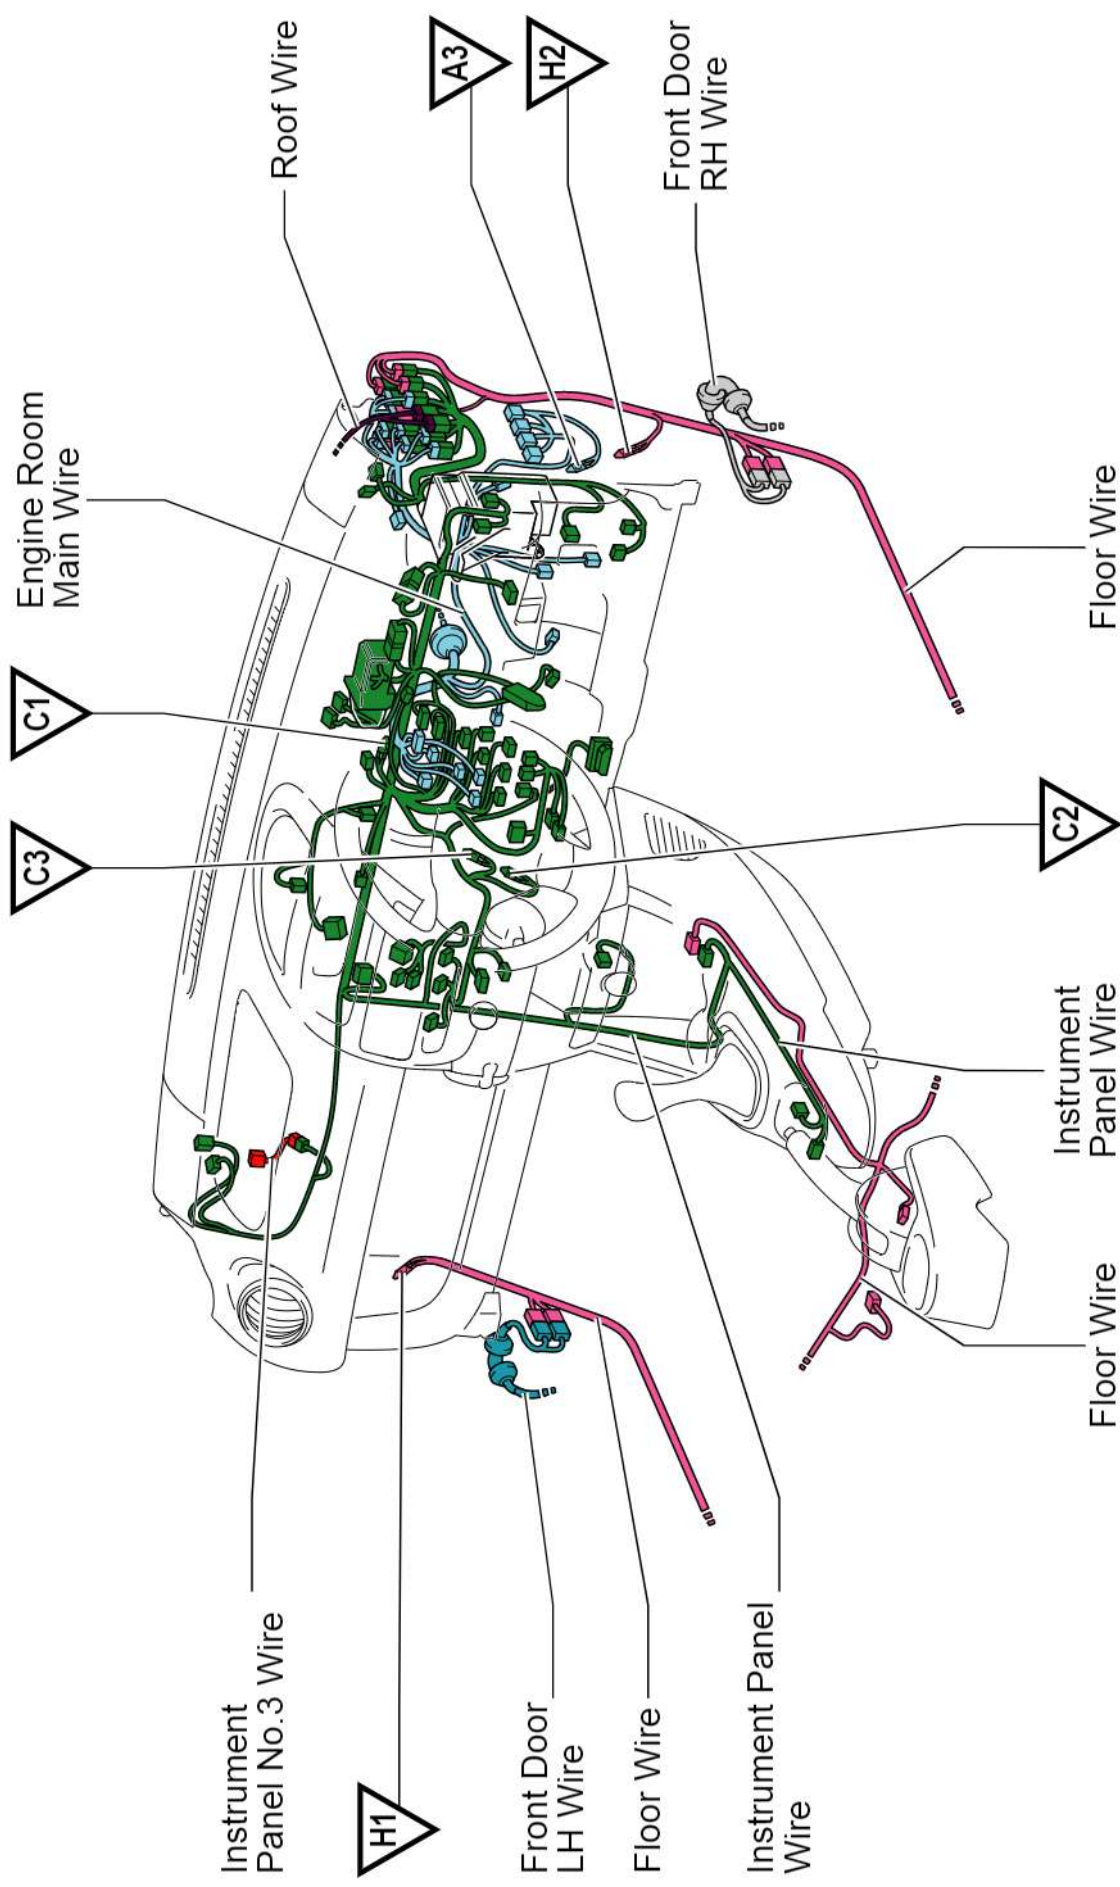

Position of Parts in Instrument Panel <RHD>


- * 1:1KR-FE
- * 2:2WZ-TV
- * 6:Before Feb. 2012 Production
- * 7:From Feb. 2012 Production

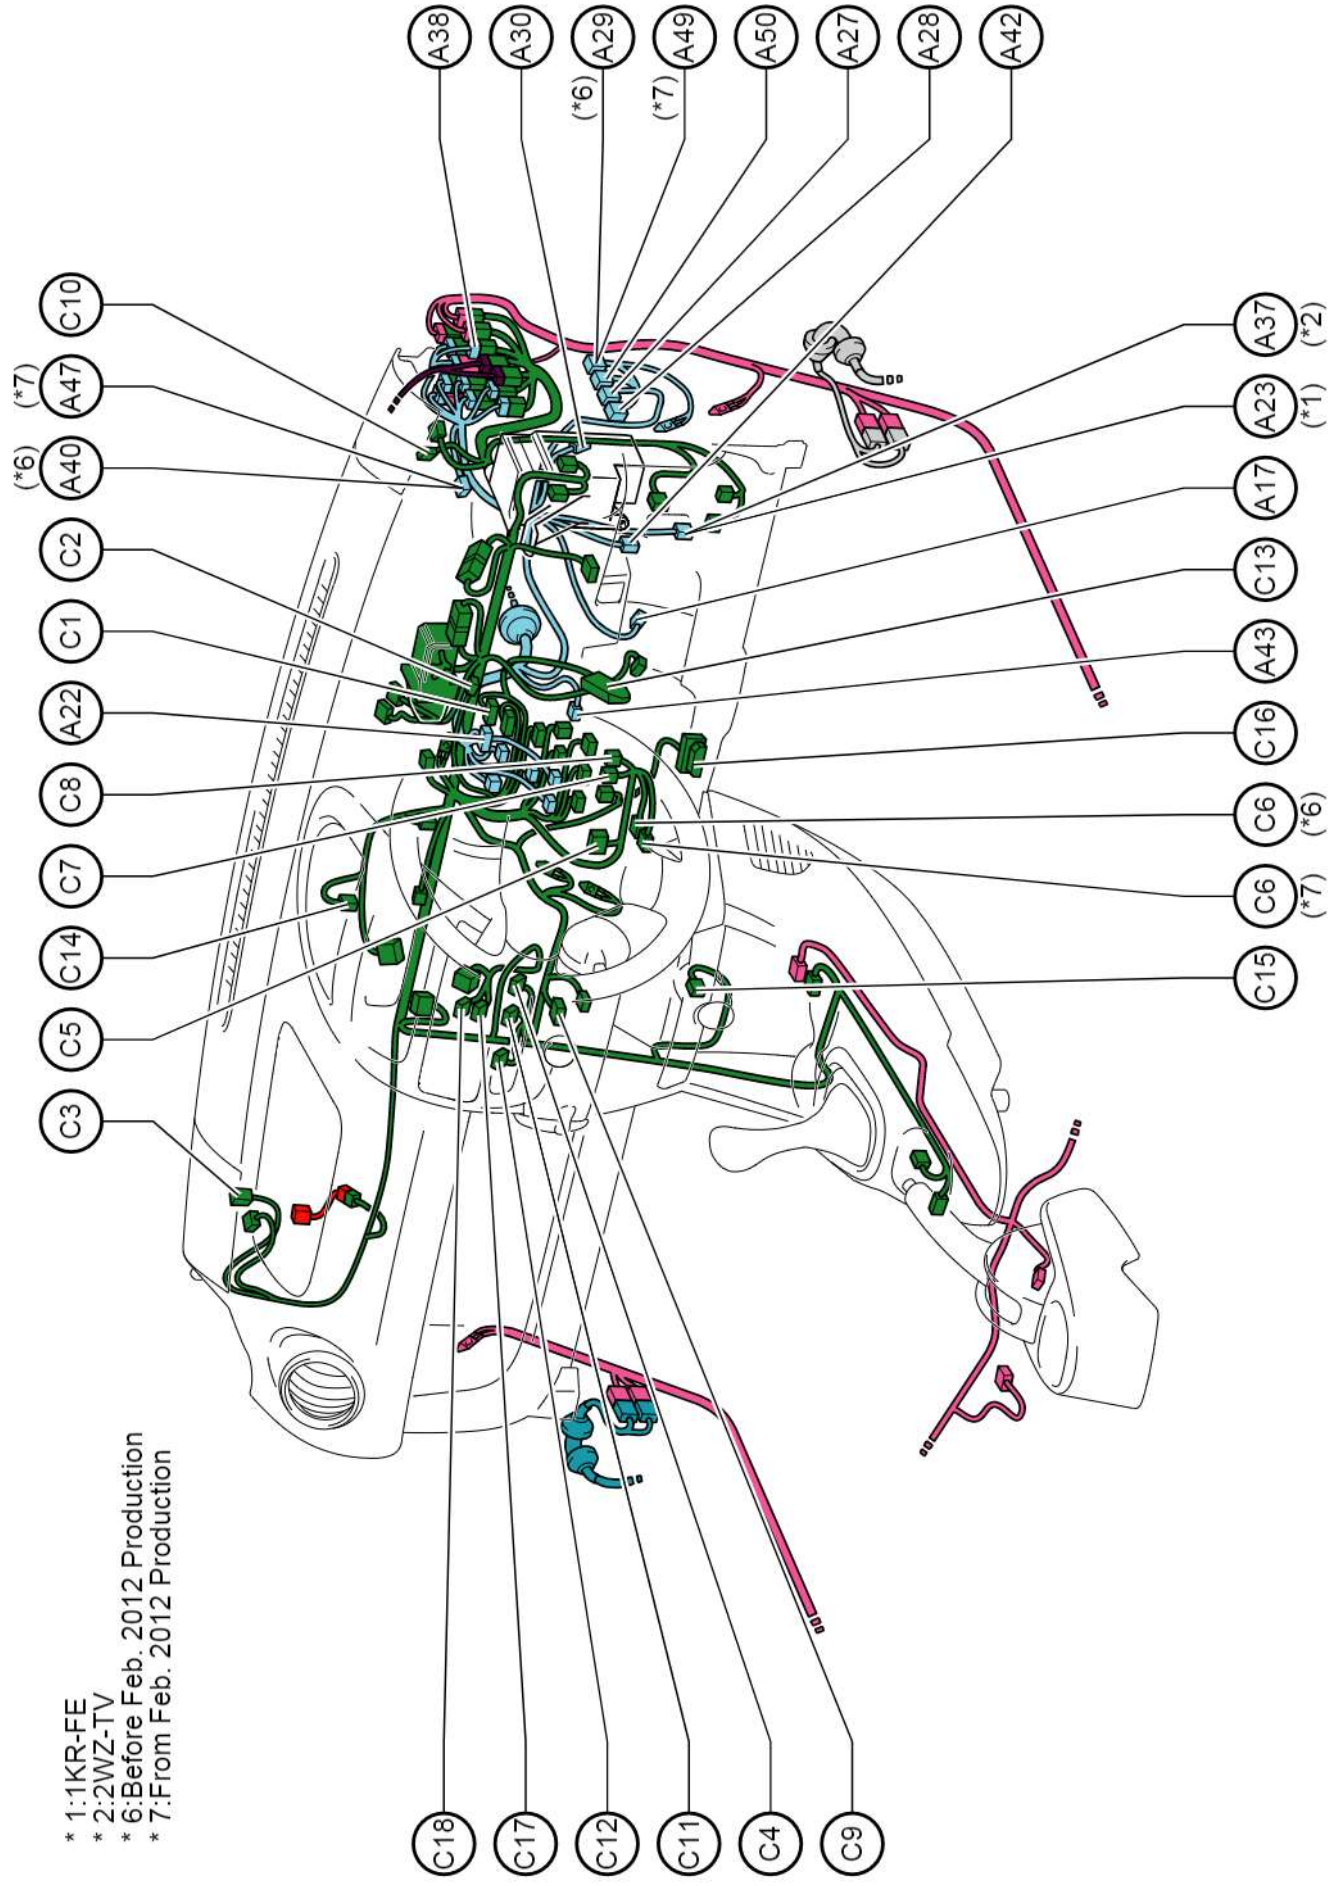


A 17	Stop Lamp SW
A 17	Stop Lamp SW
A 22	Combination Meter
A 23	Accelerator Position Sensor
A 27	Multi-mode Manual Transmission ECU
A 28	Multi-mode Manual Transmission ECU
A 29	Multi-mode Manual Transmission ECU
A 30	Junction Connector
A 37	Accelerator Position Sensor
A 38	Junction Connector
A 40	Skid Control Resistor
A 42	Junction Connector
A 43	Clutch Start Switch Assembly
A 47	Skid Control Resistor
A 49	Multi-mode Manual Transmission ECU
A 50	Multi-mode Manual Transmission ECU
C 1	Combination Meter
C 2	Tachometer
C 3	Speaker (Front LH)
C 4	A/C SW
C 5	Combination SW
C 6	Spiral Cable
C 7	Combination SW
C 8	Combination SW
C 9	Blower SW
C 10	Speaker (Front RH)
C 11	Hazard Warning Signal SW
C 12	Rear Window Defogger SW
C 13	Ignition SW
C 14	A/C Amplifier
C 15	Power Outlet Socket
C 16	DLC3
C 17	Radio Receiver Assembly
C 18	Radio Receiver Assembly

Position of Parts in Instrument Panel <RHD>

A 17
Black

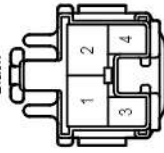


A 17
White

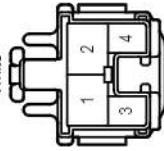


(1KR-FE M/T w/o VSC)

(Except 1KR-FE M/T w/o VSC)


A 22
White

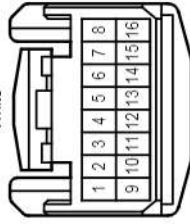


A 23
Black

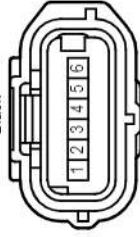


A 27
White

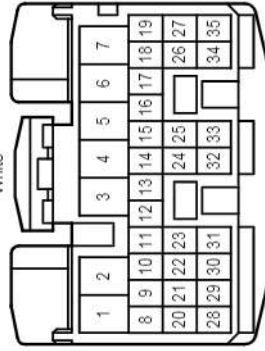


A 28
White

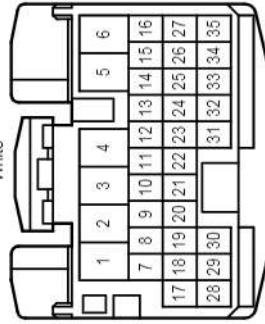


A 29
White

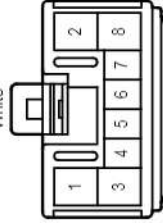


A 30
White

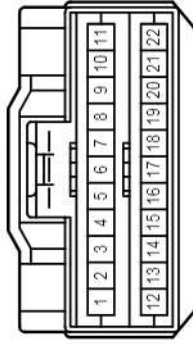

A 37
Black

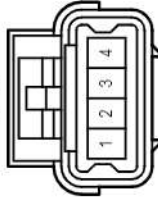


A 38
Blue

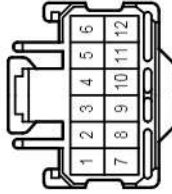


A 40
White



A 42
White

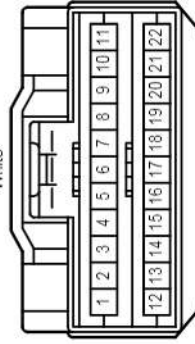


A 43
Black

 


A 47
White




A 49
White

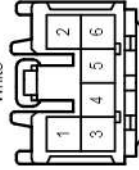


A 50
White

 


C 1
White

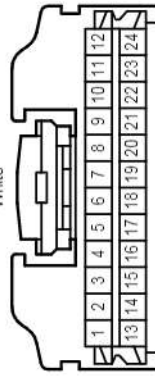


C 2
White

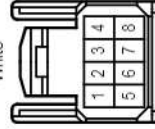











C 3
White

 


C 4
Black

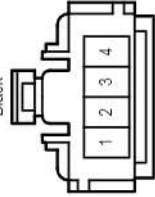

   Position of Parts in Instrument Panel <RHD>

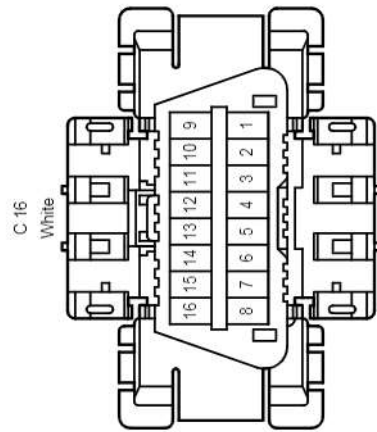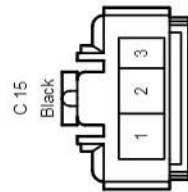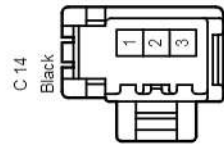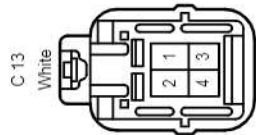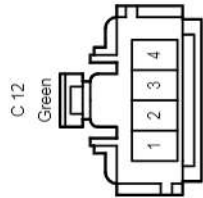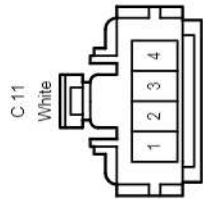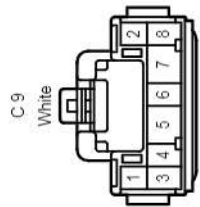


- * 3: Refer to the Service Bulletin for the installation position of the parts.
- * 6: Before Feb. 2012 Production
- * 7: From Feb. 2012 Production

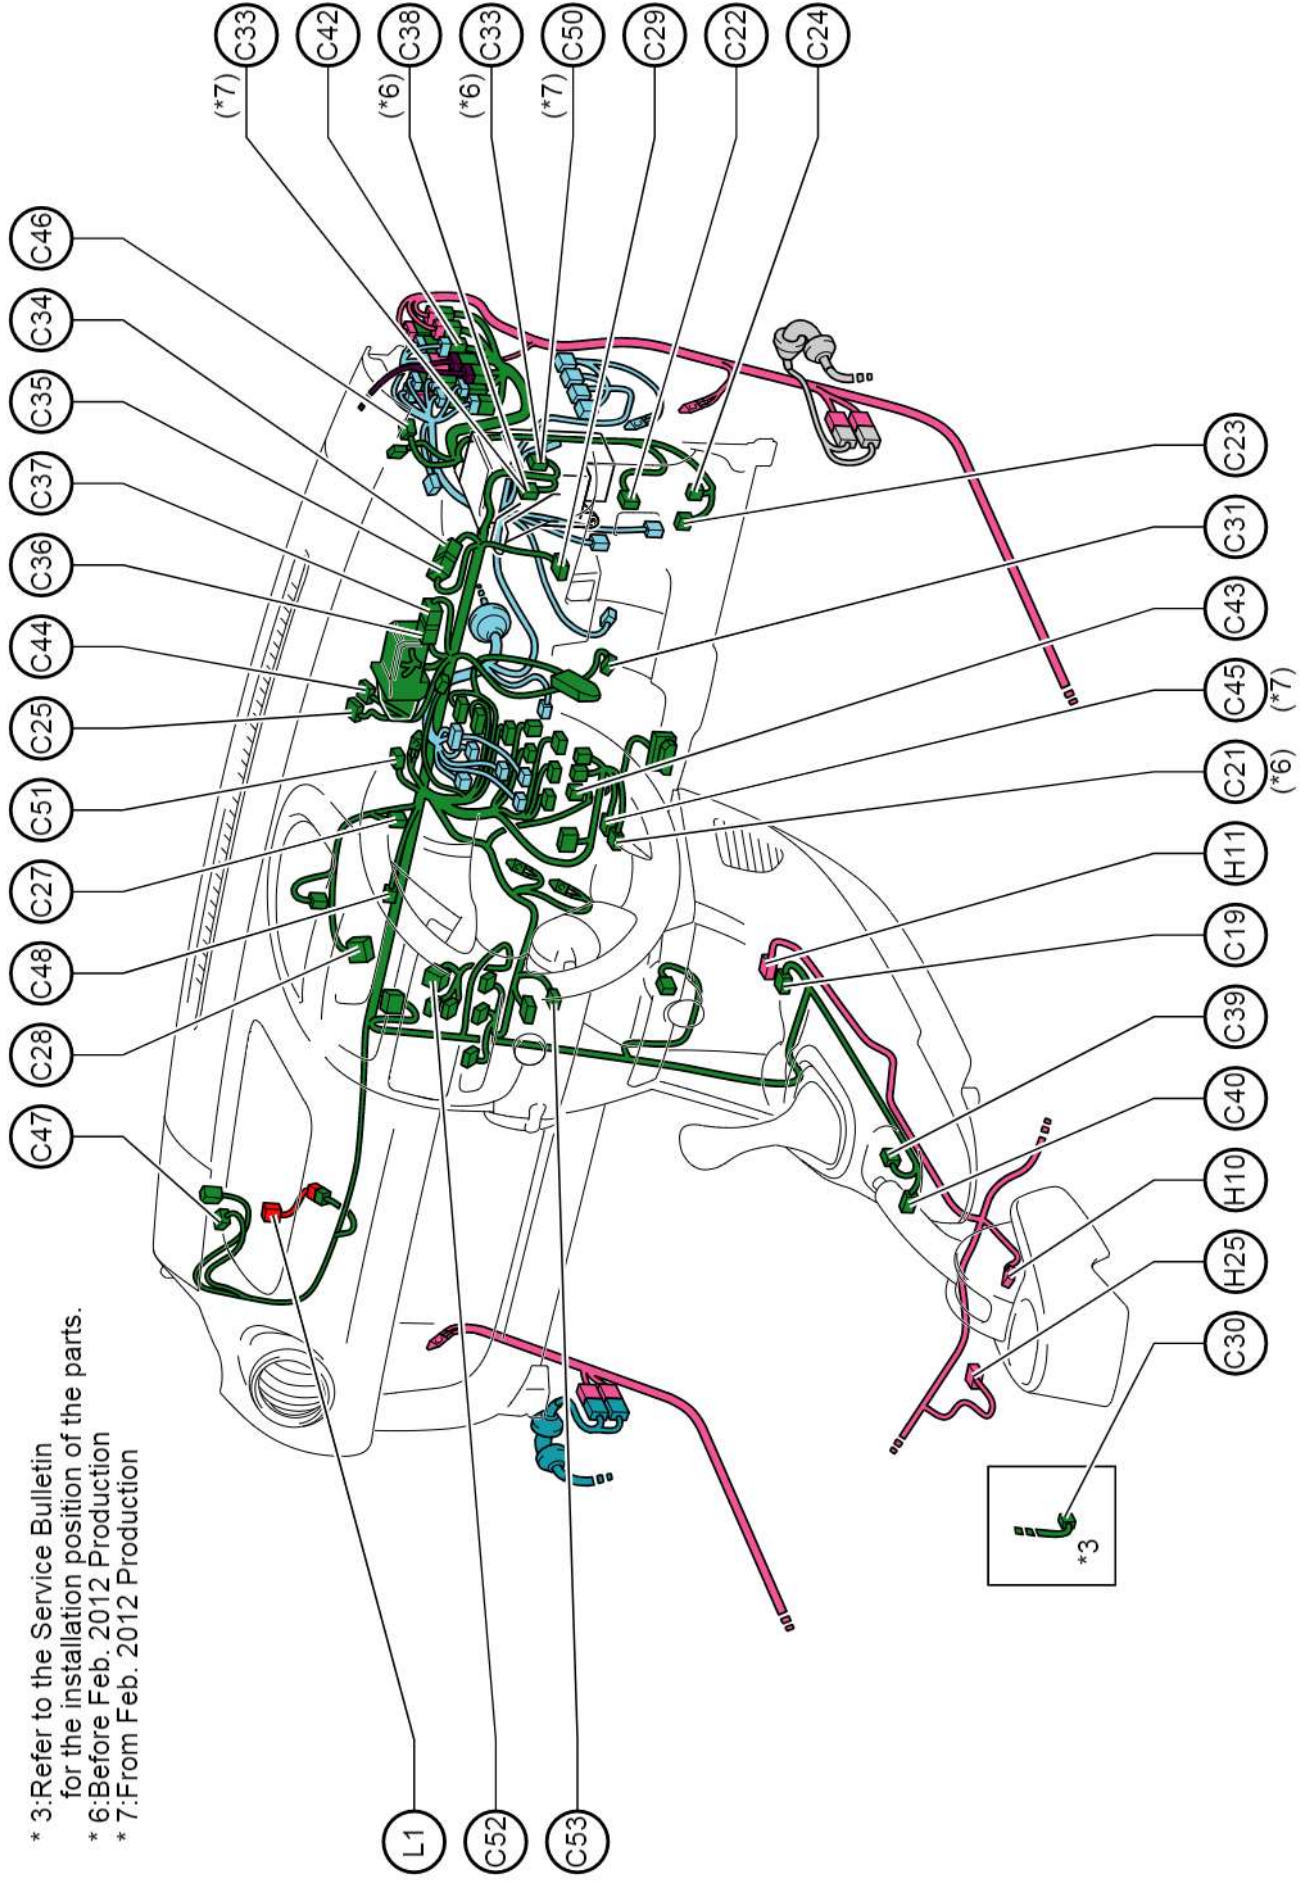


C	19	Airbag Sensor Assembly Center
C	21	Airbag Squib (Steering Wheel Pad)
C	22	Headlamp Leveling SW
C	23	Power Steering ECU
C	24	Power Steering ECU
C	25	Door Control ECU with Receiver
C	27	Blower Motor
C	28	Blower Resistor
C	29	Airbag Cut Off SW
C	30	Transponder Key ECU
C	31	Transponder Key Coil
C	33	Power Window Relay
C	34	Junction Connector
C	35	Junction Connector
C	36	Junction Connector
C	37	Junction Connector
C	38	IG Relay
C	39	Shift Lever Position Sensor
C	40	Transmission Shift Main SW
C	42	Junction Connector
C	43	Steering Sensor
C	44	VSC Warning Buzzer
C	45	Airbag Squib (Steering Wheel Pad)
C	46	No.1 Front Speaker Assembly RH
C	47	No.1 Front Speaker Assembly LH
C	48	Option Connector (Dock Connector)
C	50	Rear Fog Lamp Relay
C	51	Junction Connector
C	52	Radio Receiver Assembly
C	53	No.1 Stereo Jack Adapter Assembly
H	10	Parking Brake SW
H	11	Airbag Sensor Assembly Center
H	25	Yaw Rate Sensor
H	25	Yaw Rate Sensor
L	1	Airbag Squib (Front Passenger's Airbag Assembly)

Position of Parts in Instrument Panel <RHD>

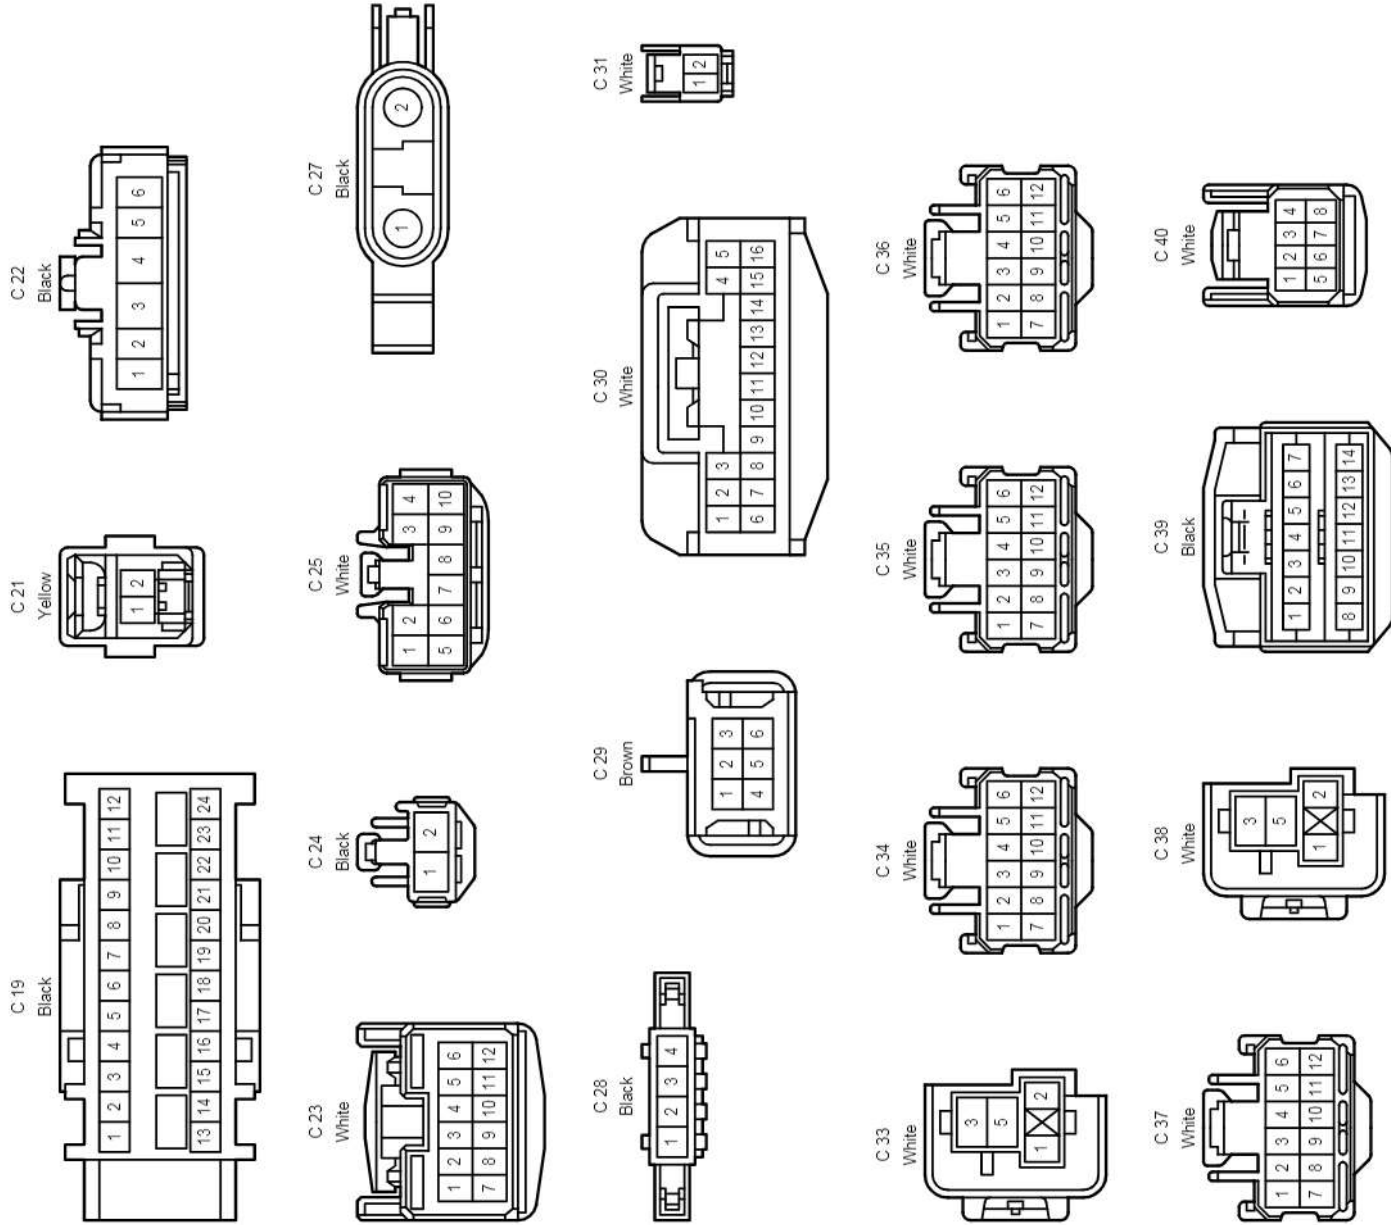


Position of Parts in Instrument Panel <RHD>

 
C 46
White




C 47
White

 


C 48
White

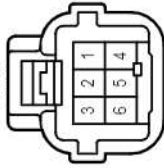


C 50
White

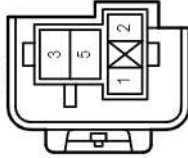


C 51
White

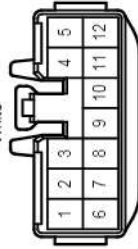


C 52
Black

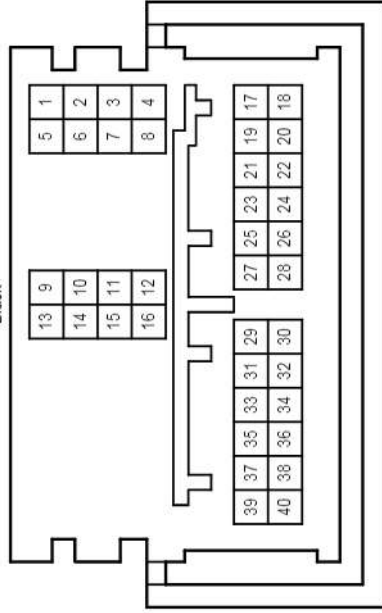


C 53
Black

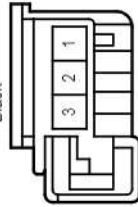


H 10
White

 


H 11
Gray

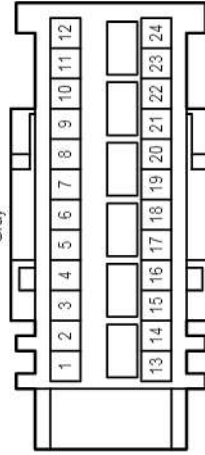


H 25
Black

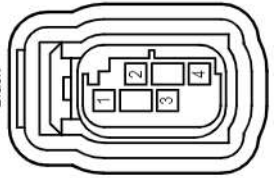

H 25
Black

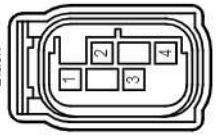

L 1
Orange

 


(For production through approximately Jul. 2007)


(For production from approximately Jul. 2007)

cardiagn.com

- * 1: Before Feb. 2012 Production
- * 2: From Feb. 2012 Production

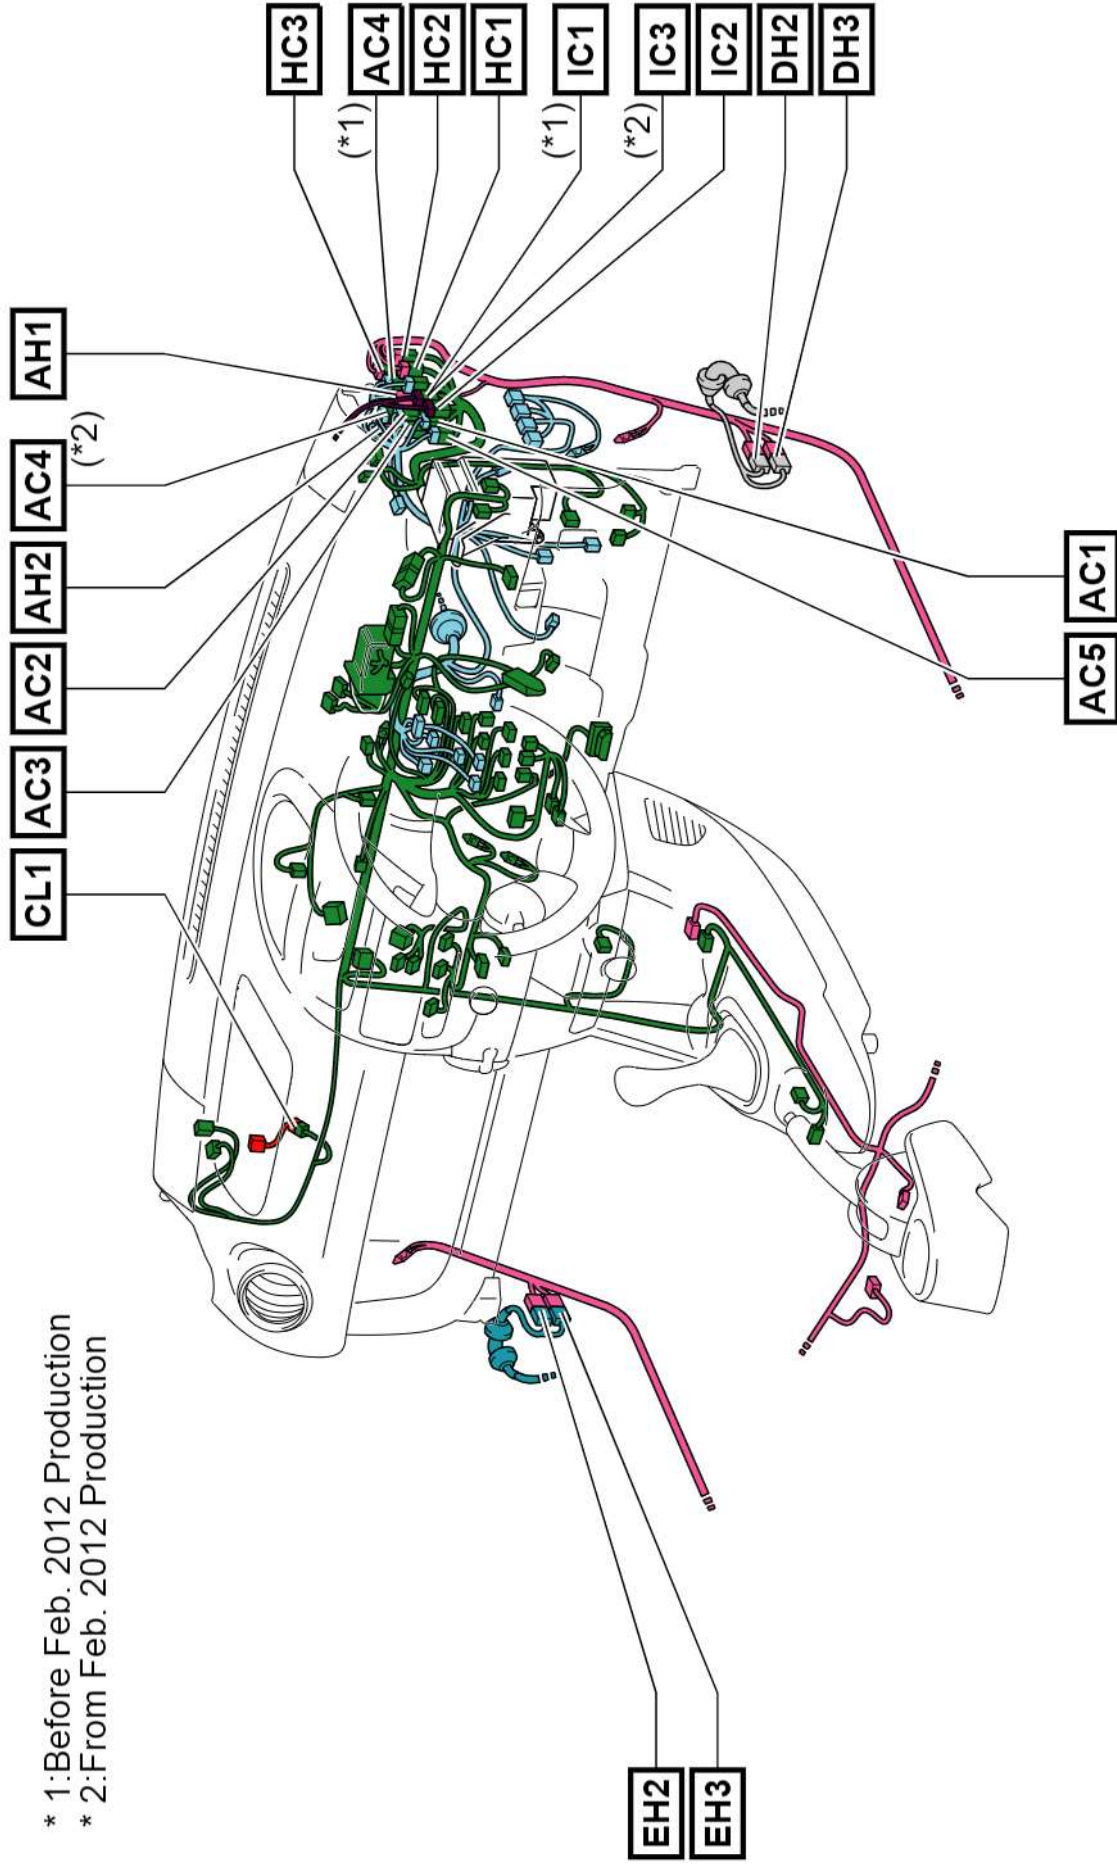

Wire and Wire in Instrument Panel <RHD>

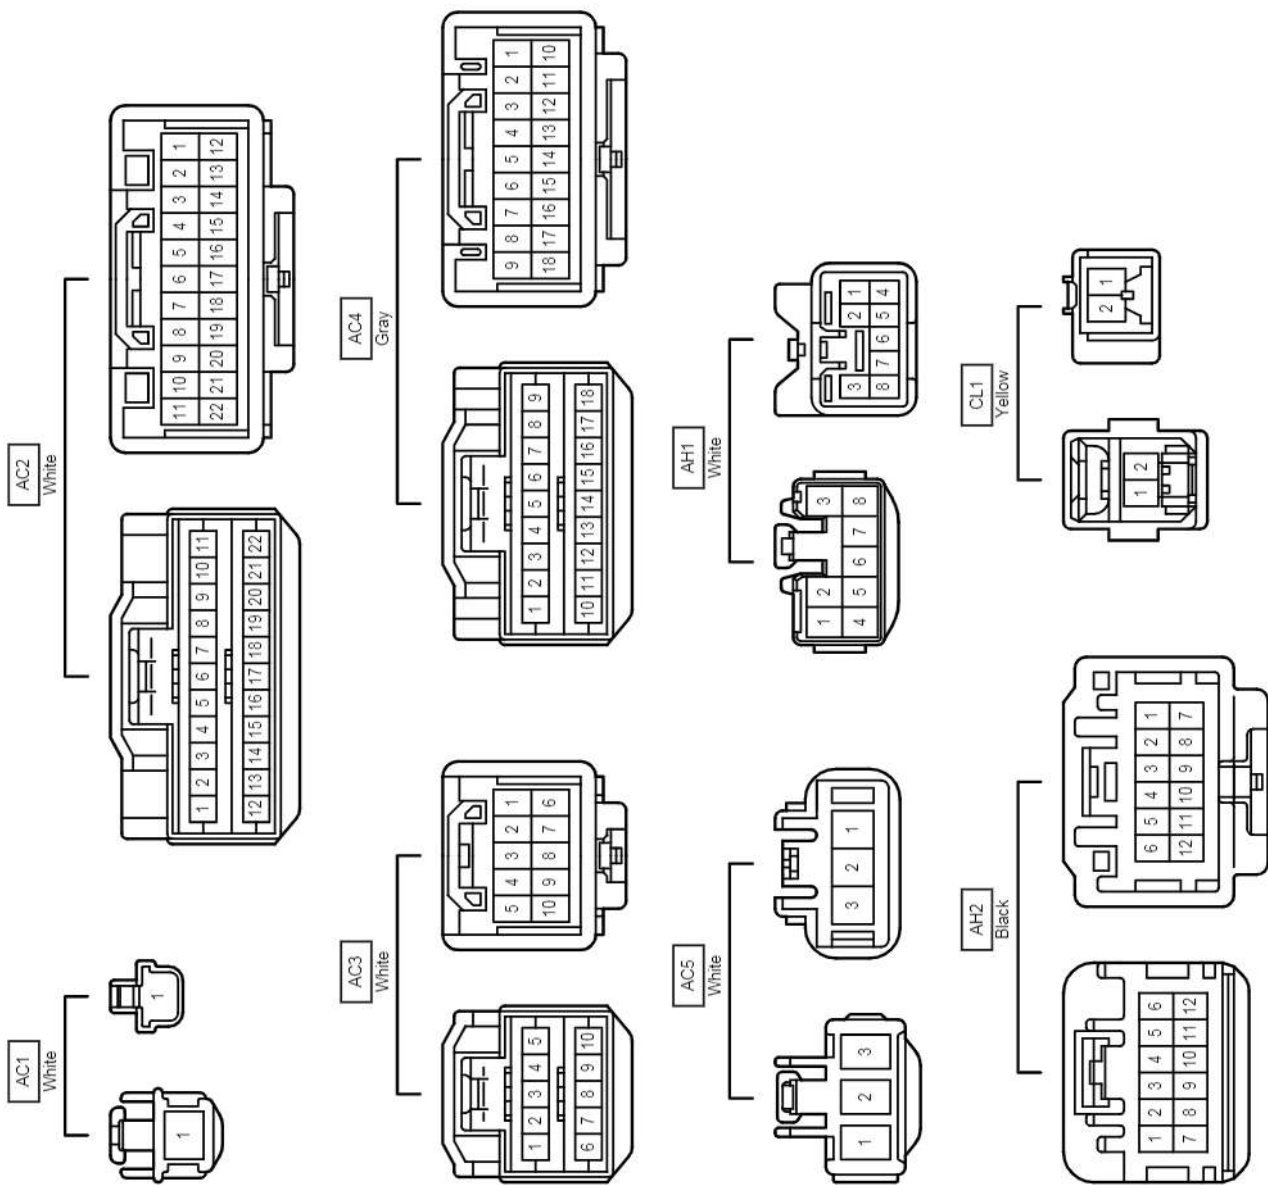

cardiagn.com

