


Chevrolet Cobalt 2005 – 2010 fuse box diagram

Passenger Compartment Fuse Box

The floor console fuse block is located on the passenger side of the floor console behind the forward panel. The panel has three clips. Pull the panel to disconnect the three clips, and access the fuses.

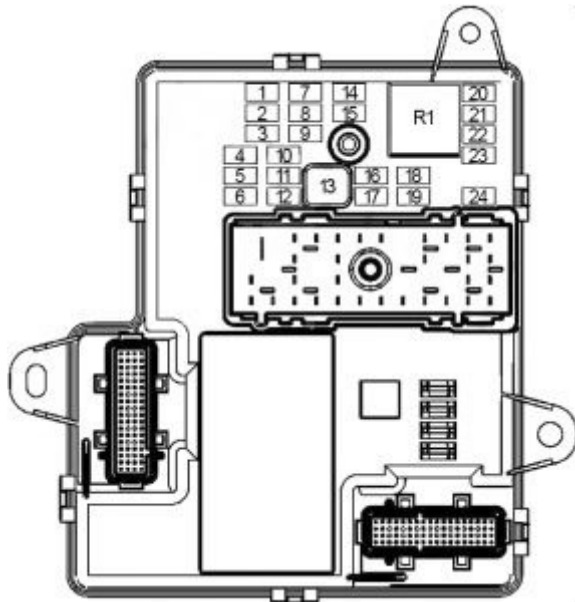


Chevrolet Cobalt – fuse box diagram – passenger

compartment

No.	A	Protected Component
1	10	Engine Control Module (ECM), Transmission Control Module (TCM), Powertrain Control Module (PCM (2.2L – LSJ))
2	10	'08-'10: Vehicle Communication Interface Module (VCIM), Digital Radio Receiver (DRR)
	10	'05-'07: Inflatable Restraint Sensing and Diagnostic Module (SDM), Body Control Module (BCM)
3	15	'06-'10: Radio, Remote Control Door Lock Receiver (RCDLR)
	10	'05: Radio, Remote Control Door Lock Receiver (RCDLR)
4	2	Steering Wheel Controls
5	10	Interior Lamps Relay
6	15	Power Door Lock (DOOR LOCK PCB Relay, DOOR UNLOCK PCB Relay, DR DOOR UNLOCK PCB Relay, INT LIGHT PCB Relay)
7	2	Electronic Power Steering Control Module (PSCM), Steering Wheel Controls (Left)


8	–	–
9	2	–
10	–	–
11	20	–
12	15	Sunroof Switch, Inside Rearview Mirror
13	30	Driver Window Switch, Front Passenger Window Switch
14	10	Clutch Pedal Start Switch (M/T), Instrument Panel Cluster (IPC), Heated Seat Switches, HVAC Control Module, Inflatable Restraint Passenger Air Bag On/Off Indicator, Stop Lamp/TCC Switch ('05-'07)
15	10	Windshield Wiper/Washer Switch, Turbocharger Boost Gauge (2.0L Turbo – LNF)
16	10	–
17	10	Inflatable Restraint Front Passenger Presence System (PPS) Module, Inflatable Restraint Sensing and Diagnostic Module (SDM)
18	20	–
19	–	–
20	10	HVAC Control Module, Theft Deterrent Control Module
21	10	'05-'07: Stop Lamp Switch
22	2	Ignition Switch
23	10	Instrument Panel Cluster (IPC)
24	20	Audio Amplifier
Relay		
R1	Blower Motor	
Relay (Non-Serviceable)		
R2	Power Door Lock (Lock)	
R3	Power Door Lock (Unlock)	
R4	Driver Door Lock Actuator (Unlock)	
R5	Interior Lamps	

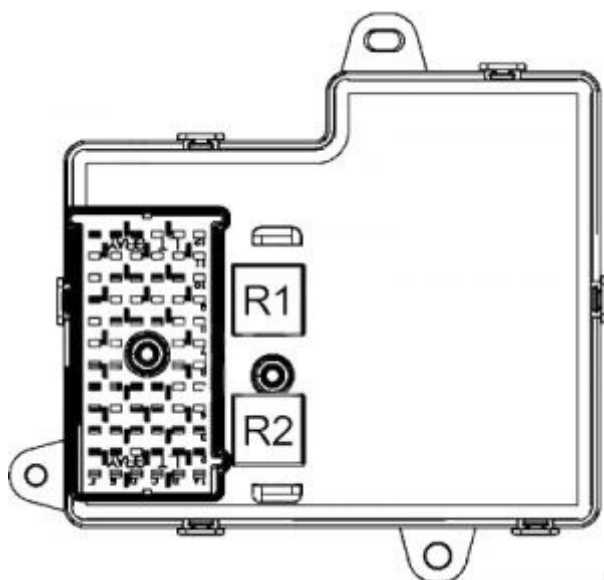

Chevrolet Cobalt – fuse box diagram – passenger compartment

No.	Relay
R1	Accessory (Power Window, Sunroof, Heated Seat, Windshield Wiper/Washer Switch)
R2	Run (Heating Ventilation Air Conditioning (HVAC))

Engine Compartment Fuse Box

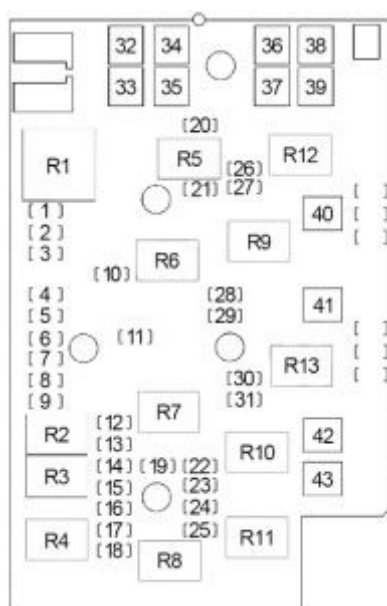

Chevrolet Cobalt – fuse box diagram – engine compartment

No.	A	Protected Component
1	20	TRUNK PCB Relay, Driver and Passenger Heated Seat Modules
2	–	–
3	–	–

4	10	'08-'10: Inflatable Restraint Sensing and Diagnostic Module (SDM), Body Control Module (BCM)
	10	'05-'07: Vehicle Communication Interface Module (VCIM), Digital Radio Receiver
5	20	'08-'10: Electronic Brake Control Module (EBCM)
6	20	'08-'10: Cigar Lighter, Auxiliary Power Outlet, Data Link Connector (DLC ('05-))
	15	'05-'07: Cigar Lighter, Data Link Connector (DLC)
7	5	Outside Rearview Mirror Switch
8	15	'08-'10: Data Link Connector (DLC)
	20	'05-'07: Heated Seat Module
9	10	Evaporative Emission (EVAP) Canister Vent Solenoid
10	25	Windshield Wiper (Wiper On/Off Relay)
11	10	'08-'10: Body Control Module (BCM), License Lamps, Marker Lamps, Park/Turn/DRL Signal Lamps, Tail/Stop and Turn Signal Lamps
	15	'05-'07: Body Control Module (BCM), License Lamps, Marker Lamps, Park/Turn Signal Lamps, Tail/Stop and Turn Signal Lamps
12	20	Body Control Module (BCM)
13	10	A/C Compressor Clutch
14	10	Engine Control Module (ECM), Transmission Control Module (TCM), Center High Mounted Stop Lamp (CHMSL)
	15	2.0L (LSJ): After Cooling Pump
15	10	Electronic Brake Control Module (EBCM)
16	–	–
17	15	Engine Control Module (ECM), Transmission Control Module (TCM), Supercharger Boost Control Solenoid (2.0L – LSJ), Powertrain Control Module (PCM) (2.0L – LSJ)
18	10	Back Up Lamp Switch (M/T), Park Neutral Position (PNP) Switch (A/T)
19	20	Engine Control Module (ECM)
20	10	'08-'10: Daytime Running Light
21	15	Fuel Pump and Sender Assembly

22	10	Evaporative Emission (EVAP) Canister Purge Solenoid, Heated Oxygen Sensors (HO2S), Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor, Clutch Pedal Position (CPP) Switch
23	10	2.0L Turbo (LNF): Turbocharger Wastegate Solenoid, Turbocharger Bypass Valve Solenoid, Camshaft Position (CMP) Actuator Solenoid – Intake, Camshaft Position (CMP) Actuator Solenoid – Exhaust
24	15	'08-'10: Fuel Injectors, Ignition Coil/Modules
	10	'05-'07: Fuel Injectors, Ignition Coil/Modules
25	10	'06-'10: Secondary Air Injection (AIR) Solenoid
26	15	Front Fog Lamps
27	10	Horn
28	10	Right Headlamp (High Beam)
29	10	Left Headlamp (High Beam)
30	10	Right Headlamp (Low Beam)
31	10	Left Headlamp (Low Beam)
32	60	Electronic Power Steering (EPS) Control Module (PSCM)
33	40	'06-'10: Secondary Air Injection (AIR) Pump Relay
34	–	–
35	40	'08-'10: Electronic Brake Control Module (EBCM)
	50	'05-'07: Electronic Brake Control Module (EBCM)
36	30	Blower Motor Relay
37	40	Fuse: "20", "21", "22", 23", "24"
38	–	–
39	–	–
40	40	Rear Window Defogger Relay
41	30	Cooling Fan Relay (No.2)
42	30	Starter Relay
43	30	Cooling Fan Relay (No.1)
Relay		

R1	Secondary Air Injection (AIR) Pump
R2	A/C Compressor Clutch
R3	Engine Control Module (ECM), Transmission Control Module (TCM), Center High Mounted Stop Lamp (CHMSL)
	2.0L (LJS): After Cooling Pump
R4	Ignition (RUN/CRNK)
R5	Fuel Pump
R6	Wiper (On/Off)
R7	Cooling Fan (No.2)
	Cooling Fans
R8	Engine Control Module (ECM)
R9	Wiper (High/Low Speed)
R10	Starter
R11	Cooling Fan (No.1)
R12	Rear Window Defogger
R13	Secondary Air Injection (AIR) Solenoid
	Cooling Fan (No.2)