


# Cadillac Seville 2004 fuse box diagram

## Underhood Fuse Block

The underhood fuse block is located in the front of the engine compartment between the windshield washer fluid reservoir and the power steering fluid reservoir on the passenger's side of the vehicle

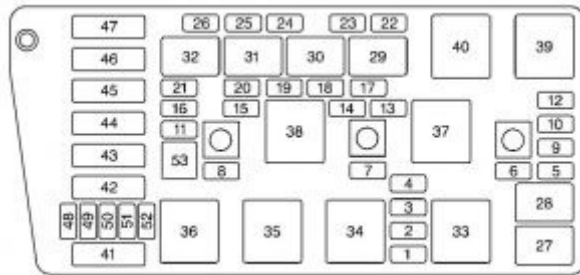

Cadillac Seville – fuse box diagram – engine

compartment

| Fuses | Usage                              |
|-------|------------------------------------|
| 1     | ALDL                               |
| 2     | Accessory                          |
| 3     | Windshield Wipers                  |
| 4     | —                                  |
| 5     | Headlamp Low Beam Left             |
| 6     | Headlamp Low Beam Right            |
| 7     | Instrument Panel                   |
| 8     | Powertrain Control Module Battery  |
| 9     | Headlamp High Beam Right           |
| 10    | Headlamp High Beam Left            |
| 11    | Ignition 1                         |
| 12    | Fog Lamps                          |
| 13    | Transmission                       |
| 14    | Cruise Control                     |
| 15    | Coil MDL                           |
| 16    | Injector Bank #2                   |
| 17    | —                                  |
| 18    | —                                  |
| 19    | Powertrain Control Module Ignition |
| 20    | Oxygen Sensor                      |
| 21    | Injector Bank #1                   |
| 22    | Auxiliary Power (Cltr 2)           |
| 23    | Cigar Lighter                      |


|                 |                             |
|-----------------|-----------------------------|
| 24              | Daytime Running Lamps       |
| 25              | Horn                        |
| 26              | Air Conditioner Clutch      |
| Relays          | Usage                       |
| 27              | Headlamp High Beam          |
| 28              | Headlamp Low Beam           |
| 29              | Fog Lamps                   |
| 30              | Daytime Running Lamps       |
| 31              | Horn                        |
| 32              | Air Conditioner Clutch      |
| 33              | —                           |
| 34              | Accessory                   |
| 35              | —                           |
| 36              | Starter 1                   |
| 37              | Cooling Fan 1               |
| 38              | Ignition 1                  |
| 39              | Cooling Fan Series/Parallel |
| 40              | Cooling Fan 2               |
| Circuit breaker | Usage                       |
| 41              | Starter                     |
| 42              | Export Use                  |
| Fuse            | Usage                       |
| 43              | —                           |
| 44              | Antilock Brake System       |
| 45              | Air Pump                    |
| 46              | Cooling Fan 1               |
| 47              | Cooling Fan 2               |

The spare fuses are located in numbers 48 through 52.

The fuse puller is located in number 53.

## Rear Underseat Fuse Block

To access the fuses, push in the two tabs located at each end of the fuse block cover.

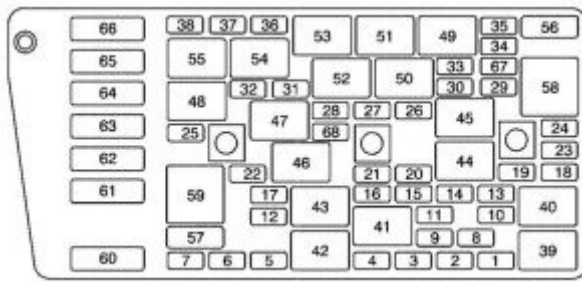

Cadillac Seville – fuse box diagram – rear

underseat

| Fuse | Usage                                       |
|------|---------------------------------------------|
| 1    | Fuel Pump                                   |
| 2    | Heater, Ventilation, Air Conditioner Blower |
| 3    | Memory Seat, Tilt and Telescoping Steering  |
| 4    | SDAR (XM Satellite Radio)                   |
| 5    | Driver Door Module                          |
| 6    | Heated Seat Left Rear                       |
| 7    | Power Tilt and Telescoping Steering         |
| 8    | Supplemental Inflation Restraint            |
| 9    | —                                           |
| 10   | Lamps Park Right                            |
| 11   | Fuel Tank Ventilation Solenoid              |
| 12   | Ignition 1                                  |
| 13   | Lamps, Parking Left                         |
| 14   | Interior Lamp Dimmer Module                 |
| 15   | Navigation                                  |
| 16   | Heated Seat Left Front                      |
| 17   | Export Lighting                             |
| 18   | Rear Door Modules                           |
| 19   | Stoplamps                                   |
| 20   | Neutral Safety Back-up                      |
| 21   | Audio                                       |
| 22   | Retained Accessory Power for Sunroof        |
| 23   | —                                           |
| 24   | —                                           |
| 25   | Passenger Door Module                       |
| 26   | Fuel Door/Trunk Release (Body)              |
| 27   | Interior Lamps                              |
| 28   | Rear HVAC Blower                            |
| 29   | Ignition Switch                             |
| 30   | —                                           |
| 31   | Heated Seat Right Front                     |

|    |                                        |
|----|----------------------------------------|
| 32 | Magnetic Ride Control                  |
| 33 | Heating, Ventilation, Air Conditioning |
| 34 | Ignition 3 Rear                        |
| 35 | Antilock Braking System                |
| 36 | Turn Signal/Hazard                     |
| 37 | Heated Seat Right Rear                 |
| 38 | Dash Integration Module                |

## Micro Relays

| Relay | Usage                                |
|-------|--------------------------------------|
| 39    | Fuel Pump                            |
| 40    | Parking Lamps                        |
| 41    | Ignition 1                           |
| 42    | Park Brake A                         |
| 43    | Park Brake B                         |
| 44    | Park Shift Interlock                 |
| 45    | Reverse Lamps                        |
| 46    | Retained Accessory Power for Sunroof |
| 47    | Rear HVAC Blower                     |
| 48    | —                                    |
| 49    | Ignition 3                           |
| 50    | Fuel Tank Door Release               |
| 51    | Interior Lamps                       |
| 52    | Trunk Release                        |
| 53    | Front Courtesy Lamps                 |
| 54    | Rear Courtesy Lamps                  |
| 55    | Electronic Level Control Compressor  |

| Circuit breaker | Usage             |
|-----------------|-------------------|
| 56              | Power Seats       |
| 57              | Power Windows     |
| 58              | Cigarette Lighter |
| 59              | Rear Defog        |

| Fuses | Usage                  |
|-------|------------------------|
| 60    | Park Brake             |
| 61    | Rear Defog             |
| 62    | Export Brake           |
| 63    | Audio Amplifier        |
| 64    | ELC Compressor/Exhaust |
| 65    | Cigar Lighter          |

