


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE]

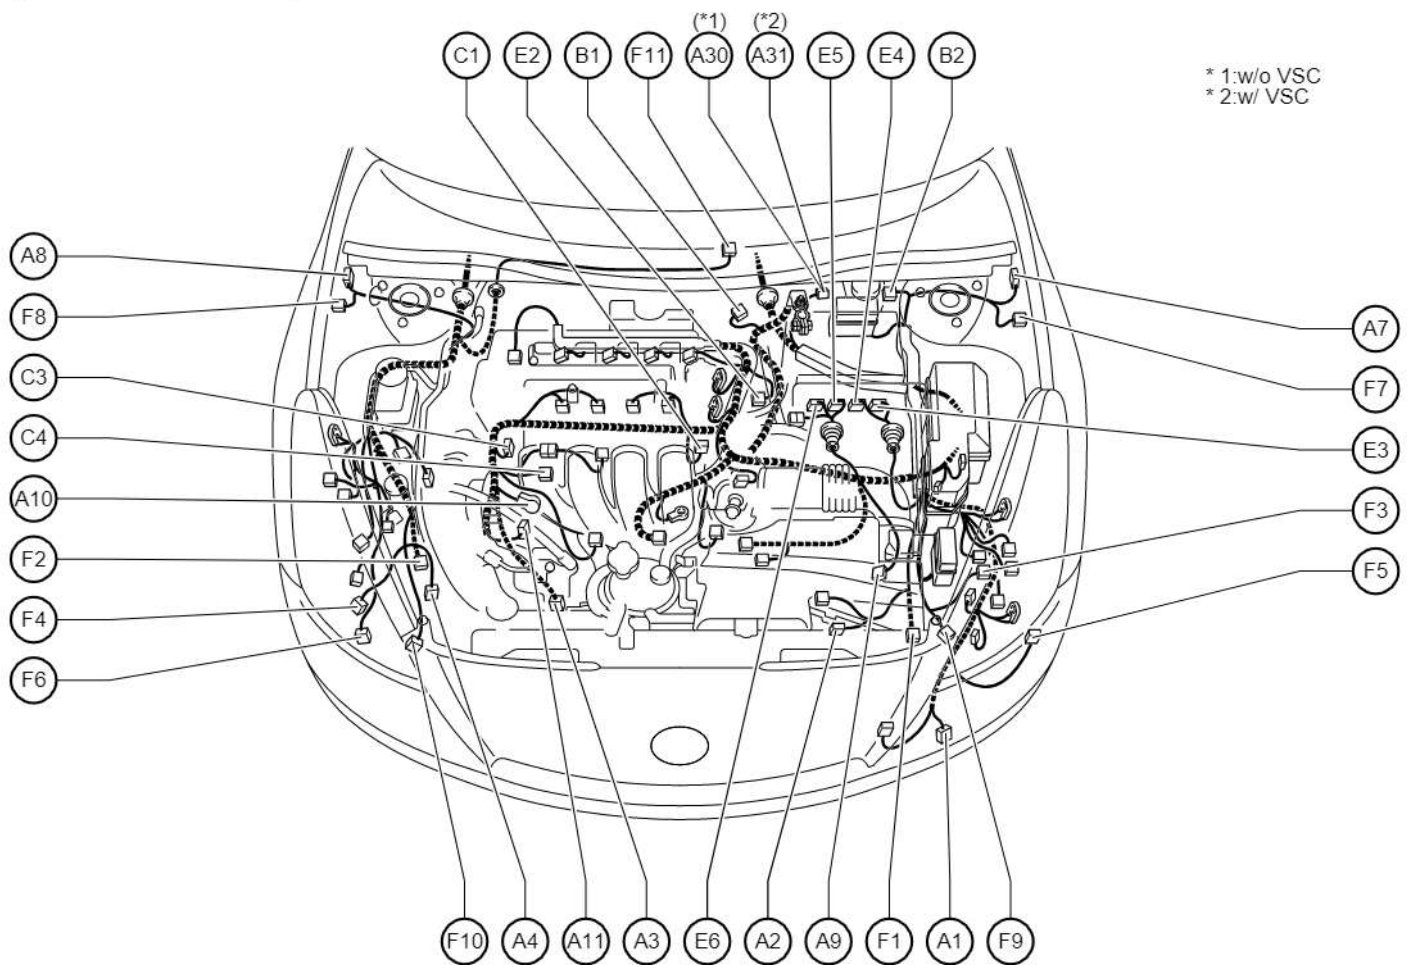

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Lock Sensor
A/C Magnetic Clutch
- A 4 A/C Dual Pressure SW
A/C Single Pressure SW
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A10 Alternator
- A11 Alternator
- A30 Skid Control ECU with Actuator
- A31 ABS & TRC & VSC Actuator

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW


- C 1 Camshaft Position Sensor
- C 3 Camshaft Timing Oil Control Valve (VVT)
- C 4 Crankshaft Position Sensor

- E 2 EFI Water Temp. Sensor
- E 3 Engine ECU (M/T)
- E 4 Engine ECU (M/T)
- E 5 Engine ECU (M/T)
- E 6 Engine ECU (M/T)

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F 10 Front Turn Signal Light RH
- F 11 Front Wiper Motor

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE]

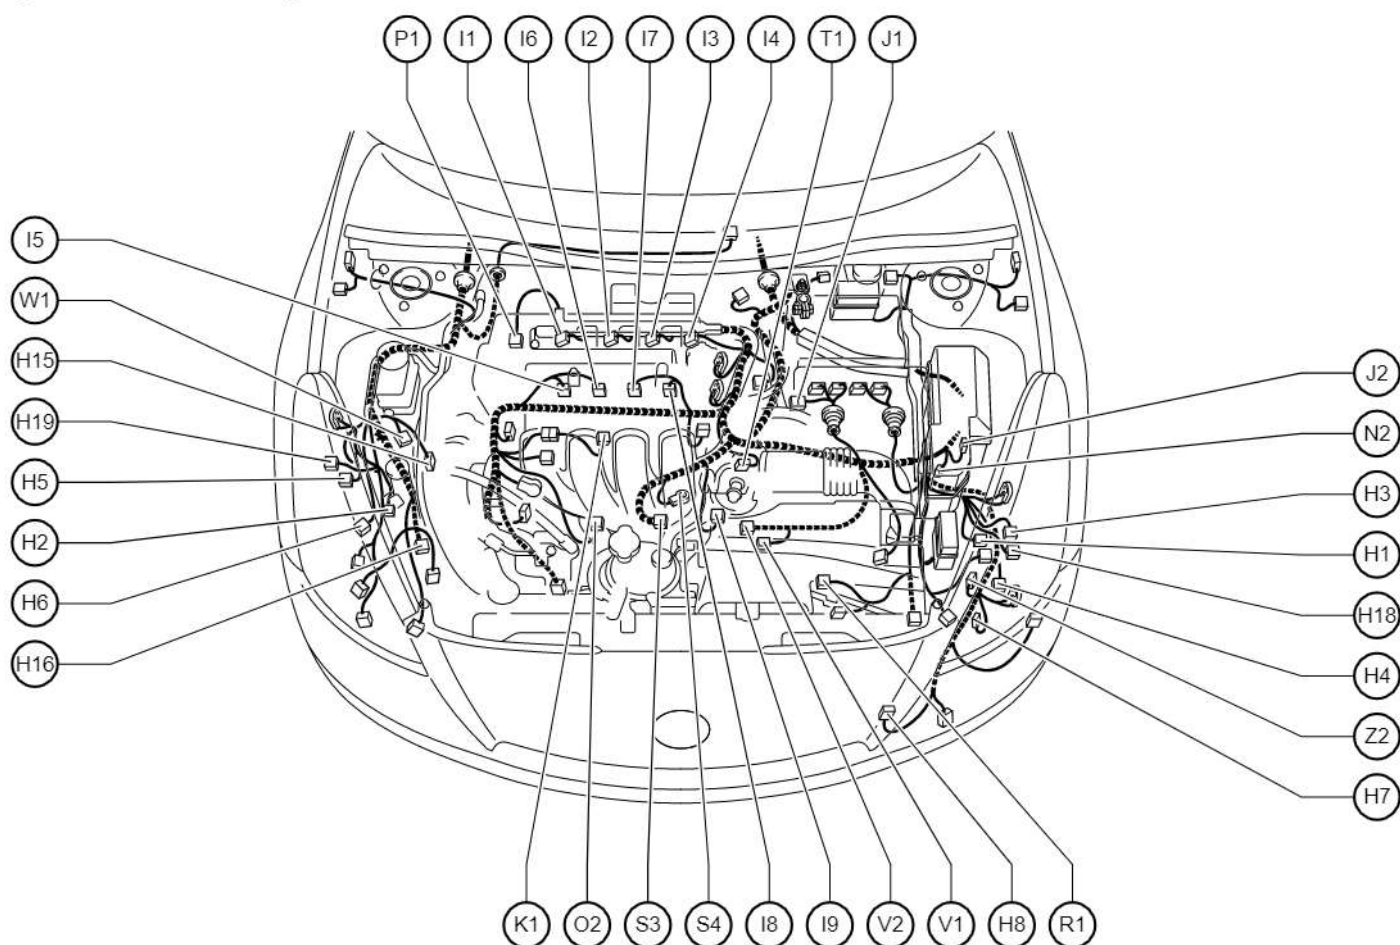

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Horn (High)
 H 8 Horn (Low)
 H15 Headlight Cleaner Motor
 H16 Headlight Cleaner Relay
 H18 Headlight Control ECU
 H19 Headlight Control ECU

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Injector No.1
 I 6 Injector No.2
 I 7 Injector No.3
 I 8 Injector No.4
 I 9 ISC Valve

J 1 Junction Connector
 J 2 Junction Connector

K 1 Knock Sensor
 N 2 Noise Filter (Ignition System)
 O 2 Oil Pressure SW
 P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

S 3 Starter
 S 4 Starter

T 1 Throttle Position Sensor

V 1 VSV (ACIS)
 V 2 VSV (EVAP)


W 1 Washer Motor

Z 2 Option Connector
 (Theft Deterrent Siren and Engine Hood Courtesy SW)

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 2ZZ-GE]

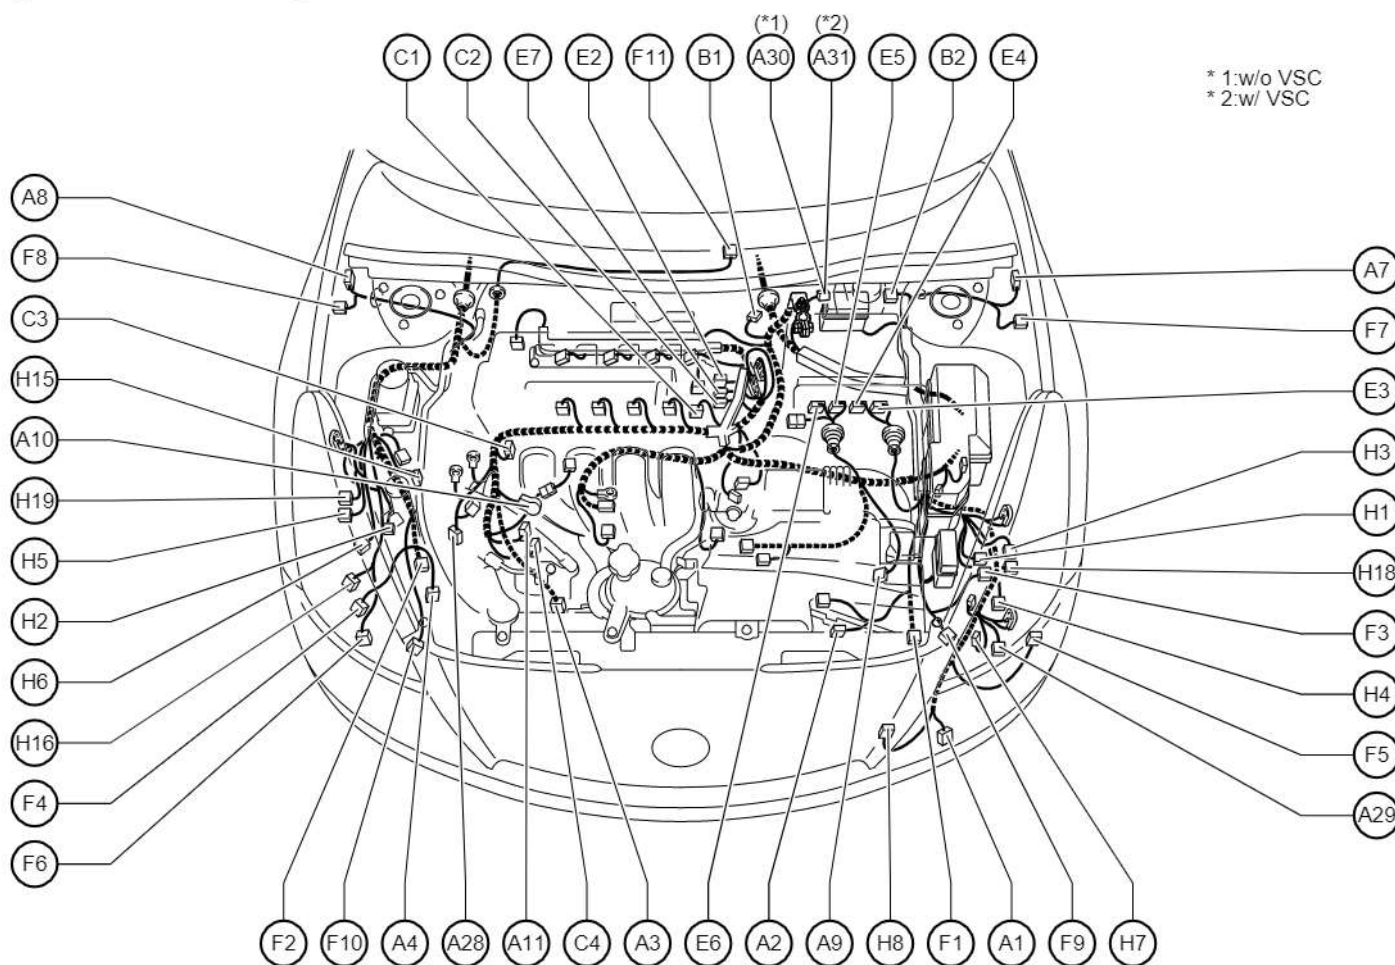

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Lock Sensor
 A/C Magnetic Clutch
 A 4 A/C Dual Pressure SW
 A/C Single Pressure SW
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A 9 Air Flow Meter
 A10 Alternator
 A11 Alternator
 A28 Air Pump Motor
 A29 Air Pump Relay
 A30 Skid Control ECU with Actuator
 A31 ABS & TRC & VSC Actuator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW
 C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve (VVL)
 C 3 Camshaft Timing Oil Control Valve (VVT)
 C 4 Crankshaft Position Sensor


E 2 EFI Water Temp. Sensor
 E 3 Engine ECU (M/T)
 E 4 Engine ECU (M/T)
 E 5 Engine ECU (M/T)
 E 6 Engine ECU (M/T)
 E 7 Engine Oil Level Warning SW

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F 10 Front Turn Signal Light RH
 F 11 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Horn (High)
 H 8 Horn (Low)
 H15 Headlight Cleaner Motor
 H16 Headlight Cleaner Relay
 H18 Headlight Control ECU
 H19 Headlight Control ECU

Position of Parts in Engine Compartment

[LHD : 2ZZ-GE]

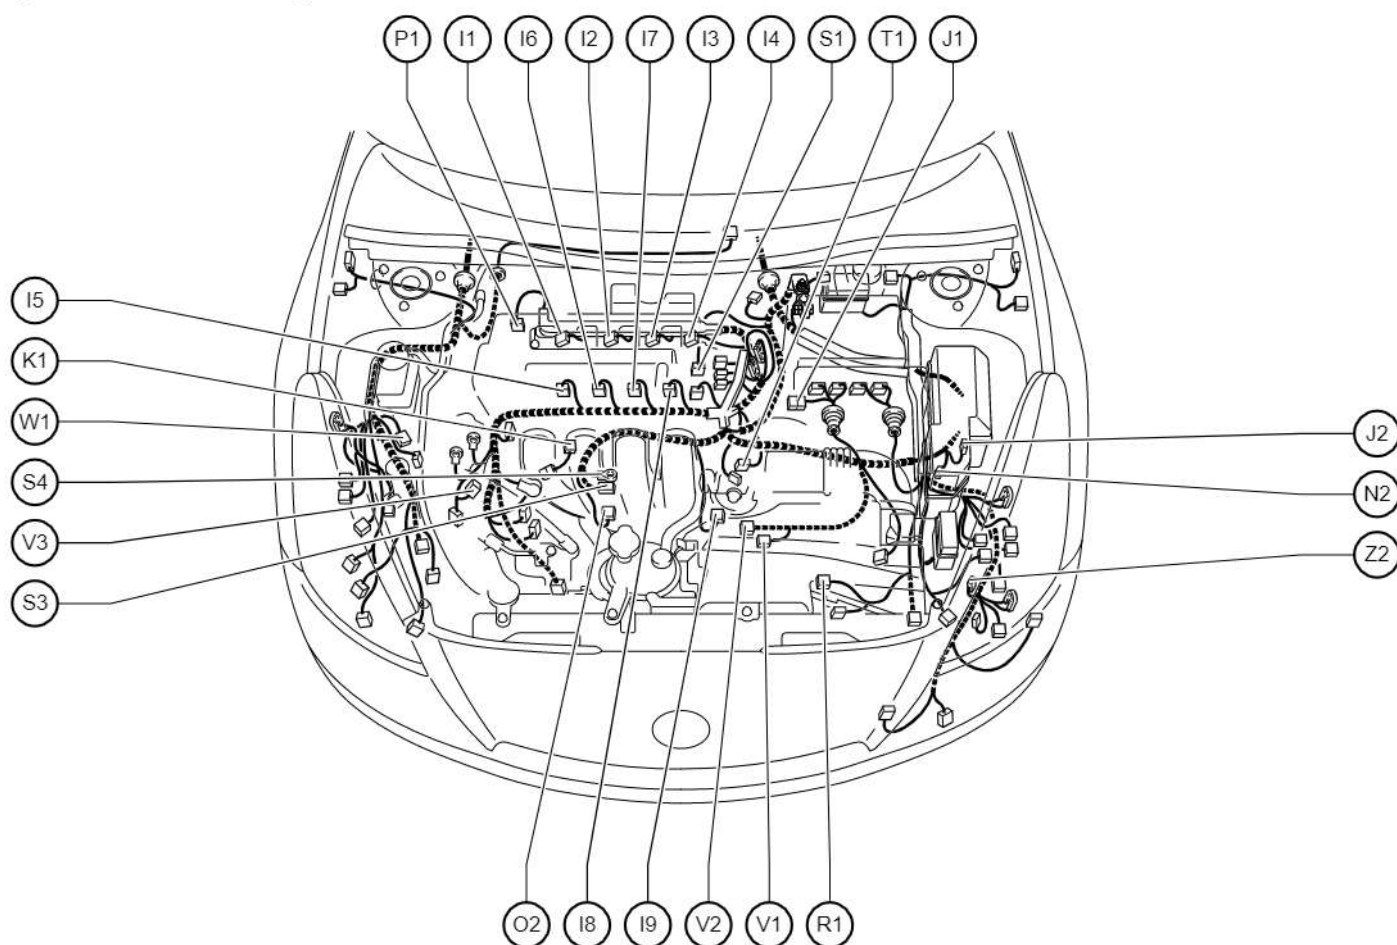

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Injector No.1
 I 6 Injector No.2
 I 7 Injector No.3
 I 8 Injector No.4
 I 9 ISC Valve

J 1 Junction Connector
 J 2 Junction Connector

K 1 Knock Sensor

N 2 Noise Filter (Ignition System)

O 2 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

S 1 Speed Sensor (Combination Meter)

S 3 Starter

S 4 Starter

T 1 Throttle Position Sensor

V 1 VSV (ACIS)

V 2 VSV (EVAP)

V 3 VSV (Air Pump)


W 1 Washer Motor

Z 2 Option Connector
 (Theft Deterrent Siren and Engine Hood Courtesy SW)

E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

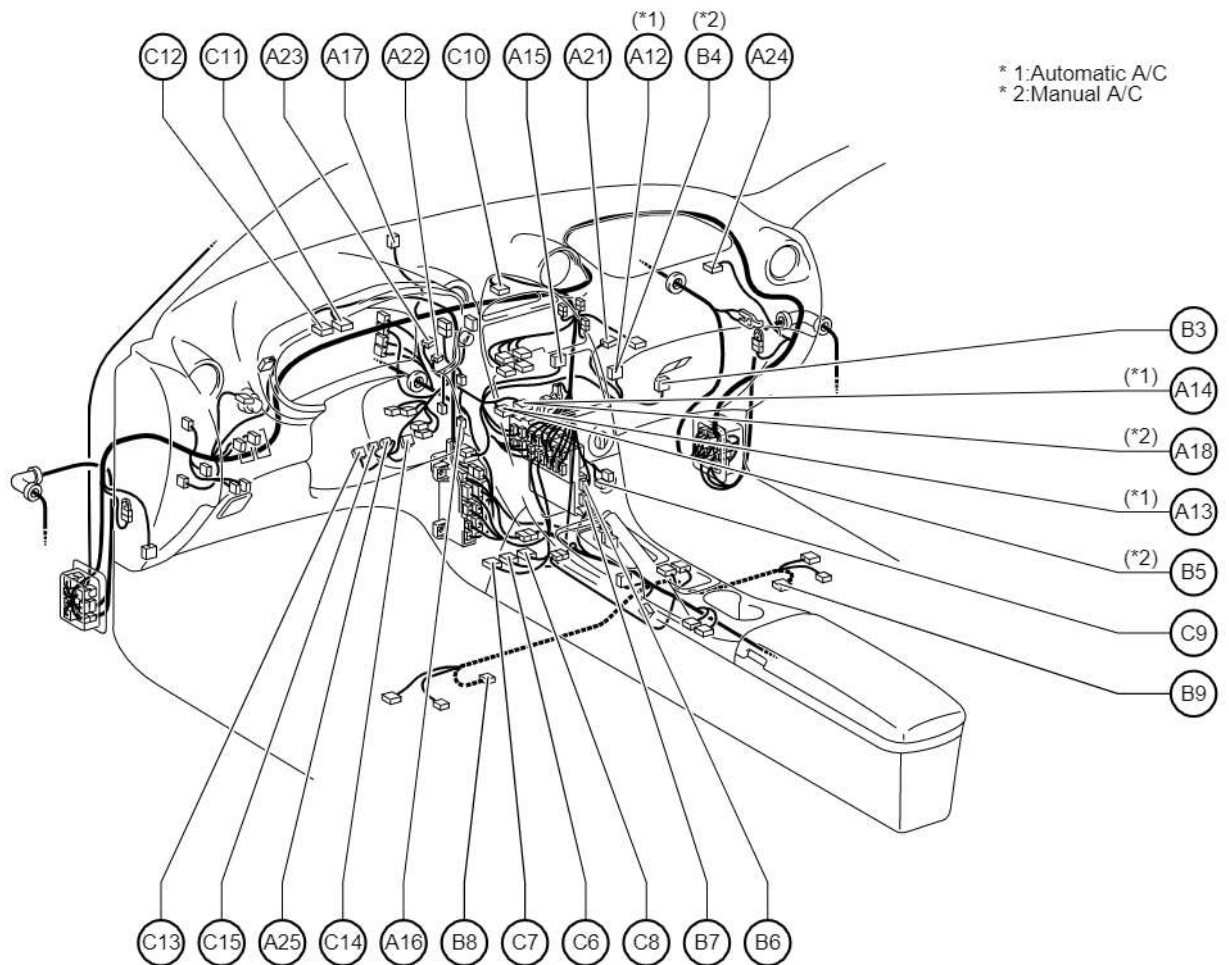


- A12 A/C Blower Motor Linear Controller
- A13 A/C Control Assembly
- A14 A/C Control Assembly
- A15 A/C Evaporator Temp. Sensor
- A16 A/C Room Temp. Sensor
- A17 A/C Solar Sensor
- A18 A/C SW
- A21 Air Inlet Control Servo Motor
- A22 Air Mix Control Servo Motor
- A23 Air Vent Mode Control Servo Motor
- A24 Airbag Squib (Front Passenger Airbag Assembly)
- A25 Airbag Squib (Steering Wheel Pad)

- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly
- C 8 Center Airbag Sensor Assembly
- C 9 Cigarette Lighter
- C10 Clock
- C11 Combination Meter
- C12 Combination Meter
- C13 Combination SW
- C14 Combination SW
- C15 Combination SW

- B 3 Blower Motor
- B 4 Blower Resistor
- B 5 Blower SW
- B 6 Body ECU
- B 7 Body ECU
- B 8 Buckle SW LH
- B 9 Buckle SW RH

Position of Parts in Instrument Panel

[LHD]

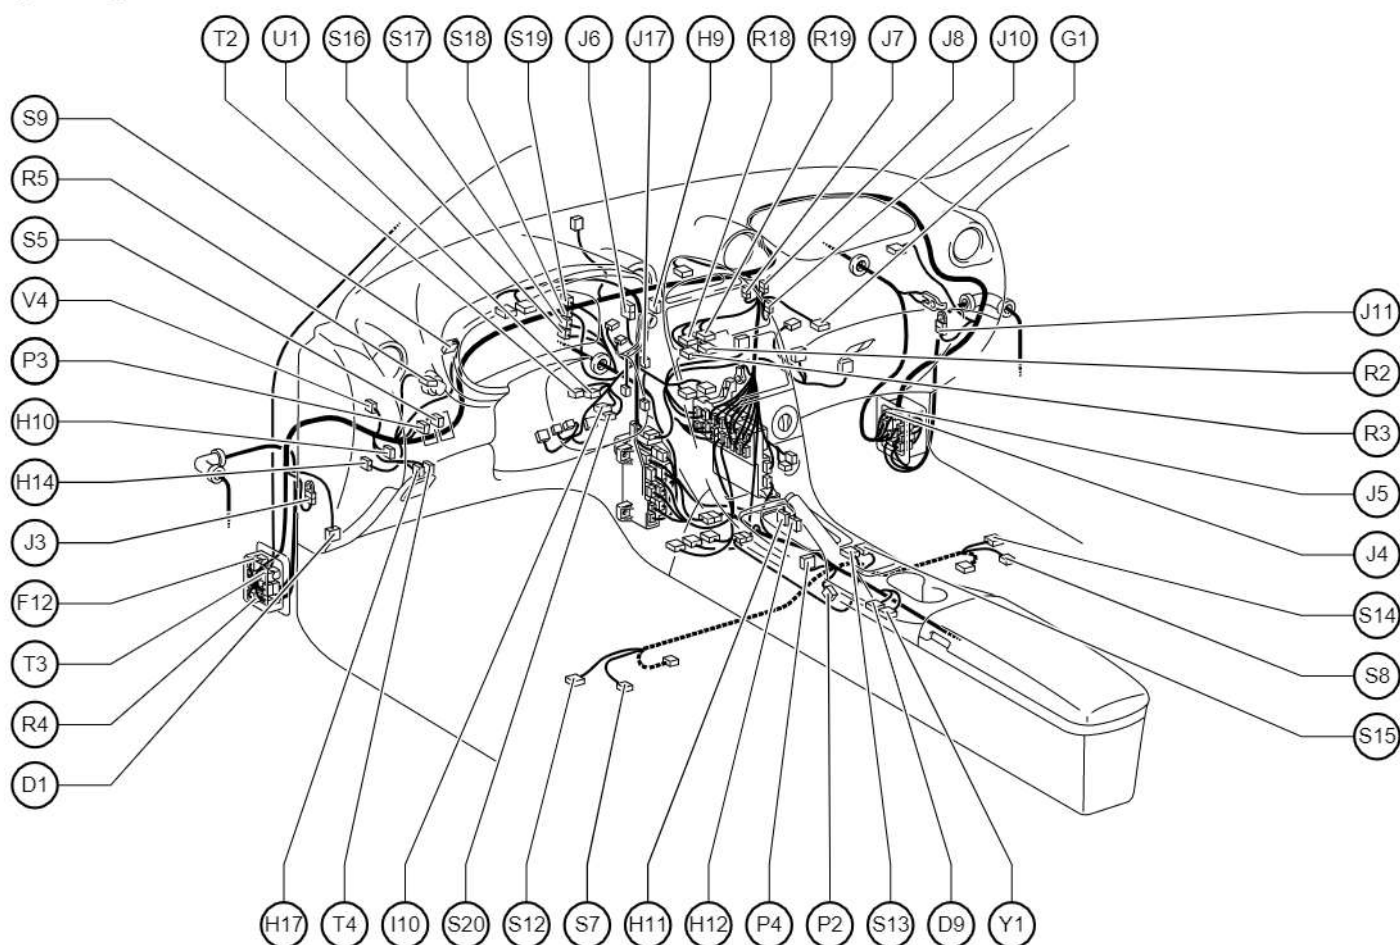

D 1 DLC3
D 9 Deceleration Sensor
F 12 Front Fog Light Relay
G 1 Glove Box Light and SW

H 9 Hazard SW
H10 Headlight Beam Level Control SW
H11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H14 Headlight Beam Level Control ECU
H17 Headlight Cleaner SW

I 10 Ignition SW

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 17 Junction Connector

P 2 Parking Brake SW
P 3 Power Window Lock SW
P 4 Power Window Master SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Fog Light Relay
R 5 Rheostat
R18 Radio and Player
R19 Radio and Player

S 5 Security Indicator
S 7 Side Airbag Squib LH
S 8 Side Airbag Squib RH
S 9 Stop Light SW
S12 Seat Heater LH
S13 Seat Heater Relay
S14 Seat Heater RH
S15 Seat Heater SW
S16 Skid Control ECU
S17 Skid Control ECU
S18 Skid Control ECU
S19 Skid Control ECU
S20 Steering Sensor

T 2 Transponder Key Amplifier
T 3 Turn Signal Flasher Relay
T 4 Traction Cut SW

U 1 Unlock Warning SW


V 4 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

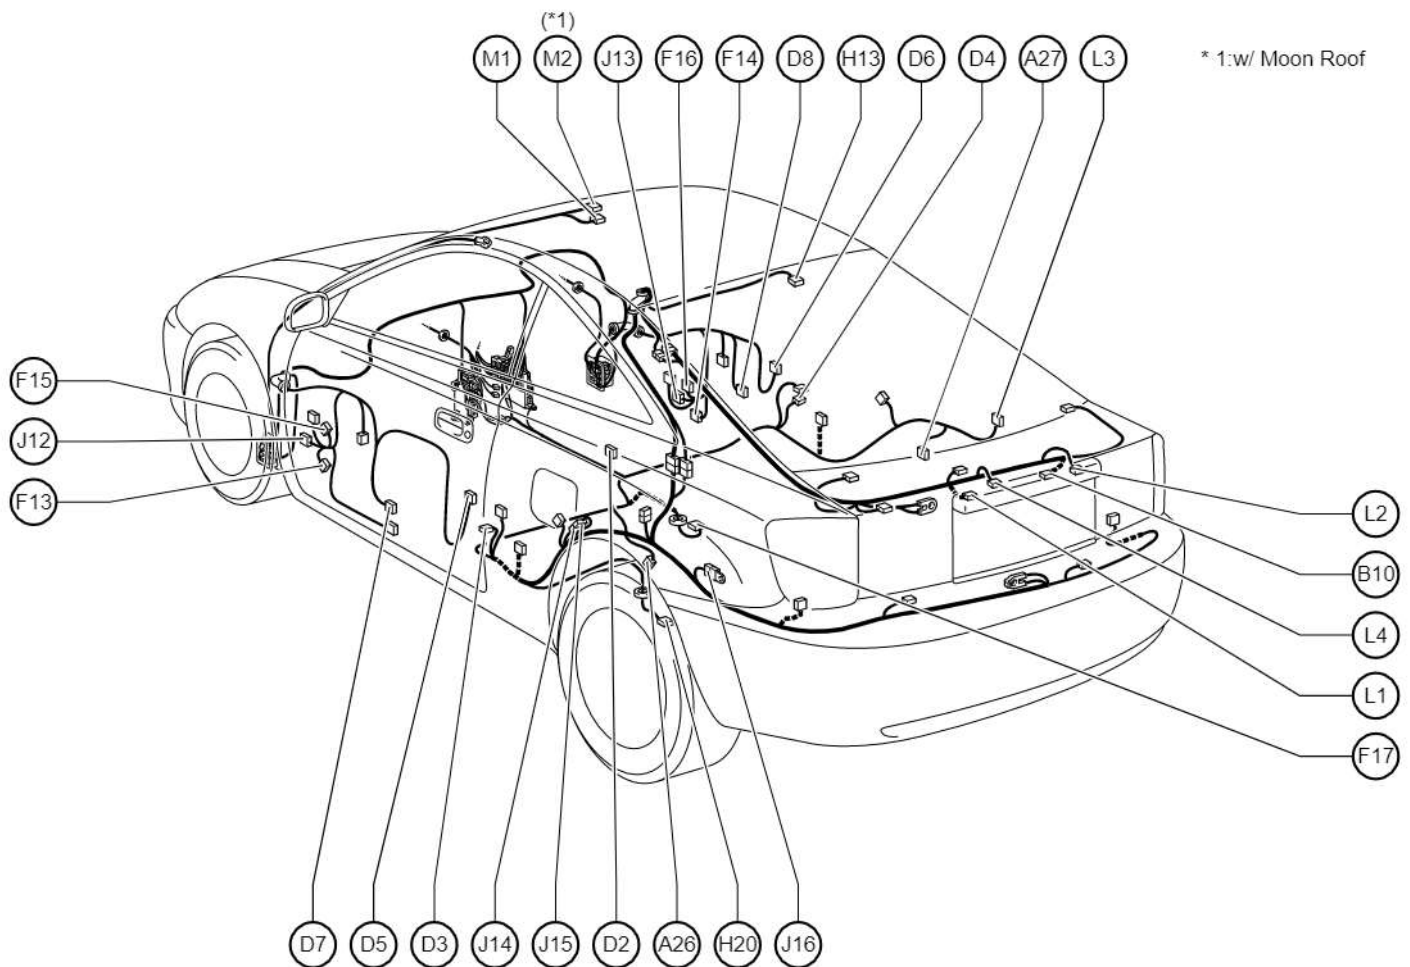

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B10 Back Door Lock Motor

D 2 Door Control Receiver
D 3 Door Courtesy SW LH
D 4 Door Courtesy SW RH
D 5 Door Key Lock and Unlock SW LH
Door Lock Detection SW LH
Door Lock Motor LH
D 6 Door Key Lock and Unlock SW RH
Door Lock Detection SW RH
Door Lock Motor RH
D 7 Door Side Airbag Sensor LH
D 8 Door Side Airbag Sensor RH

F 13 Front Door Speaker LH
F 14 Front Door Speaker RH
F 15 Front Door Tweeter Speaker LH
F 16 Front Door Tweeter Speaker RH
F 17 Fuel Pump
Fuel Sender

H13 High Mounted Stop Light
H20 Height Control Sensor


J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Light
L 4 Luggage Compartment Light SW

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW
Personal Light

Position of Parts in Body

[LHD]

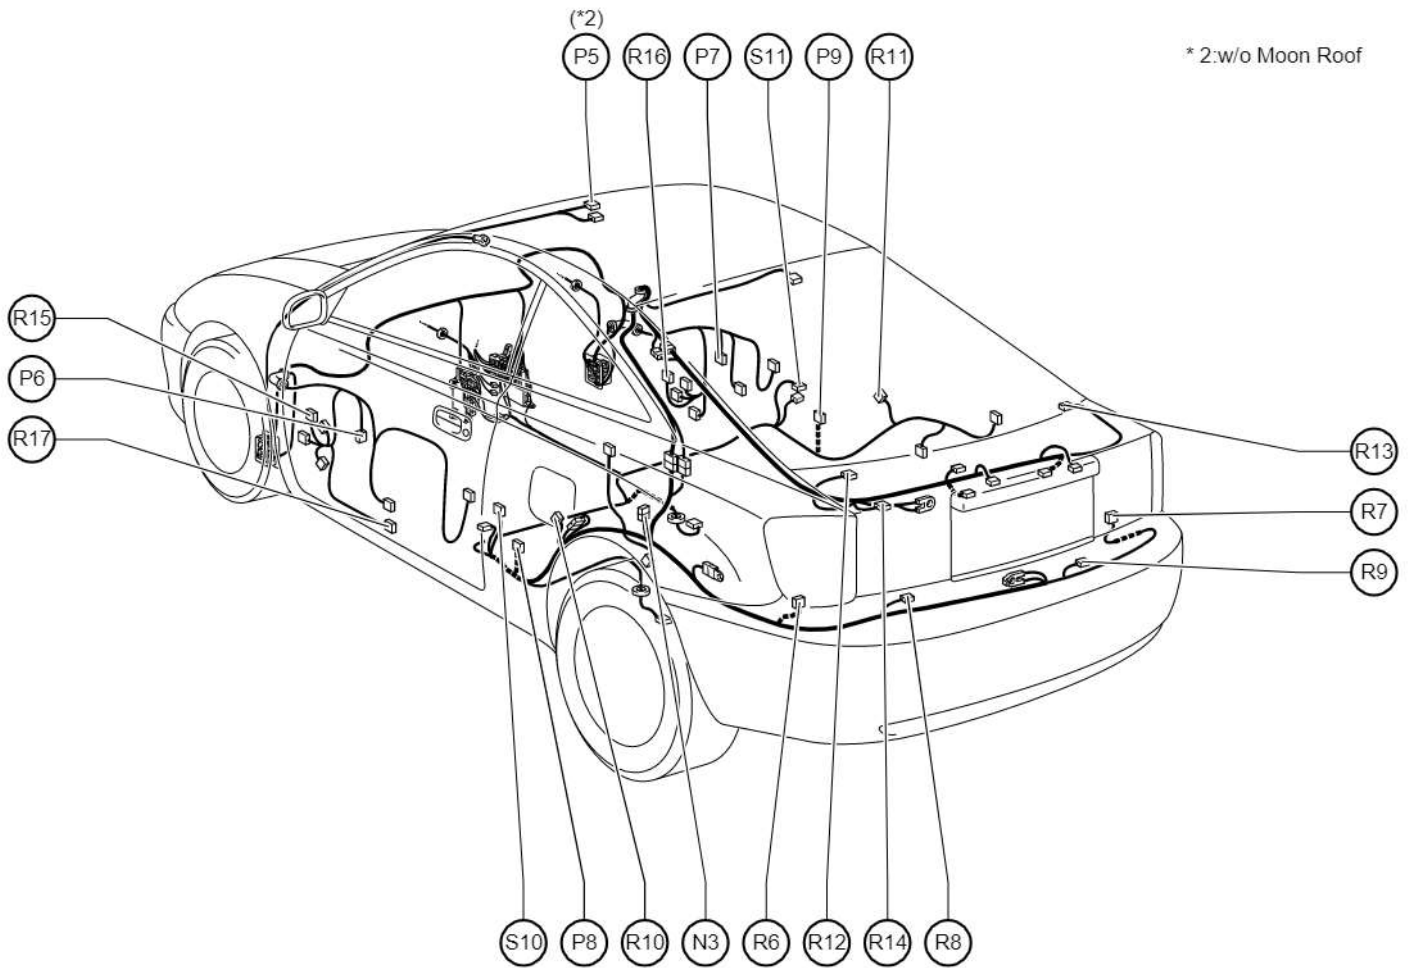

N 3 Noise Filter (Rear Window Defogger)

S 10 Side Airbag Sensor LH

S 11 Side Airbag Sensor RH

P 5 Personal Light (w/o Moon Roof)

P 6 Power Window Motor LH

P 7 Power Window Motor RH

P 8 Pretensioner LH

P 9 Pretensioner RH

R 6 Rear Combination Light LH

R 7 Rear Combination Light RH

R 8 Rear Fog Light LH

R 9 Rear Fog Light RH

R 10 Rear Speaker LH

R 11 Rear Speaker RH

R 12 Rear Window Defogger

R 13 Rear Window Defogger

R 14 Rear Wiper Motor and Relay

R 15 Remote Control Mirror LH


R 16 Remote Control Mirror RH

R 17 Remote Control Mirror SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE]

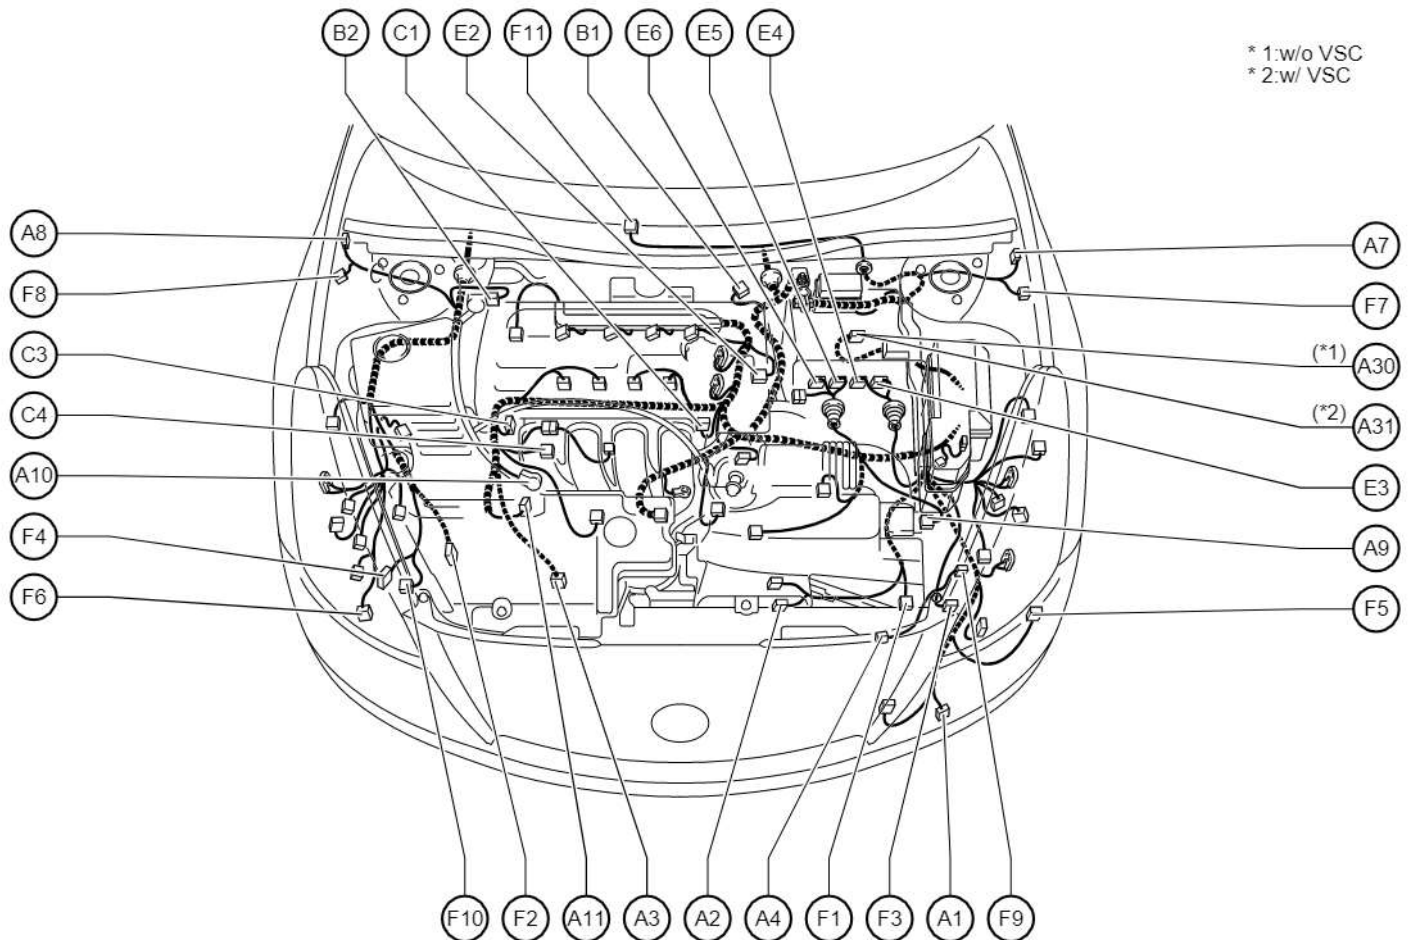

* 1:w/o VSC
* 2:w/ VSC

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Lock Sensor
A/C Magnetic Clutch
- A 4 A/C Dual Pressure SW
A/C Single Pressure SW
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A10 Alternator
- A11 Alternator
- A30 Skid Control ECU with Actuator
- A31 ABS & TRC & VSC Actuator

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW


- C 1 Camshaft Position Sensor
- C 3 Camshaft Timing Oil Control Valve (VVT)
- C 4 Crankshaft Position Sensor

- E 2 EFI Water Temp. Sensor
- E 3 Engine ECU (M/T)
- E 4 Engine ECU (M/T)
- E 5 Engine ECU (M/T)
- E 6 Engine ECU (M/T)

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F10 Front Turn Signal Light RH
- F11 Front Wiper Motor

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE]

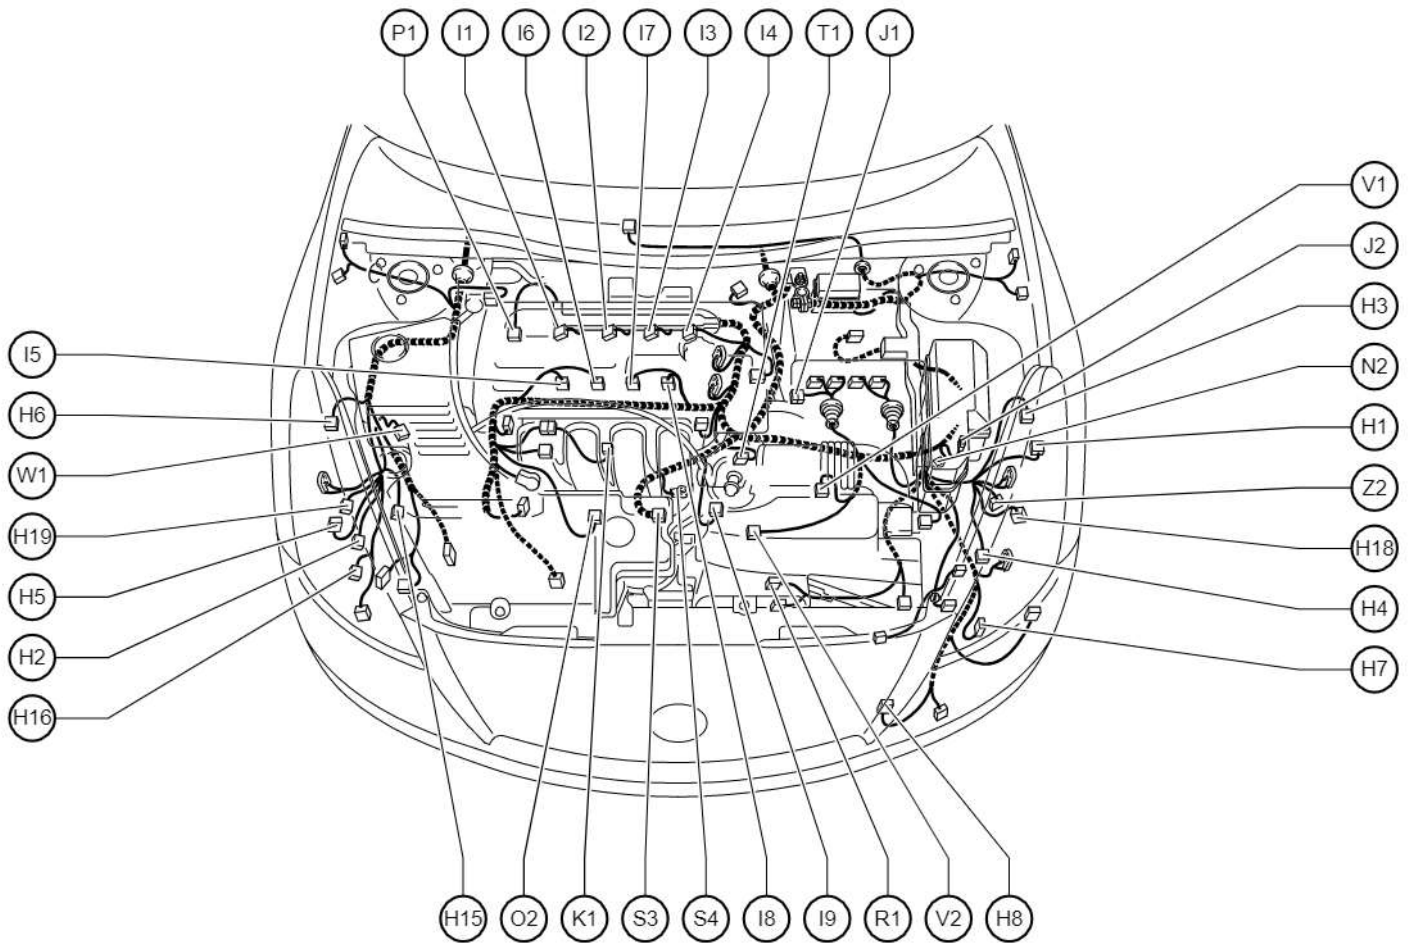

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Horn (High)
 H 8 Horn (Low)
 H15 Headlight Cleaner Motor
 H16 Headlight Cleaner Relay
 H18 Headlight Control ECU
 H19 Headlight Control ECU

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Injector No.1
 I 6 Injector No.2
 I 7 Injector No.3
 I 8 Injector No.4
 I 9 ISC Valve

J 1 Junction Connector
 J 2 Junction Connector

K 1 Knock Sensor
 N 2 Noise Filter (Ignition System)
 O 2 Oil Pressure SW
 P 1 Power Steering Oil Pressure SW
 R 1 Radiator Fan Motor
 S 3 Starter
 S 4 Starter

T 1 Throttle Position Sensor

V 1 VSV (ACIS)
 V 2 VSV (EVAP)


W 1 Washer Motor

Z 2 Option Connector
 (Theft Deterrent Siren and Engine Hood Courtesy SW)

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 2ZZ-GE]

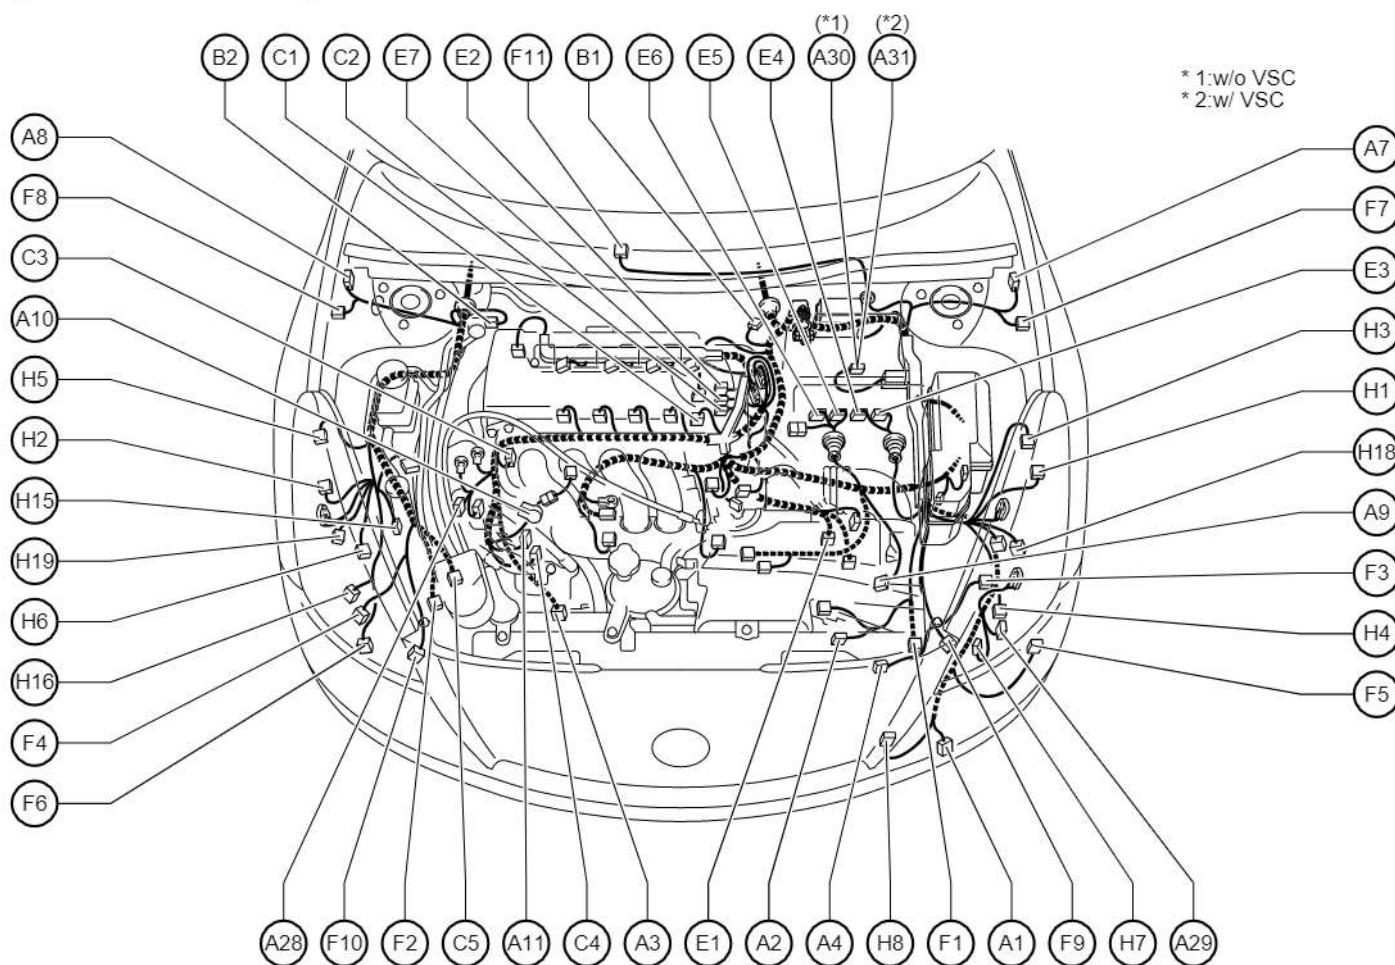

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Lock Sensor
 A/C Magnetic Clutch
 A 4 A/C Dual Pressure SW
 A/C Single Pressure SW
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A 9 Air Flow Meter
 A10 Alternator
 A11 Alternator
 A28 Air Pump Motor
 A29 Air Pump Relay
 A30 Skid Control ECU with Actuator
 A31 ABS & TRC & VSC Actuator

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve (VVL)
 C 3 Camshaft Timing Oil Control Valve (VVT)
 C 4 Crankshaft Position Sensor
 C 5 Cruise Control Actuator

E 1 ECT Solenoid
 E 2 EFI Water Temp. Sensor
 E 3 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 4 Engine and ECT ECU (A/T)
 Engine ECU (M/T)


E 5 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 6 Engine and ECT ECU (A/T)
 Engine ECU (M/T)
 E 7 Engine Oil Level Warning SW

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F10 Front Turn Signal Light RH
 F11 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Horn (High)
 H 8 Horn (Low)
 H15 Headlight Cleaner Motor
 H16 Headlight Cleaner Relay
 H18 Headlight Control ECU
 H19 Headlight Control ECU

Position of Parts in Engine Compartment

[RHD : 2ZZ-GE]

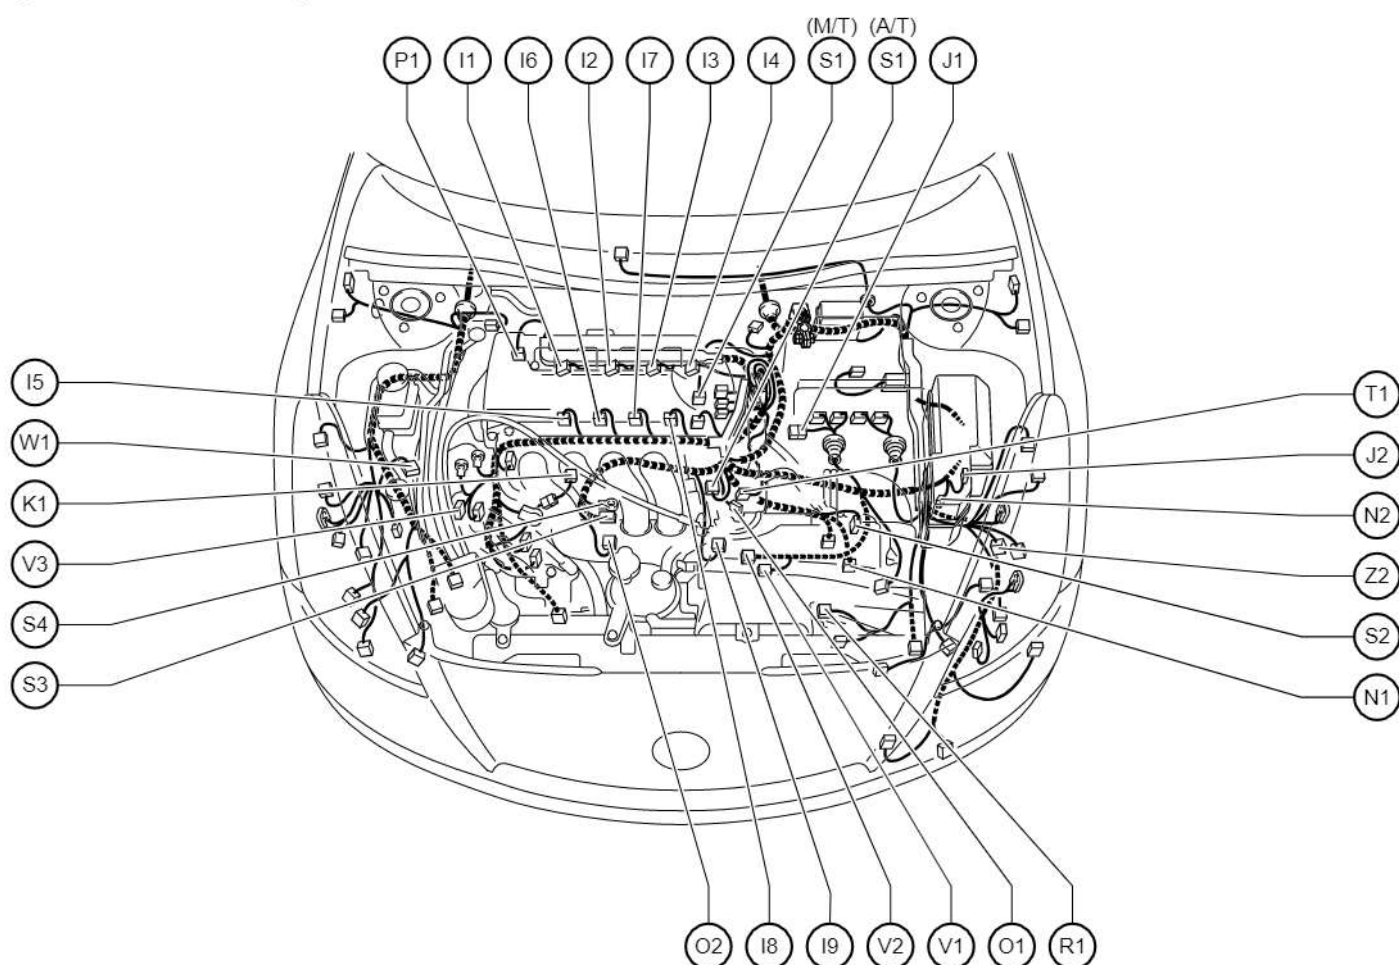

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Injector No.1
- I 6 Injector No.2
- I 7 Injector No.3
- I 8 Injector No.4
- I 9 ISC Valve

- J 1 Junction Connector
- J 2 Junction Connector

- K 1 Knock Sensor

- N 1 Neutral Start SW
- N 2 Noise Filter (Ignition System)

- O 1 O/D Direct Clutch Speed Sensor
- O 2 Oil Pressure SW

- P 1 Power Steering Oil Pressure SW

- R 1 Radiator Fan Motor

- S 1 Speed Sensor (Combination Meter)
- S 2 Speed Sensor (Turbine Speed Sensor)
- S 3 Starter
- S 4 Starter

- T 1 Throttle Position Sensor

- V 1 VSV (ACIS)
- V 2 VSV (EVAP)
- V 3 VSV (Air Pump)


- W 1 Washer Motor

- Z 2 Option Connector
(Theft Deterrent Siren and Engine Hood Courtesy SW)

E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

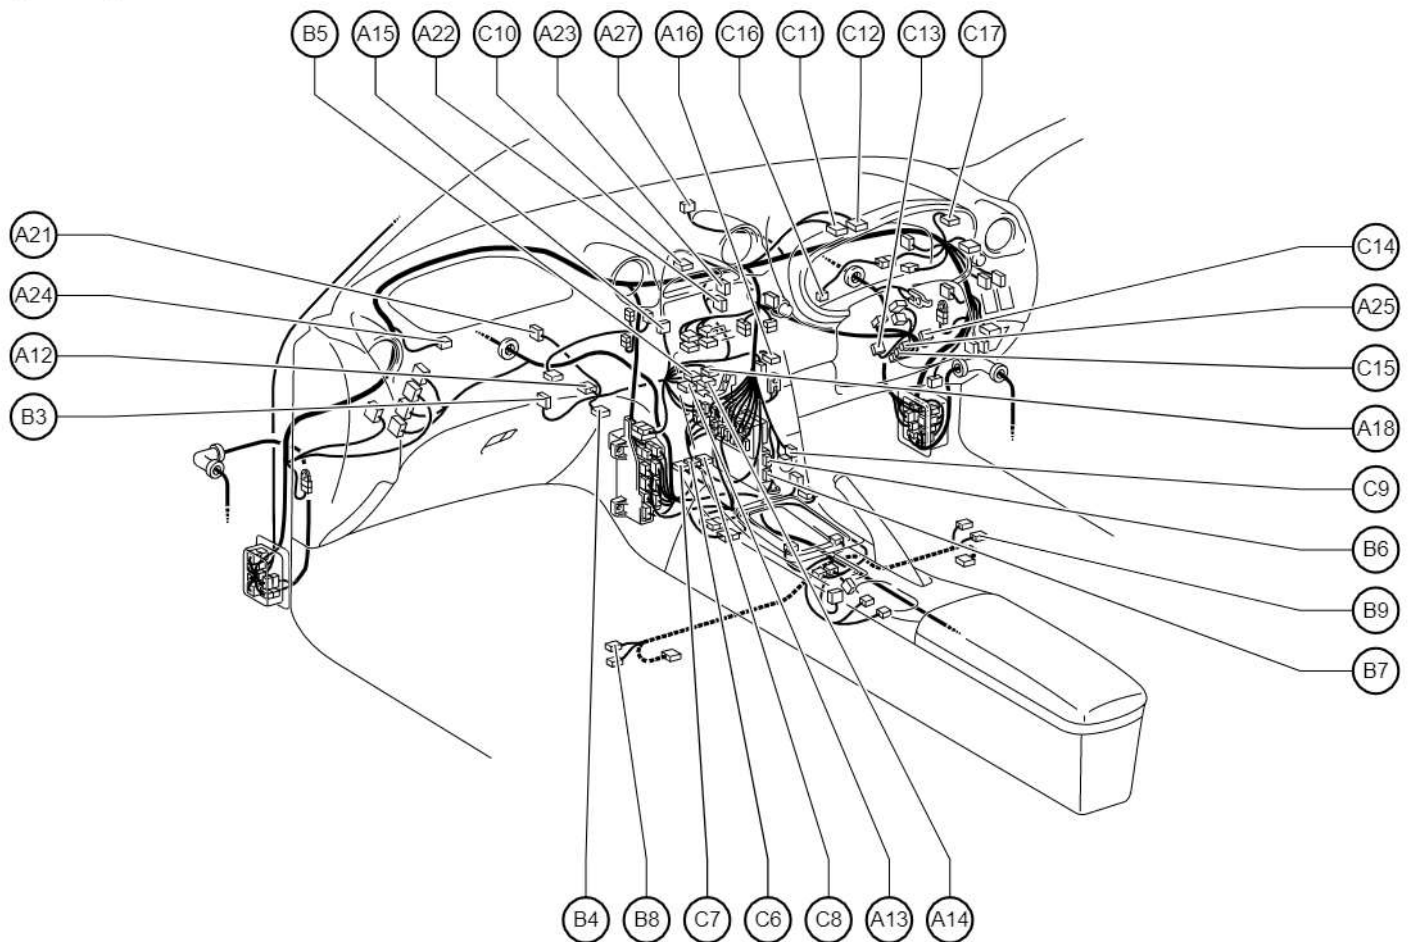


- A 12 A/C Blower Motor Linear Controller
- A 13 A/C Control Assembly
- A 14 A/C Control Assembly
- A 15 A/C Evaporator Temp. Sensor
- A 16 A/C Room Temp. Sensor
- A 18 A/C SW
- A 21 Air Inlet Control Servo Motor
- A 22 Air Mix Control Servo Motor
- A 23 Air Vent Mode Control Servo Motor
- A 24 Airbag Squib (Front Passenger Airbag Assembly)
- A 25 Airbag Squib (Steering Wheel Pad)
- A 27 ABS Speed Sensor Rear RH

- B 3 Blower Motor
- B 4 Blower Resistor
- B 5 Blower SW
- B 6 Body ECU
- B 7 Body ECU
- B 8 Buckle SW LH
- B 9 Buckle SW RH

- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly
- C 8 Center Airbag Sensor Assembly
- C 9 Cigarette Lighter
- C 10 Clock
- C 11 Combination Meter
- C 12 Combination Meter
- C 13 Combination SW
- C 14 Combination SW
- C 15 Combination SW
- C 16 Cruise Control Clutch SW
- C 17 Cruise Control ECU

Position of Parts in Instrument Panel

[RHD]

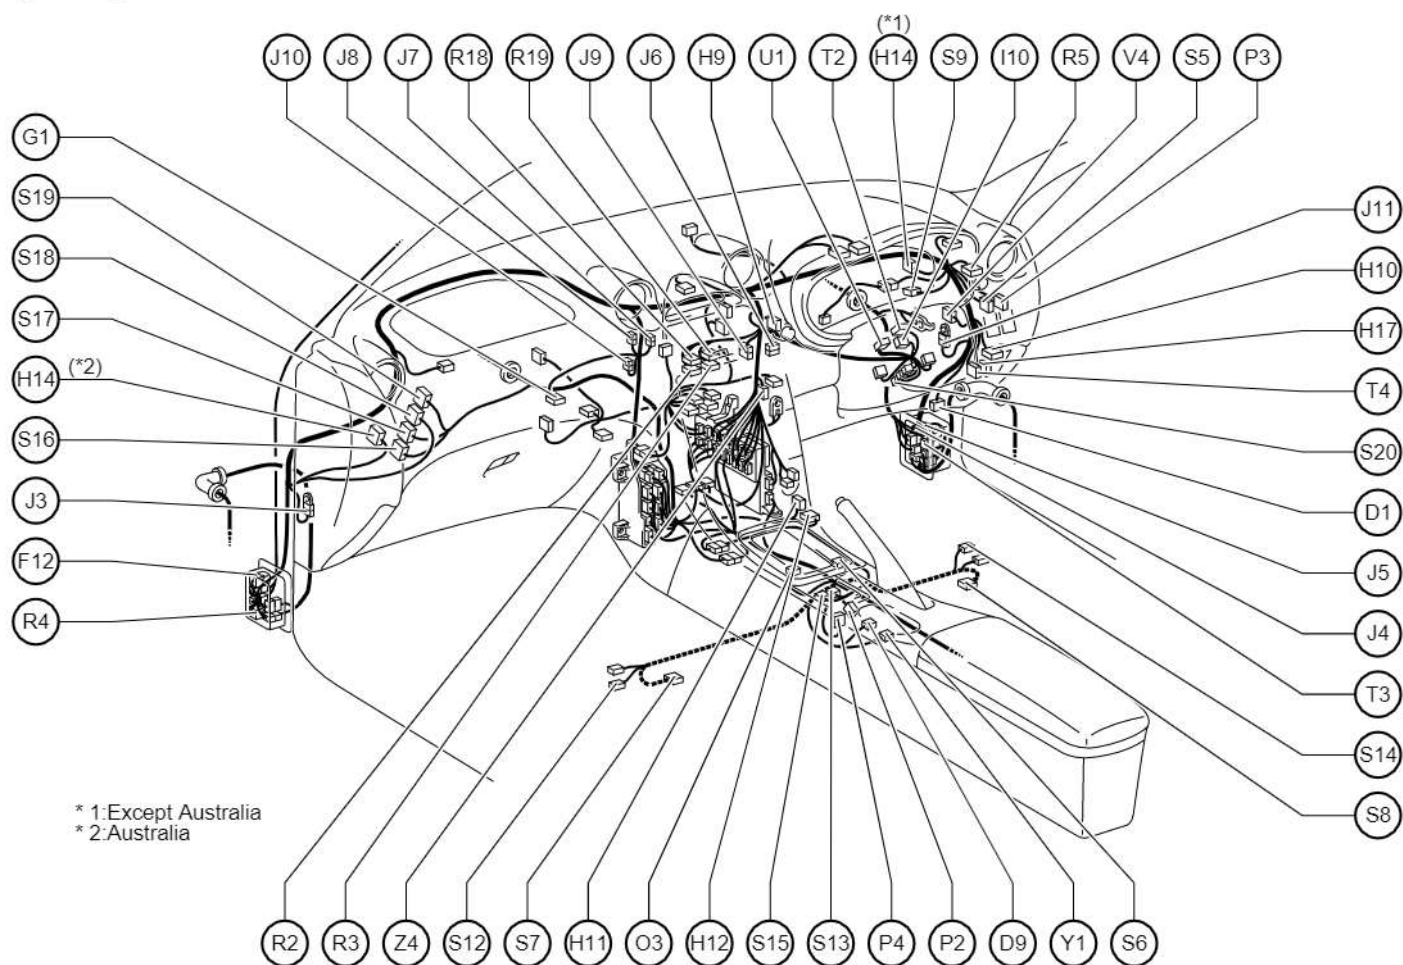

D 1 DLC3
D 9 Deceleration Sensor
F 12 Front Fog Light Relay
G 1 Glove Box Light and SW

H 9 Hazard SW
H 10 Headlight Beam Level Control SW
H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 14 Headlight Beam Level Control ECU
H 17 Headlight Cleaner SW

I 10 Ignition SW

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector

O 3 O/D Main SW

P 2 Parking Brake SW
P 3 Power Window Lock SW
P 4 Power Window Master SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Fog Light Relay
R 5 Rheostat
R 18 Radio and Player
R 19 Radio and Player

S 5 Security Indicator
S 6 Shift Lock Control ECU
S 7 Side Airbag Squib LH
S 8 Side Airbag Squib RH
S 9 Stop Light SW
S 12 Seat Heater LH
S 13 Seat Heater Relay
S 14 Seat Heater RH
S 15 Seat Heater SW
S 16 Skid Control ECU
S 17 Skid Control ECU
S 18 Skid Control ECU
S 19 Skid Control ECU
S 20 Steering Sensor

T 2 Transponder Key Amplifier
T 3 Turn Signal Flasher Relay
T 4 Traction Cut SW

U 1 Unlock Warning SW

V 4 VSC Warning Buzzer


Y 1 Yaw Rate Sensor

Z 4 Option Connector (TVSS ECU)

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

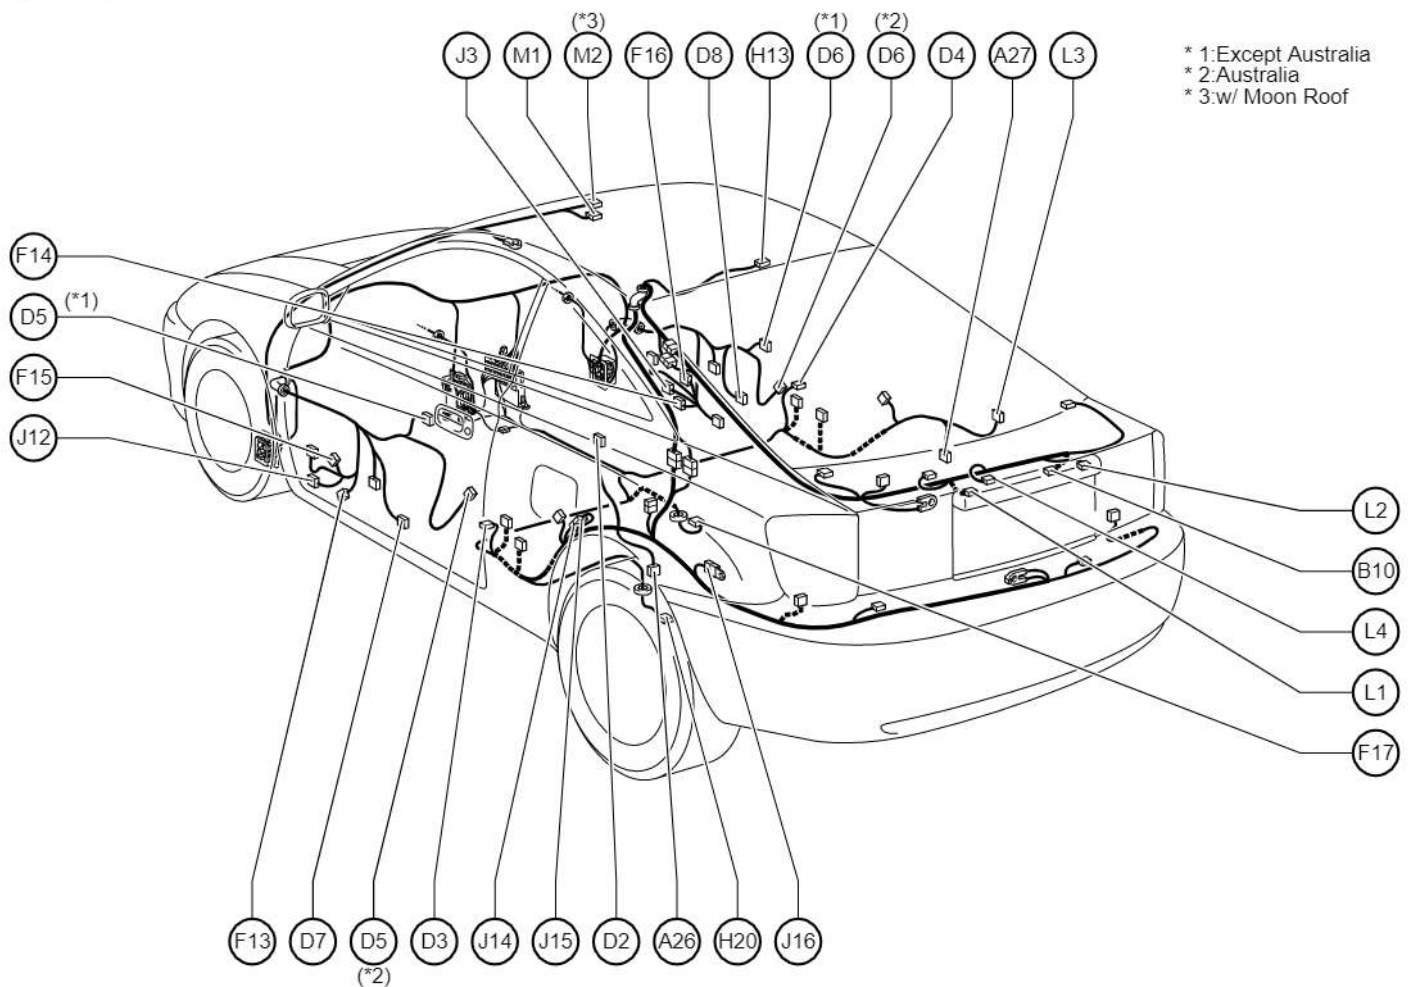

* 1:Except Australia
* 2:Australia
* 3:w/ Moon Roof

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B10 Back Door Lock Motor

D 2 Door Control Receiver
D 3 Door Courtesy SW LH
D 4 Door Courtesy SW RH
D 5 Door Key Lock and Unlock SW LH
Door Lock Detection SW LH
Door Lock Motor LH
D 6 Door Key Lock and Unlock SW RH
Door Lock Detection SW RH
Door Lock Motor RH
D 7 Door Side Airbag Sensor LH
D 8 Door Side Airbag Sensor RH

F13 Front Door Speaker LH
F14 Front Door Speaker RH
F15 Front Door Tweeter Speaker LH
F16 Front Door Tweeter Speaker RH
F17 Fuel Pump
Fuel Sender

H13 High Mounted Stop Light
H20 Height Control Sensor


J 3 Junction Connector
J 12 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Light
L 4 Luggage Compartment Light SW

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW
Personal Light

Position of Parts in Body

[RHD]

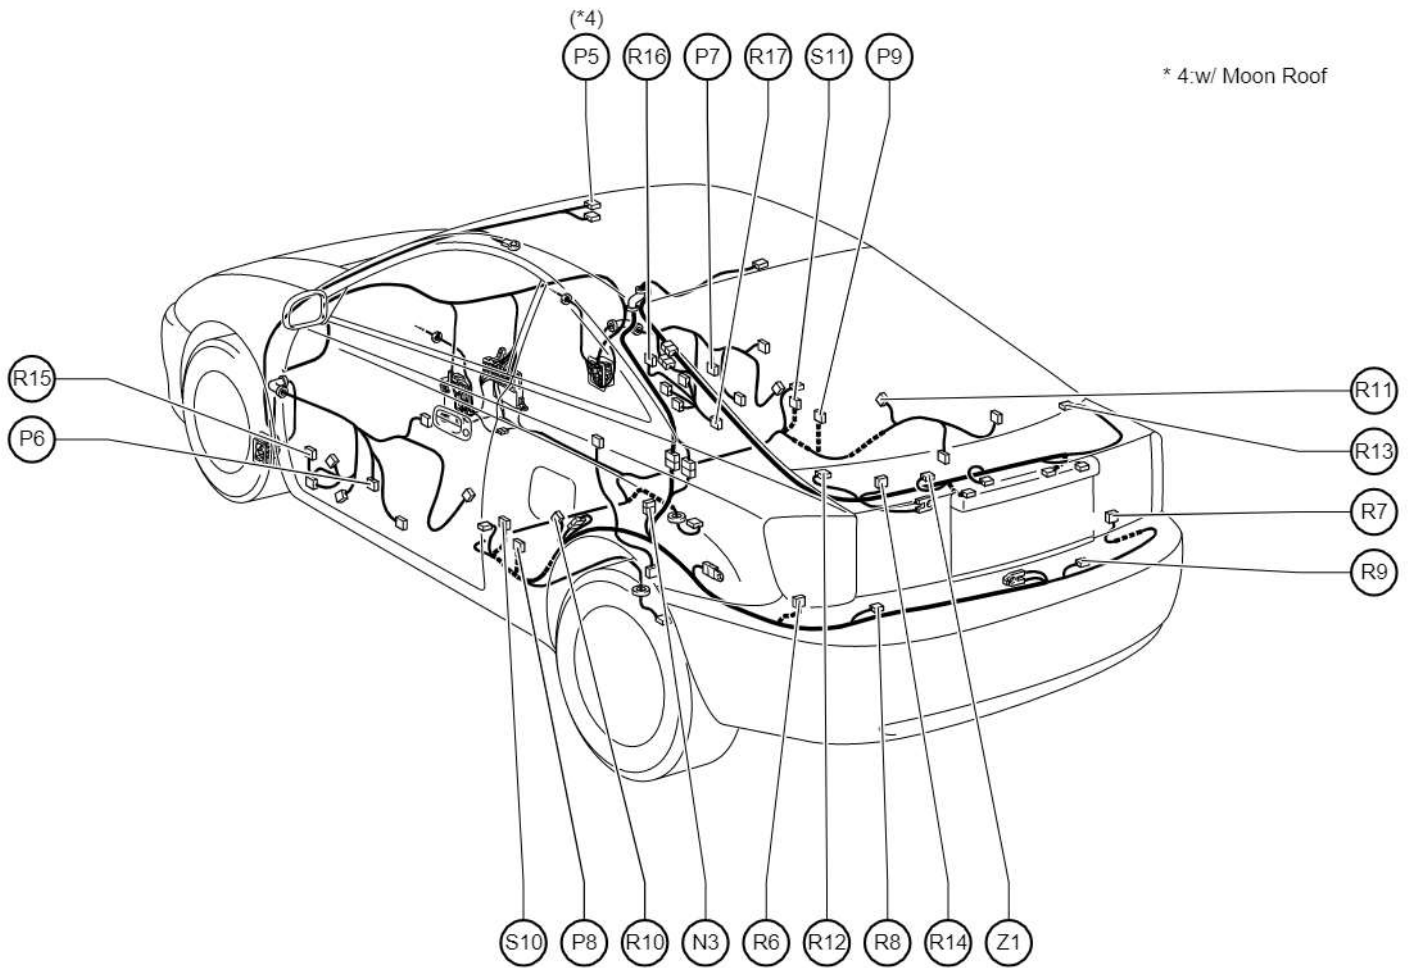

N 3 Noise Filter (Rear Window Defogger)

P 5 Personal Light (w/o Moon Roof)

P 6 Power Window Motor LH

P 7 Power Window Motor RH

P 8 Pretensioner LH

P 9 Pretensioner RH

R 6 Rear Combination Light LH

R 7 Rear Combination Light RH

R 8 Rear Fog Light LH

R 9 Rear Fog Light RH

R10 Rear Speaker LH

R11 Rear Speaker RH

R12 Rear Window Defogger

R13 Rear Window Defogger

R14 Rear Wiper Motor and Relay

R15 Remote Control Mirror LH

R16 Remote Control Mirror RH

R17 Remote Control Mirror SW

S10 Side Airbag Sensor LH

S11 Side Airbag Sensor RH


Z 1 Option Connector (High Mounted Stop Light)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 1ZZ-FE]

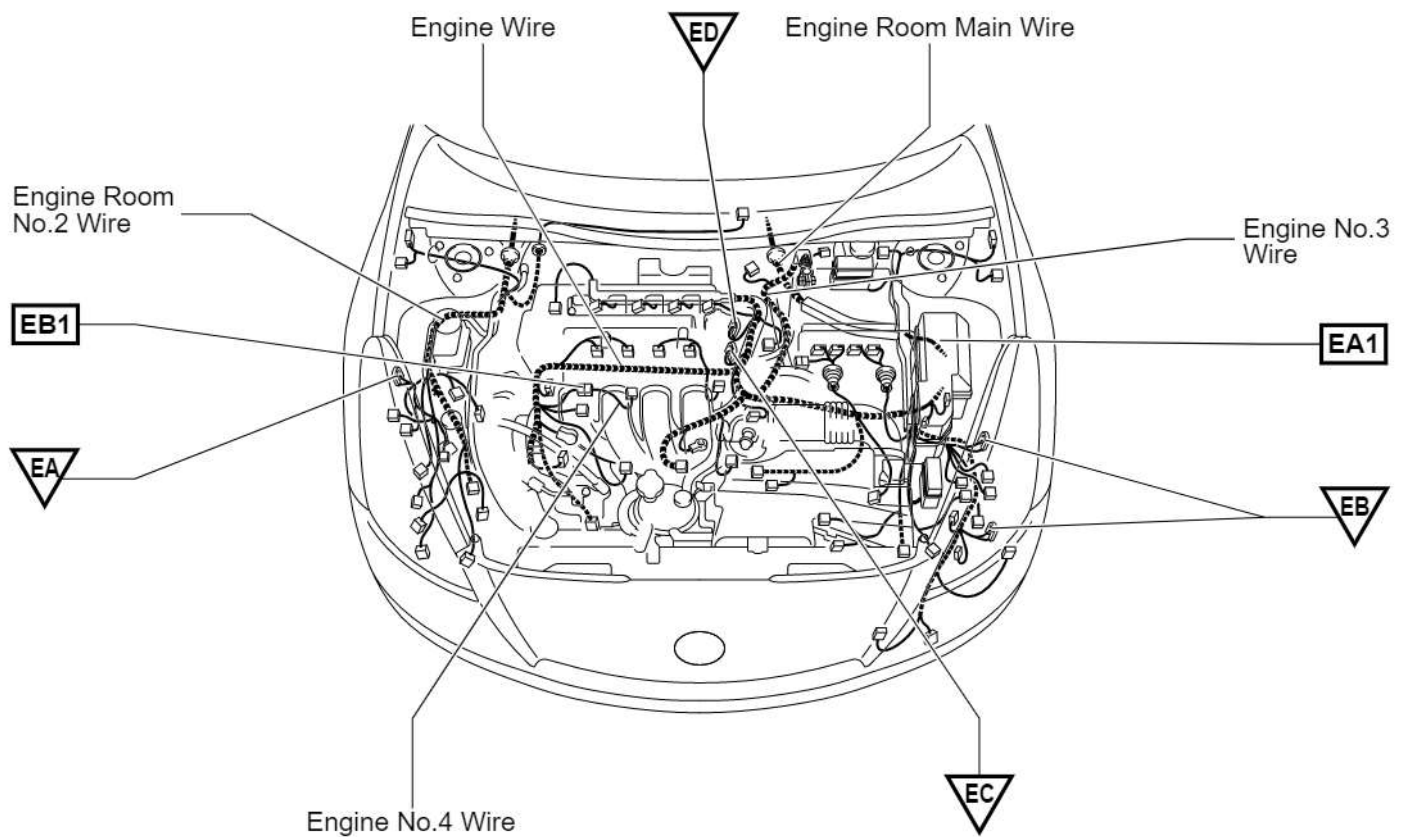

Connector Joining Wire Harness and Wire Harness

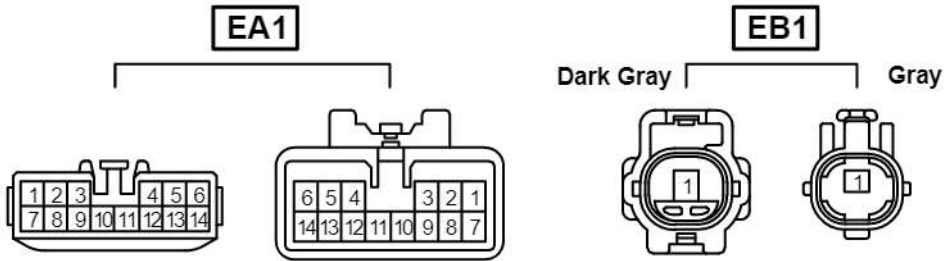


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of Engine Room No.1)
EB1	Engine No.4 Wire and Engine Wire (Under the Intake Manifold)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 2ZZ-GE]

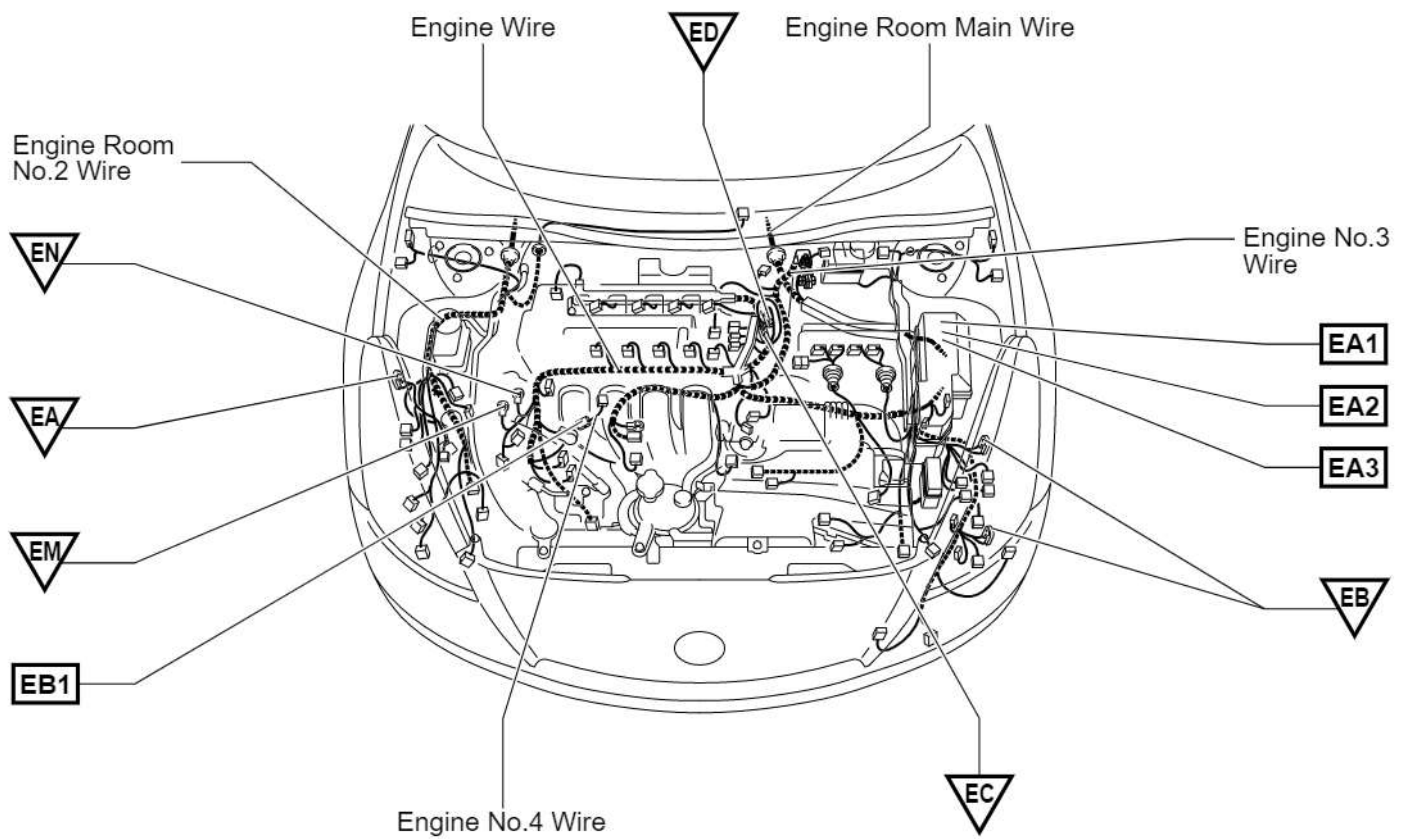

Connector Joining Wire Harness and Wire Harness

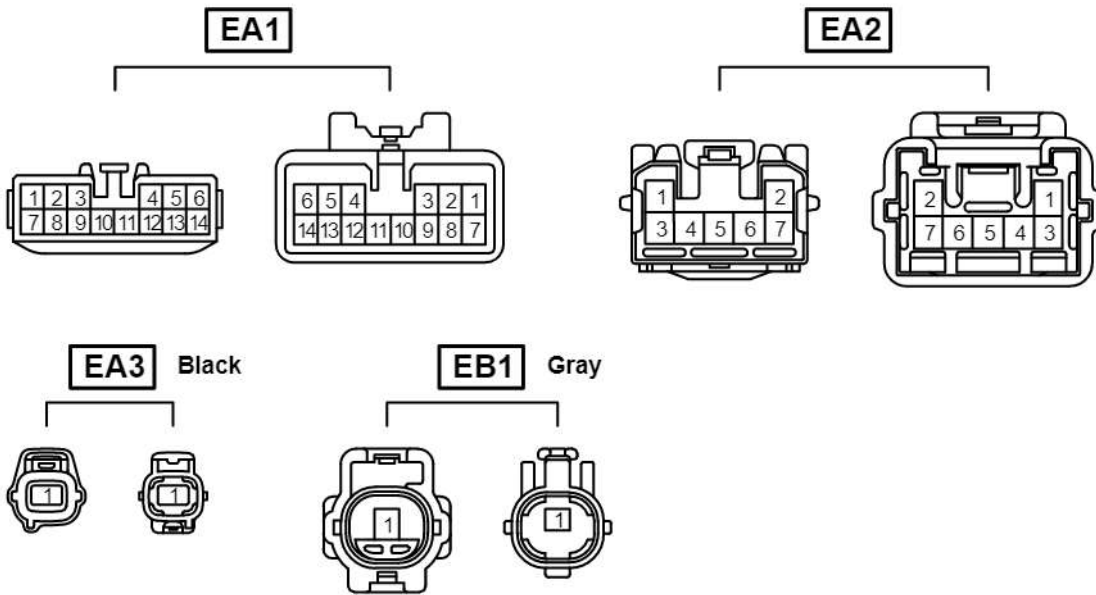


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of Engine Room No.1)
EA2	Engine Room Main Wire and Engine Wire (Inside of Engine Room No.1)
EA3	Engine Room Main Wire and Engine Wire (Inside of Engine Room No.1)
EB1	Engine No.4 Wire and Engine Wire (Under the Intake Manifold)


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[LHD]

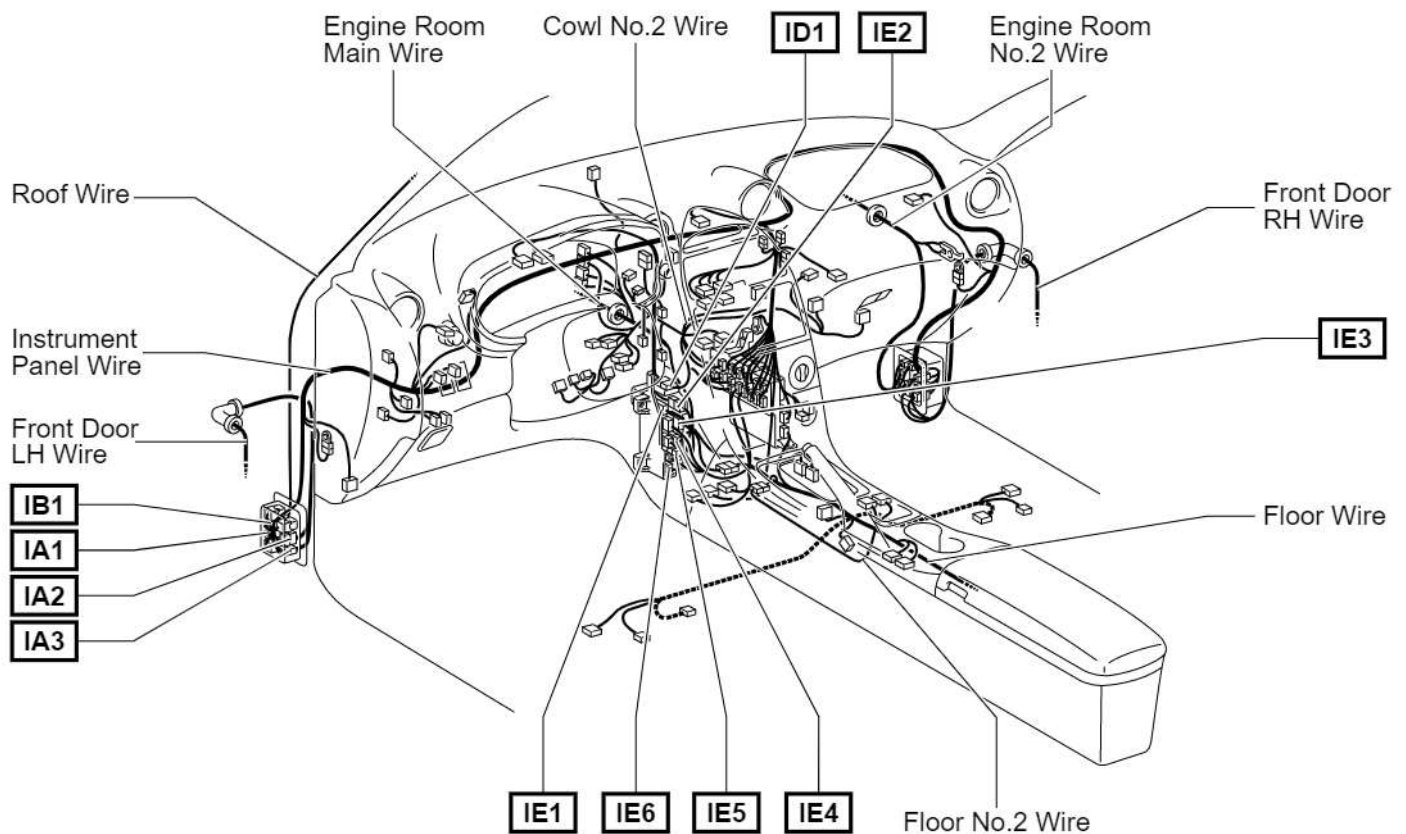

▽ : Location of Ground Points

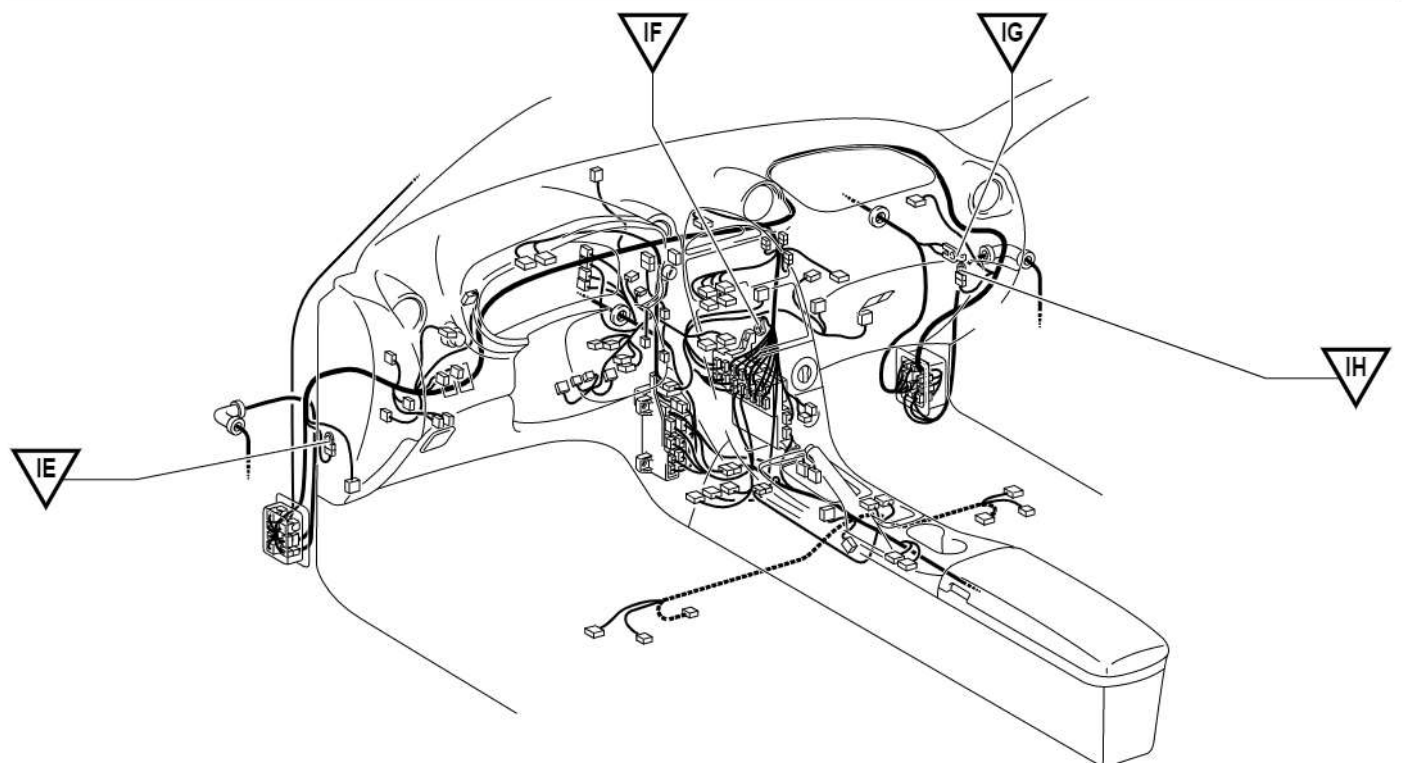

Connector Joining Wire Harness and Wire Harness

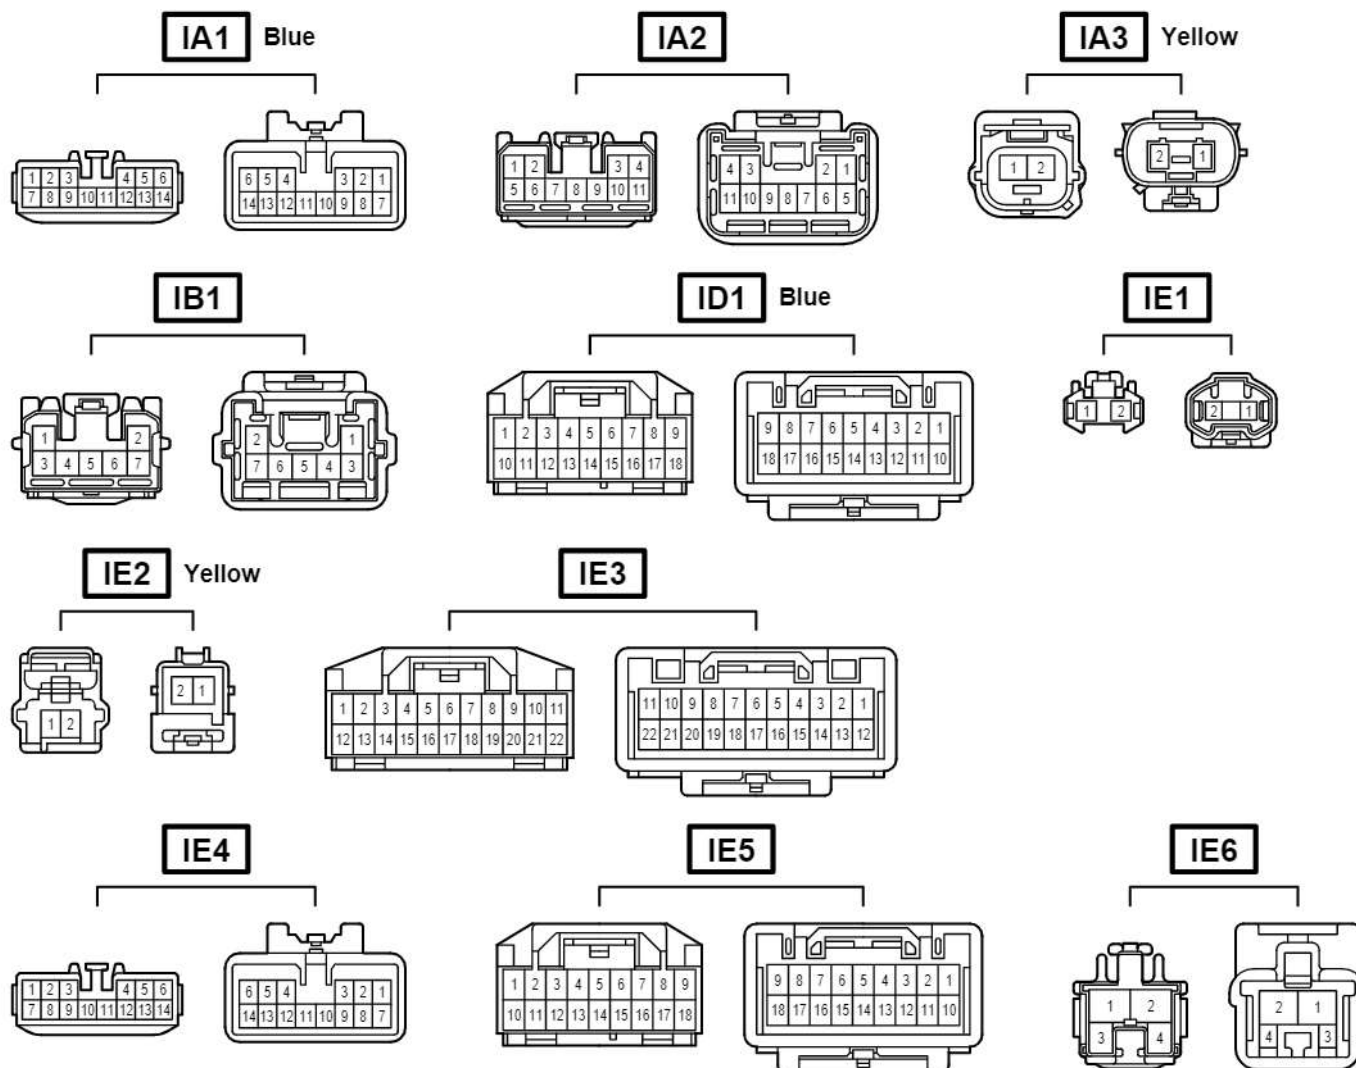


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	
IA3	
IB1	Roof Wire and Instrument Panel Wire (Left Kick Panel)
ID1	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE1	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE2	
IE3	
IE4	
IE5	
IE6	


E ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

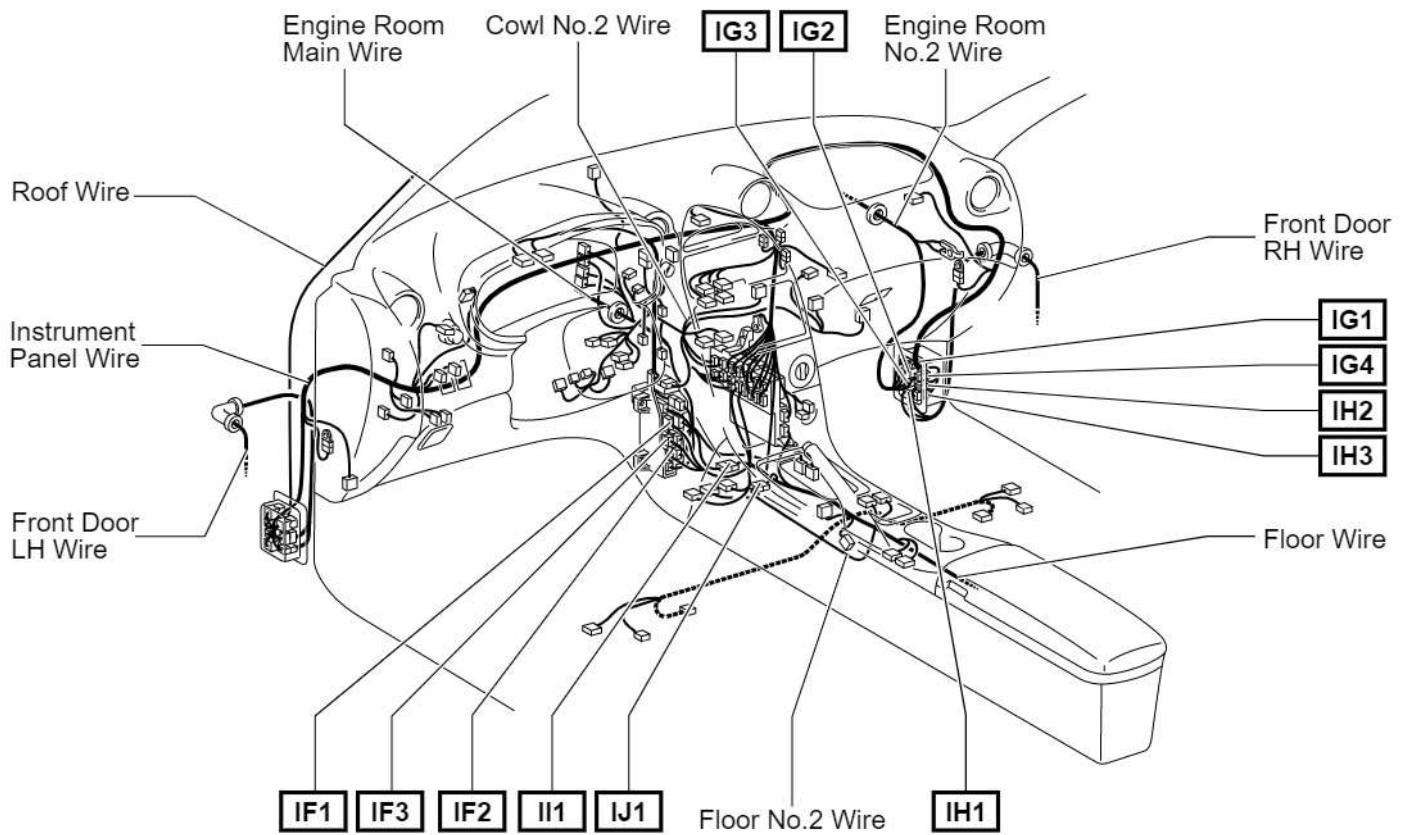

Connector Joining Wire Harness and Wire Harness

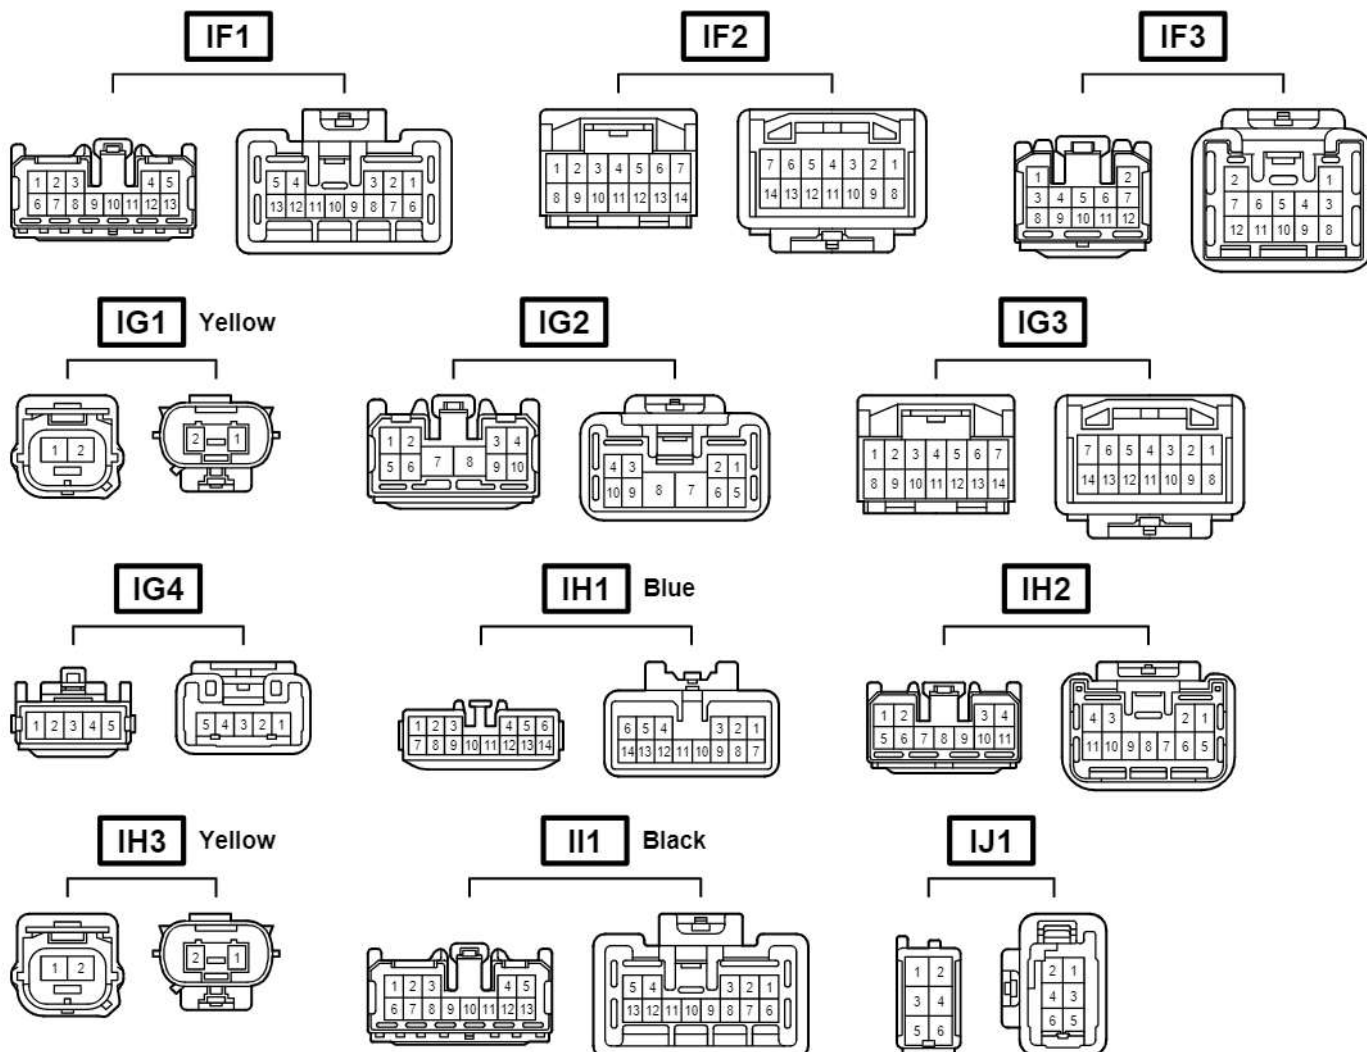


Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	
IF2	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IF3	
IG1	
IG2	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IG3	
IG4	
IH1	
IH2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH3	
II1	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)
IJ1	Floor No.2 Wire and Floor Wire (Instrument Panel Brace LH)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

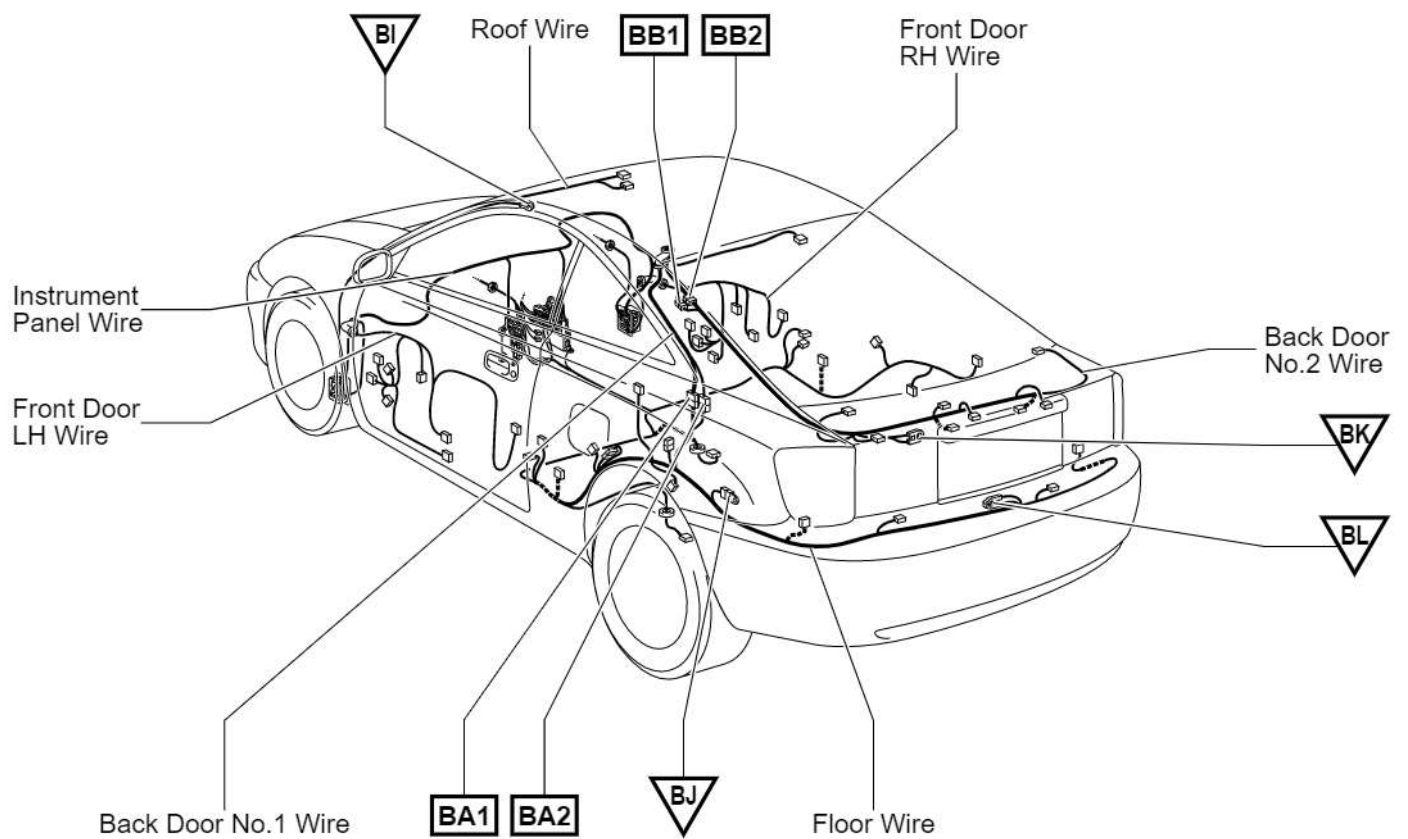

Connector Joining Wire Harness and Wire Harness

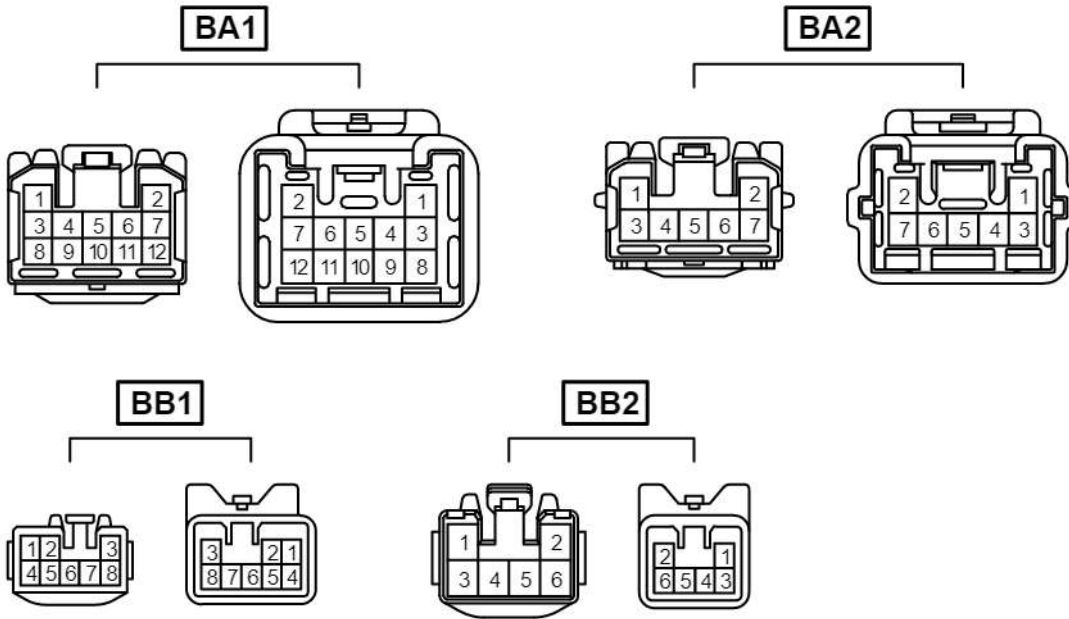


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BA2	
BB1	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)
BB2	

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1ZZ-FE]

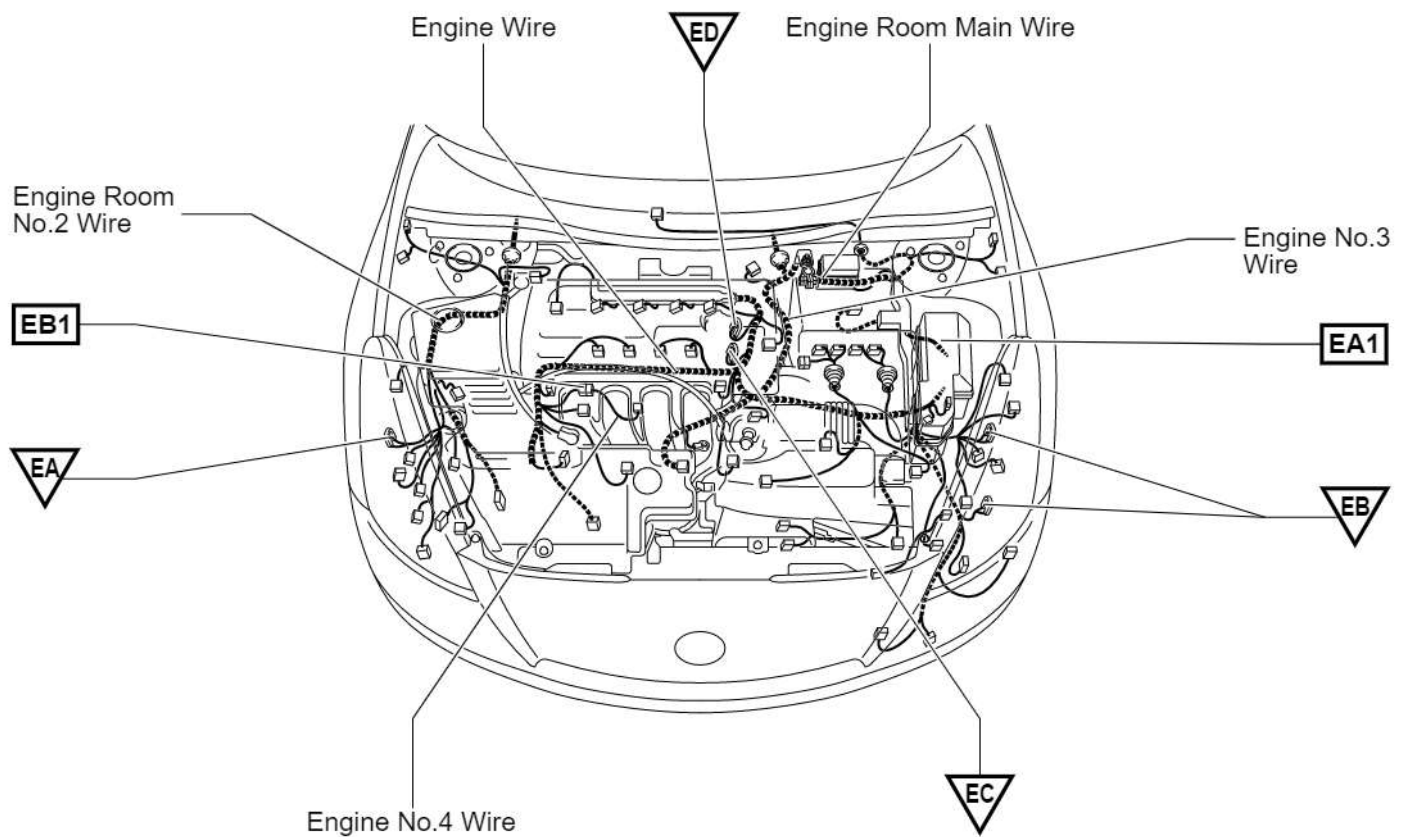

Connector Joining Wire Harness and Wire Harness

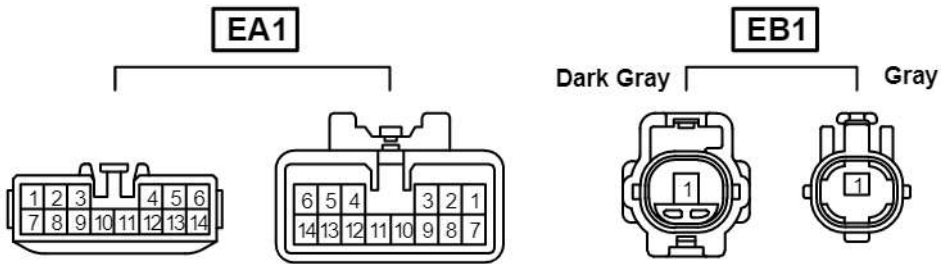


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of Engine Room No.1)
EB1	Engine No.4 Wire and Engine Wire (Under the Intake Manifold)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 2ZZ-GE]

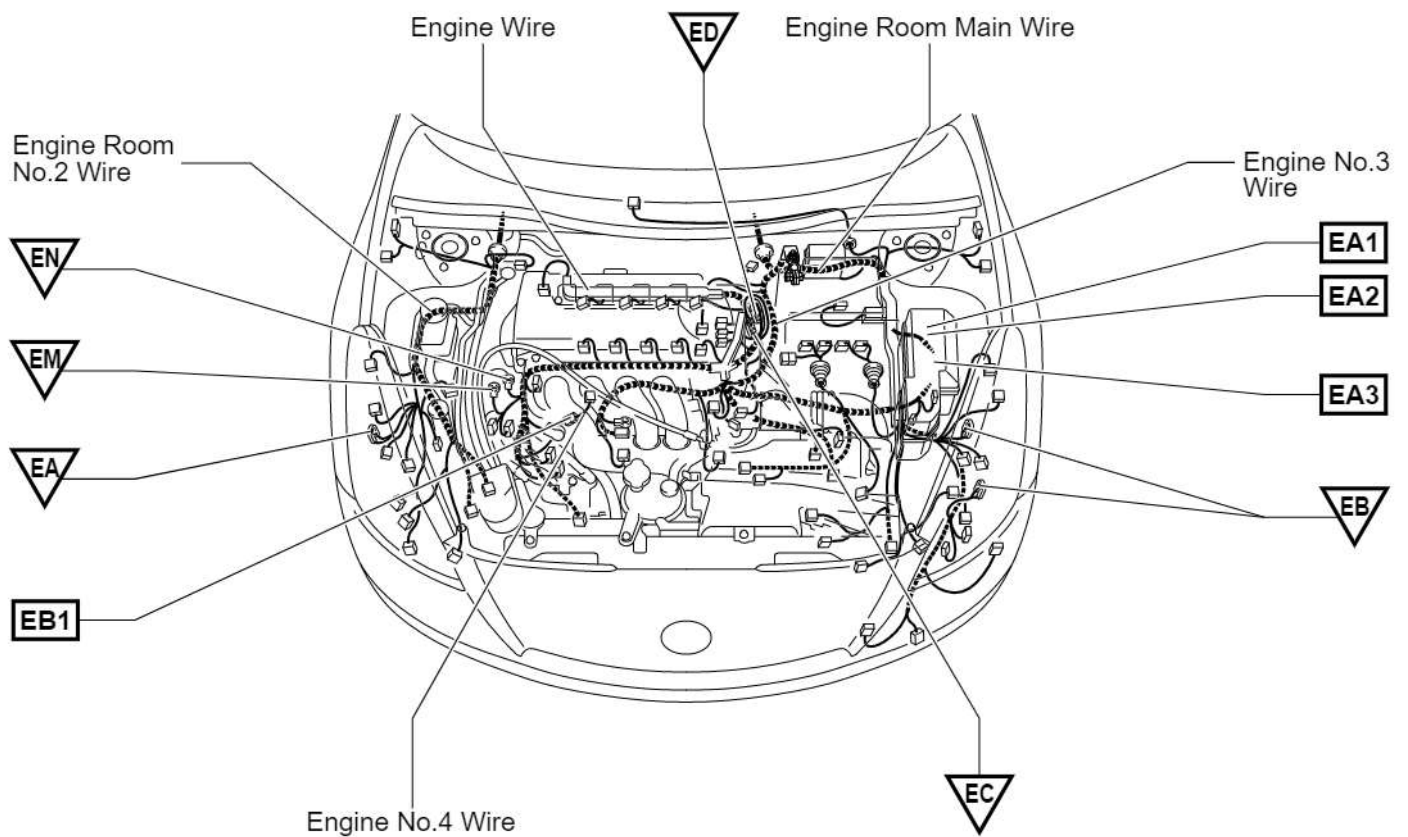

Connector Joining Wire Harness and Wire Harness

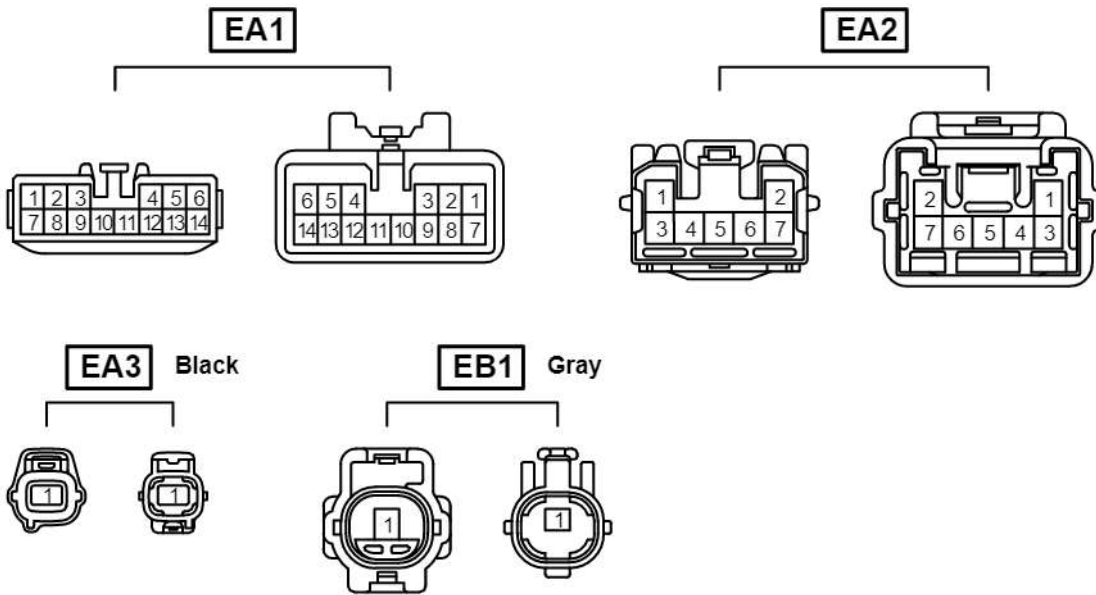


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of Engine Room No.1)
EA2	Engine Room Main Wire and Engine Wire (Inside of Engine Room No.1)
EA3	Engine Room Main Wire and Engine Wire (Inside of Engine Room No.1)
EB1	Engine No.4 Wire and Engine Wire (Under the Intake Manifold)


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[RHD]

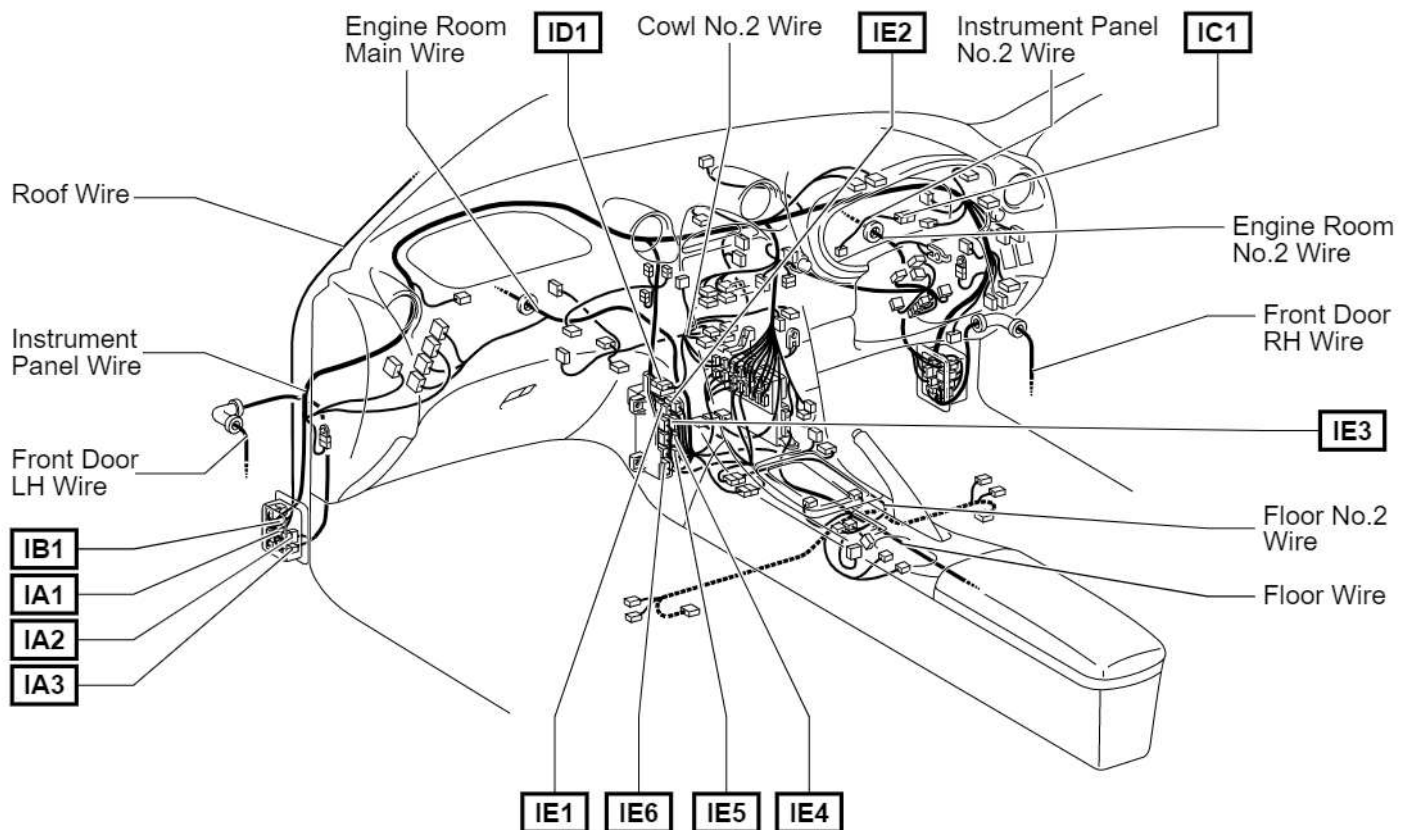

▽ : Location of Ground Points

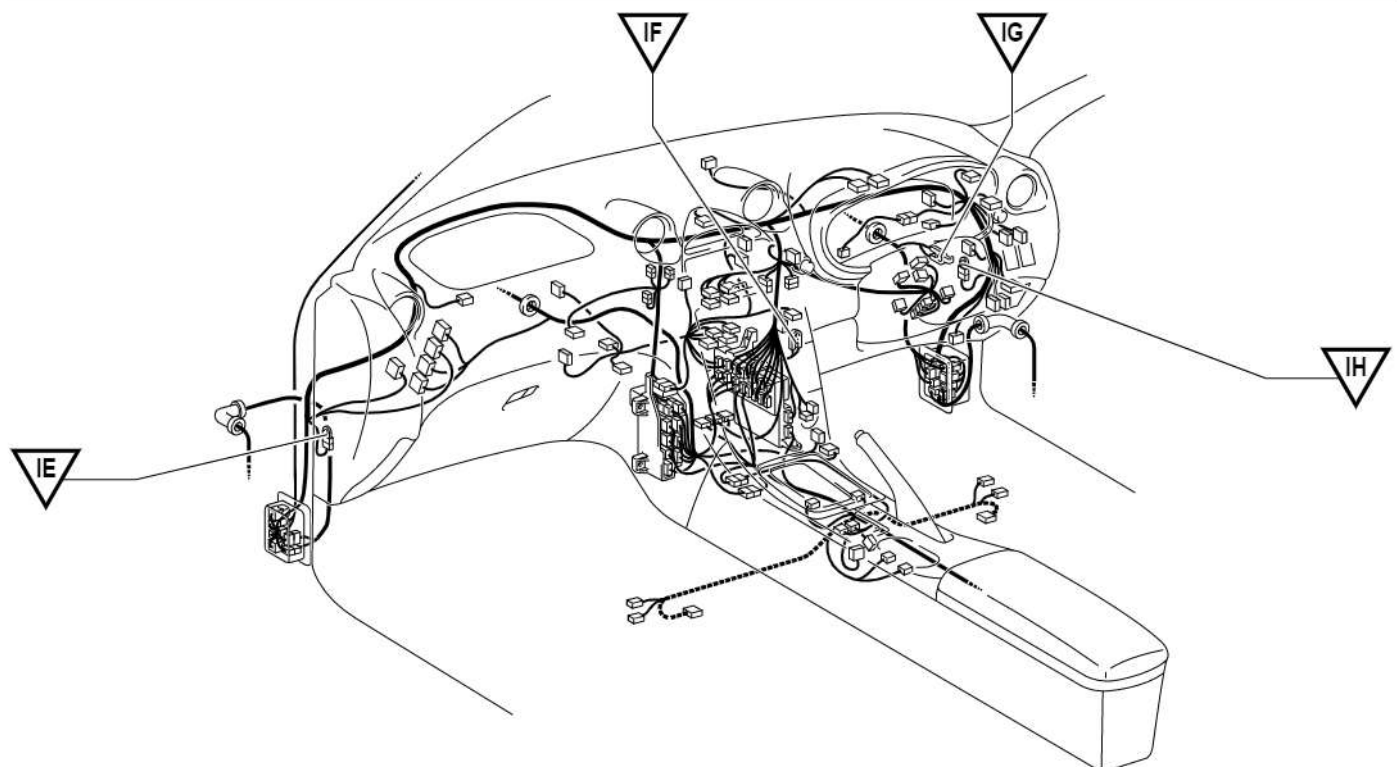

Connector Joining Wire Harness and Wire Harness

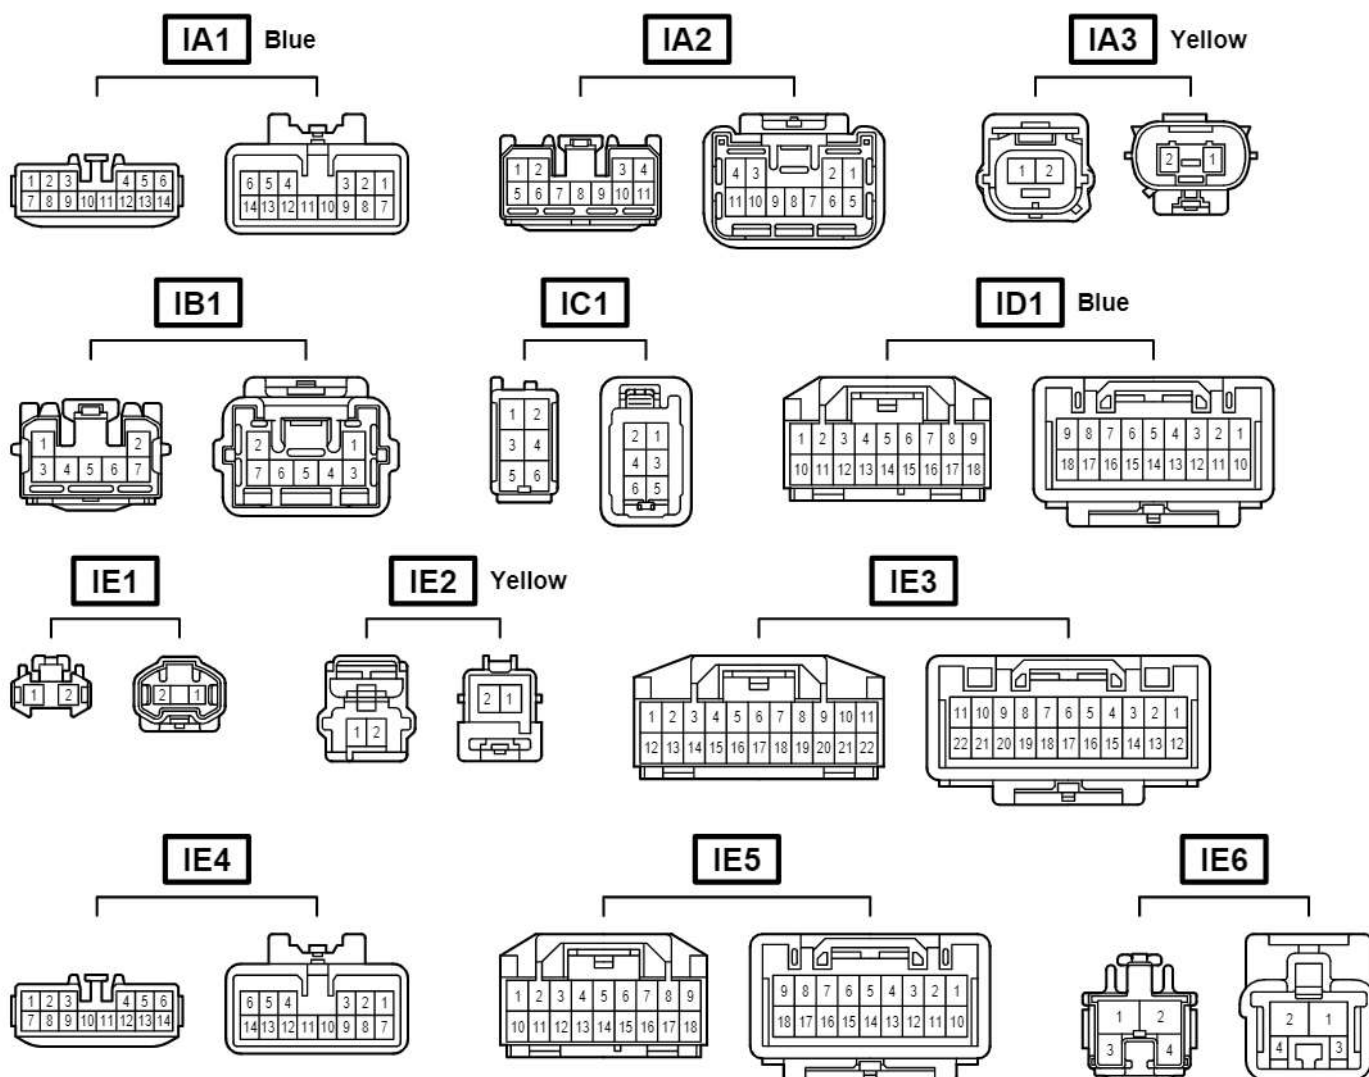


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	
IA3	
IB1	Roof Wire and Instrument Panel Wire (Left Kick Panel)
IC1	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Reinforcement LH)
ID1	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE1	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE2	
IE3	
IE4	
IE5	
IE6	


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

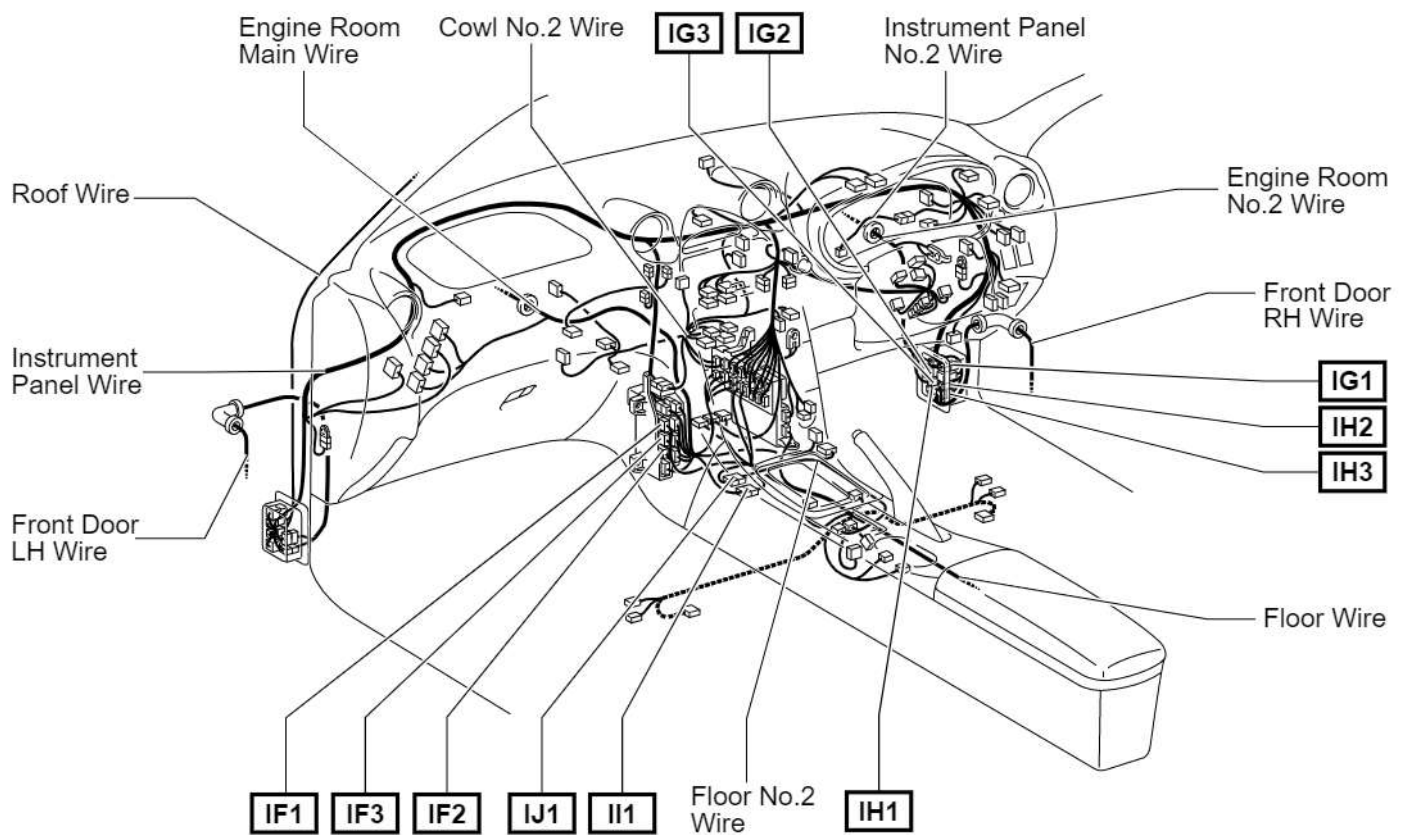

Connector Joining Wire Harness and Wire Harness

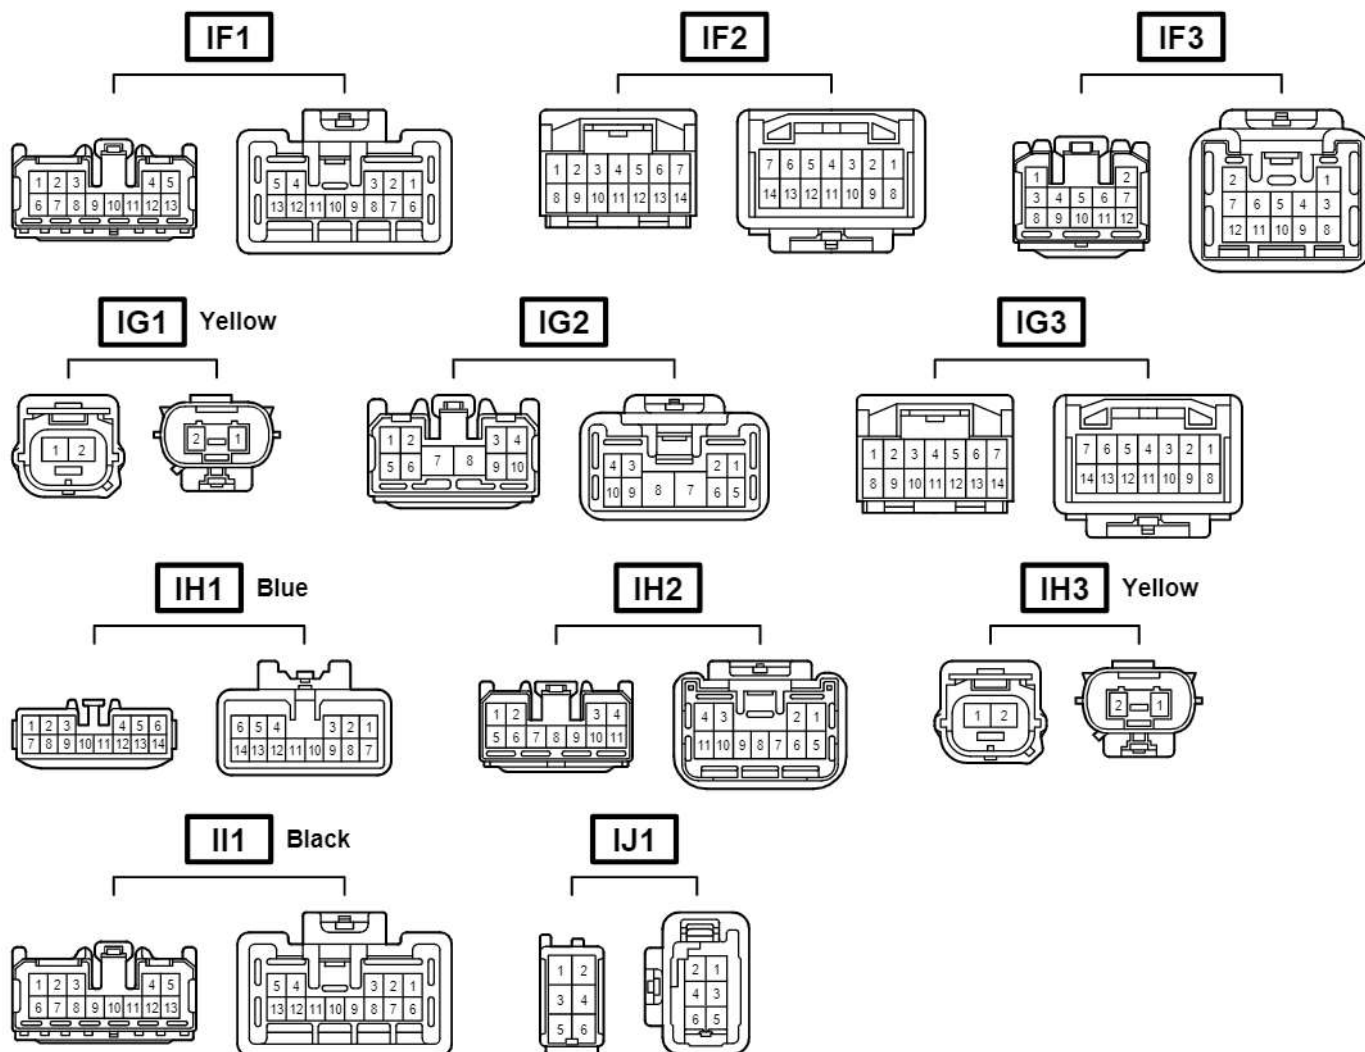


Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	
IF2	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IF3	
IG1	
IG2	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IG3	
IH1	
IH2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH3	
II1	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)
IJ1	Floor No.2 Wire and Floor Wire (Instrument Panel Brace LH)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD]

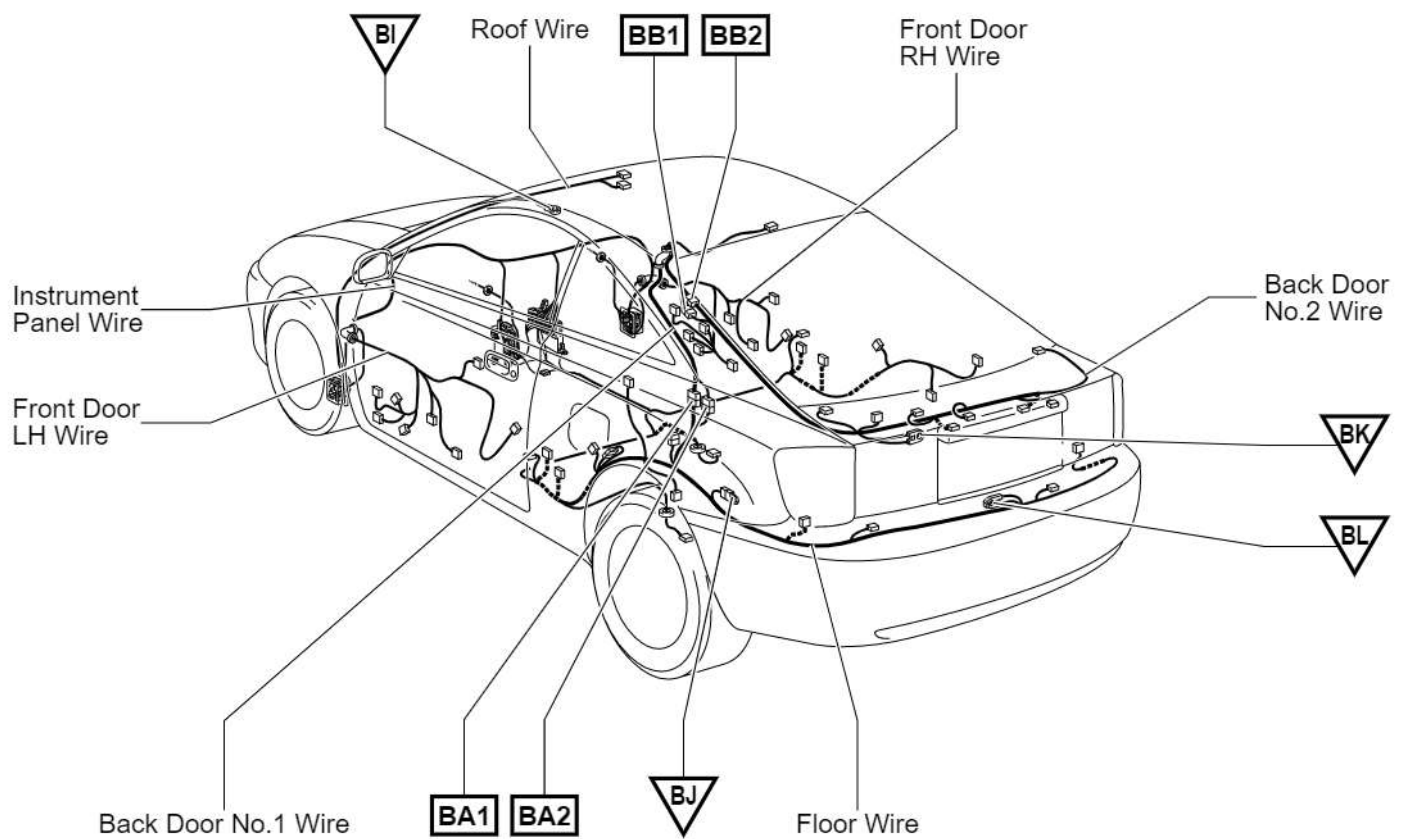

Connector Joining Wire Harness and Wire Harness

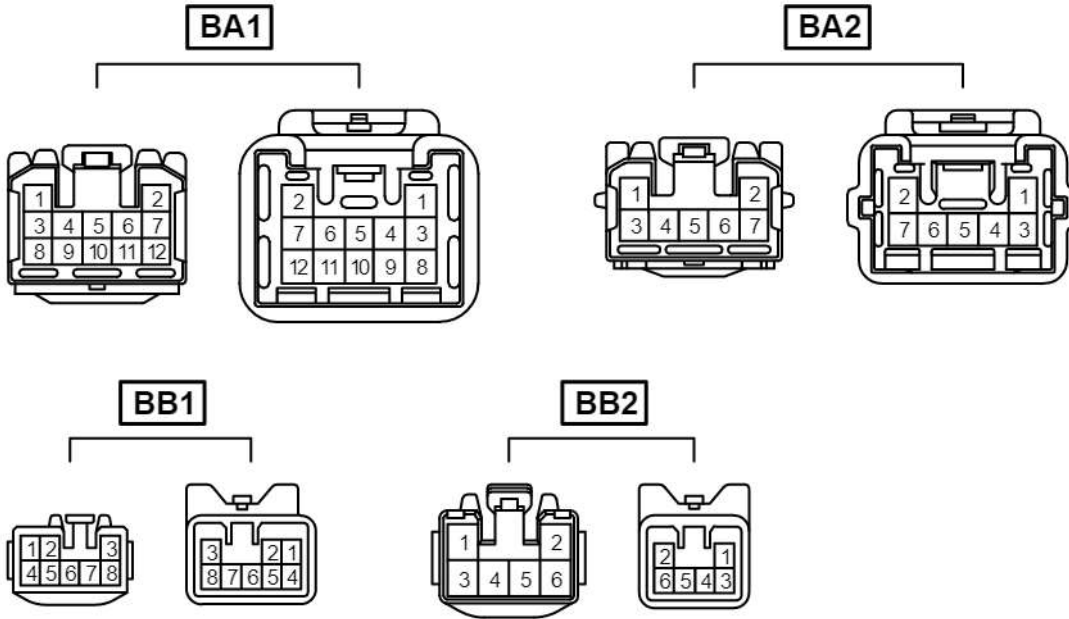

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BA2	
BB1	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)
BB2	